Ball Bearing
Demountable Bushings

Product Features

Demountable bushings are tap fit into location and seat flush with the ground face of the punch holder. The bushings are held in place with toe clamps and screws which provide perfect alignment of the bushing with the bore perpendicular to the ground surface of the punch holder. The clamp and screws provide four times the holding power compared to pressed-in bushings, yet they can be easily removed and assembled thus simplifying die building and maintenance.

D mm	D1 mm	D2 mm	D3 mm	D4 mm	E mm	F mm	L1 mm	Part Number
25	33	45	50	55	30	35	65	6-2503-85
						50	80	6-2505-85
						65	95	6-2506-85
32	40	54	59	64	30	50	80	6-3205-85
						65	95	6-3206-85
						80	110	6-3208-85
40	48	65	72	77	30	50	80	6-4005-85
						65	95	6-4006-85
						80	110	6-4008-85
						100	130	6-4010-85
50	62	81	90	95	50	60	110	6-5006-85
						80	130	6-5008-85
						100	150	6-5010-85
						120	170	6-5012-85
63	75	95	104	109	50	100	150	6-6310-85
						120	170	6-6312-85
						140	190	6-6314-85
80	92	108	114.30	125	61	117	178	6-8011-85

NOTES:
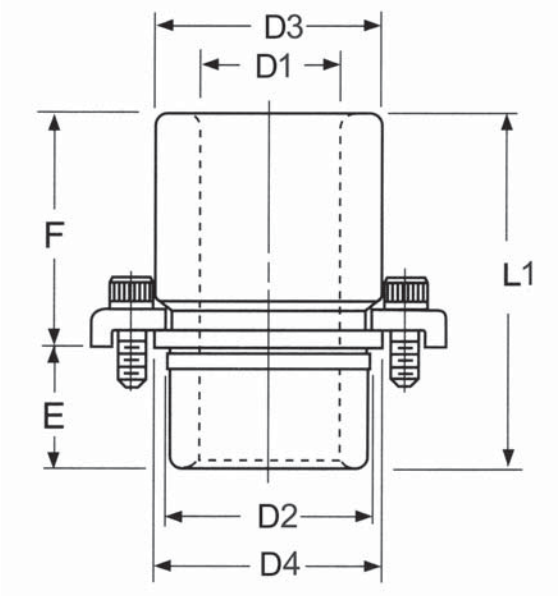
- All demountable bushings are supplied with mounting clamps and screws. See pages 32–33 for clamping dimensions or to order additional toe clamps or mounting screws.
- See pages 30–31 for die set boring specifications.