Ball Bearing
Straight Sleeve Bushings

Product Features

Press fit bushings are manufactured from high quality hardened steel, the bushings are finish ground for a press fit. Like all ball bearing components, these straight sleeve bushings are completely interchangeable.

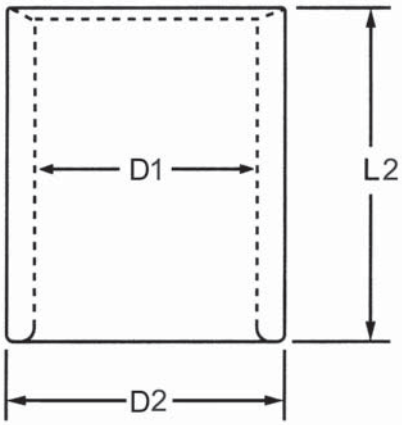

INSTALLATION INSTRUCTIONS

In order to avoid the bushing close-in which occurs as a result of press-fit, these bushings should be retained with a Bushing Mount. When so installed, it is not necessary to hone the bushing bore after installation, and the bushing fit will be correct.

APPLICATION OF THE BUSHING MOUNT

1. Degrease bushing OD and die shoe bore with alcohol, acetone or other volatile solvent and wipe dry.
2. Apply Bushing Mount sparingly and wring bushing into die shoe.
3. Allow a 4-hour cure at 72° F (23° C). Do not disturb bushing until cure is complete.

Bushing Mount Part number: 9-60-82

Post Diameter mm	D1 mm	D2 mm	L2 mm	Part Number
25	33	45	65	6-2506-86
			80	6-2508-86
			95	6-2509-86
			110	6-2511-86
			130	6-2513-86
32	40	54	80	6-3208-86
			95	6-3209-86
			110	6-3211-86
			130	6-3213-86
			150	6-3215-86
			170	6-3217-86
40	48	65	80	6-4008-86
			95	6-4009-86
			110	6-4011-86
			130	6-4013-86
			150	6-4015-86
			170	6-4017-86
			190	6-4019-86
			215	6-4021-86

Post Diameter mm	D1 mm	D2 mm	L2 mm	Part Number
50	62	81	110	6-5011-86
			130	6-5013-86
			150	6-5015-86
			170	6-5017-86
			190	6-5019-86
			215	6-5021-86
			240	6-5024-86
			265	6-5026-86
63	75	95	150	6-6315-86
			170	6-6317-86
			190	6-6319-86
			215	6-6321-86
			240	6-6324-86
			265	6-6326-86
80	92	112	150	6-8015-86
			170	6-8017-86
			190	6-8019-86
			215	6-8021-86
			240	6-8024-86
			265	6-8026-86