

Power board: random vibration

Separate X, Y and Z base excitation | 2% assumed damping

Six locked bolts at 750 N each. ANSYS Mechanical/MAPDL 2026 R1.02.

Three separate random-vibration analyses of the complete populated assembly were completed using the supplied 20–2000 Hz acceleration PSD and an exploratory constant modal damping ratio of 2%. The model inherits the converged, locked six-bolt state from the 750 N-per-bolt static study. The calculated response uses all 38 prestressed modes between 485.964 and 3986.075 Hz.

The largest PCB directional displacement RMS is 0.052674 mm under Z-axis excitation. The greatest PCB equivalent-stress RMS is 90.325 MPa under X-axis excitation. Results below are separate directional load cases; they are not a simultaneous three-axis environment.

PCB random-response RMS

Base axis	Max component u (mm)	Component	PCB stress (MPa)
X	0.023366	Z	90.325
Y	0.01945	Z	17.85
Z	0.052674	Z	32.482

Displacements are relative to the mounting supports. Stress is the unaveraged Segalman–Fulcher equivalent-stress RMS, excluding the static mean stress. These exploratory elastic values are not a pass/fail strength assessment.

Interpretation: The highest whole-assembly elastic equivalent-stress RMS is 1443.2 MPa under X-axis excitation. The localized hardware maxima require mesh, connection and material validation; numerical completion is not evidence of structural adequacy.

Specified acceleration spectrum

Hz	PSD (g^2/Hz)
20	0.026
50	0.16
800	0.16
2000	0.026

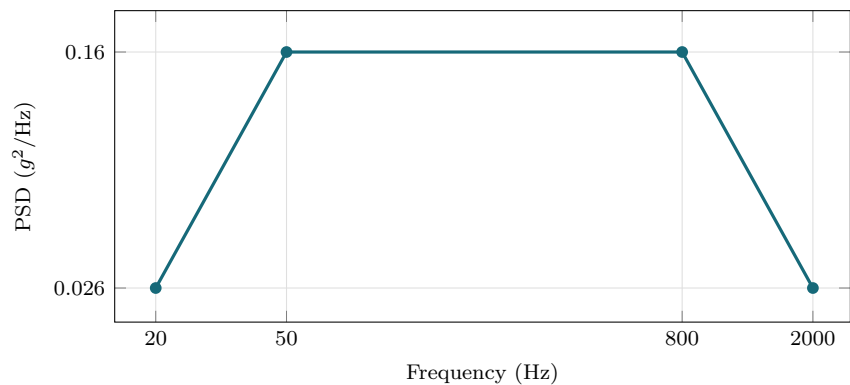


Figure 1: Specified PSD with power-law interpolation between the supplied points. Integrated input: 14.136 g RMS.

The Mechanical load panel may display 15.310 g RMS because its display uses a linear trapezoidal integral of the four points. The piecewise log-log spectrum integrates to 14.136 g RMS; no input points were changed.

Directional response results

PCB directional displacement RMS (mm)

Base axis	X response	Y response	Z response
X	0.002806	0.00069972	0.023366
Y	0.00033604	0.00095143	0.01945
Z	0.0016244	0.0023607	0.052674

PCB absolute acceleration RMS (g)

Base axis	X response	Y response	Z response
X	15.282	1.9137	52.287
Y	0.98316	16.735	31.582
Z	4.6891	4.8063	154.66

Whole-assembly directional displacement RMS (mm)

Base axis	X response	Y response	Z response
X	0.061425	0.0038971	0.028948
Y	0.001215	0.012275	0.029746
Z	0.014838	0.033204	0.0806

Whole-assembly absolute acceleration RMS (g)

Base axis	X response	Y response	Z response
X	103.5	10.503	52.287
Y	8.9608	22.867	31.582
Z	50.032	36.436	154.66

Stress and PCB strain

Base axis	PCB stress (MPa)	Assembly stress (MPa)
X	90.325	1443.2
Y	17.85	29.288
Z	32.482	71.387

Base axis	PCB strain X ($\mu\epsilon$)	Y ($\mu\epsilon$)	Z ($\mu\epsilon$)
X	2216.1	771.68	3044.7
Y	200.71	353.58	389.94
Z	1116.9	952.02	720.88

Each table entry is a spatial maximum for that component; maxima need not occur at the same node. No vector sum of directional RMS maxima is reported. Three times a directional RMS value is a conventional 3-sigma estimate under a Gaussian assumption, not a guaranteed mission maximum. Equivalent stress is not Gaussian.

Whole-assembly response: X and Y excitation

The solved model contains 208 meshed, unsuppressed bodies, including 172 imported electronic-component bodies. Every body has finite response values in all three cases. The PCB-only figures later in this report are scoped views of this same assembled solution.

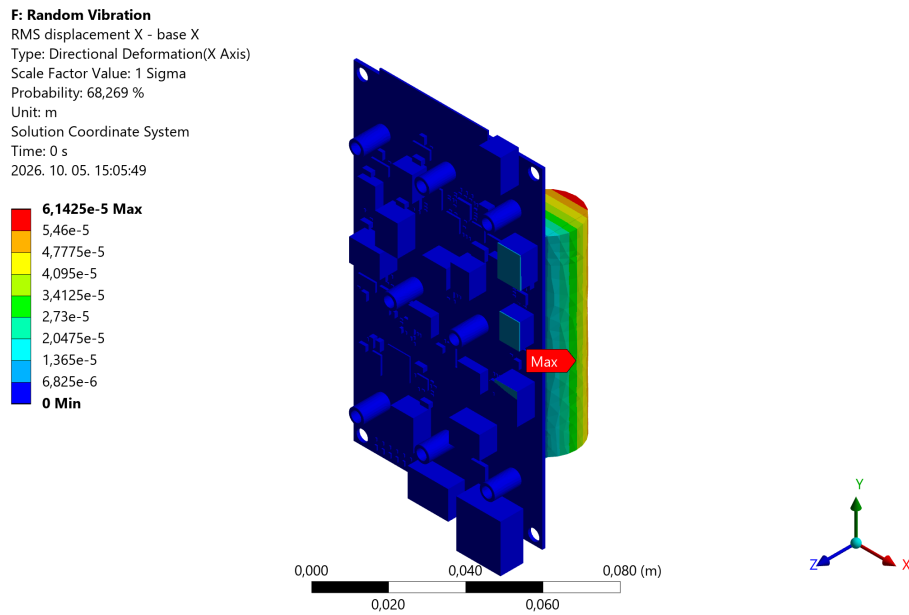


Figure 2: X-axis base excitation, whole assembly: X-direction RMS displacement. Spatial maximum 0.061425 mm. PCB, component bodies, batteries and hardware are included. Legend units are metres.

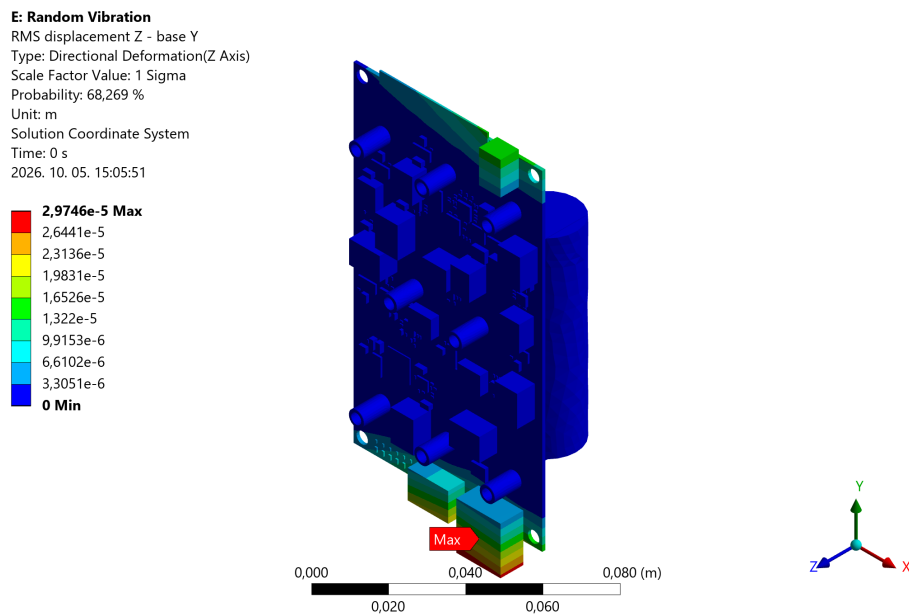


Figure 3: Y-axis base excitation, whole assembly: Z-direction RMS displacement. Spatial maximum 0.029746 mm. PCB, component bodies, batteries and hardware are included. Legend units are metres.

Whole-assembly response: Z excitation and battery side

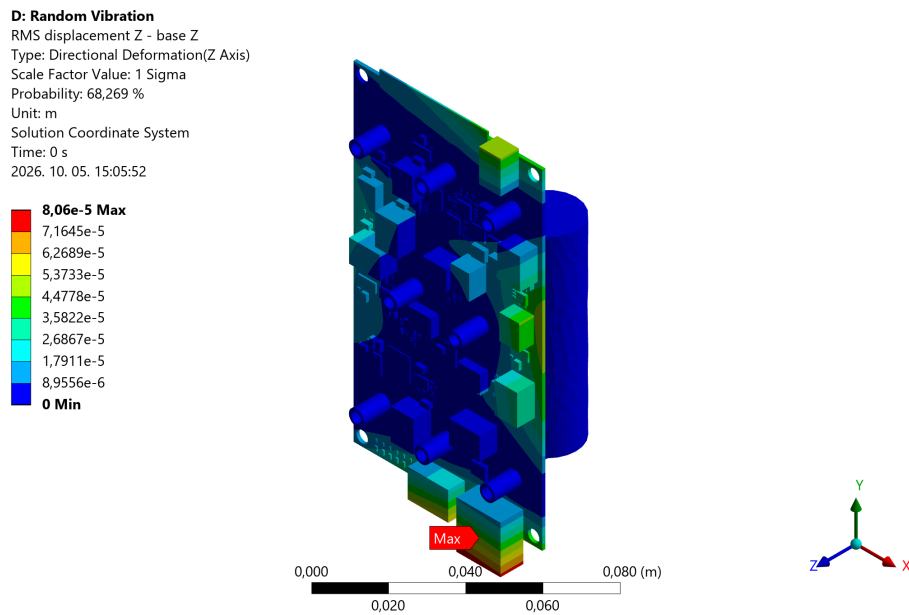


Figure 4: Z-axis base excitation, whole assembly: Z-direction RMS displacement, maximum 0.080600 mm. The populated component side and fastening hardware are visible.

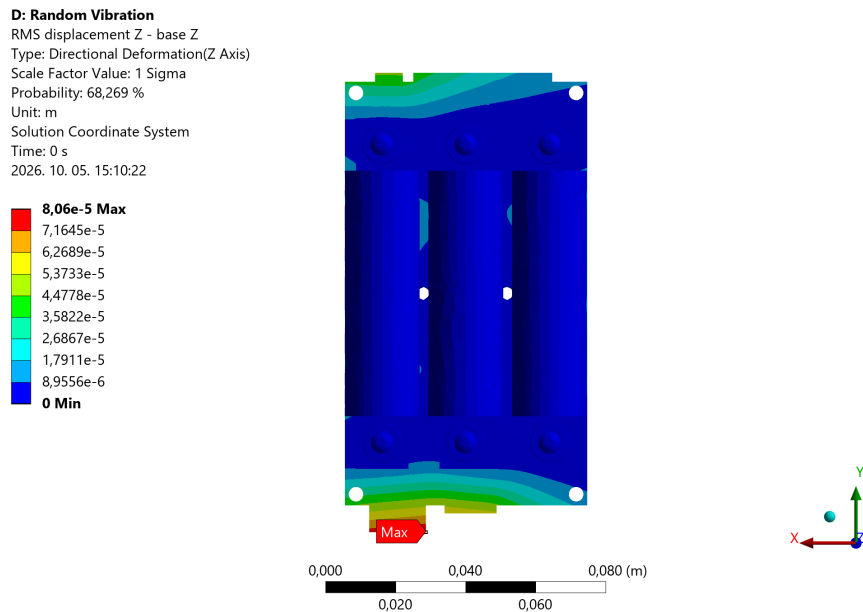


Figure 5: Battery-side view of the same Z-excitation result. The three cell bodies and the six battery fasteners are visible. All figures show the full assembly result; hidden surfaces are occluded by the viewing direction.

These are directional RMS response contours, not instantaneous vibration shapes. Each contour uses its own range. Imported ECAD components are represented by their meshed solids; this does not establish detailed package or solder-joint accuracy.

Battery-side directional responses

Fresh native ANSYS views in the requested oblique orientation. All populated assembly bodies remain in the solved model. Each caption distinguishes the base-excitation axis from the displacement response component.

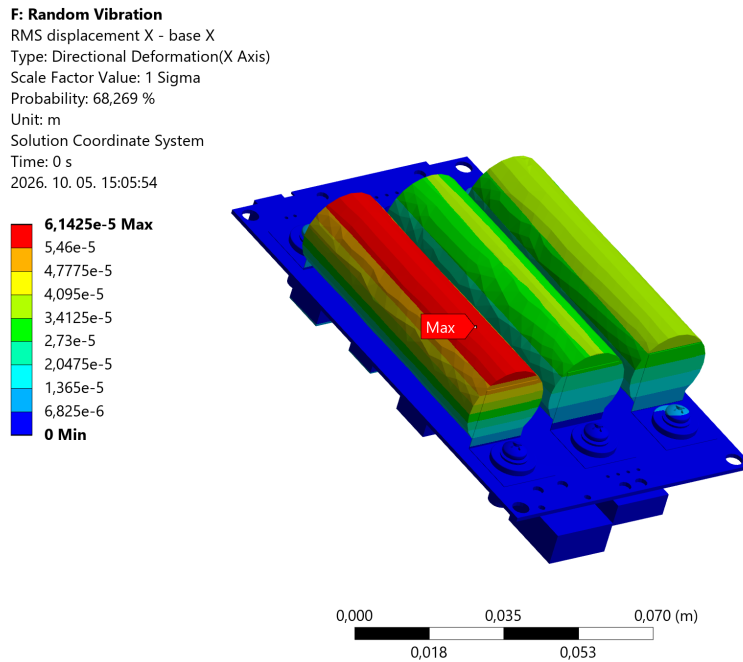


Figure 6: Base X excitation, global X-direction displacement RMS over the whole assembly. Maximum 0.06142534 mm. One-sigma response; native legend in metres.

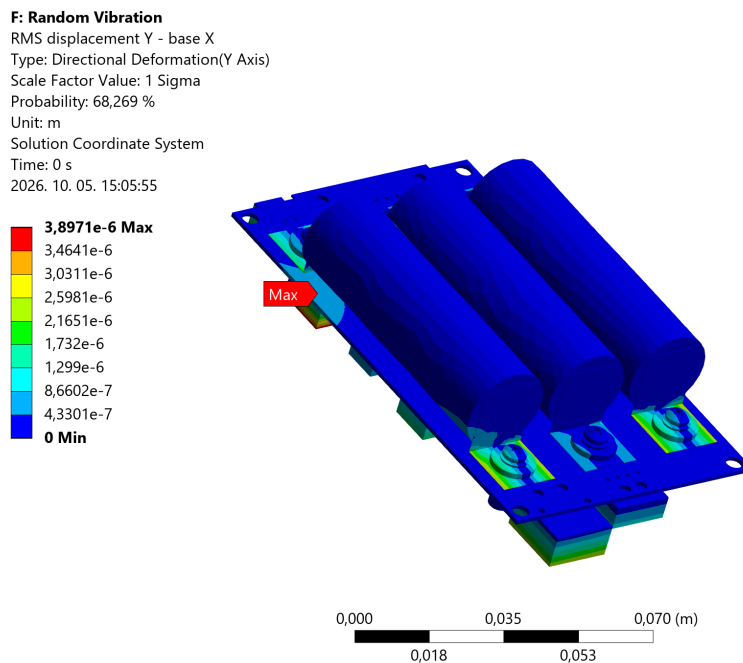


Figure 7: Base X excitation, global Y-direction displacement RMS over the whole assembly. Maximum 0.003897111 mm. One-sigma response; native legend in metres.

Battery-side directional responses

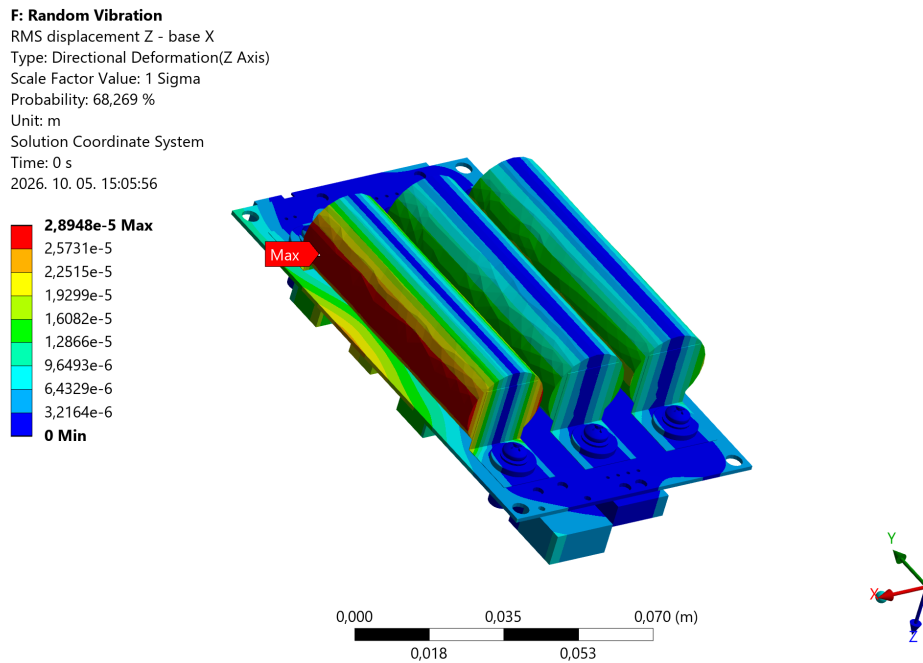


Figure 8: Base X excitation, global Z-direction displacement RMS over the whole assembly. Maximum 0.02894789 mm. One-sigma response; native legend in metres.

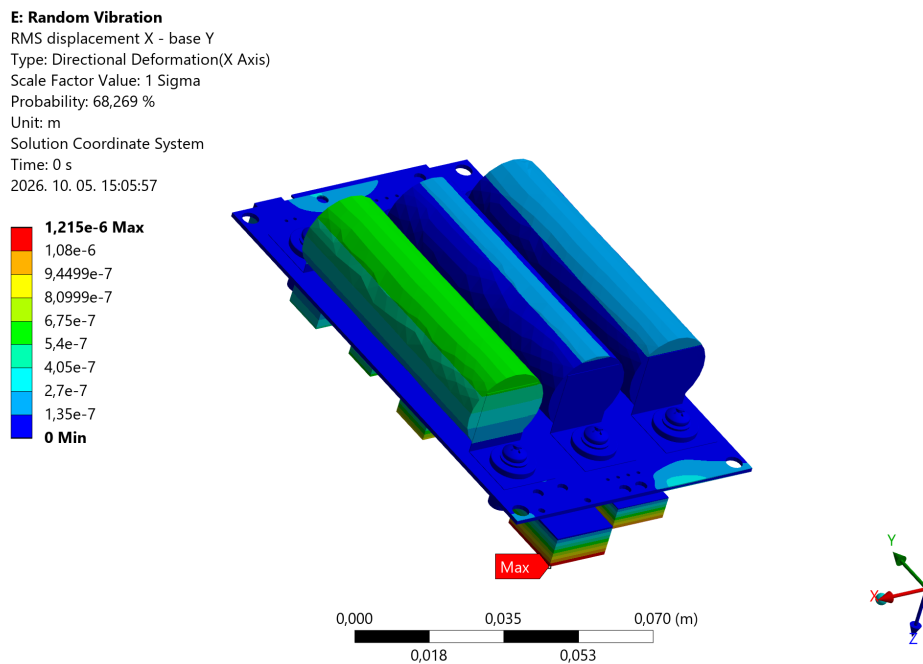


Figure 9: Base Y excitation, global X-direction displacement RMS over the whole assembly. Maximum 0.001214992 mm. One-sigma response; native legend in metres.

Battery-side directional responses

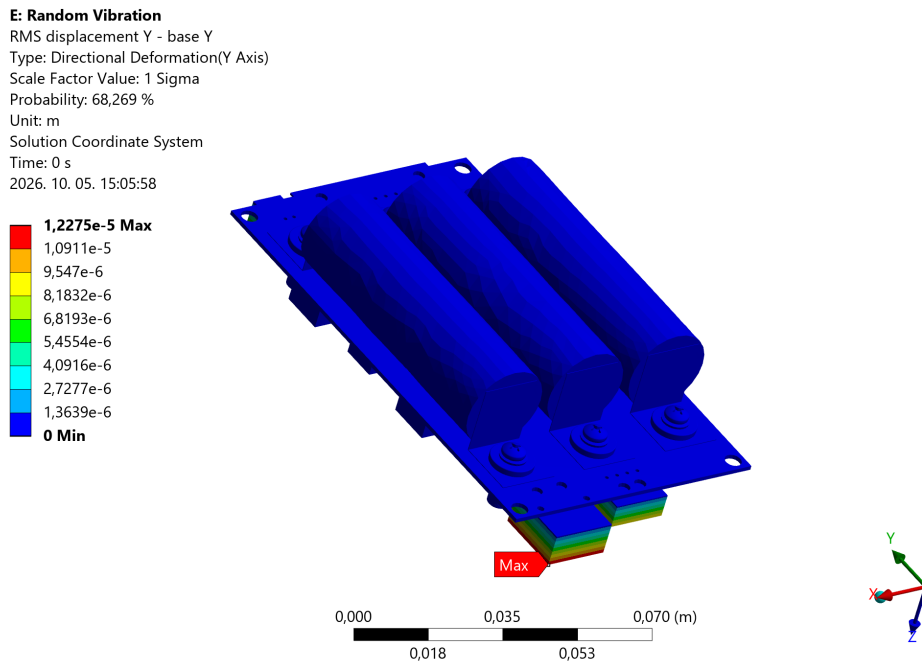


Figure 10: Base Y excitation, global Y-direction displacement RMS over the whole assembly. Maximum 0.01227474 mm. One-sigma response; native legend in metres.

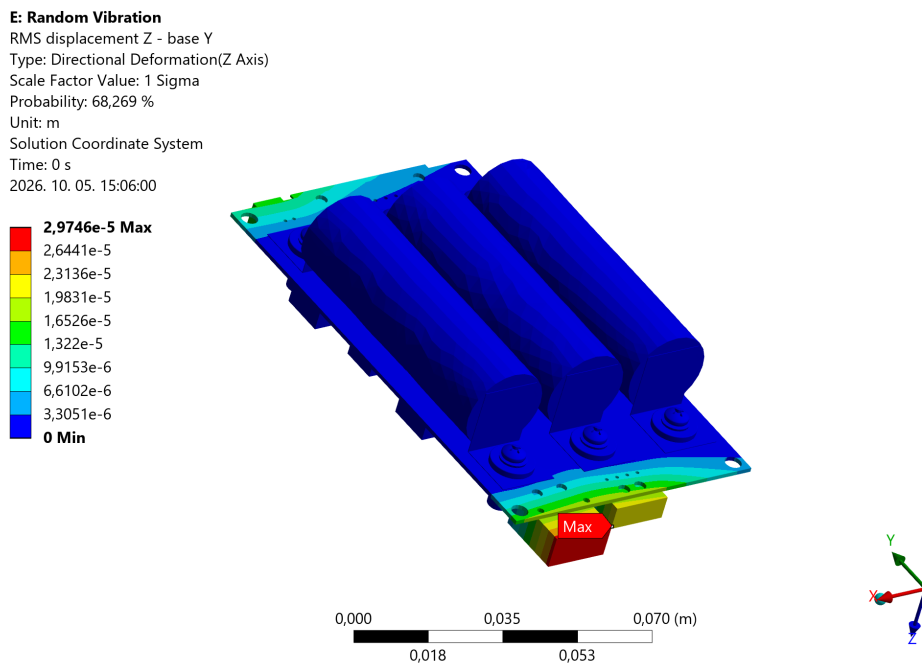


Figure 11: Base Y excitation, global Z-direction displacement RMS over the whole assembly. Maximum 0.02974601 mm. One-sigma response; native legend in metres.

Battery-side directional responses

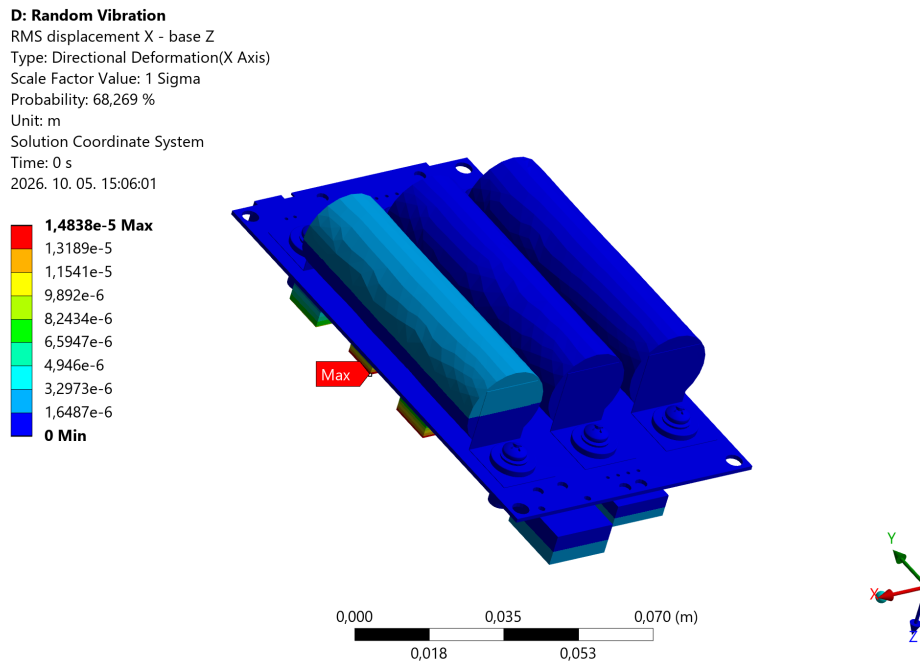


Figure 12: Base Z excitation, global X-direction displacement RMS over the whole assembly. Maximum 0.01483805 mm. One-sigma response; native legend in metres.

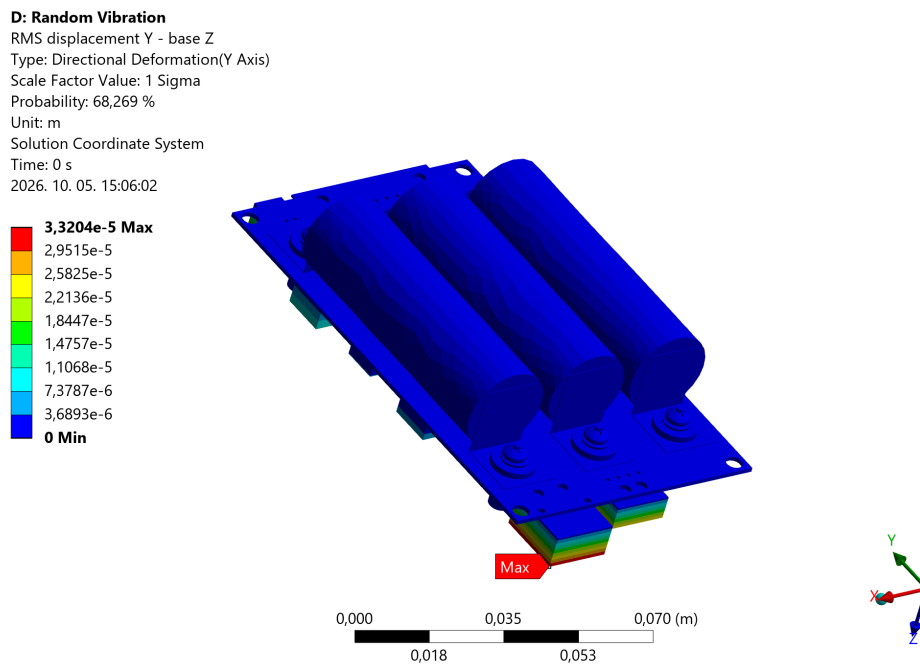


Figure 13: Base Z excitation, global Y-direction displacement RMS over the whole assembly. Maximum 0.03320397 mm. One-sigma response; native legend in metres.

Battery-side directional response

D: Random Vibration

RMS displacement Z - base Z
 Type: Directional Deformation(Z Axis)
 Scale Factor Value: 1 Sigma
 Probability: 68,269 %
 Unit: m
 Solution Coordinate System
 Time: 0 s
 2026. 10. 05. 15:06:03

8,06e-5 Max
 7,1645e-5
 6,2689e-5
 5,3733e-5
 4,4778e-5
 3,5822e-5
 2,6867e-5
 1,7911e-5
 8,9556e-6
 0 Min

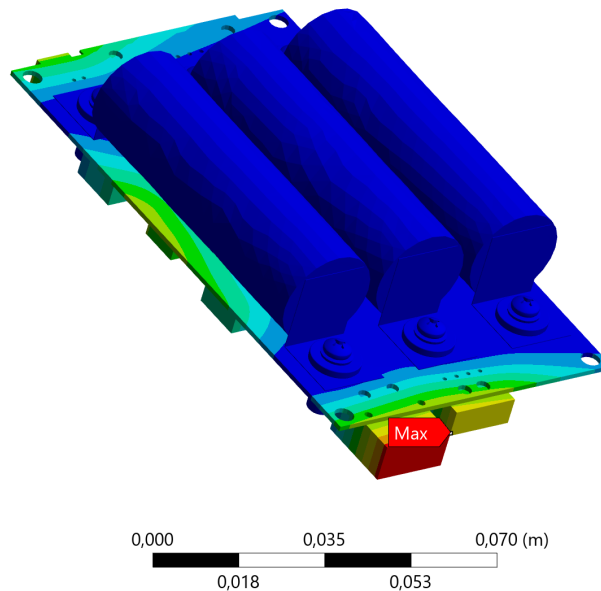


Figure 14: Base Z excitation, global Z-direction displacement RMS over the whole assembly. Maximum 0.08060016 mm. One-sigma response; native legend in metres.

The camera exposes the battery cells, their nickel connections and fastening hardware. The electronic components remain included behind the PCB. Automatic deformation scaling illustrates spatial response patterns; an RMS field does not represent a simultaneous instantaneous displacement configuration. The reproduction appendix records the exact camera vectors, export settings and result-object mapping for all nine views.

PCB deformation under X and Y excitation

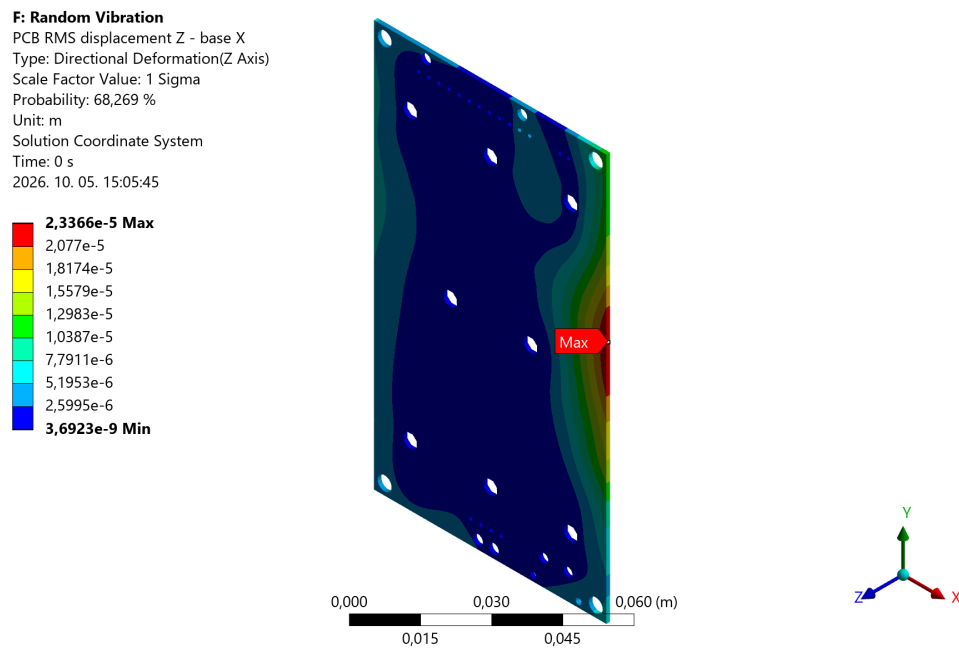


Figure 15: X-axis base excitation: PCB Z-direction RMS displacement. Spatial maximum 0.023366 mm. ANSYS native result contour; displayed legend uses metres. Colors show a statistical component response, not a modal eigenvector amplitude.

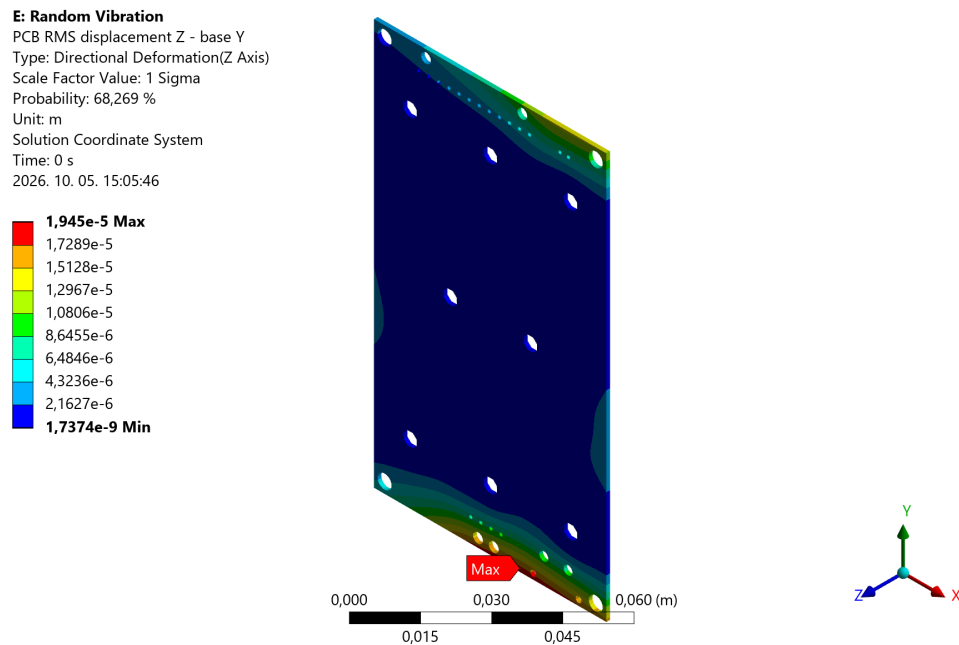


Figure 16: Y-axis base excitation: PCB Z-direction RMS displacement. Spatial maximum 0.01945 mm. ANSYS native result contour; displayed legend uses metres. Colors show a statistical component response, not a modal eigenvector amplitude.

Contours show the largest PCB displacement component for each excitation case. Any displayed geometric deformation is a visualization scale; an RMS field is not an instantaneous deformed configuration.

PCB deformation and stress under random vibration

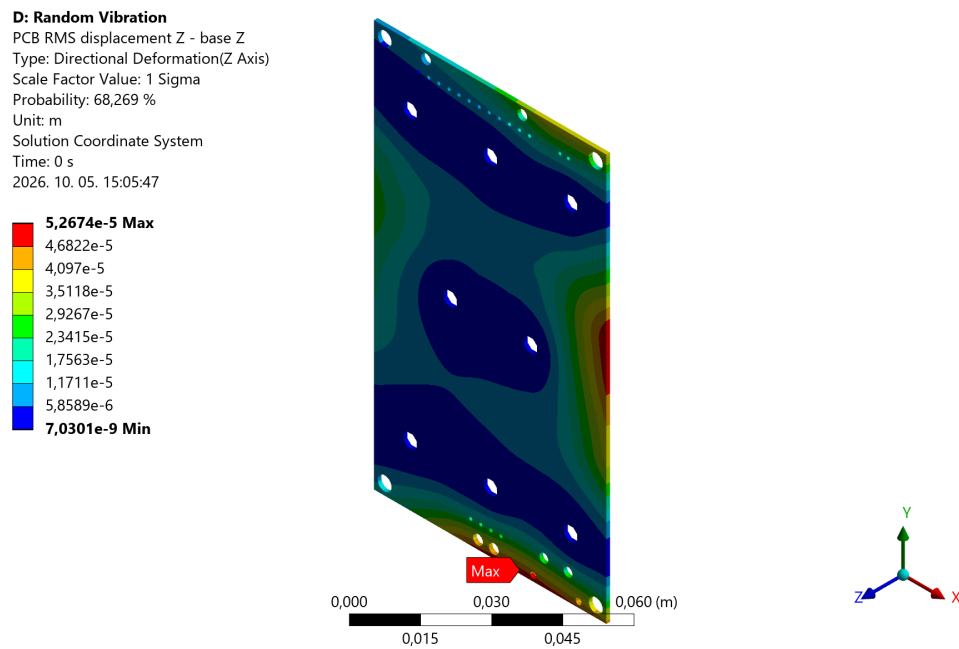


Figure 17: Z-axis base excitation: PCB Z-direction RMS displacement. Spatial maximum 0.052674 mm. ANSYS native result contour; displayed legend uses metres. Colors show a statistical component response, not a modal eigenvector amplitude.

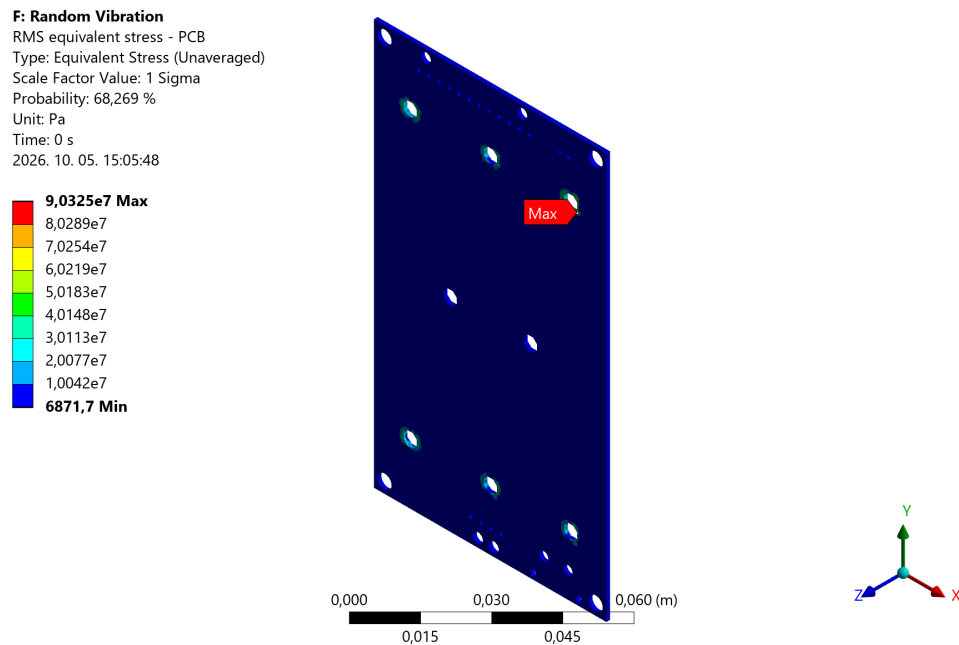


Figure 18: Highest PCB equivalent-stress RMS occurs for X-axis base excitation: 90.325 MPa. Unaveraged Segalman–Fulcher result. Static clamp stress is separate; the native Gaussian probability label does not apply to equivalent stress.

Model and numerical checks

Assembly and loading

The board lies in the global XY plane; Z is normal to the PCB. The same eight mounting faces are fixed, and a single coherent base motion is applied to their 781 mesh nodes in the specified axis. Native checks matched these nodes exactly to the geometry scopes. Standard gravity is 9.80665 m/s²; the four PSD ordinates were converted to SI acceleration²/Hz before solving.

All six bolts inherit the locked equilibrium at static time 2, load step 2, substep 4. Verified locked reactions range from 749.9968 to 749.99945 N. Battery connections remain limited to the nickel strips; no battery-to-PCB bond was added.

Mesh and modal basis

The shared refined quadratic mesh has 368,754 geometry-mesh nodes and 112,902 solid elements across 208 bodies. The solver has additional contact and pretension entities. PCB sizing is 0.7 mm and bolt sizing is 0.4 mm. This random-vibration study did not change that mesh.

The modal extraction is undamped, starts at 1 Hz, and requests up to 60 modes through 4000 Hz. There are 38 modes in that interval. The first 20 frequencies match the accepted earlier bolt study to the exported precision. Stress and strain recovery were enabled before this solve.

Numerical checks

The modal solve completed with zero errors. Extracted translational effective-mass fractions are X 87.24%, Y 89.04% and Z 89.56%. The frequency range exceeds 1.5 times the 2000 Hz PSD limit, but a modal-basis convergence study has not been established.

Each random case passed a native input check without PFACT or SOLVE, followed by an authorized solve. Input hashes, damping, spectrum ordinates, mounting nodes, solver completion and complete finite response fields were checked. All 781 supports reproduce the prescribed 14.136 g RMS acceleration in each case. No insignificant modes were excluded. Velocity and absolute acceleration were retained alongside relative displacement.

Highest assembly stress location

The greatest assembly stress occurs under X-axis excitation in CAD body Part 24[1] (geometry ID 20466). Its exported maximum is at node 29373, element 7017. This localized fastener-model result requires validation before it can support a strength judgment.

Case	Errors	Warnings	Finite fields	Support nodes
X	0	22	17 / 17	781 / 781
Y	0	22	17 / 17	781 / 781
Z	0	22	17 / 17	781 / 781

The three input decks were compared and differ only in excitation axis, analysis title and runtime location. Inherited warnings remain part of the qualification limits below.

Prestressed modal basis

Mode	Frequency (Hz)	Mode	Frequency (Hz)
1	485.964	20	2364.179
2	596.964	21	2369.941
3	645.435	22	2537.213
4	781.350	23	2704.288
5	820.242	24	2874.956
6	826.296	25	2923.998
7	1122.018	26	2950.883
8	1139.112	27	3016.715
9	1199.708	28	3201.733
10	1366.076	29	3237.676
11	1467.900	30	3368.526
12	1714.134	31	3460.285
13	1941.548	32	3551.455
14	2003.039	33	3597.699
15	2017.959	34	3654.570
16	2135.663	35	3692.040
17	2183.755	36	3775.152
18	2212.560	37	3911.142
19	2301.314	38	3986.075

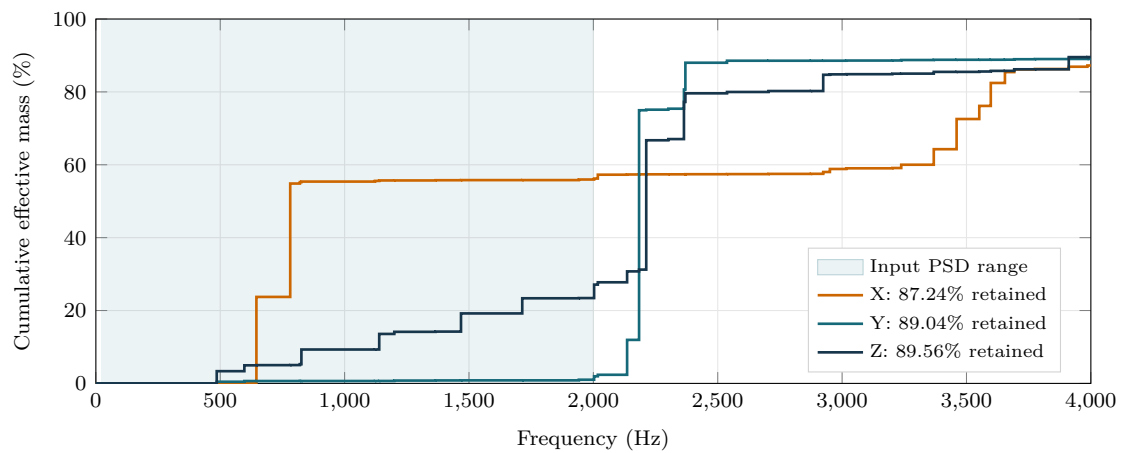


Figure 19: Cumulative modal effective mass as a fraction of total directional mass. The shaded band is the 20–2000 Hz input range. A frequency cutoff alone does not establish response convergence.

Qualification and traceability

Exploratory assumptions

The 2% damping ratio was selected by the user as an exploratory assumption; no damping measurement was supplied. Peak response near resonance is damping-sensitive. This report does not establish a damping uncertainty interval.

Inherited isotropic PCB properties are $E = 23.33024$ GPa, Poisson ratio 0.15 and density 1969.7774 kg/m³. Batteries use a homogeneous $E = 200$ GPa, Poisson ratio 0.3 and density 2200 kg/m³. These idealizations have not been correlated with the actual board laminate or cell construction.

Contact and stress limitations

The bolt model uses existing solid shafts with pretension cuts and MPC shaft-to-hole connections. Washer-to-PCB frictionless seats use Adjust to Touch to bridge a 0.746 mm CAD gap. This is an assumed assembled seating condition. The random response is linearized about the locked state; it does not predict contact opening, slip transitions or bolt loosening.

The inherited model contains thin nickel-strip mesh-quality warnings, including highly distorted tetrahedra, and hardware constraint-overlap warnings. The expanded modal solve reports 2251 warnings, including inherited shape warnings and repeated ACT parameter definitions. These warnings have not been eliminated.

The static model previously produced a peak elastic equivalent stress of approximately 1.142 GPa. That localized value and the random stress maxima require mesh, contact and material validation before any strength conclusion. The static mean and random equivalent-stress RMS must not be added as if they were compatible stress tensors.

Statistical interpretation

RMS displacement and acceleration characterize stationary zero-mean vibration. Three-sigma scaling is an estimate of excursions at a point, not a guaranteed maximum over a test or flight. Equivalent stress uses a non-Gaussian statistical measure. The generic 68.269% / 1-sigma label on native ANSYS equivalent-stress plots must not be interpreted as a Gaussian coverage probability. A displayed time of 0 s is the stored result-set label, not an instantaneous vibration state. No test duration, fatigue law or acceptance limits were supplied, so no fatigue life or pass/fail margin is claimed.

Evidence and reproducibility

The preserved run is outputs/random_vibration_20261005_0950. It contains the input specification, native input decks, preflight logs, modal participation tables, solver logs, CSV/TSV result tables, and ANSYS contour images. Expanded modal analysis ID: 4254. Random analysis IDs: X 4259, Y 4264, Z 4269.

Solver: ANSYS Mechanical/MAPDL 2026 R1.02, build 26.1 UP20260202, Windows 11 in Parallels; 12 distributed processes. Each random case was solved in an isolated Windows runtime, archived with SHA-256 hashes, and imported into its Mechanical analysis by reference for field recovery. This recovered a Mechanical result-handoff failure; the accepted numerical solutions have zero solver errors. The source project remains powerboardsim_v1.wbpj. The prior default-contact/modal comparison is preserved separately. The report source keeps ANSYS contours as external PNG files and draws both graphs using editable native PGFPlots code and numerical data tables.

References

1. ANSYS Mechanical 2026 R1: Random Vibration Analysis.
2. ANSYS Theory Reference 2026 R1: Spectrum Analysis.
3. ANSYS 2026 R1: PSDUNIT and excitation units.
4. ANSYS 2026 R1: Input PSD curve-fit display.

Reproduction procedure

This appendix records the accepted workflow and the files needed to repeat it. It was added on 5 October 2026 by checking the saved Mechanical commands, native input decks, solver logs and result audits. The existing numerical results have not been changed or re-solved for this documentation revision.

Starting point. Use a copy of the complete saved Workbench project and its companion project directory. The ECAD archive alone does not contain this assembled mechanical model, its added battery hardware, its inherited materials, or the established contact scopes. Exact numerical replay uses the supplied native decks; rebuilding from imported geometry can change entity IDs, mesh and results.

How to follow the appendix. Follow the numbered sections in order. Code is explicitly labelled as Mechanical IronPython, Windows PowerShell, MAPDL, or report-build commands. Replace only the stated paths and fresh output names. Retain the accepted evidence folders. The code excerpts are instructions reconstructed from executed commands, not a newly tested one-click installer. Full original helper scripts are supplied as references; some contain historical paths, global variables, or one-run guards and must not be launched blindly.

The source bundle contains a **reproduction/** directory with native inputs, contact/body inventories, custom bolt-library files, selected original scripts, acceptance evidence and a SHA-256 manifest. Large binary solution/restart files and the complete CAD/Workbench project are retained separately in the project tree, not duplicated in the report ZIP. Their dependencies are identified below.

Procedure index

1. Preserve the project and establish the environment	17
2. Verify the complete assembly, supports and materials	18
3. Restore the intended contacts and refined mesh	19
4. Configure the six APDL Bolt Manager definitions	20
5. Define the seats and the load-lock sequence	21
6. Preflight, solve and verify the static parent	22
7. Extract and check the tightening state	23
8. Build the expanded prestressed modal basis	24
9. Create the three separate excitation cases	25
10. Check the native spectrum and excitation scope	26
11. Stage a fresh local solver directory for each axis	27
12. Preflight each random deck and seal the input	28
13. Solve sequentially, then archive before importing	29
14. Import the results and configure the 17 fields	30
15. Export full fields and independently check coverage	31
16. Recreate the whole-assembly and PCB figures	32
16a. Recreate the added oblique battery-side views	33
17. Recreate both editable LaTeX graphs and the PDF	34
18. Traceability and troubleshooting for a rerun	35
19. Companion videos: statistical fields and actual motion	37
20. Reproduce the representative transient calculations	38
21. Validate and expand the actual displacement states	39
22. Render, encode and check the motion videos	40

23. Reproduce the instantaneous PCB stress video	41
--	----

1. Preserve the project and establish the environment

1. Close or save Mechanical, then copy the entire project folder to a new study folder. Keep `powerboardsim_v1.wbpj`, `powerboardsim_v1_files/`, and `outputs/` together. Open the copied project in Workbench and open its Model cell in Mechanical. Do not substitute a lone old `SYS.mechdb` into the current project: saved model files are snapshots, not complete portable projects.
2. Use ANSYS Mechanical/MAPDL 2026 R1.02, build 26.1 UP20260202. The accepted solver used 12 distributed processes. The original VM was Windows 11 in Parallels with 14 virtual CPUs and 112 GB RAM. Keep enough local disk space for per-rank matrices and results: one random-case staging copy was approximately 25 GB before new results.
3. Load the existing APDL Bolt Manager extension (internal extension name `BoltTools`, version 2024.1). Sherlock's imported geometry and material assignments must already be present. The accepted export also identifies Sherlock_App 2026.1. Use solver units m, kg, s, N; the geometry and mesh sizing tables below are in mm.
4. Establish a new output folder. In the original project, call the project root P, the accepted modal run B, and the accepted random run R, using the paths below. A fresh rerun must use different output directories. Do not reuse completion markers from an old run as evidence that a new run passed.

```
# Original Windows project root (Z: maps the macOS user home):
P = r'Z:\Developer\MIT_Rkt_Team\2026-7\MIT-RT-26_27-Work\simulation_work\avionics\powerboardsim\1'
B = P + r'\outputs\bolt_manager_work\resume_20261005_004228'
R = P + r'\outputs\random_vibration_20261005_0950'
# Native solver executable:
# C:\Program Files\ANSYS Inc\v261\ansys\bin\winx64\ANSYS261.exe
```

Identify analyses by their role, then verify their IDs

Role in the saved model	Object ID	Native directory under dp0
Static, 750 N load then lock	4123	SYS-2/MECH
20-mode prestressed comparison	1656	SYS-1/MECH
Default comparison, later refined	4182	SYS-3/MECH
Expanded modal basis for random	4254	SYS-4/MECH
Random X / Workbench block F	4259	SYS-5/MECH
Random Y / Workbench block E	4264	SYS-6/MECH
Random Z / Workbench block D	4269	SYS-7/MECH

Object IDs, Workbench letters and folder names can change when objects are recreated. A new study should resolve the corresponding objects and confirm their names, types and upstream links before using any ID from this report. A geometry ID is not a Mechanical object ID.

Open Mechanical's Scripting pane and select its IronPython environment for the snippets below. Use `System.IO` for files there. The previous `ImportError: No module named _json` is avoided by keeping JSON parsing in host Python 3; it is not repaired by changing the material model.

2. Verify the complete assembly, supports and materials

1. Expand Geometry. Verify 208 unsuppressed, meshed bodies, including 172 imported `COMP_` electronic-component bodies, three cell bodies, nickel strips, six battery screws, washers and stand-offs. Keep component solids in the solve even when making a PCB-only contour. The assembled mass is approximately 0.25182 kg.
2. Check `reproduction/common/assembly_body_inventory.tsv`: it lists each body's geometry ID, Mechanical object ID, material and meshed node/element counts. Match the inventory before altering contacts. PCB geometry ID is 42342 (Mechanical body object 3558); the PCB measures approximately $69.215 \times 120.777 \times 1.10236$ mm.
3. Scope one Fixed Support to the eight existing mounting end faces below. In the accepted static analysis its object ID is 4127; the default analysis uses a separate support on the same faces. Do not fix the six battery screws directly, and do not add weak springs to hide a disconnected assembly.
4. Retain the inherited material assignments. Verify elastic stiffness and density in Engineering Data and in the exported native material records. Assigning one generic material to all components would create a different study. The full native decks contain the actual material definitions and their element assignments; the table below only highlights the large structural bodies.

Scope	Geometry entity IDs
Fixed mounting faces	23075, 23135, 23195, 23255, 23315, 23375, 23435, 23495
PCB / underside seat target	Body 42342 / face 41909
Battery cells	20157, 20675, 20822
Nickel strips	20091, 20297, 20348, 20642, 20756, 20929

Stored material	E (Pa)	ν	ρ (kg/m ³)
PCB	23330241935.4839	0.15	1969.77741935484
PilesLiPo	2.0×10^{11}	0.30	2200
NICKEL-200	2.2×10^{11}	0.305	8874
Acier standard	2.0×10^{11}	0.30	7850

Initialize the Mechanical API without relying on a previous console session

```
import System
from Ansys.Core.Units import Quantity
from Ansys.ACT.Interfaces.Common import SelectionTypeEnum
from Ansys.Mechanical.DataModel.Enums import *
m = ExtAPI.DataModel.Project.Model
static = ExtAPI.DataModel.GetObjectById(4123)
bolted = ExtAPI.DataModel.GetObjectById(1656)
ext = [x for x in ExtAPI.ExtensionManager.Extensions
        if x.Name == 'BoltTools'][0]
manager = [x for x in ExtAPI.DataModel.GetUserObjects(ext)
            if x.Name == 'ApdlBoltManager'][0]
bm = ext.GetModule().ApdlBoltModule
def sel(ids):
    s = ExtAPI.SelectionManager.CreateSelectionInfo(
        SelectionTypeEnum.GeometryEntities)
    s.Ids = list(ids)
    return s
def enumset(obj, name, value):
    p = obj.GetType().GetProperty(name)
    p.SetValue(obj, System.Enum.Parse(p.PropertyType, value), None)
```

3. Restore the intended contacts and refined mesh

1. Preserve the existing contact definitions and scopes. Do not run automatic contact generation as a re-production step: that was previously capable of changing pairings. The accepted bolted network has 210 active contact regions: 172 component-to-PCB bonds, 8 stand-off-to-PCB bonds, 24 hardware/nickel/battery bonds, and 6 frictionless bearing seats. Additional shaft-to-hole MPC elements are generated by the bolt extension.
2. Enforce the user's battery rule: only battery-to-nickel connections are active. The six allowed contact regions are listed below. Suppress any battery-to-PCB, battery-to-washer or other direct battery contact. Do not replace them with frictionless battery-to-PCB contact; even that would introduce an extra load path. Check for shared mesh nodes as well as contact objects.
3. For the refined models, set the 172 component-to-PCB bonds to Asymmetric, MPC, Nodal Normal to Target. Component faces are the contact/source side; PCB faces are the target side. Retain the detailed face scopes from the saved project. `reproduction/common/final_active_contacts.tsv` records body-level pairs; the native decks preserve the exact meshed contact surfaces.
4. In Mesh, retain existing controls and set Element Order to Quadratic. Add or edit body sizing: PCB body 42342 at 0.7 mm; screw bodies 21279, 21629, 21979, 22329, 22679, 23029 at 0.4 mm. Generate the mesh. Expected geometry mesh: 368754 nodes and 112902 solid elements; PCB alone: 217704 nodes and 39014 elements. Remeshing in a different release can change this mesh. Use the archived decks for identical node/element replay.
5. Insert the following Commands object into the static analysis and the refined-default modal analysis. Keep legacy Commands object 4113 suppressed. Preserve the export order so that the command executes before SOLVE. The original unrefined default did not receive this numerical correction.

```
FINISH
/PREP7
ETCONTROL,OFF
SHPP,WARN
FINISH
/SOLU
```

Contact object	Source body	Target body	Accepted type
1699	20091	20157	Bonded
1711	20157	20348	Bonded
1726	20297	20675	Bonded
1753	20642	20675	Bonded
1759	20756	20822	Bonded
1768	20822	20929	Bonded

In Mechanical, set PCB670_RUN to a fresh audit directory and run the supplied script `reproduction/common/audit_battery_constraints.py`. It checks the six allowed contact pairs and rejects shared nodes between batteries and any non-nickel body. It writes a contact inventory; it does not solve.

The accepted mesh still has 1498 tetrahedra with shape warnings, mostly in nickel, with maximum reported aspect ratio 216.3. Reproducing those warnings is traceability, not a validation target. Mesh improvement would be a new study. The refined comparison also changes integration/contact numerics and therefore is not a pure mesh-convergence experiment.

4. Configure the six APDL Bolt Manager definitions

1. Use the six existing flexible solid screws. Keep the saved APDL Bolt Manager and its six children; do not add six additional geometric screws or duplicate pretension objects. Child IDs in the accepted project are 4139, 4147, 4155, 4163, 4171 and 4179. The manager ID is 4122.
2. Make the three files in `reproduction/custom_library/` available in BoltTools' configured custom-part library and reload it with `bm.LoadXmlApdlBolts()`. Check that `bm.ApdlBoltDict['PCB_ExistingBolt_670N.xml']`. `LoadErrors` is empty. The old 670N filename is retained for compatibility; its **actual stored load is 750 N**. Do not change it back to 670 N.
3. For each row below, create or verify three geometry Named Selections: `PCB670_nn_BODY`, `PCB670_nn_SHAFT`, `PCB670_nn_HOLE`. Send them to the solver as node components. Use the reported body and faces, not all shaft-adjacent parts. The exported body component is selected as elements in the custom preprocessor commands.
4. Verify a global-aligned coordinate system at each listed x, y and $z = -3.772678375$ mm. On each Bolt Manager child, select that one coordinate system; set the bolt part to the custom XML; set Bolt Washer, Nut and Nut Washer to None; set Display/Visible to No. The custom definition adds pretension/contact elements to existing solids rather than extra bolt mass.

No.	Position	Body	Shaft faces	PCB hole faces (inclusive)
1	Left, high Y	21279	21214, 21273	41970–41977
2	Centre, high Y	21629	21564, 21623	41962–41969
3	Right, high Y	21979	21914, 21973	41954–41961
4	Left, low Y	22329	22264, 22323	41914–41921
5	Centre, low Y	22679	22614, 22673	41922–41929
6	Right, low Y	23029	22964, 23023	41930–41937

No.	x (mm)	y (mm)
1	10.81234895	102.90699896
2	34.81234887	102.90699896
3	58.81234883	102.90699896
4	10.81234894	17.90699886
5	34.81234886	17.90699886
6	58.81234882	17.90699886

Each child's User Commands entry is sent at Assembly level for the Bolt part, in both Pre and Solve phases. For bolt 1, use the following text; change the index and the three solver names for each successive bolt.

```
PBIndex=1
PBBody='PCB670_01_BODY'
PBShaft='PCB670_01_SHAFT'
PBHole='PCB670_01_HOLE'
```

The API representation is `obj.Attributes['UserCmds']` containing `[['Existing solid bolt scopes', text, ['Pre', 'Solve'], ['Bolt'], ['Assembly']]]`. After editing, call `obj.Controller.GetData(obj, False)` and `obj.NotifyChange()`. The bundled historical setup script shows the full API construction, but its old 670 N assumptions and empty-manager checks must not be replayed on the final project.

5. Define the seats and the load–lock sequence

1. For the bolted configuration, unsuppress all six Bolt Manager children. Suppress four incidental washer/stand-off bonds: 1696, 1732, 1744, 1771. Create or unsuppress the six bearing contacts below, with washer as contact/source and PCB underside 41909 as target.
2. Set each bearing contact to Frictionless, Asymmetric, Augmented Lagrange, Pinball Region = Radius, Pinball Radius = 1 mm, Interface Treatment = Adjust to Touch. This deliberately closes the approximately 0.7459997 mm CAD gap. It is the accepted seating assumption; confirm its physical validity separately.
3. In Static Structural, use two steps ending at 1 s and 2 s. Set Large Deflection = On, Weak Springs = Off, Automatic Time Stepping = On for both steps, Initial Substeps = 5, Minimum = 1, Maximum = 100. These times index a quasi-static loading sequence; they are not a vibration duration. Preserve restart data for the downstream modal calculation.
4. The custom XML uses global cut plane PBCutZ=-2 mm, upper shaft range PBTopZ=-1 mm to PBMaxZ=2 mm, and MPC pinball PBPInb=1.5 mm. PCB_ExistingBolt_Pre.inp uses PSMESH/PRETS179 and TARGE170/CONTA174. It reserves 2000 node and element IDs per bolt and tests that the cut, target and contact selections are nonempty. Keep the entire supplied file unchanged for exact replay.

Seat	Contact object	Washer body	Washer face	PCB face
1	4224	20246	20234	41909
2	4228	20040	20028	41909
3	4232	20525	20513	41909
4	4236	20466	20454	41909
5	4240	20878	20866	41909
6	4244	20407	20395	41909

Exact load-phase commands in the custom library

The following is the operative content of PCB_ExistingBolt_Load.inp. PBLoad is supplied as 750 N by the XML. The analysis-type guard prevents applying static tightening again during modal or PSD solves.

```
! Static step 1: tensile preload. Step 2: lock achieved adjustment.
! Prestressed modal obtains the locked state from its linked static solution.
*GET,PBAnalysis,ACTIVE,0,ANTY
*IF,PBAnalysis,EQ,0,THEN
PBPN=PBPIlot%PBIndex%
*IF,_MechAnalysisStep,EQ,1,THEN
F,PBPN,FX,PBLoad
/COM,PCB_BOLT_%PBIndex% PRELOAD %PBLoad% N
*ELSEIF,_MechAnalysisStep,GT,1,THEN
FDELE,PBPN,FX
D,PBPN,UX,%_FIX%
/COM,PCB_BOLT_%PBIndex% LOCK
*ENDIF
*ENDIF
ALLSEL,ALL
```

The UX degree of freedom here belongs to a PRETS179 pretension pilot and represents relative tightening, not an instruction to move the physical screw in global X. Step 1 applies force; step 2 removes that force and locks the achieved adjustment with %_FIX%. Keep this sequence; leaving 750 N force-controlled in step 2 would be a different tangent-state model.

6. Preflight, solve and verify the static parent

1. In Mechanical, export a fresh static native deck after refreshing the ACT writer. Use a new folder. The commands below assume `newout` is an existing Windows directory and that section 2 initialized the API objects.

```
bm.StartApdlInputFileWrite(static)
static.WriteInputFile(newout + r'\static_input.dat')
s = System.IO.File.ReadAllText(newout + r'\static_input.dat')
assert s.count('PBLoad = 750.0') == 12 # six bolts, two steps
assert s.count('CMSEL,S,%PBBody%,ELEM') == 6
assert 'ETCONTROL,OFF' in s
assert '*GET,PBAnalysis,ACTIVE,0,SOLU,ANTYPE' not in s
```

2. Run a separate no-SOLVE preflight on a copy of the exported input, truncated immediately before its first standalone SOLVE command. The supplied `reproduction/native/static750/preflight.dat` is the exact accepted preflight deck and ends in inventories, `CNCHECK,DETAIL` and `/EXIT,NOSAVE`. Use it unchanged only with its corresponding mesh/deck. For changed geometry, regenerate the preflight prefix rather than transplanting old mesh records.
3. Launch MAPDL in a fresh directory with `-b nolist -smp -np 1 -p preppost -j check -i preflight.dat -o preflight.out`. Require zero native errors, completion of the preflight, six nonempty pretension cuts, and 750 N on each pilot. The accepted bolt inventories are below. Also pass the nickel-only battery audit.
4. Re-export `launch_static_input.dat` immediately before solving. Compare all non-comment records with the checked export; tolerate export timestamp comments only. If anything substantive differs, repeat the preflight. Then solve Static Structural using 12 distributed processes (Mechanical `static.Solve(True)` was used).
5. Wait for the solve to finish before any next command. Check Mechanical Solution = Solved and the native `solve.out`: zero errors and final convergence at time 2. The accepted final state was load step 2, substep 4. Read the pretension audit at both steps and verify all six final locked reactions within 1 N of 750 N.

Bolt	PRETS179	TARGE170	CONTA174	Locked force (N)
1	142	187	32	749.999347595
2	141	200	32	749.999448517
3	149	200	32	749.999081634
4	134	180	32	749.996796406
5	138	185	32	749.999422828
6	126	185	32	749.998678460

Preserve the restart and equilibrium evidence

Archive the full static solver directory, including per-rank restart data, `file.rdb`, `file.ldhi`, restart substep files, `file.rst`, `ds.dat`, `solve.out`, the error file and bolt audit. A result file alone is insufficient for the perturbation modal restart. Do not clear generated data between static and modal.

Accepted static evidence is `B/bolted750_refined/`; `B` denotes the root defined in section 1. The similarly named `bolted750`, `bolted750_asymmetric` and `bolted750_fullintegration` directories contain earlier attempts and are not the final parent. Peak static displacement was 0.0474595 mm; peak elastic equivalent stress was approximately 1.142 GPa. Final washer bearing forces were 749.877–750.120 N, with zero reported contact damping force. Those stresses remain unqualified.

7. Extract and check the tightening state

Insert this Commands object under the static Solution before solving, or run equivalent MAPDL postprocessing on the preserved static result with its parent database loaded. It is the actual force-check procedure. It writes the relative adjustment and reaction at all six pretension pilots at the end of each step.

```
/POST1
*CFOPEN,bolt_preload_audit,csv
*VWRITE
('step,bolt,pilot,adjustment_m,reaction_N')
*DO,PBSTEP,1,2
SET,PBSTEP,LAST
*DO,PBII,1,6
PBPB=PBPilot%PBII%
*GET,PBUX,NODE,PBPN,U,X
*GET,PBRF,NODE,PBPN,RF,FX
*VWRITE,PBSTEP,PBII,PBPB,PBUX,PBRF
(F3.0,' ',F3.0,' ',F10.0,' ',E20.12,' ',E20.12)
*ENDDO
*ENDDO
*CFCLOSE
ALLSEL,ALL
```

Bolt	Accepted pilot node	Locked adjustment (m)
1	369771	2.82970332153E-5
2	371772	2.22045874625E-5
3	373773	1.85968938693E-5
4	375774	3.04568660374E-5
5	377775	2.06860396937E-5
6	379776	1.87719835696E-5

Pilot IDs can change if the mesh or object ordering changes. The APDL parameters `PBPilot1` through `PBPilot6`, created by the bolt library, locate the current pilots. Do not hard-code the table's pilot numbers into a remeshed model.

Step-1 pilot reaction can be nearly zero because its pretension degree of freedom is force-loaded rather than displacement-constrained. That value is not evidence of missing preload. Check the applied 750 N in the input/preflight and the final step-2 locked reaction. The load is 750 N *per bolt*, not 750 N divided among six.

For an independent check, inspect Contact Tool/bearing output at the final locked substep and compare the six compressive seat forces with the archived `reproduction/common/bearing_contact_audit.json`. A plausible pilot force alone does not prove that the washer-to-PCB load path is correct.

Before modal extraction, confirm that all six bolt definitions remain active, the six seats are active, the four incidental bonds remain suppressed, the eight supports are unchanged, and the battery audit still passes. Save the project. Do not accidentally restore default contacts while calculating a bolted modal or random case.

8. Build the expanded prestressed modal basis

The random study uses the same assembled mesh and the same verified 750 N locked static state from sections 1–7. It does not use the unprestressed default-contact model. It also does not stop at the 20 modes of the comparison report.

1. In a copied project, reuse the existing expanded Modal analysis 4254, or create one new Modal analysis and record its new ID. Transfer/link data from the verified Static Structural analysis. In the accepted setup, `rvmodal.TransferDataFrom(static)` established the link; its initial condition then points to static 4123.
2. Set Max Modes to Find = 60, search minimum = 1 Hz, maximum = 4000 Hz, Limit Search to Range = Yes and Damped = No. Enable Stress, Strain, Nodal Forces, reaction calculation, modal-result storage and expansion. Keep the MAPDL database and all files required for future mode-superposition analysis. Create/link the downstream Random Vibration systems before export so the future-analysis output intent is retained.
3. Export the native modal input. Verify `MODOPT,LANB,60,1.,4000.,MXPAND,,,YES,,YES`, the perturbation restart from the locked parent, and six static-only ACT load guards. There must be no new mesh or `PSMESH` commands in this downstream modal deck.
4. Run a no-SOLVE parent check, as in section 6: load the static database, verify six inherited pretension sets and modal analysis type, but do not calculate eigenvalues in the preflight. The original helper is `reproduction/scripts/preflight_modal_basis.py`. Adapt its root/output paths to the new copy; its historical globals are not automatically portable.
5. Re-export and compare the checked commands, then solve the expanded modal with 12 distributed ranks. Require zero solver errors. Sixty is the maximum requested count; the accepted interval contained 38 modes. Do not extend the upper bound merely to force 60 modes when reproducing this study.

```
# Mechanical, reuse only after confirming the analysis identities:
rvmodal = ExtAPI.DataModel.GetObjectById(4254)
rvic = [x for x in rvmodal.Children
        if unicode(x.DataModelObjectCategory) == 'InitialCondition'][0]
assert rvic.PreStressICEnvironment.ObjectId == static.ObjectId
ms = rvmodal.AnalysisSettings
ms.MaximumModesToFind = 60
ms.LimitSearchToRange = True
ms.SearchRangeMinimum = Quantity('1 [Hz]')
ms.SearchRangeMaximum = Quantity('4000 [Hz]')
ms.Damped = False
ms.Stress = True
ms.Strain = True
enumset(ms, 'NodalForces', 'Yes')
ms.CalculateReactions = True
ms.SkipExpansion = False
enumset(ms, 'StoreModalResults', 'Yes')
# Confirm SaveMAPDLDB=True and future prestress/MSUP intent in Details.
bm.StartApdlInputFileWrite(rvmodal)
rvmodal.WriteInputFile(newout + r'\modal_input.dat')
```

Accepted checkpoints: 38 frequencies from 485.964268212 to 3986.07476348 Hz; the first 20 match the bolted comparison at exported precision. Cumulative effective-mass fractions: X 0.872410907770, Y 0.890419373766, Z 0.895619244830. Preserve the entire expanded-modal solver directory, including all 12 ranks. The 2251 native warnings remain qualification limits; zero errors does not remove them.

9. Create the three separate excitation cases

1. Create or reuse three Random Vibration analyses sharing expanded modal 4254. Verify each Initial Conditions object has `ModalEnvironmentPSDIC` pointing to that modal. In the accepted project the analysis IDs are X 4259, Y 4264, Z 4269; initial-condition IDs are 4262, 4267 and 4272. **Workbench block F is X, E is Y and D is Z.**
2. Set Constant Damping = Manual and Constant Damping Ratio = 0.02 in each random analysis. The writable API property is `ConstantDampingRatio`; an attempted assignment to `DampingRatio` was not the accepted configuration. The modal eigensolve remains undamped; damping belongs to the forced random response.
3. Set Calculate Velocity = Yes, Calculate Acceleration = Yes, Keep Modal Results = Yes, Exclude Insignificant Modes = No, Save MAPDL DB = Yes and Delete Unneeded Files = No. Retain all 38 modes. The native combination setting is `PSDCOM,0.00`.
4. Insert one active PSD Acceleration load per case, using X, Y or Z in the global coordinate system. Select the static Fixed Support 4127 as the boundary condition. Apply one coherent base input to all eight support faces. No independent per-foot inputs or simultaneous three-axis correlation model was used.
5. Enter the four frequencies 20, 50, 800 and 2000 Hz. Convert the supplied g^2/Hz ordinates with $g_0 = 9.80665 \text{ m/s}^2$ and use SI acceleration-squared per Hz. Suppress the old PSD G Acceleration objects 4274, 4275 and 4276 if they exist; do not leave both representations active.

Frequency (Hz)	Supplied g^2/Hz	Entered m^2/s^3
20	0.026	2.50042998979
50	0.16	15.3872614756
800	0.16	15.3872614756
2000	0.026	2.50042998979

Mechanical API for a case and its single SI load

Use the existing active SI load on a configured analysis. The creation call below is only for a new case with no such load yet.

```
axis = 'X' # repeat separately for Y and Z
a = ExtAPI.DataModel.GetObjectById(4259)
aset = a.AnalysisSettings
enumset(aset, 'ConstantDamping', 'Manual')
aset.ConstantDampingRatio = 0.02
aset.CalculateAcceleration = True
aset.CalculateVelocity = True
aset.KeepModalResults = True
aset.ExcludeInsignificantModes = False
aset.SaveMAPDLDB = True
aset.DeleteUnneededFiles = False
load = a.AddPSDAcceleration() # only if not already present
load.BoundaryCondition = ExtAPI.DataModel.GetObjectById(4127)
enumset(load, 'Direction', axis+'Axis')
load.LoadData.Inputs[0].DiscreteValues = [Quantity(str(f)+' [Hz]')
    for f in [20,50,800,2000]]
load.LoadData.Output.DiscreteValues = [
    Quantity('%.12g [m m sec^-3]' % (v*9.80665**2))
    for v in [.026,.16,.16,.026]]
```

10. Check the native spectrum and excitation scope

Export one native input per case after calling `bm.StartApdlInputFileWrite(a)`. In the source bundle, `reproduction/native/random_X/psd_input.dat` and the corresponding Y/Z files preserve the accepted Mechanical exports. These are complete restart/spectrum inputs, not full geometry decks.

The essential accepted X-case sequence is below. The full deck supplies the 781 support-node selection and both groups of guarded ACT commands. Retain those records. For Y and Z, change only the imposed excitation degree of freedom (UY or UZ) and bookkeeping/title text; do not change the PSD or damping.

```
RESUME,file,db
/SOLU
ANTYPE,SPECTR
SPOPT,PSD,,YES
DMPRAT,2.e-002
PSDCOM,0.00
PSDRES,DISP,REL
PSDRES,VELO,ABS
PSDRES,ACEL,ABS
! The generated deck selects the 781 mounting nodes here.
D,ALL,UX,1
PSDUNIT,1,ACEL
PSDFRQ,1,,20.,50.,800.,2000.
PSDVAL,1,2.50042998979,15.3872614756,15.3872614756,2.50042998979
! Generated ACT blocks retain static-only guards; do not remove them.
PFACT,1,BASE
! Re-select the same support nodes as in the generated deck.
D,ALL,UX,0
! Remaining generated output/ACT controls follow.
SOLVE
SAVE,file,db
```

The unit constraint used for the participation calculation defines base excitation; it is not a prescribed one-metre random displacement. `PSDUNIT,1,ACEL` identifies SI acceleration PSD. Relative displacement and absolute acceleration must not be interchanged when reporting responses.

Regenerate and compare the support-node set

In Mechanical, collect `MeshRegionById(faceID).NodeIds` for the eight faces in section 2, take the sorted set and export it to a text file. The accepted mesh has exactly 781 unique support nodes; `reproduction/common/mounting_nodes.txt` is the accepted reference. The native preflight must match the full set, not only its count. After any remesh, regenerate both the geometric and native lists and use that new pair consistently.

Input RMS cross-check

Use power-law (straight-line log-log) interpolation between supplied points. For one segment, set $n = \log(S_2/S_1)/\log(f_2/f_1)$ and integrate

$$I = S_1 f_1 \frac{(f_2/f_1)^{n+1} - 1}{n + 1}, \quad g_{\text{RMS}} = \sqrt{\sum I} = 14.1356137191.$$

For $n = -1$ use $S_1 f_1 \log(f_2/f_1)$. The corresponding SI RMS is 138.623016279 m/s². The 15.3098008 g display from a linear trapezoidal integral is not the integral used for this check. Do not rescale the input to that display value. The preflight's native PSDGRAPH also checks the spectrum representation.

11. Stage a fresh local solver directory for each axis

The accepted random solves were run in isolated local Windows directories. Mechanical initially reported a generic SolveFailed after MAPDL had finished X with zero errors. A subsequent attempt to import from that same analysis' own generated solver directory cleared the source files. The accepted X solution was therefore recomputed in a fresh directory and archived before import. Use the preserved workflow below to avoid that loss.

1. Ensure the expanded modal analysis has completed and no solver process is still active. Save the project. If the only solver license is held by Mechanical, run `ExtAPI.Application.LicensePreference.DeActivateLicense()` in its console before external solves. The accepted setup had one `ansys` seat, so X, Y and Z were run sequentially.
2. Make a new, empty local directory per axis. The original accepted names were `PCBRV_20261005_X_local_v2`, `PCBRV_20261005_Y_local` and `PCBRV_20261005_Z_local` under `C:\Temp`. Choose new names for a rerun.
3. Copy from the *expanded modal* solver directory, normally `powerboardsim_v1_files\dp0\SYS-4\MECH`. Copy every file matching `~file\d*\.(db|mode|full|esav|emat|rst)$` plus `file.DSP`. This includes unnumbered files and ranks 0–11. Do not copy only `file.mode`, only the first rank, or the 20-mode comparison directory.
4. Copy that axis' exported PSD input to the new folder as `run.dat`. In it, redirect only Workbench scratch/-solver bookkeeping directory strings to the new folder. Retain physical commands, scoping, mode files, SI ordinates, damping and static-only guards. Keep `RESUME`, `file`, `db` for the local parent database. Compare the reviewed deck with the original and record the path-only changes.
5. Place a no-SOLVE `preflight.dat` alongside it, constructed as described in section 12. Do not copy old `PREFLIGHT_PASSED` or `SOLVE_STARTED` markers. Record source file sizes and hashes, and the new input SHA-256.

Windows PowerShell staging example, using actual paths for your copy:

```
$src = 'Z:\YOUR_COPIED_PROJECT\powerboardsim_v1_files\dp0\SYS-4\MECH'
$runDir = 'C:\Temp\PCB_RV_REPEAT_X_01'
if (Test-Path $runDir) { throw 'Choose a new empty run directory' }
New-Item -ItemType Directory -Path $runDir -ErrorAction Stop | Out-Null
Get-ChildItem $src -File | Where-Object {
    $_.Name -match '~file\d*\.(db|mode|full|esav|emat|rst)$' -or
    $_.Name -eq 'file.DSP'
} | Copy-Item -Destination $runDir
# Copy reviewed run.dat and preflight.dat into $runDir next.
Get-ChildItem $runDir -File | Select-Object Name,Length
```

`reproduction/scripts/stage_local.py` records the original path-replacement/copy procedure; `reproduction/native/random_X/staging_manifest.json` lists the source rank files and sizes. The small report ZIP intentionally excludes these multi-gigabyte binary dependencies. Preserve them with the project or regenerate the modal basis first. In Parallels, long encoded PowerShell commands failed; use short console commands or stage files explicitly rather than resubmitting a long command that may partly execute.

12. Preflight each random deck and seal the input

1. Make the preflight from the axis' reviewed native deck, ending immediately before `PFACT,1,BASE`. It must load the complete local modal database, enter spectrum analysis, assign the spectrum and unit base-motion constraint, and execute the guarded ACT blocks. It must contain neither `PFACT` nor `SOLVE`. The complete accepted preflights are supplied under `reproduction/native/random_X/`, Y and Z.
2. Append the following native scope check (UX shown). Use UY or UZ for the other cases. Save the selected IDs for an exact comparison with the geometric mounting-node list. Also request `SPTOPT`, `STAT` and `PSDGRAPH,1,1,0` in a PNG graphics device, then finish without saving over the modal database.

```
*GET,PBCheckAnty,ACTIVE,0,ANTY
*IF,PBCheckAnty,NE,8,THEN
*MSG,FATAL
Expected spectrum analysis type 8.
*ENDIF
NSEL,S,D,UX,1
*GET,PBCount,NODE,0,COUNT
*IF,PBCount,NE,781,THEN
*MSG,FATAL
Unexpected excitation-node count.
*ENDIF
*DIM,PBExcNodes,ARRAY,PBCount
*VGET,PBExcNodes(1),NODE,,NLIST
*CFOPEN,excitation_nodes,txt
*VWRITE,PBExcNodes(1)
(F12.0)
*CFCLAS
ALLSEL,ALL
SPTOPT
STAT
/SHOW,PNG
/GFILE,1200
PSDGRAPH,1,1,0
/SHOW,CLOSE
FINISH
/EXIT,NOSAVE
```

3. Run MAPDL in that fresh runtime with `-b nolist -smp -np 1 -p preppost -j psdcheck -i preflight.dat -o preflight.out`. Require zero native errors, spectrum analysis type 8, and an exact match of all 781 excitation-node IDs.
4. Check the full solve input, not just the preflight: one `PFACT,1,BASE`; `DMPRAT,2.e-002`; `PSDCOM,0.00`; the four exact frequencies and SI ordinates; the intended axis; no `NBLOCK`, `EBLOCK` or `PSMESH`; and twelve `*IF,PBAnalysis,EQ,0,THEN` static-only guards. Six occur before `PFACT` and six in the later generated phase. They prevent re-tightening in analysis type 8.
5. Record SHA-256 of `run.dat` after these checks. Immediately before launch, compare the local file's hash to the checked hash. A new edit requires a new preflight. Cross-compare X, Y and Z decks: the accepted inputs differ only by axis, analysis title and runtime bookkeeping paths.

The supplied `reproduction/scripts/native_preflight.py` contains the actual parsing and node-set assertions. Adapt its path constants and use a fresh output root; never reuse an old successful marker to approve a changed deck.

13. Solve sequentially, then archive before importing

Windows PowerShell, after section 12 passes:

```
$solver = 'C:\Program Files\ANSYS Inc\v261\ansys\bin\winx64\ANSYS261.exe'
$runDir = 'C:\Temp\PCB_RV_REPEAT_X_01'
$expected = 'REPLACE_WITH_THE_NEW_PREFLIGHT_SHA256'
$actual = (Get-FileHash (Join-Path $runDir 'run.dat') -Algorithm SHA256).Hash
if ($actual.ToLower() -ne $expected.ToLower()) { throw 'Input changed' }
if (Get-Process ANSYS,ANSYS261 -ErrorAction SilentlyContinue) {
    throw 'A solver process is already running'
}
$job = Start-Process $solver -WorkingDirectory $runDir -PassThru `
    -ArgumentList '-b nolist -s noread -dis -np 12 -p ansys -j file -i run.dat -o solve.out'
$job.Id
```

1. Wait for the launcher and all solver ranks to finish. Inspect the log, not only the process exit. The accepted solves each contain RUN COMPLETED, zero errors and 22 warnings. They report displacement-, velocity- and acceleration-type PSD responses, all modal modes selected for combination, damping ratio 0.0200 and the inherited locked relative motions.
2. Copy `run.dat`, `solve.out`, `file0.err`, `file.db`, `file.rst` and `file.psd` to a permanent archive outside any Mechanical-generated `dp0/SYS-*/MECH` directory. Compute SHA-256 and record file sizes. Verify that the copied files match their sources before importing anything into Mechanical.
3. Record the accepted archive path and then proceed to the next axis with its own modal staging copy. Keep all three cases separate. In the original study, each accepted native solve took roughly seven to eight minutes; this is a historical observation, not a completion criterion.
4. Only after all required evidence is safely archived, reacquire the Mechanical Enterprise license and perform result import. Never import by reference from an analysis' own generated solver directory: that operation previously removed its source files.

Accepted archived directories for this report

Axis	Relative to R	Errors	Warnings
X	X/local_recovery_v2/	0	22
Y	Y/local_recovery/	0	22
Z	Z/local_recovery/	0	22

The earlier X `local_recovery` attempt encountered license contention and is not the accepted X run. Use the `accepted_native_directory.txt` pointer and native audit for each axis when reviewing historical outputs.

`reproduction/scripts/launch_local.py` records the original hash guard and command line. `reproduction/scripts/collect_local.py` records the exact solver-log assertions and archive/hash procedure. These scripts have original-study paths and one-run markers; copy and adapt them deliberately for a new study. They are included to make the executed workflow inspectable, not to imply they are an unattended restart installer.

14. Import the results and configure the 17 fields

1. In Mechanical, confirm that the target Random Vibration analysis has the correct modal parent, excitation axis, 2% damping and result scope. Activate the Mechanical Enterprise license. Import the matching permanent archived `file.rst` using UnitsMKS. The archive must be outside that analysis' generated-data directory and must remain available for future result evaluation.
2. Under each Solution, create or verify the 17 result objects listed below. Reuse objects already present; do not duplicate them with each rerun. Use the PSD-specific acceleration and equivalent-stress APIs. A static Equivalent Stress or ordinary acceleration result object is not the accepted random-vibration result type.
3. Set Scale Factor = 1 sigma. For equivalent stress and PCB normal elastic strain, use Display Option = Unaveraged. For acceleration set `AccelerationInG=False`, export SI values and divide by 9.80665 on the host. This avoids the older gravity conversion value used by the display option. Evaluate All Results and require every object to be Solved.

```
ExtAPI.Application.LicensePreference.ActivateLicense(
    'Ansys Mechanical Enterprise')
a = ExtAPI.DataModel.GetObjectById(4259) # X; verify before use
archive = r'Z:\YOUR_NEW_ARCHIVE\X'
assert System.IO.File.Exists(archive + r'\file.rst')
a.Solution.ReadGivenAnsysResultFileByReference(
    archive + r'\file.rst',
    Ansys.Mechanical.DataModel.Enums.UnitSystemIDType.UnitsMKS)
a.Solution.EvaluateAllResults()
assert unicode(a.Solution.ObjectState) == 'Solved'
```

Quantity / scope	Mechanical API method	Count
Directional displacement, all bodies	AddDirectionalDeformation	3
Absolute acceleration, all bodies	AddDirectionalAccelerationPSD	3
Directional displacement, PCB	AddDirectionalDeformation	3
Absolute acceleration, PCB	AddDirectionalAccelerationPSD	3
Equivalent stress, all bodies	AddEquivalentStressPSD	1
Equivalent stress, PCB	AddEquivalentStressPSD	1
Normal elastic strain, PCB	AddNormalElasticStrain	3

For each group of three, set Normal Orientation to X Axis, Y Axis and Z Axis in the global system. PCB results have geometry Location = [42342]. Whole-assembly results remain scoped to all bodies, including electronics and hardware. An illustrative PCB result setup is:

```
r = a.Solution.AddDirectionalDeformation() # only if missing
r.Name = 'PCB RMS displacement Z - base X'
r.Location = sel([42342])
enumset(r, 'NormalOrientation', 'ZAxis')
q = a.Solution.AddEquivalentStressPSD() # only if missing
q.Location = sel([42342])
enumset(q, 'DisplayOption', 'Unaveraged')
```

Equivalent-stress RMS is the Segalman–Fulcher statistical result. It excludes the static mean and is not a Gaussian stress component. Preserve the distinction when exporting and labelling it. The native 68.269% annotation does not confer that coverage probability on equivalent stress.

15. Export full fields and independently check coverage

1. Export each evaluated result with `result.ExportToTextFile(path)`. Also write object ID, name, category, state, minimum, maximum, average, scale factor and units to a summary table. The original procedure is `reproduction/scripts/postprocess.py`; set `RV_CASE_AXIS`, `RV_ROOT`, the three `rvs` objects and `rv_enum=enumset` before running it in Mechanical. Use a fresh export root.
2. Read native text tables as tab-delimited data. On the original Hungarian guest, exports used Windows-1252 encoding and decimal commas. Convert decimal commas within numeric fields; do not split them as CSV delimiters. Keep element/node identifiers as integers and retain units separately.
3. Check every value is finite. For displacement and acceleration, require the complete all-body node set (368754 nodes) or PCB node set (217704 nodes), as appropriate. For unaveraged stress/strain, preserve node–element associations: the same node can have more than one value. Do not silently average them or treat repeated nodes as duplicate records to delete.
4. Compare text-table maxima with Mechanical’s full-precision summary, allowing only the native text export’s rounding (the original field audit used relative tolerance 10^{-4}). Require all 17 fields per case, 51 in total. Record the node/element at stress maxima and map the element to its CAD body.
5. Check all 781 support nodes in each excited-axis absolute acceleration field. They reproduce approximately 138.62 m/s^2 in the rounded text export, consistent with 14.1356 g RMS . That independently checks input level, acceleration units and excitation scope.
6. Build a body-to-node inventory from `MeshRegionById(bodyGeometryID).NodeIds`. Join each case’s whole-assembly displacement tables to it. Require nonempty, finite coverage for every one of the 208 bodies, including all 172 ECAD component bodies. This is the check that establishes that the solution includes the populated assembly rather than only the PCB.

Independent numerical checkpoints

Base	PCB max u_j (mm)	All-body max u_j (mm)	PCB stress (MPa)	All stress (MPa)
X	0.023366034	0.061425344	90.324504	1443.164288
Y	0.019450179	0.029746012	17.850004	29.287720
Z	0.052674102	0.080600163	32.481930	71.386584

Here u_j is the largest individual directional RMS component, not a vector sum. It is Z for every PCB row; whole-assembly X excitation is dominated by X response, and the Y/Z excitations by Z response. Component maxima need not occur at the same node.

The greatest whole-assembly equivalent-stress RMS is in geometry body 20466, Part 24[1], under X excitation; its exported maximum is node 29373, element 7017. It is a local hardware-model result requiring mesh/contact/material validation, not a demonstrated hardware stress margin.

Use the supplied `reproduction/scripts/audit_fields.py`, `verify_assembly_scope.py`, the per-case acceptance JSONs, `common/assembly_body_response_audit.csv` and `common/assembly_scope_audit.json` to inspect the actual checks. The support-node list and PCB/assembly inventories are supplied; large raw field tables remain under each original R/X, R/Y and R/Z directory.

16. Recreate the whole-assembly and PCB figures

1. Make all 208 bodies visible before whole-assembly image export. Activate the full-scope directional deformation result with the greatest maximum for the case: X response for X excitation, Z response for Y and Z excitation. Do not select the similarly named PCB-scoped result by mistake.
2. For assembly exports, use 2100 by 1400 pixels, white background, `CurrentGraphicsDisplay = False`, `ShowMesh = False`, `ExtraModelDisplay = NoWireframe` and `ShowMinimum = False`. Use Isometric orientation and Fit. Save one separate PNG per axis. For the rear/battery view, keep the Z-excitation whole-assembly Z response active, switch to Back and Fit, then export a fourth PNG.
3. For PCB-only exports, scope the same solved assembly's directional result to body 42342. Select the largest PCB component (Z for X, Y and Z excitation). Export at 1800 by 1200 pixels with the same white/background/mesh settings and isometric fit. Export the PCB unaveraged equivalent-stress RMS for X as the worst-stress view.
4. Keep ANSYS legends and unit labels in the images. State in captions that these are directional RMS fields; they are not instantaneous mode shapes. A displayed time of 0 s labels the stored random result set. Preserve each figure's own color range instead of implying that equal colors denote equal magnitudes across cases.

Report image	Result quantity / scope	Original result ID
AssemblyX.png	Base X, u_X , all bodies	4278
AssemblyY.png	Base Y, u_Z , all bodies	4301
AssemblyZ.png	Base Z, u_Z , all bodies	4316
AssemblyBack.png	Same as AssemblyZ, Back view	4316
DispX.png	Base X, u_Z , PCB	4335
DispY.png	Base Y, u_Z , PCB	4348
DispZ.png	Base Z, u_Z , PCB	4361
WorstStress.png	Base X, equivalent stress, PCB	4289

Native export example

```
from Ansys.Mechanical.DataModel.Enums import (
    GraphicsImageExportFormat, GraphicsBackgroundType, ViewOrientationType)
for b in m.Geometry.GetChildren(DataModelObjectCategory.Body, True):
    if hasattr(b, 'Hidden'): b.Hidden = False
settings = Ansys.Mechanical.Graphics.GraphicsImageExportSettings()
settings.Width = 2100
settings.Height = 1400
settings.Background = GraphicsBackgroundType.White
settings.CurrentGraphicsDisplay = False
ExtAPI.Graphics.ViewOptions.ShowMesh = False
pref = ExtAPI.Graphics.ViewOptions.ResultPreference
pref.ShowMinimum = False
enumset(pref, 'ExtraModelDisplay', 'NoWireframe')
ExtAPI.DataModel.GetObjectById(4316).Activate() # verify result identity
ExtAPI.Graphics.Camera.SetSpecificViewOrientation(ViewOrientationType.Back)
ExtAPI.Graphics.Camera.SetFit()
ExtAPI.Graphics.ExportImage(newout + r'\assembly_back.png',
    GraphicsImageExportFormat.PNG, settings)
```

The original all-body inventory/export procedure is `reproduction/scripts/export_assembly_views.py`. Copy the eight resulting PNGs into the report's `figures/` directory under the names above. The source uses ordinary `\includegraphics`; image bytes are not encoded in this random-report TeX source.

16a. Recreate the added oblique battery-side views

The nine added views reproduce the battery-side oblique orientation requested after the initial report. They cover all three global displacement components under each of the separate X, Y and Z base excitations. They are new exports of the existing solved results; no new simulation or change of physical settings was made.

1. Start from the all-body directional results in section 14. Show every unsuppressed body. Use the same white background, 2100 by 1400 pixels, `CurrentGraphicsDisplay = False`, no mesh edges, and `NoWireframe` setting as the other full-assembly figures. Keep the result at one sigma. Keep the automatic deformation display scale; interpret the contour values, not apparent geometric travel.
2. Activate a result, set the camera vectors below, then Fit. Increase the fitted `SceneHeight` by a factor of 1.25 to leave clear room around the model and its native annotations. The values below use the accepted model's global coordinates; the view looks at the batteries and the board runs diagonally down to the right.
3. Export a PNG named `BaseA_ResponseB.png`, where A is the excitation axis and B is the response component. Repeat for the nine combinations in the table. In the report source, these are stored as `figures/BatteryBaseAResponseB.png`.
4. Write the result ID, analysis ID, name, maximum, scale factor, scope and camera height to an audit table. Require each result to remain Solved and its numerical maximum to be unchanged before and after image export. The original audit is `R/battery_oblique_20261005/export_audit.tsv`.

```
# Mechanical, after activating one verified all-body result:
camera = ExtAPI.Graphics.Camera
camera.ViewVector = Ansys.ACT.Math.Vector3D(1,-1,-1)
camera.UpVector = Ansys.ACT.Math.Vector3D(-0.3,1,-1.3)
camera.SetFit()
camera.SceneHeight = Quantity(str(camera.SceneHeight.Value*1.25)+' [mm]')
ExtAPI.Graphics.ExportImage(newout + r'\BaseX_ResponseX.png',
    GraphicsImageExportFormat.PNG, settings)
```

Base axis	Response	Result ID	Maximum RMS (mm)
X	X	4278	0.0614253440290
X	Y	4280	0.00389711112803
X	Z	4282	0.0289478866762
Y	X	4297	0.00121499192574
Y	Y	4299	0.0122747369460
Y	Z	4301	0.0297460119327
Z	X	4312	0.0148380468090
Z	Y	4314	0.0332039671775
Z	Z	4316	0.0806001626188

The complete executed exporter is `reproduction/scripts/export_battery_oblique_views.py`. Copy it to a new output location and adjust its output path and object IDs only after confirming the saved model identity. The saved script does not solve or change contacts, loads, mesh or materials. Its original absolute output path should not be reused for a new study.

Figure captions identify both excitation and response axes and report the full-assembly maxima. Each native legend is in metres and uses its own range. For example, X-excitation Z response reaches 0.0289479 mm over the full assembly; the PCB-only Z maximum for the same excitation is 0.0233660 mm. Those are different geometry scopes of the same solved case.

17. Recreate both editable LaTeX graphs and the PDF

1. Keep the input-spectrum graph as native PGFPlots code in `plots/InputPSD.tex`. Its four data points are the user-supplied frequencies and g^2/Hz ordinates, plotted on log-log axes. Straight plotted segments represent the power-law interpolation used in the RMS check. Do not replace this graph with a PNG screenshot.
2. Obtain modal effective-mass contributions for global X, Y and Z from the participation tables in the expanded-modal `solve.out`. Match entries by mode number to the 38 frequencies. Cumulatively sum the native directional effective-mass fractions (equivalently, sum modal effective masses and divide by total directional mass). Do not normalize each curve to its own retained-mode total: its endpoint must remain below one.
3. Put frequency and cumulative fraction in `data/modal_mass_X.csv`, Y and Z, retaining the column names used by `plots/ModalEffectiveMass.tex`. The last fractions must be 0.872410907770, 0.890419373766 and 0.895619244830. The graph shades the 20–2000 Hz excitation band and draws all 38 modal steps. The complete editable code and CSVs are included in the source ZIP.
4. Copy updated verified numerical summaries into the existing result tables only if a new solve has been performed and accepted. This documentation revision preserved the previously accepted data. Regenerate the external ANSYS PNGs only from the matching accepted result files.
5. Extract the complete report source ZIP, including `figures/`, `plots/` and `data/`. From the directory containing the main TeX file, run pdfLaTeX twice. A TeX distribution with PGFPlots/TikZ and the packages declared in the preamble is required; no shell escape is needed.

```
pdflatex -interaction=nonstopmode -halt-on-error power_board_random_vibration.tex
pdflatex -interaction=nonstopmode -halt-on-error power_board_random_vibration.tex
```

Check the compiled document

Read the log for missing files, undefined references and overfull boxes. Render the PDF and inspect every page: axis labels, units, long file paths, code wrapping, tables, image captions and page boundaries. Confirm seventeen external contour PNGs and two editable LaTeX graphs are present. The standalone native preview cannot resolve this report's external project assets; the multi-file source builds with the command above or in a project-aware LaTeX editor.

Report source and solver source are different dependencies

The source ZIP is sufficient to rebuild the *report*. It also contains native inputs, scripts and audit evidence needed to inspect the simulation procedure. It does not contain the multi-gigabyte static/modal restart matrices, random result files, or complete Workbench CAD project. To rerun the *simulation*, retain the complete project and binary dependencies listed in sections 1, 6, 8 and 11, or regenerate them in that order.

The preserved scripts `make_report_content.py`, `build_latex_report.py` and `make_latex_plots.py` document the earlier rendering workflow. The first two predate this appendix and must not overwrite the revised report source. Rebuilding the delivered report requires only the two LaTeX commands above, not a solver or a regeneration script.

Finally save the Mechanical project after importing all three archived cases. Keep the archives at their referenced paths or explicitly relink them after moving the project. Verify X, Y and Z remain Solved and that each links to the intended expanded modal/static chain. Do not clear the upstream modal data until every downstream result and required restart has been preserved.

18. Traceability and troubleshooting for a rerun

Accepted files included under reproduction/

Directory	Contents and role
<code>custom_library/</code>	Actual 750 N XML, pretension/MPC preprocessor and guarded load-/lock APDL.
<code>native/static750/</code>	Accepted static input and preflight, force inventory, solver log.
<code>native/modal_basis/</code>	Expanded-modal restart input, solver log, frequencies, mass audit.
<code>native/random_X/</code> (and Y/Z)	Mechanical PSD export, accepted local run input, no-SOLVE preflight, native log, solver/staging/field/support audits.
<code>common/</code>	Body/material inventory, contacts, battery audit, mounting nodes and assembly coverage.
<code>scripts/</code>	Original stage, preflight, launch, collect, import, postprocess and audit procedures.
<code>MANIFEST.json</code>	Original source paths, byte counts and SHA-256 hashes of included evidence.

Use the failure symptom to locate the missing step

Zero-frequency modes or enormous modal deformation labels. Confirm the intended 1 Hz extraction lower bound and contact state. Modal amplitudes are normalized. The original default's disconnected subassembly remains a mechanism below the retained range; a cutoff does not repair it.

No `_json` module in Mechanical. Run supplied Mechanical code in IronPython using System.IO. Parse JSON manifests in host Python 3. Do not patch ANSYS' bundled Python installation or alter material values to resolve an import error.

Unexpected contact or bolt scope. Check body ownership of every face, the named-selection solver names and the coordinate geometry. Regenerating contacts or reimporting ECAD changes IDs. Resolve new IDs geometrically, re-export and repeat the input checks.

Missing mode, database or restart files. Restore all ranks from the matching expanded modal or rerun the parent chain. A `file.rst` on its own is not a mode-superposition basis. Do not mix a new database with old rank files.

License wait or failed external launch. Confirm no solver is running and release Mechanical's held solver seat before retrying in a fresh directory. The original failed X license attempt is not accepted evidence.

Mechanical SolveFailed but MAPDL completed. First inspect the native log. If it has zero errors and complete results, archive and hash the source before using the by-reference import. Never import from the target analysis' own generated directory.

Only the board is colored. Verify the result's geometry scope and all-body visibility. PCB-scoped contours were intentionally used for board results. The accepted study contains all 208 bodies; compare the body-response coverage audit before drawing conclusions from a picture.

Different response with matching PSD points. Check 0.02 damping, SI PSD units, 38-mode parent with stress recovery, standard g_0 , 1-sigma scaling, relative versus absolute results, contact state, and the six locked preload reactions. Do not tune these settings to match a rounded table.

The assumptions remain unchanged: isotropic inherited PCB/cell properties, provisional washer seating, thin-strip mesh warnings, linearization about the locked contact state, and exploratory 2% damping. No damping uncertainty study, modal/mesh convergence proof, nonlinear random contact evolution, fatigue calculation or strength qualification was performed. Reproducibility establishes what was calculated; it does not validate those assumptions.

English figure refresh: 5 October 2026

All report contours were re-exported from Mechanical after changing its interface language to English. To reproduce the heading translation, rename the relevant Workbench system titles to **Modal** or **Random Vibration**; changing the interface language alone leaves saved system titles unchanged. The supplied `reproduction/scripts/translate_workbench_titles.py` performs these display-name changes through the Workbench journal API. Adapt its project-specific system names and audit path before reuse.

Then run `reproduction/scripts/export_english_figures.py` in Mechanical, with `OUT` changed to a fresh existing directory and all result IDs checked against the saved project. The script validates the captions, result maxima and the retained modal frequencies, then exports PNGs without solving. The refined-default modal branch retains the accepted baseline results but is marked obsolete because the shared model now uses the bolt configuration; it was not recalculated against those changed contacts. The export audit and heading-translation audit are in `reproduction/common/english_figures/`. Numerical results, result scopes and documented camera directions are unchanged. The straight Back view uses a scene-height multiplier of 1.25 after Fit to keep the complete deformed outline clear of the image edges.

19. Companion videos: statistical fields and actual motion

This companion-video appendix was added on 6 October 2026. The random-vibration figures in this PDF are statistical, one-sigma RMS fields. An RMS field does not specify instantaneous displacement signs, relative phase, or a unique vibration history. The earlier camera-rotation videos preserve those fields and move only the viewpoint. Their captions identify that interpretation.

The additional fixed-camera motion videos use new native MAPDL transient calculations for the same complete assembly and the same three separate base-excitation directions. They show one reproducible synthetic realization of the specified environment. Their contours are instantaneous signed displacement, not RMS. Components, batteries, nickel strips, PCB, supports and fasteners remain in the solved assembly; a PCB-scoped picture restricts the displayed contour, not the calculation.

Adding imported transient branches can change Workbench's displayed system letters. The motion imports retained on 6 October are **Transient motion - base X** (analysis 4576), **Y** (4558) and **Z** (4592). Identify a study by its full name, source result and load case, not its letter alone.

Inherited physical model

Retain the 38 real modes from 485.964268212 to 3986.07476348 Hz, the locked six-bolt preload of 750 N per bolt, the original supports and the authorized nickel-only battery connections. Do not add battery-to-PCB bonding. Apply 2% critical modal damping to the forced response. The eigensolution remains undamped. This is a linearized calculation about the retained preload/contact state: it does not update contact opening, sliding, impact, bolt loosening or plasticity during the random motion.

Time and amplitude shown in each clip

Each displacement clip contains 480 actual result states, from 1.00006103515625 to 1.029296875 s, spaced by 1/16384 s. Encoding those states at 60 frames/s gives an eight-second video and a playback slowdown of $16384/60 = 273.0667$. The displayed displacement vector is magnified by a constant factor of 50. The numerical contour values retain physical metres. The footer displays the actual simulated time, magnification and slowdown. The camera and color bounds remain fixed throughout each clip. The sequence runs forward once; it is not reversed to manufacture a repeating history. Before accepting any frame, compare Mechanical's evaluated time with the requested time. If a license interruption leaves the previous field displayed, reject that frame and re-render it after reacquiring the license; an exported image alone does not prove the result advanced.

The output is 3840 by 2160 pixels, H.264 in MP4, with no audio. These files are separate companions, not embedded PDF media. The sibling `videos/power_board_random_motion_4k60/index.html` is the motion-video index; `videos/power_board_4k60/index.html` contains the earlier camera views and modal companions. File availability is recorded in each index and its acceptance manifest.

20. Reproduce the representative transient calculations

Use the original calculation package `outputs/random_motion_20261005_2143/`, denoted T below. The report's `reproduction/motion/` contains the small scripts, input decks and audit records; retain the original binary solver dependencies separately. Adapt absolute host/Windows paths before replaying a script. Use fresh runtime directories and preserve the accepted source files.

1. Run `generate_input.py` with NumPy. Use the four PSD points in this report, log-log interpolation, zero input outside 20–2000 Hz, and the original conversion $g_0 = 9.806 \text{ m/s}^2$. Generate an eight-second periodic record at 65536 samples/s. At each positive Fourier frequency, use coefficient magnitude $N\sqrt{S_a(f)}\Delta f/2$ and an independent uniform random phase. Use seeds 20261005, 20261006 and 20261007 for X, Y and Z. Preserve the exact arrays and acceleration tables. Apply a half-cosine startup ramp over the first 0.1 s and extend the record to nine seconds.
2. Stage the matching modal database and mode, full-matrix, element and saved-state files, including all twelve distributed ranks, into a new Windows-local directory. Run the supplied no-SOLVE preflight, check the node/element inventory, 781 blocked mounting nodes and 38 retained frequencies, and seal the staged files with hashes. Do not run inside Workbench's generated source directory.
3. Restart the modal basis with `ANTYPE,MODAL,RESTART` and `MODCONT,,ON`. At the already blocked supports, identify enforced bases `UX=1, UY=2` and `UZ=3`. Clear prior applied nodal forces and global acceleration. Generate the three enforced-motion vectors while preserving the eigensolution. Retain the resulting `.enf` files and all matching mode/restart files. Basis preparation used twelve distributed ranks; production transient integration used SMP with one rank.
4. For each separate excitation direction, stage a fresh transient runtime and perform its native preflight. Define `ANTYPE,TRANS, TRNOPT,MSUP,38,,1,YES,NMK,YES, DMPRAT,0.02`, constant $\Delta t = 1/65536 \text{ s}$, average-acceleration Newmark integration without added algorithmic damping, and `MCFOPT,1,0,0`. First solve the zero-input initial state. Read the acceleration table and apply `DVAL,base,ACC,%PBACC%,OFF`; the last argument requests motion relative to the mounting base. Keep the other bases at zero. Solve to nine seconds.
5. Inspect the complete native log before accepting a run. Preserve 589825 time samples, `.mcf` and `.rdsp` histories, exact input, seed, runtime inventory, hashes and acceptance JSON. Reject missing, nonfinite, nonmonotone or incomplete histories. Failed trial runs remain diagnostic evidence and must not replace accepted data.
6. Use `verify_transient.py` to compare the native modal coordinates with an independent Newmark integration. Discard the first second for steady RMS comparisons. Compare the nine original directional RMS hotspot values and require zero relative support displacement. The validation figures are listed on the next page.

21. Validate and expand the actual displacement states

Accepted transient checks

All three nine-second production histories completed with zero native solver errors. Relative support displacement remained zero. The coordinate checks and largest directional RMS differences for each excitation were:

Base	Relative L_2 coordinate error	Largest absolute RMS difference
X	1.2568×10^{-5}	0.0545%
Y	3.7921×10^{-6}	0.1577%
Z	1.2407×10^{-5}	0.0334%

These are numerical cross-checks against independent integration and the earlier PSD response; they are not physical validation of the inherited material, contact or damping assumptions. The retained modal effective-mass fractions remain those reported earlier; the video calculation does not establish modal or mesh convergence.

1. Copy each accepted transient state into a fresh expansion directory. Resume its matching database and request a nodal expansion of the selected stationary window. The accepted native commands include `EXPASS,ON,NUMEXP,480,1,1.029296875,NO,OUTRES,ALL,NONE,OUTRES,NSOL,ALL`, then `SOLVE`. These expansions contain nodal displacements; they do not contain element stresses.
2. Archive and hash each completed `file.rst` outside the Workbench-generated analysis directory. The final file contains 480 states beginning at 1.00006103515625 s. Verify the actual time list; do not infer the saved times from the requested start alone.
3. In Mechanical, create a new Transient Structural branch and link its modal initial condition to the original 38-mode analysis (original object 4254). Set the end time to 9 s and the time step to 1/65536 s *before* importing the result by reference. A default time step larger than the imported window can prevent evaluation despite a valid result file.
4. Read the immutable archived result with `ReadGivenAnsysResultFileByReference`, using MKS units. Create the required directional displacement result with `By=ResultSet`. For PCB-only contours, scope it to the original PCB body 42342 after verifying that body's identity. Reimports and regenerated models can change object IDs; do not copy IDs without checking their names, ownership and geometry.
5. Export the native displacement vector at seven validation nodes for sets 1, 2, 120, 240, 360 and 480. Compare with $\mathbf{u}(t) = \sum_{j=1}^{38} \phi_j q_j(t)$, using the original modal shapes and native modal coordinates. The accepted relative L_2 errors are 6.59×10^{-8} for X, 1.75×10^{-7} for Y and 8.85×10^{-8} for Z. Require the 480 times to increase by exactly 1/16384 s within the recorded floating-point tolerance. Preserve these checks in `expand_X/Y/Z/ACCEPTED.json`.

22. Render, encode and check the motion videos

1. Evaluate the chosen directional result over all 480 states to obtain the largest absolute value in the window. Choose fixed symmetric legend bounds that include that value, with ten color bands. Keep those bounds unchanged at every frame. Show all unsuppressed assembly bodies for whole-assembly views; use the verified PCB result for a scoped view. Hide mesh edges, date/time annotations and min/max arrows.
2. Set true deformation scaling with multiplier 50. For the oblique battery-side view, use `ViewVector (1, -1, -1)` and `UpVector (-0.3, 1, -1.3)`. Fit once, then increase `SceneHeight` by 1.3. For the scoped PCB views, use the specified isometric orientation. Do not refit or move the camera during playback.
3. The accepted explicit-frame method selects each actual result set, evaluates it, activates it, reasserts the fixed color bounds and calls native `Mechanical ExportImage`. Use 3840 by 2160 pixels, `CurrentGraphicsDisplay=False`, and font magnification 0.85. Use `CalculateTimeHistory=False` for this explicit per-set method: every frame is independently evaluated at its own set. Record set number, actual time, maximum and minimum next to each PNG. A four-frame proof used sets 1, 2, 120 and 480 before production.
4. The earlier accepted X/Z exports used native `ExportAnimation`. That route requires `CalculateTimeHistory=True`, `RangeType=ResultSets`, `ForwardBackwardMode=0`, 480 frames and an explicit native `SetExportStreamWidthHeight(3840,2160)`. The public width/height settings alone previously produced viewport-sized frames. `CalculateTimeHistory=False` with this animation route animates a single selected state and is not an acceptable history. Its end-of-encoding hang motivated the explicit-frame method above.
5. Render to a Windows-local directory, then verify and archive the native PNGs before transfer. Check exactly 480 complete, distinct images at 3840 by 2160, correct forward time order, fixed camera and bounds, and unmodified model pixels. Preserve SHA-256 hashes and the per-frame audit. A completed MP4 or a GUI progress bar alone is not sufficient evidence.
6. Use the supplied hardware-encoding script on the host. It uses `h264_videotoolbox`, software fallback disabled, 60 fps, High profile/Level 5.2, YUV420p, an 80 Mbit/s target and 120 Mbit/s maximum, BT.709 metadata, and fast-start MP4. Add clear English titles, physical time, magnification and slowdown. A readable fixed legend uses the verified native ten-color palette and exact fixed bounds; it does not change the native geometry or contour colors.
7. Check the complete MP4 with `ffprobe`: 3840 by 2160, rate 60/1, 480 frames and eight seconds. Decode the entire file with `ffmpeg -v error -i video.mp4 -f null -`. Inspect representative frames and playback for clipped geometry, stale min/max labels, obscured legends, camera motion, incorrect result scope or repeated/interpolated states. Publish only accepted files in the video index.

The Windows VM uses the Parallels WDDM graphics device; encoding uses the Mac's hardware video engine. The physical GPU is not directly passed through to Windows. Keep each clip's manifest and encoding command with the report reproduction package. Stress histories require a separately validated tensor-recovery procedure; displacement-only expansion files cannot support a stress-motion video.

23. Reproduce the instantaneous PCB stress video

The stress-motion companion uses the same X-excitation history as the displacement clips. It reconstructs the six *dynamic stress components* from the retained modal solution and only then computes equivalent stress. It is not obtained by multiplying the RMS equivalent-stress picture by a sinusoid. The static clamping stress is excluded.

At each element-node evaluation point, form the tensor in global Cartesian coordinates,

$$\boldsymbol{\sigma}'(t) = \sum_{j=1}^{38} q_j(t) \boldsymbol{\sigma}_j,$$

then evaluate

$$\sigma'_{\text{VM}}(t) = \sqrt{\frac{1}{2}[(\sigma'_x - \sigma'_y)^2 + (\sigma'_y - \sigma'_z)^2 + (\sigma'_z - \sigma'_x)^2] + 3[(\tau'_{xy})^2 + (\tau'_{yz})^2 + (\tau'_{xz})^2]}.$$

The prime identifies the dynamic tensor contribution; this is not the difference between two scalar von Mises values. A nonzero static mean tensor would have to be added *before* evaluating a total equivalent stress.

1. Read modal stresses from the original accepted 38-mode result `R/modal_basis/file.rst`, whose SHA-256 begins `d25a334f3d1dc2e2`. Use the complete archived hash for an identity check. This result contains the stress shapes missing from the displacement-only expanded transient files. Do not substitute a failed stress-expansion trial directory.
2. Initialize ANSYS DPF through `mech_dpf.setExtAPI(ExtAPI)` in Mechanical. Read stress operator `S` for result sets 1–38, with `requested_location='ElementalNodal'` and PCB element scoping 73331–112344 (39014 elements). Retain the reader's global-coordinate rotation. Confirm this element range against the mesh/body audit before replaying against a newly generated mesh.
3. For each selected time, create a scalar field containing the 38 *native* modal coordinates, scoped by mode IDs 1–38. Pass the stress-shape fields and coordinate field to DPF's `expansion::modal_superposition` operator. Apply `eqv_fc` to the resulting six-component tensor fields. Keep the equivalent-stress contour at elemental-nodal location: no nodal averaging is applied to the displayed stress.
4. Separately read displacement `U` from the accepted X-expansion result at the matching result-set number. Use this vector field as the Python Result workflow's warp field and the equivalent-stress field as its contour. Scope the contour to PCB geometry 42342. The displacement vector is magnified 50 times for visibility; the stress values remain physical pascals. For this Python Result workflow, the graphics multiplier must be 50000 to reproduce the built-in result at multiplier 50. This display-specific ratio of 1000 was verified using identical source displacements, scope and camera; the two rendered PCB silhouettes differed at only three raster-edge pixels out of 680875. Keep the solved displacement fields in metres and stress in pascals, and repeat this comparison if changing the workflow or software version. Do not apply the graphics correction to the numerical fields.
5. Verify the numerical fields before rendering. The 38 modal stress shapes at two independent PCB nodes matched native MAPDL `RSYS,0` output with relative L_2 error 1.74×10^{-16} . A two-time, six-component elemental-nodal superposition check agreed with an independent matrix sum to 1.09×10^{-16} . The supplied frame audit also checks the stress tensors and displacement vectors against the native modal-coordinate history at the same times.
6. Register the contour and warp as a Mechanical Python Result workflow. Evaluate one requested frame at a time; read back the workflow's frame ID and audit. Test several separated times before the full export and confirm that the geometry and stress contours change with a fixed camera. Use a single zero-to-maximum color range covering the entire clip, rather than rescaling the legend independently at each frame.
7. Export 480 native 3840 by 2160 PNGs and apply the same 60 fps encoding and complete-decode checks described in section 22. The caption must state *dynamic*, *unaveraged*, *static stress excluded*, and the 50-fold deformation magnification. Do not apply the RMS plot's Gaussian probability annotation to instantaneous equivalent stress.

The executed workflow source and accepted field audit are in `reproduction/motion/`. Nodal averaging is used only for independent checkpoint comparisons with MAPDL's nodal stress output; it does not alter the unaveraged video contour. Across all 480 selected states, the independent displacement comparison gave relative L_2 error 1.7443×10^{-7} ; the global stress-tensor checkpoint comparison gave 3.5537×10^{-16} . The largest unaveraged dynamic von Mises value in this selected window was 154.412 MPa. The selected 29.24 ms window is a short visual example, not the maximum over a complete test duration or a strength assessment.