


EV 12V BATTERY MONITOR
Battery -> WiFi -> HomeAssistant

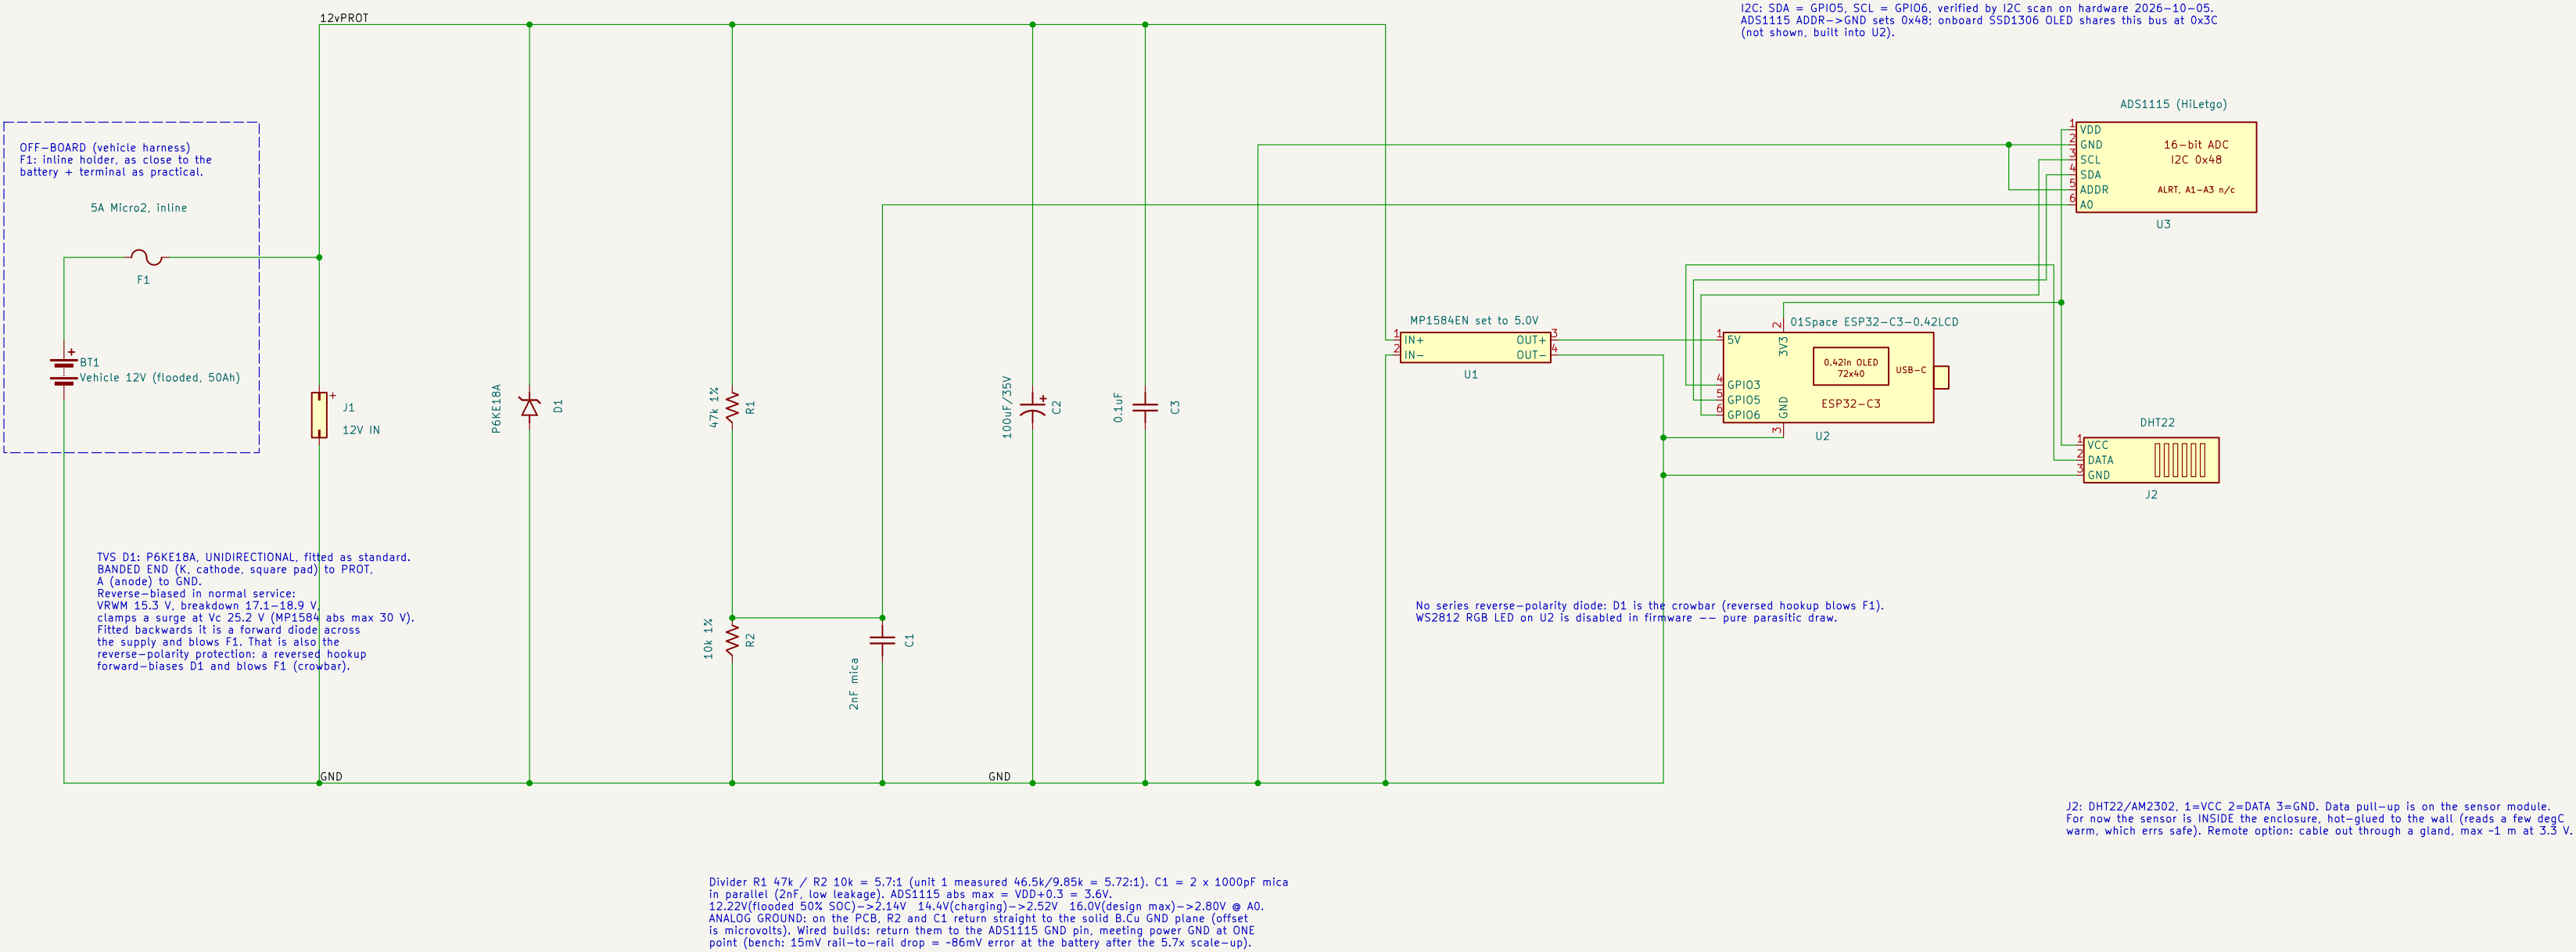

Layout mirrors physical build order left to right: battery -> fuse -> protection/divider/buck -> ESP32-C3 hub -> ADS1115 / DHT22. PROT and GND are drawn as buses (top/bottom rails), like the two power rails on a breadboard -- every part along the rail solders to that same bus wire on the perfboard.