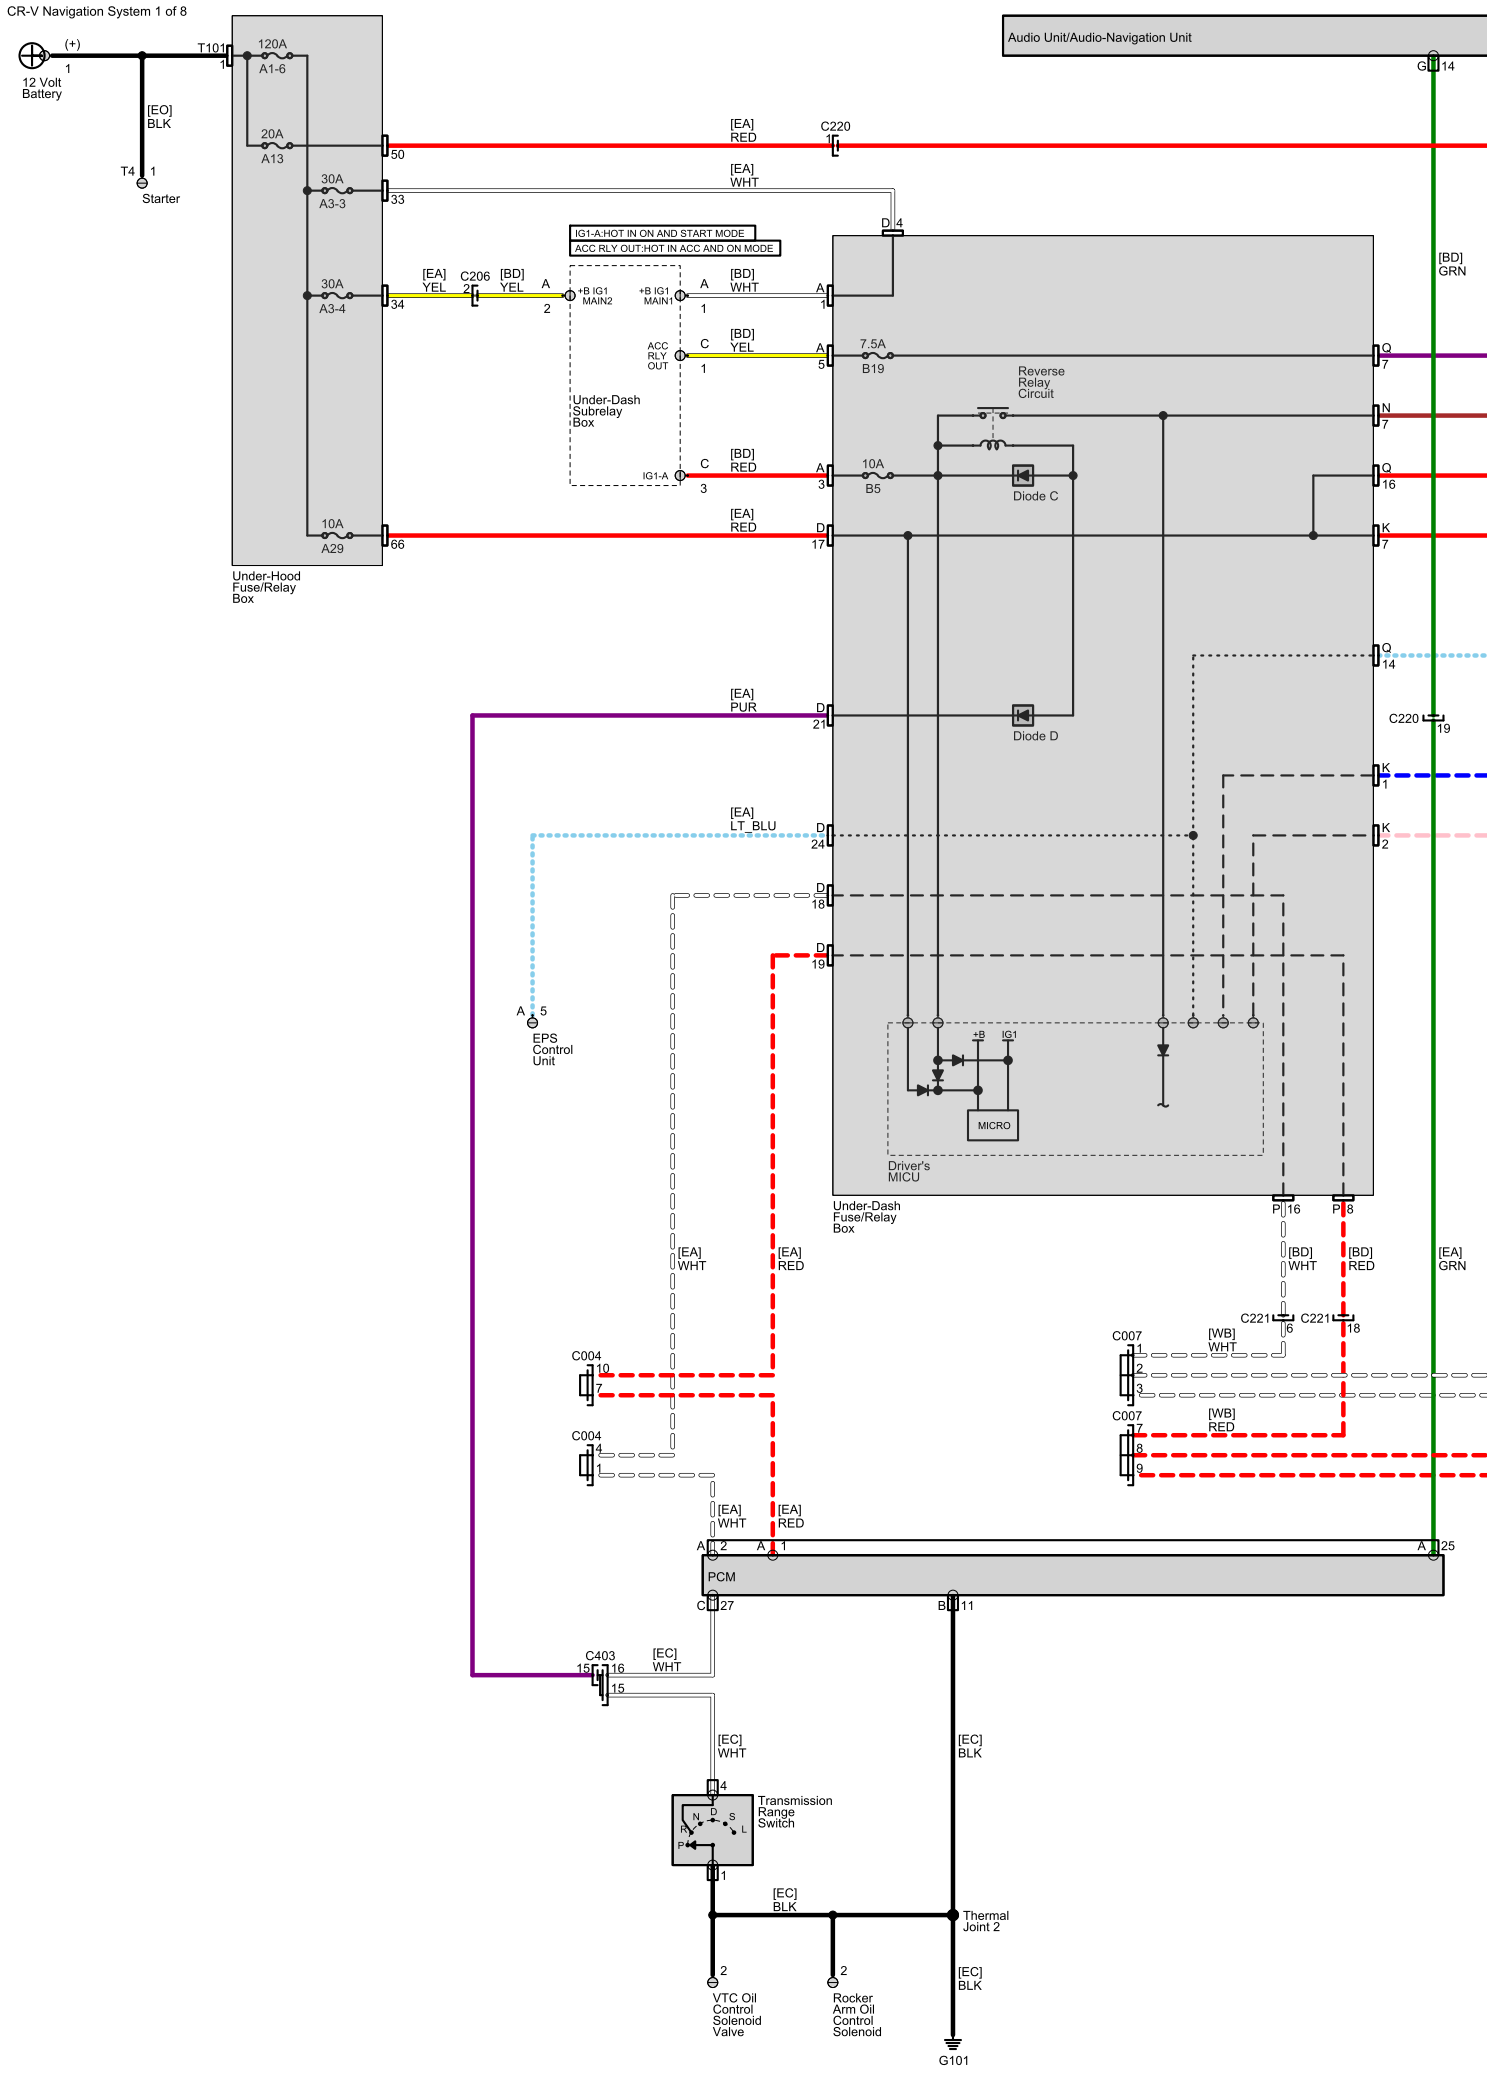
Audio Unit/Audio-Navigation Unit
12 Volt Battery
(+)
T101
120A
A1-6
[EO] BLK
20A
A13
T4
Starter
30A
A3-3
30A
A3-4
10A
A29
Under-Hood Fuse/Relay Box
[EA] RED
C220
[EA] WHT
IG1-A:HOT IN ON AND START MODE
ACC RLY OUT:HOT IN ACC AND ON MODE
[EA] YEL
C206
[BD] YEL
+B IG1 MAIN2
+B IG1 MAIN1
[BD] WHT
ACC RLY OUT
[BD] YEL
Under-Dash Subrelay Box
IG1-A
[BD] RED
[EA] RED
7.5A
B19
Reverse Relay Circuit
10A
B5
Diode C
Diode D
[EA] PUR
[EA] LT_BLU
EPS Control Unit
MICRO
Driver's MICU
Under-Dash Fuse/Relay Box
[BD] GRN
[EA] GRN
[EA] WHT
[EA] RED
[BD] WHT
[BD] RED
C221
C007
[WB] WHT
[WB] RED
C004
PCM
C403
[EC] WHT
[EC] BLK
Transmission Range Switch
Thermal Joint 2
VTC Oil Control Solenoid Valve
Rocker Arm Oil Control Solenoid
G101

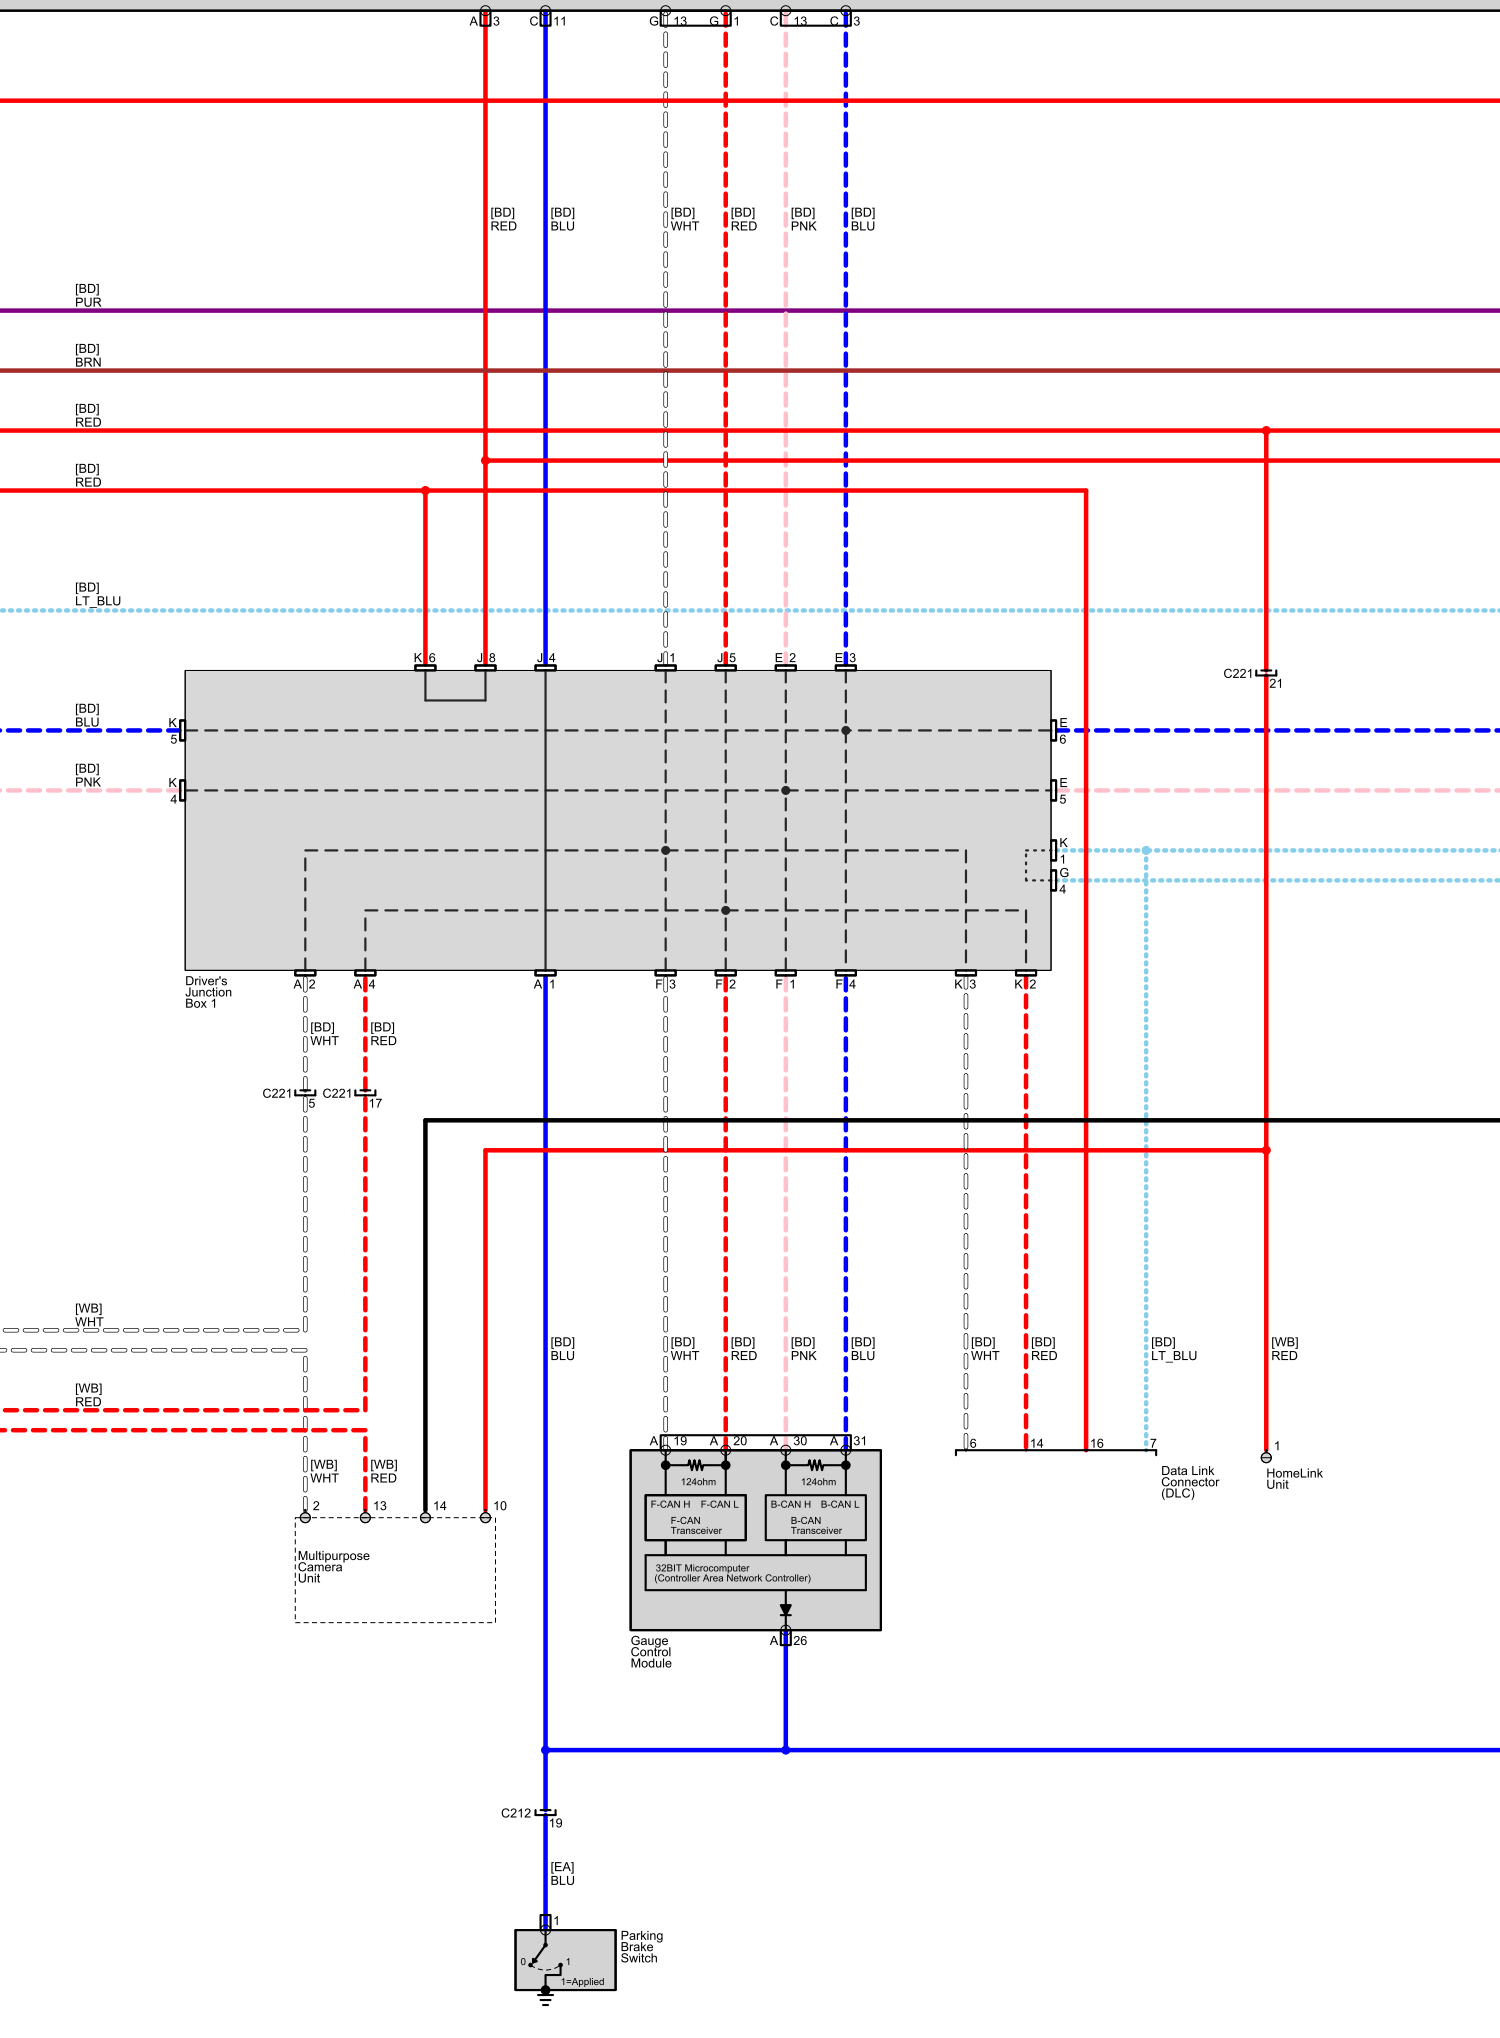
A 13
C 11
G 13
G 11
C 13
C 13
[BD] RED
[BD] BLU
[BD] WHT
[BD] RED
[BD] PNK
[BD] BLU
[BD] PUR
[BD] BRN
[BD] RED
[BD] RED
[BD] LT_BLU
K 6
J 8
J 4
J 1
J 5
E 2
E 3
C221 21
[BD] BLU
K 5
E 6
[BD] PNK
K 4
E 5
K 1
G 4
Driver's Junction Box 1
A 2
A 4
A 1
F 3
F 2
F 1
F 4
K 3
K 2
[BD] WHT
[BD] RED
C221 5
C221 17
[WB] WHT
[WB] RED
[BD] BLU
[BD] WHT
[BD] RED
[BD] PNK
[BD] BLU
[BD] WHT
[BD] RED
[BD] LT_BLU
[WB] RED
[WB] WHT
[WB] RED
2
13
14
10
Multipurpose Camera Unit
A 19
A 20
A 30
A 31
124ohm
124ohm
F-CAN H
F-CAN L
F-CAN Transceiver
B-CAN H
B-CAN L
B-CAN Transceiver
32BIT Microcomputer (Controller Area Network Controller)
Gauge Control Module
A 26
6
14
16
7
Data Link Connector (DLC)
1
HomeLink Unit
C212 19
[EA] BLU
1
Parking Brake Switch
0
1
1=Applied

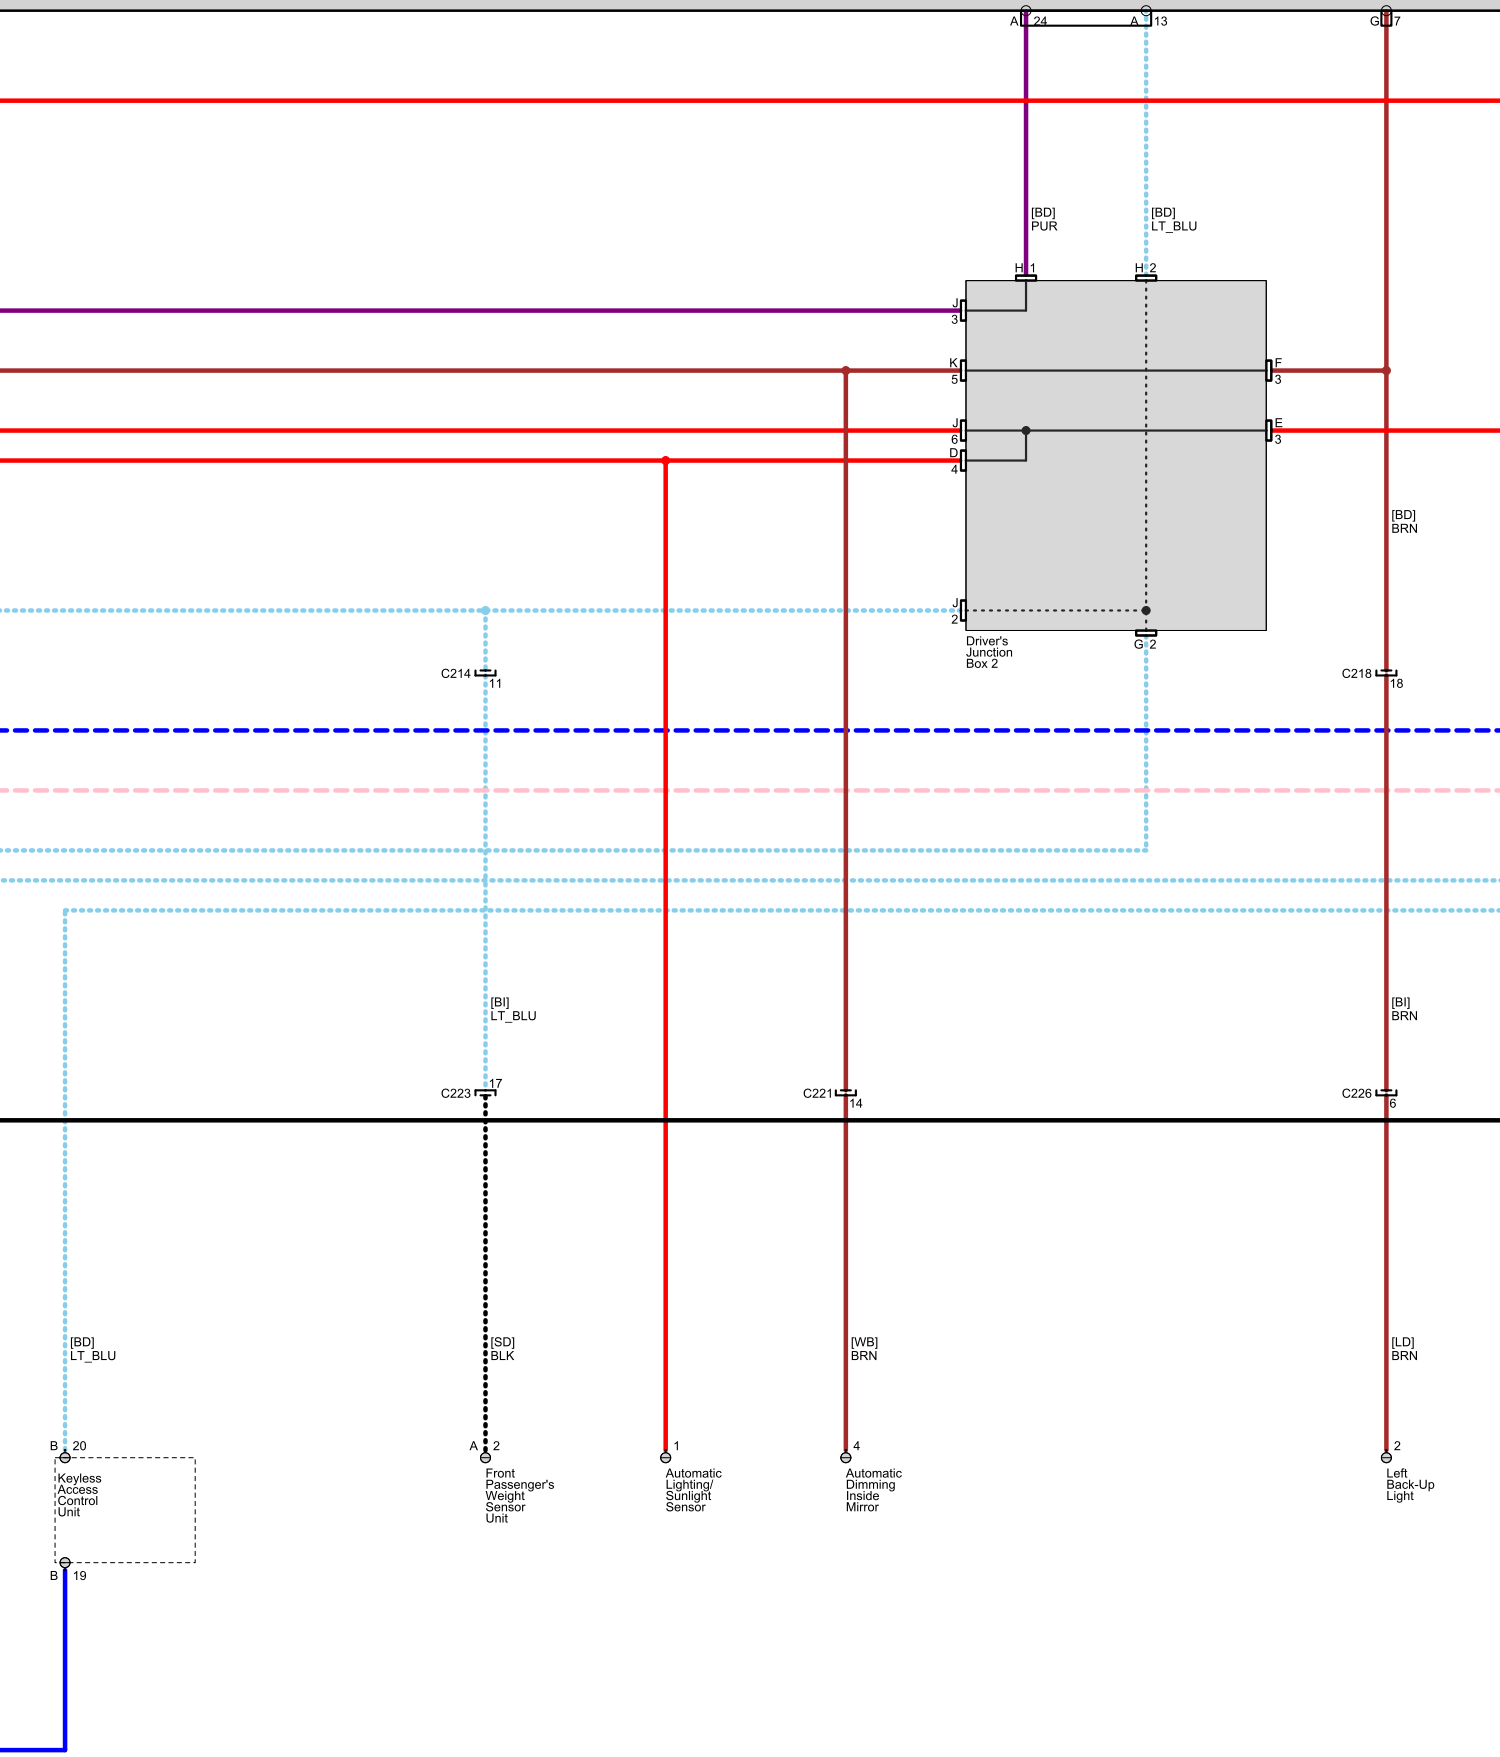
A 24
A 13
G 7
[BD]
PUR
[BD]
LT_BLU
H 1
H 2
J
3
K
5
J
6
D
4
J
2
F
3
E
3
G 2
Driver's
Junction
Box 2
[BD]
BRN
C214
11
C218
18
[BI]
LT_BLU
[BI]
BRN
C223
17
C221
14
C226
6
[BD]
LT_BLU
[SD]
BLK
[WB]
BRN
[LD]
BRN
B 20
B 19
Keyless
Access
Control
Unit
A 2
Front
Passenger's
Weight
Sensor
Unit
1
Automatic
Lighting/
Sunlight
Sensor
4
Automatic
Dimming
Inside
Mirror
2
Left
Back-Up
Light

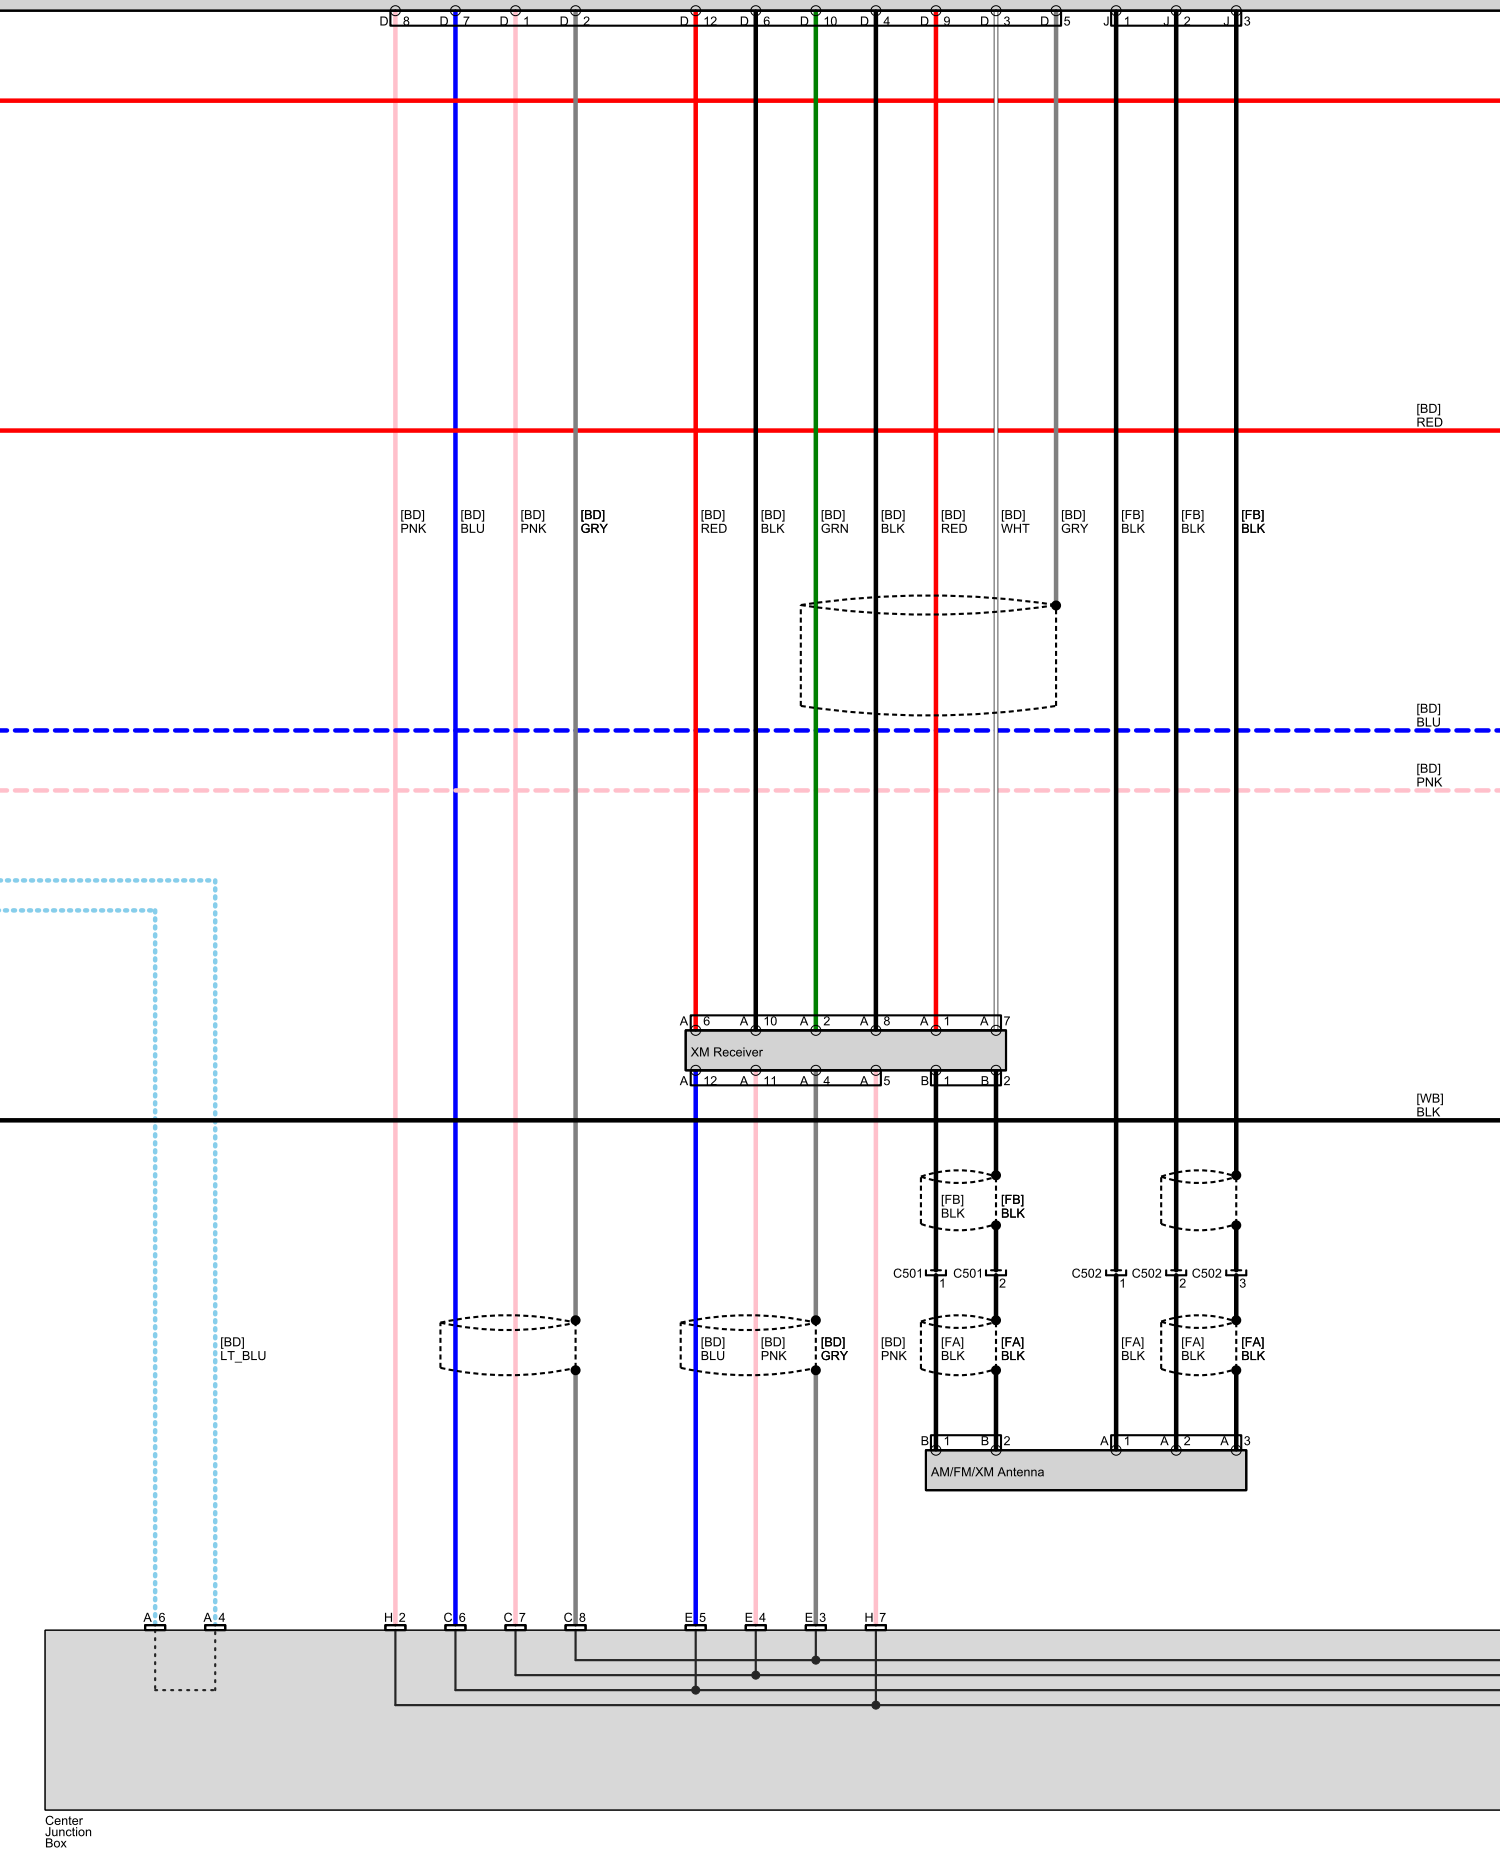
D 8
D 7
D 1
D 2
D 12
D 6
D 10
D 4
D 9
D 3
D 5
J 1
J 2
J 3
[BD] RED
[BD] PNK
[BD] BLU
[BD] PNK
[BD] GRY
[BD] RED
[BD] BLK
[BD] GRN
[BD] BLK
[BD] RED
[BD] WHT
[BD] GRY
[FB] BLK
[FB] BLK
[FB] BLK
[BD] BLU
[BD] PNK
A 6
A 10
A 2
A 8
A 1
A 7
XM Receiver
A 12
A 11
A 4
A 5
B 1
B 2
[WB] BLK
[FB] BLK
[FB] BLK
C501 1
C501 2
C502 1
C502 2
C502 3
[BD] LT_BLU
[BD] BLU
[BD] PNK
[BD] GRY
[BD] PNK
[FA] BLK
[FA] BLK
[FA] BLK
[FA] BLK
[FA] BLK
B 1
B 2
A 1
A 2
A 3
AM/FM/XM Antenna
A 6
A 4
H 2
C 6
C 7
C 8
E 5
E 4
E 3
H 7
Center Junction Box

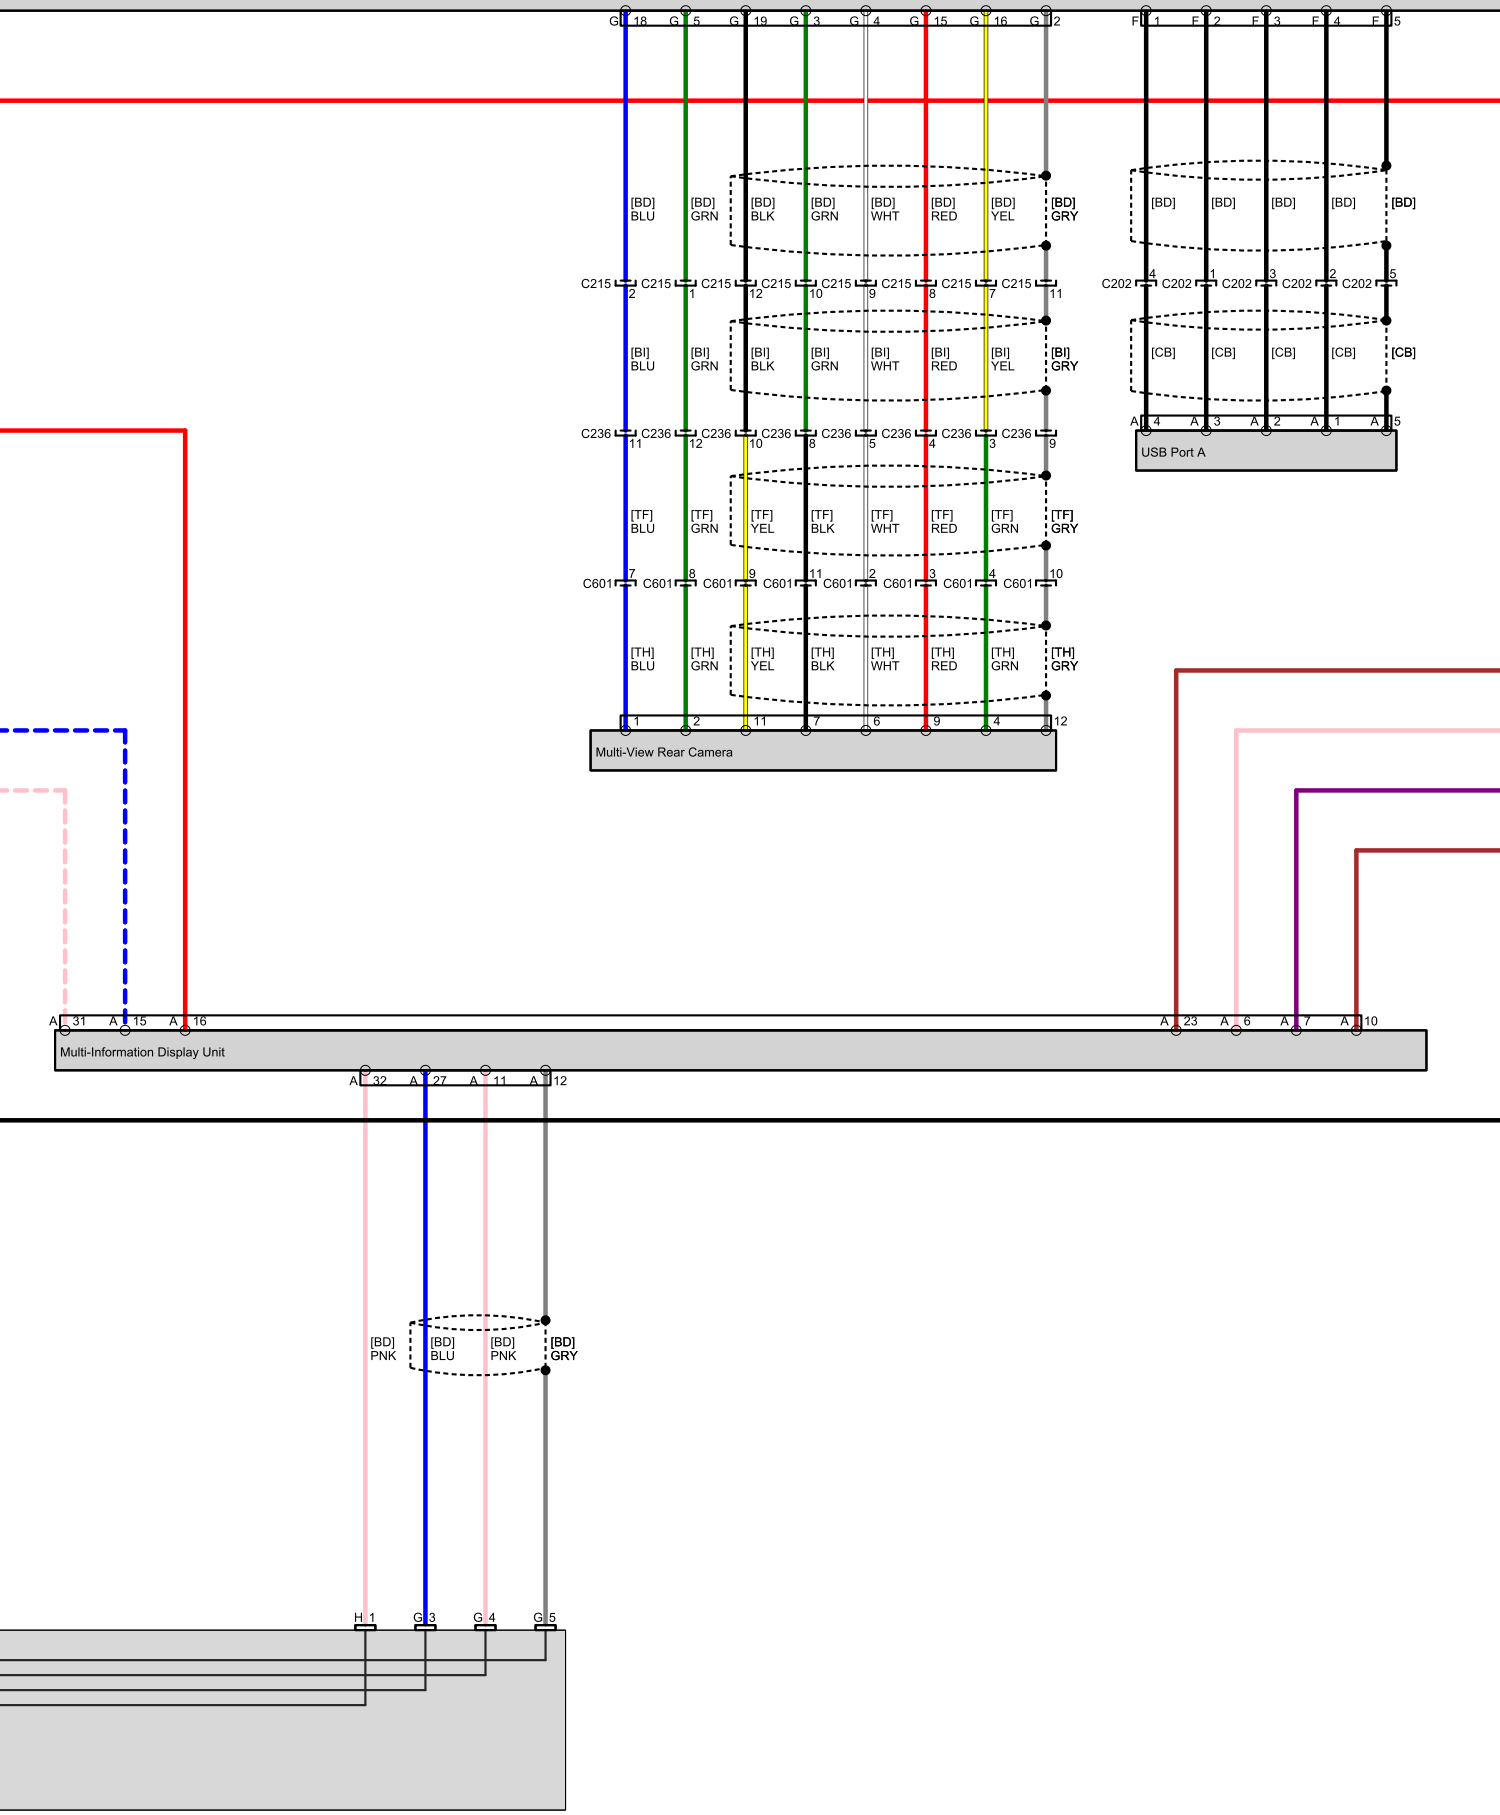
Multi-View Rear Camera
USB Port A
Multi-Information Display Unit
[BD] BLU
[BD] GRN
[BD] BLK
[BD] WHT
[BD] RED
[BD] YEL
[BD] GRY
[BI] BLU
[BI] GRN
[BI] BLK
[BI] WHT
[BI] RED
[BI] YEL
[BI] GRY
[TF] BLU
[TF] GRN
[TF] YEL
[TF] BLK
[TF] WHT
[TF] RED
[TF] GRN
[TF] GRY
[TH] BLU
[TH] GRN
[TH] YEL
[TH] BLK
[TH] WHT
[TH] RED
[TH] GRN
[TH] GRY
[BD]
[CB]
[BD] PNK
[BD] BLU
[BD] PNK
[BD] GRY

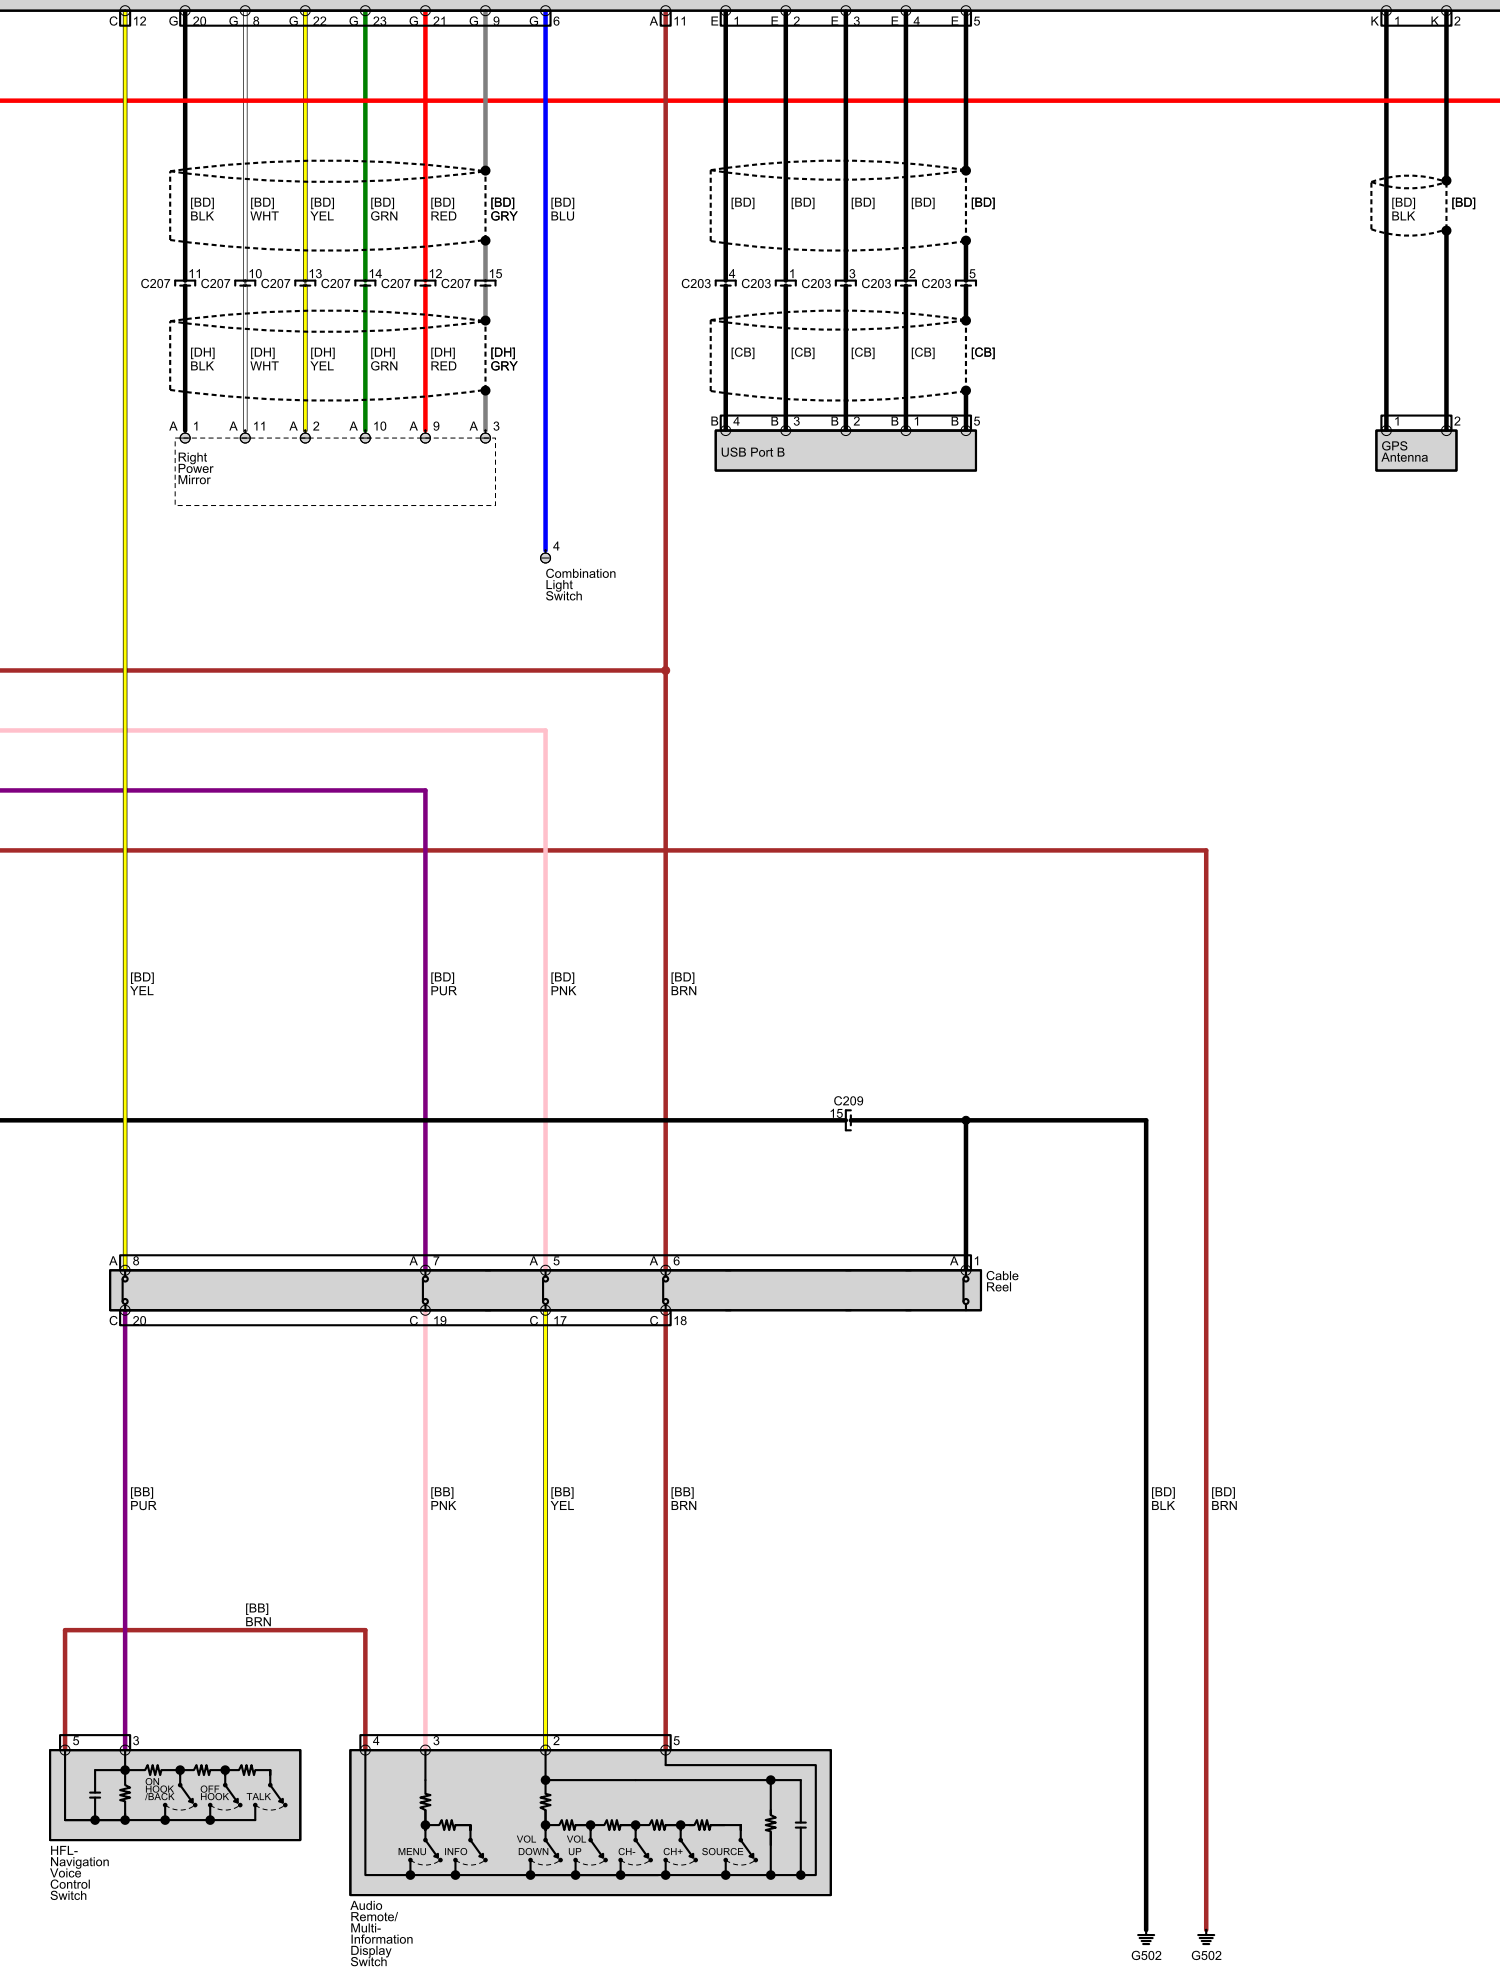
C 12
G 20
G 8
G 22
G 23
G 21
G 9
G 6
A 11
E 1
E 2
E 3
E 4
E 5
K 1
K 2
[BD] BLK
[BD] WHT
[BD] YEL
[BD] GRN
[BD] RED
[BD] GRY
[BD] BLU
C207 11
C207 10
C207 13
C207 14
C207 12
C207 15
[DH] BLK
[DH] WHT
[DH] YEL
[DH] GRN
[DH] RED
[DH] GRY
A 1
A 11
A 2
A 10
A 9
A 3
Right Power Mirror
4
Combination Light Switch
[BD]
C203 4
C203 1
C203 3
C203 2
C203 5
[CB]
B 4
B 3
B 2
B 1
B 5
USB Port B
GPS Antenna
[BD] YEL
[BD] PUR
[BD] PNK
[BD] BRN
C209 15
A 8
A 7
A 5
A 6
A 1
Cable Reel
C 20
C 19
C 17
C 18
[BB] PUR
[BB] PNK
[BB] YEL
[BB] BRN
[BD] BLK
[BD] BRN
[BB] BRN
5
3
ON HOOK /BACK
OFF HOOK
TALK
HFL-Navigation Voice Control Switch
4
3
2
5
MENU
INFO
VOL DOWN
VOL UP
CH-
CH+
SOURCE
Audio Remote/ Multi-Information Display Switch
G502
G502

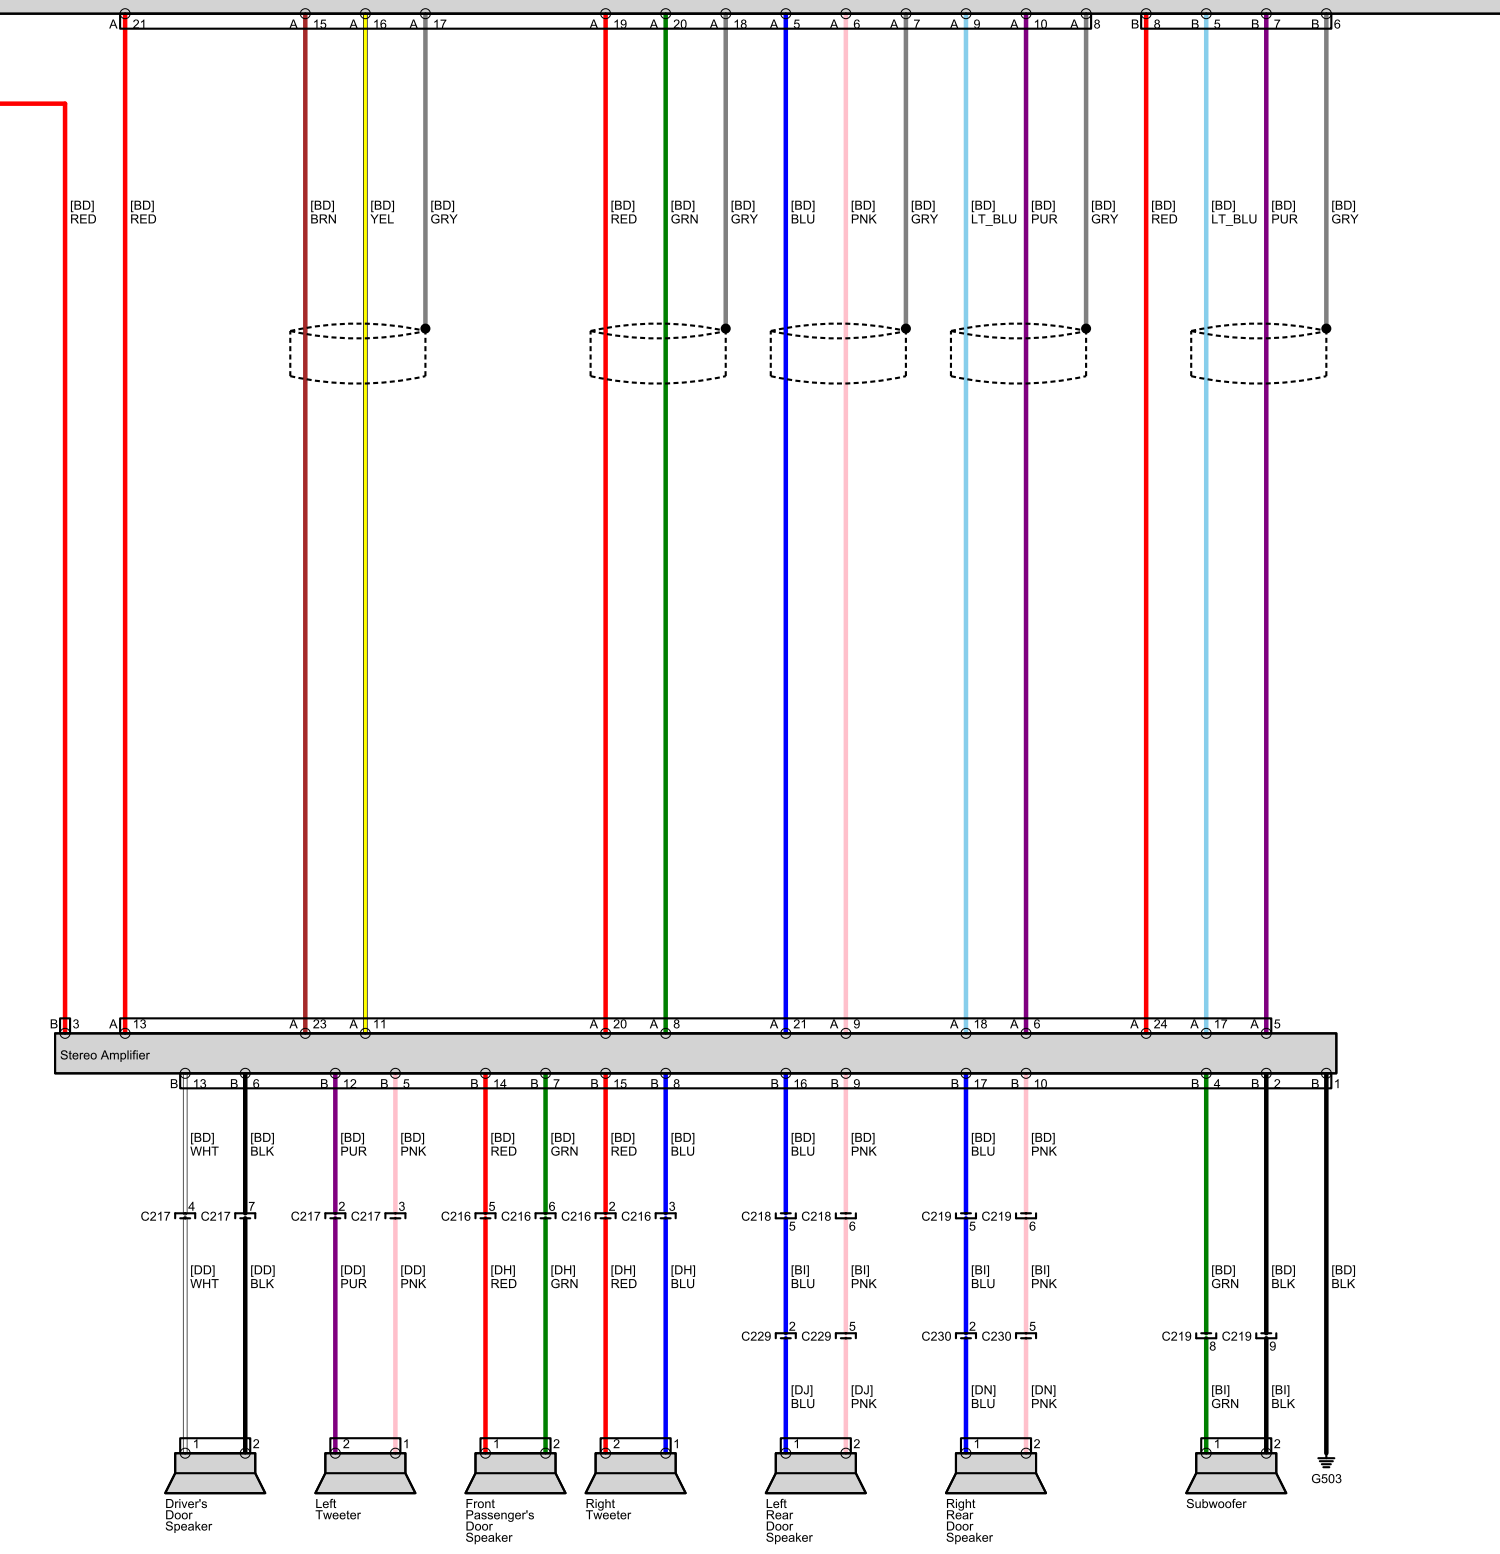
Stereo Amplifier
Driver's Door Speaker
Left Tweeter
Front Passenger's Door Speaker
Right Tweeter
Left Rear Door Speaker
Right Rear Door Speaker
Subwoofer
G503

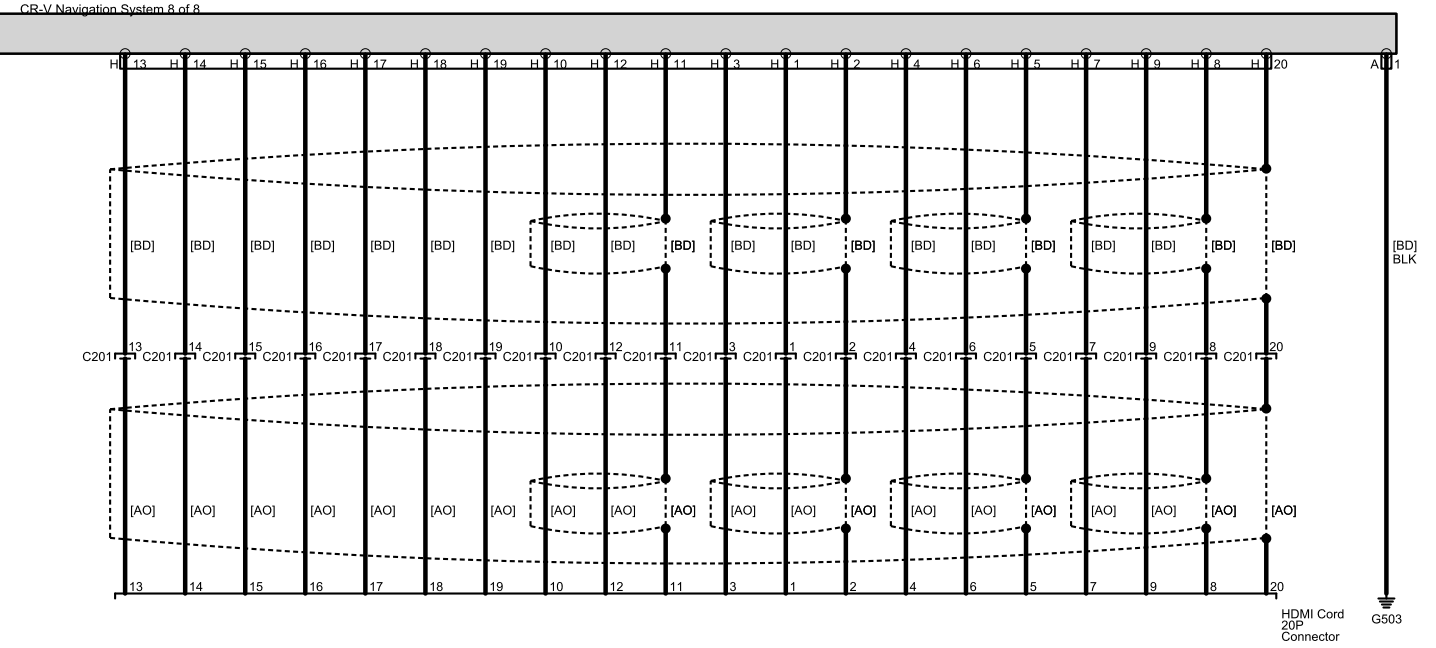
HDMI Cord
20P
Connector
G503
[BD]
BLK
[BD]
[AO]
C201