TeleCon4ESP32 Fast Guide

First session: Classic Simple

Phone and ESP32 DevKit — about ten minutes

Full walkthrough: User Guide PDF

Version 1.0 2026

Abstract

Get a stick moving on **Control panel** with Bluetooth Classic Simple. No Pro, no coins, no camera. The full User Guide covers RC Vehicle and troubleshooting.

Classic Simple Control panel — free

1 You need

- Android phone with TeleCon4ESP32.
- ESP32 DevKit (no camera), USB cable, Arduino IDE.

2 Flash the board

Open the folder that contains `TeleCon_Classic_Simple.ino`. Tools → Board → **ESP32 Dev Module**. Select the USB port. Upload. Serial Monitor **115200**. Press RESET. Wait for the ready banner. The board advertises `ESP32-TC-RC-BT-Simple`.

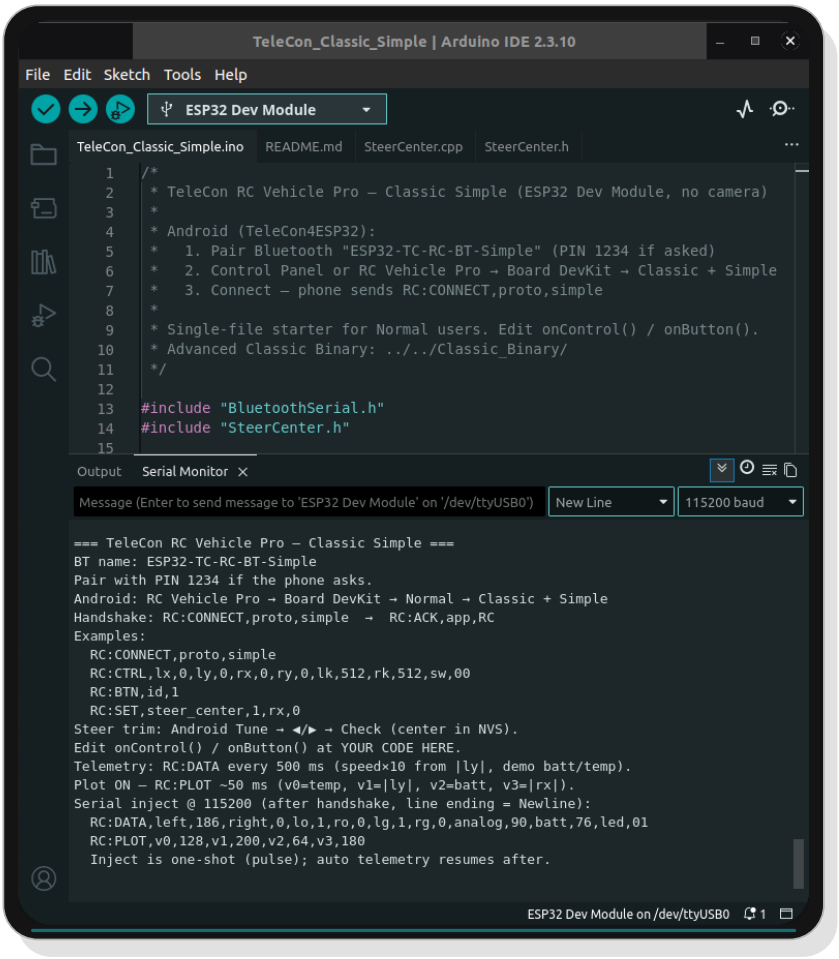


Figure 1: **S01.** Serial at 115200 after RESET. Ready banner visible.

Computer, Arduino IDE Serial Monitor ▪ `s01_serial.png`

3 Phone settings

Grant Nearby devices / Bluetooth when Android asks. Open **Control panel** → gear:

Setting	Value
Board	DevKit
Connection	Bluetooth, Classic + Simple (text lines)

Leave settings. Tap Bluetooth on the module toolbar. Scan. Tap the advertised name `ESP32-TC-RC-BT-Simple` (PIN `1234` if asked). Status must show **Connected**.



Figure 2: **S02.** Control panel settings: Classic + Simple (text lines). English UI.

Portrait, light theme ▪ `s02_settings.png`

Screenshot S03 `s03_scan.png`

Portrait, Bluetooth scan

ESP32-TC-RC-BT-Simple in Scanned Devices. English UI.

Save as `General_Documentation/figures/s03_scan.png`.

4 Move a stick

Open **Control panel** (landscape). Drag the left stick. Until the board answers OK, on-screen motion is not a live session — even if Android says Bluetooth is connected. On the bench, official firmware echoes or updates gauges without motors.

Treat sticks as live once **Connected** is shown. Official sketches fail-safe on drop (sticks to 0).

5 If it fails

Power + RESET. Nearby devices allowed. Mode matches this sketch (not BLE, not Binary). Forget a stale Android bond and scan again. Full table: User Guide PDF.

6 Next

- User Guide PDF — Home, RC Vehicle, camera roles, troubleshooting.
- Sketch `README.md` — pins, motors, trim.
- Stay off Advanced until this path works.