



Design Task - Lorry Crane Hydraulics

REPORT FOR DESIGN TASK IN FLUID POWER SYSTEMS

Authors:

Logan Borer
Matteo Sanderson
Arun Thirumani

Professor:
Samuel Kärnell

Assistant Professor:
Róger Mateus Sehnem,
Artur Tozzi de Cantuaria
Gama

Academic Year:
2026

Abstract: The following report consists of the design and mathematical process which we underwent to design the hydraulic circuit for a lorry crane. The system contains two cylinder, and it was our task to determine the operating conditions for the cylinders and pump, and pick-out the appropriate components for the task. The dimensioning also required us to consider a work-case scenario, which informed our decision during part-selection.

Contents

1	Design Task Definition	1
1.1	General Values	1
1.2	Group-specific values	2
1.3	Denormalisation and discretization	2
2	Cylinder Sizing and Selection	2
2.1	Crane Kinematics	3
2.2	Cylinder Drive-cycle	4
2.3	Worst-case Scenario and Cylinder Diameter	4
3	Circuit Drive-cycle Analysis	6
3.1	System Pressure	6
3.2	System Flow	8
3.3	Hydraulic System Type and System Diagram	8
4	Pump Selection	9
5	System Analysis and Efficiency	10
6	Cooler Dimensioning	10

1. Design Task Definition

The objective of the design is to design a lorry crane, that can operative with a given mass over a defined drive cycle, and withstand a worst-case loading scenario.

For the task a certain values were given, mainly defining the drive cycle. Some values were true for all group, while others were group specific.

1.1. General Values

The general values for the drive-cycle provided included:

- $v_{p01} \rightarrow$ Normalised velocity vector for piston 1
- $v_{p02} \rightarrow$ Normalised velocity vector for piston 2
- $e_1 \rightarrow$ Level-arm for cylinder 1
- $e_2 \rightarrow$ Level-arm for cylinder 2
- $\theta_1 \rightarrow$ First arm angle
- $\theta_2 \rightarrow$ Second arm angle
- $L_0 \rightarrow$ Base height for lorry crane
- $p_2 \rightarrow$ Pressure on low-pressure side
- $\eta \rightarrow$ Oil dynamic viscosity
- $c_v \rightarrow$ Laminar leakage loss coefficient
- $k_p \rightarrow$ Coloumb friction coefficient
- $k_v \rightarrow$ Viscous friction loss coefficient
- $k_\epsilon \rightarrow$ Displacement coefficient

The information on the work-case scenario, provided the following values:

Parameter	Cylinder 1	Cylinder 2
$\theta_{1,wc}[\text{rad}]$	1,2	0,35
$\theta_{2,wc}[\text{rad}]$	0,0	0,0
$e_{1,wc}[\text{m}]$	0,14	0,48
$e_{2,wc}[\text{m}]$	0.57	0,17

1.2. Group-specific values

There were many group-specific values that we were given for the design task, these included:

- $M_{t,wc} \rightarrow$ Maximum total load mass
- $q_{r,wc} \rightarrow$ Worst-case flow to drive-cycle-max flow ratio
- $M_t \rightarrow$ Total load mass
- $L_1 \rightarrow$ First arm length
- $L_2 \rightarrow$ Second arm length
- $v_{p0} \rightarrow$ Reference cylinder velocity
- $t_0 \rightarrow$ Drive-cycle Time
- $P_{s,max} \rightarrow$ Maximum system pressure
- $\eta_c \rightarrow$ Cylinder Efficiency

1.3. Denormalisation and discretization

From the provided values we can see that the velocity profile which we were provided has been normalised and we have been provided a reference value. Using this reference value we denormalised the normalised velocity profile, to determine the effective velocity profile of the two cylinders.

$$v_{p1} = v_{p0} \cdot v_{p01} v_{p2} = v_{p1} \cdot v_{p02}$$

Additionally, we discretized time to a number of discrete times equal to the length of the provided vectors for velocity, angles and arms, as such:

```
time = linspace(0,t_0,length(e_1));
```

2. Cylinder Sizing and Selection

2.1. Crane Kinematics

Before finding the forces on the cylinder we have to determine the kinematics of the crane tip throughout the drive-cycle. We found the x and z position of the crane tip with the following equations:

$$x = L_1 \cdot \cos(\theta_1) + L_2 \cdot \cos(\theta_2)$$

$$z = L_1 \cdot \sin(\theta_1) + L_2 \cdot \sin(\theta_2) + L_0$$

Using these two values we can create two graphs, one of the tip height through time and one of the position of the crane in space through the cycle.

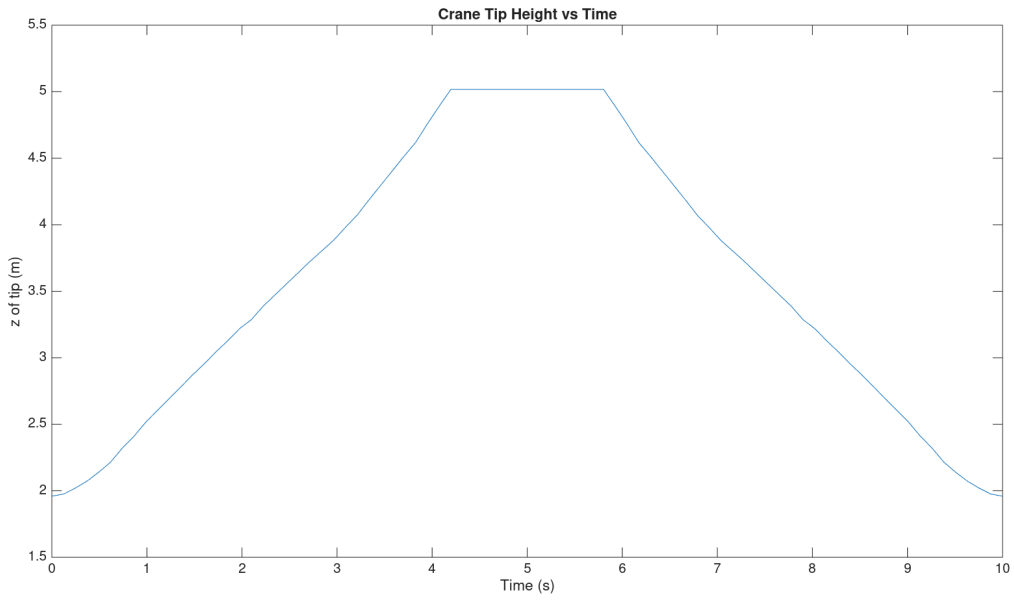


Figure 1: Height of crane tip with respect to time

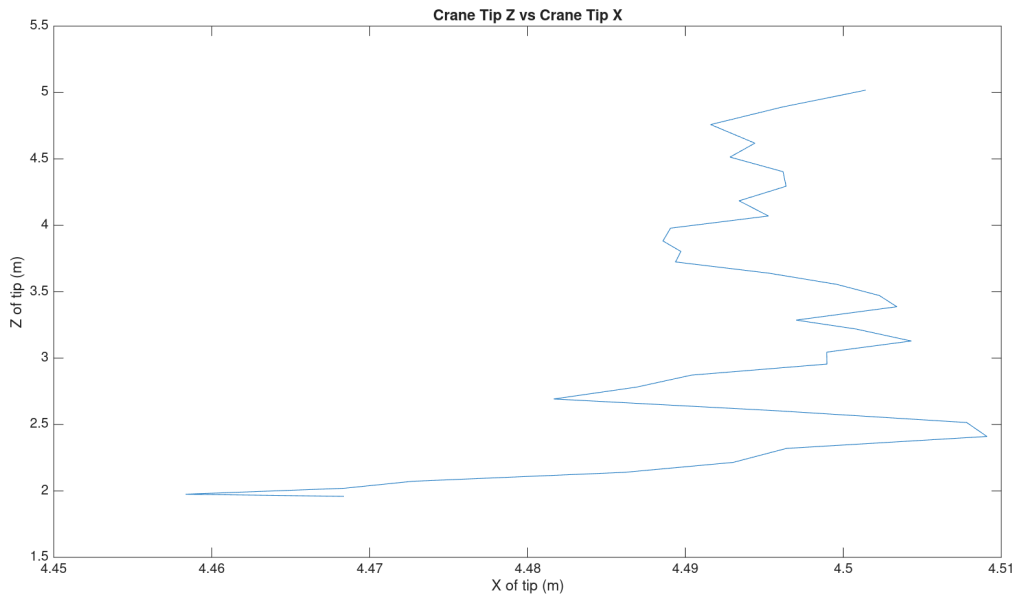


Figure 2: Crane tip position in space during drive cycle

2.2. Cylinder Drive-cycle

From here we continued by determining the forces on the two cylinders throughout the drive-cycle. We did this by calculating the moment generated on either arm hinge by the respective cylinder and the mass at the crane tip. We determined the resulting forces to have the equations:

$$F_1 = M_t \cdot g \cdot \frac{(L_1 \cdot \cos(\theta_1) + L_2 \cdot \cos(\theta_2))}{e_1}$$
$$F_2 = M_t \cdot g \cdot \frac{L_2 \cdot \cos(\theta_2)}{e_2}$$

The equivalent MATLAB code is as follows:

```
F_1 = M_t*g*(L_1*cos(th_1)+L_2*cos(th_2))./e_1;  
F_2 = M_t*g*L_2*cos(th_2)./e_2;
```

With F_1 and F_2 determined, we could now plot how they changed through time.

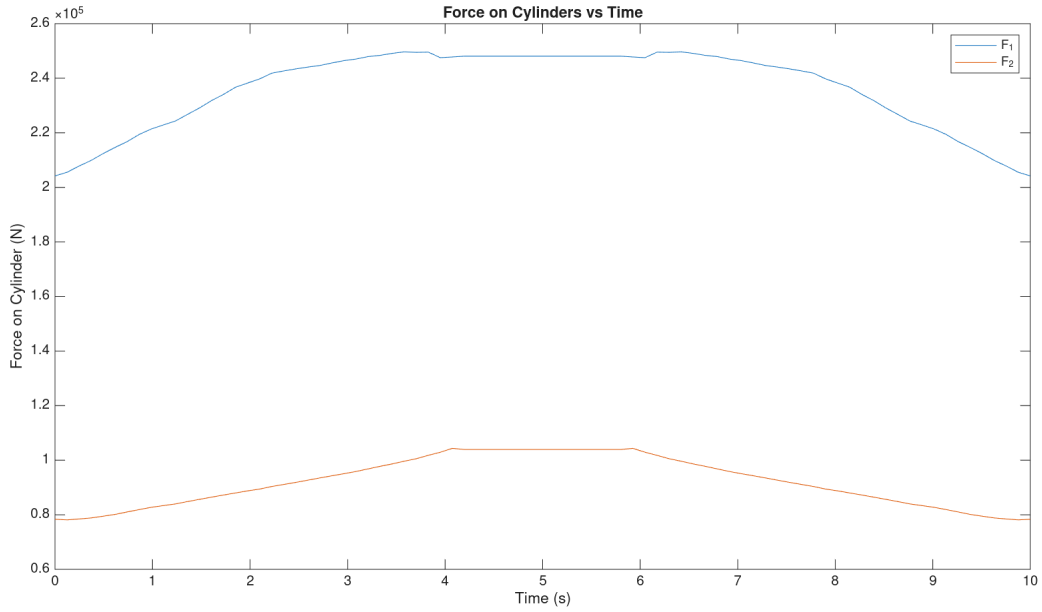


Figure 3: Forces on the two cylinders in the system

2.3. Worst-case Scenario and Cylinder Diameter

Using the same equations we used to determine the forces during the drive-cycle, we can find the forces in the worst-case scenario for the system, with the MATLAB code as follows:

```
F_wc_1 = M_tmax*g*(L_1*cos(th_1_wc_cyl1)+L_2*cos(th_2_wc_cyl1))./e_1_wc_cyl1;  
F_wc_2 = M_tmax*g*L_2*cos(th_2_wc_cyl2)./e_2_wc_cyl2;
```

In this case the θ and e values for either cylinder during the drive-cycle were replaced by the given worst-case scenario values. From these forces we could determine the diameter of the cylinder required to withstand these inopportune forces. We calculated the area and diameter required as:

$$A_1 = \frac{F_{1,wc}}{\eta_c \cdot (p_{1,max} - 0.5p_2)}$$

$$D_1 = \sqrt{\frac{4 * A_1}{\pi}}$$

$$A_2 = \frac{F_{2,wc}}{\eta_c \cdot (p_{1,max} - 0.5p_2)}$$

$$D_2 = \sqrt{\frac{4 * A_2}{\pi}}$$

In which $p_{1,max} = p_{s,max} - p_{extra}$, where p_{extra} is the unavoidable losses in the system, which we have to account for and which we arbitrarily determined to be $p_{extra} \approx 2000000 Pa$. We determined the following values for the respective variables:

- $A_1 = 0.020437 \text{ m}^2$
- $D_1 = 0.1613 \text{ m}$
- $A_2 = 0.014064 \text{ m}^2$
- $D_2 = 0.1338 \text{ m}$

Because no manufacturer produces cylinder of every size, we need to determine the cylinder with diameter which fits our needs. To do this we looked through *Bosch Rexroth's* linear hydraulic cylinder catalogue, and found a suitable candidate. Out of the catalogue we ended up choosing a two Series CGH3 type hydraulic cylinders. These cylinders are mill-type, double acting and can withstand the requirement maximum pressure. Of the CGH3 cylinder options we chose a cylinder with a diameter of 180mm and for the second cylinder a diameter of 140mm. In total the following data was determined necessary:

- Cylinder 1 Bore Diameter: $D_1 = 0.18 \text{ m}$
- Cylinder 2 Bore Diameter: $D_2 = 0.14 \text{ m}$
- Cylinder 1 Area on Piston Side: $A_{p1} = 0.025447 \text{ m}^2$
- Cylinder 1 Ring Area on Rod Side: $A_{r1} = 0.013175 \text{ m}^2$
- Cylinder 2 Area on Piston Side: $A_{p2} = 0.015394 \text{ m}^2$
- Cylinder 2 Ring Area on Rod Side: $A_{r2} = 0.007540 \text{ m}^2$

To be absolutely sure we made the right choice we also found the maximum stroke velocities for the respective cylinders and determined them to be:

- $v_{1,max} = 0.14m/s$
- $v_{2,max} = 0.16m/s$

We then plotted these two values alongside the absolute value of the velocities of the cylinders during their drive-cycles.

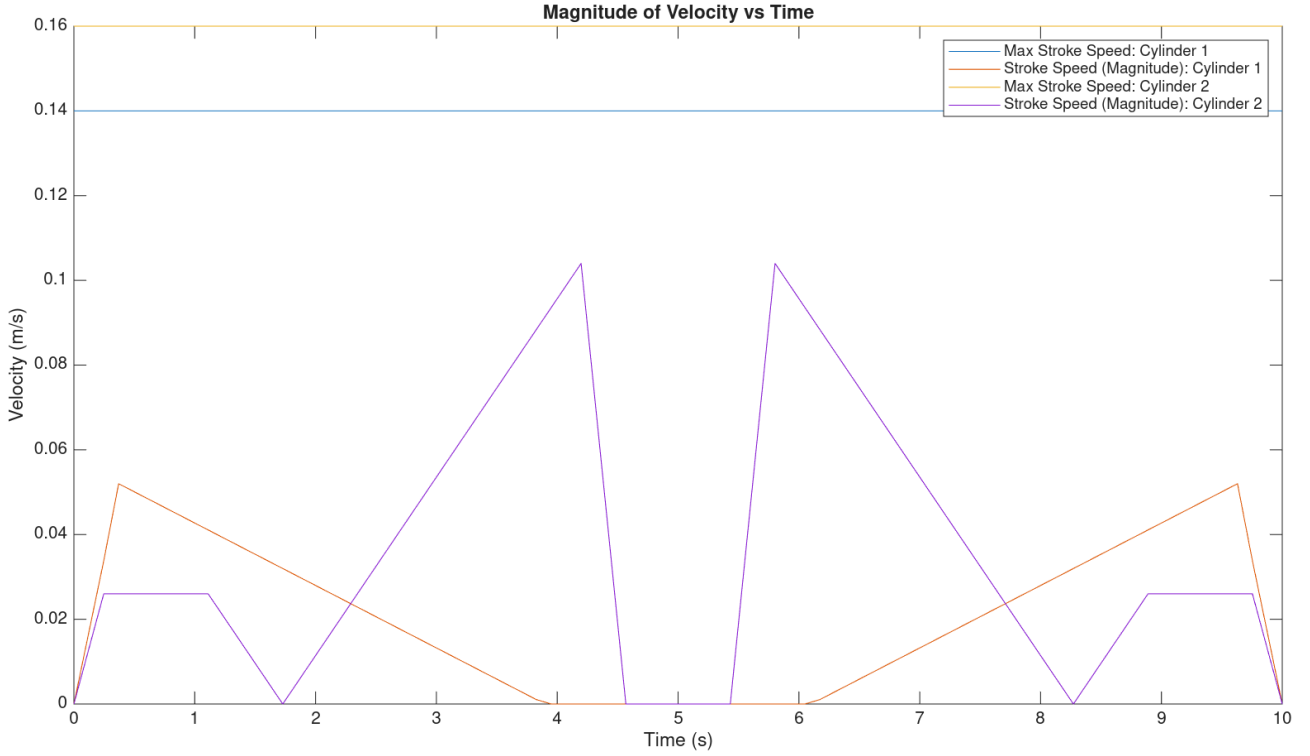


Figure 4: Determination of being under the maximum stroke velocity throughout cycle

We can see that we are under the maximum stroke velocities throughout the drive-cycle, so there is no issue with our choice.

3. Circuit Drive-cycle Analysis

3.1. System Pressure

For the drive-cycle analysis we need to determine the pressures and flow our cylinders operate at; this later help us determine what type of system hydraulic circuit we are interested in using. We know that the pressure on the low-pressure side will always be $1MPa$, and since we know that the sign of the force never changes on either cylinder, we know that the rod side of the cylinder will always be low-pressure side. Because of this we use one single value for p_2 for both cylinders. The equation to

determine the pressure on the high pressure side of the cylinder depends on whether the cylinder is acting as a pump or a motor. When the cylinder is operating as a pump the equation is:

$$p_1 = \frac{p_2 \cdot A_2 + \frac{F}{\eta_c}}{A_1}$$

And when the cylinder is operating as a motor, the equation is:

$$p_1 = \frac{p_2 \cdot A_2 + \eta_c \cdot F}{A_1}$$

Since the only difference is how the efficiency changes the resulting force, in MATLAB we can treat this equation as single equation, where η_c changes definition based on the sign of the velocity.

```

v_1_pos = v_p1 > 0;
v_1_neg = v_p1 < 0;
v_1_stat = v_p1 == 0;
eta_c1 = v_1_pos./eta_c + v_1_neg*eta_c + v_1_stat;
v_2_pos = v_p2 > 0;
v_2_neg = v_p2 < 0;
v_2_stat = v_p2 == 0;
eta_c2 = v_2_pos./eta_c + v_2_neg*eta_c + v_2_stat;

p_2 = p_2*ones(1,length(time));
p_1_cyl1 = (F_1./eta_c1 + p_2*A_r1)/(A_p1);
p_1_cyl2 = (p_2*A_r2 + F_2./eta_c2)/(A_p2);

```

We can also determine the minimum pressure our a constant-pressure pump would have to operate at for the system to function as:

```

p_1max_cyl1 = max(p_1_cyl1);
p_1max_cyl2 = max(p_1_cyl2);
p_min = max([p_1max_cyl1 p_1max_cyl2]) * ones(1,length(time));

```

From these computations we can plot the graph of pressure for the cycle and minimum pressure for the system.

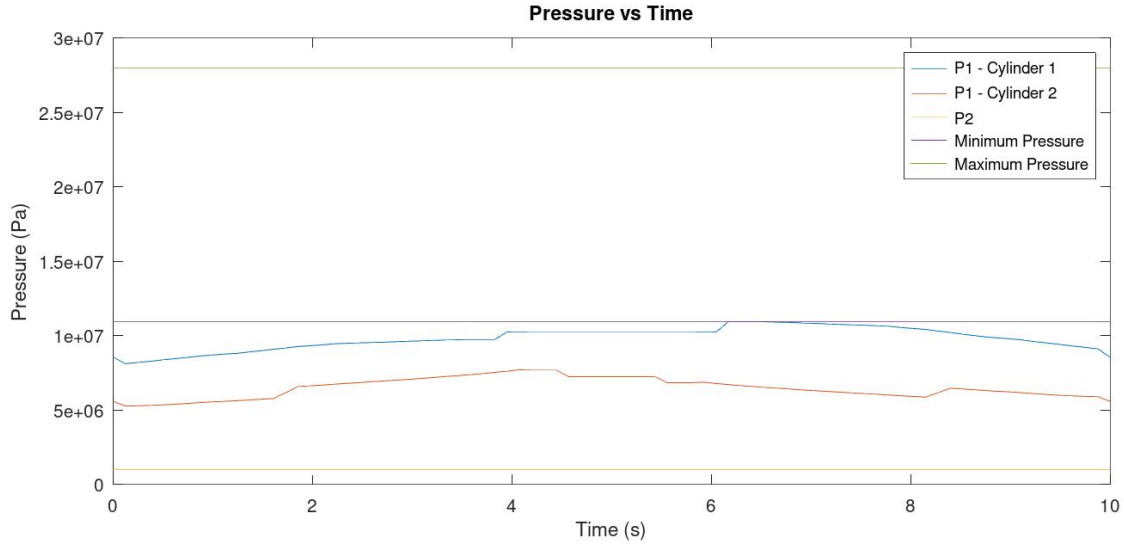


Figure 5: Pressure in 4 chambers, maximum system pressure, and minimum constant system pressure

3.2. System Flow

To determine the flow we also need to consider the sign which the velocity takes during the drive-cycle, as we have to change which chamber the flow moves to. The resulting MATLAB code is as follows.

```

q_1 = A_p1*v_p1.*v_1_pos + A_r1*abs(v_p1).*v_1_neg;
q_2 = A_p2*v_p2.*v_2_pos + A_r1*abs(v_p2).*v_2_neg;
q_tot = q_1 + q_2;
q_max = (max(q_tot)/q_rwc)*ones(1,length(time));

```

The equation for q_{max} came from the definition for the worst-case scenario flow ratio, and is the worst-case level of flow that our pump must be able to handle.

3.3. Hydraulic System Type and System Diagram

After our analysis of the system pressure and flow, we had to decide what type of circuit our hydraulic system would have. We decided that our hydraulic circuit should be a constant pressure system with variable flow. We made this choice because as can be seen in the respective plots, the pressure is relatively constant when compared to the flow which goes from $0.0016m^3/s$ to zero. Since all of the flow during the period where the velocity is zero would be wasted, we believed that the best way to reduce our losses would be to employ this system. We also considered that a more efficient system to reduce the losses further would be a load-sensing system with variable flow. But considering these types of system are even more expensive than the constant-pressure system, we decided to opt for a

constant-pressure system to keep that system cost to a more middling cost. Finally the drivability of the system is relatively good, because it exhibit load dependency, which adds high damping to our system making it more drivable. The system also doesn't exhibit load interference which would reduce the drivability.

After choosing the type of system that we wanted we drew a possible circuit diagram for it.

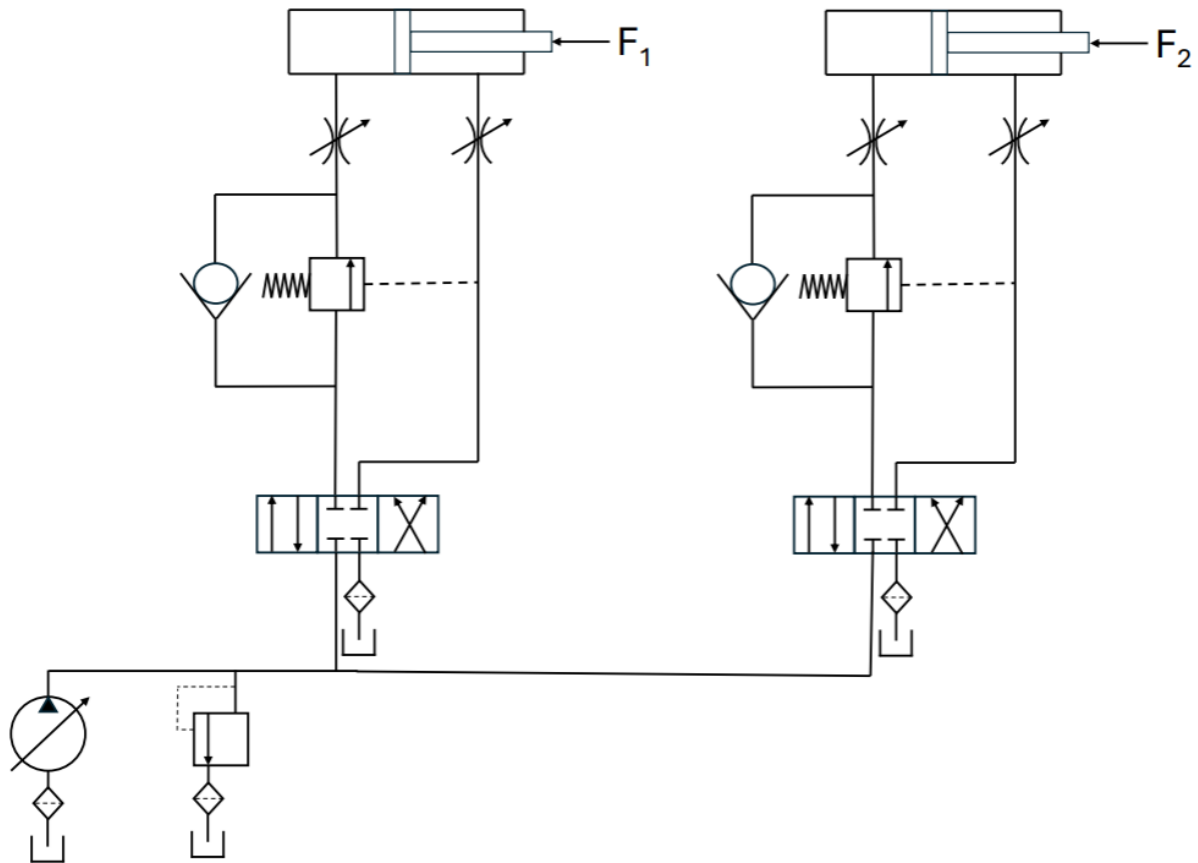


Figure 6: Possible Circuit Diagram

4. Pump Selection

For pump selection we decided to turn once again to the catalogue of Bosch Rexroth. Looking through their catalogue we found a pump that seemed to fit our requirement. This pump is a A10VZO size 6 pump. This pump has the following parameters:

- Maximum Displacement per Revolution, $V_{g,max} = 6 \text{ cm}^3/\text{rev}$
- Maximum Rotational Speed, $n_{nom} = 3960 \text{ rpm}$
- Maximum Pressure, $P_{max} = 315 \text{ bar}$

- Nominal Pressure, $P_{nom} = 250$ bar

The pump can operate up to it's maximum rotational speed in either direction. But when the rotational velocity is positive (when it's operating as a pump), and under 200 rpm, the operating period can only be below 3 minuntes, if the displacemet is $V_g \leq V_{g,max}$ The volumetric flow can be calculated with the following equation:

$$q_v = \frac{V_{g,max} \cdot n \cdot \eta_{vol}}{1000} \text{ [lpm]}$$

5. System Analysis and Efficiency

6. Cooler Dimensioning