# The great book for ESP32forth

version 1.5 - 24 October 2023



# **Author**

Marc PETREMANN

petremann@arduino-forth.com

# **Collaborators**

Vaclav POSELT

# **Contents**

Author	1
Collaborators	1
Introduction	6
Translation help	
Discovery of the ESP32 card	7
Presentation	
The strong points	
GPIO inputs/outputs on ESP32	
ESP32 Peripherals	
Why program in FORTH language on ESP32?	
Preamble	
Boundaries between language and application	
What is a FORTH word?  A word is a function?	
FORTH language compared to C language	
What FORTH allows you to do compared to the C language	
But why a stack rather than variables?	
Are you convinced?	
Are there any professional applications written in FORTH?	15
A real 32-bit FORTH with ESP32Forth	18
Values on the data stack	18
Values in memory	
Word processing depending on data size or type	
Conclusion	
Dictionary / Stack / Variables / Constants	
Expand Dictionary	
Dictionary management	
Stacks and reverse Polish notation	
The Return Stack and Its Uses	
Memory usage	
Variables	
Constants	
Pseudo-constant values	
Basic tools for memory allocation	26
Text colors and display position on terminal	
ANSI coding of terminals	
Text coloring	
Display position	
Local variables with ESP32Forth	
Introduction	
The fake stack comment	32

Action on local variables	33
Data structures for ESP32forth	36
Preamble	
Tables in FORTH	
One-dimensional 32-bit data array	
Mots de définition de tableaux	
Read and write in a table	
Practical example of managing a virtual screen	
Management of complex structures	
Definition of sprites	
Displaying numbers and character strings	
Change of numerical base	
Definition of new display formats	47
Displaying characters and character strings	
String variables	
Text variable management word code	
·	
Vocabularies with ESP32forth	
List of vocabularies	
List of vocabulary contents	
Using vocabulary words	
Chaining of vocabularies	
Adapt breadboards to ESP32 board	
Breadboards for ESP32	
Build a breadboard suitable for the ESP32 board	
Alimenter la carte ESP32	
Choix de la source d'alimentation	
Alimentation par le connecteur mini-USB	
Alimentation par le pin 5V	
Démarrage automatique d'un programme	
Install and use the Tera Term terminal on Windows	
Install Tera Term	
Setting up Tera Term	
Using Tera Term	
Compile source code in Forth language	69
Management of source files by blocks	
The blocks	
Open a block file	
Edit the contents of a block	
Compiling block contents	
Practical step-by-step example	
Conclusion	
Editing source files with VISUAL Editor	
Edit a FORTH source file	
Editing the FORTH code	75

Compiling file contents	76
The SPIFFS file system	77
Access to the SPIFFS file system	77
Handling files	78
Organize and compile your files on the ESP32 card	
Editing and transmitting source files	
Organize your files  Transfer a large file to ESP32forth	
Conclusion	
Managing a traffic light with ESP32GPIO ports on the ESP32 board	
Mounting the LEDs	
Management of traffic lights	
Conclusion	
Hardware interrupts with ESP32forth	86
Interruptions	
Mounting a push button	
Software consolidation of the interrupt	87
Further information	88
Using the KY-040 rotary encoder	89
Encoder Overview	89
Mounting the encoder on the breadboard	
Analysis of encoder signals	
Encoder programming	
Testing the encoding  Increment and decrement a variable with the encoder	
Flashing of an LED per timer	
Getting started with FORTH programming  Flashing by TIMER	
Hardware and software interrupts	
Use the words interval and rerun	
Housekeeper timer	
Preamble	
A solution	
A FORTH timer for ESP32Forth	
Management of the light on button	
Conclusion	
Software real-time clock	105
The word MS-TICKS	105
Managing a software clock	105
Measuring the execution time of a FORTH word	107
Measuring the performance of FORTH definitions	
Testing a few loops	108
Program a sunshine analyzer	110

The miniature solar panel	
	110
Recovery of a miniature solar panel	110
Measurement of solar panel voltage	
Solar panel current measurement	
Lowering the solar panel voltage	112
Programming the solar analyzer	
Managing activation and deactivation of a device	115
Triggered by timer interrupt	
Devices controlled by the sunshine sensor	117
Ressources	119
in English	119
In french	119
GitHub	119

## **Introduction**

Since 2019, I manage several websites dedicated to FORTH language development for ARDUINO and ESP32 boards, as well as the eForth web version:

ARDUINO : <a href="https://arduino-forth.com/">https://arduino-forth.com/</a>

ESP32: <a href="https://esp32.arduino-forth.com/">https://esp32.arduino-forth.com/</a>

eForth web: <a href="https://eforth.arduino-forth.com/">https://eforth.arduino-forth.com/</a>

These sites are available in two languages, French and English. Every year I pay for hosting the main site **arduino-forth.com**.

It will happen sooner or later – and as late as possible – that I will no longer be able to ensure the sustainability of these sites. The consequence will be that the information disseminated by these sites disappears.

This book is the compilation of content from my websites. It is distributed freely from a Github repository. This method of distribution will allow greater sustainability than websites.

Incidentally, if some readers of these pages wish to contribute, they are welcome:

- to suggest chapters;
- · to report errors or suggest changes;
- to help with the translation...

# Translation help

Google Translate allows you to translate texts easily, but with errors. So I'm asking for help to correct the translations.

In practice, I provide the chapters already translated in the LibreOffice format. If you want to help with these translations, your role will simply be to correct and return these translations.

Correcting a chapter takes little time, from one to a few hours.

**To contact me**: petremann@arduino-forth.com


# **Discovery of the ESP32 card**

## **Presentation**

The ESP32 board is not an ARDUINO board. However, development tools leverage certain elements of the ARDUINO eco-system, such as the ARDUINO IDE.

## The strong points

In terms of the number of ports available, the ESP32 card is located between an ARDUINO

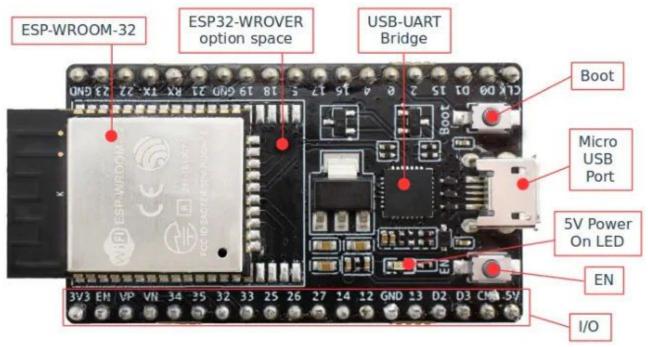

NANO and ARDUINO UNO. The basic model has 38 connectors:

#### ESP32 devices include:

- 18 analog-to-digital converter (ADC) channels
- 3 SPI interfaces
- 3 UART interfaces
- 2 I2C interfaces
- 16 PWM output channels
- 2 digital-to-analog converters (DAC)
- 2 I2S interfaces

10 capacitive sensing GPIOs

The ADC (analog-to-digital converter) and DAC (digital-to-analog converter) functionality are assigned to specific static pins. However, you can decide which pins are UART, I2C, SPI, PWM, etc. You just need to assign them in the code. This is possible thanks to the multiplexing function of the ESP32 chip.

Most connectors have multiple uses.

But what sets the ESP32 board apart is that it is equipped as standard with WiFi and Bluetooth support, something that ARDUINO boards only offer in the form of extensions.

## **GPIO** inputs/outputs on ESP32

Here, in photo, the ESP32 card from which we will explain the role of the different GPIO inputs/outputs:



The position and number of GPIO I/Os may change depending on the card brand. If this is the case, only the indications appearing on the physical map are authentic. Pictured, bottom row, left to right: CLK, SD0, SD1, G15, G2, G0, G4, G16.....G22, G23, GND.



In this diagram, we see that the bottom row begins with 3V3 while in the photo, this I/O is at the end of the top row. It is therefore very important not to rely on the diagram and instead to double check the correct connection of the peripherals and components on the physical ESP32 card.

Development boards based on an ESP32 generally have 33 pins apart from those for the power supply. Some GPIO pins have somewhat particular functions:

GPIO	Possibles usage
6	SCK/CLK
7	SCK/CLK
8	SDO/SD0
9	SDI/SD1
10	SHD/SD2
11	CSC/CMD

If your ESP32 card has I/O GPIO6, GPIO7, GPIO8, GPIO9, GPIO10, GPIO11, you should definitely not use them because they are connected to the flash memory of the ESP32. If you use them the ESP32 will not work.

GPIO1(TX0) and GPIO3(RX0) I/O are used to communicate with the computer in UART via USB port. If you use them, you will no longer be able to communicate with the card.

GPIO36(VP), GPIO39(VN), GPIO34, GPIO35 I/O can be used as input only. They also do not have built-in internal pullup and pulldown resistors.

The EN terminal allows you to control the status of the ESP32 via an external wire. It is connected to the EN button on the card. When the ESP32 is turned on, it is at 3.3V. If we connect this pin to ground, the ESP32 is turned off. You can use it when the ESP32 is in a box and you want to be able to turn it on/off with a switch.

# **ESP32 Peripherals**

To interact with modules, sensors or electronic circuits, the ESP32, like any microcontroller, has a multitude of peripherals. There are more of them than on a classic Arduino board.

ESP32 has the following peripherals:

- 3 UART interface
- 2 I2C interfaces
- 3 SPI interfaces
- 16 PWM outputs
- 10 capacitive sensors
- 18 analog inputs (ADC)
- 2 DAC outputs

Some peripherals are already used by ESP32 during its basic operation. There are therefore fewer possible interfaces for each device.

# Why program in FORTH language on ESP32?

## **Preamble**

I have been programming in FORTH since 1983. I stopped programming in FORTH in 1996. But I have never stopped monitoring the evolution of this language. I resumed programming in 2019 on ARDUINO with FlashForth then REO-FORTH ESP32forth.

I am co-author of several books concerning the FORTH langage:

- Introduction au ZX-FORTH (ed Eyrolles 1984 -ASIN:B0014IGOXO)
- Tours de FORTH (ed Eyrolles 1985 ISBN-13: 978-2212082258)
- FORTH pour CP/M et MSDOS (ed Loisitech 1986)
- TURBO-Forth, manuel d'apprentissage (ed Rem CORP 1990)
- TURBO-Forth, guide de référence (ed Rem CORP 1991)

Programming in the FORTH language was always a hobby until 1992 when the manager of a company working as a subcontractor for the automobile industry contacted me. They had a concern for software development in C language. They needed to order an industrial automaton.

00 1

The two software designers of this company programmed in C language: TURBO-C from Borland to be precise. And their code couldn't be compact and fast enough to fit into the 64 kilobytes of RAM memory. It was 1992 and flash memory type expansions did not exist. In these 64 KB of RAM, we had to fit MS-DOS 3.0 and the application!

For a month, C language developers had been twisting the problem in all directions, even reverse engineering with SOURCER (a disassembler) to eliminate non-essential parts of executable code.

I analyzed the problem that was presented to me. Starting from scratch, I created, alone, in a week, a perfectly operational prototype that met the specifications. For three years, from 1992 to 1995, I created numerous versions of this application which was used on the assembly lines of several automobile manufacturers.

# Boundaries between language and application

All programming languages are shared like this:

- an interpreter and executable source code: BASIC, PHP, MySQL, JavaScript, etc...
  The application is contained in one or more files which will be interpreted whenever
  necessary. The system must permanently host the interpreter running the source
  code;
- a compiler and/or assembler: C, Java, etc. Some compilers generate native code, that is to say executable specifically on a system. Others, like Java, compile executable code on a virtual Java machine.

The FORTH language is an exception. It integrates:

- an interpreter capable of executing any word in the FORTH language
- a compiler capable of extending the dictionary of FORTH words

#### What is a FORTH word?

A FORTH word designates any dictionary expression composed of ASCII characters and usable in interpretation and/or compilation: words allows you to list all the words in the FORTH dictionary.

Certain FORTH words can only be used in compilation: if else then for example.

With the FORTH language, the essential principle is that we do not create an application. In FORTH, we extend the dictionary! Each new word you define will be as much a part of the FORTH dictionary as all the words pre-defined when FORTH starts. Example:

```
: typeToLoRa ( -- )
    0 echo ! \ disable display echo from terminal
    ['] serial2-type is type
;
: typeToTerm ( -- )
    ['] default-type is type
    -1 echo ! \ enable display echo from terminal
;
```

We create two new words: **typeToLoRa** and **typeToTerm** which will complete the dictionary of pre-defined words.

## A word is a function?

Yes and no. In fact, a word can be a constant, a variable, a function... Here, in our example, the following sequence :

```
: typeToLoRa ...code...;
would have its equivalent in C langage :
  void typeToLoRa() { ...code... }
```

In FORTH language, there is no limit between language and application.

In FORTH, as in C language, you can use any word already defined in the definition of a new word.

Yes, but then why FORTH rather than C?

I was expecting this question.

In C language, a function can only be accessed through the main function main(). If this function integrates several additional functions, it becomes difficult to find a parameter error in the event of a malfunction of the program.

On the contrary, with FORTH it is possible to execute - via the interpreter - any word predefined or defined by you, without having to go through the main word of the program.

The FORTH interpreter is immediately accessible on the ESP32 card via a terminal type program and a USB link between the ESP32 card and the PC.

The compilation of programs written in FORTH language is carried out in the ESP32 card and not on the PC. There is no upload. Example:

```
: >gray ( n -- n' )
  dup 2/ xor \ n' = n xor ( 1 time right shift logic )
;
```

This definition is transmitted by copy/paste into the terminal. The FORTH interpreter/compiler will parse the stream and compile the new word **>gray**.

In the definition of <code>>gray</code>, we see the sequence <code>dup 2/ xor</code>. To test this sequence, simply type it in the terminal. To execute <code>>gray</code>, simply type this word in the terminal, preceded by the number to transform.

# **FORTH language compared to C language**

This is my least favorite part. I don't like to compare the FORTH language to the C language. But as almost all developers use the C language, I'm going to try the exercise.

Here is a test with if() in C language:

Test with if in FORTH language (code snippet):

```
var-j @ 13 > \ If all bits are received
if
    1 rc5_ok ! \ Decoding process is OK
```

```
di \ Disable external interrupt (INTO)
exit
then
```

Here is the initialization of registers in C langage:

The same definition in FORTH langage:

```
: setup
  \ Timer1 module configuration
  0 TCCR1A !
  0 TCCR1B ! \ Disable Timer1 module
  0 TCNT1 ! \ Set Timer1 preload value to 0 (reset)
  1 TIMSK1 ! \ enable Timer1 overflow interrupt
;
```

## What FORTH allows you to do compared to the C language

We understand that FORTH immediately gives access to all the words in the dictionary, but not only that. Via the interpreter, we also access the entire memory of the ESP32 card. Connect to the ESP32 board that has ESP32forth installed, then simply type:

```
hex here 100 dump
```

You should find this on the terminal screen:

```
3FFEE964
                                DF DF 29 27 6F 59 2B 42 FA CF 9B 84
3FFEE970
                    39 4E 35 F7 78 FB D2 2C A0 AD 5A AF 7C 14 E3 52
3FFEE980
                    77 0C 67 CE 53 DE E9 9F 9A 49 AB F7 BC 64 AE E6
3FFEE990
                    3A DF 1C BB FE B7 C2 73 18 A6 A5 3F A4 68 B5 69
3FFEE9A0
                    F9 54 68 D9 4D 7C 96 4D 66 9A 02 BF 33 46 46 45
                    45 39 33 33 2F 0D 08 18 BF 95 AF 87 AC D0 C7 5D
3FFEE9B0
3FFEE9C0
                    F2 99 B6 43 DF 19 C9 74 10 BD 8C AE 5A 7F 13 F1
3FFEE9D0
                    9E 00 3D 6F 7F 74 2A 2B 52 2D F4 01 2D 7D B5 1C
                    4A 88 88 B5 2D BE B1 38 57 79 B2 66 11 2D A1 76
3FFEE9E0
3FFEE9F0
                    F6 68 1F 71 37 9E C1 82 43 A6 A4 9A 57 5D AC 9A
                    4C AD 03 F1 F8 AF 2E 1A B4 67 9C 71 25 98 E1 A0
3FFEEA00
3FFEEA10
                    E6 29 EE 2D EF 6F C7 06 10 E0 33 4A E1 57 58 60
3FFEEA20
                    08 74 C6 70 BD 70 FE 01 5D 9D 00 9E F7 B7 E0 CA
                    72 6E 49 16 0E 7C 3F 23 11 8D 66 55 EC F6 18 01
3FFEEA30
3FFEEA40
                    20 E7 48 63 D1 FB 56 77 3E 9A 53 7D B6 A7 A5 AB
```

3FFEEA50	EΑ	65	F8	21	3D	ВА	54	10	06	16	E6	9E	23	CA	87	25	
3FFEEA60	E7	D7	C4	45													

This corresponds to the contents of flash memory.

And the C language couldn't do that?

Yes, but not as simple and interactive as in FORTH language.

#### But why a stack rather than variables?

The stack is a mechanism implemented on almost all microcontrollers and microprocessors. Even the C language leverages a stack, but you don't have access to it.

Only the FORTH language gives full access to the data stack. For example, to make an addition, we stack two values, we execute the addition, we display the result:  $2\ 5\ +\ .$  displays 7.

It's a little destabilizing, but when you understand the mechanism of the data stack, you greatly appreciate its formidable efficiency.

The data stack allows data to be passed between FORTH words much more quickly than by processing variables as in C language or any other language using variables.

#### Are you convinced?

Personally, I doubt that this single chapter will irremediably convert you to programming in the FORTH language. When trying to master ESP32 cards, you have two options:

- program in C language and use the numerous libraries available. But you will remain locked into the capabilities of these libraries. Adapting codes to C language requires real knowledge of programming in C language and mastering the architecture of ESP32 cards. Developing complex programs will always be a problem.
- try the FORTH adventure and explore a new and exciting world. Of course, it won't
  be easy. You will need to understand the architecture of ESP32 cards, the registers,
  the register flags in depth. In return, you will have access to programming perfectly
  suited to your projects.

## Are there any professional applications written in FORTH?

Oh yes! Starting with the HUBBLE space telescope, certain components of which were written in FORTH language.

The German TGV ICE (Intercity Express) uses RTX2000 processors to control motors via power semiconductors. The machine language of the RTX2000 processor is the FORTH language.



This same RTX2000 processor was used for the Philae probe which attempted to land on a comet.

The choice of the FORTH language for professional applications turns out to be interesting if we consider each word as a black box. Each word must be simple, therefore have a fairly short definition and depend on few parameters.

During the debugging phase, it becomes easy to test all the possible values processed by this word. Once made perfectly reliable, this word becomes a black box, that is to say a function in which we have absolute confidence in its proper functioning. From word to word, it is easier to make a complex program reliable in FORTH than in any other programming language.

But if we lack rigor, if we build gas plants, it is also very easy to get an application that works poorly, or even to completely crash FORTH!

Finally, it is possible, in FORTH language, to write the words you define in any human language. However, the usable characters are limited to the ASCII character set between 33 and 127. Here is how we could symbolically rewrite the words high and low:

```
\ Turn a port pin on, dont change the others.
: __/ ( pinmask portadr -- )
    mset
;
\ Turn a port pin off, dont change the others.
: \__ ( pinmask portadr -- )
    mclr
;
```

From this moment, to turn on the LED, you can type:

```
_0_ __/ \ turn LED on
```

Yes! The sequence \_o\_ \_\_/ is in FORTH language!

With ESP32forth, here are all the characters at your disposal that can compose a FORTH word :

```
~}|{zyxwvutsrqponmlkjihgfedcba`_
^]\[ZYXWVUTSRQPONMLKJIHGFEDCBA@?
>=<;:9876543210/.-,+*)('&%$#"!
```

Good programming.

## A real 32-bit FORTH with ESP32Forth

ESP32Forth is a real 32-bit FORTH. What does it mean?

The FORTH language favors the manipulation of integer values. These values can be literal values, memory addresses, register contents, etc.

#### Values on the data stack

When ESP32Forth starts, the FORTH interpreter is available. If you enter any number, it will be dropped onto the stack as a 32-bit integer :

```
35
```

If we stack another value, it will also be stacked. The previous value will be pushed down one position:

```
45
```

To add these two values, we use a word, here +:

```
+
```

Our two 32-bit integer values are added together and the result is dropped onto the stack. To display this result, we will use the word .:

```
. \ display 80
```

In FORTH language, we can concentrate all these operations in a single line:

```
35 45 + . \ display 80
```

Unlike the C language, we do not define an **int8** or **int16** or **int32** type.

With ESP32Forth, an ASCII character will be designated by a 32-bit integer, but whose value will be bounded [32..255]. Example :

```
67 emit \ display C
```

# Values in memory

ESP32Forth allows you to define constants and variables. Their content will always be in 32-bit format. But there are situations where that doesn't necessarily suit us. Let's take a simple example, defining a Morse code alphabet. We only need a few bytes:

- one to define number of marks in Morse code character
- one or more bytes for Morse code marks

```
create mA ( -- addr )
2 c,
char . c, char - c,
```

```
create mB ( -- addr )
   4 c,
   char - c,   char . c,   char . c,

create mC ( -- addr )
   4 c,
   char - c,   char . c,   char . c,
```

Here we define only 3 words, mA, mB and mC. In each word, several bytes are stored. The question is: how will we retrieve the information in these words?

The execution of one of these words deposits a 32-bit value, a value which corresponds to the memory address where we stored our Morse code information. It is the word c@ that we will use to extract the Morse code from each letter:

```
mA c@ . \ display 2
mB c@ . \ display 4
```

The first byte placed on the stack will be used to manage a loop to display the code of a character in Morse code :

```
: .morse ( addr -- )
    dup 1+ swap c@ 0 do
        dup i + c@ emit
    loop
    drop
   ;
mA .morse \ display .-
mB .morse \ display -...
mC .morse \ display -...
```

There are plenty of certainly more elegant examples. Here we show a way to manipulate 8-bit values, our bytes, while operating these bytes on a 32-bit stack.

# Word processing depending on data size or type

In all other languages, we have a generic word, like **echo** (in PHP) which displays any type of data. Whether integer, real, string, we always use the same word. Example in PHP language:

```
$bread = "Baked bread";
$price = 2.30;
echo $bread . " : " . $price;
// display Baked bread: 2.30
```

For all programmers, this way of doing things is THE STANDARD! So how would FORTH do this example in PHP?

```
: bread s" Baked bread" ;
: price s" 2.30" ;
bread type s" : " type price type
\ display Baked bread: 2.30
```

Here, the word type tells us that we have just processed a character string.

Where PHP (or any other language) has a generic function and a parser, FORTH compensates with a single data type, but adapted processing methods which inform us about the nature of the data processed.

Here is an absolutely trivial case for FORTH, displaying a number of seconds in HH:MM:SS format:

```
: :##
    # 6 base !
    # decimal
    [char] : hold
;
: .hms ( n -- )
    <# :## :## # # > type
;
4225 .hms \ display: 01:10:25
```

I love this example because, to date, **NO OTHER PROGRAMMING LANGUAGE** is capable of achieving this HH:MM:SS conversion so elegantly and concisely.

You have understood, the secret of FORTH is in its vocabulary.

## **Conclusion**

FORTH has no data typing. All data passes through a data stack. Each position in the stack is ALWAYS a 32-bit integer!

#### That's all there is to know.

Purists of hyper-structured and verbose languages, such as C or Java, will certainly cry heresy. And here, I will allow myself to answer them : why do you need to type your data ?

Because it is in this simplicity that the power of FORTH lies: a single stack of data with an untyped format and very simple operations.

And I'm going to show you what many other programming languages can't do, define new definition words:

```
: morse: ( comp: c -- | exec -- )
    create
    c,
```

```
does>
    dup 1+ swap c@ 0 do
    dup i + c@ emit
    loop
    drop space
;
2 morse: mA     char . c,     char - c,
4 morse: mB     char - c,     char . c,     char . c,
4 morse: mC     char . c,     char . c,     char . c,
mA mB mC     \ display     .- ... -.-.
```

Here, the word morse: has become a definition word, in the same way as constant or variable...

Because FORTH is more than a programming language. It is a meta-language, that is to say a language to build your own programming language....

# **Dictionary / Stack / Variables / Constants**

# **Expand Dictionary**

Forth belongs to the class of woven interpretive languages. This means that it can interpret commands typed on the console, as well as compile new subroutines and programs.

The Forth compiler is part of the language and special words are used to create new dictionary entries (i.e. words). The most important are : (start a new definition) and ; (finishes the definition). Let's try this by typing :

```
: *+ * + ;
```

What happened? The action of: is to create a new dictionary entry named \*+ and switch from interpretation mode to compilation mode. In compile mode, the interpreter searches for words and, rather than executing them, installs pointers to their code. If the text is a number, instead of pushing it onto the stack, ESP32forth constructs the number in the dictionary space allocated for the new word, following special code that puts the stored number on the stack each time the word is executed. The execution action of \*+ is therefore to sequentially execute the previously defined words \* and +.

Word; is special. It is an immediate word and it is always executed, even if the system is in compile mode. Which makes; is twofold. First, it installs code that returns control to the next external level of the interpreter, and second, it returns from compilation mode to interpretation mode.

Now let's try this new word:

```
decimal 5 6 7 *+ . \ display 47 ok<#,ram>
```

This example illustrates two main work activities in Forth: adding a new word to the dictionary, and trying it as soon as it has been defined.

# **Dictionary management**

The word **forget** followed by the word to delete will remove all dictionary entries you have made since that word :

```
: test1 ;
: test2 ;
: test3 ;
forget test2 \ delete test2 and test3 in dictionnary
```

#### Stacks and reverse Polish notation

Forth has an explicitly visible stack that is used to pass numbers between words (commands). Using Forth effectively forces you to think in terms of the stack. This can be difficult at first, but as with anything, it gets much easier with practice.

In FORTH, The pile is analogous to a pile of cards with numbers written on them. Numbers are always added to the top of the stack and removed from the top of the stack. ESP32forth integrates two stacks: the parameter stack and the feedback stack, each consisting of a number of cells that can hold 32-bit numbers.

#### The FORTH input line:


```
decimal 2 5 73 -16
```

leaves the parameter stack as it is

	Cell	Content	comment
0		-16	(TOS) Top of stack
1		73	(NOS) Next in stack
2		5	
3		2	

We will typically use zero-based relative numbering in Forth data structures such as stacks, arrays, and tables. Note that when a sequence of numbers is entered like this, the rightmost number becomes TOS and the leftmost number is at the bottom of the stack.

Let's continue with this:

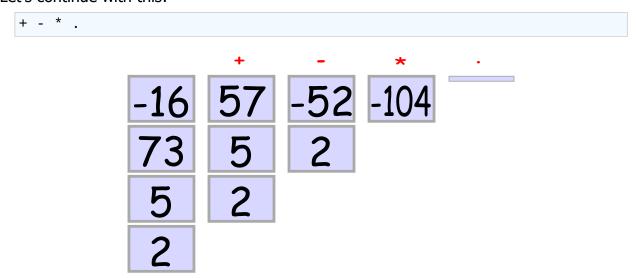

The operations would produce successive stack operations:

After the two lines, the console displays:

```
decimal 2 5 73 -16 \ display: 2 5 73 -16 ok + - * . \ display: -104 ok
```

Note that ESP32forth conveniently displays the stack elements when interpreting each line and that the value of -16 is displayed as a 32-bit unsigned integer. Furthermore, the word


. consumes data value **-104**, leaving the stack empty. If we execute . on the now empty stack, the external interpreter aborts with a stack pointer error STACK UNDERFLOW ERROR.

The programming notation where the operands appear first, followed by the operator(s) is called Reverse Polish Notation (RPN).

## Handling the parameter stack

Being a stack-based system, ESP32forth must provide ways to put numbers on the stack, remove them and rearrange their order. We have already seen that we can put numbers on the stack simply by typing them. We can also integrate numbers into the definition of a FORTH word.

The word **drop** removes a number from the top of the stack thus putting the next one on top. The word **swap** exchanges the first 2 numbers. **dup** copies the number at the top, pushing all other numbers down. **rot** rotates the first 3 numbers. These actions are

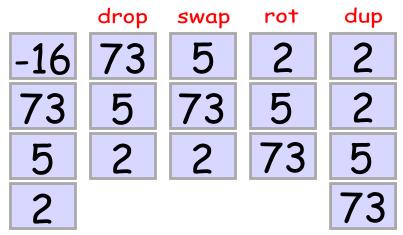

presented below.

#### The Return Stack and Its Uses

When compiling a new word, ESP32forth establishes links between the calling word and previously defined words that are to be invoked by the execution of the new word. This linking mechanism, at runtime, uses the return stack. The address of the next word to be invoked is placed on the back stack so that when the current word has finished executing, the system knows where to move to the next word. Since words can be nested, there must be a stack of these return addresses.

In addition to serving as a reservoir of return addresses, the user can also store and retrieve from the return stack, but this must be done carefully because the return stack is essential to program execution. If you use the return stack for temporary storage, you must return it to its original state, otherwise you will likely crash the ESP32forth system. Despite the danger, there are times when using return stack as temporary storage can make your code less complex.

To store on the return stack, use >r to move the top of the parameter stack to the top of the return stack. To retrieve a value, r> moves the top value from the return stack back to the top of the parameter stack. To simply remove a value from the top of the return stack, there is the word rdrop. The word r@ copies the top of the return stack back into the parameter stack.

## Memory usage

In ESP32forth, 32-bit numbers are fetched from memory to the stack by the word @ (fetch) and stored from the top to memory by the word ! (store). @ expects an address on the stack and replaces the address with its contents. ! expects a number and an address to store it. It places the number in the memory location referenced by the address, consuming both parameters in the process.

Unsigned numbers that represent 8-bit (byte) values can be placed in character-sized characters. memory cells using c@ and c!.

```
create testVar
cell allot
$f7 testVar c!
testVar c@ . \ display 247
```

#### **Variables**

A variable is a named location in memory that can store a number, such as the intermediate result of a calculation, off the stack. For example :

```
variable x
```

creates a storage location named  $\mathbf{x}$ , which executes leaving the address of its storage location at the top of the stack :

```
x . \ display address
```

We can then retrieve or store at this address:

```
variable x
3 x !
x @ . \ display: 3
```

#### **Constants**

A constant is a number that you would not want to change while a program is running. The result of executing the word associated with a constant is the value of the data remaining on the stack.

```
\ define VSPI pins
19 constant VSPI_MISO
23 constant VSPI_MOSI
```

```
18 constant VSPI_SCLK
05 constant VSPI_CS

\ define SPI frequency port
4000000 constant SPI_FREQ

\ select SPI vocabulary
only FORTH SPI also

\ initialize the SPI port
: init.VSPI ( -- )
    VSPI_CS OUTPUT pinMode
    VSPI_SCLK VSPI_MISO VSPI_MOSI VSPI_CS SPI.begin
    SPI_FREQ SPI.setFrequency
;
```

#### **Pseudo-constant values**

A value defined with **value** is a hybrid type of **variable** and **constant**. We set and initialize a value and it is invoked as we would a constant. We can also change a value like we can change a variable.

```
decimal

13 value thirteen

thirteen . \ display: 13

47 to thirteen

thirteen . \ display: 47
```

The word **to** also works in word definitions, replacing the value following it with whatever is currently at the top of the stack. You need to be careful that **to** is followed by a value defined by value and not something else.

# **Basic tools for memory allocation**

The words **create** and **allot** are the basic tools for reserving memory space and attaching a label to it. For example, the following transcription shows a new dictionary entry **graphic-array**:

When executed, the word graphic-array stacks the address of the first entry.


We can now access the memory allocated to **graphic-array** using the fetch and store words explained earlier. To calculate the address of the third byte assigned to **graphic-array** we can write **graphic-array** 2 +, remembering that the indices start at 0.

```
30 graphic-array 2 + c! graphic-array 2 + c@ . \ display 30
```

# Text colors and display position on terminal

# **ANSI** coding of terminals

If you are using terminal software to communicate with ESP32forth, there is a good chance that this terminal emulates a VT type terminal or equivalent. Here, TeraTerm configured to emulate a VT100 terminal:

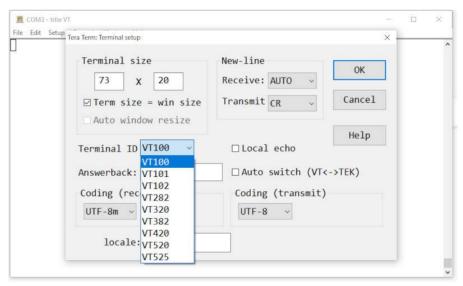

These terminals have two interesting features:

- color the page background and the text to display
- position the display cursor

Both of these features are controlled by ESC (escape) sequences. This is how the words bg and fg are defined in ESP32forth:

```
forth definitions ansi
: fg ( n -- ) esc ." [38;5;" n. ." m" ;
: bg ( n -- ) esc ." [48;5;" n. ." m" ;
: normal esc ." [0m" ;
: at-xy ( x y -- ) esc ." [" 1+ n. ." ;" 1+ n. ." H" ;
: page esc ." [2J" esc ." [H" ;
```

The word normal overrides the coloring sequences defined by bg and fg.

The word page clears the terminal screen and positions the cursor at the upper left corner of the screen.

# **Text coloring**

Let's see how to color the text first:

Running testFG gives this on display:



To test the background colors, we will proceed as follows:

```
: testBG ( -- )
   page
   16 0 do
        16 * i + bg
            space space
        loop
        cr
   loop
   normal
```

;

Running testBG gives this on display:




# **Display position**

The terminal is the simplest solution to communicate with ESP32forth. With ANSI escape sequences it is easy to improve the presentation of data.

```
09 constant red
11 constant yellow
14 constant cyan
15 constant whyte
: box { x0 y0 xn yn color -- }
    color bg
    yn y0 - 1+ \ determine height
    0 do
        x0 y0 i + at-xy
        xn x0 - spaces
    loop
    normal
;
: 3boxes ( -- )
    page
    2 4 20 6 cyan box
```

```
8 6 28 8 red box
14 8 36 10 yellow box
0 0 at-xy
;
```

## Running 3boxes shows this:

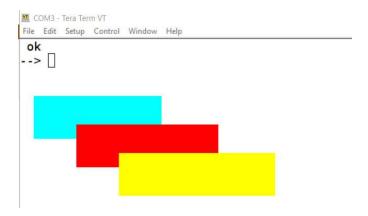

You are now equipped to create simple and effective interfaces allowing interaction with FORTH definitions compiled by ESP32forth.

## Local variables with ESP32Forth

#### Introduction

The FORTH language processes data primarily through the data stack. This very simple mechanism offers unrivaled performance. Conversely, following the flow of data can quickly become complex. Local variables offer an interesting alternative.

#### The fake stack comment

If you follow the different FORTH examples, you will have noticed the stack comments framed by ( and ) . Example:

Here, the comment ( u1 u2 -- sum carry ) has absolutely no action on the rest of the FORTH code. This is pure commentary.

When preparing a complex definition, the solution is to use local variables framed by { and } . Example :

```
: 20VER { a b c d }
    a b c d a b
;
```

We define four local variables a b c and d.

The words { and } are similar to the words ( and ) but do not have the same effect at all. Codes placed between { and } are local variables. The only constraint: do not use variable names that could be FORTH words from the FORTH dictionary. We might as well have written our example like this:

```
: 20VER { varA varB varC varD }
  varA varB varC varD varA varB
;
```

Each variable will take the value of the data stack in the order of their deposit on the data stack. here, 1 goes into varA, 2 into varB, etc.:

```
--> 1 2 3 4
ok
1 2 3 4 --> 2over
ok
1 2 3 4 1 2 -->
```

Our fake stack comment can be completed like this:

```
: 20VER { varA varB varC varD -- varA varB }
```

The characters following -- have no effect. The only point is to make our fake comment look like a real stack comment.

#### **Action on local variables**

Local variables act exactly like pseudo-variables defined by value. Example:

```
: 3x+1 { var -- sum }
var 3 * 1 +
;
```

A le même effet que ceci:

```
0 value var
: 3x+1 ( var -- sum )
    to var
    var 3 * 1 +
;
```

In this example, var is defined explicitly by value.

We assign a value to a local variable with the word **to** or **+to** to increment the content of a local variable. In this example, we add a local variable **result** initialized to zero in the code of our word:

```
: a+bEXP2 { varA varB -- (a+b)EXP2 }
  0 { result }
  varA varA * to result
  varB varB * +to result
  varA varB * 2 * +to result
  result
;
```

Isn't it more readable than this?

```
: a+bEXP2 ( varA varB -- result )
    2dup
    * 2 * >r
    dup *
    swap dup * +
    r> +
    ;
```

Here is a final example, the definition of the word um+ which adds two unsigned integers and leaves the sum and the overflow value of this sum on the data stack:

```
\ add two unsigned integers, leaves sum and carry on the stack
: um+ { u1 u2 -- sum carry }
    0 { sum }
    cell for
        aft
            u1 $100 /mod to u1
            u2 $100 /mod to u2
            +
            cell 1- i - 8 * lshift +to sum
        then
    next
    sum
        u1 u2 + abs
;
```

Here is a more complex example, rewriting **DUMP** using local variables:

```
\ local variables in DUMP:
\ START_ADDR \ first address for dump
\ END_ADDR \ last address for dump
\ OSTART_ADDR \ first address for loop in dump
\ LINES \ number of lines for dump loop
\ myBASE \ current numerical base
internals
: dump ( start len -- )
    cr cr ." --addr--- "
    ." 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F -----
chars----"
    START_ADDR 16 / 16 * { OSTART_ADDR } \ calc. addr for loop start
    16 / 1+ { LINES }
                            \ save current base
    base @ { myBASE }
    hex
    \ outer loop
    LINES 0 do
        OSTART_ADDR i 16 * + \ calc start address for current
line
        cr <# # # # # [char] - hold # # # # #> type
        space space \ and display address
        \ first inner loop, display bytes
        16 0 do
            \ calculate real address
            OSTART_ADDR j 16 * i + +
            ca@ <# # # #> type space \ display byte in format: NN
        loop
```

```
space
        \ second inner loop, display chars
        16 0 do
            \ calculate real address
            OSTART_ADDR j 16 * i + +
            \ display char if code in interval 32-127
                    dup 32 < over 127 > or
            ca@
            if
                    drop [char] . emit
                    emit
            else
            then
        loop
    loop
    myBASE base !
                              \ restore current base
    cr cr
forth
```

The use of local variables greatly simplifies data manipulation on stacks. The code is more readable. Note that it is not necessary to pre-declare these local variables, it is enough to designate them when using them, for example: base @ { myBASE }.

WARNING: if you use local variables in a definition, no longer use the words >r and r>, otherwise you risk disrupting the management of local variables. Just look at the decompilation of this version of **DUMP** to understand the reason for this warning:

```
: dump cr cr s" --addr--- " type
    s" 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F -----chars----" type
    2dup + >R SWAP >R -4 local@ 16 / 16 * >R 16 / 1+ >R base @ >R
    hex -8 local@ 0 (do) -20 local@ R@ 16 * + cr
    <# # # # 45 hold # # # # > type space space
    16 0 (do) -28 local@ j 16 * R@ + + CA@ <# # # # > type space 1 (+loop)
    0BRANCH rdrop rdrop space 16 0 (do) -28 local@ j 16 * R@ + + CA@ DUP 32 < OVER 127 > OR
    0BRANCH DROP 46 emit BRANCH emit 1 (+loop) 0BRANCH rdrop rdrop 1 (+loop)
    0BRANCH rdrop rdrop -4 local@ base ! cr cr rdrop rdrop rdrop rdrop rdrop;
```

## **Data structures for ESP32forth**

#### **Preamble**

ESP32forth is a 32-bit version of the FORTH language. Those who have practiced FORTH since its beginnings have programmed with 16-bit versions. This data size is determined by the size of the elements deposited on the data stack. To find out the size in bytes of the elements, you must execute the word cell. Running this word for ESP32forth:

```
cell . \ display 4
```

The value 4 means that the size of the elements placed on the data stack is 4 bytes, or 4x8 bits = 32 bits.

With a 16-bit FORTH version, cell will stack the value 2. Likewise, if you use a 64-bit version, cell will stack the value 8.

#### **Tables in FORTH**

Let's start with fairly simple structures: tables. We will only discuss one- or twodimensional arrays.

#### One-dimensional 32-bit data array

This is the simplest type of table. To create a table of this type, we use the word **create** followed by the name of the table to create:

```
create temperatures
34 , 37 , 42 , 36 , 25 , 12 ,
```

Dans ce tableau, on stocke 6 valeurs: 34, 37....12. Pour récupérer une valeur, il suffit d'utiliser le mot @ en incrémentant l'adresse empilée par temperatures avec le décalage souhaité:

In this table, we store 6 values: 34, 37....12. To retrieve a value, simply use the word @ by incrementing the address stacked by temperatures with the desired offset:

```
temperatures
                    \ push addr on stack
   0 cell *
                    \ calculate offset 0
    +
                    \ add offset to addr
                    \ display 34
   @ .
temperatures
                    \ push addr on stack
   1 cell *
                    \ calculate offset 0
                    \ add offset to addr
    +
   @ .
                    \ display 37
```

We can factor the access code to the desired value by defining a word which will calculate this address:

```
: temp@ ( index -- value )
   cell * temperatures + @
;
0 temp@ . \ display 34
2 temp@ . \ display 42
```

You will note that for n values stored in this table, here 6 values, the access index must always be in the interval [0..n-1].

#### Mots de définition de tableaux

Here's how to create a word definition of one-dimensional integer arrays:

```
: array ( comp: -- | exec: index -- addr )
    create
    does>
        swap cell * +
    ;
array myTemps
        21 ,     32 ,     45 ,     44 ,     28 ,     12 ,
0 myTemps @ . \ display 21
5 myTemps @ . \ display 12
```

In our example, we store 6 values between 0 and 255. It is easy to create a variant of array to manage our data in a more compact way:

With this variant, the same values are stored in four times less memory space.

#### Read and write in a table

It is entirely possible to create an empty array of n elements and write and read values in this array :

```
arrayC myCTemps
6 allot \ allocate 6 bytes
0 myCTemps 6 0 fill \ fill this 6 bytes with value 0
```

```
32 0 myCTemps c! \ store 32 in myCTemps[0]
25 5 myCTemps c! \ store 25 in myCTemps[5]
0 myCTemps c@ . \ display 32
```

In our example, the array contains 6 elements. With ESP32forth, there is enough memory space to process much larger arrays, with 1,000 or 10,000 elements for example. It's easy to create multi-dimensional tables. Example of a two-dimensional array:

```
63 constant SCR_WIDTH
16 constant SCR_HEIGHT
create mySCREEN
    SCR_WIDTH SCR_HEIGHT * allot \ allocate 63 * 16 bytes
    mySCREEN SCR_WIDTH SCR_HEIGHT * bl fill \ fill this memory with
'space'
```

Here, we define a two-dimensional table named myscreen which will be a virtual screen of 16 rows and 63 columns.

Simply reserve a memory space which is the product of the dimensions X and Y of the table to use. Now let's see how to manage this two-dimensional array :


```
: xySCRaddr { x y -- addr }
    SCR_WIDTH y *
    x + mySCREEN +
;
: SCR@ ( x y -- c )
    xySCRaddr c@
;
: SCR! ( c x y -- )
    xySCRaddr c!
;
char X 15 5 SCR! \ store char X at col 15 line 5
15 5 SCR@ emit \ display X
```

## Practical example of managing a virtual screen

Before going further in our example of managing a virtual screen, let's see how to modify the character set of the TERA TERM terminal and display it.

Launch TERA TERM terminal:

- in the menu bar, click on Setup
- select Font and Font...
- configure the font below :

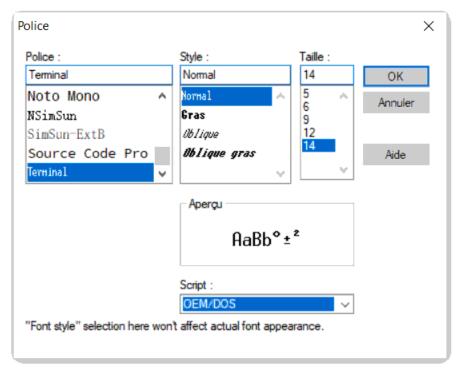

Here's how to display the table of available characters:

```
: tableChars ( -- )
    base @ >r hex
    128 32 do
       16 0 do
            j i + dup . space emit space space
       loop
       cr
    16 +loop
    256 160 do
       16 0 do
            j i + dup . space emit space space
       loop
       cr
    16 +loop
    cr
    r> base !
tableChars
```

Here is the result of running tableChars:

```
tableChars
                                                         22
32
42
52
62
72
B2
C2
E2
F2
                                                                                                 23
43
53
63
73
83
03
E3
F3
                                                                                                                                         24
44
54
64
74
84
C4
D4
F4
                                                                                                                                                                   $4DTdtn-leon
                                                                                                                                                                                   25
35
45
55
67
67
85
85
85
85
85
85
85
85
                                                                                                                                                                                                            %
5
E
U
                                                                                                                                                                                                                              26
36
46
56
66
76
86
C6
D6
                                                                                                                                                                                                                                                    &6FVf vª Âãí
                                                                                                                                                                                                                                                                       27
37
47
57
67
77
87
C7
D7
                                                                                                                                                                                                                                                                                                                28
38
48
58
68
78
88
88
C8
D8
E8
F8
                                                                                                                                                                                                                                                                                                                                                         29
49
59
69
79
89
69
69
69
                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              #308csú-
                                                                                                                                                                                                                                                                                                                                                                                 )9IYiy®╣╚
                                                                                                                                                                                                                                                                                                                                        odi ∏®?× HXH8/
                                                                               2BRbró Têô
                                                                                                                                                                                                                                                                                              76₩9₩ºÀÃÎ
                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             ,
くし\1
|
|
|
                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               ņ
                                       Ð
                                                                                                                                                                                                                                                                                                                                                                                  Ú
                                                                                                                                                                                                                              E6
F6
```

These characters are those from the MS-DOS ASCII set. Some of these characters are semi-graphic. Here is a very simple insertion of one of these characters into our virtual screen:

```
$db dup 5 2 SCR! 6 2 SCR!
$b2 dup 7 3 SCR! 8 3 SCR!
$b1 dup 9 4 SCR! 10 4 SCR!
```

Now let's see how to display the contents of our virtual screen. If we consider each line of the virtual screen as an alphanumeric string, we just need to define this word to display one of the lines of our virtual screen:


```
: dispLine { numLine -- }
   SCR_WIDTH numLine *
   mySCREEN + SCR_WIDTH type
;
```

Along the way, we will create a definition allowing the same character to be displayed n times :

```
: nEmit ( c n -- )
    for
       aft dup emit then
    next
    drop
;
```

And now, we define the word allowing us to display the content of our virtual screen. To clearly see the content of this virtual screen, we frame it with special characters :

```
: dispScreen
   0 0 at-xy
   \ display upper border
   $da emit
               $c4 SCR WIDTH nEmit
                                       $bf emit
                                                   cr
   \ display content virtual screen
   SCR HEIGHT 0 do
       $b3 emit
                    i dispLine
                                       $b3 emit
                                                   cr
   loop
   \ display bottom border
   $c0 emit
               $c4 SCR_WIDTH nEmit
                                       $d9 emit
                                                   cr
```

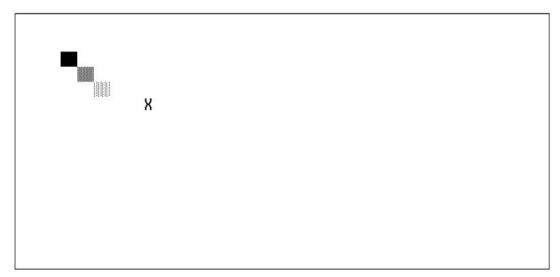

Running our dispScreen word displays this:

In our virtual screen example, we show that managing a two-dimensional array has a concrete application. Our virtual screen is accessible for writing and reading. Here we display our virtual screen in the terminal window. This display is far from efficient.

### **Management of complex structures**

ESP32forth has the **structures** vocabulary. The content of this vocabulary makes it possible to define complex data structures.

Voici un exemple trivial de structure:

```
structures
struct YMDHMS

ptr field >year

ptr field >month

ptr field >day

ptr field >hour

ptr field >min

ptr field >sec
```

Here, we define the YMDHMS structure. This structure manages the >year >month >day >hour >min and >sec pointers.

The sole purpose of the YMDHMS word is to initialize and group the pointers in the complex structure. Here is how these pointers are used:

```
create DateTime
YMDHMS allot

2022 DateTime >year !
03 DateTime >month !
21 DateTime >day !
```

```
22 DateTime >hour !
 36 DateTime >min
 15 DateTime >sec
: .date ( date -- )
   >r
    ." YEAR: " r@ >year
                           @ . cr
    ." MONTH: " r@ >month
                           @ . cr
        DAY: " r@ >day
                           @ . cr
                           @ . cr
         HH: " r@ >hour
         MM: " r@ >min
                           @ . cr
         SS: " r@ >sec
                           @ . cr
    r> drop
DateTime .date
```

On a défini le mot **DateTime** qui est un tableau simple de 6 cellules 32 bits consécutives. L'accès à chacune des cellules est réalisée par l'intermédiaire du pointeur correspondant. On peut redéfinir l'espace alloué de notre structure **YMDHMS** en utilisant le mot **i8** pour pointer des octets:

```
structures
struct cYMDHMS
    ptr field >year
    i8 field >month
    i8 field >day
    i8 field >hour
    i8 field >min
    i8 field >sec
create cDateTime
    cYMDHMS allot
2022 cDateTime >year
 03 cDateTime >month c!
 21 cDateTime >day
 22 cDateTime >hour
                      с!
 36 cDateTime >min
                      с!
 15 cDateTime >sec
                      с!
: .cDate ( date -- )
    >r
    ." YEAR: " r@ >year
                             @ . cr
    ." MONTH: " r@ >month
                            c@ . cr
         DAY: " r@ >day
                            c@ . cr
```

```
HH: " r@ >hour
                           c@ . cr
         MM: " r@ >min
                           c@ . cr
    . "
         SS: " r@ >sec
                           c@ . cr
    r> drop
cDateTime .cDate \ affiche:
\ YEAR: 2022
\ MONTH: 3
   DAY: 21
/
    HH: 22
    MM: 36
    SS: 15
```

In this **CYMDHMS** structure, we kept the year in 32-bit format and reduced all other values to 8-bit integers. We see, in the **.cDate** code, that the use of pointers allows easy access to each element of our complex structure....

#### **Definition of sprites**

We previously defined a virtual screen as a two-dimensional array. The dimensions of this array are defined by two constants. Reminder of the definition of this virtual screen:

```
63 constant SCR_WIDTH
16 constant SCR_HEIGHT
create mySCREEN
SCR_WIDTH SCR_HEIGHT * allot
mySCREEN SCR_WIDTH SCR_HEIGHT * bl fill
```

With this programming method, the disadvantage is that the dimensions are defined in constants, therefore outside the table. It would be more interesting to embed the dimensions of the table in the table. To do this, we will define a structure adapted to this case :

```
structures
struct cARRAY
   i8 field >width
   i8 field >height
   i8 field >content

create myVscreen \ define a screen 8x32 bytes
   32 c, \ compile width
   08 c, \ compile height
   myVscreen >width c@
   myVscreen >height c@ * allot
```

To define a software sprite, we will very simply share this definition:

```
: sprite: ( width height -- )
```

```
create
    swap c, c, \ compile width et height
    does>
;
2 1 sprite: blackChars
    $db c, $db c,
2 1 sprite: greyChars
    $b2 c, $b2 c,
blackChars >content 2 type \ display content of sprite blackChars
```


Here's how to define a  $5 \times 7$  byte sprite :

```
5 7 sprite: char3
$20 c, $db c, $db c, $db c, $20 c,
$db c, $20 c, $20 c, $20 c, $db c,
$20 c, $20 c, $20 c, $20 c, $db c,
$20 c, $20 c, $20 c, $20 c, $db c,
$20 c, $db c, $db c, $db c, $20 c,
$20 c, $20 c, $20 c, $20 c, $db c,
$20 c, $20 c, $20 c, $20 c, $db c,
$db c, $20 c, $20 c, $20 c, $db c,
$db c, $20 c, $db c, $db c,
$20 c, $db c, $db c, $20 c,
```

To display the sprite, from an x y position in the terminal window, a simple loop is enough:

```
: .sprite { xpos ypos sprAddr -- }
    sprAddr >height c@ 0 do
        xpos ypos at-xy
        sprAddr >width c@ i * \ calculate offset in sprite datas
        sprAddr >content + \ calculate real addr for line n in
sprite datas
        sprAddr > width c@ type \setminus display line
                               \ increment y position
        1 +to ypos
   loop
0 constant blackColor
1 constant redColor
4 constant blueColor
10 02 char3 .sprite
redColor fq
16 02 char3 .sprite
blueColor fg
22 02 char3 .sprite
blackColor fg
cr cr
```

Result of displaying our sprite:

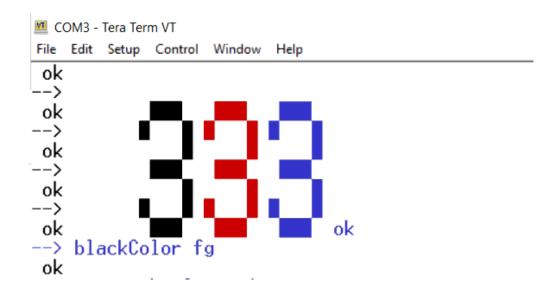

I hope the content of this chapter has given you some interesting ideas that you would like to share...

# Displaying numbers and character strings

# **Change of numerical base**

FORTH does not process just any numbers. The ones you used when trying the previous examples are single-precision signed integers. The definition domain for 32-bit integers is -2147483648 to 2147483647. Example:

These numbers can be processed in any number base, with all number bases between 2 and 36 being valid :

```
255 HEX. DECIMAL \displays FF
```

You can choose an even larger numerical base, but the available symbols will fall outside the alpha-numeric set [0..9,A..Z] and risk becoming inconsistent.

The current numerical base is controlled by a variable named **BASE** and whose content can be modified. So, to switch to binary, simply store the value 2 in **BASE**. Example:

```
2 BASE !
```

and type **DECIMAL** to return to the decimal numeric base.

ESP32forth has two pre-defined words allowing you to select different numerical bases:

- **DECIMAL** to select the decimal numeric base. This is the numerical base taken by default when starting ESP32forth;
- HEX to select the hexadecimal numeric base.

Upon selection of one of these numerical bases, the literal numbers will be interpreted, displayed or processed in this base. Any number previously entered in a number base other than the current number base is automatically converted to the current number base. Example :

```
DECIMAL \ base to decimal
255 \ stacks 255
HEX \ selects hexadecimal base
1+ \ increments 255 becomes 256
. \ displays 100
```

One can define one's own numerical base by defining the appropriate word or by storing this base in **BASE** . Example :

```
: BINARY ( ---) \ selects the binary number base 2 BASE !;
DECIMAL 255 BINARY . \ displays 11111111
```

The contents of **BASE** can be stacked like the contents of any other variable:

```
VARIABLE RANGE_BASE \ RANGE-BASE variable definition

BASE @ RANGE_BASE ! \ storage BASE contents in RANGE-BASE

HEX FF 10 + . \ displays 10F

RANGE_BASE @ BASE ! \ restores BASE with contents of RANGE-BASE
```

In a definition: , the contents of **BASE** can pass through the return stack:

```
: OPERATION ( ---)
BASE @ >R \ stores BASE on back stack
HEX FF 10 + . \ operation of the previous example
R> BASE ! ; \ restores initial BASE value
```

**WARNING**: the words >R and R> cannot be used in interpreted mode. You can only use these words in a definition that will be compiled.

### **Definition of new display formats**

Forth has primitives allowing you to adapt the display of a number to any format. These primitives only deal with double precision numbers:

- <# begins a format definition sequence;</li>
- # inserts a digit into a format definition sequence;
- #S is equivalent to a succession of #;
- HOLD inserts a character into a format definition;
- #> completes a format definition and leaves on the stack the address and length of the string containing the number to display.

These words can only be used within a definition. Example, either to display a number expressing an amount denominated in euros with the comma as a decimal separator:

```
: .EUROS ( n ---)
<# # # [char] , hold #S #>
type space ." EUR" ;
1245 .euros
```

Execution examples:

```
35 .EUROS \ displays 0,35 EUR
35.75 .EUROS \ displays 35,75 EUR
1015 3575 + .EUROS \ displays 45,90 EUR
```

In the EUROS definition, the word <# begins the display format definition sequence. The two words # place the ones and tens digits in the character string. The word HOLD places the character , (comma) following the two digits on the right, the word #\$ completes the display format with the non-zero digits following , . The word #> closes the format definition and places on the stack the address and the length of the string containing the digits of the number to display. The word TYPE displays this character string.

At runtime, a display format sequence deals exclusively with signed or unsigned 32-bit integers. The concatenation of the different elements of the string is done from right to left, i.e. starting with the least significant digits.

The processing of a number by a display format sequence is executed based on the current numeric base. The numerical base can be modified between two digits.

Here is a more complex example demonstrating the compactness of FORTH. This involves writing a program converting any number of seconds into HH:MM:SS format:

```
:00 ( ---)

DECIMAL # \ insert digit unit in decimal
6 BASE ! \ base 6 selection
# \ insert digit ten
[char] : HOLD \ insertion character :
DECIMAL ; \ return decimal base
: HMS ( n ---) \ \ displays number seconds format HH:MM:SS
<# :00 :00 #S #> TYPE SPACE ;
```

Execution examples:

```
59 HMS \ displays 0:00:59
60 HMS \ displays 0:01:00
4500 HMS \ displays 1:15:00
```

Explanation: The system for displaying seconds and minutes is called the sexagesimal system. Units are expressed in decimal numerical base, **tens are** expressed in base six. The word :00 manages the conversion of units and tens in these two bases for formatting the numbers corresponding to seconds and minutes. For times, the numbers are all decimal.

Another example, to define a program converting a single precision decimal integer into binary and displaying it in the format bbbb bbbb bbbb:

```
2 BASE ! \ Binary digital base selection
<#
4 0 D0 \ Format Loop
FOUR-DIGITS
LOOP
#> TYPE SPACE \ Binary display
R> BASE ! ; \ Initial digital base restoration
```

Execution example :

```
DECIMAL 12 AFB \ displays 0000 0000 0000 0110 
HEX 3FC5 AFB \ displays 0011 1111 1100 0101
```

Another example is to create a telephone diary where one or more telephone numbers are associated with a surname. We define a word by surname :

```
: .## ( ---)
    # # [char] . HOLD ;
: .TEL ( d ---)
    CR <# .## .## .## .## # # > TYPE CR ;
: WACHOWSKI ( ---)
    0618051254 .TEL ;
WACHOWSKI \ displays: 06.18.05.12.54
```

This calendar, which can be compiled from a source file, is easily editable, and although the names are not classified, the search is extremely fast.

## Displaying characters and character strings

A character is displayed using the word **EMIT**:

```
65 EMIT \ displays A
```

The displayable characters are in the range 32..255. Codes between 0 and 31 will also be displayed, subject to certain characters being executed as control codes. Here is a definition showing the entire character set of the ASCII table:

```
: ASCII-SET ( ---)
   cr 0 #out!
   128 32
   D0
                           \ displays character code
       I 3 .R SPACE
       4 #out+!
       I EMIT 2 SPACES
                           \ displays character
       3 #out+!
       #out @ 77 =
       ΙF
            CR
                 0 #out!
       THEN
   LOOP ;
```

Running ASCII-SET displays the ASCII codes and characters whose code is between 32 and 127. To display the equivalent table with the ASCII codes in hexadecimal, type **HEX ASCII-SET**:

```
hex ASCII-SET
      21 ! 22 "
                                        27 '
20
                 23 #
                       24 $
                            25 %
                                  26 &
                                             28 (
                                                   29 )
                                                         2A *
                       2F /
                                  31 1
                                             33 3
2B +
      2C , 2D -
                 2E .
                            30 0
                                       32 2
                                                   34 4
                                                         35 5
36 6 37 7 38 8 39 9 3A:
                            3B ;
                                  3C < 3D =
                                             3E >
                                                   3F ?
                                                         40 @
41 A 42 B 43 C 44 D 45 E
                            46 F
                                  47 G 48 H
                                             49 I
                                                   4A J
                                                         4B K
4C L
     4D M 4E N 4F O 50 P
                            51 Q 52 R
                                       53 S
                                             54 T
                                                   55 U
                                                         56 V
      58 X 59 Y 5A Z
                                                   60 `
57 W
                       5B [
                            5C \
                                  5D ]
                                        5E ^
                                             5F _
                                                         61 a
                 65 e
62 b
      63 c 64 d
                       66 f
                             67 g
                                  68 h
                                        69 i
                                             6A j
                                                   6B k
                                                         6C l
      6E n
           6F o
                       71 q
                            72 r
                                  73 s
                                        74 t
                                             75 u
                                                   76 v
                                                         77 w
6D m
                 70 p
78 x
      79 y
          7A z
                 7B {
                       7C |
                             7D }
                                  7E ~
                                        7F
                                             ok
```

Character strings are displayed in various ways. The first, usable in compilation only, displays a character string delimited by the character " (quote mark):

```
: TITLE ." GENERAL MENU";

TITLE \ displays GENERAL MENU
```

The string is separated from the word ." by at least one space character.

A character string can also be compiled by the word s" and delimited by the character " (quotation mark):

```
: LINE1 ( --- adr len)
S" E..Data logging" ;
```

Executing **LINE1** places the address and length of the string compiled in the definition on the data stack. The display is carried out by the word **TYPE**:

```
LINE1 TYPE \displays E..Data logging
```

At the end of displaying a character string, the line break must be triggered if desired:

```
CR TITLE CR CR LINE1 CR TYPE
\ displays:
\ GENERAL MENU
\
\ E..Data logging
```

One or more spaces can be added at the start or end of the display of an alphanumeric string :

```
SPACE \ displays a space character
10 SPACES \ displays 10 space characters
```

## **String variables**

Alpha-numeric text variables do not exist natively in ESP32forth. Here is the first attempt to define the word **string**:

```
\ define a strvar
: string ( comp: n --- names_strvar | exec: --- addr len )
    create
        dup
        c, \ n is maxlength
        0 c, \ 0 is real length
        allot
    does>
        2 +
        dup 1 - c@
;
```

A character string variable is defined like this:

```
16 string strState
```

Here is how the memory space reserved for this text variable is organized:

```
string content

current length: 0
max length: 16
```

### Text variable management word code

Here is the complete source code for managing text variables:

```
DEFINED? --str [if] forget --str [then] create --str
```

```
\ compare two strings
: $= ( addr1 len1 addr2 len2 --- fl)
  str=
\ define a strvar
: string ( n --- names_strvar )
   create
       dup
                          \ n is maxlength
                         ∖ 0 is real length
       Θ,
       allot
   does>
       cell+ cell+
       dup cell - @
\ get maxlength of a string
: maxlen$ ( strvar --- strvar maxlen )
   over cell - cell - @
\ store str into strvar
: $! ( str strvar --- )
   maxlen$
                           \ get maxlength of strvar
   nip rot min
                          \ keep min length
   2dup swap cell - ! \ store real length
                           \ copy string
   cmove
\ Example:
\ : s1
     s" this is constant string";
\ 200 string test
\ s1 test $!
\ set length of a string to zero
: 0$! ( addr len -- )
   drop 0 swap cell - !
 ;
\ extract n chars right from string
: right$ ( str1 n --- str2 )
```

```
0 \text{ max over min } > r + r@ - r >
\ extract n chars left frop string
: left$ ( str1 n --- str2 )
    0 max min
\ extract n chars from pos in string
: mid$ ( str1 pos len --- str2 )
    >r over swap - right$ r> left$
\ append char c to string
: c+$! ( c str1 -- )
    over >r
    + c!
    r> cell - dup @ 1+ swap !
\ work only with strings. Don't use with other arrays
: input$ ( addr len -- )
    over swap maxlen$ nip accept
    swap cell - !
```

Creating an alphanumeric character string is very simple:

```
64 string myNewString
```

Here we create an alphanumeric variable myNewString which can contain up to 64 characters.

To display the contents of an alphanumeric variable, simply use type. Example:

```
s" This is my first example.." myNewString $!
myNewString type \ display: This is my first example..
```

If we try to save a character string longer than the maximum size of our alphanumeric variable, the string will be truncated:

```
s" This is a very long string, with more than 64 characters. It
can't store complete"
myNewString $!
myNewString type
  \ displays: This is a very long string, with more than 64
characters. It can
```

#### Adding character to an alphanumeric variable

Some devices, the LoRa transmitter for example, require processing command lines containing the non-alphanumeric characters The word c+\$! allows this code insertion:

```
32 string AT_BAND
s" AT+BAND=868500000" AT_BAND $! \ set frequency at 865.5 Mhz
$0a AT_BAND c+$!
$0d AT_BAND c+$! \ add CR LF code at end of command
```

The memory dump of the contents of our alphanumeric variable AT\_BAND confirms the presence of the two control characters at the end of the string:

```
--> AT_BAND dump
--addr--- 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F -----chars----
3FFF-8620 8C 84 FF 3F 20 00 00 00 13 00 00 00 41 54 2B 42 ...? ......AT+B
3FFF-8630 41 4E 44 3D 38 36 38 35 30 30 30 30 0A 0D BD AND=868500000...
0K
```

Here is a clever way to create an alphanumeric variable allowing you to transmit a carriage return, a **CR+LF** compatible with the end of commands for the LoRa transmitter:

#### Vocabularies with ESP32forth

In FORTH, the notion of procedure and function does not exist. FORTH instructions are called WORDS. Like a traditional language, FORTH organizes the words that compose it into VOCABULARIES, a set of words with a common trait.

Programming in FORTH consists of enriching an existing vocabulary, or defining a new one, relating to the application being developed.

#### List of vocabularies

A vocabulary is an ordered list of words, searched from most recently created to least recently created. The search order is a stack of vocabularies. Running a vocabulary name replaces the top of the search order stack with that vocabulary.

To see the list of different vocabularies available in ESP32forth, we will use the word voclist:

```
--> internals voclist \ displays
registers
ansi
editor
streams
tasks
rtos
sockets
Serial
ledc
SPIFFS
SD_MMC
Wireless
Wire
ESP
structures
internalized
internals
FORTH
```

This list is not limited. Additional vocabularies may appear if we compile certain extensions.

The main vocabulary is called **FORTH**. All other vocabularies are attached to the **FORTH vocabulary**.

## List of vocabulary contents

To see the content of a vocabulary, we use the word **vlist** having previously selected the appropriate vocabulary :

```
vlist sockets
```

Select sockets vocabulary and displays its contents:

```
--> sockets vlist\displays:
ip. ip# ->h_addr ->addr! ->addr@ ->port! ->port@ sockaddr l, s, bs, SO_REUSEADDR
SOL_SOCKET sizeof(sockaddr_in) AF_INET SOCK_RAW SOCK_DGRAM SOCK_STREAM
socket setsockopt bind listen connect sockaccept select poll send sendto
sendmsg recv recvfrom recvmsg gethostbyname errno sockets-builtins
```

Selecting a vocabulary gives access to the words defined in this vocabulary.

For example, the word **voclist** is not accessible without first invoking the vocabulary **internals**.

The same word can be defined in two different vocabularies and have two different actions: the word l is defined in both asm and editor vocabularies.

This is even more obvious with the word server , defined in the httpd , telnetd and web-interface vocabularies.

### **Using vocabulary words**

To compile a word defined in a vocabulary other than FORTH, there are two solutions. The first solution is to simply call this vocabulary before defining the word which will use words from this vocabulary.

Here, we define a word **serial2-type** which uses the word **Serial2.write defined** in the serial vocabulary:

```
serial \ Selection vocabulary Serial
: serial2-type (an --)
Serial2.write drop
;
```

The second solution allows you to integrate a single word from a specific vocabulary:

```
: serial2-type (an --)
[ serial ] Serial2.write [ FORTH ] \ compile word from vocabulary
serial
drop
;
```

The selection of a vocabulary can be carried out implicitly from another word in the FORTH vocabulary.

## **Chaining of vocabularies**

The order in which a word is searched in a vocabulary can be very important. In the case of words with the same name, we remove any ambiguity by controlling the search order in the different vocabularies that interest us.

Before creating a chain of vocabularies, we restrict the search order with the word only:

```
asm xtensa
order\display: xtensa >> asm >> FORTH
only
order\display: FORTH
```

We then duplicate the chaining of vocabularies with the word also:

```
only
order\display: FORTH
asm also
order\display: asm >> FORTH
xtensa
order\display: xtensa >> asm >> FORTH
```

Here is a compact chaining sequence:

```
only asm also xtensa
```

The last vocabulary thus chained will be the first explored when we execute or compile a new word.

```
only
order\display: FORTH
also ledc also serial also SPIFFS
order \ displays: SPIFFS >> FORTH
\ Serial >> FORTH
\ ledc >> FORTH
\ FORTH
```

The search order, here, will start with the SPIFFS vocabulary , then Serial , then ledc and finally the FORTH vocabulary :

- if the searched word is not found, there is a compilation error;
- if the word is found in a vocabulary, it is this word that will be compiled, even if it is defined in the following vocabulary.

# Adapt breadboards to ESP32 board

### **Breadboards for ESP32**

You have just received your ESP32 cards. And first bad surprise, this card fits very poorly on the test board :




There is no breadboard specifically suited to ESP32 boards.


### **Build a breadboard suitable for the ESP32 board**

We're going to build our own test plate. For this, two identical test plates must be available.


On one of breadboard, we will remove a power line. To do this, use a cutter and cut from below. You should be able to separate this power line like this:

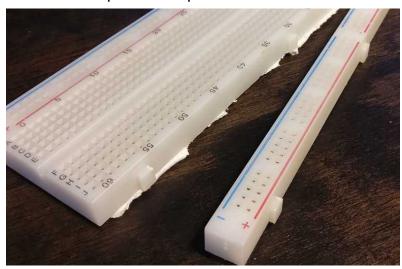

We can then reassemble the entire breadboard with this board. You have rafters on the sides of the test plates to connect them together:

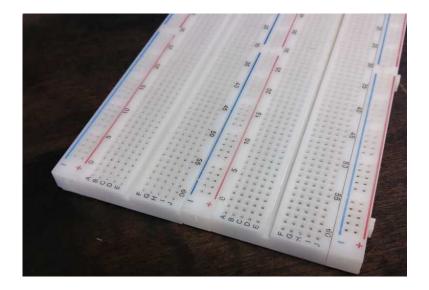

And there you go! We can now install our ESP32 card:

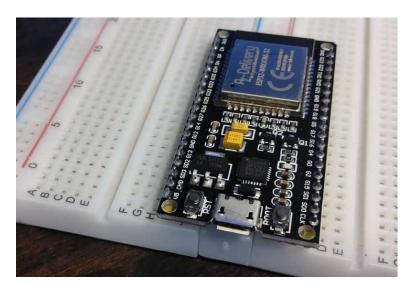

The I/O ports can now be used without difficulty.

# **Alimenter la carte ESP32**

# Choix de la source d'alimentation


Nous allons voir ici comment alimenter une carte ESP32. Le but est de donner des solutions pour exécuter les programmes FORTH compilés par ESP32forth.

# Alimentation par le connecteur mini-USB

C'est la solution la plus simple. On remplace l'alimentation provenant du PC par une source différente:

- un bloc d'alimentation secteur comme ceux utilisés pour recharger un téléphone mobile;
- une batterie de secours pour téléphone mobile (power bank).

Ici, on alimente notre carte ESP32 avec une batterie de secours pour appareils mobiles.

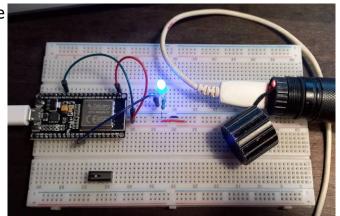


### Alimentation par le pin 5V


La deuxième option consiste à connecter une alimentation externe non régulée à la broche 5 V et à la masse. Tout ce qui se situe entre 5 et 12 volts devrait fonctionner.

Mais il est préférable de maintenir la tension d'entrée à environ 6 ou 7 Volts pour éviter de perdre trop de puissance sous forme de chaleur sur le régulateur de tension.

Voici les bornes permettant une alimentation externe 5-12V:

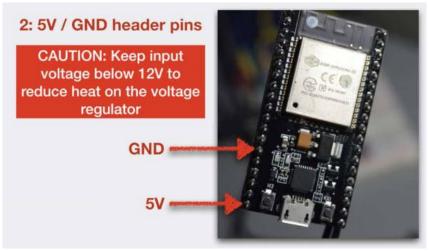

Pour exploiter l'alimentation 5V, il faut ce matériel:

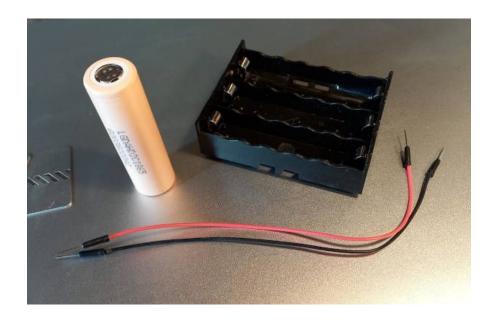

- deux batteries lithium 3,7V
- un support batterie
- deux fils dupont

On soude une extrémité de chaque fil dupont aux bornes du support batteries. Ici, notre support accepte trois batteries. Nous n'exploiterons qu'un seul logement à batterie. Les batteries sont montées en série.

Une fois les fils dupont soudés, on installe la batterie et on vérifie que la polarité de sortie est bien respectée:



Maintenant, on peut alimenter notre carte ESP32 par le pin 5V.

**ATTENTION**: la tension batterie doit être entre 5 à 12 Volts.

# Démarrage automatique d'un programme

Comment être certain que la carte ESP32 fonctionne bien une fois alimentée par nos batteries?

La solution la plus simple est d'installer un programme et de paramétrer ce programme pour qu'il démarre automatiquement à la mise sous tension de la carte ESP32. Compilez ce programme:

```
18 constant myLED
0 value LED_STATE
: led.on ( -- )
    HIGH dup myLED pin
   to LED_STATE
: led.off ( -- )
   LOW dup myLED pin
   to LED_STATE
timers also \ select timers vocabulary
: led.toggle ( -- )
   LED_STATE if
        led.off
    else
        led.on
   then
    0 rerun
  ;
: led.blink ( -- )
    myLED output pinMode
    ['] led.toggle 500000 0 interval
    led.toggle
startup: led.blink
bye
```

Installez une LED sur le pin G18.

Coupez l'alimentation et rebranchez la carte ESP32. Si tout s'est bien passé, la LED doit clignoter au bout de quelques secondes. C'est le signe que le programme s'exécute au démarrage de la carte ESP32.

Débranchez le port USB et branchez la batterie. La carte ESP32 doit démarrer et la LED clignoter.

Tout le secret tient dans la séquence **startup: led.blink**. Cette séquence fige le code FORTH compilé par ESP32forth et désigne le mot **led.blink** comme mot à exécuter au démarrage de ESP32forth une fois la carte ESP32 sous tension.


### Install and use the Tera Term terminal on Windows

#### **Install Tera Term**

The English page for Tera Term is here:

https://ttssh2.osdn.jp/index.html.en

Go to the download page, get the exe or zip file:

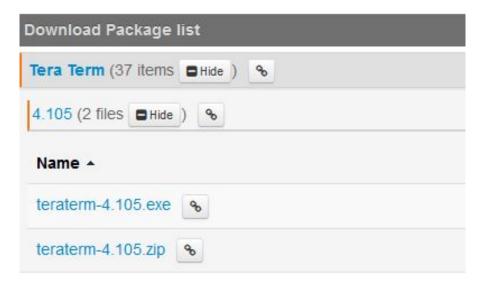


Install Tera Term. Installation is quick and easy.

# **Setting up Tera Term**


To communicate with the ESP32 card, you must adjust certain parameters:

click on Configuration -> serial port

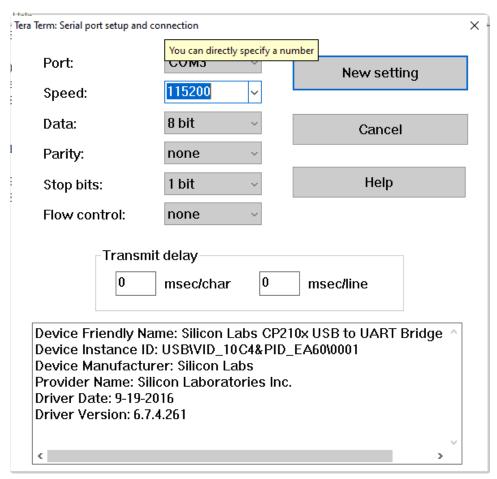


#### For comfortable viewing:

• click on Configuration -> window

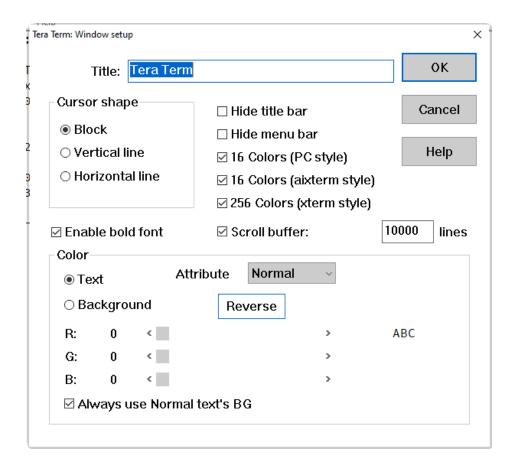

#### For readable characters:

• click on Configuration -> font

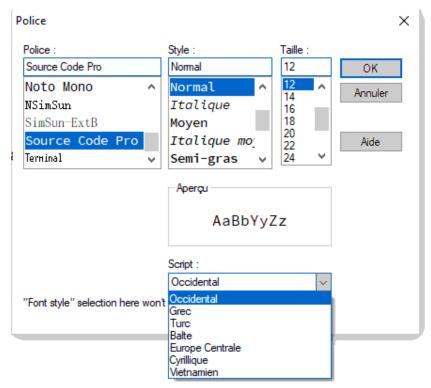

To find all these settings the next time you launch the Tera Term terminal, save the configuration:

- click on Setup -> Save setup
- accept the name TERATERM.INI.


## **Using Tera Term**

Once configured, close Tera Term.

Connect your ESP32 board to an available USB port on your PC.

Relaunch Tera Term, then click *file -> new connection* 

Select the serial port:

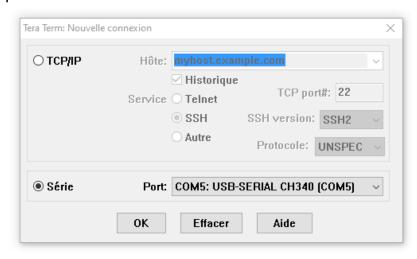

Page 68

If everything went well, you should see this:




## **Compile source code in Forth language**

First of all, let's remember that the FORTH language is on the ESP32 board! FORTH is not on your PC. Therefore, you cannot compile the source code of a program in FORTH language on the PC.

To compile a program in FORTH language, you must first open a source file on the PC with the editor of your choice.

Then, we copy the source code to compile. Here, open source code with Wordpad:

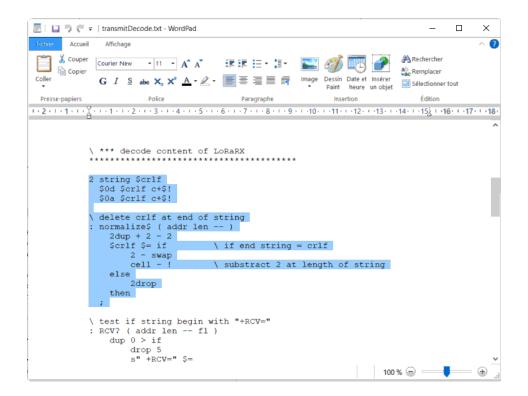

The source code in FORTH language can be composed and edited with any text editor: notepad, PSpad, Wordpad..

Personally I use the Netbeans IDE. This IDE allows you to edit and manage source codes in many programming languages.

Select the source code or portion of code that interests you. Then click copy. The selected code is in the PC edit buffer.

Click on the Tera Term terminal window. Make Paste:

Simply validate by clicking OK and the code will be interpreted and/or compiled.

To run compiled code, simply type the word FORTH to launch, from the Tera Term terminal.

# Management of source files by blocks

#### The blocks

Here a block on an old computer:

```
BIK# 2 of 23; File=Forth Blocks

(Finger Painting Window Definition)

NEW.WINDOW SHEET

"Finger Paint Window" SHEET W.TITLE

60 5 200 300 SHEET W.BOUNDS

SIZE.BOX CLOSE.BOX + SHEET W.ATTRIBUTES

SYS.WINDOW SHEET W.BEHIND

SHEET ADD.WINDOW
```

A block is a storage space whose unit has 16 lines of 64 characters. The size of a block is therefore 16x64=1024 bytes. It's exactly the size of a kilobyte!

# Open a block file

A file is already open by default when ESP32forth starts.

blocks.fb file.

If in doubt, run default-use.

To find out what's in this file, use the editor commands by first typing editor .

Here are our first commands to know to manage the content of blocks:

- 1 lists the contents of the current block
- n selects the next block
- p selects the previous block

ATTENTION: a block always has a number between 0 and n. If you end up with a negative block number, it throws an error.

#### **Edit the contents of a block**

Now that we know how to select a particular block, let's see how to insert source code in FORTH language...

One strategy is to create a source file on your computer using a text editor. You will then just need to copy/paste your source code by line into the block files.

Here are the essential commands for managing the contents of a block:

- wipe empties the contents of the current block
- d deletes line n. The line number must be in the range 0..14. The following lines move upwards. Example: 3 D erases the contents of line 3 and brings up the contents of lines 4 to 15.
- e erases the contents of line n. The line number must be in the range 0..15. The other lines do not go up.
- a inserts a line n. The line number must be in the range 0..14. The lines located after the inserted line move back down. Example: 3 A test inserts test in line 3 and moves down the contents of lines 4 to 15.
- r replaces the contents of line n. Example: 3 R test replaces the contents of line 3
   with test

Here is our block 0 currently being edited:

```
Block 0
reate sintab \setminus 0...90 Grad, Index in <math>Grad
        0175 ,
                0349 ,
0000 ,
                         0523 ,
                                 0698 ,
        1045 ,
                1219 ,
                         1392 ,
        1908 ,
                2079 ,
                         2250 ,
                                 2419
1736
                         3090
2588
        2756
                2924
                                 3256
        3584 ,
                3746
3420
                         3907
                                 4067
                         4695 ,
        4384 ,
                4540 ,
                                 4848
4226
                         5446 ,
5000
        5150 , 5299 ,
                                 5592
                         6157 ,
5736
        5878 .
                6018 .
                                 6293
  14
   10 R 6428 , 6561 , 6691 , 6820 , 6947 ,
CTRL-A Z for help | 115200 8N1 | NOR | Minicom 2.7.1 | VT102 | Déconr
```

At the bottom of the screen, line 10 R 6428, 6561, ..... is being integrated into our block at line 10.

You notice that line 0 has no content. This generates an error when compiling the FORTH code. To fix this, simply type **0** R followed by two spaces.

With a little practice, in a few minutes, you will have inserted your FORTH code into this block.

Do the same for the following blocks if necessary. When moving to the next block, you force the contents of the blocks to be saved by typing flush.

# **Compiling block contents**

Before compiling the contents of a block file, we will check that their contents are well saved. For that:

- type flush , then unplug the ESP32 board;
- wait a few seconds and reconnect the ESP32 board;
- type editor and 1. You must find your block 0 with the content that you edited.

To compile the content of your blocks, you have two words:

- **load** preceded by the number of the block whose content we want to execute and/or compile. To compile the contents of our block 0, we will execute **0 load**;
- thru preceded by two block numbers will execute and/or compile the contents of the blocks as if we were executing a succession of load words. Example: 0 2 thru executes and/or compiles the contents of blocks 0 to 2.

The speed of execution and/or compilation of block content is almost instantaneous.

## **Practical step-by-step example**

We will see, with a practical example, how to insert source code in block 1. We take a code ready to be integrated into our block:

```
1 list
editor
0 \text{ r} \setminus \text{tools for REGISTERS} definitions and manipulations
1 r : mclr { mask addr -- } addr @ mask invert and addr ! ;
2 r : mset { mask addr -- } addr @
                                        mask or addr!;
 3 r : mtst \{ mask addr -- x \} addr @
                                        mask and ;
 4 r : defREG: \ define a register, similar as constant
         create ( addr1 -- <name> ) ,
 5 r
         does> ( -- regAddr )
 6 r
 7 r : .reg ( reg -- ) \ display reg content
 8 r
        base @ >r binary @ <#
 9 r
         4 for aft 8 for aft # then next
```

```
10 r bl hold then next #>
11 r cr space ." 33222222 22221111 111111100 00000000"
12 r cr space ." 10987654 32109876 54321098 76543210"
13 r cr type r> base ! ;
14 r : defMASK: create ( mask0 position -- ) lshift ,
15 r does> ( -- mask1 ) @ ;
save-buffers
```

Simply copy/paste parts of the code above and run this code through ESP32 Forth:

- 1 list to select and see what block 1 contains
- editor to select vocabulary editor
- copy the lines n r.... in packs of three and run them
- save-buffers hard-saves code in block file

Turn off the ESP32 board. Restart it. If you type 1 list you should see the code edited and saved.

To compile this code, simply type 1 load.

#### **Conclusion**

The available file space for ESP32forth is close to 1.8MB. You can therefore worry-free manage hundreds of blocks for source files in FORTH language. It is recommended to install source codes of stable code parts. Thus, during the program development phase, it will be much easier to integrate into your code in the development phase:

```
2 5 thru \ integrate pwm commands for motors instead of systematically reloading this code via serial line or WiFi.
```

The other advantage of blocks is to allow the on-site embedding of parameters, data tables, etc. which can then be used by your programs.

# **Editing source files with VISUAL Editor**

#### **Edit a FORTH source file**

To edit a FORTH source file with ESP32forth, we will use the visual editor.

To edit a dump.fs file , proceed like this from the terminal connected to an ESP32 card containing ESP32forth:

visual edit /spiffs/dump.fs

The full **DUMP** code is available here:

https://github.com/MPETREMANN11/ESP32forth/blob/main/tools/dumpTool.txt

The word edit is followed by the directory where the source files are stored:

- if the file does not exist, it is created;
- if the file exists, it is retrieved in the editor.

Note the name of the file you created.

**fs** as the file extension , for **F** orth **S** ource.

### **Editing the FORTH code**

In the editor, move the cursor with the left-right-up-down arrows available on the keyboard.



The terminal refreshes the display each time the cursor is moved or the source code is modified.

#### To exit the editor:

- CTRL-S: saves the contents of the file currently being edited
- CTRL-X : exits editing:
  - N: without saving file changes
  - Y: with saving of changes

### **Compiling file contents**

Compiling the contents of our **dump.fs file** is done like this:

```
include /spiffs/dump.fs
```

Compiling is much faster than via the terminal.

The source files embedded in the ESP32 card with ESP32forth are persistent. After turning off the power and reconnecting the ESP32 card, the saved file remains available immediately.

You can define as many files as necessary.

It is therefore easy to integrate into the ESP32 card a collection of tools and routines from which you can draw as needed.

# The SPIFFS file system

ESP32Forth contains a rudimentary file system on internal Flash memory. The files are accessible via a serial interface called SPIFFS for Serial Peripheral Interface Flash File System.

Even though the SPIFFS file system is simple, it considerably increases the flexibility of your developments with ESP32Forth:

- manage configuration files
- integrate software extensions accessible on request
- modularize developments into reusable functional modules

And many other uses that we will let you discover...

### Access to the SPIFFS file system

To compile the contents of a source file edited by visual edit, type:

```
include /spiffs/dumpTool.fs
```

The word **include** must always be used from the terminal.

To see the list of SPIFFS files, use the word ls:

```
ls /spiffs/
\ displays:
\ dumpTool.fs
```

Here, the **dumpTool.fs file** has been saved. For SPIFFS, file extensions are irrelevant. File names must not contain space characters or the / character.

Let's edit and save a new myApp.fs file with visual editor. Let's run ls again:

```
ls /spiffs/
\ displays:
\ dumpTool.fs
\ myApp.fs
```

The SPIFFS file system does not manage subfolders like on a Linux computer. To create a pseudo directory, simply indicate it when creating a new file. For example, let's edit the **other/myTest.fs file**. Once edited and saved, let's run **ls**:

```
ls /spiffs/
\ displays:
```

```
\ dumpTool.fs
\ myApp.fs
\ other/myTest.fs
```

If you want to view only the files in this **other** pseudo directory , you must follow **/spiffs/** with the name of this pseudo directory :

```
ls /spiffs/other
\ displays:
\ myTest.fs
```

There is no option to filter file names or pseudo directories.

## **Handling files**

To completely delete a file, use the word rm followed by the name of the file to be deleted:

```
rm /spiffs/other/myTest.fs
ls /spiffs/
\ poster:
\dumpTool.fs
\myApp.fs
```

To rename a file, use the word mv:

```
mv /spiffs/myApp.fs /spiffs/main.fs
ls /spiffs/
\ displays:
\ dumpTool.fs
\ main.fs
```

To copy a file, use the word cp:

```
cp /spiffs/main.fs /spiffs/mainTest.fs
ls /spiffs/
\ displays:
\ dumpTool.fs
\ main.fs
\ mainTest.fs
```

To see the contents of a file, use the word cat:

```
cat /spiffs/dumpTool.fs
\ displays contents of dumpTool.fs
```

To save the contents of a string to a file, act in two phases:

- create a new file with touch
- save string contents with dump-file

```
touch /spiffs/mTest,fs \ creates new mtest,fs file
ls /spiffs/ \ displays:
\ dumpTool.fs
\ main.fs
\ mainTest.fs
\ mTests
\ save string "Insert my text into mTest" in mTest
r| ." Insert my text into mTest" | s" /spiffs/mTest" dump-file
include /spiffs/mTest \ displays: Insert my text in mTest
```

## Organize and compile your files on the ESP32 card

We will see how to manage files for an application being developed on an ESP32 board with ESP32forth installed on it.

It is agreed that all files used are in ASCII text format.

The following explanations are given as advice only. They come from a certain experience and aim to facilitate the development of large applications with ESP32forth.

#### **Editing and transmitting source files**

All the source files for your project are on your computer. It is advisable to have a subfolder dedicated to this project. For example, you are working on an SSD1306 OLED display. So you create a directory named SSD1306.

Regarding file name extensions, we recommend using the **fs** extension .

Editing files on a computer is carried out with any text file editor.

In these source files, do not use any characters not included in the ASCII code characters. Some extended codes can disrupt program compilation.

These source files will then be copied or transferred to the ESP32 card via the serial link and a terminal type program :

- by copy/pasted using visual on ESP32forth, to be reserved for small files;
- with a specific procedure which will be detailed later for important files.

### **Organize your files**

In the following, all our files will have the extension **fs** .

Let's start from our SSD1306 directory on our computer.

The first file we will create in this directory will be the **main.fs** file. This file will contain the calls to load all the other files of our application under development.

Example of content of our main.fs file:

```
\ OLED SSD1306 128x32 dev and display tests s" /SPIFFS/config.fs" included
```

In development phase, the contents of this **main.fs file** will be loaded manually by running **include** like this:

```
include /spiffs/main.fs
```

This causes the contents of our **main.fs file to be executed** . Loading of other files will be executed from this **main.fs file** . Here we load the **config.fs file** of which here is an extract :

**config.fs** file we will put all the constant values and various parameters used by the other files.

Our next file will be **SSD10306commands.fs** . Here's how to load its contents from **main.fs** :

```
\ OLED SSD1306 128x32 dev and display tests
s" /spiffs/config.fs" included
s" /spiffs/SSD10306commands.fs" included
```

The contents of the **SSD10306commands.fs** file are almost 230 lines of code. It is not possible to copy the contents of this file line by line into the ESP32forth visual editor. here is a method to copy and save the contents of this large file on ESP32forth in one go.

## Transfer a large file to ESP32forth

To enable this large file transmission, compile this code in ESP32forth:

```
: noType
2drop ;
visual
```

```
: xEdit
  ['] noType is type
  edit
  ['] default-type is type
;
```

This very short Forth code allows you to transfer a very long FORTH program from the editor on PC to a file on the ESP32 card:

- compile with ESP32forth, the FORTH code, here the words noType and xEdit
- open the program on your PC to transfer to a file on the ESP32 card
- add the line at the top of the program allowing this fast transfer xEdit /spiffs/SSD10306commands.fs
- copy all the code of your edited program to your PC,
- pass into the terminal connected to ESP32forth
- copy your code

If all goes well, nothing should appear on the terminal screen. Wait a few seconds.

Next, type: CTRL-X, then press "Y"

You should regain control.

Check the presence of your new file: ls /spiffs/

You can now compile the contents of your new file.

#### **Conclusion**

Files saved in the ESP32forth SPIFFS file system are permanently available.

If you take the ESP32 board out of service and then plug it back in, the files will be available immediately.

The content of the files can be modified in situ with visual edit .

This convenience will make developments much faster and easier.

# Managing a traffic light with ESP32

## **GPIO** ports on the ESP32 board

GPIO ports (General Purpose Input/Output) are input-output ports widely used in the world of microcontrollers.

The ESP32 board comes with 48 pins having multiple functions. Not all pins are used on ESP32 development boards, and some pins cannot be used.

There are many questions about how to use ESP32 GPIOs. Which connectors should you use? Which connectors should you avoid using in your projects?

If we look under a magnifying glass at an ESP32 card, we see this:




Each connector is identified by a series of letters and numbers, here from left to right in our photo: G22 TXD RXD G21 GND G19 G18, etc...

The connectors that interest us for this handling are prefixed by the letter G followed by one or two numbers. For example, G2 corresponds to GPIO 2.

Defining and operating a GPIO connector in output mode is quite simple.

# **Mounting the LEDs**

The assembly is quite simple and only one photo is enough:

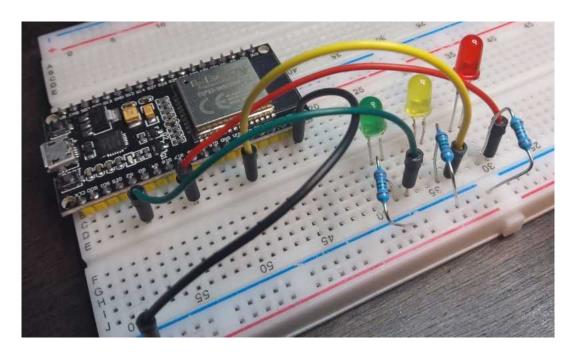

- Green LED connected to G2 green wire
- Yellow LED connected to G21 yellow wire
- Red LED connected to G17 red wire
- black wire connected to GND

Our code uses the word **include** followed by the file to load.

We define our LEDs with defPin:

Many programmers have the bad habit of naming connectors by their number. Example:

```
17 defPin: pin17
```

Or

```
17 defPin: GPI017.
```

To be effective, you must name the connectors by their function. Here we define the **ledRED** or **ledGREEN** connectors .

For what? Because the day you need to add accessories and release for example the G21 connector, simply redefine 21 defPIN: ledYELLOW with the new connector number. The rest of the code will be unchanged and usable.

## **Management of traffic lights**

Here is the part of code that controls our LEDs in our traffic light simulation:

```
\ traficLights execute one light cycle
: trafficLights ( ---)
   high ledGREEN pin
high ledYELLOW pin
high ledRED pin
                             3000 ms
                                         low ledGREEN
                                                        pin
                            800 ms
3000 ms
                                        low ledYELLOW
                                                        pin
                                        low ledRED
                                                        pin
\ classic traffic lights loop
: lightsLoop ( ---)
    LEDinit
    begin
        trafficLights
    key? until
\ german trafic light style
: Dtraffic ( ---)
    high ledGREEN
                            3000 ms
                                       low ledGREEN
                    pin
                                                       pin
    high ledYELLOW pin
                            800 ms
                                       low ledYELLOW pin
    high ledRED
                            3000 ms
                    pin
    ledYELLOW high
                      800 ms
    \ simultaneous red and yellow ON
                    pin \ simultaneous red and yellow OFF
    high ledRED
    high ledYELLOW pin
\ german traffic lights loop
: DlightsLoop ( ---)
    LEDinit
    begin
        Dtraffic
    key? until
```

## **Conclusion**

This traffic light management program could perfectly have been written in C language. But the advantage of the FORTH language is that it gives control, via the terminal, to analyze, debug and modify functions very quickly (in FORTH we say words).

Managing traffic lights is an easy exercise in C language. But when the programs become a little more complex, the compilation and upload process quickly becomes tedious.

Simply act via the terminal and simply copy/paste any fragment of FORTH language code for it to be compiled and/or executed.

If you are using a terminal program to communicate with the ESP32 board, simply type <code>DlightsLoop</code> or <code>lightsLoop</code> to test how the program works. These words use a conditional loop. Simply press a key on the keyboard and the word stops playing at the end of the loop.

# **Hardware interrupts with ESP32forth**

### **Interruptions**

When we want to manage external events, a push button for example, we have two solutions :

- test the state of the button as regularly as possible, through a loop. We will act according to the state of this button.
- use an interrupt. We assign the execution code to an interrupt attached to a pin. The button is connected to this pin and the state change will execute this word.

The interrupt solution is the most elegant. It allows you to relieve the main program by avoiding monitoring the button in a loop.

In his ESP32forth documentation, Brad NELSON gives a simple example of interrupt handling:

```
17 input pinMode
: test ." pinvalue: " 17 digitalRead . cr ;
' test 17 pinchange
```

Except that this example, as written, has a good chance of not working. We will see why and provide the elements to make it work.

### Mounting a push button

The button is connected as an input to the 3.3V power supply of the ESP32 board.

The push button output is connected to the GPIO17 pin. That's all.

For Brad NELSON's example to be functional, you must select the interrupts
vocabulary before configuring the interrupt using pinchange. Along the way, we will define the button constant:

```
17 constant button
button input pinMode
: test ." pinvalue: "
   button digitalRead . cr
;
interrupts
' test button pinchange
forth
```

It works, but there is an unexpected effect which causes the interrupt to be triggered unexpectedly:

```
pinvalue: 0
pinvalue: 1
pinvalue: 1
pinvalue: 0
pinvalue: 0
pinvalue: 0
pinvalue: 1
pinvalue: 1
pinvalue: 1
pinvalue: 1
pinvalue: 1
pinvalue: 0
pinvalue: 1
```

The hardware solution would consist of putting a high value resistor at the button output and connected to GND.

#### Software consolidation of the interrupt

In the ESP32 card, you can activate a resistor on any GPIO pin. This activation is carried out by the word <code>gpio\_pulldown\_en</code>. This word accepts as a parameter the GPIO pin number whose resistance must be activated. In return this word returns 0 if the action was successful, an error code otherwise:

```
17 constant button
button input pinMode
: test ." pinvalue: "
    button digitalRead . cr
;
interrupts
button gpio_pulldown_en drop
' test button pinchange
forth
```

The result of executing the interrupt is significantly better:

```
ok button digitalRead . cr
ok ;
ok interrupts
ok button gpio_pulldown_en drop
ok ' test button pinchange
ok forth
--> pinvalue: 1
pinvalue: 0
pinvalue: 0
pinvalue: 0
pinvalue: 0
pinvalue: 0
```

At each change of state, we have an interruption. On the screenshot above, each state change displays pinvalue: 1 then pinvalue: 0 .

It is possible to take into account an interruption on the rising edge alone. This is possible by indicating :

```
button GPIO_INTR_POSEDGE gpio_set_intr_type drop
```

The word gpio\_set\_intr\_type accepts these parameters:

- GPIO\_INTR\_ANYEDGE to manage rising or falling edge interrupts
- GPIO\_INTR\_NEGEDGE to handle interrupts on falling edge only
- GPIO\_INTR\_POSEDGE to manage interrupts on rising edge only
- **GPIO\_INTR\_DISABLE** to disable interrupts

Complete FORTH code with rising edge detection:

```
17 constant button
0 constant GPIO_PULLUP_ONLY
button input pinMode
: test ." pinvalue: "
    button digitalRead . cr
;
interrupts
button gpio_pulldown_en drop
button GPIO_INTR_POSEDGE gpio_set_intr_type drop
' test button pinchange
forth
```

#### **Further information**

For ESP32, all GPIO pins can be used as interrupt except GPIO6 to GPIO11.

Do not use pins colored orange or red. Your program might behave unexpectedly when using these.



# **Using the KY-040 rotary encoder**


#### **Encoder Overview**

To vary a signal, we have several solutions:


- a variable resistor in a potentiometer
- two buttons managing the variation by software
- a rotary encoder

The rotary encoder is an interesting solution. It can be made to act as a potentiometer, with the advantage of not having a start and end stop.


Its principle is very simple. Here are the signals emitted by our rotary encoder:

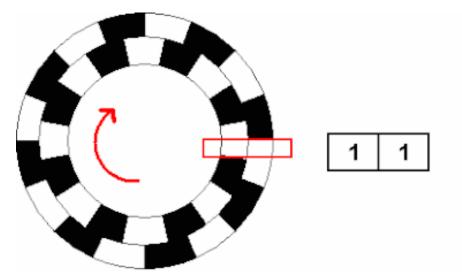

Here is our encoder:

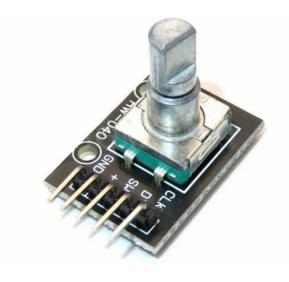

#### Internal functioning diagram:

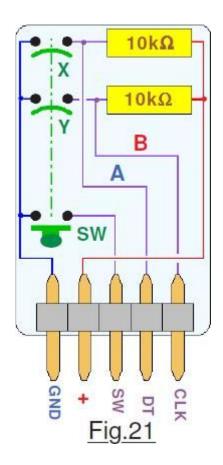


According to this diagram, two terminals interest us:

- A (DT) -> switch
- B (CLK) -> switch Y

This encoder can be powered with 5V or 3.3V. This suits us, because the ESP32 card has a 3.3V output.

## Mounting the encoder on the breadboard

Wiring our encoder to the ESP32 board only requires 4 wires:

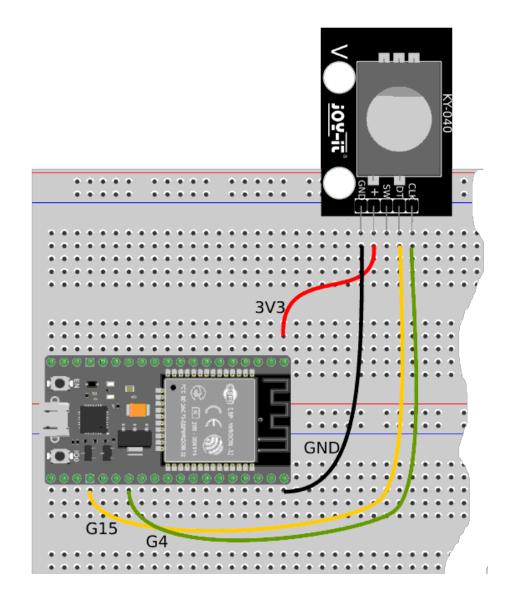


**PLEASE NOTE**: the position of pins G4 and G15 may vary depending on the version of your ESP32 card.

# **Analysis of encoder signals**

As our encoder is connected, each terminal A or B receives a voltage, here 3.3V, the intensity of which is limited by a resistor of 10Kohms.

Analysis of the signal on terminal G15 clearly shows the presence of the 3.3V voltage:

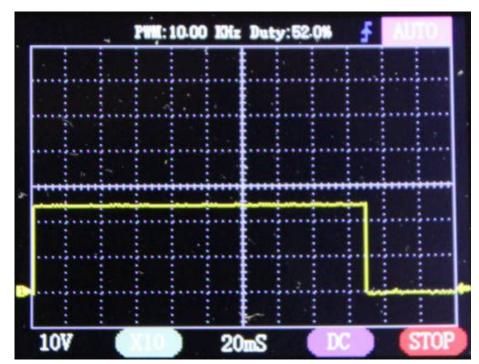

In this signal capture, the low level on terminal G15 appears when operating the encoder control rod. When idle, the signal on terminal G15 is at high level.

This changes everything, because, at the programming level, we must process the G15 interrupt as a falling edge.

# **Encoder programming**

The encoder will be managed by interrupt. Interrupts trigger the program only if a particular signal reaches a well-defined level.

We will manage a single interrupt on the GPIO G15 terminal:

```
15 input pinmode \ G15 as an input
15 gpio_pulldown_en drop \ Enable pull-down on GPIO 15
intG15enable
;
```

In the word pinsInit , we initialize the GPIO pins G4 and G15 as input. Then we determine the interrupt mode of G15 on falling edge with 15 GPIO\_INTR\_POSEDGE gpio\_set\_intr\_type drop .

#### **Testing the encoding**

This part of code is not to be used in a final assembly. It is only used to check that the encoder is correctly connected and working properly:

```
: test ( -- )
    cr ." PIN: "
    cr ." - G15: " 15 digitalRead .
    cr ." - G04: " 04 digitalRead .
    ;

pinsInit \ initialise G4 and G15
' test 15 pinchange
```

It is the 'test 15 pinchange' sequence which tells ESP32Forth to execute the test code if an interrupt is triggered by action of terminal G15.

Result of the action on our encoder. We only kept the results of actions arriving at the stop, once counterclockwise, then clockwise:

```
PIN:
- G15: 1 \ reverse clockwise turn
- G04: 1
PIN:
- G15: 0 \ clockwise turn
- G04: 1
```

#### Increment and decrement a variable with the encoder

Now that we have tested the encoder by hardware interrupt, we will be able to manage the content of a variable. To do this, we define our variable KYVar and the words allowing us to modify its content:

```
0 value KYvar \ content is incremented or decremented
\ increment content of KYvar
: incKYvar ( n -- )
     1 +to KYvar
;
\ decrement content of KYvar
: decKYvar ( n -- )
```

```
-1 +to KYvar
;
```

The word inckyvar increments the content of Kyvar . The word decKyvar decrements the content of Kyvar .

We test the modification of the content of the variable **KYvar** via this word **testIncDec** defined as follows:

```
\ used by interruption when G15 activated
: testIncDec ( -- )
   intG15disable
   15 digitalRead if
        04 digitalRead if
        decKYvar
        else
            incKYvar
        then
        cr ." KYvar: " KYvar .
   then
   1000 0 do loop \ small wait loop
   intG15enable
   ;

pinsInit
' testIncDec 15 pinchange
```

Turning the encoder control to the right (clockwise) will increment the contents of the KYvar variable. A rotation to the left decrements the content of the KYvar variable:

```
pinsInit
' testIncDec 15 pinchange
-->
KYvar: 1\rotate Clockwise
KYvar: 2
KYvar: 3
KYvar: 4
KYvar: 3 \ rotate Contra Clockwise
KYvar: 2
KYvar: 1
KYvar: 1
KYvar: 0
KYvar: -1
```

# Flashing of an LED per timer

### **Getting started with FORTH programming**

Any beginner in programming knows this more than classic example very well: the flashing of an LED. Here is the source code, in C language for ESP32:

```
* This ESP32 code is created by esp32io.com
* This ESP32 code is released in the public domain
* For more detail (instruction and wiring diagram),
 * visit https://esp32io.com/tutorials/esp32-led-blink
// the code in setup function runs only one time when ESP32 starts
void setup() {
 // initialize digital pin GIOP18 as an output.
 pinMode(18, OUTPUT);
}
// the code in loop function is executed repeatedly infinitely
void loop() {
 digitalWrite(18, HIGH); // turn the LED on
                        // wait for 500 milliseconds
 delay(500);
 digitalWrite(18, LOW); // turn the LED off
                         // wait for 500 milliseconds
  delay(500);
```

In FORTH language, it's not much different:

```
18 constant myLED

: led.blink ( -- )
   myLED output pinMode
   begin
     HIGH myLED pin
     500 ms
   LOW myLED pin
   500 ms
   key? until
;
```

If you compile this FORTH code with ESP32forth installed on your ESP32 board and type led.blink from the terminal, the LED connected to the GPIO18 port will blink.

To inject code written in C language, it will be necessary to compile it on the PC, then upload it to the ESP32 card, operations which take some time. Whereas with the FORTH language, the compiler is already operational on our ESP32 board. The compiler will compile the program written in FORTH language in two to three seconds and allow its

immediate execution by simply typing the word containing this code, here **led.blink** for our example.

In FORTH language, we can compile hundreds of words and test them immediately, all individually, which is not possible at all in the C language.

We factor our FORTH code like this:

```
18 constant myLED
: led.on ( -- )
   HIGH myLED pin
;
: led.off ( -- )
   LOW myLED pin
;
: waiting ( -- )
   500 ms
;
: led.blink ( -- )
   myLED output pinMode
   begin
    led.on   waiting
   led.off   waiting
   key? until
;
```

From the terminal, we can simply turn the LED on by typing led.on and turn it off by typing led.off. Execution of led.blink remains possible.

The aim of factorization is to divide a complex and difficult to read function into a set of simpler and more readable functions. With FORTH, factorization is recommended, on the one hand to allow easier debugging, and on the other hand to allow the reuse of factored words.

These explanations may seem trivial to those who know and master the FORTH language. This is far from obvious for people programming in C, who are forced to group function calls into the general loop() function.

Now that this is explained, we will forget everything! Because...

### Flashing by TIMER

We will forget everything that was explained previously. Because this LED blinking example has a huge downside. Our program does just that and nothing else. In short, it's

a real waste of hardware and software to flash an LED on our ESP32 card. We will see a very different way of producing this flashing, in FORTH language exclusively.

ESP32forth has two words that will be very useful to manage this LED flashing: interval and rerun .

But before discussing how these two words work, let's take a look at the notion of interruption...

#### **Hardware and software interrupts**

If you plan to manage microcontrollers without worrying about hardware or software interrupts, then abandon computer development for ESP32 boards!

You have the right to start and not experience interruptions. And we're going to explain interrupts to you and how to use timer interrupts.

Here is a non-computer example of what an interrupt is:

- you are expecting an important package;
- you go down to the gate of your home every minute to see if the postman has arrived.

In this scenario, you actually spend your time going down, looking, back up. In fact, you hardly have time to do anything else...

In reality, this is what should happen:

- you stay in your home;
- the postman arrives and rings the doorbell;
- you go down and collect your package...

A microcontroller, which includes the ESP32 card, has two types of interrupts:

- **hardware interrupts**: they are triggered by a physical action on one of the GPIO inputs of the ESP32 card;
- **software interrupts**: they are triggered if certain registers reach pre-defined values.

This is the case for timer interrupts, which we will define as software interrupts.

#### Use the words interval and rerun

The word **interval** is defined in the **timers vocabulary** . It accepts three parameters :

- **xt** which executes the code for the word to be thrown when the interrupt is triggered;
- **usec** is the wait time, in microseconds, before triggering the interrupt;
- **t** is the number of the timer to trigger. This parameter must be in the range [0..3] Let's partially take the factored code of our LED flashing :

```
18 constant myLED
0 value LED_STATE
: led.on ( -- )
    HIGH dup myLED pin
    to LED_STATE
: led.off ( -- )
    LOW dup myLED pin
    to LED STATE
timers \ select timers vocabulary
: led.toggle ( -- )
    LED_STATE if
        led.off
    else
        led.on
    then
    0 rerun
' led.toggle 500000 0 interval
: led.blink
    myLED output pinMode
    led.toggle
```

The word **rerun** is preceded by the number of timer activated before the definition of **interval**. The word **rerun** must be used in the definition of the word executed by the timer.

The word **led.blink** initializes the GPIO output used by the LED, then executes **led.toggle**.

In this sequence FORTH ' led.toggle 500000 0 interval , we initialize timer 0 by recovering the execution code of the word using rerun , followed by the time interval, here 500 milliseconds, then the number of the timer to trigger.

The LED flashing starts immediately after execution of the word led.blink .


The FORTH interpreter of ESP32forth remains accessible while the LED flashes, something impossible in C language!

# **Housekeeper timer**

#### **Preamble**

It's 1990. He's a computer programmer who works a lot. So he sometimes leaves his office a little late.

And it was during one of his late exits from the office that he entered the corridor, one of those corridors with a timer button at each end. The light is already on. But out of reflex, our programmer friend presses the switch and pricks his finger. A wooden point is inserted into the switch to block the timer.

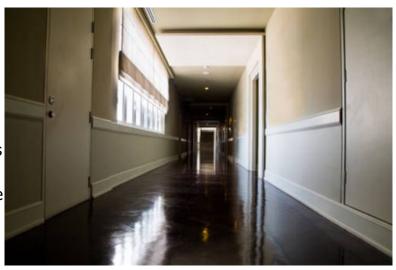

It's the cleaning lady who is

cleaning the floor who explains to him: "yes. The timer only lasts one minute. And I often find myself in the dark. As I'm tired of pressing again without stop on the timer switch, I block the button with this little wooden point"...

#### A solution

This anecdote sparked an idea in our programmer's head. As he had some knowledge about microcontrollers, he set out to find a solution for the cleaning lady.

History does not say in what language he programmed his solution. Certainly in assembler.

He derived the control of the lights to his circuit:

- an ordinary press starts the timer for one minute;
- if the light is on, any brief press of a button reduces the ignition delay to one minute;
- our programmer's secret is to have planned a long press of 3 seconds or more. This long press starts the timer for 10 minutes of lighting;
- if the timer is in long circuit, another long press reduces the timer delay to one minute;

• a short beep acknowledges the activation or deactivation of a long timer cycle.

The cleaning lady really appreciated this improvement in the timer. She no longer needed to block the button in any way.

What about the other workers? Since no one was aware of this feature, they continued to use the timer by briefly pressing the activation switch.

#### A FORTH timer for ESP32Forth

You understand, we are going to use **timers** to manage a timer by integrating the scenario described previously.

```
\ myLIGHTS connecté à GPI018
18 constant myLIGHTS
\ définit temps max pour cycle normal ou étendu, en secondes
60 constant MAX_LIGHT_TIME_NORMAL_CYCLE
600 constant MAX_LIGHT_TIME_EXXTENDED_CYCLE
\ temps max pour cycle normal ou étendu, en secondes
0 value MAX_LIGHT_TIME
timers
\ coupe éclairage si MAX_LIGHT_TIME égal 0
: cycle.stop ( -- )
    -1 +to MAX_LIGHT_TIME
                           \ décrémente temps max de 1 seconde
   MAX_LIGHT_TIME 0 = if
       LOW myLIGHTS pin \ coupe éclairage
    else
       0 rerun
    then
\ initialise timer 0
' cycle.stop 1000000 0 interval
\ démarre un cycle d'éclairage, n est délai en secondes
: cycle.start ( n -- )
   1+ to MAX_LIGHT_TIME
                               \ sélect. Temps max
   myLIGHTS output pinMode
   HIGH myLIGHTS pin
                               \ active éclairage
   0 rerun
```

We can already test our timer:

```
3 cycle.start \ turns on lights for 3 seconds \ turns on lights for 10 seconds
```

If we restart cycle.start while the light is on, we start again for a new lighting cycle of n seconds.

We therefore still have to manage the activation of these cycles from a switch.

#### Management of the light on button

This is not rocket science. We will manage a push button. As we have an ESP32 card on hand, programmable with ESP32Forth, we will take advantage of it to manage this button by interrupts. The interrupts managing the GPIO terminals on the ESP32 board are hardware interrupts.

Our button is mounted on the GPIO17 (G17) terminal.

We define two words, **intPosEdge** and **intNegEdge**, which determine the type of triggering of the interrupt:

- intPosEdge to trigger the interrupt on rising edge;
- intNegEdge to trigger the interrupt on falling edge.

```
17 constant button \ mount button on GPI017
interrupts \ \ select interrupts vocabulary
\ interrupt activated for upraising signal
: intPosEdge ( -- )
    button #GPI0_INTR_POSEDGE gpio_set_intr_type drop
;
\ interrupt activated for falldown signal
: intNegEdge ( -- )
    button #GPI0_INTR_NEGEDGE gpio_set_intr_type drop
;
```

We then need to define some variables and constants:

- two constants, CYCLE\_SHORT and CYCLE\_LONG which will be used to define the duration of lighting of the lights. Here we chose 3 and 10 seconds to do our tests;
- the msTicksPositiveEdge variable which stores the position of the wait counter delivered by ms-ticks;
- **DELAY\_LIMIT** constant which determines the threshold for determining a short or long press on the push button. Here, it's 3000 milliseconds, or 3 seconds. A normal user will NEVER press the light on button for 3 seconds. Only the cleaning lady knows the maneuver to have a long continuous lighting...

```
03 constant CYCLE_SHORT \ lighting duration for short press, in seconds
10 constant CYCLE_LONG \ lighting duration for long press
\ stores value of ms-ticks on rising edge
```

```
variable msTicksPositiveEdge
\ deadline limit: if delay < DELAY_LIMIT, short cycle
3000 constant DELAY_LIMIT</pre>
```

The word **getButton** is launched at each interrupt triggered by pressing the push button connected to GPIO17 (G17) on our ESP32 board.

**getButton** execution , interrupts on G17 are disabled. This interruption will be reactivated at the end of the definition. This disabling is necessary to prevent interrupt stacking.

Disabling is followed by the **70000 0 do loop** . This loop is used to manage contact bounces. Here we manage the debounce by software.

```
\ word executed by interrupt
: getButton ( -- )
    button gpio_intr_disable drop
    70000 0 do loop \ anti rebond
    button digitalRead 1 =
    if
        ms-ticks msTicksPositiveEdge !
        intNegEdge
    else
        intPosEdge
        ms-ticks msTicksPositiveEdge @ -
        DELAY_LIMIT >
        if CYCLE_LONG cr ." BEEP"
else CYCLE_SHORT cr ." ----"
    then
    cycle.start
    button gpio_intr_enable drop
```

On the rising edge, the word **getButton** records the state of the delay counter and positions the interrupts on the falling edge. Then we leave this word by reactivating the interruptions.

At the falling edge, the word **getButton** calculates the time elapsed since the rising edge. If this delay is greater than **DELAY\_LIMIT**, a long ignition cycle is initiated. Otherwise, a short ignition cycle is initiated.

The engagement of a long ignition cycle is indicated by the display of "BEEP" on the terminal.

In the original scenario, this is materialized by a short beep.

Finally, we initialize the button and the hardware interrupt on this button:

```
\ initialize button and interrupt vectors
button input pinMode \ selects G17 in input mode
button gpio_pulldown_en drop \ activates internal resistance of
G17
' getButton button pinchange
intPosEdge

forth
```

#### **Conclusion**

Watch the assembly video: <a href="https://www.youtube.com/watch?v=OHWMh">https://www.youtube.com/watch?v=OHWMh</a> bIWz0
This very simple case study shows how to simultaneously manage the timer and a hardware interrupt.

These two mechanisms are very little preemptive. The timer leaves access to the FORTH interpreter available. The hardware interrupt is operational even if FORTH is running another process.

We don't multitask. It's important to say it!

I only hope that this textbook case will now give you a lot of ideas for your developments...

#### Software real-time clock

#### The word MS-TICKS

The word MS-TICKS is used in the definition of the word ms:

```
DEFINED? ms-ticks [IF]
  : ms ( n -- )
    ms-ticks >r
    begin
        pause ms-ticks r@ - over
    >= until
    rdrop drop
  ;
[THEN]
```

This word MS-TICKS is at the heart of our investigations. If we start up the ESP32 card, its execution restores the number of milliseconds elapsed since the ESP32 card was started up. This value is still growing. The saturation value of this count is 2 <sup>32</sup>-1, or 4294967295 milliseconds, or approximately 49 days...

Each time the ESP32 card is restarted, this value restarts from zero.

## Managing a software clock

From the **HH MM SS** (Hours, minutes, seconds) data, it is easy to reconstruct an integer value, in milliseconds, corresponding to the time elapsed since 00:00:00. If we subtract the value of MS-TICKS from this time, we have a starting time value to determine the real time. We therefore initialize a basic counter currentTime from the word RTC.settime:

```
0 value currentTime

\ store current time
: RTC.set-time { hh mm ss -- }
    hh 3600 *
    mm 60 *
    ss + + 1000 *
    MS-TICKS - to currentTime
;
```

Initialization example: 22 52 00 RTC.set-time initializes the time base for 22:52:00...

To properly initialize, prepare the three values **HH MM SS** followed by the word **RTC.set- time**, watch your watch. When the expected time arrives, execute the initialization sequence.

**HH MM** and **SS** values of the current time, using this word :

```
\ get current time in seconds
: RTC.get-time ( -- hh mm ss )
    currentTime MS-TICKS + 1000 /
    3600 /mod swap 60 /mod swap
;
```

Finally, we define the word RTC.display-time which allows you to display the current time after initialization of our software clock:

```
\ used for SS and MM part of time display
: :## ( n -- n' )
    # 6 base ! # decimal [char] : hold
;

\ display current time
: RTC.display-time ( -- )
    currentTime MS-TICKS + 1000 /
    <# :## :## 24 MOD #S #> type
;
```

The next step would be to connect to a time server, with the NTP protocol, to automatically initialize our software clock.

# Measuring the execution time of a FORTH word

### Measuring the performance of FORTH definitions

Let's start by defining the word **measure**: which will perform these execution time measurements:

```
: measure: ( exec: -- <word> )
    ms-ticks >r
    ' execute
    ms-ticks r> -
    cr ." execution time: "
    <# # # [char] . hold #s #> type ." sec." cr
;
```

In this word, we retrieve the time by ms-ticks , then we retrieve the execution code of the word that follows measure:, we execute this word, we retrieve the new time value by ms-ticks . We make the difference, which corresponds to the elapsed time, in milliseconds, taken by the word to execute. Example:

```
measure: words
\ displays: execution time: 0.210sec.
```

The word words was executed in 0.2 seconds. This time does not take into account transmission delays by the terminal. This time also does not take into account the delay taken by measure: to retrieve the execution code of the word to be measured.

If there are parameters to pass to the word to measure, these must be stacked before calling measure: followed by the word to measure:

```
: SQUARE ( n -- n-exp2 )
    dup *
;
3 measure: SQUARE
\ poster:
\ execution time: 0.000sec.
```

This result means that our **SQUARE** definition runs in less than a millisecond.

We will repeat this operation a certain number of times:

```
: test-square ( -- )
    1000 for
    3 SQUARE drop
    next
;
3 measure: test-square
3 measure: test-square
```

```
\ poster: \ execution time: 0.001sec.
```

By executing the word **SQUARE** 1000 times , preceded by a stacking of values and unstacking of the result, we arrive at an execution time of 1 millisecond. We can reasonably deduce that **SQUARE** executes in less than a micro-second!

## **Testing a few loops**

We are going to test a few loops, with 1 million iterations. Let's start with a do-loop:

```
: test-loop ( -- )
    1000000 0 do
    loop
;
measure: test-loop
\ display:
\ execution time: 1.327sec.
```

Now let's see with a for-next loop:

```
: test-for ( -- )
    1000000 for
    next
;
measure: test-for
\ displays:
\ execution time: 0.096sec.
```

The **for-next loop** runs almost 14 times faster than the **do-loop**.

Let's see what a **begin-until** loop has in store:

```
: test-begin ( -- )
    1000000 begin
    1- dup 0=
    until
;
measure: test-begin
\ displays:
\ execution time: 0.273sec.
```

This is more efficient than the **do-loop** , but still three times slower than the **for-next loop** .

You are now equipped to create even more efficient FORTH programs.

# **Program a sunshine analyzer**

#### **Preamble**

As part of a solar project using several solar panels and their microinverter, there appear some problems with managing the electrical energy produced.

The main concern is to activate large consumer devices only if the solar panels produce in full sun. One device in particular is concerned, the hot water cumulus:

- activate the device when the panels are in direct sunlight;
- deactivate the device when clouds pass.

Microinverters inject power into the general electrical grid. If a device that consumes a lot of electricity is active when clouds pass, this device will be powered primarily by the general network.

In this article, we present a solution enabling cloud detection using a miniature solar panel and an ESP32 card.

Full code available here:

https://github.com/MPETREMANN11/ESP32forth/blob/main/ADC/solarLightAnalyzer.txt

# The miniature solar panel


To create our cloud detector, we will use a very small solar panel, here a 25mm x 25mm panel.

## Recovery of a miniature solar panel

This miniature solar panel is recovered from a garden lamp that is out of order:




Here is our mini solar panel taken out of this garden lamp:

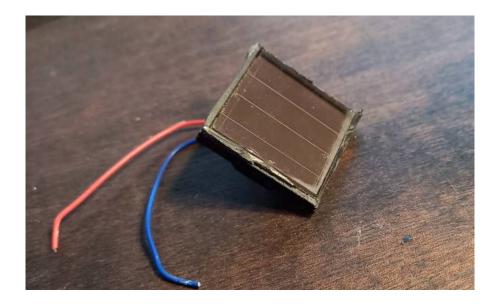

We sacrifice two dupont connectors to allow various measurements to be carried out on our prototype plate. These connectors are soldered onto the two red and blue wires coming out of the mini solar panel.

# Measurement of solar panel voltage

We start by measuring the no-load voltage of our mini solar panel, here with an oscilloscope. This voltage measurement can also be carried out with a voltmeter:

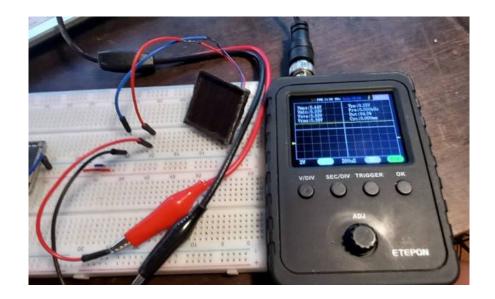

In bright light, the measured voltage amounts to 14.2 Volts!

Under diffused light, the voltage drops to 5.8 Volts.

By covering the mini solar panel with your hand, the voltage drops to almost 0 Volts.


#### **Solar panel current measurement**

The current, i.e. the intensity, must be measured using an ammeter. The ammeter function of a universal controller will be suitable. Short-circuiting the mini solar panel in bright light allows a current of 10 mA to be measured.

Our mini solar panel therefore has an approximate power of 0.2 Watt.

Before connecting our mini solar panel to the ESP32 card, it is essential to lower the output voltage. It is out of the question to inject this voltage of 14.2 Volts into an input of the ESP32 card. Such voltage would destroy the internal circuitry of the ESP32 board.

## Lowering the solar panel voltage

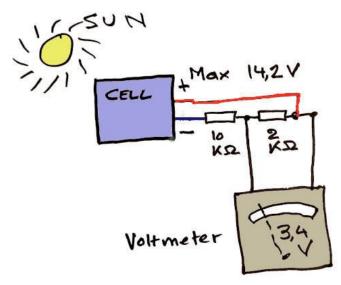

The idea is to lower the voltage across our mini solar panel. After a few tests, we choose two resistors, one of 220 Ohms, the other of 1K Ohms. Mounting these resistors:


The voltage measurement is taken between the two resistors and the positive terminal of the solar panel.

The voltmeter now indicates a maximum voltage of 3.2V in bright light, a voltage of 0.35V in diffused light.

### **Programming the solar analyzer**

The ESP32 board has 18 12-bit channels enabling analog-to-digital conversion (ADC). To analyze the voltage of our mini solar panel, a single ADC channel is necessary and sufficient.

Only 15 ADC channels are available:

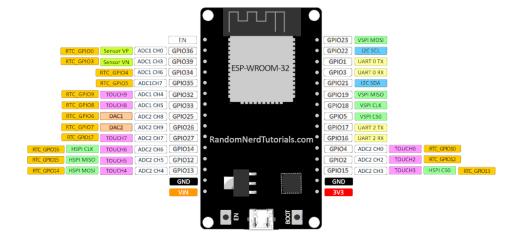

We will use one, the ADC1\_CH6 channel which is attached to pin G34:

```
34 constant SOLAR_CELL
: init-solar-cell ( -- )
    SOLAR_CELL input pinMode
;
init-solar-cell
```

To read the voltage at the point between the two resistors, simply run **SOLAR\_CELL analogRead**. This sequence drops a value between 0 and 4095. The lowest value corresponds to zero voltage. The highest value corresponds to a voltage of 3.3 Volts.

solar-cell-read definition to recover this voltage:

```
: solar-cell-read ( -- n )
    SOLAR_CELL analogRead
;
```

Let's test this definition in a loop:

```
: solar-cell-loop ( --)
   init-solar-cell
  begin
      solar-cell-read cr .
      200 ms
  key? until
;
```

When running **solar-cell-loop**, every 200 milliseconds, the ADC voltage conversion value is displayed:

```
322
331
290
172
39
0
0
179
86
```

Here the values were obtained by illuminating the mini solar panel with a high power lamp. Zero values correspond to the absence of lighting.

Tests with the real sun show measurements exceeding 300.

#### Managing activation and deactivation of a device

To begin, we will define two pins, one pin reserved for managing an activation signal, the other for a deactivation signal:

- G17 pin connected to a green LED. This pin is used to activate a device.
- G16 pin connected to a red LED. This pin is used to deactivate a device.

```
17 constant DEVICE_ON \ green LED
16 constant DEVICE_OFF \ red LED

: init-device-state ( -- )
    DEVICE_ON output pinMode
    DEVICE_OFF output pinMode
;
```

We could have used a single pin to manage the remote device. But some devices, like bistable relays, have two coils :

- the first coil is powered so that the contacts switch. The state does not change when the coil is no longer energized;
- to return to the initial state, the second coil is powered.

For this reason, our programming will take this type of device into account.

```
\ define trigger high state delay
500 value DEVICE_DELAY
\ set HIGH level of trigger
: device-activation { trigger -- }
    trigger HIGH digitalWrite
    DEVICE_DELAY ?dup
    if
        ms
        trigger LOW digitalWrite
    then
    ;
```

Here, the pseudo-constant **DEVICE\_DELAY** is used to indicate the delay during which the control signal should be kept high. After this time, the control signal returns to the low state.

If the value of **DEVICE\_DELAY** is zero, the control signal remains high.

It is the word **trigger-activation** which manages the activation of the corresponding pin:

 TRIGGER\_ON trigger-activation permanently or transiently sets the pin attached to the green LED high; • TRIGGER\_OFF trigger-activation sets the pin attached to the red LED permanently or transiently high.

We now define two words, device-ON and device-OFF , respectively responsible for activating and deactivating the device intended to be controlled by pins G16 and G17:

```
\ define device state: 0=LOW, -1=HIGH
0 value DEVICE_STATE
: enable-device ( -- )
    DEVICE_STATE invert
    if
        DEVICE_OFF LOW digitalWrite
        DEVICE_ON device-activation
        -1 to DEVICE STATE
    then
: disable-device ( -- )
    DEVICE_STATE
    if
        DEVICE_ON LOW digitalWrite
        DEVICE_OFF device-activation
         0 to DEVICE_STATE
    then
```

The device state is stored in **DEVICE\_STATE** . This state is tested before attempting to change state. If the device is active, it will not be reactivated repeatedly. Same if the device is inactive.

```
\ define trigger value for sunny or cloudy sky
300 value SOLAR_TRIGGER

\ if solar light > SOLAR_TRIGGER, activate action
: action-light-level ( -- )
    solar-cell-read SOLAR_TRIGGER >=
    if
        enable-device
    else
        disable-device
    then
    ;
```

# Triggered by timer interrupt

The most elegant way is to use a timer interrupt. We will use timer 0:

```
0 to DEVICE_DELAY
200 to SOLAR_TRIGGER
init-solar-cell
init-device-state
```

```
timers
: action ( -- )
    action-light-level
    0 rerun
;
' action 1000000 0 interval
```

From now on, the timer will analyze the light flow every second and act accordingly. Link to video: https://youtu.be/IAjeev2u9fc

For this video, we act on two parameters:

- 0 to DEVICE\_DELAY lights the LEDs permanently. The red LED indicates that the device is deactivated. The green LED indicates device activation;
- 200 to SOLAR\_TRIGGER determines the threshold for triggering the sunshine state. This parameter is adjustable to adapt to the characteristics of the mini solar panel.

The action word works by timer interrupt. It is therefore not necessary to have a general loop for the detector to work.

#### **Devices controlled by the sunshine sensor**

In summary, we have two control wires, one wire corresponding to the green LED in the video, the other wire corresponding to the red LED. The program is designed so that both control wires cannot be active at the same time.

To have a continuous signal on either control wire, the **DEVICE\_DELAY value only needs to** be zero. Here is how to initialize this scenario:

```
\ start with Constant Command Signal
: start-CCS ( -- )
     0 to DEVICE_DELAY
     200 to SOLAR_TRIGGER
    init-solar-cell
    init-device-state
    disable-device
    [ timers ] ['] action 1000000 0 interval
;
```

And to have timed commands, we will assign to **DEVICE\_DELAY** the delay of the level of the activation or deactivation command of the device.

```
\ start with Temporized Command Signal
: start-TCS ( -- )
   300 to DEVICE_DELAY
   200 to SOLAR_TRIGGER
```

```
init-solar-cell
init-device-state
disable-device
[ timers ] ['] action 1000000 0 interval
;
```

**start-TCS** scenario is typical of a pulse-operated bistable relay control. The relay activates if it receives an activation command. Even if the activation signal falls, the bistable relay remains active. To deactivate the bistable relay, a deactivation command must be transmitted to it on the deactivation line.

In conclusion, our solar light analyzer can control a wide variety of devices. It is enough to adapt the control interfaces of these devices to the characteristics of the GPIO ports of the ESP32 card.

#### Ressources

## in English

• **ESP32forth** page maintained by Brad NELSON, the creator of ESP32forth. You will find all versions there (ESP32, Windows, Web, Linux...) https://esp32forth.appspot.com/ESP32forth.html

.

#### In french

• **ESP32 Forth** site in two languages (French, English) with lots of examples <a href="https://esp32.arduino-forth.com/">https://esp32.arduino-forth.com/</a>

#### **GitHub**

- **Ueforth** resources maintained by Brad NELSON. Contains all Forth and C language source files for ESP32forth <a href="https://github.com/flagxor/ueforth">https://github.com/flagxor/ueforth</a>
- ESP32forth source codes and documentation for ESP32forth. Resources maintained by Marc PETREMANN <a href="https://github.com/MPETREMANN11/ESP32forth">https://github.com/MPETREMANN11/ESP32forth</a>
- **ESP32forthStation** resources maintained by Ulrich HOFFMAN. Stand alone Forth computer with LillyGo TTGO VGA32 single board computer and ESP32forth. https://github.com/uho/ESP32forthStation
- ESP32Forth resources maintained by F. J. RUSSO https://github.com/FJRusso53/ESP32Forth
- **esp32forth-addons** resources maintained by Peter FORTH <a href="https://github.com/PeterForth/esp32forth-addons">https://github.com/PeterForth/esp32forth-addons</a>
- Esp32forth-org Code repository for members of the Forth2020 and ESp32forth groups
   https://github.com/Esp32forth-org

•

# Index

ADC channels113	FORTH word12	SPIFFS77
allot26	HEX46	struct41
analogRead114	HOLD47	structures41
BASE46	include77	Tera Term65
breadboard59	interval97	thru73
c!25	list74	type20
c@25	load73	value26
constant25	ms-ticks105	variable25
create26	normal28	wipe72
DECIMAL46	page28	;22
default-use71	r@25	:22
defPin:	r>25	#47
83	rdrop25	#>47
démarrage automatique63	rerun97	#S47
editor71, 73	ressources119	<#47
flush73	S"50	>r25
forget22	save-buffers74	