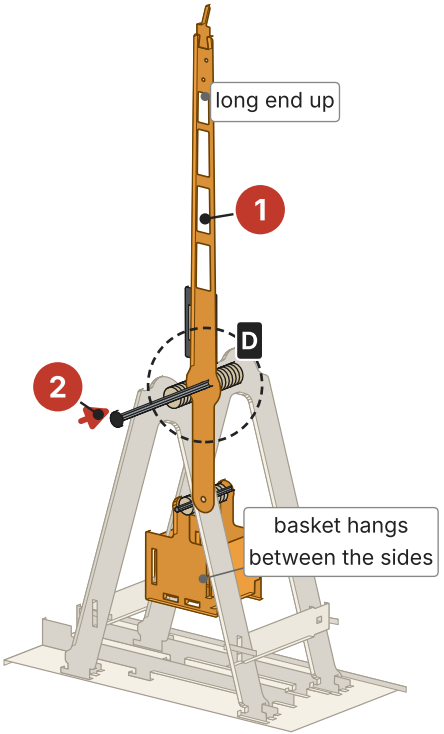

D Order on the M8 axle bolt

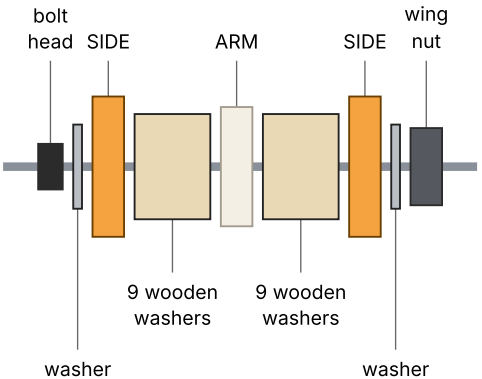

Tighten the wing nut until it is snug, then back it off a little. The arm must swing freely.