MTD2A & MTD2A_base

MTD2A: Model Train Detection And Action – arduino library https://github.com/MTD2A/MTD2A
Jørgen Bo Madsen / V1.5 / 20-08-2025

MTD2A is a collection of user friendly advanced and functional C++ classes - building blocks - for time-controlled handling of input and output. The library support parallel processing and asynchronous execution. The library is intended for Arduino enthusiasts without much programming experience who are interested in electronics control and automation, as well as model trains.

Common to all building blocks:

- They support a wide range of input sensors and output devices
- Are simple to use to build complex solutions with few commands
- They operate non-blocking, process-oriented and state-driven
- Offers extensive control and troubleshooting information
- Thoroughly documented with examples

Content


итD2A & MTD2	A_base	1
	eration	
Two types o	of process flow	3
Library		4
MTD2A_coi	nst.h	4
MTD2A_bas	se (H and CPP)	4
Time mana	gement and cadence	5
Produktion		6
Errors and v	varning messages	6
Aliases		7
Example of	parallel processing	8

Mode of operation

MTD2A is a so-called state machine. This means MTD2A objects are quickly traversed in an infinite loop, and each traversal is divided into two phases:

- 1. Changing state variables (changing and/or reading and checking)
- 2. Execute functionality and control the passage of time.

Concept Diagram

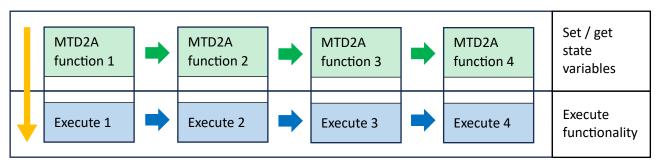

The top green process is carried out together with user-defined code and other libraries.

The lower blue process is carried out via MTD2A_loop_execute (); and as the last in void loop ();

In this way, an approximate parallelization is achieved, where several functions can in practice be executed simultaneously. For example, two flashing LEDs, where one is synchronous and the other is asynchronous. Example on Youtube

The individual instantiated (activated) objects are executed in the order in which they are defined.

```
// Execution order MTD2A_loop_execute ();
MTD2A_binary_output LED_1 ("LED_1", 500, 500); // Execute first [1]
MTD2A_binary_output LED_2 ("LED_2", 500, 500); // Execute next [2]
MTD2A_binary_output LED_3 ("LED_2", 500, 500); // Execute last [3]
```

The MTD2A library can be mixed with custom code and other libraries without further ado, as long as the execution is done non-blocking. But it requires a slightly different mindset when developing code, as it must always be taken into account that the infinite and fast loop must not be delayed, but also that user code is not executed more times than what is intended. It is often necessary to use different types of logic control flags.

Example

```
oneTimeFlag == true;

void loop() {
    // user or MTD2A code
    if (oneTimeFlag == true) {
        do_something_once ();
        oneTimeFlag = false;
    }
    // user or MTD2A code
}
```

Non-blocking execution

It is absolutely crucial that no delaying or blocking code is used with the MTD2A library. Do not use delaying functions such as delay (); as well as libraries that prevent rapid passages of the infinite loop. Use MTD2A_timer (); However, by default, delays up to a maximum of 10 milliseconds are allowed per loop pass. In most cases, this is sufficient of time to execute custom code and different types of libraries simultaneously.

Instead of using millis (); it is possible to count the number of timed loop passes. See example below.

```
long loopCount = 0;
// standard MTD2A loop execution time is 10 Miliseconds

void loop() {
    switch (loopCount) {
        case 200: do_things_1 (); break; // 2 seconds after startup
        case 400: do_things_2 (); break; // 4 seconds after startup
        case 6000: do_things_3 (); break; // 60 seconds after startup
    }
    loopCount++;
}
```

See more detailed information here: Finite-state machine - Wikipedia

Two types of process flow

There are basically two types of process flows and they can be combined

- 1. Predictable process flow time controlled
- 2. Unpredictable process flow event controlled

Predictable process flow

Suitable for time controlled process flows where timing is important. Example:

```
// Timed cascading (round robin) 4 LEDs.
switch (loopCount) {
   case 0: green_LED_1.activate(); break; // Start at once
   case 50: green_LED_2.activate(); break; // 0.5 second
   case 100: red_LED_1.activate(); break; // 1 second
   case 150: red_LED_2.activate(); break; // 1.5 second
}
loopCount++;
if (loopCount >= 200) {
   loopCount = 0;
}
```

Unpredictable process flow

Suitable for event driven process flows such as object detection with a sensor. Example:

```
// Read infrared sensor en blink LED.
switch (stepCount) {
  case 0:
    if (IR_sensor.get_processState() == ACTIVE) {
      // do something once
      stepCount = 1;
    // do something while wating on ACTIVE
 break;
    timer GL1.timer (START TIMER, 500); // Add 0,5 second pause delay to blink LED
    stepCount = 2;
 break;
  case 2:
    if (timer_GL1.get_processState() == COMPLETE) {
      // do something once
      green_LED_1.activate();
      stepCount = 3;
    // do something while wating on COMLPETE
 break;
  case 3:
    if (green_LED_1.get_processState() == COMPLETE) {
      // do something once
      stepCount = 0;
    // do something while wating on COMLPETE
  break:
```

Seven examples on to inspire how to code time and event process flows

https://github.com/MTD2A/MTD2A/tree/main/examples

DEMO video: https://youtu.be/UU4k4 8GWfM

Library

```
#include <MTD2A.h> // Include all library files
using namespace MTD2A_const; // Include user friendly constant names
```

Current building blocks

- MTD2A_binary_input.h
- MTD2A_binary_output.h

Additional planned building blocks

MTD2A_timer	MTD2A_sound
MTD2A_stopwatch	MTD2A_display
MTD2A_tone	MTD2A_DCC_input

MTD2A const.h

Contain user-friendly and easy-to-understand global constants for use as parameters for the various functions and in the code the user writes. Below a selection of global constants.

ENABLE	DISABLE
ACTIVE	COMPLETE
FIRST_TRIGGER	LAST_TRIGGER
TIME_DELAY	MONO_STABLE
NORMAL	INVERTED
PULSE	FIXED
BINARY	P_W_M
RESTART_TIMER	STOP_TIMER
DELAY_1MS	DELAY_10MS

Process phases of the individual modules

```
RESET_PHASE = 0

BEGIN_PHASE = 1, OUTPUT_PHASE = 2, END_PHASE = 3

FIRST_TIME_PHASE = 1, LAST_TIME_PHASE = 2, BLOCKING_PHASE = 3

COMPLETE PHASE = 4
```

The use of namespace is a way to handle name coincidence with other libraries. As a starting point, all the global constants can be made available by typing at the beginning of the user application:

using namespace MTD2A_const; If there is a name conflict, each of the global constants specified must be made available in the user program. This can be done in two ways, as shown in the example below:

MTD2A_const::ENABLE; Used every time ENABLE is used.

using MTD2A_const::ENABLE; Make ENABLE a global constant in the user application.

:: = Scope Resolution Operator.

MTD2A base (H and CPP)

Provides governance capabilities, common internal capabilities, and global common capabilities.

MTD2A_loop_execute (); executes all instantiated objects (Linked list of function pointers)
Absolute last command in void loop (); and must always be called once - and only - once.

MTD2A_globalDebugPrint (); Enable error and status notifications for the Arduiono IDE Serial Monitor and is initialized to DISABLE Parameter = ({ENABLE | DISABLE}) Omit parameter set default = ENABLE

MTD2A_globalErrorPrint (); Enable error notifications for the Arduiono IDE Serial Monitor an is initialized to DISABLE Parameter = ({ENABLE | DISABLE}) Omit parameter set default = DISABLE

MTD2A:: get globalObjectCount (); Returns the number of instantiated (activated) MTD2A objects.

Time management and cadence

Synchronization

To ensure that all instantiated (activated) objects "walk in step", all objects use a common starting point for timing. Time is set once in each void loop (); as the first step in the function In function

MTD2A_loop_execute (); That is, after user code and MTD2A functions have been executed, and before all internal control and time control functions have been executed.

The current timing can be read with function: MTD2::globalSyncTimeMS

Cadence

To ensure that all instantiated (activated) objects follow a predictable and consistent time period, the function MTD2A_loop_execute (); calculates the throughput time of all instantiated MTD2A objects, the code added by the user, and the libraries used by the user. The function offsets delays up to 10 milliseconds per total throughput void loop (); at standard cadence = DELAY 10MS

Standard cadence = 10 milliseconds = loop time.

Red line: New joint timing for time controls.

Yellow linje: Offsetting delays.

Controlled time delay ensure uniform cadence.

User code, libraries & Elapsed time A

MTD2A functions

MTD2A_loop_execute () Elapsed time B

MTD2A delay() Delay (10 - A - B)

If the calculation time goes beyond the 10 milliseconds, problems may arise in maintaining a consistent cadence. The longer the calculation time goes beyond the 10 milliseconds, the longer and more disparate the cadence, and asynchronous problems can arise. Especially for time-critical and fast-executing functions. In practice, in many cases, it can work, with minor variations, at a calculation time of up to 100 milliseconds.

MTD2A::set_globalDelayTimeMS (); Sets the cadence at which all instantiated (activated) objects are executed. Parameter = ({ DELAY_10MS | DELAY_1MS}) Omitted parameter set default DELAY_10MS

MTD2A::get_globalDelayTimeMS (); Return the current execution cadence. Default DELAY_10MS

MTD2A:: get_maxElapsedTimeMS (); The function returns the maximum measured time delay for each pass overall, and simultaneously resets the measurement, i.e. the time delay for the throughput void loop (); of instantiated MTD2A objects (code), as well as the code that the user has added. The function is primarily aimed at identifying user code, and the libraries the user uses, which delays the throughput time more than MTD2A:: get_globalDelayTimeMS (); This can cause cadence and synchronisation problems.

Execution speed

As a starting point, the less powerful Arduino boards are sufficient, e.g. MEGA, UNO and NANO. If many instantiated (activated) MTD2A objects are used, it is recommended to use the more powerful Arduino boards (MCU) such as the ESP32 series.

The throughput time can be increased significantly when using sensors with their own MCU (e.g. VL53L4CD laser rangefinder), communication protocols e.g. UART and IIC as well as writing to the Arduino IDE Serial Monitor.

For example, it takes 7-8 milliseconds to ask VL53L4CD if data is ready, and subsequently read the data. Communication protocols should, if possible, be configured for high speed. The same goes for Serial Monitor, which uses the relatively slow 9600 BAUD speed by default.

If very fast reading and execution is required, kan <u>DELAY_1MS</u> is selected. For example, fast reading of infrared sensors for emergency stops. The disadvantage is that no set-off is made. Here it is recommended to use the more powerful Arduino boards (MCU) such as the ESP32 series.

Produktion

To minimize delays and ensure maximum precision, the relatively slow writing to the Serial Monitor should be blocked as the last thing before the program goes into production. MTD2A_base.h

```
// Development an debug
#define PortPrint(x) Serial.print(x)
#define PortPrintln(x) Serial.println(x)
// Optimized production
// #define PortPrint(x)
// #define PortPrintln(x)
```

Errors and warning messages

Number	Error text
1	Pin number not set (255)
2	Digital pin number out of range
3	Analog pin number out of range
4	Output pin already in use
5	Pin does not support PWM
6	tone() conflicts with PWM pin
7	Pin does not support interrupt
8	Must be INPUT or INPUT_PULLUP
9	Time must be >= globalDelayTimeMS
11	Pin write is disabled
12	Proces state must be COMPLETE
13	Select STOP_TIMER or RESET_TIMER
14	Unknown TIMER argument
15	Use START_TIMER / RESET_TIMER

Number	Warning text
128	Digital Pin check not possible
129	Anaog Pin check not possible
130	Pin used more than once
131	PWM Pin check not possible
132	Interupt Pin check not possible
140	Timer value is zero
150	Output timer value is zero
151	All three timers are zero
152	Binary pin value > 1. Set to HIGH
153	Undefined PWM curve
154	Use RISING curve instead of FALLING
155	Use FALLING curve instead of RISING

Aliases

MTD2A_loop_execute (); Is a more user-friendly alias for MTD2A::loop_execute (); MTD2A_globalDebugPrint (); Is a more user-friendly alias for MTD2A::globalDebugPrint (); MTD2A_globalErrorPrint (); Is a more user-friendly alias for MTD2A::globalErrorPrint ();

MTD2A_print_conf ();

```
MTD2A_base:

globalDebugPrint : DISABLE
globalErrorPrint : ENABLE
globalDelayTimeMS: DELAY_10MS
globalSyncTimeMS : 10034
elapsedTimeMS : 0
maxLoopTimeMS : 1
globalObjectCount: 4
```

Example of parallel processing

```
// Two flashing LEDs. One with symmetric interval and another with asymetric interval.
// Jorgen Bo Madsen / May 2025 / https://github.com/jebmdk
#include <MTD2A.h>
using namespace MTD2A_const;
MTD2A_binary_output red_LED ("Red LED", 400, 400);
MTD2A_binary_output green_LED ("Green LED", 300, 700, 0, PWM, 96);
0.3 sec light, 0.7 sec no light, PWM dimmed
void setup() {
 Serial.begin(9600);
 while (!Serial) { delay(10); } // ESP32 Serial Monitor ready delay
 red_LED.initialize (9); // Output pin 9
 green_LED.initialize (10); // Output pin 10
 Serial.println("Two LED flashes");
void loop() {
 if (red_LED.get_processState() == COMPLETE) {
   red_LED.activate();
 if (green_LED.get_processState() == COMPLETE) {
   green_LED.activate();
 MTD2A_loop_execute();
```

More examples and youtube video:

https://github.com/MTD2A/MTD2A/tree/main/examples

DEMO video: https://youtu.be/eyGRazX9Bko