Xenomai 3.0.5

Generated by Doxygen 1.8.13

Contents

1	API	servic	e tags																	1
2	Dep	recate	d List																	3
3	Mod	lule Inc	lex																	5
	3.1	Modul	es											 	 				 	 5
4	Data	a Struc	ture Inde	ex																7
	4.1	Data 9	Structures	3										 	 					 7
5	File	Index																		11
	5.1	File Li	st											 	 					 11
6	Mod	dule Do	cumenta	atior	1															21
	6.1	Chanr	nels and r	ang	es									 	 					 21
		6.1.1	Detailed	d De	scrip	otion								 	 					 22
	6.2	Big du	al kernel	lock										 	 					 24
		6.2.1	Detailed	d De	scrip	otion								 	 				 	 24
		6.2.2	Macro D	Defin	nition	Doo	cum	enta	atior	1 .				 	 					 24
			6.2.2.1	col	balt_	_ator	nic_	_ent	er .					 	 					 24
			6.2.2.2	col	balt_	_ator	nic_	_leav	ve .					 	 					 25
			6.2.2.3	RT	DM ₋	_EX	ECl	JTE	_AT	ОМ	ICA	LLY	, .	 	 					 26
	6.3	Spinlo	ck with p	reen	nptic	on de	eact	ivati	ion					 	 					 27
		6.3.1	Detailed	d De	scrip	otion								 	 					 27
		6.3.2	Macro D	Defin	nition	Doo	cum	enta	atior	٦.				 	 					 27
			6.3.2.1	rtd	lm lo	ock	aet	iras	save	.				 	 		 			 28

ii CONTENTS

		6.3.2.2	rtdm_lock_irqrestore	28
		6.3.2.3	rtdm_lock_irqsave	28
	6.3.3	Function	Documentation	29
		6.3.3.1	rtdm_lock_get()	29
		6.3.3.2	rtdm_lock_init()	29
		6.3.3.3	rtdm_lock_put()	29
		6.3.3.4	rtdm_lock_put_irqrestore()	30
6.4	User-s	space driv	ver core	31
	6.4.1	Detailed	Description	32
	6.4.2	Macro D	Definition Documentation	32
		6.4.2.1	UDD_IRQ_CUSTOM	33
		6.4.2.2	UDD_IRQ_NONE	33
		6.4.2.3	UDD_MEM_LOGICAL	33
		6.4.2.4	UDD_MEM_NONE	33
		6.4.2.5	UDD_MEM_PHYS	33
		6.4.2.6	UDD_MEM_VIRTUAL	34
		6.4.2.7	UDD_RTIOC_IRQDIS	34
		6.4.2.8	UDD_RTIOC_IRQEN	34
		6.4.2.9	UDD_RTIOC_IRQSIG	34
	6.4.3	Function	Documentation	35
		6.4.3.1	udd_disable_irq()	35
		6.4.3.2	udd_enable_irq()	35
		6.4.3.3	udd_get_device()	36
		6.4.3.4	udd_notify_event()	37
		6.4.3.5	udd_register_device()	37
		6.4.3.6	udd_unregister_device()	38
6.5	Threa	d state fla	ags	39
	6.5.1	Detailed	Description	40
	6.5.2	Macro D	Definition Documentation	40
		6.5.2.1	XNHELD	40

		6.5.2.2	XNMIGRATE	40
		6.5.2.3	XNPEND	40
		6.5.2.4	XNREADY	41
		6.5.2.5	XNSUSP	41
		6.5.2.6	XNTRAPLB	41
6.6	Threa	d informa	tion flags	42
	6.6.1	Detailed	Description	42
6.7	CAN I	Devices .		43
	6.7.1	Detailed	Description	50
	6.7.2	Macro D	Definition Documentation	53
		6.7.2.1	CAN_CTRLMODE_3_SAMPLES	54
		6.7.2.2	CAN_CTRLMODE_LISTENONLY	54
		6.7.2.3	CAN_CTRLMODE_LOOPBACK	54
		6.7.2.4	CAN_ERR_LOSTARB_UNSPEC	54
		6.7.2.5	CAN_RAW_ERR_FILTER	54
		6.7.2.6	CAN_RAW_FILTER	55
		6.7.2.7	CAN_RAW_LOOPBACK	56
		6.7.2.8	CAN_RAW_RECV_OWN_MSGS	56
		6.7.2.9	RTCAN_RTIOC_RCV_TIMEOUT	57
		6.7.2.10	RTCAN_RTIOC_SND_TIMEOUT	57
		6.7.2.11	RTCAN_RTIOC_TAKE_TIMESTAMP	58
		6.7.2.12	SIOCGCANBAUDRATE	59
		6.7.2.13	SIOCGCANCTRLMODE	59
		6.7.2.14	SIOCGCANCUSTOMBITTIME	60
		6.7.2.15	SIOCGCANSTATE	60
		6.7.2.16	SIOCGIFINDEX	61
		6.7.2.17	SIOCSCANBAUDRATE	61
		6.7.2.18	SIOCSCANCTRLMODE	62
		6.7.2.19	SIOCSCANCUSTOMBITTIME	63
		6.7.2.20	SIOCSCANMODE	63

iv CONTENTS

		6.7.2.21 SOL_CAN_RAW
	6.7.3	Typedef Documentation
		6.7.3.1 can_filter_t
		6.7.3.2 can_frame_t
	6.7.4	Enumeration Type Documentation
		6.7.4.1 CAN_BITTIME_TYPE
		6.7.4.2 CAN_MODE
		6.7.4.3 CAN_STATE
6.8	RTDM	1
	6.8.1	Detailed Description
	6.8.2	Macro Definition Documentation
		6.8.2.1 RTDM_TIMEOUT_INFINITE
		6.8.2.2 RTDM_TIMEOUT_NONE
	6.8.3	Typedef Documentation
		6.8.3.1 nanosecs_abs_t
		6.8.3.2 nanosecs_rel_t
6.9	RTDM	M User API
	6.9.1	Detailed Description
6.10	Serial	Devices
6.11	Testing	g Devices
6.12	Real-t	ime IPC
	6.12.1	Detailed Description
	6.12.2	2 Macro Definition Documentation
		6.12.2.1 BUFP_BUFSZ
		6.12.2.2 BUFP_LABEL
		6.12.2.3 IDDP_LABEL
		6.12.2.4 IDDP_POOLSZ
		6.12.2.5 SO_RCVTIMEO
		6.12.2.6 SO_SNDTIMEO
		6.12.2.7 XDDP_BUFSZ

6.12.2.8 XDDP_EVTDOWN	. 81
6.12.2.9 XDDP_EVTIN	. 81
6.12.2.10XDDP_EVTNOBUF	. 82
6.12.2.11XDDP_EVTOUT	. 82
6.12.2.12XDDP_LABEL	. 82
6.12.2.13XDDP_MONITOR	. 83
6.12.2.14XDDP_POOLSZ	. 84
6.12.3 Enumeration Type Documentation	. 84
6.12.3.1 anonymous enum	. 84
6.12.4 Function Documentation	. 85
6.12.4.1 bindAF_RTIPC()	. 85
6.12.4.2 closeAF_RTIPC()	. 87
6.12.4.3 connectAF_RTIPC()	. 87
6.12.4.4 getpeernameAF_RTIPC()	. 88
6.12.4.5 getsocknameAF_RTIPC()	. 89
6.12.4.6 getsockoptAF_RTIPC()	. 89
6.12.4.7 recvmsgAF_RTIPC()	. 89
6.12.4.8 sendmsgAF_RTIPC()	. 90
6.12.4.9 setsockoptAF_RTIPC()	. 91
6.12.4.10socketAF_RTIPC()	. 92
6.13 Asynchronous Procedure Calls	. 93
6.13.1 Detailed Description	. 93
6.13.2 Function Documentation	. 93
6.13.2.1 xnapc_alloc()	. 93
6.13.2.2 xnapc_free()	. 94
6.13.2.3 xnapc_schedule()	. 94
6.14 In-kernel arithmetics	. 96
6.14.1 Detailed Description	. 96
6.14.2 Function Documentation	. 96
6.14.2.1 xnarch_generic_full_divmod64()	. 96

vi CONTENTS

6.15 Buffer descriptor
6.15.1 Detailed Description
6.15.2 Function Documentation
6.15.2.1 xnbufd_copy_from_kmem()
6.15.2.2 xnbufd_copy_to_kmem()
6.15.2.3 xnbufd_invalidate()
6.15.2.4 xnbufd_map_kread()
6.15.2.5 xnbufd_map_kwrite()
6.15.2.6 xnbufd_map_uread()
6.15.2.7 xnbufd_map_uwrite()
6.15.2.8 xnbufd_reset()
6.15.2.9 xnbufd_unmap_kread()
6.15.2.10xnbufd_unmap_kwrite()
6.15.2.11xnbufd_unmap_uread()
6.15.2.12xnbufd_unmap_uwrite()
6.16 Clock services
6.16.1 Detailed Description
6.16.2 Function Documentation
6.16.2.1 xnclock_adjust()
6.16.2.2 xnclock_deregister()
6.16.2.3 xnclock_register()
6.16.2.4 xnclock_tick()
6.17 Debugging services
6.17.1 Detailed Description
6.18 Dynamic memory allocation services
6.18.1 Detailed Description
6.18.2 Function Documentation
6.18.2.1 xnheap_alloc()
6.18.2.2 xnheap_destroy()
6.18.2.3 xnheap_free()

viii CONTENTS

6.23.2.5 xnmap_fetch_nocheck()
6.23.2.6 xnmap_remove()
6.24 Registry services
6.24.1 Detailed Description
6.24.2 Function Documentation
6.24.2.1 xnregistry_bind()
6.24.2.2 xnregistry_enter()
6.24.2.3 xnregistry_lookup()
6.24.2.4 xnregistry_remove()
6.24.2.5 xnregistry_unlink()
6.25 Driver programming interface
6.25.1 Detailed Description
6.26 Driver to driver services
6.26.1 Detailed Description
6.26.2 Function Documentation
6.26.2.1 rtdm_accept()
6.26.2.2 rtdm_bind()
6.26.2.3 rtdm_close()
6.26.2.4 rtdm_connect()
6.26.2.5 rtdm_getpeername()
6.26.2.6 rtdm_getsockname()
6.26.2.7 rtdm_getsockopt()
6.26.2.8 rtdm_ioctl()
6.26.2.9 rtdm_listen()
6.26.2.10rtdm_open()
6.26.2.11rtdm_read()
6.26.2.12rtdm_recv()
6.26.2.13rtdm_recvfrom()
6.26.2.14rtdm_recvmsg()
6.26.2.15rtdm_send()

6.26.2.16rtdm_sendmsg()	149
6.26.2.17rtdm_sendto()	150
6.26.2.18rtdm_setsockopt()	151
6.26.2.19rtdm_shutdown()	152
6.26.2.20rtdm_socket()	153
6.26.2.21rtdm_write()	153
6.27 Device Profiles	155
6.27.1 Detailed Description	157
6.27.2 Macro Definition Documentation	157
6.27.2.1 RTIOC_DEVICE_INFO	157
6.27.2.2 RTIOC_PURGE	157
6.28 Device Registration Services	158
6.28.1 Detailed Description	159
6.28.2 Macro Definition Documentation	159
6.28.2.1 RTDM_DEVICE_TYPE_MASK	159
6.28.2.2 RTDM_EXCLUSIVE	159
6.28.2.3 RTDM_FIXED_MINOR	160
6.28.2.4 RTDM_MAX_MINOR	160
6.28.2.5 RTDM_NAMED_DEVICE	160
6.28.2.6 RTDM_PROTOCOL_DEVICE	160
6.28.3 Function Documentation	160
6.28.3.1 rtdm_close_handler()	160
6.28.3.2 rtdm_dev_register()	161
6.28.3.3 rtdm_dev_unregister()	161
6.28.3.4 rtdm_drv_set_sysclass()	162
6.28.3.5 rtdm_get_unmapped_area_handler()	163
6.28.3.6 rtdm_ioctl_handler()	163
6.28.3.7 rtdm_mmap_handler()	164
6.28.3.8 rtdm_open_handler()	164
6.28.3.9 rtdm_read_handler()	165

X CONTENTS

6.28.3.10rtdm_recvmsg_handler()
6.28.3.11rtdm_select_handler()
6.28.3.12rtdm_sendmsg_handler()
6.28.3.13rtdm_socket_handler()
6.28.3.14rtdm_write_handler()
6.29 Clock Services
6.29.1 Detailed Description
6.29.2 Function Documentation
6.29.2.1 rtdm_clock_read()
6.29.2.2 rtdm_clock_read_monotonic()
6.30 Task Services
6.30.1 Detailed Description
6.30.2 Typedef Documentation
6.30.2.1 rtdm_task_proc_t
6.30.3 Function Documentation
6.30.3.1 rtdm_task_busy_sleep()
6.30.3.2 rtdm_task_busy_wait()
6.30.3.3 rtdm_task_current()
6.30.3.4 rtdm_task_destroy()
6.30.3.5 rtdm_task_init()
6.30.3.6 rtdm_task_join()
6.30.3.7 rtdm_task_set_period()
6.30.3.8 rtdm_task_set_priority()
6.30.3.9 rtdm_task_should_stop()
6.30.3.10rtdm_task_sleep()
6.30.3.11rtdm_task_sleep_abs()
6.30.3.12rtdm_task_sleep_until()
6.30.3.13rtdm_task_unblock()
6.30.3.14rtdm_task_wait_period()
6.30.3.15rtdm_wait_complete()

CONTENTS xi

6.30.3.	16rtdm_wait_is_completed()	80
6.30.3.	17rtdm_wait_prepare()	81
6.31 Timer Services	s	82
6.31.1 Detailed	d Description	82
6.31.2 Typede	f Documentation	82
6.31.2.	1 rtdm_timer_handler_t	83
6.31.3 Enume	ration Type Documentation	83
6.31.3.	1 rtdm_timer_mode	83
6.31.4 Functio	n Documentation	83
6.31.4.	1 rtdm_timer_destroy()	83
6.31.4.2	2 rtdm_timer_init()	84
6.31.4.0	3 rtdm_timer_start()	84
6.31.4.4	4 rtdm_timer_start_in_handler() 1	85
6.31.4.5	5 rtdm_timer_stop()	85
6.31.4.6	6 rtdm_timer_stop_in_handler()1	86
6.32 Synchronisatio	on Services	87
6.32.1 Detailed	d Description	88
6.32.2 Enume	ration Type Documentation	88
6.32.2.	1 rtdm_selecttype	88
6.32.3 Functio	n Documentation	89
6.32.3.	1 rtdm_for_each_waiter()	89
6.32.3.2	2 rtdm_for_each_waiter_safe()	89
6.32.3.3	3 rtdm_timedwait()	90
6.32.3.4	4 rtdm_timedwait_condition()	91
6.32.3.5	5 rtdm_timedwait_condition_locked()	92
6.32.3.6	6 rtdm_timedwait_locked()	92
6.32.3.7	7 rtdm_toseq_init()	93
6.32.3.8	8 rtdm_wait()	94
6.32.3.9	9 rtdm_wait_condition()	95
6.32.3.	10rtdm_wait_condition_locked()	95

xii CONTENTS

6.32.3.11rtdm_wait_locked()	. 196
6.32.3.12rtdm_waitqueue_broadcast()	. 197
6.32.3.13rtdm_waitqueue_destroy()	. 197
6.32.3.14rtdm_waitqueue_flush()	. 197
6.32.3.15rtdm_waitqueue_init()	. 198
6.32.3.16rtdm_waitqueue_lock()	. 198
6.32.3.17rtdm_waitqueue_signal()	. 199
6.32.3.18rtdm_waitqueue_unlock()	. 199
6.32.3.19rtdm_waitqueue_wakeup()	. 200
6.33 Event Services	. 201
6.33.1 Detailed Description	. 201
6.33.2 Function Documentation	. 201
6.33.2.1 rtdm_event_clear()	. 201
6.33.2.2 rtdm_event_destroy()	. 202
6.33.2.3 rtdm_event_init()	. 202
6.33.2.4 rtdm_event_pulse()	. 203
6.33.2.5 rtdm_event_select()	. 203
6.33.2.6 rtdm_event_signal()	. 204
6.33.2.7 rtdm_event_timedwait()	. 204
6.33.2.8 rtdm_event_wait()	. 205
6.34 Semaphore Services	. 207
6.34.1 Detailed Description	. 207
6.34.2 Function Documentation	. 207
6.34.2.1 rtdm_sem_destroy()	. 207
6.34.2.2 rtdm_sem_down()	. 208
6.34.2.3 rtdm_sem_init()	. 208
6.34.2.4 rtdm_sem_select()	. 209
6.34.2.5 rtdm_sem_timeddown()	. 209
6.34.2.6 rtdm_sem_up()	. 210
6.35 Mutex services	. 211

CONTENTS xiii

6.35.1 Detailed Description
6.35.2 Function Documentation
6.35.2.1 rtdm_mutex_destroy()
6.35.2.2 rtdm_mutex_init()
6.35.2.3 rtdm_mutex_lock()
6.35.2.4 rtdm_mutex_timedlock()
6.35.2.5 rtdm_mutex_unlock()
6.36 Interrupt Management Services
6.36.1 Detailed Description
6.36.2 Macro Definition Documentation
6.36.2.1 rtdm_irq_get_arg
6.36.3 Typedef Documentation
6.36.3.1 rtdm_irq_handler_t
6.36.4 Function Documentation
6.36.4.1 rtdm_irq_disable()
6.36.4.2 rtdm_irq_enable()
6.36.4.3 rtdm_irq_free()
6.36.4.4 rtdm_irq_request()
6.37 Non-Real-Time Signalling Services
6.37.1 Detailed Description
6.37.2 Typedef Documentation
6.37.2.1 rtdm_nrtsig_handler_t
6.37.3 Function Documentation
6.37.3.1 rtdm_nrtsig_destroy()
6.37.3.2 rtdm_nrtsig_init()
6.37.3.3 rtdm_nrtsig_pend()
6.37.3.4 rtdm_schedule_nrt_work()
6.38 Utility Services
6.38.1 Detailed Description
6.38.2 Function Documentation

XIV CONTENTS

6.38.2.1 rtdm_copy_from_user()
6.38.2.2 rtdm_copy_to_user()
6.38.2.3 rtdm_free()
6.38.2.4 rtdm_in_rt_context()
6.38.2.5 rtdm_iomap_to_user()
6.38.2.6 rtdm_malloc()
6.38.2.7 rtdm_mmap_iomem()
6.38.2.8 rtdm_mmap_kmem()
6.38.2.9 rtdm_mmap_to_user()
6.38.2.10rtdm_mmap_vmem()
6.38.2.11rtdm_munmap()
6.38.2.12rtdm_printk()
6.38.2.13rtdm_printk_ratelimited()
6.38.2.14rtdm_ratelimit()
6.38.2.15rtdm_read_user_ok()
6.38.2.16rtdm_rt_capable()
6.38.2.17rtdm_rw_user_ok()
6.38.2.18rtdm_safe_copy_from_user()
6.38.2.19rtdm_safe_copy_to_user()
6.38.2.20rtdm_strncpy_from_user()
6.39 SCHED_QUOTA scheduling policy
6.39.1 Detailed Description
6.40 Thread scheduling control
6.40.1 Detailed Description
6.40.2 Function Documentation
6.40.2.1 xnsched_rotate()
6.40.2.2 xnsched_run()
6.41 Synchronous I/O multiplexing
6.41.1 Detailed Description
6.41.2 Function Documentation

CONTENTS xv

6.41.2.1 xnselect()
6.41.2.2 xnselect_bind()
6.41.2.3 xnselect_destroy()
6.41.2.4 xnselect_init()
6.41.2.5 xnselect_signal()
6.41.2.6 xnselector_destroy()
6.41.2.7 xnselector_init()
6.42 Thread synchronization services
6.42.1 Detailed Description
6.42.2 Function Documentation
6.42.2.1 xnsynch_acquire()
6.42.2.2 xnsynch_destroy()
6.42.2.3 xnsynch_flush()
6.42.2.4 xnsynch_init()
6.42.2.5 xnsynch_peek_pendq()
6.42.2.6 xnsynch_release()
6.42.2.7 xnsynch_sleep_on()
6.42.2.8 xnsynch_try_acquire()
6.42.2.9 xnsynch_wakeup_one_sleeper()
6.42.2.10xnsynch_wakeup_this_sleeper()
6.43 Thread services
6.43.1 Detailed Description
6.43.2 Function Documentation
6.43.2.1 xnthread_cancel()
6.43.2.2 xnthread_current()
6.43.2.3 xnthread_from_task()
6.43.2.4 xnthread_harden()
6.43.2.5 xnthread_init()
6.43.2.6 xnthread_join()
6.43.2.7 xnthread_map()

xvi CONTENTS

6	5.43.2.8 xnthread_migrate()	261
6	6.43.2.9 xnthread_relax()	262
6	6.43.2.10xnthread_resume()	262
6	6.43.2.11xnthread_set_mode()	263
6	6.43.2.12xnthread_set_periodic()	264
6	6.43.2.13xnthread_set_schedparam()	265
6	6.43.2.14xnthread_set_slice()	266
6	6.43.2.15xnthread_start()	267
6	6.43.2.16xnthread_suspend()	267
6	6.43.2.17xnthread_test_cancel()	269
6	6.43.2.18xnthread_unblock()	269
6	6.43.2.19xnthread_wait_period()	270
6.44 Timer se	ervices	271
6.44.1	Detailed Description	271
6.44.2 F	Function Documentation	272
6	6.44.2.1xntimer_migrate()	272
6	6.44.2.2 program_htick_shot()	272
6	6.44.2.3 switch_htick_mode()	273
6	6.44.2.4 xntimer_destroy()	273
6	6.44.2.5 xntimer_get_date()	274
6	6.44.2.6 xntimer_get_overruns()	274
6	6.44.2.7 xntimer_get_timeout()	275
6	6.44.2.8 xntimer_grab_hardware()	275
6	6.44.2.9 xntimer_init()	276
6	6.44.2.10xntimer_interval()	277
6	6.44.2.11xntimer_release_hardware()	277
6	6.44.2.12xntimer_start()	278
6	6.44.2.13xntimer_stop()	278
6.45 Virtual fi	ile services	280
6.45.1	Detailed Description	281

CONTENTS xvii

6.45.2 Function Documentation	31
6.45.2.1 xnvfile_destroy()	31
6.45.2.2 xnvfile_get_blob()	32
6.45.2.3 xnvfile_get_integer()	33
6.45.2.4 xnvfile_get_string()	33
6.45.2.5 xnvfile_init_dir()	34
6.45.2.6 xnvfile_init_link()	35
6.45.2.7 xnvfile_init_regular()	35
6.45.2.8 xnvfile_init_snapshot()	36
6.45.3 Variable Documentation	37
6.45.3.1 cobalt_vfroot [1/2]	37
6.45.3.2 cobalt_vfroot [2/2]	37
6.46 Analogy framework	38
6.46.1 Detailed Description	38
6.47 Driver API	39
6.47.1 Detailed Description	39
6.48 Driver management services	90
6.48.1 Detailed Description	90
6.48.2 Function Documentation	90
6.48.2.1 a4l_register_drv()	90
6.48.2.2 a4l_unregister_drv()) 1
6.49 Subdevice management services)2
6.49.1 Detailed Description)3
6.49.2 Function Documentation)4
6.49.2.1 a4l_add_subd())4
6.49.2.2 a4l_alloc_subd()) 4
6.49.2.3 a4l_get_subd())5
6.50 Buffer management services)6
6.50.1 Detailed Description) 7
6.50.2 Function Documentation) 7

xviii CONTENTS

6.50.2.1 a4l_buf_commit_absget()	297
6.50.2.2 a4l_buf_commit_absput()	298
6.50.2.3 a4I_buf_commit_get()	298
6.50.2.4 a4l_buf_commit_put()	299
6.50.2.5 a4l_buf_count()	300
6.50.2.6 a4l_buf_evt()	301
6.50.2.7 a4l_buf_get()	301
6.50.2.8 a4l_buf_prepare_absget()	302
6.50.2.9 a4l_buf_prepare_absput()	303
6.50.2.10a4l_buf_prepare_get()	303
6.50.2.11a4l_buf_prepare_put()	304
6.50.2.12a4l_buf_put()	304
6.50.2.13a4l_get_chan()	305
6.50.2.14a4l_get_cmd()	305
6.51 Interrupt management services	306
6.51.1 Detailed Description	306
6.51.2 Function Documentation	306
6.51.2.1 a4l_free_irq()	306
6.51.2.2 a4l_get_irq()	307
6.51.2.3 a4l_request_irq()	307
6.52 Misc services	309
6.52.1 Detailed Description	309
6.52.2 Function Documentation	309
6.52.2.1 a4l_get_time()	309
6.53 Clocks and timers	310
6.53.1 Detailed Description	310
6.53.2 Function Documentation	311
6.53.2.1 clock_getres()	311
6.53.2.2 clock_gettime()	312
6.53.2.3 clock_nanosleep()	313

CONTENTS xix

6.53.2.4 clock_settime()	4
6.53.2.5 nanosleep()	4
6.53.2.6 timer_create()	5
6.53.2.7 timer_delete()	6
6.53.2.8 timer_getoverrun()	7
6.53.2.9 timer_gettime()	8
6.53.2.10timer_settime()	8
6.54 Condition variables	20
6.54.1 Detailed Description	21
6.54.2 Function Documentation	21
6.54.2.1 pthread_cond_broadcast()	21
6.54.2.2 pthread_cond_destroy()	22
6.54.2.3 pthread_cond_init()	22
6.54.2.4 pthread_cond_signal()	23
6.54.2.5 pthread_cond_timedwait()	24
6.54.2.6 pthread_cond_wait()	25
6.54.2.7 pthread_condattr_destroy()	26
6.54.2.8 pthread_condattr_getclock()	26
6.54.2.9 pthread_condattr_getpshared()	27
6.54.2.10pthread_condattr_init()	28
6.54.2.11pthread_condattr_setclock()	28
6.54.2.12pthread_condattr_setpshared()	29
6.55 POSIX interface	31
6.55.1 Detailed Description	32
6.56 Message queues	3
6.56.1 Detailed Description	3
6.56.2 Function Documentation	34
6.56.2.1 mq_close()	34
6.56.2.2 mq_getattr()	34
6.56.2.3 mq_notify()	35

6.56.2.4 mq_open()
6.56.2.5 mq_receive()
6.56.2.6 mq_send()
6.56.2.7 mq_setattr()
6.56.2.8 mq_timedreceive()
6.56.2.9 mq_timedsend()
6.56.2.10mq_unlink()
6.57 Mutual exclusion
6.57.1 Detailed Description
6.57.2 Function Documentation
6.57.2.1 pthread_mutex_destroy()
6.57.2.2 pthread_mutex_init()
6.57.2.3 pthread_mutex_lock()
6.57.2.4 pthread_mutex_timedlock()
6.57.2.5 pthread_mutex_trylock()
6.57.2.6 pthread_mutex_unlock()
6.57.2.7 pthread_mutexattr_destroy()
6.57.2.8 pthread_mutexattr_getprotocol()
6.57.2.9 pthread_mutexattr_getpshared()
6.57.2.10pthread_mutexattr_gettype()
6.57.2.11pthread_mutexattr_init()
6.57.2.12pthread_mutexattr_setprotocol()
6.57.2.13pthread_mutexattr_setpshared()
6.57.2.14pthread_mutexattr_settype()
6.58 Process scheduling
6.58.1 Detailed Description
6.58.2 Function Documentation
6.58.2.1 sched_get_priority_max()
6.58.2.2 sched_get_priority_max_ex()
6.58.2.3 sched_get_priority_min()

CONTENTS xxi

6.58.2.4 sched_get_priority_min_ex()
6.58.2.5 sched_getconfig_np()
6.58.2.6 sched_getscheduler()
6.58.2.7 sched_getscheduler_ex()
6.58.2.8 sched_setconfig_np()
6.58.2.9 sched_setscheduler()
6.58.2.10sched_setscheduler_ex()
6.58.2.11sched_yield()
6.59 Semaphores
6.59.1 Detailed Description
6.59.2 Function Documentation
6.59.2.1 sem_close()
6.59.2.2 sem_destroy()
6.59.2.3 sem_init()
6.59.2.4 sem_post()
6.59.2.5 sem_timedwait()
6.59.2.6 sem_trywait()
6.59.2.7 sem_unlink()
6.59.2.8 sem_wait()
6.60 Thread management
6.60.1 Detailed Description
6.60.2 Function Documentation
6.60.2.1 pthread_create()
6.60.2.2 pthread_join()
6.60.2.3 pthread_kill()
6.60.2.4 pthread_setmode_np()
6.60.2.5 pthread_setname_np()
6.61 Scheduling management
6.61.1 Detailed Description
6.61.2 Function Documentation

xxii CONTENTS

6.61.2.1 pthread_getschedparam()
6.61.2.2 pthread_getschedparam_ex()
6.61.2.3 pthread_setschedparam()
6.61.2.4 pthread_setschedparam_ex()
6.61.2.5 pthread_yield()
6.62 Smokey API
6.63 Asynchronous acquisition API
6.63.1 Detailed Description
6.63.2 Function Documentation
6.63.2.1 a4l_get_bufsize()
6.63.2.2 a4l_mark_bufrw()
6.63.2.3 a4l_mmap()
6.63.2.4 a4l_poll()
6.63.2.5 a4l_set_bufsize()
6.63.2.6 a4l_snd_cancel()
6.63.2.7 a4l_snd_command()
6.64 Asynchronous acquisition API
6.64.1 Detailed Description
6.64.2 Function Documentation
6.64.2.1 a4l_async_read()
6.64.2.2 a4l_async_write()
6.65 Software calibration API
6.65.1 Detailed Description
6.65.2 Function Documentation
6.65.2.1 a4l_dcaltoraw()
6.65.2.2 a4l_get_softcal_converter()
6.65.2.3 a4l_rawtodcal()
6.65.2.4 a4l_read_calibration_file()
6.66 Descriptor Syscall API
6.66.1 Detailed Description

CONTENTS xxiii

6.66.2 Function Documentation	404
6.66.2.1 a4l_sys_desc()	405
6.67 Descriptor API	406
6.67.1 Detailed Description	406
6.67.2 Function Documentation	406
6.67.2.1 a4l_close()	406
6.67.2.2 a4l_fill_desc()	407
6.67.2.3 a4l_get_chinfo()	407
6.67.2.4 a4l_get_rnginfo()	408
6.67.2.5 a4l_get_subdinfo()	409
6.67.2.6 a4l_open()	409
6.68 Math API	410
6.68.1 Detailed Description	410
6.68.2 Function Documentation	410
6.68.2.1 a4l_math_mean()	410
6.68.2.2 a4l_math_polyfit()	411
6.68.2.3 a4l_math_stddev()	411
6.68.2.4 a4l_math_stddev_of_mean()	412
6.69 Range / conversion API	413
6.69.1 Detailed Description	413
6.69.2 Function Documentation	413
6.69.2.1 a4l_dtoraw()	413
6.69.2.2 a4l_find_range()	414
6.69.2.3 a4l_ftoraw()	415
6.69.2.4 a4l_rawtod()	415
6.69.2.5 a4l_rawtof()	416
6.69.2.6 a4l_rawtoul()	416
6.69.2.7 a4l_sizeof_chan()	417
6.69.2.8 a4l_sizeof_subd()	417
6.69.2.9 a4l_ultoraw()	

xxiv CONTENTS

6.70 Level 1 API
6.70.1 Detailed Description
6.71 Synchronous acquisition API
6.71.1 Detailed Description
6.71.2 Function Documentation
6.71.2.1 a4l_snd_insn()
6.71.2.2 a4l_snd_insnlist()
6.72 Level 2 API
6.72.1 Detailed Description
6.73 Synchronous acquisition API
6.73.1 Detailed Description
6.73.2 Function Documentation
6.73.2.1 a4l_config_subd()
6.73.2.2 a4l_sync_dio()
6.73.2.3 a4l_sync_read()
6.73.2.4 a4l_sync_write()
6.74 Analogy user API
6.74.1 Detailed Description
6.75 Level 0 API
6.75.1 Detailed Description
6.76 Basic Syscall API
6.76.1 Detailed Description
6.76.2 Function Documentation
6.76.2.1 a4l_sys_close()
6.76.2.2 a4l_sys_open()
6.76.2.3 a4l_sys_read()
6.76.2.4 a4l_sys_write()
6.77 Attach / detach Syscall API
6.77.1 Detailed Description
6.77.2 Function Documentation

6.77.2.1 a4l_sys_attach()
6.77.2.2 a4l_sys_bufcfg()
6.77.2.3 a4l_sys_detach()
6.78 Alarm services
6.78.1 Detailed Description
6.78.2 Function Documentation
6.78.2.1 rt_alarm_create()
6.78.2.2 rt_alarm_delete()
6.78.2.3 rt_alarm_inquire()
6.78.2.4 rt_alarm_start()
6.78.2.5 rt_alarm_stop()
6.79 Buffer services
6.79.1 Detailed Description
6.79.2 Macro Definition Documentation
6.79.2.1 B_PRIO
6.79.3 Function Documentation
6.79.3.1 rt_buffer_bind()
6.79.3.2 rt_buffer_clear()
6.79.3.3 rt_buffer_create()
6.79.3.4 rt_buffer_delete()
6.79.3.5 rt_buffer_inquire()
6.79.3.6 rt_buffer_read()
6.79.3.7 rt_buffer_read_timed()
6.79.3.8 rt_buffer_read_until()
6.79.3.9 rt_buffer_unbind()
6.79.3.10rt_buffer_write()
6.79.3.11rt_buffer_write_timed()
6.79.3.12rt_buffer_write_until()
6.80 Condition variable services
6.80.1 Detailed Description

xxvi CONTENTS

6.80.2 Function Documentation
6.80.2.1 rt_cond_bind()
6.80.2.2 rt_cond_broadcast()
6.80.2.3 rt_cond_create()
6.80.2.4 rt_cond_delete()
6.80.2.5 rt_cond_inquire()
6.80.2.6 rt_cond_signal()
6.80.2.7 rt_cond_unbind()
6.80.2.8 rt_cond_wait()
6.80.2.9 rt_cond_wait_timed()
6.80.2.10rt_cond_wait_until()
6.81 Event flag group services
6.81.1 Detailed Description
6.81.2 Macro Definition Documentation
6.81.2.1 EV_ANY
6.81.2.2 EV_PRIO
6.81.3 Function Documentation
6.81.3.1 rt_event_bind()
6.81.3.2 rt_event_clear()
6.81.3.3 rt_event_create()
6.81.3.4 rt_event_delete()
6.81.3.5 rt_event_inquire()
6.81.3.6 rt_event_signal()
6.81.3.7 rt_event_unbind()
6.81.3.8 rt_event_wait()
6.81.3.9 rt_event_wait_timed()
6.81.3.10rt_event_wait_until()
6.82 Heap management services
6.82.1 Detailed Description
6.82.2 Macro Definition Documentation

CONTENTS xxvii

6.82.2.1 H_PRIO
6.82.3 Function Documentation
6.82.3.1 rt_heap_alloc()
6.82.3.2 rt_heap_alloc_timed()
6.82.3.3 rt_heap_alloc_until()
6.82.3.4 rt_heap_bind()
6.82.3.5 rt_heap_create()
6.82.3.6 rt_heap_delete()
6.82.3.7 rt_heap_free()
6.82.3.8 rt_heap_inquire()
6.82.3.9 rt_heap_unbind()
6.83 Alchemy API
6.83.1 Detailed Description
6.84 Mutex services
6.84.1 Detailed Description
6.84.2 Function Documentation
6.84.2.1 rt_mutex_acquire()
6.84.2.2 rt_mutex_acquire_timed()
6.84.2.3 rt_mutex_acquire_until()
6.84.2.4 rt_mutex_bind()
6.84.2.5 rt_mutex_create()
6.84.2.6 rt_mutex_delete()
6.84.2.7 rt_mutex_inquire()
6.84.2.8 rt_mutex_release()
6.84.2.9 rt_mutex_unbind()
6.85 Message pipe services
6.85.1 Detailed Description
6.85.2 Macro Definition Documentation
6.85.2.1 P_MINOR_AUTO
6.85.2.2 P_URGENT

xxviii CONTENTS

6.85.3 Function Documentation
6.85.3.1 rt_pipe_bind()
6.85.3.2 rt_pipe_create()
6.85.3.3 rt_pipe_delete()
6.85.3.4 rt_pipe_read()
6.85.3.5 rt_pipe_read_timed()
6.85.3.6 rt_pipe_read_until()
6.85.3.7 rt_pipe_stream()
6.85.3.8 rt_pipe_unbind()
6.85.3.9 rt_pipe_write()
6.86 Message queue services
6.86.1 Detailed Description
6.86.2 Macro Definition Documentation
6.86.2.1 Q_PRIO
6.86.3 Function Documentation
6.86.3.1 rt_queue_alloc()
6.86.3.2 rt_queue_bind()
6.86.3.3 rt_queue_create()
6.86.3.4 rt_queue_delete()
6.86.3.5 rt_queue_flush()
6.86.3.6 rt_queue_free()
6.86.3.7 rt_queue_inquire()
6.86.3.8 rt_queue_read()
6.86.3.9 rt_queue_read_timed()
6.86.3.10rt_queue_read_until()
6.86.3.11rt_queue_receive()
6.86.3.12rt_queue_receive_timed()
6.86.3.13rt_queue_receive_until()
6.86.3.14rt_queue_send()
6.86.3.15rt_queue_unbind()

CONTENTS xxix

6.87 Semaphore services
6.87.1 Detailed Description
6.87.2 Macro Definition Documentation
6.87.2.1 S_PRIO
6.87.3 Function Documentation
6.87.3.1 rt_sem_bind()
6.87.3.2 rt_sem_broadcast()
6.87.3.3 rt_sem_create()
6.87.3.4 rt_sem_delete()
6.87.3.5 rt_sem_inquire()
6.87.3.6 rt_sem_p()
6.87.3.7 rt_sem_p_timed()
6.87.3.8 rt_sem_p_until()
6.87.3.9 rt_sem_unbind()
6.87.3.10rt_sem_v()
6.88 Task management services
6.88.1 Detailed Description
6.88.2 Macro Definition Documentation
6.88.2.1 T_LOCK
6.88.2.1 T_LOCK
6.88.2.2 T_LOPRIO
6.88.2.2 T_LOPRIO 521 6.88.2.3 T_WARNSW 521 6.88.3 Function Documentation 521 6.88.3.1 rt_task_bind() 521 6.88.3.2 rt_task_create() 522 6.88.3.3 rt_task_delete() 524
6.88.2.2 T_LOPRIO
6.88.2.2 T_LOPRIO

		6.88.3.9 rt_task_reply()	28
		6.88.3.10rt_task_resume()	29
		6.88.3.11rt_task_same()	30
		6.88.3.12rt_task_self()	31
		6.88.3.13rt_task_send()	31
		6.88.3.14rt_task_send_timed()	32
		6.88.3.15rt_task_send_until()	33
		6.88.3.16rt_task_set_affinity()	34
		6.88.3.17rt_task_set_mode()	35
		6.88.3.18rt_task_set_periodic()	36
		6.88.3.19rt_task_set_priority()	37
		6.88.3.20rt_task_shadow()	38
		6.88.3.21rt_task_sleep()	39
		6.88.3.22rt_task_sleep_until()	40
		6.88.3.23rt_task_slice()	41
		6.88.3.24rt_task_spawn()	42
		6.88.3.25rt_task_start()	43
		6.88.3.26rt_task_suspend()	44
		6.88.3.27rt_task_unbind()	44
		6.88.3.28rt_task_unblock()	45
		6.88.3.29rt_task_wait_period()	45
		6.88.3.30rt_task_yield()	46
6.89	Timer	management services	47
	6.89.1	Detailed Description	47
	6.89.2	Typedef Documentation	47
		6.89.2.1 RT_TIMER_INFO	48
	6.89.3	Function Documentation	48
		6.89.3.1 rt_timer_inquire()	48
		6.89.3.2 rt_timer_ns2ticks()	48
		6.89.3.3 rt_timer_read()	49

CONTENTS xxxi

			6.89.3.4	+ rt_t	timer_	_spir	n()						 		 	 	 		549
			6.89.3.5	5 rt_t	timer_	_tick	s2n	s() .					 		 	 	 		550
	6.90	VxWo	rks® emu	ulato	r								 		 	 	 		551
	6.91	pSOS	® emulat	tor .									 		 	 	 		552
	6.92	Transi	tion Kit .										 		 	 	 		553
		6.92.1	Detailed	d Des	scription	on							 		 	 	 		553
		6.92.2	Function	n Do	cume	ntati	ion .						 		 	 	 		553
			6.92.2.1	CO	MPA ⁻	Tı	rt_a	larm	n_cre	eate	()		 		 	 	 		553
			6.92.2.2	2 CO	MPA ⁻	Tı	rt_e	vent	t_cle	ear()			 		 	 	 		554
			6.92.2.3	3 CO	MPA ⁻	Tı	rt_e	vent	t_cre	eate	()		 		 	 	 		555
			6.92.2.4	CO	MPA ⁻	Tı	rt_e	vent	t_sig	gnal()		 		 	 	 		556
			6.92.2.5	s co	MPA ⁻	Tı	rt_p	ipe_	_crea	ate()			 		 	 	 		557
			6.92.2.6	S CO	MPA ⁻	Tı	rt_ta	ask_	_crea	ate()			 		 	 	 		558
			6.92.2.7	CO	MPA ⁻	Tı	rt_ta	ask_	_set_	_peri	odic	:() .	 		 	 	 		559
			6.92.2.8	3 pth	read_	_mak	ke_r	peric	odic_	_np()		 		 	 	 		560
			6.92.2.9) pth	read_	_wait	it_np	o() .					 		 	 	 		561
			6.92.2.1	Ort_a	alarm _.	_wa	ait() .						 		 	 	 		562
7	Dete	Cture	ture Doc		mtati														563
7																			
	7.1		nannel Str																
		7.1.1	Detailed																
		7.1.2	Field Do																
			7.1.2.1		gs														
			7.1.2.2																
	7.2		nannels_c																
		7.2.1	Detailed																
		7.2.2	Field Do																
			7.2.2.1	cha	ans .								 	٠.	 	 	 		564
			7.2.2.2	len	gth .								 		 	 	 		565
			7.2.2.3	mo	de .								 	٠.	 	 	 		565
	7.3	a4l_cr	nd_desc	Stru	ct Ref	ferer	nce						 		 	 	 		565

xxxii CONTENTS

	7.3.1	Detailed Description
	7.3.2	Field Documentation
		7.3.2.1 data_len
		7.3.2.2 idx_subd
7.4	a4l_de	escriptor Struct Reference
	7.4.1	Detailed Description
	7.4.2	Field Documentation
		7.4.2.1 board_name
		7.4.2.2 driver_name
		7.4.2.3 fd
		7.4.2.4 idx_read_subd
		7.4.2.5 idx_write_subd
		7.4.2.6 magic
		7.4.2.7 nb_subd
		7.4.2.8 sbdata
		7.4.2.9 sbsize
7.5	a4l_dr	iver Struct Reference
	7.5.1	Detailed Description
7.6	a4l_in	struction Struct Reference
	7.6.1	Detailed Description
	7.6.2	Field Documentation
		7.6.2.1 idx_subd
7.7	a4l_in	struction_list Struct Reference
	7.7.1	Detailed Description
7.8	a4l_ra	nge Struct Reference
	7.8.1	Detailed Description
	7.8.2	Field Documentation
		7.8.2.1 flags
		7.8.2.2 max
		7.8.2.3 min

CONTENTS xxxiii

7.9 a4l_subdevice Struct Reference
7.9.1 Detailed Description
7.10 atomic_t Struct Reference
7.10.1 Detailed Description
7.11 can_bittime Struct Reference
7.11.1 Detailed Description
7.12 can_bittime_btr Struct Reference
7.12.1 Detailed Description
7.13 can_bittime_std Struct Reference
7.13.1 Detailed Description
7.14 can_filter Struct Reference
7.14.1 Detailed Description
7.14.2 Field Documentation
7.14.2.1 can_id
7.14.2.2 can_mask
7.15 can_frame Struct Reference
7.15.1 Detailed Description
7.15.2 Field Documentation
7.15.2.1 can_id
7.16 can_ifreq Struct Reference
7.16.1 Detailed Description
7.17 macb_dma_desc Struct Reference
7.17.1 Detailed Description
7.18 macb_tx_skb Struct Reference
7.18.1 Detailed Description
7.19 RT_ALARM_INFO Struct Reference
7.19.1 Detailed Description
7.20 RT_BUFFER_INFO Struct Reference
7.20.1 Detailed Description
7.21 RT_COND_INFO Struct Reference

XXXIV

7.21.1 Detailed Description
7.22 RT_EVENT_INFO Struct Reference
7.22.1 Detailed Description
7.23 RT_HEAP_INFO Struct Reference
7.23.1 Detailed Description
7.23.2 Field Documentation
7.23.2.1 heapsize
7.23.2.2 usablemem
7.23.2.3 usedmem
7.24 RT_MUTEX_INFO Struct Reference
7.24.1 Detailed Description
7.24.2 Field Documentation
7.24.2.1 owner
7.25 RT_QUEUE_INFO Struct Reference
7.25.1 Detailed Description
7.26 RT_SEM_INFO Struct Reference
7.26.1 Detailed Description
7.27 RT_TASK_INFO Struct Reference
7.27.1 Detailed Description
7.28 rt_timer_info Struct Reference
7.28.1 Detailed Description
7.28.2 Field Documentation
7.28.2.1 date
7.29 rtdm_dev_context Struct Reference
7.29.1 Detailed Description
7.29.2 Field Documentation
7.29.2.1 device
7.30 rtdm_device Struct Reference
7.30.1 Detailed Description
7.30.2 Field Documentation

CONTENTS

7.30.2.1 "@11
7.30.2.2 driver
7.30.2.3 label
7.30.2.4 minor
7.31 rtdm_device_info Struct Reference
7.31.1 Detailed Description
7.32 rtdm_driver Struct Reference
7.32.1 Detailed Description
7.32.2 Field Documentation
7.32.2.1 base_minor
7.32.2.2 context_size
7.32.2.3 device_count
7.32.2.4 device_flags
7.32.2.5 profile_info
7.33 rtdm_fd_ops Struct Reference
7.33.1 Detailed Description
7.33.2 Field Documentation
7.33.2.1 close
7.33.2.2 get_unmapped_area
7.33.2.3 ioctl_nrt
7.33.2.4 ioctl_rt
7.33.2.5 mmap
7.33.2.6 open
7.33.2.7 read_nrt
7.33.2.8 read_rt
7.33.2.9 recvmsg_nrt
7.33.2.10recvmsg_rt
7.33.2.11select
7.33.2.12sendmsg_nrt
7.33.2.13sendmsg_rt

xxxvi CONTENTS

7.33.2.14socket
7.33.2.15write_nrt
7.33.2.16write_rt
7.34 rtdm_sm_ops Struct Reference
7.34.1 Detailed Description
7.35 rtdm_spi_config Struct Reference
7.35.1 Detailed Description
7.36 rtipc_port_label Struct Reference
7.36.1 Detailed Description
7.36.2 Field Documentation
7.36.2.1 label
7.37 rtser_config Struct Reference
7.37.1 Detailed Description
7.38 rtser_event Struct Reference
7.38.1 Detailed Description
7.39 rtser_status Struct Reference
7.39.1 Detailed Description
7.40 sockaddr_can Struct Reference
7.40.1 Detailed Description
7.40.2 Field Documentation
7.40.2.1 can_ifindex
7.41 sockaddr_ipc Struct Reference
7.41.1 Detailed Description
7.41.2 Field Documentation
7.41.2.1 sipc_port
7.42 udd_device Struct Reference
7.42.1 Detailed Description
7.42.2 Field Documentation
7.42.2.1 close
7.42.2.2 device_flags

CONTENTS xxxvii

7.42.2.3 device_subclass
7.42.2.4 interrupt
7.42.2.5 ioctl
7.42.2.6 irq
7.42.2.7 mem_regions
7.42.2.8 mmap
7.42.2.9 open
7.43 udd_memregion Struct Reference
7.43.1 Detailed Description
7.43.2 Field Documentation
7.43.2.1 addr
7.43.2.2 len
7.43.2.3 type
7.44 udd_device::udd_reserved Struct Reference
7.44.1 Detailed Description
7.45 udd_signotify Struct Reference
7.45.1 Detailed Description
7.45.2 Field Documentation
7.45.2.1 pid
7.45.2.2 sig
7.46 xnheap::xnbucket Struct Reference
7.46.1 Detailed Description
7.47 xnsched Struct Reference
7.47.1 Detailed Description
7.47.2 Field Documentation
7.47.2.1 cpu
7.47.2.2 curr
7.47.2.3 htimer
7.47.2.4 inesting
7.47.2.5 Iflags

xxxviii CONTENTS

7.47.	2.6 resched	611
7.47.	2.7 rrbtimer	611
7.47.	2.8 rt	611
7.47.	2.9 status	611
7.48 xnvfile_lock_	ops Struct Reference	611
7.48.1 Deta	iled Description	612
7.48.2 Field	Documentation	612
7.48.	2.1 get	612
7.48.	2.2 put	612
7.49 xnvfile_regu	lar_iterator Struct Reference	613
7.49.1 Deta	iled Description	613
7.49.2 Field	Documentation	613
7.49.	2.1 pos	613
7.49.	2.2 private	613
7.49.	2.3 seq	614
7.49.	2.4 vfile	614
7.50 xnvfile_regu	lar_ops Struct Reference	614
7.50.1 Deta	iled Description	614
7.50.2 Field	Documentation	614
	2.1 begin	
	2.2 end	
	2.3 next	
	2.4 rewind	
	2.5 show	
	2.6 store	
	tag Struct Reference	
	Beauty and the second	
	Documentation	
	2.1 rev	
7.52 xnvfile_snap	shot Struct Reference	619

CONTENTS xxxix

		7.52.1	Detailed	Descrip	otion .									 	 		620
	7.53	xnvfile	_snapsho	t_iterat	or Stru	uct Re	feren	ce .						 	 		620
		7.53.1	Detailed	Descrip	otion .									 	 		621
		7.53.2	Field Do	cument	ation .									 	 		621
			7.53.2.1	databu	ıf									 	 		621
			7.53.2.2	endfn										 	 		621
			7.53.2.3	nrdata										 	 		621
			7.53.2.4	private										 	 		621
			7.53.2.5	seq .										 	 		621
			7.53.2.6	vfile .										 	 		622
	7.54	xnvfile	_snapsho	t_ops S	Struct I	Refere	ence							 	 		622
		7.54.1	Detailed	Descrip	otion .									 	 		622
		7.54.2	Field Do	cument	ation .									 	 		622
			7.54.2.1	begin										 	 	 	622
			7.54.2.2	end .										 	 		623
			7.54.2.3	next .										 	 	 	623
			7.54.2.4	rewind										 	 	 	624
			7.54.2.5	show										 	 		625
			7.54.2.6	store										 	 		625
8	File	Docum	nentation														629
	8.1	include	e/cobalt/ke	ernel/rto	dm/ana	alogy/	chanr	nel_ra	ange	.h Fil	e Re	efere	nce	 	 	 	629
		8.1.1	Detailed	Descrip	otion .									 	 	 	631
	8.2	include	e/cobalt/ke	ernel/rto	dm/ana	alogy/	'driver	h Fil	e Re	ferer	nce			 	 	 	632
		8.2.1	Detailed	Descrip	otion .									 	 	 	632
	8.3	include	e/cobalt/ke	ernel/rto	dm/driv	ver.h f	File R	efere	nce					 	 	 	633
		8.3.1	Detailed	Descrip	otion .									 	 	 	638
		8.3.2	Macro D	efinition	ı Docu	ımenta	ation							 	 		638
			8.3.2.1	RTDM	_CLAS	SS_M	AGIC							 	 	 	638
			8.3.2.2	RTDM	_PRO	FILE_	INFO							 	 	 	638
		8.3.3	Function	Docum	nentati	on								 	 		639

xI CONTENTS

		8.3.3.1	rtdm_fd_device()	39
		8.3.3.2	rtdm_fd_is_user()	10
		8.3.3.3	rtdm_fd_to_private()	10
		8.3.3.4	rtdm_private_to_fd()	10
8.4	include	e/cobalt/k	ernel/rtdm/analogy/subdevice.h File Reference	11
	8.4.1	Detailed	Description	12
8.5	include	e/rtdm/ca	n.h File Reference	12
	8.5.1	Detailed	Description	13
8.6	include	e/rtdm/ua	pi/can.h File Reference	13
	8.6.1	Detailed	Description	50
8.7	include	e/cobalt/k	ernel/rtdm/fd.h File Reference	50
	8.7.1	Detailed	Description	51
	8.7.2	Function	Documentation	51
		8.7.2.1	rtdm_fd_get()	52
		8.7.2.2	rtdm_fd_lock()	52
		8.7.2.3	rtdm_fd_put()	53
		8.7.2.4	rtdm_fd_select()	53
		8.7.2.5	rtdm_fd_unlock()	54
8.8	include	e/rtdm/ua	pi/ipc.h File Reference	54
	8.8.1	Detailed	Description	57
8.9	include	e/rtdm/rtc	lm.h File Reference	58
	8.9.1	Detailed	Description	58
8.10	include	e/rtdm/ua	pi/rtdm.h File Reference	58
	8.10.1	Detailed	Description	30
8.11	include	e/rtdm/se	rial.h File Reference	30
	8.11.1	Detailed	Description	31
8.12	include	e/rtdm/ua	pi/serial.h File Reference	31
	8.12.1	Detailed	Description	35
	8.12.2	Macro D	Definition Documentation	36
		8.12.2.1	RTSER_RTIOC_BREAK_CTL	36

CONTENTS xli

8.12.2.2 RTSER_RTIOC_GET_CONFIG
8.12.2.3 RTSER_RTIOC_GET_CONTROL
8.12.2.4 RTSER_RTIOC_GET_STATUS
8.12.2.5 RTSER_RTIOC_SET_CONFIG
8.12.2.6 RTSER_RTIOC_SET_CONTROL
8.12.2.7 RTSER_RTIOC_WAIT_EVENT
8.13 include/rtdm/testing.h File Reference
8.13.1 Detailed Description
8.14 include/rtdm/uapi/testing.h File Reference
8.14.1 Detailed Description
8.15 include/cobalt/kernel/rtdm/udd.h File Reference
8.15.1 Detailed Description
8.16 include/rtdm/uapi/udd.h File Reference
8.16.1 Detailed Description
8.17 include/rtdm/analogy.h File Reference
8.17.1 Detailed Description
8.18 include/rtdm/uapi/analogy.h File Reference
8.18.1 Detailed Description
8.18.2 Macro Definition Documentation
8.18.2.1 A4L_RNG_FACTOR
8.19 lib/analogy/calibration.h File Reference
8.19.1 Detailed Description
8.20 lib/analogy/internal.h File Reference
8.20.1 Detailed Description
8.21 lib/analogy/async.c File Reference
8.21.1 Detailed Description
8.22 lib/analogy/calibration.c File Reference
8.22.1 Detailed Description
8.23 lib/analogy/descriptor.c File Reference
8.23.1 Detailed Description
8.24 lib/analogy/range.c File Reference
8.24.1 Detailed Description
8.25 lib/analogy/root_leaf.h File Reference
8.25.1 Detailed Description
8.26 lib/analogy/sync.c File Reference
8.26.1 Detailed Description
8.27 lib/analogy/sys.c File Reference
8.27.1 Detailed Description

xlii CONTENTS

9	Exar	nple Documentation	691
	9.1	bufp-label.c	691
	9.2	bufp-readwrite.c	693
	9.3	can-rtt.c	696
	9.4	cross-link.c	701
	9.5	iddp-label.c	704
	9.6	iddp-sendrecv.c	707
	9.7	rtcanconfig.c	710
	9.8	rtcanrecv.c	713
	9.9	rtcansend.c	716
	9.10	xddp-echo.c	720
	9.11	xddp-label.c	723
	9.12	xddp-stream.c	727
Inc	dex		731

Chapter 1

API service tags

All services from the Cobalt/POSIX library, or which belong to APIs based on the Copperplate library may be restricted to particular calling contexts, or entail specific side-effects.

In dual kernel mode, the Cobalt API underlies all other application-oriented APIs, providing POSIX real-time services over the Cobalt real-time core. Therefore, the information below applies to all application-oriented APIs available with Xenomai, such as the Cobalt/POSIX library, the Alchemy API, and to all RTOS emulators as well. To describe this information, each service documented by this section bears a set of tags when applicable.

The table below matches the tags used throughout the documentation with the description of their meaning for the caller.

Attention

By Xenomai thread, we mean any thread created by a Xenomai API service, including real-time Cobalt/POSIX threads in dual kernel mode. By regular/plain POSIX thread, we mean any thread directly created by the standard *glibc-based* POSIX service over Mercury or Cobalt (i.e. NPT L/linuxthreads __STD(pthread_create())), excluding such threads which have been promoted to the real-time domain afterwards (aka "shadowed") over Cobalt.

Context tags

Tag	Context on entry
xthread-only	Must be called from a Xenomai thread
xhandler-only	Must be called from a Xenomai handler. See note.
xcontext	May be called from any Xenomai context (thread or handler).
pthread-only	Must be called from a regular POSIX thread
thread-unrestricted	May be called from a Xenomai or regular POSIX thread indifferently
xthread-nowait	May be called from a Xenomai thread unrestricted, or from a regular thread as a non-blocking service only. See note.
unrestricted	May be called from any context previously described

2 API service tags

Note

A Xenomai handler is used for callback-based notifications from Copperplate-based APIs, such as timeouts. This context is *NOT* mapped to a regular Linux signal handler, it is actually underlaid by a special thread context, so that async-unsafe POSIX services may be invoked internally by the API implementation when running on behalf of such handler. Therefore, calling Xenomai API services from asynchronous regular signal handlers is fundamentally unsafe.

Over Cobalt, the main thread is a particular case, which starts as a regular POSIX thread, then is automatically switched to a Cobalt thread as part of the initialization process, before the main() routine is invoked, unless automatic bootstrap was disabled (see http://xenomai.com/2015/05/application-setup-and-init/#Application_entry_CC).

Possible side-effects when running the application over the Cobalt core (i.e. dual kernel configuration)

Tag	Description
switch-primary	the caller may switch to primary mode
switch-secondary	the caller may switch to secondary mode

Note

As a rule of thumb, any service which might block the caller, causes a switch to primary mode if invoked from secondary mode. This rule might not apply in case the service can complete fully from user-space without any syscall entailed, due to a particular optimization (e.g. fast acquisition of semaphore resources directly from user-space in the non-contended case). Therefore, the switch-{primary, secondary} tags denote either services which will always switch the caller to the mode mentioned, or might have to do so, depending on the context. The absence of such tag indicates that such services can complete in either modes and as such will entail no switch.

Chapter 2

Deprecated List

Global COMPAT__rt_alarm_create (RT_ALARM *alarm, const char *name)

This is a compatibility service from the Transition Kit.

Global COMPAT__rt_event_clear (RT_EVENT *event, unsigned long mask, unsigned long *mask_r)

This is a compatibility service from the Transition Kit.

Global COMPAT__rt_event_create (RT_EVENT *event, const char *name, unsigned long ivalue, int mode)

This is a compatibility service from the Transition Kit.

Global COMPAT rt event signal (RT EVENT *event, unsigned long mask)

This is a compatibility service from the Transition Kit.

Global COMPAT__rt_task_create (RT_TASK *task, const char *name, int stksize, int prio, int mode)

This is a compatibility service from the Transition Kit.

Global COMPAT__rt_task_set_periodic (RT_TASK *task, RTIME idate, RTIME period)

This is a compatibility service from the Transition Kit.

Module IOCTLs

Passing struct ifreqas a request descriptor for CAN IOCTLs is still accepted for backward compatibility, however it is recommended to switch to struct can_ifreqat the first opportunity.

Module IOCTLs

Passing struct ifreqas a request descriptor for CAN IOCTLs is still accepted for backward compatibility, however it is recommended to switch to struct can_ifreqat the first opportunity.

Global pthread_make_periodic_np (pthread_t thread, struct timespec *starttp, struct timespec *periodtp)

This service is a non-portable extension of the Xenomai 2.x POSIX interface, not available with Xenomai 3.x. Instead, Cobalt-based applications should set up a periodic timer using the timer_create(), timer_settime() call pair, then wait for release points via sigwaitinfo(). Overruns can be detected by looking at the siginfo.

si_overrun field. Alternatively, applications may obtain a file descriptor referring to a Cobalt timer via the timerfd() call, and read() from it to wait for timeouts.

4 Deprecated List

Global pthread wait np (unsigned long *overruns r)

This service is a non-portable extension of the Xenomai 2.x POSIX interface, not available with Xenomai 3.x. Instead, Cobalt-based applications should set up a periodic timer using the timer_create(), timer_settime() call pair, then wait for release points via sigwaitinfo(). Overruns can be detected by looking at the siginfo.

si_overrun field. Alternatively, applications may obtain a file descriptor referring to a Cobalt timer via the timerfd() call, and read() from it to wait for timeouts.

Global rt_alarm_wait (RT_ALARM *alarm)

This is a compatibility service from the Transition Kit.

Global RTDM EXECUTE ATOMICALLY (code block)

This construct will be phased out in Xenomai 3.0. Please use rtdm_waitqueue services instead.

Global rtdm_task_sleep_until (nanosecs_abs_t wakeup_time)

Use rtdm_task_sleep_abs instead!

Chapter 3

Module Index

3.1 Modules

Here is a list of all modules:

RTDM	67
RTDM User API	70
Driver programming interface	136
Driver to driver services	. 137
Device Registration Services	. 158
Clock Services	
Task Services	
Timer Services	
Synchronisation Services	
Big dual kernel lock	
Spinlock with preemption deactivation	
Event Services	
Semaphore Services	
Mutex services	
Interrupt Management Services	
Non-Real-Time Signalling Services	
Utility Services	
Device Profiles	
User-space driver core	
CAN Devices	
Serial Devices	
Testing Devices	
Real-time IPC	
Cobalt	
Cobalt kernel	
Asynchronous Procedure Calls	
In-kernel arithmetics	
Buffer descriptor	
Clock services	
Debugging services	
Dynamic memory allocation services	
Interrupt management	
Locking services	
Lightweight key-to-object mapping service	. 127

6 Module Index

Registry services	132
Thread scheduling control	239
SCHED_QUOTA scheduling policy	238
Synchronous I/O multiplexing	241
Thread synchronization services	246
Thread services	
Thread state flags	
Thread information flags	
Timer services	
Virtual file services	
Analogy framework	
Driver API	
Channels and ranges	
Driver management services	
Subdevice management services	
Buffer management services	
Interrupt management services	
Misc services	
Analogy user API	
Level 1 API	
Asynchronous acquisition API	
Descriptor API	
Synchronous acquisition API	
Level 2 API	
Asynchronous acquisition API	
Math API	
Range / conversion API	
Level 0 API	
Descriptor Syscall API	
Basic Syscall API	
Attach / detach Syscall API	
POSIX interface	
Clocks and timers	
Condition variables	
Message queues	333
Mutual exclusion	
Process scheduling	
Semaphores	368
Thread management	376
Scheduling management	382
Smokey API	387
Alchemy API	479
Alarm services	437
Buffer services	442
Condition variable services	453
Event flag group services	
Heap management services	
Mutex services	
Message pipe services	
Message queue services	
Semaphore services	
Task management services	
Timer management services	
VxWorks® emulator	
pSOS® emulator	
IIaiiaiiioii (\text{\text{I}} \cdots \text{\ti}\text{\texi{\text{\texi{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\tin}\tint{\text{\text{\text{\text{\text{\text{\text{\text{\text{\tin}\tint{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\texitit}\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\texi}\text{\text{\text{\texi}\text{\text{\texit{\texi}\text{\texit{\texitit}\text{\texititht{\texitithtet{\texitit}\texitit{\texititht{\texit{\texi{\texit{\texi{\texi{\texi{\tint{\texi\	553

Chapter 4

Data Structure Index

4.1 Data Structures

Here are the data structures with brief descriptions:

a4l_channel	
Structure describing some channel's characteristics	63
a4l_channels_desc	
Structure describing a channels set	64
a4l_cmd_desc	
S ,	65
a4l_descriptor	
S .	666
a4l_driver	
<u> </u>	68
a4l_instruction	
9 ,	69
a4l_instruction_list	٠,,
Structure describing the list of synchronous instructions)/(
a4l_range	,
Structure describing a (unique) range) /
a4l_subdevice	7,
Structure describing the subdevice)/2
atomic_t	70
Copyright © 2011 Gilles Chanteperdrix gilles.chanteperdrix@xenomai.org 5) / 3
can_bittime Custom CAN bit-time definition	7,
can bittime btr) / 4
Hardware-specific BTR bit-times	75
can bittime std)/:
Standard bit-time parameters according to Bosch	75
can_filter)/ (
	576
can_frame	,,,
	77
can_ifreq	
	78
macb_dma_desc	
Hardware DMA descriptor	579
macb_tx_skb	
Data about an skb which is being transmitted	579

8 Data Structure Index

RT_ALARM_INFO
Alarm status descriptor
RT_BUFFER_INFO Buffer status descriptor
RT COND INFO
Condition variable status descriptor
RT_EVENT_INFO
Event status descriptor
Heap status descriptor
RT_MUTEX_INFO
Mutex status descriptor
Queue status descriptor
RT_SEM_INFO
Semaphore status descriptor
RT_TASK_INFO Task status descriptor
rt timer info
Timer status descriptor
rtdm_dev_context
Device context
RTDM device
rtdm_device_info
Device information
RTDM driver
rtdm_fd_ops
RTDM file operation descriptor
RTDM state management handlers
rtdm_spi_config
rtipc_port_label
Port label information structure
Serial device configuration
rtser_event
Additional information about serial device events
rtser_status Serial device status
sockaddr_can
Socket address structure for the CAN address family 600
sockaddr_ipc Socket address structure for the RTIPC address family 601
udd_device
udd_memregion 606
udd_device::udd_reserved Reserved to the UDD core
udd signotify
UDD event notification descriptor
xnheap::xnbucket
Log2 bucket list
Scheduling information structure
xnvfile_lock_ops
Vfile locking operations

4.1 Data Structures 9

nvfile_regular_iterator	
Regular vfile iterator	13
nvfile_regular_ops	
Regular vfile operation descriptor	14
nvfile_rev_tag	
Snapshot revision tag	19
nvfile_snapshot	
Snapshot vfile descriptor	19
nvfile_snapshot_iterator	
Snapshot-driven vfile iterator	20
nvfile_snapshot_ops	
Snapshot vfile operation descriptor	22

10 Data Structure Index

Chapter 5

File Index

5.1 File List

Here is a list of all documented files with brief descriptions:

include/alchemy/alarm.h	-
	?
	?
	?
	?
include/alchemy/heap.h	?
include/alchemy/mutex.h	-
	?
	?
	?
	?
a a a a a a a a a a a a a a a a a a a	?
	?
	?
	?
	?
	?
	?
	?
include/boilerplate/lock.h	_
	?
	?
	?
	?
	?
	?
	?
	?
	?
	?
	?
	?
	?
	?
include/cobalt/stdio.h ?	?

12 File Index

include/cobalt/ stdlib.h	??
include/cobalt/syslog.h	??
include/cobalt/ticks.h	??
include/cobalt/time.h	??
include/cobalt/trace.h	??
include/cobalt/tunables.h	??
include/cobalt/unistd.h	??
include/cobalt/wrappers.h	??
include/cobalt/boilerplate/limits.h	??
include/cobalt/boilerplate/ sched.h	??
include/cobalt/boilerplate/signal.h	??
include/cobalt/boilerplate/ trace.h	??
include/cobalt/boilerplate/wrappers.h	??
include/cobalt/kernel/ancillaries.h	??
include/cobalt/kernel/apc.h	??
include/cobalt/kernel/arith.h	??
include/cobalt/kernel/ assert.h	??
include/cobalt/kernel/ bufd.h	??
include/cobalt/kernel/ clock.h	
include/cobalt/kernel/ compat.h	??
include/cobalt/kernel/ heap.h	
include/cobalt/kernel/ init.h	
include/cobalt/kernel/ intr.h	
include/cobalt/kernel/ list.h	??
include/cobalt/kernel/ lock.h	??
include/cobalt/kernel/ map.h	??
include/cobalt/kernel/ pipe.h	??
include/cobalt/kernel/ ppd.h	??
include/cobalt/kernel/registry.h	??
include/cobalt/kernel/ sched-idle.h	??
include/cobalt/kernel/ sched-quota.h	
include/cobalt/kernel/ sched-rt.h	
include/cobalt/kernel/ sched-sporadic.h	
include/cobalt/kernel/ sched-tp.h	
include/cobalt/kernel/ sched-weak.h	
include/cobalt/kernel/ sched.h	
include/cobalt/kernel/ schedparam.h	??
include/cobalt/kernel/ schedqueue.h	??
include/cobalt/kernel/ select.h	??
include/cobalt/kernel/ stat.h	??
include/cobalt/kernel/ synch.h	??
include/cobalt/kernel/thread.h	??
include/cobalt/kernel/timer.h	??
include/cobalt/kernel/ trace.h	??
include/cobalt/kernel/tree.h	??
include/cobalt/kernel/ vdso.h	??
include/cobalt/kernel/ vfile.h	??
include/cobalt/kernel/rtdm/autotune.h	??
include/cobalt/kernel/rtdm/can.h	??
include/cobalt/kernel/rtdm/cobalt.h	??
include/cobalt/kernel/rtdm/compat.h	??
include/cobalt/kernel/rtdm/driver.h	
Real-Time Driver Model for Xenomai, driver API header	633
include/cobalt/kernel/rtdm/fd.h	650
include/cobalt/kernel/rtdm/ipc.h	??
include/cobalt/kernel/rtdm/rtdm.h	
include/cobalt/kernel/rtdm/serial.h	
include/cobalt/kernel/rtdm/testing.h	??

5.1 File List

include/cobalt/kernel/rtdm/udd.h
Copyright (C) 2014 Philippe Gerum rpm@xenomai.org 672
include/cobalt/kernel/rtdm/analogy/ buffer.h
include/cobalt/kernel/rtdm/analogy/channel_range.h
Analogy for Linux, channel, range related features 629
include/cobalt/kernel/rtdm/analogy/ command.h
include/cobalt/kernel/rtdm/analogy/context.h
include/cobalt/kernel/rtdm/analogy/ device.h
include/cobalt/kernel/rtdm/analogy/driver.h
Analogy for Linux, driver facilities
include/cobalt/kernel/rtdm/analogy/instruction.h
include/cobalt/kernel/rtdm/analogy/ rtdm_helpers.h
include/cobalt/kernel/rtdm/analogy/subdevice.h
Analogy for Linux, subdevice related features
include/cobalt/kernel/rtdm/analogy/ transfer.h
include/cobalt/sys/cobalt.h
include/cobalt/sys/ioctl.h
include/cobalt/sys/mman.h
include/cobalt/sys/select.h
include/cobalt/sys/socket.h
include/cobalt/sys/time.h
include/cobalt/sys/timerfd.h
include/cobalt/uapi/cond.h
include/cobalt/uapi/corectl.h
include/cobalt/uapi/event.h
include/cobalt/uapi/monitor.h
include/cobalt/uapi/mutex.h
include/cobalt/uapi/sched.h
include/cobalt/uapi/sem.h ??
include/cobalt/uapi/signal.h
include/cobalt/uapi/syscall.h
include/cobalt/uapi/thread.h
include/cobalt/uapi/time.h
include/cobalt/uapi/asm-generic/arith.h
include/cobalt/uapi/asm-generic/ features.h
include/cobalt/uapi/asm-generic/syscall.h
include/cobalt/uapi/kernel/ heap.h
include/cobalt/uapi/kernel/ limits.h
include/cobalt/uapi/kernel/pipe.h
include/cobalt/uapi/kernel/ synch.h
include/cobalt/uapi/kernel/thread.h
include/cobalt/uapi/kernel/trace.h
include/cobalt/uapi/kernel/types.h
include/cobalt/uapi/kernel/ urw.h
include/cobalt/uapi/kernel/ vdso.h
include/copperplate/clockobj.h
include/copperplate/cluster.h
include/copperplate/debug.h
include/copperplate/eventobj.h
include/copperplate/heapobj.h
include/copperplate/reference.h
include/copperplate/registry-obstack.h??
include/copperplate/registry.h
include/copperplate/semobj.h
include/copperplate/syncobj.h
include/copperplate/threadobj.h
include/copperplate/timerobj.h??
include/copperplate/traceobj.h??

14 File Index

include/copperplate/tunables.h	
include/copperplate/wrappers.h	
include/mercury/ pthread.h	
include/mercury/boilerplate/ limits.h	
include/mercury/boilerplate/ sched.h	
include/mercury/boilerplate/ signal.h	
include/mercury/boilerplate/ trace.h	
include/mercury/boilerplate/wrappers.h	. ??
include/psos/ psos.h	. ??
include/psos/tunables.h	. ??
include/rtdm/analogy.h	
Analogy for Linux, library facilities	. 675
include/rtdm/autotune.h	. ??
include/rtdm/can.h	. 642
include/rtdm/gpio.h	. ??
include/rtdm/ipc.h	. ??
include/rtdm/rtdm.h	. 658
include/rtdm/serial.h	
Real-Time Driver Model for Xenomai, serial device profile header	. 660
include/rtdm/ spi.h	. ??
include/rtdm/testing.h	
Real-Time Driver Model for Xenomai, testing device profile header	. 669
include/rtdm/ udd.h	
include/rtdm/uapi/analogy.h	
Analogy for Linux, UAPI bits	. 676
include/rtdm/uapi/autotune.h	
include/rtdm/uapi/can.h	
Real-Time Driver Model for RT-Socket-CAN, CAN device profile header	. 643
include/rtdm/uapi/gpio.h	
include/rtdm/uapi/ipc.h	
This file is part of the Xenomai project	. 654
include/rtdm/uapi/rtdm.h	
Real-Time Driver Model for Xenomai, user API header	. 658
include/rtdm/uapi/serial.h	
Real-Time Driver Model for Xenomai, serial device profile header	. 661
include/rtdm/uapi/ spi.h	
include/rtdm/uapi/testing.h	
Real-Time Driver Model for Xenomai, testing device profile header	. 670
include/rtdm/uapi/udd.h	
This file is part of the Xenomai project	. 674
include/smokey/ smokey.h	. ??
include/trank/ rtdk.h	. ??
include/trank/ trank.h	??
include/trank/native/ alarm.h	??
include/trank/native/ buffer.h	. ??
include/trank/native/ cond.h	??
include/trank/native/ event.h	. ??
include/trank/native/ heap.h	??
include/trank/native/ misc.h	. ??
include/trank/native/ mutex.h	. ??
include/trank/native/ pipe.h	. ??
include/trank/native/ queue.h	. ??
include/trank/native/ sem.h	. ??
include/trank/native/task.h	. ??
include/trank/native/timer.h	. ??
include/trank/native/ types.h	. ??
include/trank/native/types.n include/trank/posix/pthread.h include/trank/posix/pthread.h	. ??
	. ??
include/trank/rtdm/ rtcan.h	. "

5.1 File List

include/trank/rtdm/rtdm.h
include/trank/rtdm/rtipc.h
include/trank/rtdm/rtserial.h
include/trank/rtdm/rttesting.h
include/vxworks/errnoLib.h
include/vxworks/intLib.h
include/vxworks/kernLib.h
include/vxworks/lstLib.h
include/vxworks/memPartLib.h
include/vxworks/msgQLib.h??
include/vxworks/rngLib.h
include/vxworks/semLib.h
include/vxworks/sysLib.h??
include/vxworks/taskHookLib.h
include/vxworks/taskInfo.h
include/vxworks/taskLib.h
include/vxworks/tickLib.h
include/vxworks/types.h
include/vxworks/wdLib.h
include/xenomai/init.h
include/xenomai/tunables.h
include/xenomai/version.h
kernel/cobalt/debug.h
kernel/cobalt/ procfs.h
kernel/cobalt/arch/arm/include/asm/xenomai/calibration.h
kernel/cobalt/arch/arm/include/asm/xenomai/features.h
kernel/cobalt/arch/arm/include/asm/xenomai/fptest.h
kernel/cobalt/arch/arm/include/asm/xenomai/ machine.h
kernel/cobalt/arch/arm/include/asm/xenomai/syscall.h
kernel/cobalt/arch/arm/include/asm/xenomai/syscall32.h
kernel/cobalt/arch/arm/include/asm/xenomai/thread.h
kernel/cobalt/arch/arm/include/asm/xenomai/wrappers.h
kernel/cobalt/arch/arm/include/asm/xenomai/uapi/ arith.h
kernel/cobalt/arch/arm/include/asm/xenomai/uapi/features.h
kernel/cobalt/arch/arm/include/asm/xenomai/uapi/ fptest.h
kernel/cobalt/arch/arm/include/asm/xenomai/uapi/syscall.h
kernel/cobalt/arch/arm/include/asm/xenomai/uapi/ tsc.h
kernel/cobalt/arch/blackfin/include/asm/xenomai/calibration.h
kernel/cobalt/arch/blackfin/include/asm/xenomai/features.h
kernel/cobalt/arch/blackfin/include/asm/xenomai/ fptest.h
kernel/cobalt/arch/blackfin/include/asm/xenomai/ machine.h
kernel/cobalt/arch/blackfin/include/asm/xenomai/syscall32.h
kernel/cobalt/arch/blackfin/include/asm/xenomai/thread.h
kernel/cobalt/arch/blackfin/include/asm/xenomai/wrappers.h ??
kernel/cobalt/arch/blackfin/include/asm/xenomai/uapi/arith.h
kernel/cobalt/arch/blackfin/include/asm/xenomai/uapi/ features.h
kernel/cobalt/arch/blackfin/include/asm/xenomai/uapi/ fptest.h
kernel/cobalt/arch/blackfin/include/asm/xenomai/uapi/syscall.h ??
kernel/cobalt/arch/powerpc/include/asm/xenomai/calibration.h
kernel/cobalt/arch/powerpc/include/asm/xenomai/ features.h
kernel/cobalt/arch/powerpc/include/asm/xenomai/fptest.h
kernel/cobalt/arch/powerpc/include/asm/xenomai/machine.h
kernel/cobalt/arch/powerpc/include/asm/xenomai/syscall.h
kernel/cobalt/arch/powerpc/include/asm/xenomai/syscall32.h
kernel/cobalt/arch/powerpc/include/asm/xenomai/thread.h
kernel/cobalt/arch/powerpc/include/asm/xenomai/wrappers.h
kernel/cobalt/arch/powerpc/include/asm/xenomai/uapi/ arith.h
·

16 File Index

kernel/cobalt/arch/powerpc/include/asm/xenomai/uapi/ features.h	??
kernel/cobalt/arch/powerpc/include/asm/xenomai/uapi/fptest.h	??
kernel/cobalt/arch/powerpc/include/asm/xenomai/uapi/ syscall.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/c1e.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/calibration.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/ features.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/fptest.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/ machine.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/ smi.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/ syscall.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/syscall32-table.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/syscall32.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/thread.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/ wrappers.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/uapi/ arith.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/uapi/ features.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/uapi/ fptest.h	??
kernel/cobalt/arch/x86/include/asm/xenomai/uapi/ syscall.h	??
kernel/cobalt/include/asm-generic/xenomai/ machine.h	??
kernel/cobalt/include/asm-generic/xenomai/ mayday.h	??
kernel/cobalt/include/asm-generic/xenomai/ pci ids.h	??
kernel/cobalt/include/asm-generic/xenomai/ syscall.h	??
kernel/cobalt/include/asm-generic/xenomai/syscall32.h	??
kernel/cobalt/include/asm-generic/xenomai/thread.h	??
kernel/cobalt/include/asm-generic/xenomai/wrappers.h	??
kernel/cobalt/include/ipipe/thread_info.h	??
kernel/cobalt/posix/ clock.h	??
kernel/cobalt/posix/ cond.h	??
kernel/cobalt/posix/corectl.h	??
kernel/cobalt/posix/event.h	??
kernel/cobalt/posix/extension.h	??
kernel/cobalt/posix/internal.h	??
kernel/cobalt/posix/in.h	??
kernel/cobalt/posix/memory.h	??
kernel/cobalt/posix/monitor.h	??
kernel/cobalt/posix/ mqueue.h	??
kernel/cobalt/posix/ mutex.h	??
kernel/cobalt/posix/process.h	??
kernel/cobalt/posix/ sched.h	??
kernel/cobalt/posix/sem.h	??
kernel/cobalt/posix/signal.h	??
kernel/cobalt/posix/syscall.h	??
kernel/cobalt/posix/syscall32.h	??
kernel/cobalt/posix/thread.h	??
kernel/cobalt/posix/timer.h	??
kernel/cobalt/posix/timerfd.h	??
kernel/cobalt/rtdm/internal.h	??
kernel/cobalt/trace/cobalt-core.h	??
kernel/cobalt/trace/cobalt-posix.h	??
kernel/cobalt/trace/cobalt-rtdm.h	??
kernel/drivers/analogy/ proc.h	??
kernel/drivers/analogy/proc.n	??
kernel/drivers/analogy/national_instruments/ mite.h	??
kernel/drivers/analogy/national_instruments/ ni_mio.h	??
kernel/drivers/analogy/national_instruments/ ni_stc.h	??
kernel/drivers/analogy/national instruments/ ni tio.h	??
kernel/drivers/can/ rtcan dev.h	??
kernel/drivers/can/rtcan internal.h	??
nemenanvers, cann ican_micina	: :

5.1 File List

kernel/drivers/can/rtcan_list.h
kernel/drivers/can/rtcan_raw.h??
kernel/drivers/can/rtcan_socket.h
kernel/drivers/can/rtcan_version.h
kernel/drivers/can/mscan/rtcan_mscan.h??
kernel/drivers/can/mscan/rtcan_mscan_regs.h
kernel/drivers/can/sja1000/rtcan_sja1000.h
kernel/drivers/can/sja1000/rtcan_sja1000_regs.h
kernel/drivers/gpio/gpio-core.h
kernel/drivers/ipc/internal.h
kernel/drivers/net/drivers/rt_at91_ether.h
kernel/drivers/net/drivers/rt_eth1394.h
kernel/drivers/net/drivers/rt_fec.h
kernel/drivers/net/drivers/rt_macb.h
kernel/drivers/net/drivers/rt_smc91111.h
kernel/drivers/net/drivers/e1000/e1000.h
kernel/drivers/net/drivers/e1000/e1000_hw.h
kernel/drivers/net/drivers/e1000/e1000_osdep.h
kernel/drivers/net/drivers/e1000/kcompat.h
kernel/drivers/net/drivers/e1000e/defines.h
kernel/drivers/net/drivers/e1000e/e1000.h
kernel/drivers/net/drivers/e1000e/hw.h
kernel/drivers/net/drivers/experimental/e1000/e1000.h
kernel/drivers/net/drivers/experimental/e1000/e1000_80003es2lan.h ??
kernel/drivers/net/drivers/experimental/e1000/e1000_82541.h
kernel/drivers/net/drivers/experimental/e1000/e1000_82543.h
kernel/drivers/net/drivers/experimental/e1000/e1000 82571.h
kernel/drivers/net/drivers/experimental/e1000/e1000 api.h
kernel/drivers/net/drivers/experimental/e1000/e1000_defines.h
kernel/drivers/net/drivers/experimental/e1000/e1000_hw.h
kernel/drivers/net/drivers/experimental/e1000/e1000 ich8lan.h ??
kernel/drivers/net/drivers/experimental/e1000/e1000_mac.h
kernel/drivers/net/drivers/experimental/e1000/e1000_manage.h ??
kernel/drivers/net/drivers/experimental/e1000/e1000_nvm.h
kernel/drivers/net/drivers/experimental/e1000/e1000_osdep.h
kernel/drivers/net/drivers/experimental/e1000/e1000_phy.h
kernel/drivers/net/drivers/experimental/e1000/e1000_regs.h
kernel/drivers/net/drivers/experimental/e1000/kcompat.h
kernel/drivers/net/drivers/experimental/rt2500/rt2500pci.h
kernel/drivers/net/drivers/experimental/rt2500/rt2x00.h
kernel/drivers/net/drivers/igb/e1000_82575.h
kernel/drivers/net/drivers/igb/e1000_defines.h
kernel/drivers/net/drivers/igb/e1000_hw.h
kernel/drivers/net/drivers/igb/e1000_i210.h
kernel/drivers/net/drivers/igb/e1000_mac.h
kernel/drivers/net/drivers/igb/e1000_mbx.h
kernel/drivers/net/drivers/igb/e1000_nvm.h
kernel/drivers/net/drivers/igb/e1000_phy.h
kernel/drivers/net/drivers/igb/e1000_regs.h
kernel/drivers/net/drivers/igb/igb.h
kernel/drivers/net/drivers/mpc52xx_fec/rt_mpc52xx_fec.h??
kernel/drivers/net/drivers/tulip/tulip.h
kernel/drivers/net/stack/include/ipv4_chrdev.h
kernel/drivers/net/stack/include/ nomac_chrdev.h
kernel/drivers/net/stack/include/ rtcfg_chrdev.h
kernel/drivers/net/stack/include/ rtdev.h
kernel/drivers/net/stack/include/ rtdev_mgr.h
kernel/drivers/net/stack/include/rtmac.h

18 File Index

kernel/drivers/net/stack/include/ rtnet.h	??
kernel/drivers/net/stack/include/ rtnet_chrdev.h	??
kernel/drivers/net/stack/include/ rtnet_internal.h	??
	??
and the state of t	??
and the state of t	??
-	??
	??
	??
	??
	??
_ · · · · · · · · · · · · · · · · · · ·	??
	??
	??
	??
and the second of the second o	??
and the second of the second o	??
	??
	??
	??
	??
	??
	??
	??
	??
	??
	??
	?? ??
	??
	??
	??
	??
	??
	??
	??
_	??
	??
=	??
	??
-	??
	??
	??
kernel/drivers/net/stack/include/rtmac/tdma/tdma_dev.h	??
kernel/drivers/net/stack/include/rtmac/tdma/tdma_ioctl.h	??
kernel/drivers/net/stack/include/rtmac/tdma/tdma_proto.h	??
kernel/drivers/net/stack/include/rtmac/tdma/tdma_worker.h	??
kernel/drivers/net/stack/ipv4/tcp/timerwheel.h	??
	??
	??
- 1	??
· ·	??
· ·	??
•	??
•	??
•	??
•	??
lib/alchemy/heap.h	??

5.1 File List

lib/alchemy/internal.h
lib/alchemy/mutex.h
lib/alchemy/pipe.h
lib/alchemy/queue.h??
lib/alchemy/reference.h
lib/alchemy/ sem.h
lib/alchemy/task.h
lib/alchemy/timer.h
lib/analogy/async.c Analogy for Linux, command, transfer, etc
lib/analogy/calibration.c
Analogy for Linux, device, subdevice, etc
lib/analogy/calibration.h
Analogy for Linux, internal calibration declarations
lib/analogy/descriptor.c
Analogy for Linux, descriptor related features
lib/analogy/internal.h
Analogy for Linux, internal declarations
lib/analogy/range.c
Analogy for Linux, range related features
lib/analogy/root_leaf.h
Analogy for Linux, root / leaf system
lib/analogy/sync.c
Analogy for Linux, instruction related features
lib/analogy/sys.c
Analogy for Linux, descriptor related features
lib/cobalt/internal.h ???
lib/cobalt/arch/arm/include/asm/xenomai/ features.h
lib/cobalt/arch/arm/include/asm/xenomai/syscall.h
lib/cobalt/arch/arm/include/asm/xenomai/tsc.h
lib/cobalt/arch/blackfin/include/asm/xenomai/features.h
lib/cobalt/arch/blackfin/include/asm/xenomai/syscall.h
lib/cobalt/arch/blackfin/include/asm/xenomai/tsc.h
lib/cobalt/arch/powerpc/include/asm/xenomai/features.h
lib/cobalt/arch/powerpc/include/asm/xenomai/syscall.h
lib/cobalt/arch/powerpc/include/asm/xenomai/tsc.h
lib/cobalt/arch/x86/include/asm/xenomai/features.h
lib/cobalt/arch/x86/include/asm/xenomai/syscall.h
lib/cobalt/arch/x86/include/asm/xenomai/tsc.h ??
lib/copperplate/internal.h
lib/psos/internal.h
lib/psos/pt.h
lib/psos/queue.h ??
lib/psos/reference.h??
lib/psos/ rn.h
lib/psos/ sem.h
lib/psos/ task.h
lib/psos/ tm.h
lib/trank/internal.h
lib/vxworks/memPartLib.h
lib/vxworks/msgQLib.h
lib/vxworks/reference.h
lib/vxworks/rngLib.h??
lib/vxworks/semLib.h
lib/vxworks/taskHookLib.h

20	File Inde

lib/vxworks/taskLib.h																	?	?
lib/vxworks/tickLib.h																	?	?
lih/vyworks/wdl ih h																	2	?


Chapter 6

Module Documentation

6.1 Channels and ranges

Channels.

Collaboration diagram for Channels and ranges:



Data Structures

- struct a4l_channel
 - Structure describing some channel's characteristics.
- struct a4l_channels_desc
 - Structure describing a channels set.
- struct a4l_range
 - Structure describing a (unique) range.

Macros

- #define A4L CHAN GLOBAL 0x10
 - Internal use flag (must not be used by driver developer)
- #define A4L_RNG_GLOBAL 0x8
 - Internal use flag (must not be used by driver developer)
- #define RANGE(x, y)
 - Macro to declare a (unique) range with no unit defined.
- #define RANGE_V(x, y)

Macro to declare a (unique) range in Volt.

#define RANGE_mA(x, y)

Macro to declare a (unique) range in milliAmpere.

• #define RANGE_ext(x, y)

Macro to declare a (unique) range in some external reference.

#define A4L RNG GLOBAL RNGDESC 0

Constant to define a ranges descriptor as global (inter-channel)

#define A4L_RNG_PERCHAN_RNGDESC 1

Constant to define a ranges descriptor as specific for a channel.

#define RNG_GLOBAL(x)

Macro to declare a ranges global descriptor in one line.

Channel reference

Flags to define the channel's reference

- #define A4L_CHAN_AREF_GROUND 0x1
 Ground reference.
- #define A4L_CHAN_AREF_COMMON 0x2
 Common reference.
- #define A4L_CHAN_AREF_DIFF 0x4

Differential reference.

#define A4L_CHAN_AREF_OTHER 0x8

Misc reference.

Channels declaration mode

Constant to define whether the channels in a descriptor are identical

• #define A4L_CHAN_GLOBAL_CHANDESC 0

Global declaration, the set contains channels with similar characteristics.

#define A4L_CHAN_PERCHAN_CHANDESC 1

Per channel declaration, the decriptor gathers differents channels.

6.1.1 Detailed Description

Channels.

According to the Analogy nomenclature, the channel is the elementary acquisition entity. One channel is supposed to acquire one data at a time. A channel can be:

- an analog input or an analog ouput;
- a digital input or a digital ouput;

Channels are defined by their type and by some other characteristics like:

- their resolutions for analog channels (which usually ranges from 8 to 32 bits);
- their references:

Such parameters must be declared for each channel composing a subdevice. The structure a4l_channel (struct a4l_channel) is used to define one channel.

Another structure named a4l_channels_desc (struct a4l_channels_desc) gathers all channels for a specific subdevice. This latter structure also stores :

- the channels count;
- the channels declaration mode (A4L_CHAN_GLOBAL_CHANDESC or A4L_CHAN_PERCHAN
 _CHANDESC): if all the channels composing a subdevice are identical, there is no need to declare
 the parameters for each channel; the global declaration mode eases the structure composition.

Usually the channels descriptor looks like this:

Ranges

So as to perform conversion from logical values acquired by the device to physical units, some range structure(s) must be declared on the driver side.

Such structures contain:

- the physical unit type (Volt, Ampere, none);
- the minimal and maximal values;

These range structures must be associated with the channels at subdevice registration time as a channel can work with many ranges. At configuration time (thanks to an Analogy command), one range will be selected for each enabled channel.

Consequently, for each channel, the developer must declare all the possible ranges in a structure called struct a4l_rngtab. Here is an example:

```
struct a41_rngtab example_tab = {
   length: 2,
   rngs: {
        RANGE_V(-5,5),
        RANGE_V(-10,10),
   },
};
```

For each subdevice, a specific structure is designed to gather all the ranges tabs of all the channels. In this structure, called struct a4l_rngdesc, three fields must be filled:

- the declaration mode (A4L RNG GLOBAL RNGDESC or A4L RNG PERCHAN RNGDESC);
- the number of ranges tab;
- the tab of ranges tabs pointers;

Most of the time, the channels which belong to the same subdevice use the same set of ranges. So, there is no need to declare the same ranges for each channel. A macro is defined to prevent redundant declarations: RNG GLOBAL().


Here is an example:

```
struct a4l_rngdesc example_rng = RNG_GLOBAL(example_tab);
```

24 Module Documentation

6.2 Big dual kernel lock

Collaboration diagram for Big dual kernel lock:



Macros

- #define cobalt_atomic_enter(__context)
 - Enter atomic section (dual kernel only)
- #define cobalt atomic leave(context)

Leave atomic section (dual kernel only)

• #define RTDM_EXECUTE_ATOMICALLY(code_block)

Execute code block atomically (DEPRECATED)

6.2.1 Detailed Description

6.2.2 Macro Definition Documentation

Enter atomic section (dual kernel only)

This call opens a fully atomic section, serializing execution with respect to all interrupt handlers (including for real-time IRQs) and Xenomai threads running on all CPUs.

Parameters

con	text	name of local variable to store the context in. This variable updated by the real-time	
		core will hold the information required to leave the atomic section properly.	

Note

Atomic sections may be nested. The caller is allowed to sleep on a blocking Xenomai service from primary mode within an atomic section delimited by cobalt_atomic_enter/cobalt_atomic_e leave calls. On the contrary, sleeping on a regular Linux kernel service while holding such lock is NOT valid.

Since the strongest lock is acquired by this service, it can be used to synchronize real-time and non-real-time contexts.

Warning

This service is not portable to the Mercury core, and should be restricted to Cobalt-specific use cases, mainly for the purpose of porting existing dual-kernel drivers which still depend on the obsolete RTDM_EXECUTE_ATOMICALLY() construct.

Leave atomic section (dual kernel only)

This call closes an atomic section previously opened by a call to cobalt_atomic_enter(), restoring the preemption and interrupt state which prevailed prior to entering the exited section.

Parameters

```
__context | name of local variable which stored the context.
```

Warning

This service is not portable to the Mercury core, and should be restricted to Cobalt-specific use cases.

6.2.2.3 RTDM_EXECUTE_ATOMICALLY

Execute code block atomically (DEPRECATED)

Generally, it is illegal to suspend the current task by calling rtdm_event_wait(), etc. while holding a spinlock. In contrast, this macro allows to combine several operations including a potentially rescheduling call to an atomic code block with respect to other RTDM_EXECUTE_ATOMICALLY() blocks. The macro is a light-weight alternative for protecting code blocks via mutexes, and it can even be used to synchronise real-time and non-real-time contexts.

Parameters

	code_block	Commands to be executed atomically
--	------------	------------------------------------

Note

It is not allowed to leave the code block explicitly by using break, return, goto, etc. This would leave the global lock held during the code block execution in an inconsistent state. Moreover, do not embed complex operations into the code bock. Consider that they will be executed under preemption lock with interrupts switched-off. Also note that invocation of rescheduling calls may break the atomicity until the task gains the CPU again.

Tags

unrestricted

Deprecated This construct will be phased out in Xenomai 3.0. Please use rtdm_waitqueue services instead.

See also

cobalt_atomic_enter().

6.3 Spinlock with preemption deactivation

Collaboration diagram for Spinlock with preemption deactivation:



Macros

- #define RTDM_LOCK_UNLOCKED(__name) IPIPE_SPIN_LOCK_UNLOCKED
 Static lock initialisation.
- #define rtdm_lock_get_irqsave(__lock, __context) ((__context) = __rtdm_lock_get_irqsave(__ ← lock))

Acquire lock and disable preemption, by stalling the head domain.

- #define rtdm lock irgsave(context) splhigh(context)
 - Disable preemption locally.
- #define rtdm_lock_irqrestore(__context) splexit(__context)

 Restore preemption state.

Typedefs

- typedef ipipe_spinlock_t rtdm_lock_t Lock variable.
- typedef unsigned long rtdm_lockctx_t
 Variable to save the context while holding a lock.

Functions

- static void rtdm_lock_init (rtdm_lock_t *lock)
 - Dynamic lock initialisation.
- static void rtdm_lock_get (rtdm_lock_t *lock)

Acquire lock from non-preemptible contexts.

- static void rtdm_lock_put (rtdm_lock_t *lock)
 - Release lock without preemption restoration.
- static void rtdm_lock_put_irqrestore (rtdm_lock_t *lock, rtdm_lockctx_t context)

Release lock and restore preemption state.

6.3.1 Detailed Description

6.3.2 Macro Definition Documentation

```
6.3.2.1 rtdm_lock_get_irqsave
```

Acquire lock and disable preemption, by stalling the head domain.

Parameters

lock	Address of lock variable
context	name of local variable to store the context in

Tags

unrestricted

Referenced by rtdm_ratelimit().

```
6.3.2.2 rtdm_lock_irgrestore
```

Restore preemption state.

Parameters

Tags

unrestricted

6.3.2.3 rtdm_lock_irqsave

Disable preemption locally.

Parameters

context	name of local variable to store the context in
context	name of local variable to store the context in

Tags

unrestricted

6.3.3 Function Documentation

Acquire lock from non-preemptible contexts.

Parameters

```
lock | Address of lock variable
```

Tags

unrestricted

References spltest.

Dynamic lock initialisation.

Parameters

```
lock | Address of lock variable
```

Tags

task-unrestricted

Release lock without preemption restoration.

Parameters

```
lock Address of lock variable
```

Tags

unrestricted, might-switch

Release lock and restore preemption state.

Parameters

lock	Address of lock variable
context	name of local variable which stored the context

Tags


unrestricted

Referenced by rtdm_ratelimit().

6.4 User-space driver core

This profile includes all mini-drivers sitting on top of the User-space Device Driver framework (UDD).

Collaboration diagram for User-space driver core:



Data Structures

- struct udd_memregion
- struct udd_device
- struct udd_signotify

UDD event notification descriptor.

Functions

int udd_register_device (struct udd_device *udd)

Register a UDD device.

int udd_unregister_device (struct udd_device *udd)

Unregister a UDD device.

• struct udd_device * udd_get_device (struct rtdm_fd *fd)

RTDM file descriptor to target UDD device.

void udd_notify_event (struct udd_device *udd)

Notify an IRQ event for an unmanaged interrupt.

void udd_enable_irq (struct udd_device *udd, rtdm_event_t *done)

Enable the device IRQ line.

void udd_disable_irq (struct udd_device *udd, rtdm_event_t *done)

Disable the device IRQ line.

• #define UDD_IRQ_NONE 0

No IRQ managed.

• #define UDD_IRQ_CUSTOM (-1)

IRQ directly managed from the mini-driver on top of the UDD core.

Memory types for mapping

Types of memory for mapping

The UDD core implements a default ->mmap() handler which first attempts to hand over the request to the corresponding handler defined by the mini-driver. If not present, the UDD core establishes the mapping automatically, depending on the memory type defined for the region.

#define UDD_MEM_NONE 0

No memory region.

• #define UDD MEM PHYS 1

Physical I/O memory region.

#define UDD MEM LOGICAL 2

Kernel logical memory region (e.g.

• #define UDD MEM VIRTUAL 3

Virtual memory region with no direct physical mapping (e.g.

UDD IOCTL

IOCTL requests

• #define UDD RTIOC IRQEN IO(RTDM CLASS UDD, 0)

Enable the interrupt line.

• #define UDD RTIOC IRQDIS IO(RTDM CLASS UDD, 1)

Disable the interrupt line.

#define UDD_RTIOC_IRQSIG_IOW(RTDM_CLASS_UDD, 2, struct udd_signotify)

Enable/Disable signal notification upon interrupt event.

6.4.1 Detailed Description

This profile includes all mini-drivers sitting on top of the User-space Device Driver framework (UDD).

The generic UDD core driver enables interrupt control and I/O memory access interfaces to user-space device drivers, as defined by the mini-drivers when registering.

A mini-driver supplements the UDD core with ancillary functions for dealing with memory mappings and interrupt control for a particular I/O card/device.

UDD-compliant mini-drivers only have to provide the basic support for dealing with the interrupt sources present in the device, so that most part of the device requests can be handled from a Xenomai application running in user-space. Typically, a mini-driver would handle the interrupt top-half, and the user-space application would handle the bottom-half.

This profile is reminiscent of the UIO framework available with the Linux kernel, adapted to the dual kernel Cobalt environment.

6.4.2 Macro Definition Documentation

6.4.2.1 UDD_IRQ_CUSTOM

#define UDD_IRQ_CUSTOM (-1)

IRQ directly managed from the mini-driver on top of the UDD core.

The mini-driver is in charge of attaching the handler(s) to the IRQ(s) it manages, notifying the Cobalt threads waiting for IRQ events by calling the udd notify event() service.

Referenced by udd_disable_irq(), udd_enable_irq(), udd_register_device(), and udd_unregister_device().

6.4.2.2 UDD_IRQ_NONE

#define UDD_IRQ_NONE 0

No IRQ managed.

Special IRQ values for udd_device.irq Passing this code implicitly disables all interrupt-related services, including control (disable/enable) and notification.

Referenced by udd_disable_irq(), udd_enable_irq(), udd_register_device(), and udd_unregister_ \hookleftarrow device().

6.4.2.3 UDD_MEM_LOGICAL

#define UDD_MEM_LOGICAL 2

Kernel logical memory region (e.g.

kmalloc()). By default, the UDD core maps such memory to a virtual user range by calling the rtdm_← mmap_kmem() service.

6.4.2.4 UDD_MEM_NONE

#define UDD_MEM_NONE 0

No memory region.

Use this type code to disable an entry in the array of memory mappings, i.e. udd_device.mem_regions[].

6.4.2.5 UDD_MEM_PHYS

#define UDD_MEM_PHYS 1

Physical I/O memory region.

By default, the UDD core maps such memory to a virtual user range by calling the rtdm_mmap_iomem() service.

```
6.4.2.6 UDD_MEM_VIRTUAL
```

```
#define UDD_MEM_VIRTUAL 3
```

Virtual memory region with no direct physical mapping (e.g.

vmalloc()). By default, the UDD core maps such memory to a virtual user range by calling the rtdm_\circ} mmap vmem() service.

```
6.4.2.7 UDD RTIOC IRQDIS
```

```
#define UDD_RTIOC_IRQDIS _IO(RTDM_CLASS_UDD, 1)
```

Disable the interrupt line.

The UDD-class mini-driver should handle this request when received through its ->ioctl() handler if provided. Otherwise, the UDD core disables the interrupt line in the interrupt controller before returning to the caller.

Note

The mini-driver must handle the UDD_RTIOC_IRQEN request for a custom IRQ from its ->ioctl() handler, otherwise such request receives -EIO from the UDD core.

```
6.4.2.8 UDD RTIOC IRQEN
```

```
#define UDD_RTIOC_IRQEN _IO(RTDM_CLASS_UDD, 0)
```

Enable the interrupt line.

The UDD-class mini-driver should handle this request when received through its ->ioctl() handler if provided. Otherwise, the UDD core enables the interrupt line in the interrupt controller before returning to the caller.

```
6.4.2.9 UDD RTIOC IRQSIG
```

```
#define UDD_RTIOC_IRQSIG _IOW(RTDM_CLASS_UDD, 2, struct udd_signotify)
```

Enable/Disable signal notification upon interrupt event.

A valid notification descriptor must be passed along with this request, which is handled by the UDD core directly.

Note

The mini-driver must handle the UDD_RTIOC_IRQDIS request for a custom IRQ from its ->ioctl() handler, otherwise such request receives -EIO from the UDD core.

6.4.3 Function Documentation

Disable the device IRQ line.

This service issues a request to the regular kernel for disabling the IRQ line registered by the driver. If the caller runs in primary mode, the request is scheduled but deferred until the current CPU leaves the real-time domain (see note). Otherwise, the request is immediately handled.

Parameters

udd	The UDD driver handling the IRQ to disable. If no IRQ was registered by the driver at the UDD core, this routine has no effect.
done	Optional event to signal upon completion. If non-NULL, <i>done</i> will be posted by a call to rtdm_event_signal() after the interrupt line is disabled.

Tags

unrestricted

Note

The deferral is required as some interrupt management code involved in disabling interrupt lines may not be safely executed from primary mode. By passing a valid *done* object address, the caller can wait for the request to complete, by sleeping on rtdm_event_wait().

References udd device::irg, UDD IRQ CUSTOM, and UDD IRQ NONE.

Enable the device IRQ line.

This service issues a request to the regular kernel for enabling the IRQ line registered by the driver. If the caller runs in primary mode, the request is scheduled but deferred until the current CPU leaves the real-time domain (see note). Otherwise, the request is immediately handled.

Parameters

udd	The UDD driver handling the IRQ to disable. If no IRQ was registered by the driver at the UDD core, this routine has no effect.
done	Optional event to signal upon completion. If non-NULL, <i>done</i> will be posted by a call to rtdm_event_signal () after the interrupt line is enabled.

Tags

unrestricted

Note

The deferral is required as some interrupt management code involved in enabling interrupt lines may not be safely executed from primary mode. By passing a valid *done* object address, the caller can wait for the request to complete, by sleeping on rtdm_event_wait().

References udd_device::irq, UDD_IRQ_CUSTOM, and UDD_IRQ_NONE.

RTDM file descriptor to target UDD device.

Retrieves the UDD device from a RTDM file descriptor.

Parameters

fd | File descriptor received by an ancillary I/O handler from a mini-driver based on the UDD core.

Returns

A pointer to the UDD device to which fd refers to.

Note

This service is intended for use by mini-drivers based on the UDD core exclusively. Passing file descriptors referring to other RTDM devices will certainly lead to invalid results.

Tags

mode-unrestricted

References rtdm_device::driver, rtdm_driver::profile_info, and rtdm_fd_device().

Notify an IRQ event for an unmanaged interrupt.

When the UDD core shall hand over the interrupt management for a device to the mini-driver (see $U \hookrightarrow DD_IRQ_CUSTOM$), the latter should notify the UDD core when IRQ events are received by calling this service.

As a result, the UDD core wakes up any Cobalt thread waiting for interrupts on the device via a read(2) or select(2) call.

Parameters

udd UDD device descriptor receiving the IRQ.

Tags

coreirg-only

Note

In case the IRQ handler from the mini-driver requested the UDD core not to re-enable the interrupt line, the application may later request the unmasking by issuing the UDD_RTIOC_IRQEN ioctl(2) command. Writing a non-zero integer to the device via the write(2) system call has the same effect.

References rtdm_event_signal(), rtdm_irq_disable(), and rtdm_irq_enable().

Register a UDD device.

This routine registers a mini-driver at the UDD core.

Parameters

udd UDD device descriptor which should describe the new device properties.

Returns

Zero is returned upon success, otherwise a negative error code is received, from the set of error codes defined by rtdm_dev_register(). In addition, the following error codes can be returned:

• -EINVAL, some of the memory regions declared in the udd_device.mem_regions[] array have invalid properties, i.e. bad type, NULL name, zero length or address. Any undeclared region entry from the array must bear the UDD MEM NONE type.

- -EINVAL, if udd_device.irq is different from UDD_IRQ_CUSTOM and UDD_IRQ_NONE but invalid, causing rtdm_irq_request() to fail.
- -EINVAL, if udd_device.device_flags contains invalid flags.
- -ENXIO can be received if this service is called while the Cobalt kernel is disabled.

Tags

secondary-only

References udd_device::device_flags, udd_device::interrupt, udd_device::irq, RTDM_PROTOCOL_D ← EVICE, UDD IRQ CUSTOM, and UDD IRQ NONE.

```
6.4.3.6 udd_unregister_device()
int udd_unregister_device (
```

struct udd_device * udd)

Unregister a UDD device.

This routine unregisters a mini-driver from the UDD core. This routine waits until all connections to *udd* have been closed prior to unregistering.

Parameters

```
udd UDD device descriptor
```

Returns

Zero is returned upon success, otherwise -ENXIO is received if this service is called while the Cobalt kernel is disabled.

Tags

secondary-only

References udd_device::irq, rtdm_event_destroy(), rtdm_irq_free(), UDD_IRQ_CUSTOM, and UDD_← IRQ_NONE.

6.5 Thread state flags

Bits reporting permanent or transient states of threads.

Collaboration diagram for Thread state flags:



Macros

• #define XNSUSP 0x00000001

Suspended.

• #define XNPEND 0x00000002

Sleep-wait for a resource.

#define XNDELAY 0x00000004

Delayed.

#define XNREADY 0x00000008

Linked to the ready queue.

#define XNDORMANT 0x00000010

Not started yet.

• #define XNZOMBIE 0x00000020

Zombie thread in deletion process.

#define XNMAPPED 0x00000040

Thread is mapped to a linux task.

#define XNRELAX 0x00000080

Relaxed shadow thread (blocking bit)

• #define XNMIGRATE 0x00000100

Thread is currently migrating to another CPU.

• #define XNHELD 0x00000200

Thread is held to process emergency.

#define XNBOOST 0x00000400

Undergoes a PIP boost.

#define XNSSTEP 0x00000800

Single-stepped by debugger.

• #define XNLOCK 0x00001000

Scheduler lock control (pseudo-bit, not in -> state)

#define XNRRB 0x00002000

Undergoes a round-robin scheduling.

#define XNWARN 0x00004000

Issue SIGDEBUG on error detection.

#define XNFPU 0x00008000

Thread uses FPU.

#define XNROOT 0x00010000

Root thread (that is, Linux/IDLE)

• #define XNWEAK 0x00020000

Non real-time shadow (from the WEAK class)

• #define XNUSER 0x00040000

Shadow thread running in userland.

• #define XNJOINED 0x00080000

Another thread waits for joining this thread.

• #define XNTRAPLB 0x00100000

Trap lock break (i.e.

• #define XNDEBUG 0x00200000

User-level debugging enabled.

6.5.1 Detailed Description

Bits reporting permanent or transient states of threads.

6.5.2 Macro Definition Documentation

6.5.2.1 XNHELD

#define XNHELD 0x00000200

Thread is held to process emergency.

6.5.2.2 XNMIGRATE

#define XNMIGRATE 0x00000100

Thread is currently migrating to another CPU.

6.5.2.3 XNPEND

#define XNPEND 0x00000002

Sleep-wait for a resource.

6.5.2.4 XNREADY

#define XNREADY 0x00000008

Linked to the ready queue.

6.5.2.5 XNSUSP

#define XNSUSP 0x00000001

Suspended.

Referenced by xnthread_init().

6.5.2.6 XNTRAPLB

#define XNTRAPLB 0x00100000


Trap lock break (i.e.

may not sleep with sched lock)

6.6 Thread information flags

Bits reporting events notified to threads.

Collaboration diagram for Thread information flags:



Macros

#define XNTIMEO 0x00000001
 Woken up due to a timeout condition.

#define XNRMID 0x00000002

Pending on a removed resource.

#define XNBREAK 0x00000004

Forcibly awaken from a wait state.

#define XNKICKED 0x00000008

Forced out of primary mode.

• #define XNWAKEN 0x00000010

Thread waken up upon resource availability.

• #define XNROBBED 0x00000020

Robbed from resource ownership.

#define XNCANCELD 0x00000040

Cancellation request is pending.

#define XNPIALERT 0x00000080

Priority inversion alert (SIGDEBUG sent)

• #define XNMOVED 0x00000001

CPU migration in primary mode occurred.

#define XNLBALERT 0x00000002

Scheduler lock break alert (SIGDEBUG sent)

#define XNDESCENT 0x00000004

Adaptive transitioning to secondary mode.

#define XNSYSRST 0x00000008

Thread awaiting syscall restart after signal.

6.6.1 Detailed Description

Bits reporting events notified to threads.

6.7 CAN Devices

This is the common interface a RTDM-compliant CAN device has to provide.

Collaboration diagram for CAN Devices:



Data Structures

• struct can_bittime_std

Standard bit-time parameters according to Bosch.

• struct can_bittime_btr

Hardware-specific BTR bit-times.

• struct can bittime

Custom CAN bit-time definition.

struct can_filter

Filter for reception of CAN messages.

struct sockaddr_can

Socket address structure for the CAN address family.

• struct can_frame

Raw CAN frame.

struct can_ifreq

CAN interface request descriptor.

Macros

• #define AF_CAN 29

CAN address family.

#define PF_CAN AF_CAN

CAN protocol family.

• #define SOL_CAN_RAW 103

CAN socket levels.

Typedefs

44

typedef uint32_t can_id_t

Type of CAN id (see CAN_xxx_MASK and CAN_xxx_FLAG)

typedef can_id_t can_err_mask_t

Type of CAN error mask.

typedef uint32_t can_baudrate_t

Baudrate definition in bits per second.

• typedef enum CAN_BITTIME_TYPE can_bittime_type_t

See CAN BITTIME TYPE.

typedef enum CAN_MODE can_mode_t

See CAN MODE.

typedef int can_ctrlmode_t

See CAN_CTRLMODE.

typedef enum CAN_STATE can_state_t

See CAN STATE.

typedef struct can_filter can_filter_t

Filter for reception of CAN messages.

typedef struct can_frame can_frame_t

Raw CAN frame.

Enumerations

enum CAN_BITTIME_TYPE { CAN_BITTIME_STD, CAN_BITTIME_BTR }
 Supported CAN bit-time types.

CAN ID masks

Bit masks for masking CAN IDs

#define CAN_EFF_MASK 0x1FFFFFFF

Bit mask for extended CAN IDs.

#define CAN_SFF_MASK 0x000007FF

Bit mask for standard CAN IDs.

CAN ID flags

Flags within a CAN ID indicating special CAN frame attributes

#define CAN_EFF_FLAG 0x80000000

Extended frame.

#define CAN_RTR_FLAG 0x40000000

Remote transmission frame.

• #define CAN_ERR_FLAG 0x20000000

Error frame (see Errors), not valid in struct can_filter.

#define CAN_INV_FILTER CAN_ERR_FLAG

Invert CAN filter definition, only valid in struct can_filter.

Particular CAN protocols

Possible protocols for the PF_CAN protocol family

Currently only the RAW protocol is supported.

• #define CAN RAW 1

Raw protocol of PF_CAN, applicable to socket type SOCK_RAW.

CAN operation modes

Modes into which CAN controllers can be set

enum CAN_MODE { CAN_MODE_STOP = 0, CAN_MODE_START, CAN_MODE_SLEEP }

CAN controller modes

Special CAN controllers modes, which can be or'ed together.

Note

These modes are hardware-dependent. Please consult the hardware manual of the CAN controller for more detailed information.

- #define CAN_CTRLMODE_LISTENONLY 0x1
- #define CAN_CTRLMODE_LOOPBACK 0x2
- #define CAN_CTRLMODE_3_SAMPLES 0x4

CAN controller states

States a CAN controller can be in.

enum CAN_STATE {
 CAN_STATE_ERROR_ACTIVE = 0, CAN_STATE_ACTIVE = 0, CAN_STATE_ERROR_WAR
 NING = 1, CAN_STATE_BUS_WARNING = 1,
 CAN_STATE_ERROR_PASSIVE = 2, CAN_STATE_BUS_PASSIVE = 2, CAN_STATE_BUS_
 OFF, CAN_STATE_SCANNING_BAUDRATE,
 CAN_STATE_STOPPED, CAN_STATE_SLEEPING }

Timestamp switches

Arguments to pass to RTCAN_RTIOC_TAKE_TIMESTAMP

- #define RTCAN_TAKE_NO_TIMESTAMPS 0
 Switch off taking timestamps.
- #define RTCAN_TAKE_TIMESTAMPS 1
 Do take timestamps.

RAW socket options

Setting and getting CAN RAW socket options.

- #define CAN_RAW_FILTER 0x1
 CAN filter definition.
- #define CAN_RAW_ERR_FILTER 0x2

 CAN error mask.
- #define CAN_RAW_LOOPBACK 0x3

CAN receive own messages.

CAN TX loopback.

• #define CAN_RAW_RECV_OWN_MSGS 0x4

IOCTLs

CAN device IOCTLs

- #define SIOCGIFINDEX defined_by_kernel_header_file
 Get CAN interface index by name.
- #define SIOCSCANBAUDRATE _IOW(RTIOC_TYPE_CAN, 0x01, struct can_ifreq) Set baud rate.
- #define SIOCGCANBAUDRATE _IOWR(RTIOC_TYPE_CAN, 0x02, struct can_ifreq)
 Get baud rate.
- #define SIOCSCANCUSTOMBITTIME _IOW(RTIOC_TYPE_CAN, 0x03, struct can_ifreq) Set custom bit time parameter.
- #define SIOCGCANCUSTOMBITTIME _IOWR(RTIOC_TYPE_CAN, 0x04, struct can_ifreq)
 Get custom bit-time parameters.
- #define SIOCSCANMODE _IOW(RTIOC_TYPE_CAN, 0x05, struct can_ifreq)
 Set operation mode of CAN controller.
- #define SIOCGCANSTATE _IOWR(RTIOC_TYPE_CAN, 0x06, struct can_ifreq)

 Get current state of CAN controller.
- #define SIOCSCANCTRLMODE _IOW(RTIOC_TYPE_CAN, 0x07, struct can_ifreq)
 Set special controller modes.
- #define SIOCGCANCTRLMODE _IOWR(RTIOC_TYPE_CAN, 0x08, struct can_ifreq)
 Get special controller modes.
- #define RTCAN_RTIOC_TAKE_TIMESTAMP_IOW(RTIOC_TYPE_CAN, 0x09, int)

 Enable or disable storing a high precision timestamp upon reception of a CAN frame.
- #define RTCAN_RTIOC_RCV_TIMEOUT_IOW(RTIOC_TYPE_CAN, 0x0A, nanosecs_rel_t)
 Specify a reception timeout for a socket.
- #define RTCAN_RTIOC_SND_TIMEOUT_IOW(RTIOC_TYPE_CAN, 0x0B, nanosecs_rel_t)
 Specify a transmission timeout for a socket.

Error mask

Error class (mask) in can_id field of struct can_frame to be used with CAN_RAW_ERR_FILTER.

Note: Error reporting is hardware dependent and most CAN controllers report less detailed error conditions than the SJA1000.

Note: In case of a bus-off error condition (CAN_ERR_BUSOFF), the CAN controller is **not** restarted automatically. It is the application's responsibility to react appropriately, e.g. calling CAN_MODE_STA⊷ RT.

Note: Bus error interrupts (CAN_ERR_BUSERROR) are enabled when an application is calling a Recv function on a socket listening on bus errors (using CAN_RAW_ERR_FILTER). After one bus error has occured, the interrupt will be disabled to allow the application time for error processing and to efficiently avoid bus error interrupt flooding.

• #define CAN ERR TX TIMEOUT 0x00000001U

TX timeout (netdevice driver)

#define CAN ERR LOSTARB 0x00000002U

Lost arbitration (see data[0])

• #define CAN ERR CRTL 0x00000004U

Controller problems (see data[1])

#define CAN_ERR_PROT 0x00000008U

Protocol violations (see data[2], data[3])

• #define CAN ERR TRX 0x00000010U

Transceiver status (see data[4])

#define CAN ERR ACK 0x00000020U

Received no ACK on transmission.

#define CAN_ERR_BUSOFF 0x00000040U
 Bus off.

• #define CAN ERR BUSERROR 0x00000080U

Bus error (may flood!)

#define CAN ERR RESTARTED 0x00000100U

Controller restarted.

#define CAN_ERR_MASK 0x1FFFFFFU

Omit EFF, RTR, ERR flags.

Arbitration lost error

Error in the data[0] field of struct can frame.

#define CAN_ERR_LOSTARB_UNSPEC 0x00
 unspecified

Controller problems

48

Error in the data[1] field of struct can_frame.

- #define CAN_ERR_CRTL_UNSPEC 0x00 unspecified
- #define CAN_ERR_CRTL_RX_OVERFLOW 0x01 RX buffer overflow.
- #define CAN_ERR_CRTL_TX_OVERFLOW 0x02
 TX buffer overflow.
- #define CAN_ERR_CRTL_RX_WARNING 0x04
 reached warning level for RX errors
- #define CAN_ERR_CRTL_TX_WARNING 0x08
 reached warning level for TX errors
- #define CAN_ERR_CRTL_RX_PASSIVE 0x10
 reached passive level for RX errors
- #define CAN_ERR_CRTL_TX_PASSIVE 0x20
 reached passive level for TX errors

Protocol error type

Error in the data[2] field of struct can_frame.

- #define CAN_ERR_PROT_UNSPEC 0x00 unspecified
- #define CAN_ERR_PROT_BIT 0x01 single bit error
- #define CAN_ERR_PROT_FORM 0x02
 frame format error
- #define CAN_ERR_PROT_STUFF 0x04
 bit stuffing error
- #define CAN_ERR_PROT_BIT0 0x08
- #define CAN_ERR_PROT_BIT1 0x10

unable to send recessive bit

unable to send dominant bit

- #define CAN_ERR_PROT_OVERLOAD 0x20 bus overload
- #define CAN_ERR_PROT_ACTIVE 0x40
 active error announcement
- #define CAN_ERR_PROT_TX 0x80

error occured on transmission

Protocol error location

Error in the data[4] field of struct can frame.

- #define CAN_ERR_PROT_LOC_UNSPEC 0x00 unspecified
- #define CAN_ERR_PROT_LOC_SOF 0x03 start of frame
- #define CAN_ERR_PROT_LOC_ID28_21 0x02
 ID bits 28 21 (SFF: 10 3)
- #define CAN_ERR_PROT_LOC_ID20_18 0x06
 ID bits 20 18 (SFF: 2 0)
- #define CAN_ERR_PROT_LOC_SRTR 0x04 substitute RTR (SFF: RTR)
- #define CAN_ERR_PROT_LOC_IDE 0x05 identifier extension
- #define CAN_ERR_PROT_LOC_ID17_13 0x07
 ID bits 17-13.
- #define CAN_ERR_PROT_LOC_ID12_05 0x0F
 ID bits 12-5.
- #define CAN_ERR_PROT_LOC_ID04_00 0x0E
 ID bits 4-0.
- #define CAN_ERR_PROT_LOC_RTR 0x0C RTR.
- #define CAN_ERR_PROT_LOC_RES1 0x0D reserved bit 1
- #define CAN_ERR_PROT_LOC_RES0 0x09
 reserved bit 0
- #define CAN_ERR_PROT_LOC_DLC 0x0B data length code
- #define CAN_ERR_PROT_LOC_DATA 0x0A data section
- #define CAN_ERR_PROT_LOC_CRC_SEQ 0x08
 CRC sequence.
- #define CAN_ERR_PROT_LOC_CRC_DEL 0x18
 CRC delimiter.
- #define CAN_ERR_PROT_LOC_ACK 0x19
 ACK slot.
- #define CAN_ERR_PROT_LOC_ACK_DEL 0x1B ACK delimiter.
- #define CAN_ERR_PROT_LOC_EOF 0x1A end of frame
- #define CAN_ERR_PROT_LOC_INTERM 0x12 intermission
- #define CAN_ERR_TRX_UNSPEC 0x00 0000 0000
- #define CAN_ERR_TRX_CANH_NO_WIRE 0x04 0000 0100
- #define CAN_ERR_TRX_CANH_SHORT_TO_BAT 0x05 0000 0101

- #define CAN_ERR_TRX_CANH_SHORT_TO_VCC 0x06 0000 0110
- #define CAN_ERR_TRX_CANH_SHORT_TO_GND 0x07 0000 0111
- #define CAN_ERR_TRX_CANL_NO_WIRE 0x40
 0100 0000
- #define CAN_ERR_TRX_CANL_SHORT_TO_BAT 0x50 0101 0000
- #define CAN_ERR_TRX_CANL_SHORT_TO_VCC 0x60 0110 0000
- #define CAN_ERR_TRX_CANL_SHORT_TO_GND 0x70 0111 0000
- #define CAN_ERR_TRX_CANL_SHORT_TO_CANH 0x80 1000 0000

6.7.1 Detailed Description

This is the common interface a RTDM-compliant CAN device has to provide.

Feel free to report bugs and comments on this profile to the "Socketcan" mailing list (Socketcan-core@lists. ← berlios.de) or directly to the authors (wg@grandegger.com or Sebastian.Smolorz@stud. ← uni-hannover.de).

Profile Revision: 2

Device Characteristics

Device Flags: RTDM_PROTOCOL_DEVICE

Protocol Family: PF_CAN

Socket Type: SOCK_RAW

Device Class: RTDM_CLASS_CAN

Supported Operations

Socket

Tags

secondary-only

Specific return values:

-EPROTONOSUPPORT (Protocol is not supported by the driver. See CAN protocols for possible protocols.)

Close

Blocking calls to any of the Send or Receive functions will be unblocked when the socket is closed and return with an error.

Tags

secondary-only

Specific return values: none

IOCTL

Tags

task-unrestricted. see below Specific return values: see below

Bind

Binds a socket to one or all CAN devices (see struct sockaddr_can). If a filter list has been defined with setsockopt (see Sockopts), it will be used upon reception of CAN frames to decide whether the bound socket will receive a frame. If no filter has been defined, the socket will receive all CAN frames on the specified interface(s).

Binding to special interface index 0 will make the socket receive CAN frames from all CAN interfaces.

Binding to an interface index is also relevant for the Send functions because they will transmit a message over the interface the socket is bound to when no socket address is given to them.

Tags

secondary-only

Specific return values:

- -EFAULT (It was not possible to access user space memory area at the specified address.)
- -ENOMEM (Not enough memory to fulfill the operation)
- -EINVAL (Invalid address family, or invalid length of address structure)
- -ENODEV (Invalid CAN interface index)
- -ENOSPC (No enough space for filter list)
- -EBADF (Socket is about to be closed)
- -EAGAIN (Too many receivers. Old binding (if any) is still active. Close some sockets and try again.)

Setsockopt, Getsockopt

These functions allow to set and get various socket options. Currently, only CAN raw sockets are supported.

Supported Levels and Options:

- Level SOL_CAN_RAW : CAN RAW protocol (see CAN_RAW)
 - Option CAN_RAW_FILTER: CAN filter list
 - Option CAN RAW ERR FILTER: CAN error mask
 - Option CAN_RAW_LOOPBACK : CAN TX loopback to local sockets

Tags

task-unrestricted Specific return values: see links to options above.

Recv, Recvfrom, Recvmsg

These functions receive CAN messages from a socket. Only one message per call can be received, so only one buffer with the correct length must be passed. For SOCK_RAW, this is the size of struct can_frame.

Unlike a call to one of the Send functions, a Recv function will not return with an error if an interface is down (due to bus-off or setting of stop mode) or in sleep mode. Moreover, in such a case there may still be some CAN messages in the socket buffer which could be read out successfully.

It is possible to receive a high precision timestamp with every CAN message. The condition is a former instruction to the socket via RTCAN_RTIOC_TAKE_TIMESTAMP. The timestamp will be copied to the msg_control buffer of struct msghdr if it points to a valid memory location with size of nanosecs abs t. If this is a NULL pointer the timestamp will be discarded silently.

Note: A msg_controllen of 0 upon completion of the function call indicates that no timestamp is available for that message.

Supported Flags [in]:

- MSG_DONTWAIT (By setting this flag the operation will only succeed if it would not block, i.e.
 if there is a message in the socket buffer. This flag takes precedence over a timeout specified
 by RTCAN_RTIOC_RCV_TIMEOUT.)
- MSG_PEEK (Receive a message but leave it in the socket buffer. The next receive operation will get that message again.)

Supported Flags [out]: none

Tags

mode-unrestricted

Specific return values:

- Non-negative value (Indicating the successful reception of a CAN message. For SOCK_RAW, this is the size of struct can frame regardless of the actual size of the payload.)
- -EFAULT (It was not possible to access user space memory area at one of the specified addresses.)
- -EINVAL (Unsupported flag detected, or invalid length of socket address buffer, or invalid length of message control buffer)
- -EMSGSIZE (Zero or more than one iovec buffer passed, or buffer too small)
- -EAGAIN (No data available in non-blocking mode)
- -EBADF (Socket was closed.)

- -EINTR (Operation was interrupted explicitly or by signal.)
- -ETIMEDOUT (Timeout)

Send, Sendto, Sendmsg

These functions send out CAN messages. Only one message per call can be transmitted, so only one buffer with the correct length must be passed. For SOCK_RAW, this is the size of struct can_frame.

The following only applies to SOCK_RAW: If a socket address of struct sockaddr_can is given, only can_ifindex is used. It is also possible to omit the socket address. Then the interface the socket is bound to will be used for sending messages.

If an interface goes down (due to bus-off or setting of stop mode) all senders that were blocked on this interface will be woken up.

Supported Flags:

 MSG_DONTWAIT (By setting this flag the transmit operation will only succeed if it would not block. This flag takes precedence over a timeout specified by RTCAN_RTIOC_SND_TIME ○ OUT.)

Tags

mode-unrestricted

Specific return values:

- Non-negative value equal to given buffer size (Indicating the successful completion of the function call. See also note.)
- -EOPNOTSUPP (MSG_OOB flag is not supported.)
- -EINVAL (Unsupported flag detected *or:* Invalid length of socket address *or:* Invalid address family *or:* Data length code of CAN frame not between 0 and 15 *or:* CAN standard frame has got an ID not between 0 and 2031)
- -EMSGSIZE (Zero or more than one buffer passed or invalid size of buffer)
- -EFAULT (It was not possible to access user space memory area at one of the specified addresses.)
- -ENXIO (Invalid CAN interface index 0 is not allowed here or socket not bound or rather bound to all interfaces.)
- -ENETDOWN (Controller is bus-off or in stopped state.)
- -ECOMM (Controller is sleeping)
- -EAGAIN (Cannot transmit without blocking but a non-blocking call was requested.)
- -EINTR (Operation was interrupted explicitly or by signal)
- -EBADF (Socket was closed.)
- -ETIMEDOUT (Timeout)

Note: A successful completion of the function call does not implicate a successful transmission of the message.

6.7.2 Macro Definition Documentation

6.7.2.1 CAN_CTRLMODE_3_SAMPLES

#define CAN_CTRLMODE_3_SAMPLES 0x4

Triple sampling mode

54

In this mode the CAN controller uses Triple sampling.

6.7.2.2 CAN CTRLMODE LISTENONLY

#define CAN_CTRLMODE_LISTENONLY 0x1

Listen-Only mode

In this mode the CAN controller would give no acknowledge to the CAN-bus, even if a message is received successfully and messages would not be transmitted. This mode might be useful for bus-monitoring, hot-plugging or throughput analysis.

Examples:

rtcanconfig.c.

6.7.2.3 CAN_CTRLMODE_LOOPBACK

#define CAN_CTRLMODE_LOOPBACK 0x2

Loopback mode

In this mode the CAN controller does an internal loop-back, a message is transmitted and simultaneously received. That mode can be used for self test operation.

Examples:

rtcanconfig.c.

6.7.2.4 CAN_ERR_LOSTARB_UNSPEC

#define CAN_ERR_LOSTARB_UNSPEC 0x00

unspecified

else bit number in bitstream

6.7.2.5 CAN_RAW_ERR_FILTER

#define CAN_RAW_ERR_FILTER 0x2

CAN error mask.

A CAN error mask (see Errors) can be set with setsockopt. This mask is then used to decide if error frames are delivered to this socket in case of error condidtions. The error frames are marked with the CAN_ERR_FLAG of CAN_xxx_FLAG and must be handled by the application properly. A detailed description of the errors can be found in the can_id and the data fields of struct can_frame (see Errors for futher details).

Parameters

in	level	SOL_CAN_RAW
in	optname	CAN_RAW_ERR_FILTER
in	optval	Pointer to error mask of type can_err_mask_t.
in	optlen	Size of error mask: sizeof(can_err_mask_t).

Tags

task-unrestricted

Specific return values:

- -EFAULT (It was not possible to access user space memory area at the specified address.)
- -EINVAL (Invalid length "optlen")

Examples:

rtcanrecv.c.

6.7.2.6 CAN RAW FILTER

#define CAN_RAW_FILTER 0x1

CAN filter definition.

A CAN raw filter list with elements of struct can_filter can be installed with setsockopt. This list is used upon reception of CAN frames to decide whether the bound socket will receive a frame. An empty filter list can also be defined using optlen = 0, which is recommanded for write-only sockets. If the socket was already bound with Bind, the old filter list gets replaced with the new one. Be aware that already received, but not read out CAN frames may stay in the socket buffer.

Parameters

in	level SOL_CAN_RAW	
in	optname	CAN_RAW_FILTER
in	optval	Pointer to array of struct can_filter.
in	optlen	Size of filter list: count * sizeof(struct can_filter).

Tags

task-unrestricted

Specific return values:

- -EFAULT (It was not possible to access user space memory area at the specified address.)
- -ENOMEM (Not enough memory to fulfill the operation)
- -EINVAL (Invalid length "optlen")

• -ENOSPC (No space to store filter list, check RT-Socket-CAN kernel parameters)

Examples:

can-rtt.c, rtcanrecv.c, and rtcansend.c.

6.7.2.7 CAN RAW LOOPBACK

#define CAN_RAW_LOOPBACK 0x3

CAN TX loopback.

The TX loopback to other local sockets can be selected with this setsockopt.

Note

The TX loopback feature must be enabled in the kernel and then the loopback to other local TX sockets is enabled by default.

Parameters

in	level	SOL_CAN_RAW
in	optname	CAN_RAW_LOOPBACK
in	optval	Pointer to integer value.
in	optlen	Size of int: sizeof(int).

Tags

task-unrestricted

Specific return values:

- -EFAULT (It was not possible to access user space memory area at the specified address.)
- -EINVAL (Invalid length "optlen")
- -EOPNOTSUPP (not supported, check RT-Socket-CAN kernel parameters).

Examples:

rtcansend.c.

6.7.2.8 CAN_RAW_RECV_OWN_MSGS

#define CAN_RAW_RECV_OWN_MSGS 0x4

CAN receive own messages.

Not supported by RT-Socket-CAN, but defined for compatibility with Socket-CAN.

6.7.2.9 RTCAN_RTIOC_RCV_TIMEOUT

#define RTCAN_RTIOC_RCV_TIMEOUT _IOW(RTIOC_TYPE_CAN, 0x0A, nanosecs_rel_t)

Specify a reception timeout for a socket.

Defines a timeout for all receive operations via a socket which will take effect when one of the receive functions is called without the MSG_DONTWAIT flag set.

The default value for a newly created socket is an infinite timeout.

Note

The setting of the timeout value is not done atomically to avoid locks. Please set the value before receiving messages from the socket.

Parameters

in	arg	Pointer to nanosecs_rel_t variable. The value is interpreted as relative timeout in
		nanoseconds in case of a positive value. See Timeouts for special timeouts.

Returns

0 on success, otherwise:

• -EFAULT: It was not possible to access user space memory area at the specified address.

Tags

task-unrestricted

Examples:

rtcanrecv.c.

6.7.2.10 RTCAN_RTIOC_SND_TIMEOUT

#define RTCAN_RTIOC_SND_TIMEOUT _IOW(RTIOC_TYPE_CAN, 0x0B, nanosecs_rel_t)

Specify a transmission timeout for a socket.

Defines a timeout for all send operations via a socket which will take effect when one of the send functions is called without the MSG_DONTWAIT flag set.

The default value for a newly created socket is an infinite timeout.

Note

The setting of the timeout value is not done atomically to avoid locks. Please set the value before sending messages to the socket.

Parameters

in	arg	Pointer to nanosecs_rel_t variable. The value is interpreted as relative timeout in
		nanoseconds in case of a positive value. See Timeouts for special timeouts.

Returns

0 on success, otherwise:

• -EFAULT: It was not possible to access user space memory area at the specified address.

Tags

task-unrestricted

Examples:

rtcansend.c.

6.7.2.11 RTCAN_RTIOC_TAKE_TIMESTAMP

#define RTCAN_RTIOC_TAKE_TIMESTAMP _IOW(RTIOC_TYPE_CAN, 0x09, int)

Enable or disable storing a high precision timestamp upon reception of a CAN frame.

A newly created socket takes no timestamps by default.

Parameters

i	n	arg	int variable, see Timestamp switches
---	---	-----	--------------------------------------

Returns

0 on success.

Tags

task-unrestricted

Note

Activating taking timestamps only has an effect on newly received CAN messages from the bus. Frames that already are in the socket buffer do not have timestamps if it was deactivated before. See Receive for more details.

Examples:

rtcanrecv.c.

6.7.2.12 SIOCGCANBAUDRATE

#define SIOCGCANBAUDRATE _IOWR(RTIOC_TYPE_CAN, 0x02, struct can_ifreq)

Get baud rate.

Parameters

in,out	arg	Pointer to interface request structure buffer (struct can_ifreq). ifr_name must
		hold a valid CAN interface name, ifr_ifru will be filled with an instance of
		can_baudrate_t.

Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- · -EINVAL: No baud rate was set yet.

Tags

task-unrestricted

6.7.2.13 SIOCGCANCTRLMODE

#define SIOCGCANCTRLMODE _IOWR(RTIOC_TYPE_CAN, 0x08, struct can_ifreq)

Get special controller modes.

Parameters

in	arg	Pointer to interface request structure buffer (struct can_ifreq). ifr_name must hold a
		valid CAN interface name, ifr_ifru must be filled with an instance of can_ctrlmode_t.

Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No baud rate was set yet.

Tags

task-unrestricted, might-switch

6.7.2.14 SIOCGCANCUSTOMBITTIME

#define SIOCGCANCUSTOMBITTIME _IOWR(RTIOC_TYPE_CAN, 0x04, struct can_ifreq)

Get custom bit-time parameters.

Parameters

in,out	arg	Pointer to interface request structure buffer (struct can_ifreq). ifr_name must
		hold a valid CAN interface name, ifr_ifru will be filled with an instance of struct
		can_bittime.

Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- · -EINVAL: No baud rate was set yet.

Tags

task-unrestricted

6.7.2.15 SIOCGCANSTATE

#define SIOCGCANSTATE _IOWR(RTIOC_TYPE_CAN, 0x06, struct can_ifreq)

Get current state of CAN controller.

States are divided into main states and additional error indicators. A CAN controller is always in exactly one main state. CAN bus errors are registered by the CAN hardware and collected by the driver. There is one error indicator (bit) per error type. If this IOCTL is triggered the error types which occured since the last call of this IOCTL are reported and thereafter the error indicators are cleared. See also CAN controller states.

Parameters

in,out	arg	Pointer to interface request structure buffer (struct can_ifreq). ifr_name must
		hold a valid CAN interface name, ifr_ifru will be filled with an instance of
		can_mode_t.

Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.

Tags

task-unrestricted, might-switch

6.7.2.16 SIOCGIFINDEX

#define SIOCGIFINDEX defined_by_kernel_header_file

Get CAN interface index by name.

Parameters

i	n,out	arg	Pointer to interface request structure buffer (struct can_ifreq). If ifr_name holds
			a valid CAN interface name ifr_ifindex will be filled with the corresponding
			interface index.

Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.

Tags

task-unrestricted

Examples:

can-rtt.c, rtcanconfig.c, rtcanrecv.c, and rtcansend.c.

6.7.2.17 SIOCSCANBAUDRATE

#define SIOCSCANBAUDRATE _IOW(RTIOC_TYPE_CAN, 0x01, struct can_ifreq)

Set baud rate.

The baudrate must be specified in bits per second. The driver will try to calculate resonable CAN bit-timing parameters. You can use SIOCSCANCUSTOMBITTIME to set custom bit-timing.

Parameters

in	arg	Pointer to interface request structure buffer (struct can_ifreq). ifr_name must hold a
		valid CAN interface name, ifr_ifru must be filled with an instance of can_baudrate_t.

Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No valid baud rate, see can baudrate t.
- -EDOM : Baud rate not possible.
- -EAGAIN: Request could not be successully fulfilled. Try again.

Tags

task-unrestricted, might-switch

Note

Setting the baud rate is a configuration task. It should be done deliberately or otherwise CAN messages will likely be lost.

Examples:

rtcanconfig.c.

6.7.2.18 SIOCSCANCTRLMODE

#define SIOCSCANCTRLMODE _IOW(RTIOC_TYPE_CAN, 0x07, struct can_ifreq)

Set special controller modes.

Various special controller modes could be or'ed together (see CAN CTRLMODE for further information).

Parameters

in	arg	Pointer to interface request structure buffer (struct can_ifreq). ifr_name must hold a
		valid CAN interface name, ifr_ifru must be filled with an instance of can_ctrlmode_t.

Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No valid baud rate, see can_baudrate_t.
- -EAGAIN: Request could not be successully fulfilled. Try again.

Tags

task-unrestricted, might-switch

Note

Setting special controller modes is a configuration task. It should be done deliberately or otherwise CAN messages will likely be lost.

Examples:

rtcanconfig.c.

6.7.2.19 SIOCSCANCUSTOMBITTIME

#define SIOCSCANCUSTOMBITTIME _IOW(RTIOC_TYPE_CAN, 0x03, struct can_ifreq)

Set custom bit time parameter.

Custem-bit time could be defined in various formats (see struct can_bittime).

Parameters

in	arg	Pointer to interface request structure buffer (struct can_ifreq). ifr_name must hold a
		valid CAN interface name, ifr_ifru must be filled with an instance of struct can_bittime.

Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No valid baud rate, see can_baudrate_t.
- -EAGAIN: Request could not be successully fulfilled. Try again.

Tags

task-unrestricted, might-switch

Note

Setting the bit-time is a configuration task. It should be done deliberately or otherwise CAN messages will likely be lost.

Examples:

rtcanconfig.c.

6.7.2.20 SIOCSCANMODE

#define SIOCSCANMODE _IOW(RTIOC_TYPE_CAN, 0x05, struct can_ifreq)

Set operation mode of CAN controller.

See CAN controller modes for available modes.

Parameters

in	arg	Pointer to interface request structure buffer (struct can_ifreq). ifr_name must hold a
		valid CAN interface name, ifr_ifru must be filled with an instance of can_mode_t.

Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EAGAIN: (CAN_MODE_START, CAN_MODE_STOP) Could not successfully set mode, hardware is busy. Try again.
- -EINVAL: (CAN MODE START) Cannot start controller, set baud rate first.
- -ENETDOWN: (CAN_MODE_SLEEP) Cannot go into sleep mode because controller is stopped or bus off.
- -EOPNOTSUPP: unknown mode

Tags

task-unrestricted, might-switch

Note

Setting a CAN controller into normal operation after a bus-off can take some time (128 occurrences of 11 consecutive recessive bits). In such a case, although this IOCTL will return immediately with success and SIOCGCANSTATE will report CAN_STATE_ACTIVE, bus-off recovery may still be in progress.

If a controller is bus-off, setting it into stop mode will return no error but the controller remains bus-off.

Examples:

rtcanconfig.c.

6.7.2.21 SOL_CAN_RAW

#define SOL_CAN_RAW 103

CAN socket levels.

Used for Sockopts for the particular protocols.

Examples:

can-rtt.c, rtcanrecv.c, and rtcansend.c.

6.7.3 Typedef Documentation

6.7 CAN Devices 65

```
6.7.3.1 can_filter_t

typedef struct can_filter_can_filter_t
```

Filter for reception of CAN messages.

This filter works as follows: A received CAN ID is AND'ed bitwise with can_mask and then compared to can_id. This also includes the CAN_EFF_FLAG and CAN_RTR_FLAG of CAN_xxx_FLAG. If this comparison is true, the message will be received by the socket. The logic can be inverted with the can_id flag CAN_INV_FILTER:

```
if (can_id & CAN_INV_FILTER) {
   if ((received_can_id & can_mask) != (can_id & ~CAN_INV_FILTER))
      accept-message;
} else {
   if ((received_can_id & can_mask) == can_id)
      accept-message;
}
```

Multiple filters can be arranged in a filter list and set with Sockopts. If one of these filters matches a CAN ID upon reception of a CAN frame, this frame is accepted.

```
6.7.3.2 can_frame_t

typedef struct can_frame_can_frame_t
```

Raw CAN frame.

Central structure for receiving and sending CAN frames.

Examples:

rtcanrecv.c.

6.7.4 Enumeration Type Documentation

```
6.7.4.1 CAN_BITTIME_TYPE
```

enum CAN_BITTIME_TYPE

Supported CAN bit-time types.

Enumerator

CAN_BITTIME_STD	Standard bit-time definition according to Bosch.
CAN_BITTIME_BTR	Hardware-specific BTR bit-time definition.

6.7.4.2 CAN_MODE

enum CAN_MODE

66

Enumerator

CAN_MODE_STOP	Set controller in Stop mode (no reception / transmission possible)
CAN_MODE_START	Set controller into normal operation. Coming from stopped mode or bus off, the controller begins with no errors in CAN_STATE_ACTIVE.
CAN_MODE_SLEEP	Set controller into Sleep mode. This is only possible if the controller is not stopped or bus-off. Notice that sleep mode will only be entered when there is no bus activity. If the controller detects bus activity while "sleeping" it will go into operating mode again. To actively leave sleep mode again trigger CAN_MODE_START.

6.7.4.3 CAN_STATE

enum CAN_STATE

Enumerator


CAN_STATE_ERROR_ACTIVE	CAN controller is error active.
CAN_STATE_ACTIVE	CAN controller is active.
CAN_STATE_ERROR_WARNING	CAN controller is error active, warning level is reached.
CAN_STATE_BUS_WARNING	CAN controller is error active, warning level is reached.
CAN_STATE_ERROR_PASSIVE	CAN controller is error passive.
CAN_STATE_BUS_PASSIVE	CAN controller is error passive.
CAN_STATE_BUS_OFF	CAN controller went into Bus Off.
CAN_STATE_SCANNING_BAUDRATE	CAN controller is scanning to get the baudrate.
CAN_STATE_STOPPED	CAN controller is in stopped mode.
CAN_STATE_SLEEPING	CAN controller is in Sleep mode.

6.8 RTDM 67

6.8 RTDM

The Real-Time Driver Model (RTDM) provides a unified interface to both users and developers of real-time device drivers.

Collaboration diagram for RTDM:

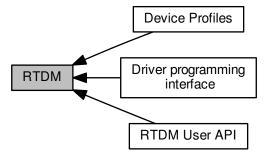

Modules

• RTDM User API

Application interface to RTDM services.

• Driver programming interface

RTDM driver programming interface.

• Device Profiles

Pre-defined classes of real-time devices.

Typedefs

• typedef uint64_t nanosecs_abs_t

RTDM type for representing absolute dates.

• typedef int64_t nanosecs_rel_t

RTDM type for representing relative intervals.

API Versioning

• #define RTDM_API_VER 9

Common user and driver API version.

#define RTDM_API_MIN_COMPAT_VER 9

Minimum API revision compatible with the current release.

RTDM TIMEOUT xxx

Special timeout values

- #define RTDM_TIMEOUT_INFINITE 0
 Block forever.
- #define RTDM_TIMEOUT_NONE (-1)

Any negative timeout means non-blocking.

6.8.1 Detailed Description

The Real-Time Driver Model (RTDM) provides a unified interface to both users and developers of real-time device drivers.

Specifically, it addresses the constraints of mixed RT/non-RT systems like Xenomai. RTDM conforms to POSIX semantics (IEEE Std 1003.1) where available and applicable.

API Revision: 8

6.8.2 Macro Definition Documentation

```
6.8.2.1 RTDM_TIMEOUT_INFINITE
```

#define RTDM_TIMEOUT_INFINITE 0

Block forever.

6.8.2.2 RTDM_TIMEOUT_NONE

#define RTDM_TIMEOUT_NONE (-1)

Any negative timeout means non-blocking.

6.8.3 Typedef Documentation

6.8 RTDM 69

```
6.8.3.1 nanosecs_abs_t
typedef uint64_t nanosecs_abs_t
```

RTDM type for representing absolute dates.

Its base type is a 64 bit unsigned integer. The unit is 1 nanosecond.

Examples:

rtcanrecv.c.

```
6.8.3.2 nanosecs_rel_t
```

typedef int64_t nanosecs_rel_t

RTDM type for representing relative intervals.

Its base type is a 64 bit signed integer. The unit is 1 nanosecond. Relative intervals can also encode the special timeouts "infinite" and "non-blocking", see RTDM_TIMEOUT_xxx.

Examples:

rtcanrecv.c.

6.9 RTDM User API

Application interface to RTDM services.

Collaboration diagram for RTDM User API:



Files

• file rtdm.h

Real-Time Driver Model for Xenomai, user API header.

6.9.1 Detailed Description

Application interface to RTDM services.

This is the upper interface of RTDM provided to application programs both in kernel and user space. Note that certain functions may not be implemented by every device. Refer to the Device Profiles for precise information.

6.10 Serial Devices 71

6.10 Serial Devices

This is the common interface a RTDM-compliant serial device has to provide.

Collaboration diagram for Serial Devices:



This is the common interface a RTDM-compliant serial device has to provide.

Feel free to comment on this profile via the Xenomai mailing list xenomai@xenomai.org or directly to the author jan.kiszka@web.de.

Profile Revision: 3

Device Characteristics

Device Flags: RTDM_NAMED_DEVICE, RTDM_EXCLUSIVE

Device Class: RTDM_CLASS_SERIAL

Device Name: "/dev/rtdm/rtser<N>", N >= 0

Supported Operations

Open

Tags

secondary-only Specific return values: none

Close

Tags

secondary-only Specific return values: none

IOCTL

Tags

task-unrestricted. See below Specific return values: see below

Read

Tags

mode-unrestricted Specific return values:

- -ETIMEDOUT
- -EINTR (interrupted explicitly or by signal)
- -EAGAIN (no data available in non-blocking mode)
- -EBADF (device has been closed while reading)
- -EIO (hardware error or broken bit stream)

Write

Tags

mode-unrestricted Specific return values:

- -ETIMEDOUT
- -EINTR (interrupted explicitly or by signal)
- -EAGAIN (no data written in non-blocking mode)
- -EBADF (device has been closed while writing)

6.11 Testing Devices 73

6.11 Testing Devices

This group of devices is intended to provide in-kernel testing results.

Collaboration diagram for Testing Devices:



This group of devices is intended to provide in-kernel testing results.

Feel free to comment on this profile via the Xenomai mailing list xenomai@xenomai.org or directly to the author jan.kiszka@web.de.

Profile Revision: 2

Device Characteristics

Device Flags: RTDM_NAMED_DEVICE

Device Class: RTDM_CLASS_TESTING

Supported Operations

Open

Tags

secondary-only Specific return values: none

Close

Tags

secondary-only Specific return values: none

IOCTL

Tags

task-unrestricted. See TSTIOCTLs below Specific return values: see TSTIOCTLs below

6.12 Real-time IPC

Profile Revision: 1

Collaboration diagram for Real-time IPC:



Data Structures

struct rtipc port label

Port label information structure.

struct sockaddr_ipc

Socket address structure for the RTIPC address family.

Typedefs

typedef int16_t rtipc_port_t
 Port number type for the RTIPC address family.

Supported operations

Standard socket operations supported by the RTIPC protocols.

- int socket__AF_RTIPC (int domain=AF_RTIPC, int type=SOCK_DGRAM, int protocol)

 Create an endpoint for communication in the AF_RTIPC domain.
- int close AF RTIPC (int sockfd)

Close a RTIPC socket descriptor.

- int bind__AF_RTIPC (int sockfd, const struct sockaddr_ipc *addr, socklen_t addrlen)
 Bind a RTIPC socket to a port.
- int connect__AF_RTIPC (int sockfd, const struct sockaddr_ipc *addr, socklen_t addrlen)

 Initiate a connection on a RTIPC socket.
- int setsockopt__AF_RTIPC (int sockfd, int level, int optname, const void *optval, socklen_t optlen)

 Set options on RTIPC sockets.
- int getsockopt__AF_RTIPC (int sockfd, int level, int optname, void *optval, socklen_t *optlen)

 Get options on RTIPC sockets.
- ssize_t sendmsg__AF_RTIPC (int sockfd, const struct msghdr *msg, int flags)
 Send a message on a RTIPC socket.
- ssize t recvmsg AF RTIPC (int sockfd, struct msghdr *msg, int flags)

Receive a message from a RTIPC socket.

- int getsockname__AF_RTIPC (int sockfd, struct sockaddr_ipc *addr, socklen_t *addrlen)

 Get socket name.
- int getpeername__AF_RTIPC (int sockfd, struct sockaddr_ipc *addr, socklen_t *addrlen)

 Get socket peer.

RTIPC protocol list

protocols for the PF_RTIPC protocol family

enum { IPCPROTO_IPC = 0, IPCPROTO_XDDP = 1, IPCPROTO_IDDP = 2, IPCPROTO_BUFP = 3 }

XDDP socket options

Setting and getting XDDP socket options.

#define XDDP_LABEL 1

XDDP label assignment.

• #define XDDP POOLSZ 2

XDDP local pool size configuration.

• #define XDDP_BUFSZ 3

XDDP streaming buffer size configuration.

#define XDDP_MONITOR 4

XDDP monitoring callback.

XDDP events

Specific events occurring on XDDP channels, which can be monitored via the XDDP_MONITOR socket option.

#define XDDP_EVTIN 1

Monitor writes to the non real-time endpoint.

• #define XDDP_EVTOUT 2

Monitor reads from the non real-time endpoint.

• #define XDDP_EVTDOWN 3

Monitor close from the non real-time endpoint.

#define XDDP EVTNOBUF 4

Monitor memory shortage for non real-time datagrams.

IDDP socket options

Setting and getting IDDP socket options.

#define IDDP LABEL 1

IDDP label assignment.

• #define IDDP_POOLSZ 2

IDDP local pool size configuration.

BUFP socket options

Setting and getting BUFP socket options.

#define BUFP_LABEL 1
 BUFP label assignment.

• #define BUFP_BUFSZ 2

BUFP buffer size configuration.

Socket level options

Setting and getting supported standard socket level options.

- #define SO_SNDTIMEO defined_by_kernel_header_file
 IPCPROTO_IDDP and IPCPROTO_BUFP protocols support the standard SO_SNDTIMEO socket option, from the SOL_SOCKET level.
- #define SO_RCVTIMEO defined_by_kernel_header_file
 All RTIPC protocols support the standard SO_RCVTIMEO socket option, from the SOL_SOCKET level.

6.12.1 Detailed Description

Profile Revision: 1

Device Characteristics

Device Flags: RTDM_PROTOCOL_DEVICE

Protocol Family: PF_RTIPC

Socket Type: SOCK_DGRAM

Device Class: RTDM_CLASS_RTIPC

6.12.2 Macro Definition Documentation

6.12.2.1 BUFP BUFSZ

#define BUFP_BUFSZ 2

BUFP buffer size configuration.

All messages written to a BUFP socket are buffered in a single per-socket memory area. Configuring the size of such buffer prior to binding the socket to a destination port is mandatory.

It is not allowed to configure a buffer size after the socket was bound. However, multiple configuration calls are allowed prior to the binding; the last value set will be used.

Note

: the buffer memory is obtained from the host allocator by the bind call.

Parameters

in	level	SOL_BUFP
in	optname	BUFP_BUFSZ
in	optval	Pointer to a variable of type size_t, containing the required size of the buffer to reserve at binding time
in	optlen	sizeof(size_t)

Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen is invalid or *optval is zero)

Calling context:

RT/non-RT

Examples:

bufp-label.c, and bufp-readwrite.c.

6.12.2.2 BUFP_LABEL

#define BUFP_LABEL 1

BUFP label assignment.

ASCII label strings can be attached to BUFP ports, in order to connect sockets to them in a more descriptive way than using plain numeric port values.

When available, this label will be registered when binding, in addition to the port number (see BUFP port binding).

It is not allowed to assign a label after the socket was bound. However, multiple assignment calls are allowed prior to the binding; the last label set will be used.

Parameters

in	level	SOL_BUFP
in	optname	BUFP_LABEL
in	optval	Pointer to struct rtipc_port_label
in	optlen	sizeof(struct rtipc_port_label)

Returns

78

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen is invalid)

Calling context:

RT/non-RT

Examples:

bufp-label.c.

6.12.2.3 IDDP_LABEL

#define IDDP_LABEL 1

IDDP label assignment.

ASCII label strings can be attached to IDDP ports, in order to connect sockets to them in a more descriptive way than using plain numeric port values.

When available, this label will be registered when binding, in addition to the port number (see IDDP port binding).

It is not allowed to assign a label after the socket was bound. However, multiple assignment calls are allowed prior to the binding; the last label set will be used.

Parameters

in	level	SOL_IDDP
in	optname	IDDP_LABEL
in	optval	Pointer to struct rtipc_port_label
in	optlen	sizeof(struct rtipc_port_label)

Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen is invalid)

Calling context:

RT/non-RT

Examples:

iddp-label.c.

6.12.2.4 IDDP_POOLSZ

#define IDDP_POOLSZ 2

IDDP local pool size configuration.

By default, the memory needed to convey the data is pulled from Xenomai's system pool. Setting a local pool size overrides this default for the socket.

If a non-zero size was configured, a local pool is allocated at binding time. This pool will provide storage for pending datagrams.

It is not allowed to configure a local pool size after the socket was bound. However, multiple configuration calls are allowed prior to the binding; the last value set will be used.

Note

: the pool memory is obtained from the host allocator by the bind call.

Parameters

in	level	SOL_IDDP
in	optname	IDDP_POOLSZ
in	optval	Pointer to a variable of type size_t, containing the required size of the local pool to reserve at binding time
in	optlen	sizeof(size_t)

Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen is invalid or *optval is zero)

Calling context:

RT/non-RT

Examples:

iddp-sendrecv.c.

6.12.2.5 SO_RCVTIMEO

#define SO_RCVTIMEO defined_by_kernel_header_file

All RTIPC protocols support the standard SO RCVTIMEO socket option, from the SOL_SOCKET level.

See also

setsockopt(), getsockopt() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399/

Examples:

xddp-label.c.

6.12.2.6 SO SNDTIMEO

#define SO_SNDTIMEO defined_by_kernel_header_file

IPCPROTO_IDDP and IPCPROTO_BUFP protocols support the standard SO_SNDTIMEO socket option, from the SOL_SOCKET level.

See also

setsockopt(), getsockopt() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399/

6.12.2.7 XDDP BUFSZ

#define XDDP_BUFSZ 3

XDDP streaming buffer size configuration.

In addition to sending datagrams, real-time threads may stream data in a byte-oriented mode through the port as well. This increases the bandwidth and reduces the overhead, when the overall data to send to the Linux domain is collected by bits, and keeping the message boundaries is not required.

This feature is enabled when a non-zero buffer size is set for the socket. In that case, the real-time data accumulates into the streaming buffer when MSG_MORE is passed to any of the send functions, until:

- the receiver from the Linux domain wakes up and consumes it,
- a different source port attempts to send data to the same destination port,
- MSG MORE is absent from the send flags,
- the buffer is full,

whichever comes first.

Setting *optval to zero disables the streaming buffer, in which case all sendings are conveyed in separate datagrams, regardless of MSG MORE.

Note

only a single streaming buffer exists per socket. When this buffer is full, the real-time data stops accumulating and sending operations resume in mere datagram mode. Accumulation may happen again after some or all data in the streaming buffer is consumed from the Linux domain endpoint.

The streaming buffer size may be adjusted multiple times during the socket lifetime; the latest configuration change will take effect when the accumulation resumes after the previous buffer was flushed.

Parameters

in	level	SOL_XDDP
in	optname	XDDP_BUFSZ
in	optval	Pointer to a variable of type size_t, containing the required size of the streaming buffer
in	optlen	sizeof(size_t)

Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -ENOMEM (Not enough memory)
- -EINVAL (optlen is invalid)

Calling context:

RT/non-RT

Examples:

xddp-stream.c.

6.12.2.8 XDDP_EVTDOWN

#define XDDP_EVTDOWN 3

Monitor close from the non real-time endpoint.

XDDP_EVTDOWN is sent when the non real-time endpoint is closed. The argument is always 0.

6.12.2.9 XDDP_EVTIN

#define XDDP_EVTIN 1

Monitor writes to the non real-time endpoint.

XDDP_EVTIN is sent when data is written to the non real-time endpoint the socket is bound to (i.e. via /dev/rtpN), which means that some input is pending for the real-time endpoint. The argument is the size of the incoming message.

6.12.2.10 XDDP_EVTNOBUF

#define XDDP_EVTNOBUF 4

Monitor memory shortage for non real-time datagrams.

XDDP_EVTNOBUF is sent when no memory is available from the pool to hold the message currently sent from the non real-time endpoint. The argument is the size of the failed allocation. Upon return from the callback, the caller will block and retry until enough space is available from the pool; during that process, the callback might be invoked multiple times, each time a new attempt to get the required memory fails.

6.12.2.11 XDDP_EVTOUT

#define XDDP_EVTOUT 2

Monitor reads from the non real-time endpoint.

XDDP_EVTOUT is sent when the non real-time endpoint successfully reads a complete message (i.e. via /dev/rtpN). The argument is the size of the outgoing message.

6.12.2.12 XDDP_LABEL

#define XDDP_LABEL 1

XDDP label assignment.

ASCII label strings can be attached to XDDP ports, so that opening the non-RT endpoint can be done by specifying this symbolic device name rather than referring to a raw pseudo-device entry (i.e. /dev/rtpN).

When available, this label will be registered when binding, in addition to the port number (see XDDP port binding).

It is not allowed to assign a label after the socket was bound. However, multiple assignment calls are allowed prior to the binding; the last label set will be used.

Parameters

in	level	SOL_XDDP
in	optname	XDDP_LABEL
in	optval	Pointer to struct rtipc_port_label
in	optlen	sizeof(struct rtipc_port_label)

Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)

• -EINVAL (optlen invalid)

Calling context:

RT/non-RT

Examples:

xddp-label.c.

6.12.2.13 XDDP_MONITOR

#define XDDP_MONITOR 4

XDDP monitoring callback.

Other RTDM drivers may install a user-defined callback via the rtdm_setsockopt call from the inter-driver API, in order to collect particular events occurring on the channel.

This notification mechanism is particularly useful to monitor a channel asynchronously while performing other tasks.

The user-provided routine will be passed the RTDM file descriptor of the socket receiving the event, the event code, and an optional argument. Four events are currently defined, see XDDP_EVENTS.

The XDDP_EVTIN and XDDP_EVTOUT events are fired on behalf of a fully atomic context; therefore, care must be taken to keep their overhead low. In those cases, the Xenomai services that may be called from the callback are restricted to the set allowed to a real-time interrupt handler.

Parameters

in	level	SOL_XDDP
in	optname	XDDP_MONITOR
in	optval	Pointer to a pointer to function of type int (*)(int fd, int event, long arg), containing the address of the user-defined callback. Passing a NULL callback pointer in <i>optval</i> disables monitoring.
in	optlen	sizeof(int (*)(int fd, int event, long arg))

Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EPERM (Operation not allowed from user-space)
- -EINVAL (optlen is invalid)

Calling context:

RT/non-RT, kernel space only

6.12.2.14 XDDP_POOLSZ

#define XDDP_POOLSZ 2

XDDP local pool size configuration.

By default, the memory needed to convey the data is pulled from Xenomai's system pool. Setting a local pool size overrides this default for the socket.

If a non-zero size was configured, a local pool is allocated at binding time. This pool will provide storage for pending datagrams.

It is not allowed to configure a local pool size after the socket was bound. However, multiple configuration calls are allowed prior to the binding; the last value set will be used.

Note

: the pool memory is obtained from the host allocator by the bind call.

Parameters

in	level	SOL_XDDP
in	optname	XDDP_POOLSZ
in	optval	Pointer to a variable of type size_t, containing the required size of the local pool to reserve at binding time
in	optlen	sizeof(size_t)

Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen invalid or *optval is zero)

Calling context:

RT/non-RT

Examples:

xddp-echo.c.

6.12.3 Enumeration Type Documentation

6.12.3.1 anonymous enum

anonymous enum

Enumerator

IPCPROTO_IPC	Default protocol (IDDP)
IPCPROTO_XDDP	Cross-domain datagram protocol (RT <-> non-RT). Real-time Xenomai threads and regular Linux threads may want to exchange data in a way that does not require the former to leave the real-time domain (i.e. primary mode). The RTDM-based XDDP protocol is available for this purpose. On the Linux domain side, pseudo-device files named /dev/rtp <minor> give regular POSIX threads access to non real-time communication endpoints, via the standard character-based I/O interface. On the Xenomai domain side, sockets may be bound to XDDP ports, which act as proxies to send and receive data to/from the associated pseudo-device files. Ports and pseudo-device minor numbers are paired, meaning that e.g. socket port 7 will proxy the traffic to/from /dev/rtp7. All data sent through a bound/connected XDDP socket via sendto(2) or write(2) will be passed to the peer endpoint in the Linux domain, and made available for reading via the standard read(2) system call. Conversely, all data sent using write(2) through the non real-time endpoint will be conveyed to the real-time socket endpoint, and made available to the recvfrom(2) or read(2) system calls.</minor>
IPCPROTO_IDDP	Intra-domain datagram protocol (RT <-> RT). The RTDM-based IDDP protocol enables real-time threads to exchange datagrams within the Xenomai domain, via socket endpoints.
IPCPROTO_BUFP	Buffer protocol (RT <-> RT, byte-oriented). The RTDM-based BUFP protocol implements a lightweight, byte-oriented, one-way Producer-Consumer data path. All messages written are buffered into a single memory area in strict FIFO order, until read by the consumer. This protocol always prevents short writes, and only allows short reads when a potential deadlock situation arises (i.e. readers and writers waiting for each other indefinitely).

6.12.4 Function Documentation

Bind a RTIPC socket to a port.

Bind the socket to a destination port.

Parameters

in	sockfd	The RTDM file descriptor obtained from the socket creation call.
in	addr	The address to bind the socket to (see struct sockaddr_ipc). The meaning of such address depends on the RTIPC protocol in use for the socket:

• IPCPROTO_XDDP

86

This action creates an endpoint for channelling traffic between the Xenomai and Linux domains. sipc_family must be AF_RTIPC, sipc_port is either -1, or a valid free port number between 0 and CONFIG_XENO_OPT_PIPE_NRDEV-1.

If sipc port is -1, a free port will be assigned automatically.

Upon success, the pseudo-device /dev/rtpN will be reserved for this communication channel, where N is the assigned port number. The non real-time side shall open this device to exchange data over the bound socket.

If a label was assigned (see XDDP_LABEL) prior to binding the socket to a port, a registry link referring to the created pseudo-device will be automatically set up as /proc/xenomai/registry/rtipc/xddp/label, where label is the label string passed to setsockopt() for the XDDP_LABEL option.

• IPCPROTO IDDP

This action creates an endpoint for exchanging datagrams within the Xenomai domain.

sipc_family must be AF_RTIPC, sipc_port is either -1, or a valid free port number between 0 and CONFIG_XENO_OPT_IDDP_NRPORT-1.

If *sipc_port* is -1, a free port will be assigned automatically. The real-time peer shall connect to the same port for exchanging data over the bound socket.

If a label was assigned (see IDDP_LABEL) prior to binding the socket to a port, a registry link referring to the assigned port number will be automatically set up as /proc/xenomai/registry/rtipc/iddp/label, where label is the label string passed to setsockopt() for the IDDP_LABEL option.

• IPCPROTO BUFP

This action creates an endpoint for a one-way byte stream within the Xenomai domain.

sipc_family must be AF_RTIPC, sipc_port is either -1, or a valid free port number between 0 and CONFIG_XENO_OPT_BUFP_NRPORT-1.

If *sipc_port* is -1, an available port will be assigned automatically. The real-time peer shall connect to the same port for exchanging data over the bound socket.

If a label was assigned (see BUFP_LABEL) prior to binding the socket to a port, a registry link referring to the assigned port number will be automatically set up as /proc/xenomai/registry/rtipc/bufp/label, where label is the label string passed to setsockopt() for the $BUFP_LABEL$ option.

Parameters

	م ما ما برا م بم	The size in bytes of the structure pointed to by addr.
1 n	addrien	i the size in bytes of the structure pointed to by addr.
		parties of the contract parties of the contract of the contrac

Returns

In addition to the standard error codes for bind(2), the following specific error code may be returned:

- -EFAULT (Invalid data address given)
- -ENOMEM (Not enough memory)
- -EINVAL (Invalid parameter)
- -EADDRINUSE (Socket already bound to a port, or no port available)

Calling context:

non-RT

Close a RTIPC socket descriptor.

Blocking calls to any of the sendmsg or recvmsg functions will be unblocked when the socket is closed and return with an error.

Parameters

in	sockfd	The socket descriptor to close.
----	--------	---------------------------------

Returns

In addition to the standard error codes for close(2), the following specific error code may be returned: none

Calling context:

non-RT

Initiate a connection on a RTIPC socket.

Parameters

in	sockfd	The RTDM file descriptor obtained from the socket creation call.
in	addr	The address to connect the socket to (see struct sockaddr_ipc).

If sipc_port is a valid port for the protocol, it is used verbatim and the connection succeeds immediately, regardless of whether the destination is bound at the time of the call.

- If sipc_port is -1 and a label was assigned to the socket, connect() blocks for the requested amount
 of time (see SO_RCVTIMEO) until a socket is bound to the same label via bind(2) (see XDDP

 _LABEL, IDDP_LABEL, BUFP_LABEL), in which case a connection is established between both
 endpoints.
- If sipc_port is -1 and no label was assigned to the socket, the default destination address is cleared, meaning that any subsequent write to the socket will return -EDESTADDRREQ, until a valid destination address is set via connect(2) or bind(2).

Parameters

```
in addrlen The size in bytes of the structure pointed to by addr.
```

Returns

In addition to the standard error codes for connect(2), the following specific error code may be returned: none.

Calling context:

RT/non-RT

```
6.12.4.4 getpeername__AF_RTIPC()
```

Get socket peer.

The name of the remote endpoint for the socket is copied back (see struct sockaddr_ipc). This is the default destination address for messages sent on the socket. It can be set either explicitly via connect(2), or implicitly via bind(2) if no connect(2) was called prior to binding the socket to a port, in which case both the local and remote names are equal.

Returns

In addition to the standard error codes for getpeername(2), the following specific error code may be returned: none.

Calling context:

RT/non-RT

Get socket name.

The name of the local endpoint for the socket is copied back (see struct sockaddr_ipc).

Returns

In addition to the standard error codes for getsockname(2), the following specific error code may be returned: none.

Calling context:

RT/non-RT

```
6.12.4.6 getsockopt__AF_RTIPC()
int getsockopt__AF_RTIPC (
    int sockfd,
    int level,
    int optname,
    void * optval,
    socklen_t * optlen )
```

Get options on RTIPC sockets.

These functions allow to get various socket options. Supported Levels and Options:

- Level SOL SOCKET
- Level SOL_XDDP
- Level SOL_IDDP
- Level SOL BUFP

Returns

In addition to the standard error codes for getsockopt(2), the following specific error code may be returned: follow the option links above.

Calling context:

RT/non-RT

Receive a message from a RTIPC socket.

Parameters

in	sockfd	The RTDM file descriptor obtained from the socket creation call.
out	msg	The address the message header will be copied at.
in	flags	Operation flags:

MSG_DONTWAIT Non-blocking I/O operation. The caller will not be blocked whenever no message is immediately available for receipt at the time of the call, but will rather return with -EWOU

LDBLOCK.

Note

IPCPROTO_BUFP does not allow for short reads and always returns the requested amount of bytes, except in one situation: whenever some writer is waiting for sending data upon a buffer full condition, while the caller would have to wait for receiving a complete message. This is usually the sign of a pathological use of the BUFP socket, like defining an incorrect buffer size via BUFP_B UFSZ. In that case, a short read is allowed to prevent a deadlock.

Returns

In addition to the standard error codes for recvmsg(2), the following specific error code may be returned: none.

Calling context:

RT

Send a message on a RTIPC socket.

Parameters

in	sockfd	The RTDM file descriptor obtained from the socket creation call.
in	msg	The address of the message header conveying the datagram.
in	flags	Operation flags:

MSG_OOB Send out-of-band message. For all RTIPC protocols except IPCPROTO_BUFP, sending out-of-band data actually means pushing them to the head of the receiving queue, so that the reader will always receive them before normal messages. IPCPROTO_BUFP does not support out-of-band sending.

MSG_DONTWAIT Non-blocking I/O operation. The caller will not be blocked whenever the message cannot be sent immediately at the time of the call (e.g. memory shortage), but will rather return with -EWOULDBLOCK. Unlike other RTIPC protocols, IPCPROTO_XDDP accepts but never considers MSG_DONTWAIT since writing to a real-time XDDP endpoint is inherently a non-blocking operation.

MSG_MORE Accumulate data before sending. This flag is accepted by the IPCPROTO_XDDP
protocol only, and tells the send service to accumulate the outgoing data into an internal streaming
buffer, instead of issuing a datagram immediately for it. See XDDP_BUFSZ for more.

Note

No RTIPC protocol allows for short writes, and only complete messages are sent to the peer.

Returns

In addition to the standard error codes for sendmsg(2), the following specific error code may be returned: none.

Calling context:

RT

```
6.12.4.9 setsockopt__AF_RTIPC()
int setsockopt__AF_RTIPC (
    int sockfd,
    int level,
    int optname,
    const void * optval,
    socklen_t optlen )
```

Set options on RTIPC sockets.

These functions allow to set various socket options. Supported Levels and Options:

```
    Level SOL SOCKET
```

- Level SOL XDDP
- Level SOL_IDDP
- Level SOL_BUFP

Returns

In addition to the standard error codes for setsockopt(2), the following specific error code may be returned: follow the option links above.

Calling context:

non-RT

Create an endpoint for communication in the AF_RTIPC domain.

Parameters

in	domain	The communication domain. Must be AF_RTIPC.
in	type	The socket type. Must be SOCK_DGRAM.
in	protocol	Any of IPCPROTO_XDDP, IPCPROTO_IDDP, or IPCPROTO_BUFP. IPCPROTO_IPC is also valid, and refers to the default RTIPC protocol, namely IPCPROTO_IDDP.

Returns

In addition to the standard error codes for socket(2), the following specific error code may be returned:

• -ENOPROTOOPT (Protocol is known, but not compiled in the RTIPC driver). See RTIPC protocols for available protocols.

Calling context:

non-RT

6.13 Asynchronous Procedure Calls

Services for scheduling function calls in the Linux domain.

Collaboration diagram for Asynchronous Procedure Calls:



Functions

- int xnapc_alloc (const char *name, void(*handler)(void *cookie), void *cookie)
 Allocate an APC slot.
- void xnapc_free (int apc)

Releases an APC slot.

static void xnapc_schedule (int apc)
 Schedule an APC invocation.

6.13.1 Detailed Description

Services for scheduling function calls in the Linux domain.

APC is the acronym for Asynchronous Procedure Call, a mean by which activities from the Xenomai domain can schedule deferred invocations of handlers to be run into the Linux domain, as soon as possible when the Linux kernel gets back in control.

Up to BITS_PER_LONG APC slots can be active at any point in time.

APC support is built upon the interrupt pipeline's virtual interrupt support.

6.13.2 Function Documentation

Allocate an APC slot.

APC is the acronym for Asynchronous Procedure Call, a mean by which activities from the Xenomai domain can schedule deferred invocations of handlers to be run into the Linux domain, as soon as possible when the Linux kernel gets back in control. Up to BITS_PER_LONG APC slots can be active at any point in time. APC support is built upon the interrupt pipeline's virtual interrupt support.

Any Linux kernel service which is callable from a regular Linux interrupt handler is in essence available to APC handlers.

Parameters

name	is a symbolic name identifying the APC which will get reported through the /proc/xenomai/apc interface. Passing NULL to create an anonymous APC is allowed.
handler	The address of the fault handler to call upon exception condition. The handle will be passed the <i>cookie</i> value unmodified.
cookie	A user-defined opaque pointer the APC handler receives as its sole argument.

Returns

a valid APC identifier is returned upon success, or a negative error code otherwise:

- -EINVAL is returned if handler is invalid.
- -EBUSY is returned if no more APC slots are available.

Tags

unrestricted

```
6.13.2.2 xnapc_free()

void xnapc_free (
          int apc )
```

Releases an APC slot.

This service deallocates an APC slot obtained by xnapc_alloc().

Parameters

apc The APC id. to release, as returned by a successful call to the xnapc_alloc() service.

Tags

unrestricted

Schedule an APC invocation.

This service marks the APC as pending for the Linux domain, so that its handler will be called as soon as possible, when the Linux domain gets back in control.

When posted from the Linux domain, the APC handler is fired as soon as the interrupt mask is explicitly cleared by some kernel code. When posted from the Xenomai domain, the APC handler is fired as soon as the Linux domain is resumed, i.e. after Xenomai has completed all its pending duties.

Parameters


This service can be called from:

• Any domain context, albeit the usual calling place is from the Xenomai domain.

6.14 In-kernel arithmetics

A collection of helpers performing arithmetics not implicitly available from kernel context via GCC helpers.

Collaboration diagram for In-kernel arithmetics:



Functions

• unsigned long long xnarch_generic_full_divmod64 (unsigned long long a, unsigned long long b, unsigned long long *rem)

Architecture-independent div64 operation with remainder.

6.14.1 Detailed Description

A collection of helpers performing arithmetics not implicitly available from kernel context via GCC helpers.

Many of these routines enable 64bit arithmetics on 32bit systems. Xenomai architecture ports normally implement the performance critical ones in hand-crafted assembly code (see kernel/cobalt/arch/<arch>/include/asm/xenomai/uapi/arith.h).

6.14.2 Function Documentation

```
6.14.2.1 xnarch_generic_full_divmod64()
unsigned long long xnarch_generic_full_divmod64 (
```

```
unsigned long long a,
unsigned long long b,
unsigned long long * rem )
```

Architecture-independent div64 operation with remainder.


Parameters

а	dividend	
b	divisor	
rem	if non-NULL, a pointer to a 64bit variable for collecting the remainder from the division by	Doxygen

6.15 Buffer descriptor

Abstraction for copying data to/from different address spaces.

Collaboration diagram for Buffer descriptor:



Functions

- static void xnbufd_map_uread (struct xnbufd *bufd, const void __user *ptr, size_t len)
 Initialize a buffer descriptor for reading from user memory.
- static void xnbufd_map_uwrite (struct xnbufd *bufd, void __user *ptr, size_t len)
 Initialize a buffer descriptor for writing to user memory.
- ssize_t xnbufd_unmap_uread (struct xnbufd *bufd)

Finalize a buffer descriptor obtained from xnbufd map uread().

ssize_t xnbufd_unmap_uwrite (struct xnbufd *bufd)

Finalize a buffer descriptor obtained from xnbufd_map_uwrite().

static void xnbufd_map_kread (struct xnbufd *bufd, const void *ptr, size_t len)

Initialize a buffer descriptor for reading from kernel memory.

• static void xnbufd_map_kwrite (struct xnbufd *bufd, void *ptr, size_t len)

Initialize a buffer descriptor for writing to kernel memory.

ssize_t xnbufd_unmap_kread (struct xnbufd *bufd)

Finalize a buffer descriptor obtained from xnbufd map kread().

ssize_t xnbufd_unmap_kwrite (struct xnbufd *bufd)

Finalize a buffer descriptor obtained from xnbufd_map_kwrite().

• ssize_t xnbufd_copy_to_kmem (void *ptr, struct xnbufd *bufd, size_t len)

Copy memory covered by a buffer descriptor to kernel memory.

• ssize_t xnbufd_copy_from_kmem (struct xnbufd *bufd, void *from, size_t len)

Copy kernel memory to the area covered by a buffer descriptor.

void xnbufd_invalidate (struct xnbufd *bufd)

Invalidate a buffer descriptor.

static void xnbufd_reset (struct xnbufd *bufd)

Reset a buffer descriptor.

6.15.1 Detailed Description

Abstraction for copying data to/from different address spaces.

A buffer descriptor is a simple abstraction dealing with copy operations to/from memory buffers which may belong to different address spaces.

To this end, the buffer descriptor library provides a small set of copy routines which are aware of address space restrictions when moving data, and a generic container type which can hold a reference to - or cover - a particular memory area, either present in kernel space, or in any of the existing user memory contexts.

The goal of the buffer descriptor abstraction is to hide address space specifics from Xenomai services dealing with memory areas, allowing them to operate on multiple address spaces seamlessly.

The common usage patterns are as follows:

 Implementing a Xenomai syscall returning a bulk of data to the caller, which may have to be copied back to either kernel or user space:

```
[Syscall implementation]
ssize_t rt_bulk_read_inner(struct xnbufd *bufd)
    ssize t ret:
    size_t len;
void *bulk;
    bulk = get_next_readable_bulk(&len);
    ret = xnbufd_copy_from_kmem(bufd, bulk, min(bufd->b_len, len));
    free bulk(bulk):
    ret = this_may_fail();
    if (ret)
            xnbufd_invalidate(bufd);
    return ret;
}
[Kernel wrapper for in-kernel calls]
int rt_bulk_read(void *ptr, size_t len)
    struct xnbufd bufd:
    ssize_t ret;
    xnbufd_map_kwrite(&bufd, ptr, len);
    ret = rt_bulk_read_inner(&bufd);
    xnbufd_unmap_kwrite(&bufd);
    return ret:
}
[Userland trampoline for user syscalls]
int __rt_bulk_read(struct pt_regs *regs)
    struct xnbufd bufd:
    void __user *ptr;
    ssize_t ret;
    size_t len;
    ptr = (void __user *)__xn_reg_arg1(regs);
    len = __xn_reg_arg2(regs);
    xnbufd_map_uwrite(&bufd, ptr, len);
    ret = rt_bulk_read_inner(&bufd);
    xnbufd_unmap_uwrite(&bufd);
    return ret;
```

• Implementing a Xenomai syscall receiving a bulk of data from the caller, which may have to be read from either kernel or user space:

```
[Syscall implementation]
ssize_t rt_bulk_write_inner(struct xnbufd *bufd)
   void *bulk = get_free_bulk(bufd->b_len);
   return xnbufd_copy_to_kmem(bulk, bufd, bufd->b_len);
[Kernel wrapper for in-kernel calls]
int rt_bulk_write(const void *ptr, size_t len)
    struct xnbufd bufd:
   ssize t ret:
    xnbufd_map_kread(&bufd, ptr, len);
   ret = rt_bulk_write_inner(&bufd);
   xnbufd_unmap_kread(&bufd);
   return ret;
[Userland trampoline for user syscalls]
int __rt_bulk_write(struct pt_regs *regs)
    struct xnbufd bufd:
   void __user *ptr;
    ssize_t ret;
    size_t len;
   ptr = (void __user *)__xn_reg_arg1(regs);
   len = __xn_reg_arg2(regs);
   xnbufd_map_uread(&bufd, ptr, len);
   ret = rt_bulk_write_inner(&bufd);
   xnbufd_unmap_uread(&bufd);
   return ret:
```

6.15.2 Function Documentation

Copy kernel memory to the area covered by a buffer descriptor.

This routine copies *len* bytes from the kernel memory starting at *from* to the area referred to by the buffer descriptor *bufd*. xnbufd_copy_from_kmem() tracks the write offset within the destination memory internally, so that it may be called several times in a loop, until the entire memory area is stored.

The destination address space is dealt with, according to the following rules:

- if bufd refers to a writable kernel area (i.e. see xnbufd_map_kwrite()), the copy is immediatly and fully performed with no restriction.
- if bufd refers to a writable user area (i.e. see xnbufd_map_uwrite()), the copy is performed only if that area lives in the currently active address space, and only if the caller may sleep Linux-wise to process any potential page fault which may arise while writing to that memory.
- if bufd refers to a user area which may not be immediately written to from the current context, the copy is postponed until xnbufd_unmap_uwrite() is invoked for ubufd, at which point the copy will take place. In such a case, the source memory is transferred to a carry over buffer allocated internally; this operation may lead to request dynamic memory from the nucleus heap if len is greater than 64 bytes.

Parameters

bufd	The address of the buffer descriptor covering the user memory to copy data to.
from	The start address of the kernel memory to copy from.
len	The length of the kernel memory to copy to bufd.

Returns

The number of bytes written so far to the memory area covered by *ubufd*. Otherwise,

 -ENOMEM is returned when no memory is available from the nucleus heap to allocate the carry over buffer.

Tags

unrestricted

Note

Calling this routine while holding the nklock and/or running with interrupts disabled is invalid, and doing so will trigger a debug assertion.

This routine may switch the caller to secondary mode if a page fault occurs while reading from the user area. For that reason, xnbufd_copy_to_kmem() may only be called from a preemptible section (Linux-wise).

Copy memory covered by a buffer descriptor to kernel memory.

This routine copies *len* bytes from the area referred to by the buffer descriptor *bufd* to the kernel memory area *to.* xnbufd_copy_to_kmem() tracks the read offset within the source memory internally, so that it may be called several times in a loop, until the entire memory area is loaded.

The source address space is dealt with, according to the following rules:

- if bufd refers to readable kernel area (i.e. see xnbufd_map_kread()), the copy is immediately and fully performed with no restriction.
- if bufd refers to a readable user area (i.e. see xnbufd_map_uread()), the copy is performed only if that area lives in the currently active address space, and only if the caller may sleep Linux-wise to process any potential page fault which may arise while reading from that memory.
- any attempt to read from *bufd* from a non-suitable context is considered as a bug, and will raise a panic assertion when the nucleus is compiled in debug mode.

Parameters

to	The start address of the kernel memory to copy to.
bufd	The address of the buffer descriptor covering the user memory to copy data from.
len	The length of the user memory to copy from bufd.

Returns

The number of bytes read so far from the memory area covered by ubufd. Otherwise:

• -EINVAL is returned upon attempt to read from the user area from an invalid context. This error is only returned when the debug mode is disabled; otherwise a panic assertion is raised.

Tags

task-unrestricted

Note

Calling this routine while holding the nklock and/or running with interrupts disabled is invalid, and doing so will trigger a debug assertion.

This routine may switch the caller to secondary mode if a page fault occurs while reading from the user area. For that reason, xnbufd_copy_to_kmem() may only be called from a preemptible section (Linux-wise).

Invalidate a buffer descriptor.

The buffer descriptor is invalidated, making it unusable for further copy operations. If an outstanding carry over buffer was allocated by a previous call to xnbufd_copy_from_kmem(), it is immediately freed so that no data transfer will happen when the descriptor is finalized.

The only action that may subsequently be performed on an invalidated descriptor is calling the relevant unmapping routine for it. For that reason, xnbufd_invalidate() should be invoked on the error path when data may have been transferred to the carry over buffer.

Parameters

ĺ	bufd	The address of the buffer descriptor to invalidate.
	Daia	The address of the ballet descriptor to invalidate.

Tags

unrestricted

Initialize a buffer descriptor for reading from kernel memory.

The new buffer descriptor may be used to copy data from kernel memory. This routine should be used in pair with xnbufd_unmap_kread().

Parameters

bufd	The address of the buffer descriptor which will map a <i>len</i> bytes kernel memory area, starting from <i>ptr</i> .
ptr	The start of the kernel buffer to map.
len	The length of the kernel buffer starting at ptr.

Tags

unrestricted

Initialize a buffer descriptor for writing to kernel memory.

The new buffer descriptor may be used to copy data to kernel memory. This routine should be used in pair with xnbufd_unmap_kwrite().

Parameters

bufd	The address of the buffer descriptor which will map a <i>len</i> bytes kernel memory area, starting from <i>ptr</i> .	
ptr	The start of the kernel buffer to map.	
len	The length of the kernel buffer starting at ptr.	

Tags

unrestricted

Initialize a buffer descriptor for reading from user memory.

The new buffer descriptor may be used to copy data from user memory. This routine should be used in pair with xnbufd_unmap_uread().

Parameters

bufd	The address of the buffer descriptor which will map a <i>len</i> bytes user memory area, starting from <i>ptr. ptr</i> is never dereferenced directly, since it may refer to a buffer that lives in another address space.	
ptr	The start of the user buffer to map.	
len	The length of the user buffer starting at ptr.	

Tags

task-unrestricted

Initialize a buffer descriptor for writing to user memory.

The new buffer descriptor may be used to copy data to user memory. This routine should be used in pair with xnbufd_unmap_uwrite().

Parameters

bufd	The address of the buffer descriptor which will map a <i>len</i> bytes user memory area, starting from <i>ptr. ptr</i> is never dereferenced directly, since it may refer to a buffer that lives in another address space.	
ptr	The start of the user buffer to map.	
len	The length of the user buffer starting at ptr.	

Tags

task-unrestricted

Reset a buffer descriptor.

The buffer descriptor is reset, so that all data already copied is forgotten. Any carry over buffer allocated is kept, though.

Parameters

bufd The address of the buffer descriptor to reset.

Tags

unrestricted

```
6.15.2.9 xnbufd_unmap_kread()
```

Finalize a buffer descriptor obtained from xnbufd_map_kread().

This routine finalizes a buffer descriptor previously initialized by a call to xnbufd_map_kread(), to read data from a kernel area.

Parameters

bufd The address of the buffer descriptor to finalize.

Returns

The number of bytes read so far from the memory area covered by ubufd.

Tags

task-unrestricted

```
6.15.2.10 xnbufd_unmap_kwrite()
```

Finalize a buffer descriptor obtained from xnbufd_map_kwrite().

This routine finalizes a buffer descriptor previously initialized by a call to xnbufd_map_kwrite(), to write data to a kernel area.

Parameters

bufd The address of the buffer descriptor to finalize.

Returns

The number of bytes written so far to the memory area covered by ubufd.

Tags

task-unrestricted

Finalize a buffer descriptor obtained from xnbufd_map_uread().

This routine finalizes a buffer descriptor previously initialized by a call to xnbufd_map_uread(), to read data from a user area.

Parameters

bufd The address of the buffer descriptor to finalize.

Returns

The number of bytes read so far from the memory area covered by *ubufd*.

Tags

task-unrestricted

Note

Calling this routine while holding the nklock and/or running with interrupts disabled is invalid, and doing so will trigger a debug assertion.

Finalize a buffer descriptor obtained from xnbufd_map_uwrite().

This routine finalizes a buffer descriptor previously initialized by a call to xnbufd_map_uwrite(), to write data to a user area.

The main action taken is to write the contents of the kernel memory area passed to xnbufd_copy_from _kmem() whenever the copy operation was postponed at that time; the carry over buffer is eventually released as needed. If xnbufd_copy_from_kmem() was allowed to copy to the destination user memory at once, then xnbufd_unmap_uwrite() leads to a no-op.

Parameters

bufd The address of the buffer descriptor to finalize.

Returns

The number of bytes written so far to the memory area covered by *ubufd*.

Tags

task-unrestricted

Note

Calling this routine while holding the nklock and/or running with interrupts disabled is invalid, and doing so will trigger a debug assertion.

6.16 Clock services

6.16 Clock services

Collaboration diagram for Clock services:



Functions

- int xnclock_register (struct xnclock *clock, const cpumask_t *affinity)

 Register a Xenomai clock.
- void xnclock_deregister (struct xnclock *clock)

Deregister a Xenomai clock.

• void xnclock_tick (struct xnclock *clock)

Process a clock tick.

void xnclock_adjust (struct xnclock *clock, xnsticks_t delta)

Adjust a clock time.

6.16.1 Detailed Description

6.16.2 Function Documentation

Adjust a clock time.

This service changes the epoch for the given clock by applying the specified tick delta on its wallclock offset.

Parameters

clock	The clock to adjust.
delta	The adjustment value expressed in nanoseconds.

Tags

task-unrestricted, atomic-entry

Note

Xenomai tracks the system time in *nkclock*, as a monotonously increasing count of ticks since the epoch. The epoch is initially the same as the underlying machine time.

Deregister a Xenomai clock.

This service uninstalls a Xenomai clock previously registered with xnclock_register().

This service may be called once all timers driven by *clock* have been stopped.

Parameters

clock The	e clock to deregister.
-----------	------------------------

Tags

secondary-only

Register a Xenomai clock.

This service installs a new clock which may be used to drive Xenomai timers.

Parameters

cloc	ck	The new clock to register.
affir	nity	The set of CPUs we may expect the backing clock device to tick on. As a special case, passing a NULL affinity mask means that timer IRQs cannot be seen as percpu events, in which case all outstanding timers will be maintained into a single global queue instead of percpu timer queues.

6.16 Clock services

Tags

secondary-only

Process a clock tick.

This routine processes an incoming *clock* event, firing elapsed timers as appropriate.

Parameters

clock The clock for which a new event was received.

Tags


coreirq-only, atomic-entry

Note

The current CPU must be part of the real-time affinity set unless the clock device has no percpu semantics, otherwise weird things may happen.

6.17 Debugging services

Collaboration diagram for Debugging services:




6.17.1 Detailed Description

6.18 Dynamic memory allocation services

The implementation of the memory allocator follows the algorithm described in a USENIX 1988 paper called "Design of a General Purpose Memory Allocator for the 4.3BSD Unix Kernel" by Marshall K.

Collaboration diagram for Dynamic memory allocation services:



Functions

- int xnheap_init (struct xnheap *heap, void *membase, u32 size)

 Initialize a memory heap.
- void xnheap_set_name (struct xnheap *heap, const char *name,...)

 Set the heap's name string.
- void xnheap_destroy (struct xnheap *heap)

Destroys a memory heap.

• void * xnheap_alloc (struct xnheap *heap, u32 size)

Allocate a memory block from a memory heap.

void xnheap free (struct xnheap *heap, void *block)

Release a block to a memory heap.

6.18.1 Detailed Description

The implementation of the memory allocator follows the algorithm described in a USENIX 1988 paper called "Design of a General Purpose Memory Allocator for the 4.3BSD Unix Kernel" by Marshall K.

McKusick and Michael J. Karels. You can find it at various locations on the net, including http://docs. ← FreeBSD.org/44doc/papers/kernmalloc.pdf.

Implementation constraints

- Minimum page size is 2 ** XNHEAP_MINLOG2 (must be large enough to hold a pointer).
- Maximum page size is 2 ** XNHEAP MAXLOG2.
- Requested block size is rounded up to XNHEAP MINLOG2.
- Requested block size larger than 2 times the XNHEAP_PAGESZ is rounded up to the next page boundary and obtained from the free page list. So we need a bucket for each power of two between XNHEAP_MINLOG2 and XNHEAP_MAXLOG2 inclusive, plus one to honor requests ranging from the maximum page size to twice this size.

6.18.2 Function Documentation

Allocate a memory block from a memory heap.

Allocates a contiguous region of memory from an active memory heap. Such allocation is guaranteed to be time-bounded.

Parameters

heap	The descriptor address of the heap to get memory from.
size	The size in bytes of the requested block. Sizes lower or equal to the page size are rounded either to the minimum allocation size if lower than this value, or to the minimum alignment size if greater or equal to this value. In the current implementation, with MINALLOC = 8 and MINALIGN = 16, a 7 bytes request will be rounded to 8 bytes, and a 17 bytes request will be rounded to 32.

Returns

The address of the allocated region upon success, or NULL if no memory is available from the specified heap.

Tags

unrestricted

Destroys a memory heap.

Destroys a memory heap.

Parameters

heap The heap descri

Tags

secondary-only

Release a block to a memory heap.

Releases a memory block to a heap.

Parameters

ŀ	heap	The heap descriptor.
Ł	block	The block to be returned to the heap.

Tags

unrestricted

Initialize a memory heap.

Initializes a memory heap suitable for time-bounded allocation requests of dynamic memory.

Parameters

heap	The address of a heap descriptor to initialize.
membase	The address of the storage area.
size	The size in bytes of the storage area. <i>size</i> must be a multiple of PAGE_SIZE and smaller than 2 Gb in the current implementation.

Returns

0 is returned upon success, or:

- -EINVAL is returned if size is either:
 - not aligned on PAGE_SIZE
 - smaller than 2 * PAGE_SIZE
 - greater than 2 Gb (XNHEAP_MAXHEAPSZ)
- -ENOMEM is returned upon failure of allocating the meta-data area used internally to maintain the heap.

Tags

secondary-only

Set the heap's name string.

Set the heap name that will be used in statistic outputs.

Parameters

heap	The address of a heap descriptor.
name	Name displayed in statistic outputs. This parameter can be a printk()-like format argument list.

Tags


task-unrestricted

6.19 Cobalt 115

6.19 Cobalt

Cobalt supplements the native Linux kernel in dual kernel configurations.

Collaboration diagram for Cobalt:

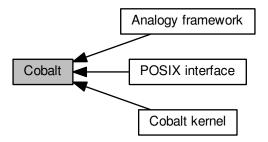

Modules

Cobalt kernel

The Cobalt core is a co-kernel which supplements the Linux kernel for delivering real-time services with very low latency.

Analogy framework

A RTDM-based interface for implementing DAQ card drivers.

POSIX interface

The Cobalt/POSIX interface is an implementation of a subset of the Single Unix specification over the Cobalt core.

6.19.1 Detailed Description

Cobalt supplements the native Linux kernel in dual kernel configurations.


It deals with all time-critical activities, such as handling interrupts, and scheduling real-time threads. The Cobalt kernel has higher priority over all the native kernel activities.

Cobalt provides an implementation of the POSIX and RTDM interfaces based on a set of generic RTOS building blocks.

6.20 Cobalt kernel

The Cobalt core is a co-kernel which supplements the Linux kernel for delivering real-time services with very low latency.

Collaboration diagram for Cobalt kernel:

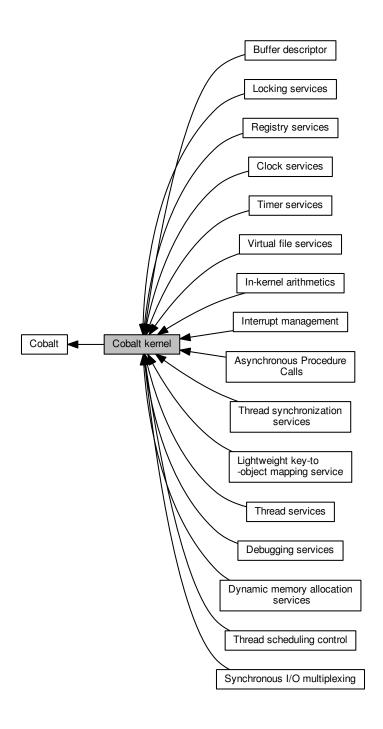

Modules

• Asynchronous Procedure Calls

6.20 Cobalt kernel 117

Services for scheduling function calls in the Linux domain.

In-kernel arithmetics

A collection of helpers performing arithmetics not implicitly available from kernel context via GCC helpers.

Buffer descriptor

Abstraction for copying data to/from different address spaces.

- Clock services
- Debugging services
- Dynamic memory allocation services

The implementation of the memory allocator follows the algorithm described in a USENIX 1988 paper called "Design of a General Purpose Memory Allocator for the 4.3BSD Unix Kernel" by Marshall K.

- Interrupt management
- Locking services

The Xenomai core deals with concurrent activities from two distinct kernels running side-by-side.

Lightweight key-to-object mapping service

A map is a simple indexing structure which associates unique integer keys with pointers to objects.

Registry services

The registry provides a mean to index object descriptors on unique alphanumeric keys.

- Thread scheduling control
- Synchronous I/O multiplexing

This module implements the services needed for implementing the POSIX select() service, or any other event multiplexing services.

- Thread synchronization services
- Thread services
- Timer services

The Xenomai timer facility depends on a clock source (xnclock) for scheduling the next activation times.

Virtual file services

Virtual files provide a mean to export Xenomai object states to user-space, based on common kernel interfaces.

6.20.1 Detailed Description

The Cobalt core is a co-kernel which supplements the Linux kernel for delivering real-time services with very low latency.

It implements a set of generic RTOS building blocks, which the Cobalt/POSIX and Cobalt/RTDM APIs are based on. Cobalt has higher priority over the Linux kernel activities.

6.20.1.1 Dual kernel service tags

The Cobalt kernel services may be restricted to particular calling contexts, or entail specific side-effects.

To describe this information, each service documented by this section bears a set of tags when applicable.

The table below matches the tags used throughout the documentation with the description of their meaning for the caller.

Context tags

Tag	Context on entry
primary-only	Must be called from a Cobalt task in primary mode
primary-timed	Requires a Cobalt task in primary mode if timed
coreirq-only	Must be called from a Cobalt IRQ handler
secondary-only	Must be called from a Cobalt task in secondary mode or regular Linux task
rtdm-task	Must be called from a RTDM driver task
mode-unrestricted	May be called from a Cobalt task in either primary or secondary mode
task-unrestricted	May be called from a Cobalt or regular Linux task indifferently
unrestricted	May be called from any context previously described
atomic-entry	Caller must currently hold the big Cobalt kernel lock (nklock)

Possible side-effects

Tag	Description
might-switch	The Cobalt kernel may switch context

6.21 Interrupt management

Collaboration diagram for Interrupt management:



Functions

void xnintr_destroy (struct xnintr *intr)

Destroy an interrupt descriptor.

• int xnintr_attach (struct xnintr *intr, void *cookie)

Attach an interrupt descriptor.

void xnintr_detach (struct xnintr *intr)

Detach an interrupt descriptor.

void xnintr_enable (struct xnintr *intr)

Enable an interrupt line.

void xnintr_disable (struct xnintr *intr)

Disable an interrupt line.

void xnintr_affinity (struct xnintr *intr, cpumask_t cpumask)

Set processor affinity of interrupt.

• int xnintr_init (struct xnintr *intr, const char *name, unsigned int irq, xnisr_t isr, xniack_t iack, int flags)

Initialize an interrupt descriptor.

6.21.1 Detailed Description

6.21.2 Function Documentation

Set processor affinity of interrupt.

Restricts the IRQ line associated with the interrupt descriptor *intr* to be received only on processors which bits are set in *cpumask*.

Parameters

intr	The address of the interrupt descriptor.
cpumask	The new processor affinity.

Note

Depending on architectures, setting more than one bit in cpumask could be meaningless.

Tags

secondary-only

Attach an interrupt descriptor.

Attach an interrupt descriptor previously initialized by xnintr_init(). This operation registers the descriptor at the interrupt pipeline, but does not enable the interrupt line yet. A call to xnintr_enable() is required to start receiving IRQs from the interrupt line associated to the descriptor.

Parameters

intr	The address of the interrupt descriptor to attach.
cookie	A user-defined opaque value which is stored into the descriptor for further retrieval by the interrupt handler.

Returns

0 is returned on success. Otherwise:

- -EINVAL is returned if an error occurred while attaching the descriptor.
- -EBUSY is returned if the descriptor was already attached.

Note

The caller **must not** hold nklock when invoking this service, this would cause deadlocks.

Tags

secondary-only

Note

Attaching an interrupt descriptor resets the tracked number of IRQ receipts to zero.

Destroy an interrupt descriptor.

Destroys an interrupt descriptor previously initialized by xnintr_init(). The descriptor is automatically detached by a call to xnintr_detach(). No more IRQs will be received through this descriptor after this service has returned.

Parameters

intr The address of the interrupt descriptor to destroy.

Tags

secondary-only

References xnintr_detach().

Detach an interrupt descriptor.

This call unregisters an interrupt descriptor previously attached by xnintr_attach() from the interrupt pipeline. Once detached, the associated interrupt line is disabled, but the descriptor remains valid. The descriptor can be attached anew by a call to xnintr_attach().

Parameters

intr The address of the interrupt descriptor to detach.

Note

The caller **must not** hold nklock when invoking this service, this would cause deadlocks.

Tags

secondary-only

Referenced by xnintr destroy().

Disable an interrupt line.

Disables the interrupt line associated with an interrupt descriptor.

Parameters

```
intr The address of the interrupt descriptor.
```

Tags

secondary-only

Enable an interrupt line.

Enables the interrupt line associated with an interrupt descriptor.

Parameters

```
intr The address of the interrupt descriptor.
```

Tags

secondary-only

Initialize an interrupt descriptor.

When an interrupt occurs on the given *irq* line, the interrupt service routine *isr* is fired in order to deal with the hardware event. The interrupt handler may call any non-blocking service from the Cobalt core.

Upon receipt of an IRQ, the interrupt handler *isr* is immediately called on behalf of the interrupted stack context, the rescheduling procedure is locked, and the interrupt line is masked in the system interrupt controller chip. Upon return, the status of the interrupt handler is checked for the following bits:

- XN IRQ HANDLED indicates that the interrupt request was successfully handled.
- XN_IRQ_NONE indicates the opposite to XN_IRQ_HANDLED, meaning that no interrupt source could be identified for the ongoing request by the handler.

In addition, one of the following bits may be present in the status:

- XN_IRQ_DISABLE tells the Cobalt core to disable the interrupt line before returning from the interrupt context.
- XN_IRQ_PROPAGATE propagates the IRQ event down the interrupt pipeline to Linux. Using this flag is strongly discouraged, unless you fully understand the implications of such propagation.

Warning

The handler should not use these bits if it shares the interrupt line with other handlers in the real-time domain. When any of these bits is detected, the interrupt line is left masked.

A count of interrupt receipts is tracked into the interrupt descriptor, and reset to zero each time such descriptor is attached. Since this count could wrap around, it should be used as an indication of interrupt activity only.

Parameters

intr	The address of a descriptor the Cobalt core will use to store the interrupt-specific data.
name	An ASCII string standing for the symbolic name of the interrupt or NULL.
irq	The IRQ line number associated with the interrupt descriptor. This value is architecture-dependent. An interrupt descriptor must be attached to the system by a call to xnintr_attach() before <i>irq</i> events can be received.
isr	The address of an interrupt handler, which is passed the address of the interrupt descriptor receiving the IRQ.
iack	The address of an optional interrupt acknowledge routine, aimed at replacing the default one. Only very specific situations actually require to override the default setting for this parameter, like having to acknowledge non-standard PIC hardware. <i>iack</i> should return a non-zero value to indicate that the interrupt has been properly acknowledged. If <i>iack</i> is NULL, the default routine will be used instead.
flags	A set of creation flags affecting the operation. The valid flags are:

- XN IRQTYPE SHARED enables IRQ-sharing with other interrupt objects.
- XN_IRQTYPE_EDGE is an additional flag need to be set together with XN_IRQTYPE_SHARED to enable IRQ-sharing of edge-triggered interrupts.

Returns

0 is returned on success. Otherwise, -EINVAL is returned if *irq* is not a valid interrupt number.

Tags

secondary-only

Referenced by xntimer_grab_hardware().

6.22 Locking services

The Xenomai core deals with concurrent activities from two distinct kernels running side-by-side.

Collaboration diagram for Locking services:



Macros

- #define splhigh(x) ((x) = ipipe_test_and_stall_head() & 1)
 Hard disable interrupts on the local processor, saving previous state.
- #define splexit(x) ipipe_restore_head(x & 1)

Restore the saved hard interrupt state on the local processor.

- #define splmax() ipipe_stall_head()
 - Hard disable interrupts on the local processor.
- #define splnone() ipipe_unstall_head()
 - Hard enable interrupts on the local processor.
- #define spltest() ipipe_test_head()

Test hard interrupt state on the local processor.

6.22.1 Detailed Description

The Xenomai core deals with concurrent activities from two distinct kernels running side-by-side.

When interrupts are involved, the services from this section control the **hard** interrupt state exclusively, for protecting against processor-local or SMP concurrency.

Note

In a dual kernel configuration, *hard interrupts* are gated by the CPU. When enabled, hard interrupts are immediately delivered to the Xenomai core if they belong to a real-time source, or deferred until enabled by a second-stage virtual interrupt mask, if they belong to regular Linux devices/sources.

6.22.2 Macro Definition Documentation

Restore the saved hard interrupt state on the local processor.

Parameters

in	Х	The context variable previously updated by splhigh()
----	---	--

6.22.2.2 splhigh

```
#define splhigh( x ) ((x) = ipipe_test_and_stall_head() & 1)
```

Hard disable interrupts on the local processor, saving previous state.

Parameters

out	Х	An unsigned long integer context variable
-----	---	---

6.22.2.3 spltest

#define spltest() ipipe_test_head()

Test hard interrupt state on the local processor.

Returns


Zero if the local processor currently accepts interrupts, non-zero otherwise.

Referenced by rtdm_fd_select(), and rtdm_lock_get().

6.23 Lightweight key-to-object mapping service

A map is a simple indexing structure which associates unique integer keys with pointers to objects.

Collaboration diagram for Lightweight key-to-object mapping service:



Functions

- struct xnmap * xnmap_create (int nkeys, int reserve, int offset)
 Create a map.
- void xnmap_delete (struct xnmap *map)
 Delete a map.
- int xnmap_enter (struct xnmap *map, int key, void *objaddr)

 Index an object into a map.
- int xnmap_remove (struct xnmap *map, int key)

Remove an object reference from a map.

- static void * xnmap_fetch_nocheck (struct xnmap *map, int key)
 - Search an object into a map unchecked form.
- static void * xnmap_fetch (struct xnmap *map, int key)

 Search an object into a map.

6.23.1 Detailed Description

A map is a simple indexing structure which associates unique integer keys with pointers to objects.

The current implementation supports reservation, for naming/indexing objects, either on a fixed, user-provided integer (i.e. a reserved key value), or by drawing the next available key internally if the caller did not specify any fixed key. For instance, in some given map, the key space ranging from 0 to 255 could be reserved for fixed keys, whilst the range from 256 to 511 could be available for drawing free keys dynamically.

A maximum of 1024 unique keys per map is supported on 32bit machines.

(This implementation should not be confused with C++ STL maps, which are dynamically expandable and allow arbitrary key types; Xenomai maps don't).

6.23.2 Function Documentation

Create a map.

Allocates a new map with the specified addressing capabilities. The memory is obtained from the Xenomai system heap.

Parameters

nkeys	The maximum number of unique keys the map will be able to hold. This value cannot exceed the static limit represented by XNMAP_MAX_KEYS, and must be a power of two.
reserve	The number of keys which should be kept for reservation within the index space. Reserving a key means to specify a valid key to the xnmap_enter() service, which will then attempt to register this exact key, instead of drawing the next available key from the unreserved index space. When reservation is in effect, the unreserved index space will hold key values greater than <i>reserve</i> , keeping the low key values for the reserved space. For instance, passing <i>reserve</i> = 32 would cause the index range [0 31] to be kept for reserved keys. When non-zero, <i>reserve</i> is rounded to the next multiple of BITS_PER_LONG. If <i>reserve</i> is zero no reservation will be available from the map.
offset	The lowest key value xnmap_enter() will return to the caller. Key values will be in the range [0 + offset nkeys + offset - 1]. Negative offsets are valid.

Returns

the address of the new map is returned on success; otherwise, NULL is returned if *nkeys* is invalid.

Tags

task-unrestricted

Delete a map.

Deletes a map, freeing any associated memory back to the Xenomai system heap.

Parameters

тар	The address of the map to delete.

Tags

task-unrestricted

Index an object into a map.

Insert a new object into the given map.

Parameters

тар	The address of the map to insert into.
key	The key to index the object on. If this key is within the valid index range [0 - offset nkeys - offset - 1], then an attempt to reserve this exact key is made. If <i>key</i> has an out-of-range value lower or equal to 0 - offset - 1, then an attempt is made to draw a free key from the unreserved index space.
objaddr	The address of the object to index on the key. This value will be returned by a successful call to xnmap_fetch() with the same key.

Returns

a valid key is returned on success, either key if reserved, or the next free key. Otherwise:

- -EEXIST is returned upon attempt to reserve a busy key.
- -ENOSPC when no more free key is available.

Tags

unrestricted

Search an object into a map.

Retrieve an object reference from the given map by its index key.

Parameters

тар	The address of the map to retrieve from.
key	The key to be searched for in the map index.

Returns

The indexed object address is returned on success, otherwise NULL is returned when *key* is invalid or no object is currently indexed on it.

Tags

unrestricted

Search an object into a map - unchecked form.

Retrieve an object reference from the given map by its index key, but does not perform any sanity check on the provided key.

Parameters

тар	The address of the map to retrieve from.
key	The key to be searched for in the map index.

Returns

The indexed object address is returned on success, otherwise NULL is returned when no object is currently indexed on *key*.

Tags

unrestricted

Remove an object reference from a map.

Removes an object reference from the given map, releasing the associated key.

Parameters

тар	The address of the map to remove from.
key	The key the object reference to be removed is indexed on.

Returns

0 is returned on success. Otherwise:

• -ESRCH is returned if key is invalid.

Tags

unrestricted

6.24 Registry services

The registry provides a mean to index object descriptors on unique alphanumeric keys.

Collaboration diagram for Registry services:



Functions

- int xnregistry_enter (const char *key, void *objaddr, xnhandle_t *phandle, struct xnpnode *pnode)

 Register a real-time object.
- int xnregistry_bind (const char *key, xnticks_t timeout, int timeout_mode, xnhandle_t *phandle) Bind to a real-time object.
- int xnregistry_remove (xnhandle_t handle)

Forcibly unregister a real-time object.

static void * xnregistry_lookup (xnhandle_t handle, unsigned long *cstamp_r)

Find a real-time object into the registry.

• int xnregistry_unlink (const char *key)

Turn a named object into an anonymous object.

6.24.1 Detailed Description

The registry provides a mean to index object descriptors on unique alphanumeric keys.

When labeled this way, an object is globally exported; it can be searched for, and its descriptor returned to the caller for further use; the latter operation is called a "binding". When no object has been registered under the given name yet, the registry can be asked to set up a rendez-vous, blocking the caller until the object is eventually registered.

6.24.2 Function Documentation

Bind to a real-time object.

This service retrieves the registry handle of a given object identified by its key. Unless otherwise specified, this service will block the caller if the object is not registered yet, waiting for such registration to occur.

Parameters

key	A valid NULL-terminated string which identifies the object to bind to.
timeout	The timeout which may be used to limit the time the thread wait for the object to be registered. This value is a wait time given as a count of nanoseconds. It can either be relative, absolute monotonic (XN_ABSOLUTE), or absolute adjustable (XN_REALTIME) depending on timeout_mode. Passing XN_INFINITE and setting timeout_mode to XN_RELATIVE specifies an unbounded wait. Passing XN_NONBLOCK causes the service to return immediately without waiting if the object is not registered on entry. All other values are used as a wait limit.
timeout_mode	The mode of the <i>timeout</i> parameter. It can either be set to XN_RELATIVE, XN_ABSOLUTE, or XN_REALTIME (see also xntimer_start()).
phandle	A pointer to a memory location which will be written upon success with the generic handle defined by the registry for the retrieved object. Contents of this memory is undefined upon failure.

Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if key is NULL.
- -EINTR is returned if xnthread_unblock() has been called for the waiting thread before the retrieval has completed.
- -EWOULDBLOCK is returned if timeout is equal to XN_NONBLOCK and the searched object is not registered on entry. As a special exception, this error is also returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime or scheduler locked).
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.

Tags

primary-only, might-switch

Note

xnregistry_bind() only returns the index portion of a handle, which might include other fixed bits to be complete (e.g. XNSYNCH_PSHARED). The caller is responsible for completing the handle returned with those bits if applicable, depending on the context.

Register a real-time object.

This service allocates a new registry slot for an associated object, and indexes it by an alphanumeric key for later retrieval.

Parameters

key	A valid NULL-terminated string by which the object will be indexed and later retrieved in the registry. Since it is assumed that such key is stored into the registered object, it will not be copied but only kept by reference in the registry. Pass an empty or NULL string if the object shall only occupy a registry slot for handle-based lookups. The slash character is not accepted in key if pnode is non-NULL.
objaddr	An opaque pointer to the object to index by <i>key</i> .
phandle	A pointer to a generic handle defined by the registry which will uniquely identify the indexed object, until the latter is unregistered using the xnregistry_remove() service.
pnode	A pointer to an optional /proc node class descriptor. This structure provides the information needed to export all objects from the given class through the /proc filesystem, under the /proc/xenomai/registry entry. Passing NULL indicates that no /proc support is available for the newly registered object.

Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if objaddr is NULL.
- -EINVAL if *pnode* is non-NULL, and *key* points to a valid string containing a '/' character.
- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to register the object.
- -EEXIST is returned if the key is already in use.

Tags

unrestricted, might-switch, atomic-entry

Find a real-time object into the registry.

This service retrieves an object from its handle into the registry and returns the memory address of its descriptor. Optionally, it also copies back the object's creation stamp which is unique across object registration calls.

Parameters

handle	The generic handle of the object to fetch.
cstamp⇔	If not-NULL, the object's creation stamp will be copied to this memory area.
_r	

Returns

The memory address of the object's descriptor is returned on success. Otherwise, NULL is returned if *handle* does not reference a registered object.

Tags

unrestricted

Forcibly unregister a real-time object.

This service forcibly removes an object from the registry. The removal is performed regardless of the current object's locking status.

Parameters

	handle	The generic handle of the object to remove.
--	--------	---

Returns

0 is returned upon success. Otherwise:

-ESRCH is returned if handle does not reference a registered object.

Tags

unrestricted

Turn a named object into an anonymous object.


Tags

unrestricted

6.25 Driver programming interface

RTDM driver programming interface.

Collaboration diagram for Driver programming interface:

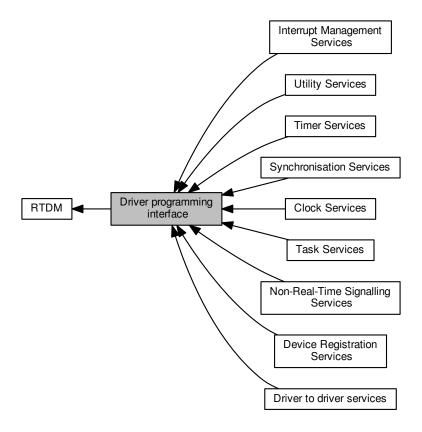

Modules

- Driver to driver services
 - Inter-driver interface.
- Device Registration Services
- Clock Services
- Task Services
- Timer Services
- Synchronisation Services
- Interrupt Management Services
- Non-Real-Time Signalling Services

These services provide a mechanism to request the execution of a specified handler in non-real-time context.

Utility Services


6.25.1 Detailed Description

RTDM driver programming interface.

6.26 Driver to driver services

Inter-driver interface.

Collaboration diagram for Driver to driver services:



Functions

• int rtdm_open (const char *path, int oflag,...)

Open a device.

• int rtdm socket (int protocol family, int socket type, int protocol)

Create a socket.

• int rtdm_close (int fd)

Close a device or socket.

int rtdm_ioctl (int fd, int request,...)

Issue an IOCTL.

ssize_t rtdm_read (int fd, void *buf, size_t nbyte)

Read from device.

• ssize_t rtdm_write (int fd, const void *buf, size_t nbyte)

Write to device.

ssize_t rtdm_recvmsg (int fd, struct user_msghdr *msg, int flags)

Receive message from socket.

ssize_t rtdm_recvfrom (int fd, void *buf, size_t len, int flags, struct sockaddr *from, socklen_
 t *fromlen)

Receive message from socket.

ssize_t rtdm_recv (int fd, void *buf, size_t len, int flags)

Receive message from socket.

• ssize_t rtdm_sendmsg (int fd, const struct user_msghdr *msg, int flags)

Transmit message to socket.

ssize_t rtdm_sendto (int fd, const void *buf, size_t len, int flags, const struct sockaddr *to, socklen
 _t tolen)

Transmit message to socket.

ssize_t rtdm_send (int fd, const void *buf, size_t len, int flags)

Transmit message to socket.

• int rtdm bind (int fd, const struct sockaddr *my addr, socklen t addrlen)

Bind to local address.

int rtdm_connect (int fd, const struct sockaddr *serv_addr, socklen_t addrlen)

Connect to remote address.

• int rtdm_listen (int fd, int backlog)

Listen to incoming connection requests.

• int rtdm_accept (int fd, struct sockaddr *addr, socklen_t *addrlen)

Accept a connection request.

• int rtdm_shutdown (int fd, int how)

Shut down parts of a connection.

- int rtdm_getsockopt (int fd, int level, int optname, void *optval, socklen_t *optlen)

 Get socket option.
- int rtdm_setsockopt (int fd, int level, int optname, const void *optval, socklen_t optlen) Set socket option.
- int rtdm_getsockname (int fd, struct sockaddr *name, socklen_t *namelen)

 Get local socket address.
- int rtdm_getpeername (int fd, struct sockaddr *name, socklen_t *namelen)

 Get socket destination address.

6.26.1 Detailed Description

Inter-driver interface.

6.26.2 Function Documentation

Accept a connection request.

Accept connection requests.

Refer to rtdm_accept() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

Parameters

in fd File descripto		File descriptor as returned by rtdm_socket()
out	addr	Buffer for remote address
in,out	addrlen	Address buffer size

Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
accept() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

Bind to local address.

Refer to rtdm_bind() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_socket()
in	my_addr	Address buffer
in	addrlen	Address buffer size

Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
bind() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

Close a device or socket.

Refer to rtdm_close() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

secondary-only, might-switch

Parameters

i	n	fd	File descriptor as returned by rtdm_open() or rtdm_socket()
---	---	----	---

Returns

0 on success, otherwise a negative error code.

Note

If the matching rtdm_open() or rtdm_socket() call took place in non-real-time context, rtdm_close() must be issued within non-real-time as well. Otherwise, the call will fail.

Action depends on driver implementation, see Device Profiles.

See also

```
close() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

secondary-only, might-switch

Connect to remote address.

Refer to rtdm_connect() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_socket()
in	serv_addr	Address buffer
in	addrlen	Address buffer size

Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
connect() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

```
6.26.2.5 rtdm_getpeername()
```

Get socket destination address.

Refer to rtdm_getpeername() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_socket()
out	name	Address buffer
in,out	namelen	Address buffer size

Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

142

See also

```
getpeername() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

task-unrestricted, might-switch

```
6.26.2.6 rtdm_getsockname()
```

Get local socket address.

Refer to rtdm_getsockname() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_socket()
out	name	Address buffer
in,out	namelen	Address buffer size

Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
getsockname() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

task-unrestricted, might-switch

Get socket option.

Refer to rtdm_getsockopt() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

socklen_t * optlen)

Parameters

in	fd File descriptor as returned by rtdm_soc	
in	level	Addressed stack level
in	optname	Option name ID
out	optval	Value buffer
in,out	optlen	Value buffer size

Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
getsockopt() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

task-unrestricted, might-switch

Issue an IOCTL.

Refer to rtdm_ioctl() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

Parameters

	in	fd	File descriptor as returned by rtdm_open() or rtdm_socket() IOCTL code	
	in	request		
Optional third argument, depending on IOCTL function (void * or unsigned)		Optional third argument, depending on IOCTL function (void * or unsigned long)		

Returns

Positiv value on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
ioctl() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

task-unrestricted, might-switch

Listen to incoming connection requests.

Listen for incomming connection requests.

Refer to rtdm_listen() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_socket()
in	backlog	Maximum queue length

Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
listen() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

task-unrestricted, might-switch

Open a device.

Refer to rtdm_open() for parameters and return values

Tags

secondary-only, might-switch

Parameters

in	path	Device name
in	oflag	Open flags
		Further parameters will be ignored.

Returns

Positive file descriptor value on success, otherwise a negative error code.

Action depends on driver implementation, see Device Profiles.

See also

```
open() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

secondary-only, might-switch

Read from device.

Refer to rtdm_read() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_open()
out	buf	Input buffer
in	nbyte	Number of bytes to read

Returns

Number of bytes read, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
read() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

Receive message from socket.

Refer to rtdm_recv() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_socket()
out	buf	Message buffer
in	len	Message buffer size
in	flags	Message flags

Returns

Number of bytes received, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
recv() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

Receive message from socket.

Refer to rtdm_recvfrom() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_socket()
out	buf	Message buffer
in	len	Message buffer size
in	flags	Message flags
out	from	Buffer for message sender address
in,out	fromlen	Address buffer size

Generated by Doxygen

Returns

Number of bytes received, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
recvfrom() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

Receive message from socket.

Refer to rtdm_recvmsg() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_socket()	
in,out	msg	Message descriptor	
in	flags	Message flags	

Returns

Number of bytes received, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
recvmsg() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

Transmit message to socket.

Refer to rtdm_send() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_socket()
in	buf	Message buffer
in	len	Message buffer size
in	flags	Message flags

Returns

Number of bytes sent, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
send() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

Transmit message to socket.

Refer to rtdm_sendmsg() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_socket()
in	msg	Message descriptor
in	flags	Message flags

Returns

Number of bytes sent, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
sendmsg() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

Transmit message to socket.

Refer to rtdm_sendto() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_socket()
in	buf	Message buffer
in	len	Message buffer size
in	flags	Message flags
in	to	Buffer for message destination address
in	tolen	Address buffer size

Returns

Number of bytes sent, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
sendto() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

Set socket option.

Refer to rtdm_setsockopt() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_socket()
in	level	Addressed stack level
in	optname	Option name ID
in	optval	Value buffer
in	optlen	Value buffer size

Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
setsockopt() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

task-unrestricted, might-switch

Shut down parts of a connection.

Refer to rtdm_shutdown() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

secondary-only, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_socket()
in	how	Specifies the part to be shut down (SHUT_xxx)

Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

```
shutdown() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

secondary-only, might-switch

Create a socket.

Refer to rtdm_socket() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

secondary-only, might-switch

Parameters

in	protocol_family	Protocol family (PF_xxx)
in	socket_type	Socket type (SOCK_xxx)
in	protocol	Protocol ID, 0 for default

Returns

Positive file descriptor value on success, otherwise a negative error code.

Action depends on driver implementation, see Device Profiles.

See also

```
socket() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

secondary-only, might-switch

Write to device.

Refer to rtdm_write() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

Parameters

in	fd	File descriptor as returned by rtdm_open()
in	buf	Output buffer
in	nbyte	Number of bytes to write

Returns

Number of bytes written, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See also

write() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags


mode-unrestricted, might-switch

6.27 Device Profiles 155

6.27 Device Profiles

Pre-defined classes of real-time devices.

Collaboration diagram for Device Profiles:

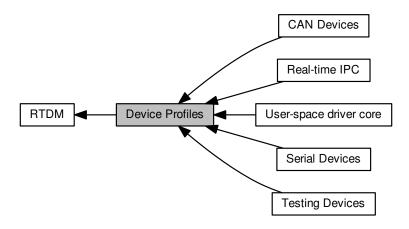

Modules

• User-space driver core

This profile includes all mini-drivers sitting on top of the User-space Device Driver framework (UDD).

CAN Devices

This is the common interface a RTDM-compliant CAN device has to provide.

Serial Devices

This is the common interface a RTDM-compliant serial device has to provide.

Testing Devices

This group of devices is intended to provide in-kernel testing results.

• Real-time IPC

Profile Revision: 1

Data Structures

struct rtdm_device_info
 Device information.

Typedefs

typedef struct rtdm_device_info rtdm_device_info_t
 Device information.

RTDM CLASS xxx

Device classes

- #define RTDM CLASS PARPORT 1
- #define RTDM CLASS SERIAL 2
- #define RTDM_CLASS_CAN 3
- #define RTDM_CLASS_NETWORK 4
- #define RTDM CLASS RTMAC 5
- #define RTDM CLASS TESTING 6
- #define RTDM_CLASS_RTIPC 7
- #define RTDM CLASS COBALT 8
- #define RTDM CLASS UDD 9
- #define RTDM_CLASS_MEMORY 10
- #define RTDM_CLASS_GPIO 11
- #define RTDM CLASS SPI 12
- #define RTDM_CLASS_MISC 223
- #define RTDM_CLASS_EXPERIMENTAL 224
- #define RTDM CLASS MAX 255

Device Naming

Maximum length of device names (excluding the final null character)

• #define RTDM_MAX_DEVNAME_LEN 31

RTDM PURGE_xxx_BUFFER

Flags selecting buffers to be purged

- #define RTDM PURGE RX BUFFER 0x0001
- #define RTDM_PURGE_TX_BUFFER 0x0002

Common IOCTLs

The following IOCTLs are common to all device rtdm_profiles.

- #define RTIOC_DEVICE_INFO _IOR(RTIOC_TYPE_COMMON, 0x00, struct rtdm_device_info)

 Retrieve information about a device or socket.
- #define RTIOC_PURGE_IOW(RTIOC_TYPE_COMMON, 0x10, int)

Purge internal device or socket buffers.

6.27 Device Profiles 157

6.27.1 Detailed Description

Pre-defined classes of real-time devices.

Device profiles define which operation handlers a driver of a certain class of devices has to implement, which name or protocol it has to register, which IOCTLs it has to provide, and further details. Sub-classes can be defined in order to extend a device profile with more hardware-specific functions.

6.27.2 Macro Definition Documentation

6.27.2.1 RTIOC_DEVICE_INFO

#define RTIOC_DEVICE_INFO _IOR(RTIOC_TYPE_COMMON, 0x00, struct rtdm_device_info)

Retrieve information about a device or socket.

Parameters

	out	arg	Pointer to information buffer (struct rtdm_device_info)
--	-----	-----	---

6.27.2.2 RTIOC PURGE

#define RTIOC_PURGE _IOW(RTIOC_TYPE_COMMON, 0x10, int)


Purge internal device or socket buffers.

Parameters

in	arg	Purge mask, see RTDM_PURGE_xxx_BUFFER	1
----	-----	---------------------------------------	---

6.28 Device Registration Services

Collaboration diagram for Device Registration Services:



Data Structures

struct rtdm_fd_ops
 RTDM file operation descriptor.

Macros

#define RTDM_MAX_MINOR 1024
 Maximum number of named devices per driver.

Functions

- int rtdm_open_handler (struct rtdm_fd *fd, int oflags)
 - Open handler for named devices.
- int rtdm_socket_handler (struct rtdm_fd *fd, int protocol)
 - Socket creation handler for protocol devices.
- void rtdm_close_handler (struct rtdm_fd *fd)
 - Close handler.
- int rtdm_ioctl_handler (struct rtdm_fd *fd, unsigned int request, void __user *arg) IOCTL handler.
- ssize_t rtdm_read_handler (struct rtdm_fd *fd, void __user *buf, size_t size)
- ssize_t rtdm_write_handler (struct rtdm_fd *fd, const void __user *buf, size_t size)
 Write handler.
- ssize_t rtdm_recvmsg_handler (struct rtdm_fd *fd, struct user_msghdr *msg, int flags)

 **Receive message handler.*
- ssize_t rtdm_sendmsg_handler (struct rtdm_fd *fd, const struct user_msghdr *msg, int flags)

 **Transmit message handler.*
- int rtdm_select_handler (struct rtdm_fd *fd, struct xnselector *selector, unsigned int type, unsigned int index)

Select handler.

int rtdm_mmap_handler (struct rtdm_fd *fd, struct vm_area_struct *vma)
 Memory mapping handler.

unsigned long rtdm_get_unmapped_area_handler (struct rtdm_fd *fd, unsigned long len, unsigned long pgoff, unsigned long flags)

Allocate mapping region in address space.

int rtdm_dev_register (struct rtdm_device *dev)

Register a RTDM device.

void rtdm_dev_unregister (struct rtdm_device *dev)

Unregister a RTDM device.

• int rtdm_drv_set_sysclass (struct rtdm_driver *drv, struct class *cls)

Set the kernel device class of a RTDM driver.

Device Flags

Static flags describing a RTDM device

#define RTDM EXCLUSIVE 0x0001

If set, only a single instance of the device can be requested by an application.

#define RTDM FIXED MINOR 0x0002

Use fixed minor provided in the rtdm device description for registering.

#define RTDM_NAMED_DEVICE 0x0010

If set, the device is addressed via a clear-text name.

• #define RTDM_PROTOCOL_DEVICE 0x0020

If set, the device is addressed via a combination of protocol ID and socket type.

#define RTDM_DEVICE_TYPE_MASK 0x00F0

Mask selecting the device type.

• #define RTDM SECURE DEVICE 0x80000000

Flag indicating a secure variant of RTDM (not supported here)

- 6.28.1 Detailed Description
- 6.28.2 Macro Definition Documentation

```
6.28.2.1 RTDM DEVICE TYPE MASK
```

#define RTDM_DEVICE_TYPE_MASK 0x00F0

Mask selecting the device type.

6.28.2.2 RTDM_EXCLUSIVE

#define RTDM_EXCLUSIVE 0x0001

If set, only a single instance of the device can be requested by an application.

```
6.28.2.3 RTDM_FIXED_MINOR
```

```
#define RTDM_FIXED_MINOR 0x0002
```

Use fixed minor provided in the rtdm_device description for registering.

If this flag is absent, the RTDM core assigns minor numbers to devices managed by a driver in order of registration.

```
6.28.2.4 RTDM_MAX_MINOR
```

```
#define RTDM_MAX_MINOR 1024
```

Maximum number of named devices per driver.

```
6.28.2.5 RTDM_NAMED_DEVICE
```

```
#define RTDM_NAMED_DEVICE 0x0010
```

If set, the device is addressed via a clear-text name.

```
6.28.2.6 RTDM_PROTOCOL_DEVICE
```

```
#define RTDM_PROTOCOL_DEVICE 0x0020
```

If set, the device is addressed via a combination of protocol ID and socket type.

Referenced by udd_register_device().

6.28.3 Function Documentation

```
6.28.3.1 rtdm close handler()
```

Close handler.

Parameters

in	fd	File descriptor associated with opened device instance.
----	----	---

See also

```
close() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Register a RTDM device.

Registers a device in the RTDM namespace.

Parameters

in	dev	Device descriptor.
----	-----	--------------------

Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if the descriptor contains invalid entries. RTDM_PROFILE_INFO() must appear in the list of initializers for the driver properties.
- -EEXIST is returned if the specified device name of protocol ID is already in use.
- -ENOMEM is returned if a memory allocation failed in the process of registering the device.
- -EAGAIN is returned if no registry slot is available (check/raise CONFIG_XENO_OPT_REGIST
 — RY_NRSLOTS).

Tags

secondary-only

Unregister a RTDM device.

Removes the device from the RTDM namespace. This routine waits until all connections to *device* have been closed prior to unregistering.

Parameters

162

in	dev	Device descriptor.
----	-----	--------------------

Tags

secondary-only

References rtdm_device::driver.

Set the kernel device class of a RTDM driver.

Set the kernel device class assigned to the RTDM driver. By default, RTDM drivers belong to Linux's "rtdm" device class, creating a device node hierarchy rooted at /dev/rtdm, and sysfs nodes under /sys/class/rtdm.

This call assigns a user-defined kernel device class to the RTDM driver, so that its devices are created into a different system hierarchy.

rtdm_drv_set_sysclass() is meaningful only before the first device which is attached to *drv* is registered by a call to rtdm_dev_register().

Parameters

in	drv	Address of the RTDM driver descriptor.
in	cls	Pointer to the kernel device class. NULL is allowed to clear a previous setting, switching back to the default "rtdm" device class.

Returns

0 on success, otherwise:

• -EBUSY is returned if the kernel device class has already been set for *drv*, or some device(s) attached to *drv* are currently registered.

Tags

task-unrestricted

Attention

The kernel device class set by this call is not related to the RTDM class identification as defined by the RTDM profiles in any way. This is strictly related to the Linux kernel device hierarchy.

References rtdm_driver::profile_info.

```
6.28.3.5 rtdm_get_unmapped_area_handler()
```

Allocate mapping region in address space.

When present, this optional handler should return the start address of a free region in the process's address space, large enough to cover the ongoing mmap() operation. If unspecified, the default architecture-defined handler is invoked.

Most drivers can omit this handler, except on MMU-less platforms (see second note).

Parameters

in	fd	File descriptor
in	len	Length of the requested region
in	pgoff	Page frame number to map to (see second note).
in	flags	Requested mapping flags

Returns

The start address of the mapping region on success. On failure, a negative error code should be returned, with -ENOSYS meaning that the driver does not want to provide such information, in which case the ongoing mmap() operation will fail.

Note

The address hint passed to the mmap() request is deliberately ignored by RTDM, and therefore not passed to this handler.

On MMU-less platforms, this handler is required because RTDM issues mapping requests over a shareable character device internally. In such context, the RTDM core may pass a null *pgoff* argument to the handler, for probing for the logical start address of the memory region to map to. Otherwise, when *pgoff* is non-zero, pgoff << PAGE_SHIFT is usually returned.

IOCTL handler.

Parameters

in	fd	File descriptor
in	request	Request number as passed by the user
in,out	arg	Request argument as passed by the user

Returns

A positive value or 0 on success. On failure return either -ENOSYS, to request that the function be called again from the opposite realtime/non-realtime context, or another negative error code.

See also

```
ioctl() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Memory mapping handler.

Parameters

in	fd	File descriptor
in	vma	Virtual memory area descriptor

Returns

0 on success. On failure, a negative error code is returned.

See also

```
mmap() in POSIX.1-2001, http://pubs.opengroup.org/onlinepubs/7908799/xsh/mmap.html
```

Note

The address hint passed to the mmap() request is deliberately ignored by RTDM.

Open handler for named devices.

Parameters

in	fd	File descriptor associated with opened device instance
in	oflags	Open flags as passed by the user

The file descriptor carries a device minor information which can be retrieved by a call to rtdm_fd_← minor(fd). The minor number can be used for distinguishing devices managed by a driver.

Returns

0 on success. On failure, a negative error code is returned.

See also

```
open() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Read handler.

Parameters

in	fd	File descriptor
out	buf	Input buffer as passed by the user
in	size	Number of bytes the user requests to read

Returns

On success, the number of bytes read. On failure return either -ENOSYS, to request that this handler be called again from the opposite realtime/non-realtime context, or another negative error code.

See also

```
read() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Receive message handler.

Parameters

in	fd	File descriptor
in,out	msg	Message descriptor as passed by the user, automatically mirrored to safe kernel memory in case of user mode call
in	flags	Message flags as passed by the user

Returns

On success, the number of bytes received. On failure return either -ENOSYS, to request that this handler be called again from the opposite realtime/non-realtime context, or another negative error code.

See also

```
recvmsg() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Select handler.

Parameters

in	fd	File descriptor
	selector	Pointer to the selector structure
	type	Type of events (XNSELECT_READ, XNSELECT_WRITE, or XNSELECT_EXCEPT)
	index	Index of the file descriptor

Returns

0 on success. On failure, a negative error code is returned.

See also

select() in POSIX.1-2001, http://pubs.opengroup.org/onlinepubs/007908799/xsh/select. ← html

Transmit message handler.

Parameters

in	fd	File descriptor
in	msg	Message descriptor as passed by the user, automatically mirrored to safe kernel memory in case of user mode call
in	flags	Message flags as passed by the user

Returns

On success, the number of bytes transmitted. On failure return either -ENOSYS, to request that this handler be called again from the opposite realtime/non-realtime context, or another negative error code.

See also

```
sendmsg() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Socket creation handler for protocol devices.

Parameters

in	fd	File descriptor associated with opened device instance
in	protocol	Protocol number as passed by the user

Returns

0 on success. On failure, a negative error code is returned.

See also

```
socket() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Write handler.

Parameters

in	fd	File descriptor
in	buf	Output buffer as passed by the user
in	size	Number of bytes the user requests to write

Returns

On success, the number of bytes written. On failure return either -ENOSYS, to request that this handler be called again from the opposite realtime/non-realtime context, or another negative error code.


See also

```
write() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

6.29 Clock Services 169

6.29 Clock Services

Collaboration diagram for Clock Services:



Functions

- nanosecs_abs_t rtdm_clock_read (void)
 Get system time.
- nanosecs_abs_t rtdm_clock_read_monotonic (void)
 Get monotonic time.

6.29.1 Detailed Description

6.29.2 Function Documentation

Get system time.

Returns

The system time in nanoseconds is returned

Note

The resolution of this service depends on the system timer. In particular, if the system timer is running in periodic mode, the return value will be limited to multiples of the timer tick period. The system timer may have to be started to obtain valid results. Whether this happens automatically (as on Xenomai) or is controlled by the application depends on the RTDM host environment.

Tags

unrestricted

Referenced by a4l_get_time(), and rtdm_ratelimit().

```
6.29.2.2 rtdm_clock_read_monotonic()
```

Get monotonic time.

Returns

The monotonic time in nanoseconds is returned

Note

The resolution of this service depends on the system timer. In particular, if the system timer is running in periodic mode, the return value will be limited to multiples of the timer tick period. The system timer may have to be started to obtain valid results. Whether this happens automatically (as on Xenomai) or is controlled by the application depends on the RTDM host environment.


Tags

unrestricted

6.30 Task Services

6.30 Task Services

Collaboration diagram for Task Services:



Typedefs

typedef void(* rtdm_task_proc_t) (void *arg)
 Real-time task procedure.

Functions

int rtdm_task_init (rtdm_task_t *task, const char *name, rtdm_task_proc_t task_proc, void *arg, int priority, nanosecs_rel_t period)

Initialise and start a real-time task.

void rtdm_task_destroy (rtdm_task_t *task)

Destroy a real-time task.

int rtdm_task_should_stop (void)

Check for pending termination request.

void rtdm_task_set_priority (rtdm_task_t *task, int priority)

Adjust real-time task priority.

- int rtdm_task_set_period (rtdm_task_t *task, nanosecs_abs_t start_date, nanosecs_rel_t period)
 Adjust real-time task period.
- int rtdm task wait period (unsigned long *overruns r)

Wait on next real-time task period.

int rtdm_task_unblock (rtdm_task_t *task)

Activate a blocked real-time task.

rtdm_task_t * rtdm_task_current (void)

Get current real-time task.

• int rtdm_task_sleep (nanosecs_rel_t delay)

Sleep a specified amount of time.

• int rtdm_task_sleep_until (nanosecs_abs_t wakeup_time)

Sleep until a specified absolute time.

- int rtdm_task_sleep_abs (nanosecs_abs_t wakeup_time, enum rtdm_timer_mode mode)
 Sleep until a specified absolute time.
- int rtdm_task_busy_wait (bool condition, nanosecs_rel_t spin_ns, nanosecs_rel_t sleep_ns)
 Safe busy waiting.
- void rtdm wait prepare (struct rtdm wait context *wc)

Register wait context.

void rtdm_wait_complete (struct rtdm_wait_context *wc)

Mark completion for a wait context.

• int rtdm_wait_is_completed (struct rtdm_wait_context *wc)

Test completion of a wait context.

• void rtdm_task_join (rtdm_task_t *task)

Wait on a real-time task to terminate.

void rtdm_task_busy_sleep (nanosecs_rel_t delay)

Busy-wait a specified amount of time.

Task Priority Range

Maximum and minimum task priorities

- #define RTDM_TASK_LOWEST_PRIORITY 0
- #define RTDM TASK HIGHEST PRIORITY 99

Task Priority Modification

Raise or lower task priorities by one level

- #define RTDM_TASK_RAISE_PRIORITY (+1)
- #define RTDM_TASK_LOWER_PRIORITY (-1)
- 6.30.1 Detailed Description
- 6.30.2 Typedef Documentation

```
6.30.2.1 rtdm_task_proc_t
```

typedef void(* rtdm_task_proc_t) (void *arg)

Real-time task procedure.

Parameters

in, out | arg | argument as passed to rtdm_task_init()

6.30.3 Function Documentation

6.30 Task Services

Busy-wait a specified amount of time.

This service does not schedule out the caller, but rather spins in a tight loop, burning CPU cycles until the timeout elapses.

Parameters

in	delay	Delay in nanoseconds. Note that a zero delay does not have the meaning of
		RTDM_TIMEOUT_INFINITE here.

Note

The caller must not be migratable to different CPUs while executing this service. Otherwise, the actual delay will be undefined.

Tags

unrestricted

Safe busy waiting.

This service alternates active spinning and sleeping within a wait loop, until a condition is satisfied. While sleeping, a task is scheduled out and does not consume any CPU time.

rtdm_task_busy_wait() is particularly useful for waiting for a state change reading an I/O register, which usually happens shortly after the wait starts, without incurring the adverse effects of long busy waiting if it doesn't.

ſ	in	condition	The C expression to be tested for detecting completion.
	in	spin_ns	The time to spin on <i>condition</i> before sleeping, expressed as a count of nanoseconds.
ſ	in	sleep_ns	The time to sleep for before spinning again, expressed as a count of nanoseconds.

Returns

0 on success if *condition* is satisfied, otherwise:

- -EINTR is returned if the calling task has been unblocked by a Linux signal or explicitly via rtdm

 _task_unblock().
- -EPERM may be returned if an illegal invocation environment is detected.

Tags

primary-only, might-switch

Get current real-time task.

Returns

Pointer to task handle

Tags

mode-unrestricted

Destroy a real-time task.

This call sends a termination request to *task*, then waits for it to exit. All RTDM task should check for pending termination requests by calling rtdm task should stop() from their work loop.

If task is current, rtdm_task_destroy() terminates the current context, and does not return to the caller.

in,out	task	Task handle as returned by rtdm_task_init()	
--------	------	---	--

6.30 Task Services 175

Note

Passing the same task handle to RTDM services after the completion of this function is not allowed.

Tags

secondary-only, might-switch

Initialise and start a real-time task.

After initialising a task, the task handle remains valid and can be passed to RTDM services until either rtdm_task_destroy() or rtdm_task_join() was invoked.

Parameters

in,out	task	Task handle
in	name	Optional task name
in	task_proc	Procedure to be executed by the task
in	arg	Custom argument passed to task_proc() on entry
in	priority	Priority of the task, see also Task Priority Range
in	period	Period in nanoseconds of a cyclic task, 0 for non-cyclic mode. Waiting for the first and subsequent periodic events is done using rtdm_task_wait_period() .

Returns

0 on success, otherwise negative error code

Tags

secondary-only, might-switch

Wait on a real-time task to terminate.

Parameters

Note

Passing the same task handle to RTDM services after the completion of this function is not allowed. This service does not trigger the termination of the targeted task. The user has to take of this, otherwise rtdm_task_join() will never return.

Tags

mode-unrestricted

References xnthread_join().

Adjust real-time task period.

Parameters

in,out	task	Task handle as returned by rtdm_task_init(), or NULL for referring to the current RTDM task or Cobalt thread.
in	start_date	The initial (absolute) date of the first release point, expressed in nanoseconds. <i>task</i> will be delayed by the first call to rtdm_task_wait_period() until this point is reached. If <i>start_date</i> is zero, the first release point is set to <i>period</i> nanoseconds after the current date.
in	period	New period in nanoseconds of a cyclic task, zero to disable cyclic mode for task.

Tags

task-unrestricted

Adjust real-time task priority.

6.30 Task Services 177

Parameters

in,out	task	Task handle as returned by rtdm_task_init()
in	priority	New priority of the task, see also Task Priority Range

Tags

task-unrestricted, might-switch

Check for pending termination request.

Check whether a termination request was received by the current RTDM task. Termination requests are sent by calling rtdm_task_destroy().

Returns

Non-zero indicates that a termination request is pending, in which case the caller should wrap up and exit.

Tags

rtdm-task, might-switch

Sleep a specified amount of time.

Parameters

in	delay	Delay in nanoseconds, see RTDM_TIMEOUT_xxx for special values.
----	-------	--

Returns

0 on success, otherwise:

• -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm_task_unblock().

• -EPERM may be returned if an illegal invocation environment is detected.

Tags

primary-only, might-switch

Sleep until a specified absolute time.

Parameters

in	wakeup_time	Absolute timeout in nanoseconds
in	mode	Selects the timer mode, see RTDM_TIMERMODE_xxx for details

Returns

0 on success, otherwise:

- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm_task_unblock().
- -EPERM may be returned if an illegal invocation environment is detected.
- -EINVAL is returned if an invalid parameter was passed.

Tags

primary-only, might-switch

Sleep until a specified absolute time.

Deprecated Use rtdm_task_sleep_abs instead!

6.30 Task Services 179

Parameters

in wakeup_tin

Returns

0 on success, otherwise:

- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm_task_unblock().
- -EPERM may be returned if an illegal invocation environment is detected.

Tags

primary-only, might-switch

Activate a blocked real-time task.

Returns

Non-zero is returned if the task was actually unblocked from a pending wait state, 0 otherwise.

Tags

unrestricted, might-switch

Wait on next real-time task period.

in	overruns⊷	Address of a long word receiving the count of overruns if -ETIMEDOUT is
	_r	returned, or NULL if the caller don't need that information.

Returns

0 on success, otherwise:

- -EINVAL is returned if calling task is not in periodic mode.
- -ETIMEDOUT is returned if a timer overrun occurred, which indicates that a previous release point has been missed by the calling task.

Tags

primary-only, might-switch

Mark completion for a wait context.

rtdm_complete_wait() marks a wait context as completed, so that rtdm_wait_is_completed() returns true for such context.

Parameters

wc Wait context to complete.

Test completion of a wait context.

rtdm_wait_is_completed() returns true if rtdm_complete_wait() was called for wc. The completion mark
is reset each time rtdm_wait_prepare() is called for a wait context.

Parameters

wc Wait context to check for completion.

Returns

non-zero/true if rtdm_wait_complete() was called for wc, zero otherwise.

6.30 Task Services

Register wait context.

rtdm_wait_prepare() registers a wait context structure for the caller, which can be later retrieved by a call to rtdm_wait_get_context(). This call is normally issued before the current task blocks on a wait object, waiting for some (producer) code to wake it up. Arbitrary data can be exchanged between both sites via the wait context structure, which is allocated by the waiter (consumer) side.

wc is the address of an anchor object which is commonly embedded into a larger structure with arbitrary contents, which needs to be shared between the consumer (waiter) and the producer for implementing the wait code.

A typical implementation pattern for the wait side is:

```
struct rtdm_waitqueue wq;
struct some_wait_context {
   int input_value;
   int output_value;
   struct rtdm_wait_context wc;
} wait_context;

wait_context.input_value = 42;
rtdm_wait_prepare(&wait_context);
ret = rtdm_wait_condition(&wq, rtdm_wait_is_completed(& wait_context));
if (ret)
   gotto wait_failed;
handle_event(wait_context.output_value);
```

On the producer side, the implementation would look like:

```
struct rtdm_waitqueue wq;
struct some_wait_context {
   int input_value;
   int output_value;
   int output_value;
   struct rtdm_wait_context wc;
} *wait_context_ptr;
struct rtdm_wait_context *wc;
rtdm_task_t *task;


rtdm_for_each_waiter(task, &wq) {
   wc = rtdm_wait_get_context(task);
   wait_context_ptr = container_of(wc, struct some_wait_context, wc);
   wait_context_ptr->output_value = 12;
}
rtdm_waitqueue_broadcast(&wq);
```

Parameters

wc Wait context to register.

6.31 Timer Services

Collaboration diagram for Timer Services:



Typedefs

182

typedef void(* rtdm_timer_handler_t) (rtdm_timer_t *timer)
 Timer handler.

Functions

- int rtdm_timer_init (rtdm_timer_t *timer, rtdm_timer_handler_t handler, const char *name)
 Initialise a timer.
- void rtdm_timer_destroy (rtdm_timer_t *timer)

Destroy a timer.

• int rtdm_timer_start (rtdm_timer_t *timer, nanosecs_abs_t expiry, nanosecs_rel_t interval, enum rtdm_timer_mode mode)

Start a timer.

- void rtdm_timer_stop (rtdm_timer_t *timer)
 - Stop a timer.
- int rtdm_timer_start_in_handler (rtdm_timer_t *timer, nanosecs_abs_t expiry, nanosecs_rel_t interval, enum rtdm_timer_mode mode)

Start a timer from inside a timer handler.

void rtdm_timer_stop_in_handler (rtdm_timer_t *timer)

Stop a timer from inside a timer handler.

RTDM TIMERMODE xxx

Timer operation modes

- enum rtdm_timer_mode { RTDM_TIMERMODE_RELATIVE = XN_RELATIVE, RTDM_TIMERM
 ODE_ABSOLUTE = XN_ABSOLUTE, RTDM_TIMERMODE_REALTIME = XN_REALTIME }
- 6.31.1 Detailed Description
- 6.31.2 Typedef Documentation

6.31 Timer Services 183

```
6.31.2.1 rtdm_timer_handler_t
```

typedef void(* rtdm_timer_handler_t) (rtdm_timer_t *timer)

Timer handler.

Parameters

in	timer	Timer handle as returned by rtdm_timer_init()
----	-------	---

6.31.3 Enumeration Type Documentation

```
6.31.3.1 rtdm_timer_mode
```

enum rtdm_timer_mode

Enumerator

RTDM_TIMERMODE_RELATIVE	Monotonic timer with relative timeout.
RTDM_TIMERMODE_ABSOLUTE	Monotonic timer with absolute timeout.
RTDM_TIMERMODE_REALTIME	Adjustable timer with absolute timeout.

6.31.4 Function Documentation

```
6.31.4.1 rtdm_timer_destroy()
```

```
void rtdm_timer_destroy (
          rtdm_timer_t * timer )
```

Destroy a timer.

Parameters

in, out timer Timer	handle as returned by rtdm	_timer_init()
---------------------	----------------------------	---------------

Tags

task-unrestricted

Initialise a timer.

Parameters

in,out	timer	Timer handle
in	handler	Handler to be called on timer expiry
in	name	Optional timer name

Returns

0 on success, otherwise negative error code

Tags

task-unrestricted

Start a timer.

Parameters

in,out	timer	Timer handle as returned by rtdm_timer_init()
in	expiry	Firing time of the timer, mode defines if relative or absolute
in	interval	Relative reload value, > 0 if the timer shall work in periodic mode with the specific interval, 0 for one-shot timers
in	mode	Defines the operation mode, see RTDM_TIMERMODE_xxx for possible values

Returns

0 on success, otherwise:

• -ETIMEDOUT is returned if expiry describes an absolute date in the past. In such an event, the timer is nevertheless armed for the next shot in the timeline if *interval* is non-zero.

6.31 Timer Services 185

Tags

unrestricted

Start a timer from inside a timer handler.

Parameters

in,out	timer	Timer handle as returned by rtdm_timer_init()
in	expiry	Firing time of the timer, mode defines if relative or absolute
in	interval	Relative reload value, > 0 if the timer shall work in periodic mode with the specific interval, 0 for one-shot timers
in	mode	Defines the operation mode, see RTDM_TIMERMODE_xxx for possible values

Returns

0 on success, otherwise:

• -ETIMEDOUT is returned if expiry describes an absolute date in the past.

Tags

coreirq-only

Stop a timer.

in,out	timer	Timer handle as returned by rtdm_timer_init()
--------	-------	---

Tags

unrestricted

```
6.31.4.6 rtdm_timer_stop_in_handler()
```

```
void rtdm_timer_stop_in_handler (
          rtdm_timer_t * timer )
```

Stop a timer from inside a timer handler.

Parameters


	in,out	timer	Timer handle as returned by rtdm_timer_init()	
--	--------	-------	---	--

Tags

coreirq-only

6.32 Synchronisation Services

Collaboration diagram for Synchronisation Services:

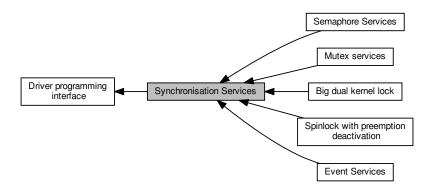

Modules

- Big dual kernel lock
- · Spinlock with preemption deactivation
- Event Services
- Semaphore Services
- Mutex services

Functions

- void rtdm_waitqueue_init (struct rtdm_waitqueue *wq)
 Initialize a RTDM wait queue.
- void rtdm_waitqueue_destroy (struct rtdm_waitqueue *wq)

Deletes a RTDM wait queue.

rtdm_timedwait_condition_locked (struct rtdm_wait_queue *wq, C_expr condition, nanosecs_rel
t timeout, rtdm_toseq_t *toseq)

Timed sleep on a locked waitqueue until a condition gets true.

rtdm_wait_condition_locked (struct rtdm_wait_queue *wq, C_expr condition)

Sleep on a locked waitqueue until a condition gets true.

 rtdm_timedwait_condition (struct rtdm_wait_queue *wq, C_expr condition, nanosecs_rel_t timeout, rtdm_toseq_t *toseq)

Timed sleep on a waitqueue until a condition gets true.

- void rtdm_timedwait (struct rtdm_wait_queue *wq, nanosecs_rel_t timeout, rtdm_toseq_t *toseq)

 Timed sleep on a waitqueue unconditionally.
- void rtdm_timedwait_locked (struct rtdm_wait_queue *wq, nanosecs_rel_t timeout, rtdm_toseq_t *toseq)

Timed sleep on a locked waitqueue unconditionally.

rtdm wait condition (struct rtdm wait queue *wq, C expr condition)

Sleep on a waitqueue until a condition gets true.

• void rtdm_wait (struct rtdm_wait_queue *wq)

Sleep on a waitqueue unconditionally.

void rtdm_wait_locked (struct rtdm_wait_queue *wq)

Sleep on a locked waitqueue unconditionally.

- void rtdm_waitqueue_lock (struct rtdm_wait_queue *wq, rtdm_lockctx_t context)

 Lock a waitqueue.
- void rtdm_waitqueue_unlock (struct rtdm_wait_queue *wq, rtdm_lockctx_t context)

 Unlock a waitqueue.
- void rtdm_waitqueue_signal (struct rtdm_wait_queue *wq)

Signal a waitqueue.

void rtdm_waitqueue_broadcast (struct rtdm_wait_queue *wq)

Broadcast a waitqueue.

• void rtdm_waitqueue_flush (struct rtdm_wait_queue *wq)

Flush a waitqueue.

void rtdm_waitqueue_wakeup (struct rtdm_wait_queue *wq, rtdm_task_t waiter)

Signal a particular waiter on a waitqueue.

rtdm_for_each_waiter (rtdm_task_t pos, struct rtdm_wait_queue *wq)

Simple iterator for waitqueues.

• rtdm_for_each_waiter_safe (rtdm_task_t pos, rtdm_task_t tmp, struct rtdm_wait_queue *wq) Safe iterator for waitqueues.

RTDM SELECTTYPE xxx

Event types select can bind to

enum rtdm_selecttype { RTDM_SELECTTYPE_READ = XNSELECT_READ, RTDM_SELECT
 TYPE_WRITE = XNSELECT_WRITE, RTDM_SELECTTYPE_EXCEPT = XNSELECT_EXCEPT
 }

Timeout Sequence Management

- void rtdm_toseq_init (rtdm_toseq_t *timeout_seq, nanosecs_rel_t timeout)
 Initialise a timeout sequence.
- 6.32.1 Detailed Description
- 6.32.2 Enumeration Type Documentation
- 6.32.2.1 rtdm selecttype

enum rtdm_selecttype

Enumerator

RTDM_SELECTTYPE_READ	Select input data availability events.
RTDM_SELECTTYPE_WRITE	Select ouput buffer availability events.
RTDM_SELECTTYPE_EXCEPT	Select exceptional events.

6.32.3 Function Documentation

Simple iterator for waitqueues.

This construct traverses the wait list of a given waitqueue *wq*, assigning each RTDM task pointer to the cursor variable *pos*, which must be of type rtdm_task_t.

wq must have been locked by a call to rtdm_waitqueue_lock() prior to traversing its wait list.

Parameters

pos	cursor variable holding a pointer to the RTDM task being fetched.	
wq	waitqueue to scan.	

Note

The waitqueue should not be signaled, broadcast or flushed during the traversal, unless the loop is aborted immediately after. Should multiple waiters be readied while iterating, the safe form rtdm_for_each_waiter_safe() must be used for traversal instead.

Tags

unrestricted

Safe iterator for waitqueues.

This construct traverses the wait list of a given waitqueue *wq*, assigning each RTDM task pointer to the cursor variable *pos*, which must be of type rtdm_task_t.

Unlike with rtdm_for_each_waiter(), the waitqueue may be signaled, broadcast or flushed during the traversal.

wq must have been locked by a call to rtdm_waitqueue_lock() prior to traversing its wait list.

Parameters

pos	cursor variable holding a pointer to the RTDM task being fetched.	
tmp	temporary cursor variable.	
wq	waitqueue to scan.	

Tags

unrestricted

Timed sleep on a waitqueue unconditionally.

The calling task is put to sleep until the waitqueue is signaled by either rtdm_waitqueue_signal() or rtdm_waitqueue_broadcast(), or flushed by a call to rtdm_waitqueue_flush(), or a timeout occurs.

Parameters

	wq	waitqueue to wait on.
	timeout	relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special values.
in,out	toseq	handle of a timeout sequence as returned by rtdm_toseq_init() or NULL.

Returns

0 on success, otherwise:

- -EINTR is returned if the waitqueue has been flushed, or the calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm_task_unblock().
- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.

Note

Passing RTDM_TIMEOUT_NONE to *timeout* makes no sense for such service, and might cause unexpected behavior.

Tags

primary-only, might-switch

Timed sleep on a waitqueue until a condition gets true.

The calling task is put to sleep until *condition* evaluates to true or a timeout occurs. The condition is checked each time the waitqueue *wq* is signaled.

Parameters

	wq	waitqueue to wait on.
	condition	C expression for the event to wait for.
	timeout	relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special values.
in,out	toseq	handle of a timeout sequence as returned by rtdm_toseq_init() or NULL.

Returns

0 on success, otherwise:

- -EINTR is returned if calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm_task_unblock().
- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.

Note

rtdm_waitqueue_signal() has to be called after changing any variable that could change the result of the wait condition.

Passing RTDM_TIMEOUT_NONE to *timeout* makes no sense for such service, and might cause unexpected behavior.

Tags

primary-only, might-switch

```
6.32.3.5 rtdm_timedwait_condition_locked()
```

Timed sleep on a locked waitqueue until a condition gets true.

The calling task is put to sleep until *condition* evaluates to true or a timeout occurs. The condition is checked each time the waitqueue *wq* is signaled.

The waitqueue must have been locked by a call to rtdm_waitqueue_lock() prior to calling this service.

Parameters

V	wq	locked waitqueue to wait on. The waitqueue lock is dropped when sleeping, then reacquired before this service returns to the caller.		
	condition	C expression for the event to wait for.		
	timeout	relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special values.		
in,out	toseq	handle of a timeout sequence as returned by rtdm_toseq_init() or NULL.		

Returns

0 on success, otherwise:

- -EINTR is returned if calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm task unblock().
- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.

Note

rtdm_waitqueue_signal() has to be called after changing any variable that could change the result of the wait condition.

Passing RTDM_TIMEOUT_NONE to *timeout* makes no sense for such service, and might cause unexpected behavior.

Tags

primary-only, might-switch

Timed sleep on a locked waitqueue unconditionally.

The calling task is put to sleep until the waitqueue is signaled by either rtdm_waitqueue_signal() or rtdm_waitqueue_broadcast(), or flushed by a call to rtdm_waitqueue_flush(), or a timeout occurs.

The waitqueue must have been locked by a call to rtdm waitqueue lock() prior to calling this service.

Parameters

	wq locked waitqueue to wait on. The waitqueue lock is dropped when slee then reacquired before this service returns to the caller.	
timeo	timeout	relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special values.
in,out	toseq	handle of a timeout sequence as returned by rtdm_toseq_init() or NULL.

Returns

0 on success, otherwise:

- -EINTR is returned if the waitqueue has been flushed, or the calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm_task_unblock().
- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.

Note

Passing RTDM_TIMEOUT_NONE to *timeout* makes no sense for such service, and might cause unexpected behavior.

Tags

primary-only, might-switch

Initialise a timeout sequence.

This service initialises a timeout sequence handle according to the given timeout value. Timeout sequences allow to maintain a continuous *timeout* across multiple calls of blocking synchronisation services. A typical application scenario is given below.

Parameters

in,out	timeout_seq	Timeout sequence handle
in	timeout	Relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special values

Application Scenario:

```
int device_service_routine(...)
```

```
{
    rtdm_toseq_t timeout_seq;
    ...

rtdm_toseq_init(&timeout_seq, timeout);
    ...
while (received < requested) {
    ret = rtdm_event_timedwait(&data_available, timeout, &timeout_seq);
    if (ret < 0) // including -ETIMEDOUT
        break;

    // receive some data
    ...
}
...
}</pre>
```

Using a timeout sequence in such a scenario avoids that the user-provided relative timeout is restarted on every call to rtdm_event_timedwait(), potentially causing an overall delay that is larger than specified by timeout. Moreover, all functions supporting timeout sequences also interpret special timeout values (infinite and non-blocking), disburdening the driver developer from handling them separately.

Tags

task-unrestricted

Sleep on a waitqueue unconditionally.

The calling task is put to sleep until the waitqueue is signaled by either rtdm_waitqueue_signal() or rtdm_waitqueue_broadcast(), or flushed by a call to rtdm_waitqueue_flush().

Parameters

```
wq waitqueue to wait on.
```

Returns

0 on success, otherwise:

• -EINTR is returned if the waitqueue has been flushed, or the calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm_task_unblock().

Tags

primary-only, might-switch

Sleep on a waitqueue until a condition gets true.

The calling task is put to sleep until *condition* evaluates to true. The condition is checked each time the waitqueue *wq* is signaled.

Parameters

wq	waitqueue to wait on
condition	C expression for the event to wait for.

Returns

0 on success, otherwise:

• -EINTR is returned if calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm_task_unblock().

Note

rtdm_waitqueue_signal() has to be called after changing any variable that could change the result of the wait condition.

Tags

primary-only, might-switch

Sleep on a locked waitqueue until a condition gets true.

The calling task is put to sleep until *condition* evaluates to true. The condition is checked each time the waitqueue wq is signaled.

The waitqueue must have been locked by a call to rtdm_waitqueue_lock() prior to calling this service.

wq	locked waitqueue to wait on. The waitqueue lock is dropped when sleeping, then reacquired before this service returns to the caller.	
condition Generated by D	ondition C expression for the event to wait for.	

Returns

0 on success, otherwise:

• -EINTR is returned if calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm task unblock().

Note

rtdm_waitqueue_signal() has to be called after changing any variable that could change the result of the wait condition.

Tags

primary-only, might-switch

Sleep on a locked waitqueue unconditionally.

The calling task is put to sleep until the waitqueue is signaled by either rtdm_waitqueue_signal() or rtdm_waitqueue_broadcast(), or flushed by a call to rtdm_waitqueue_flush().

The waitqueue must have been locked by a call to rtdm_waitqueue_lock() prior to calling this service.

Parameters

wq locked waitqueue to wait on. The waitqueue lock is dropped when sleeping, then reacquired before this service returns to the caller.

Returns

0 on success, otherwise:

• -EINTR is returned if the waitqueue has been flushed, or the calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm_task_unblock().

Tags

primary-only, might-switch

Broadcast a waitqueue.

Broadcast the waitqueue *wq*, waking up all waiters. Each readied task may assume to have received the wake up event.

Parameters

wq waitqueue to broadcast.

Returns

non-zero if at least one task has been readied as a result of this call, zero otherwise.

Tags

unrestricted, might-switch

Deletes a RTDM wait queue.

Dismantles a wait queue structure, releasing all resources attached to it.

Parameters

wq waitqueue to delete.

Tags

task-unrestricted

Flush a waitqueue.

Flushes the waitqueue wq, unblocking all waiters with an error status (-EINTR).

Parameters

wq	waitqueue to flush.
----	---------------------

Returns

non-zero if at least one task has been readied as a result of this call, zero otherwise.

Tags

unrestricted, might-switch

Initialize a RTDM wait queue.

Sets up a wait queue structure for further use.

Parameters

```
wq waitqueue to initialize.
```

Tags

task-unrestricted

Lock a waitqueue.

Acquires the lock on the waitqueue wq.

wq	waitqueue to lock.
context	name of local variable to store the context in.

Note

Recursive locking might lead to unexpected behavior, including lock up.

Tags

unrestricted

Signal a waitqueue.

Signals the waitqueue wq, waking up a single waiter (if any).

Parameters

```
wq waitqueue to signal.
```

Returns

non-zero if a task has been readied as a result of this call, zero otherwise.

Tags

unrestricted, might-switch

Unlock a waitqueue.

Releases the lock on the waitqueue wq.

wq	waitqueue to unlock.
context	name of local variable to retrieve the context from.

Tags

unrestricted

Signal a particular waiter on a waitqueue.

Signals the waitqueue *wq*, waking up waiter *waiter* only, which must be currently sleeping on the waitqueue.

Parameters

wq	waitqueue to signal.
waiter	RTDM task to wake up.

Tags

unrestricted, might-switch

6.33 Event Services 201

6.33 Event Services

Collaboration diagram for Event Services:



Functions

• void rtdm_event_init (rtdm_event_t *event, unsigned long pending)

Initialise an event.

void rtdm_event_destroy (rtdm_event_t *event)

Destroy an event.

void rtdm_event_pulse (rtdm_event_t *event)

Signal an event occurrence to currently listening waiters.

void rtdm_event_signal (rtdm_event_t *event)

Signal an event occurrence.

int rtdm_event_wait (rtdm_event_t *event)

Wait on event occurrence.

int rtdm_event_timedwait (rtdm_event_t *event, nanosecs_rel_t timeout, rtdm_toseq_t *timeout
_seq)

Wait on event occurrence with timeout.

void rtdm_event_clear (rtdm_event_t *event)

Clear event state.

int rtdm_event_select (rtdm_event_t *event, rtdm_selector_t *selector, enum rtdm_selecttype type, unsigned int fd_index)

Bind a selector to an event.

6.33.1 Detailed Description

6.33.2 Function Documentation

Clear event state.

Parameters

in,out	event	Event handle as returned by rtdm_event_init()	
--------	-------	---	--

Tags

unrestricted

Referenced by a4l_get_time().

```
6.33.2.2 rtdm_event_destroy()
```

```
void rtdm_event_destroy (
          rtdm_event_t * event )
```

Destroy an event.

Parameters

	in,out	event	Event handle as returned by rtdm_event_init()	
--	--------	-------	---	--

Tags

task-unrestricted, might-switch

References XNRMID, and xnselect_destroy().

Referenced by a4l_get_time(), and udd_unregister_device().

unsigned long pending)

Initialise an event.

in,out	event	Event handle
in	pending	Non-zero if event shall be initialised as set, 0 otherwise

6.33 Event Services 203

Tags

task-unrestricted

Referenced by a4l_get_time().

Signal an event occurrence to currently listening waiters.

This function wakes up all current waiters of the given event, but it does not change the event state. Subsequently callers of rtdm_event_wait() or rtdm_event_timedwait() will therefore be blocked first.

Parameters

	in,out event	Event handle as returned by rtdm_event	_init()
--	--------------	--	---------

Tags

unrestricted, might-switch

Bind a selector to an event.

This functions binds the given selector to an event so that the former is notified when the event state changes. Typically the select binding handler will invoke this service.

in,out	event	Event handle as returned by rtdm_event_init()	
in,out	selector	Selector as passed to the select binding handler	
in	type	Type of the bound event as passed to the select binding handler	
in fd_index File descriptor index as passed to the select b		File descriptor index as passed to the select binding handler	

Returns

0 on success, otherwise:

- -ENOMEM is returned if there is insufficient memory to establish the dynamic binding.
- -EINVAL is returned if type or fd_index are invalid.

Tags

task-unrestricted

Signal an event occurrence.

This function sets the given event and wakes up all current waiters. If no waiter is presently registered, the next call to rtdm_event_wait() or <a href="rtdm_event_timedwait() will return immediately.

Parameters

```
in,out event Event handle as returned by rtdm_event_init()
```

Tags

unrestricted, might-switch

Referenced by a4l_get_time(), and udd_notify_event().

Wait on event occurrence with timeout.

This function waits or tests for the occurence of the given event, taking the provided timeout into account. On successful return, the event is reset.

6.33 Event Services 205

Parameters

in,out	event	Event handle as returned by rtdm_event_init()	
in	timeout	Relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special values	
in,out	timeout_seq	Handle of a timeout sequence as returned by rtdm_toseq_init() or NULL	

Returns

0 on success, otherwise:

- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.
- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm_task_unblock().
- -EIDRM is returned if event has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.
- -EWOULDBLOCK is returned if a negative *timeout* (i.e., non-blocking operation) has been specified.

Tags

primary-timed, might-switch

Referenced by a4l_get_time(), and rtdm_event_wait().

Wait on event occurrence.

This is the light-weight version of rtdm_event_timedwait(), implying an infinite timeout.

Parameters

in,out	event	Event handle as returned by rtdm_event_init()
--------	-------	---

Returns

0 on success, otherwise:

- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm_task_unblock().
- -EIDRM is returned if event has been destroyed.

• -EPERM may be returned if an illegal invocation environment is detected.

Tags


primary-only, might-switch

References rtdm_event_timedwait().

Referenced by a4l_get_time().

6.34 Semaphore Services

Collaboration diagram for Semaphore Services:



Functions

- void rtdm_sem_init (rtdm_sem_t *sem, unsigned long value)
 Initialise a semaphore.
- void rtdm_sem_destroy (rtdm_sem_t *sem)

Destroy a semaphore.

• int rtdm_sem_down (rtdm_sem_t *sem)

Decrement a semaphore.

Decrement a semaphore with timeout.

void rtdm_sem_up (rtdm_sem_t *sem)

Increment a semaphore.

• int rtdm_sem_select (rtdm_sem_t *sem, rtdm_selector_t *selector, enum rtdm_selecttype type, unsigned int fd_index)

Bind a selector to a semaphore.

6.34.1 Detailed Description

6.34.2 Function Documentation

Destroy a semaphore.

Parameters

in,out | sem | Semaphore handle as returned by rtdm_sem_init()

Tags

task-unrestricted, might-switch

References XNRMID, and xnselect_destroy().

Decrement a semaphore.

This is the light-weight version of rtdm_sem_timeddown(), implying an infinite timeout.

Parameters

in,out	sem	Semaphore handle as returned by rtdm_sem_init()	
--------	-----	---	--

Returns

0 on success, otherwise:

- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm_task_unblock().
- -EIDRM is returned if sem has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.

Tags

primary-only, might-switch

References rtdm_sem_timeddown().

Initialise a semaphore.

in,out	sem	Semaphore handle
in	value	Initial value of the semaphore

Tags

task-unrestricted

Bind a selector to a semaphore.

This functions binds the given selector to the semaphore so that the former is notified when the semaphore state changes. Typically the select binding handler will invoke this service.

Parameters

in,out	sem	Semaphore handle as returned by rtdm_sem_init()
in,out	selector	Selector as passed to the select binding handler
in	type	Type of the bound event as passed to the select binding handler
in	fd_index	File descriptor index as passed to the select binding handler

Returns

0 on success, otherwise:

- -ENOMEM is returned if there is insufficient memory to establish the dynamic binding.
- -EINVAL is returned if type or fd_index are invalid.

Tags

task-unrestricted

Decrement a semaphore with timeout.

This function tries to decrement the given semphore's value if it is positive on entry. If not, the caller is blocked unless non-blocking operation was selected.

Parameters

in,out	sem	Semaphore handle as returned by rtdm_sem_init()
in	timeout	Relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special values
in,out	timeout_seq	Handle of a timeout sequence as returned by rtdm_toseq_init() or NULL

Returns

0 on success, otherwise:

- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.
- -EWOULDBLOCK is returned if timeout is negative and the semaphore value is currently not positive.
- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm_task_unblock().
- -EIDRM is returned if sem has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.

Tags

primary-timed, might-switch

Referenced by rtdm_sem_down().

Increment a semaphore.

This function increments the given semphore's value, waking up a potential waiter which was blocked upon rtdm_sem_down().

Parameters

in,out	sem	Semaphore handle as returned by rtdm_sem_ini	t()
--------	-----	--	-----

Tags

unrestricted, might-switch

6.35 Mutex services 211

6.35 Mutex services

Collaboration diagram for Mutex services:



Functions

- void rtdm_mutex_init (rtdm_mutex_t *mutex)
 - Initialise a mutex.
- void rtdm_mutex_destroy (rtdm_mutex_t *mutex)

Destroy a mutex.

- void rtdm_mutex_unlock (rtdm_mutex_t *mutex)
 - Release a mutex.
- int rtdm_mutex_lock (rtdm_mutex_t *mutex)

Request a mutex.

int rtdm_mutex_timedlock (rtdm_mutex_t *mutex, nanosecs_rel_t timeout, rtdm_toseq_
 t *timeout_seq)

Request a mutex with timeout.

- 6.35.1 Detailed Description
- 6.35.2 Function Documentation

Destroy a mutex.

Parameters

in,out	mutex	Mutex handle as returned by rtdm_mutex_init()

Tags

task-unrestricted, might-switch

References XNRMID.

Initialise a mutex.

This function initalises a basic mutex with priority inversion protection. "Basic", as it does not allow a mutex owner to recursively lock the same mutex again.

Parameters

in,out	mutex	Mutex handle
--------	-------	--------------

Tags

task-unrestricted

Request a mutex.

This is the light-weight version of rtdm_mutex_timedlock(), implying an infinite timeout.

Parameters

```
in, out mutex Mutex handle as returned by rtdm_mutex_init()
```

Returns

0 on success, otherwise:

- -EIDRM is returned if *mutex* has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.

6.35 Mutex services 213

Tags

```
primary-only, might-switch
```

References rtdm_mutex_timedlock().

Request a mutex with timeout.

This function tries to acquire the given mutex. If it is not available, the caller is blocked unless non-blocking operation was selected.

Parameters

in,out	mutex	Mutex handle as returned by rtdm_mutex_init()	
in	timeout	Relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special values	
in,out	timeout_seq	13	

Returns

0 on success, otherwise:

- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.
- -EWOULDBLOCK is returned if timeout is negative and the semaphore value is currently not positive.
- -EIDRM is returned if *mutex* has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.

Tags

```
primary-only, might-switch
```

Referenced by rtdm_mutex_lock().

Release a mutex.

This function releases the given mutex, waking up a potential waiter which was blocked upon rtdm_\circ} mutex_lock() or rtdm_mutex_timedlock().

Parameters


in,out	mutex	Mutex handle as returned by rtdm_mutex_init()	
--------	-------	---	--

Tags

primary-only, might-switch

6.36 Interrupt Management Services

Collaboration diagram for Interrupt Management Services:



Macros

• #define rtdm_irq_get_arg(irq_handle, type) ((type *)irq_handle->cookie)

Retrieve IRQ handler argument.

Typedefs

typedef int(* rtdm_irq_handler_t) (rtdm_irq_t *irq_handle)
 Interrupt handler.

Functions

• int rtdm_irq_request (rtdm_irq_t *irq_handle, unsigned int irq_no, rtdm_irq_handler_t handler, unsigned long flags, const char *device_name, void *arg)

Register an interrupt handler.

• int rtdm_irq_free (rtdm_irq_t *irq_handle)

Release an interrupt handler.

• int rtdm_irq_enable (rtdm_irq_t *irq_handle)

Enable interrupt line.

• int rtdm_irq_disable (rtdm_irq_t *irq_handle)

Disable interrupt line.

RTDM IRQTYPE xxx

Interrupt registrations flags

- #define RTDM_IRQTYPE_SHARED XN_IRQTYPE_SHARED
 - Enable IRQ-sharing with other real-time drivers.
- #define RTDM_IRQTYPE_EDGE XN_IRQTYPE_EDGE

Mark IRQ as edge-triggered, relevant for correct handling of shared edge-triggered IRQs.

RTDM IRQ xxx

Return flags of interrupt handlers

- #define RTDM_IRQ_NONE XN_IRQ_NONE
 Unhandled interrupt.
- #define RTDM_IRQ_HANDLED XN_IRQ_HANDLED
 Denote handled interrupt.
- #define RTDM_IRQ_DISABLE XN_IRQ_DISABLE
 Request interrupt disabling on exit.

6.36.1 Detailed Description

6.36.2 Macro Definition Documentation

```
6.36.2.1 rtdm_irq_get_arg
```

Retrieve IRQ handler argument.

Parameters

irq_handle	IRQ handle
type	Type of the pointer to return

Returns

The argument pointer registered on rtdm_irq_request() is returned, type-casted to the specified type.

Tags

unrestricted

Referenced by a4l_get_time().

6.36.3 Typedef Documentation

6.36.3.1 rtdm_irq_handler_t

typedef int(* rtdm_irq_handler_t) (rtdm_irq_t *irq_handle)

Interrupt handler.

Parameters

in	irq_handle	IRQ handle as returned by rtdm_irq_request()
----	------------	--

Returns

0 or a combination of RTDM_IRQ_xxx flags

6.36.4 Function Documentation

Disable interrupt line.

Parameters

	in,out	irq_handle	IRQ handle as returned by rtdm_irq_request()
--	--------	------------	--

Returns

0 on success, otherwise negative error code

Note

This service is for exceptional use only. Drivers should always prefer interrupt masking at device level (via corresponding control registers etc.) over masking at line level. Keep in mind that the latter is incompatible with IRQ line sharing and can also be more costly as interrupt controller access requires broader synchronization. Also, such service is solely available from secondary mode. The caller is responsible for excluding such conflicts.

Tags

secondary-only

Referenced by udd_notify_event().

Enable interrupt line.

Parameters

in,out irq_ha	ndle IRQ handle as returned by rt	m_irq_request()
-----------------	-----------------------------------	-----------------

Returns

0 on success, otherwise negative error code

Note

This service is for exceptional use only. Drivers should always prefer interrupt masking at device level (via corresponding control registers etc.) over masking at line level. Keep in mind that the latter is incompatible with IRQ line sharing and can also be more costly as interrupt controller access requires broader synchronization. Also, such service is solely available from secondary mode. The caller is responsible for excluding such conflicts.

Tags

secondary-only

Referenced by udd_notify_event().

Release an interrupt handler.

Parameters

	in,out	irq_handle	IRQ handle as returned by rtdm_irq_request()
--	--------	------------	--

Returns

0 on success, otherwise negative error code

Note

The caller is responsible for shutting down the IRQ source at device level before invoking this service. In turn, rtdm_irq_free ensures that any pending event on the given IRQ line is fully processed on return from this service.

Tags

secondary-only

Referenced by a4l_get_time(), and udd_unregister_device().

```
6.36.4.4 rtdm_irq_request()
```

Register an interrupt handler.

This function registers the provided handler with an IRQ line and enables the line.

Parameters

in,out	irq_handle	IRQ handle
in	irq_no	Line number of the addressed IRQ
in	handler	Interrupt handler
in	flags	Registration flags, see RTDM_IRQTYPE_xxx for details
in	device_name	Device name to show up in real-time IRQ lists
in	arg	Pointer to be passed to the interrupt handler on invocation

Returns

0 on success, otherwise:

- -EINVAL is returned if an invalid parameter was passed.
- -EBUSY is returned if the specified IRQ line is already in use.

Tags


secondary-only

Referenced by a4l_get_time().

6.37 Non-Real-Time Signalling Services

These services provide a mechanism to request the execution of a specified handler in non-real-time context.

Collaboration diagram for Non-Real-Time Signalling Services:



Typedefs

• typedef void(* rtdm_nrtsig_handler_t) (rtdm_nrtsig_t *nrt_sig, void *arg)

Non-real-time signal handler.

Functions

- void rtdm_schedule_nrt_work (struct work_struct *lostage_work)
 - Put a work task in Linux non real-time global workqueue from primary mode.
- int rtdm_nrtsig_init (rtdm_nrtsig_t *nrt_sig, rtdm_nrtsig_handler_t handler, void *arg)

 Register a non-real-time signal handler.
- void rtdm_nrtsig_destroy (rtdm_nrtsig_t *nrt_sig)
 - Release a non-realtime signal handler.
- void rtdm_nrtsig_pend (rtdm_nrtsig_t *nrt_sig)

Trigger non-real-time signal.

6.37.1 Detailed Description

These services provide a mechanism to request the execution of a specified handler in non-real-time context.

The triggering can safely be performed in real-time context without suffering from unknown delays. The handler execution will be deferred until the next time the real-time subsystem releases the CPU to the non-real-time part.

6.37.2 Typedef Documentation

```
6.37.2.1 rtdm_nrtsig_handler_t
```

typedef void(* rtdm_nrtsig_handler_t) (rtdm_nrtsig_t *nrt_sig, void *arg)

Non-real-time signal handler.

Parameters

in	nrt_sig	Signal handle pointer as passed to rtdm_nrtsig_init()
in	arg	Argument as passed to rtdm_nrtsig_init()

Note

The signal handler will run in soft-IRQ context of the non-real-time subsystem. Note the implications of this context, e.g. no invocation of blocking operations.

6.37.3 Function Documentation

Release a non-realtime signal handler.

Parameters

in,out	nrt_sig	Signal handle
--------	---------	---------------

Tags

task-unrestricted

Referenced by a4l_get_time().

Register a non-real-time signal handler.

Parameters

in,out	nrt_sig	Signal handle
in	handler	Non-real-time signal handler
in	arg	Custom argument passed to handler() on each invocation

Returns

0 on success, otherwise:

• -EAGAIN is returned if no free signal slot is available.

Tags

task-unrestricted

Referenced by a4l_get_time().

Trigger non-real-time signal.

Parameters

```
in,out | nrt_sig | Signal handle
```

Tags

unrestricted

Referenced by a4l_get_time().


Put a work task in Linux non real-time global workqueue from primary mode.

Parameters

lostage_work

6.38 Utility Services

Collaboration diagram for Utility Services:



Functions

• int rtdm_mmap_to_user (struct rtdm_fd *fd, void *src_addr, size_t len, int prot, void **pptr, struct vm_operations_struct *vm_ops, void *vm_private_data)

Map a kernel memory range into the address space of the user.

• int rtdm_iomap_to_user (struct rtdm_fd *fd, phys_addr_t src_addr, size_t len, int prot, void **pptr, struct vm_operations_struct *vm_ops, void *vm_private_data)

Map an I/O memory range into the address space of the user.

int rtdm_mmap_kmem (struct vm_area_struct *vma, void *va)

Map a kernel logical memory range to a virtual user area.

int rtdm_mmap_vmem (struct vm_area_struct *vma, void *va)

Map a virtual memory range to a virtual user area.

int rtdm_mmap_iomem (struct vm_area_struct *vma, phys_addr_t pa)

Map an I/O memory range to a virtual user area.

int rtdm munmap (void *ptr, size t len)

Unmap a user memory range.

• int rtdm_ratelimit (struct rtdm_ratelimit_state *rs, const char *func)

Enforces a rate limit.

void rtdm_printk_ratelimited (const char *format,...)

Real-time safe rate-limited message printing on kernel console.

void rtdm_printk (const char *format,...)

Real-time safe message printing on kernel console.

void * rtdm_malloc (size_t size)

Allocate memory block.

void rtdm_free (void *ptr)

Release real-time memory block.

• int rtdm read user ok (struct rtdm fd *fd, const void user *ptr, size t size)

Check if read access to user-space memory block is safe.

• int rtdm_rw_user_ok (struct rtdm_fd *fd, const void __user *ptr, size_t size)

Check if read/write access to user-space memory block is safe.

int rtdm_copy_from_user (struct rtdm_fd *fd, void *dst, const void __user *src, size_t size)

Copy user-space memory block to specified buffer.

• int rtdm_safe_copy_from_user (struct rtdm_fd *fd, void *dst, const void __user *src, size_t size)

Check if read access to user-space memory block and copy it to specified buffer.

• int rtdm_copy_to_user (struct rtdm_fd *fd, void __user *dst, const void *src, size_t size)

Copy specified buffer to user-space memory block.

6.38 Utility Services 225

- int rtdm_safe_copy_to_user (struct rtdm_fd *fd, void __user *dst, const void *src, size_t size)

 Check if read/write access to user-space memory block is safe and copy specified buffer to it.
- int rtdm_strncpy_from_user (struct rtdm_fd *fd, char *dst, const char __user *src, size_t count)

 Copy user-space string to specified buffer.
- int rtdm_in_rt_context (void)

Test if running in a real-time task.

• int rtdm_rt_capable (struct rtdm_fd *fd)

Test if the caller is capable of running in real-time context.

6.38.1 Detailed Description

6.38.2 Function Documentation

Copy user-space memory block to specified buffer.

Parameters

in	fd	RTDM file descriptor as passed to the invoked device operation handler
in	dst	Destination buffer address
in	src	Address of the user-space memory block
in	size	Size of the memory block

Returns

0 on success, otherwise:

• -EFAULT is returned if an invalid memory area was accessed.

Note

Before invoking this service, verify via rtdm_read_user_ok() that the provided user-space address can securely be accessed.

Tags

task-unrestricted

Referenced by rtdm_ratelimit().

Copy specified buffer to user-space memory block.

Parameters

in	fd	RTDM file descriptor as passed to the invoked device operation handler
in	dst	Address of the user-space memory block
in	src	Source buffer address
in	size	Size of the memory block

Returns

0 on success, otherwise:

• -EFAULT is returned if an invalid memory area was accessed.

Note

Before invoking this service, verify via rtdm_rw_user_ok() that the provided user-space address can securely be accessed.

Tags

task-unrestricted

Referenced by rtdm_ratelimit().

Release real-time memory block.

Parameters

in	ptr	Pointer to memory block as returned by rtdm_malloc()
----	-----	--

6.38 Utility Services 227

Tags

unrestricted

Referenced by rtdm_ratelimit().

Test if running in a real-time task.

Returns

Non-zero is returned if the caller resides in real-time context, 0 otherwise.

Tags

unrestricted

Referenced by rtdm_ratelimit().

Map an I/O memory range into the address space of the user.

Parameters

in	fd	RTDM file descriptor as passed to the invoked device operation handler
in	src_addr	physical I/O address to be mapped
in	len	Length of the memory range
in	prot	Protection flags for the user's memory range, typically either PROT_READ or PROT_READ PROT_WRITE
in,out	pptr	Address of a pointer containing the desired user address or NULL on entry and the finally assigned address on return
in	vm_ops	vm_operations to be executed on the vm_area of the user memory range or NULL
Ge <u>in</u> ęrated by	Dwwwggorivate_data	Private data to be stored in the vm_area, primarily useful for vm_operation handlers

Returns

0 on success, otherwise (most common values):

- -EINVAL is returned if an invalid start address, size, or destination address was passed.
- -ENOMEM is returned if there is insufficient free memory or the limit of memory mapping for the user process was reached.
- -EAGAIN is returned if too much memory has been already locked by the user process.
- -EPERM may be returned if an illegal invocation environment is detected.

Note

RTDM supports two models for unmapping the memory area:

- manual unmapping via rtdm_munmap(), which may be issued from a driver in response to an IOCTL call, or by a call to the regular munmap() call from the application.
- automatic unmapping, triggered by the termination of the process which owns the mapping.
 To track the number of references pending on the resource mapped, the driver can pass the
 address of a close handler for the vm_area considered, in the vm_ops descriptor. See the
 relevant Linux kernel programming documentation (e.g. Linux Device Drivers book) on virtual
 memory management for details.

Tags

secondary-only

Allocate memory block.

Parameters

in	size	Requested size of the memory block
----	------	------------------------------------

Returns

The pointer to the allocated block is returned on success, NULL otherwise.

Tags

unrestricted

Referenced by a4l_alloc_subd(), and rtdm_ratelimit().

6.38 Utility Services 229

```
6.38.2.7 rtdm_mmap_iomem()
```

Map an I/O memory range to a virtual user area.

This routine is commonly used from a ->mmap() handler of a RTDM driver, for mapping an I/O memory area over the user address space referred to by *vma*.

Parameters

in	vma	The VMA descriptor to receive the mapping.
in	ра	The physical I/O address to be mapped.

Returns

0 on success, otherwise a negated error code is returned.

Note

To map a chunk of logical space obtained from kmalloc(), or a purely virtual area with no direct physical mapping to a VMA, call rtdm_mmap_vmem() respectively instead.

Tags

secondary-only

```
6.38.2.8 rtdm_mmap_kmem()
```

Map a kernel logical memory range to a virtual user area.

This routine is commonly used from a ->mmap() handler of a RTDM driver, for mapping a virtual memory area with a direct physical mapping over the user address space referred to by *vma*.

Parameters

in	vma	The VMA descriptor to receive the mapping.
in	va	The kernel logical address to be mapped.

Returns

230

0 on success, otherwise a negated error code is returned.

Note

This service works on memory regions allocated via kmalloc(). To map a chunk of virtual space with no direct physical mapping, or a physical I/O memory to a VMA, call rtdm_mmap_iomem() respectively instead.

Tags

secondary-only

Map a kernel memory range into the address space of the user.

Parameters

in	fd	RTDM file descriptor as passed to the invoked device operation handler
in	src_addr	Kernel virtual address to be mapped
in	len	Length of the memory range
in	prot	Protection flags for the user's memory range, typically either PROT_READ or PROT_READ PROT_WRITE
in,out	pptr	Address of a pointer containing the desired user address or NULL on entry and the finally assigned address on return
in	vm_ops	vm_operations to be executed on the vm_area of the user memory range or NULL
in	vm_private_data	Private data to be stored in the vm_area, primarily useful for vm_operation handlers

Returns

0 on success, otherwise (most common values):

- -EINVAL is returned if an invalid start address, size, or destination address was passed.
- -ENOMEM is returned if there is insufficient free memory or the limit of memory mapping for the user process was reached.

6.38 Utility Services 231

- -EAGAIN is returned if too much memory has been already locked by the user process.
- -EPERM may be returned if an illegal invocation environment is detected.

Note

This service only works on memory regions allocated via kmalloc() or vmalloc(). To map physical I/O memory to user-space use rtdm_iomap_to_user() instead.

RTDM supports two models for unmapping the memory area:

- manual unmapping via rtdm_munmap(), which may be issued from a driver in response to an IOCTL call, or by a call to the regular munmap() call from the application.
- automatic unmapping, triggered by the termination of the process which owns the mapping.
 To track the number of references pending on the resource mapped, the driver can pass the
 address of a close handler for the vm_area considered, in the vm_ops descriptor. See the
 relevant Linux kernel programming documentation (e.g. Linux Device Drivers book) on virtual
 memory management for details.

Tags

secondary-only

Map a virtual memory range to a virtual user area.

This routine is commonly used from a ->mmap() handler of a RTDM driver, for mapping a purely virtual memory area over the user address space referred to by *vma*.

Parameters

j	n	vma	The VMA descriptor to receive the mapping.
j	n	va	The virtual address to be mapped.

Returns

0 on success, otherwise a negated error code is returned.

Note

This service works on memory regions allocated via vmalloc(). To map a chunk of logical space obtained from kmalloc(), or a physical I/O memory to a VMA, call rtdm_mmap_kmem() or rtdm_

mmap_iomem() respectively instead.

Tags

secondary-only

Unmap a user memory range.

Parameters

in	ptr	User address or the memory range
in	len	Length of the memory range

Returns

0 on success, otherwise:

- -EINVAL is returned if an invalid address or size was passed.
- -EPERM may be returned if an illegal invocation environment is detected.

Tags

secondary-only

Real-time safe message printing on kernel console.

Parameters

ir	format	Format string (conforming standard printf())
		Arguments referred by format

Returns

On success, this service returns the number of characters printed. Otherwise, a negative error code is returned.

Tags

unrestricted

Referenced by rtdm_ratelimit().

6.38 Utility Services 233

```
6.38.2.13 rtdm_printk_ratelimited()
```

Real-time safe rate-limited message printing on kernel console.

Parameters

in	format	Format string (conforming standard printf())
		Arguments referred by format

Returns

On success, this service returns the number of characters printed. Otherwise, a negative error code is returned.

Tags

unrestricted

Referenced by rtdm_ratelimit().

Enforces a rate limit.

This function enforces a rate limit: not more than *rs->burst* callbacks in every *rs->interval*.

Parameters

in,out	rs	rtdm_ratelimit_state data
in	func	name of calling function

Returns

0 means callback will be suppressed and 1 means go ahead and do it

Tags

unrestricted

References rtdm_clock_read(), rtdm_copy_from_user(), rtdm_copy_to_user(), rtdm_free(), rtdm_in_crt_context(), rtdm_lock_get_irqsave, rtdm_lock_put_irqrestore(), rtdm_malloc(), rtdm_printk(), rtdm_crt_capable(), rtdm_rw_user_ok(), rtdm_safe_copy_crom_user(), rtdm_safe_copy_to_user(), and rtdm_strncpy_from_user().

Check if read access to user-space memory block is safe.

Parameters

in	fd	RTDM file descriptor as passed to the invoked device operation handler
in	ptr	Address of the user-provided memory block
in	size	Size of the memory block

Returns

Non-zero is return when it is safe to read from the specified memory block, 0 otherwise.

Tags

task-unrestricted

Referenced by rtdm_ratelimit().

Test if the caller is capable of running in real-time context.

Parameters

in	fd	RTDM file descriptor as passed to the invoked device operation handler
----	----	--

Returns

Non-zero is returned if the caller is able to execute in real-time context (independent of its current execution mode), 0 otherwise.

6.38 Utility Services 235

Note

This function can be used by drivers that provide different implementations for the same service depending on the execution mode of the caller. If a caller requests such a service in non-real-time context but is capable of running in real-time as well, it might be appropriate for the driver to reject the request via -ENOSYS so that RTDM can switch the caller and restart the request in real-time context.

Tags

unrestricted

Referenced by rtdm ratelimit().

Check if read/write access to user-space memory block is safe.

Parameters

in	fd	RTDM file descriptor as passed to the invoked device operation handler
in	ptr	Address of the user-provided memory block
in	size	Size of the memory block

Returns

Non-zero is return when it is safe to read from or write to the specified memory block, 0 otherwise.

Tags

task-unrestricted

Referenced by rtdm_ratelimit().

Check if read access to user-space memory block and copy it to specified buffer.

Parameters

in	fd	RTDM file descriptor as passed to the invoked device operation handler
in	dst	Destination buffer address
in	src	Address of the user-space memory block
in	size	Size of the memory block

Returns

0 on success, otherwise:

• -EFAULT is returned if an invalid memory area was accessed.

Note

This service is a combination of rtdm_read_user_ok and rtdm_copy_from_user.

Tags

task-unrestricted

Referenced by rtdm_ratelimit().

Check if read/write access to user-space memory block is safe and copy specified buffer to it.

Parameters

in	fd	RTDM file descriptor as passed to the invoked device operation handler
in	dst	Address of the user-space memory block
in	src	Source buffer address
in	size	Size of the memory block

Returns

0 on success, otherwise:

• -EFAULT is returned if an invalid memory area was accessed.

6.38 Utility Services 237

Note

This service is a combination of rtdm_rw_user_ok and rtdm_copy_to_user.

Tags

task-unrestricted

Referenced by rtdm_ratelimit().

Copy user-space string to specified buffer.

Parameters

in	fd	RTDM file descriptor as passed to the invoked device operation handler
in	dst	Destination buffer address
in	src	Address of the user-space string
in	count	Maximum number of bytes to copy, including the trailing '0'

Returns

Length of the string on success (not including the trailing '0'), otherwise:

• -EFAULT is returned if an invalid memory area was accessed.

Note

This services already includes a check of the source address, calling rtdm_read_user_ok() for src explicitly is not required.

Tags


task-unrestricted

Referenced by rtdm_ratelimit().

6.39 SCHED_QUOTA scheduling policy

The SCHED_QUOTA policy enforces a limitation on the CPU consumption of threads over a globally defined period, known as the quota interval.

Collaboration diagram for SCHED QUOTA scheduling policy:



6.39.1 Detailed Description

The SCHED_QUOTA policy enforces a limitation on the CPU consumption of threads over a globally defined period, known as the quota interval.

This is done by pooling threads with common requirements in groups, and giving each group a share of the global period (CONFIG_XENO_OPT_SCHED_QUOTA_PERIOD).

When threads have entirely consumed the quota allotted to the group they belong to, the latter is suspended as a whole, until the next quota interval starts. At this point, a new runtime budget is given to each group, in accordance with its share.

6.40 Thread scheduling control

Collaboration diagram for Thread scheduling control:



Modules

SCHED_QUOTA scheduling policy

The SCHED_QUOTA policy enforces a limitation on the CPU consumption of threads over a globally defined period, known as the quota interval.

Data Structures

struct xnsched

Scheduling information structure.

Functions

static int xnsched_run (void)

The rescheduling procedure.

• static void xnsched_rotate (struct xnsched *sched, struct xnsched_class *sched_class, const union xnsched_policy_param *sched_param)

Rotate a scheduler runqueue.

6.40.1 Detailed Description

6.40.2 Function Documentation

Rotate a scheduler runqueue.

The specified scheduling class is requested to rotate its runqueue for the given scheduler. Rotation is performed according to the scheduling parameter specified by *sched_param*.

Note

The nucleus supports round-robin scheduling for the members of the RT class.

Parameters

sched	The per-CPU scheduler hosting the target scheduling class.
sched_class	The scheduling class which should rotate its runqueue.
sched_param	The scheduling parameter providing rotation information to the specified scheduling class.

Tags

unrestricted, atomic-entry

The rescheduling procedure.

This is the central rescheduling routine which should be called to validate and apply changes which have previously been made to the nucleus scheduling state, such as suspending, resuming or changing the priority of threads. This call performs context switches as needed. xnsched_run() schedules out the current thread if:

- the current thread is about to block.
- a runnable thread from a higher priority scheduling class is waiting for the CPU.
- the current thread does not lead the runnable threads from its own scheduling class (i.e. round-robin).

The Cobalt core implements a lazy rescheduling scheme so that most of the services affecting the threads state MUST be followed by a call to the rescheduling procedure for the new scheduling state to be applied.

In other words, multiple changes on the scheduler state can be done in a row, waking threads up, blocking others, without being immediately translated into the corresponding context switches. When all changes have been applied, xnsched_run() should be called for considering those changes, and possibly switching context.

As a notable exception to the previous principle however, every action which ends up suspending the current thread begets an implicit call to the rescheduling procedure on behalf of the blocking service.

Typically, self-suspension or sleeping on a synchronization object automatically leads to a call to the rescheduling procedure, therefore the caller does not need to explicitly issue xnsched_run() after such operations.

The rescheduling procedure always leads to a null-effect if it is called on behalf of an interrupt service routine. Any outstanding scheduler lock held by the outgoing thread will be restored when the thread is scheduled back in.

Calling this procedure with no applicable context switch pending is harmless and simply leads to a null-effect.

Returns

Non-zero is returned if a context switch actually happened, otherwise zero if the current thread was left running.

Tags

unrestricted

6.41 Synchronous I/O multiplexing

This module implements the services needed for implementing the POSIX select() service, or any other event multiplexing services.

Collaboration diagram for Synchronous I/O multiplexing:



Functions

void xnselect_init (struct xnselect *select_block)

Initialize a struct xnselect structure.

static int xnselect signal (struct xnselect *select block, unsigned int state)

Signal a file descriptor state change.

void xnselect_destroy (struct xnselect *select_block)

Destroy the xnselect structure associated with a file descriptor.

int xnselector_init (struct xnselector *selector)

Initialize a selector structure.

int xnselect (struct xnselector *selector, fd_set *out_fds[XNSELECT_MAX_TYPES], fd_set *in_
 fds[XNSELECT_MAX_TYPES], int nfds, xnticks_t timeout, xntmode_t timeout_mode)

Check the state of a number of file descriptors, wait for a state change if no descriptor is ready.

void xnselector_destroy (struct xnselector *selector)

Destroy a selector block.

• int xnselect_bind (struct xnselect *select_block, struct xnselect_binding *binding, struct xnselector *selector, unsigned type, unsigned index, unsigned state)

Bind a file descriptor (represented by its xnselect structure) to a selector block.

6.41.1 Detailed Description

This module implements the services needed for implementing the POSIX select() service, or any other event multiplexing services.

Following the implementation of the posix select service, this module defines three types of events:

- XNSELECT_READ meaning that a file descriptor is ready for reading;
- XNSELECT WRITE meaning that a file descriptor is ready for writing;
- XNSELECT EXCEPT meaning that a file descriptor received an exceptional event.

It works by defining two structures:

- a struct xnselect structure, which should be added to every file descriptor for every event type (read, write, or except);
- a *struct xnselector* structure, the selection structure, passed by the thread calling the xnselect service, where this service does all its housekeeping.

6.41.2 Function Documentation

Check the state of a number of file descriptors, wait for a state change if no descriptor is ready.

Parameters

selector	structure to check for pending events
out_fds	The set of descriptors with pending events if a strictly positive number is returned, or the set of descriptors not yet bound if -ECHRNG is returned;
in_fds	the set of descriptors which events should be checked
nfds	the highest-numbered descriptor in any of the in_fds sets, plus 1;
timeout	the timeout, whose meaning depends on <i>timeout_mode</i> , note that xnselect() pass <i>timeout</i> and <i>timeout_mode</i> unchanged to xnsynch_sleep_on, so passing a relative value different from XN_INFINITE as a timeout with <i>timeout_mode</i> set to XN_RELATIVE, will cause a longer sleep than expected if the sleep is interrupted.
timeout_mode	the mode of timeout.

Return values

-EINVAL	if <i>nfds</i> is negative;
-ECHRNG	if some of the descriptors passed in <i>in_fds</i> have not yet been registered with xnselect_bind(), <i>out_fds</i> contains the set of such descriptors;
-EINTR	if xnselect was interrupted while waiting;
0	in case of timeout.
the	number of file descriptors having received an event.

Tags

primary-only, might-switch

```
struct xnselect_binding * binding,
struct xnselector * selector,
unsigned type,
unsigned index,
unsigned state )
```

Bind a file descriptor (represented by its *xnselect* structure) to a selector block.

Parameters

select_block	pointer to the struct xnselect to be bound;
binding	pointer to a newly allocated (using xnmalloc) struct xnselect_binding;
selector	pointer to the selector structure;
type	type of events (XNSELECT_READ, XNSELECT_WRITE, or XNSELECT_EXCEPT);
index	index of the file descriptor (represented by <code>select_block</code>) in the bit fields used by the <code>selector</code> structure;
state	current state of the file descriptor.

select_block must have been initialized with xnselect_init(), the xnselector structure must have been initialized with xnselector_init(), binding may be uninitialized.

This service must be called with nklock locked, irqs off. For this reason, the *binding* parameter must have been allocated by the caller outside the locking section.

Return values

-EINVAL	if type or index is invalid;
0	otherwise.

Tags

task-unrestricted, might-switch, atomic-entry

Destroy the *xnselect* structure associated with a file descriptor.

Any binding with a *xnselector* block is destroyed.

Parameters

select block	I nointer to the <i>uncelect</i> structure associated with a tile descriptor.
3CICCI_DIOCK	pointer to the <i>xnselect</i> structure associated with a file descriptor

Tags

task-unrestricted, might-switch

Referenced by rtdm_event_destroy(), and rtdm_sem_destroy().

Initialize a struct xnselect structure.

This service must be called to initialize a *struct xnselect* structure before it is bound to a selector by the means of xnselect_bind().

Parameters

select_block	pointer to the xnselect structure to be initialized
--------------	---

Tags

task-unrestricted

Signal a file descriptor state change.

Parameters

select_block	pointer to an <i>xnselect</i> structure representing the file descriptor whose state changed;
state	new value of the state.

Return values

1	if rescheduling is needed;
0	otherwise.

the selector block to be destroyed

Tags

selector

task-unrestricted

Tags

0


Return values

task-unrestricted

References xnsynch_init().

6.42 Thread synchronization services

Collaboration diagram for Thread synchronization services:



Functions

- void xnsynch_init (struct xnsynch *synch, int flags, atomic_t *fastlock)

 Initialize a synchronization object.
- int xnsynch_destroy (struct xnsynch *synch)

Destroy a synchronization object.

int __must_check xnsynch_sleep_on (struct xnsynch *synch, xnticks_t timeout, xntmode_

 t timeout_mode)

Sleep on an ownerless synchronization object.

struct xnthread * xnsynch_wakeup_one_sleeper (struct xnsynch *synch)

Unblock the heading thread from wait.

• void xnsynch_wakeup_this_sleeper (struct xnsynch *synch, struct xnthread *sleeper)

Unblock a particular thread from wait.

int __must_check xnsynch_acquire (struct xnsynch *synch, xnticks_t timeout, xntmode_t timeout
 _mode)

Acquire the ownership of a synchronization object.

int __must_check xnsynch_try_acquire (struct xnsynch *synch)

Try acquiring the ownership of a synchronization object.

• struct xnthread * xnsynch_release (struct xnsynch *synch, struct xnthread *thread)

Give the resource ownership to the next waiting thread.

struct xnthread * xnsynch_peek_pendq (struct xnsynch *synch)

Access the thread leading a synch object wait queue.

• int xnsynch_flush (struct xnsynch *synch, int reason)

Unblock all waiters pending on a resource.

6.42.1 Detailed Description

6.42.2 Function Documentation

Acquire the ownership of a synchronization object.

xntmode_t timeout_mode)

This service should be called by upper interfaces wanting the current thread to acquire the ownership of the given resource. If the resource is already assigned to another thread, the caller is suspended.

This service must be used only with synchronization objects that track ownership (XNSYNCH_OWNER set.

Parameters

synch	The descriptor address of the synchronization object to acquire.
This value is a wait time g absolute monotonic, or ab XN_INFINITE and setting	The timeout which may be used to limit the time the thread pends on the resource. This value is a wait time given as a count of nanoseconds. It can either be relative, absolute monotonic, or absolute adjustable depending on <i>timeout_mode</i> . Passing XN_INFINITE and setting <i>mode</i> to XN_RELATIVE specifies an unbounded wait. All other values are used to initialize a watchdog timer.
timeout_mode	The mode of the <i>timeout</i> parameter. It can either be set to XN_RELATIVE, XN_ABSOLUTE, or XN_REALTIME (see also xntimer_start()).

Returns

A bitmask which may include zero or one information bit among XNRMID, XNTIMEO and XNB⇔ REAK, which should be tested by the caller, for detecting respectively: object deletion, timeout or signal/unblock conditions which might have happened while waiting.

Tags

primary-only, might-switch

Note

Unlike xnsynch_try_acquire(), this call does NOT check for invalid recursive locking request, which means that such request will always cause a deadlock for the caller.

References xnthread_current().

Destroy a synchronization object.

Destroys the synchronization object synch, unblocking all waiters with the XNRMID status.

Returns

XNSYNCH_RESCHED is returned if at least one thread is unblocked, which means the caller should invoke xnsched_run() for applying the new scheduling state. Otherwise, XNSYNCH_DO⊷ NE is returned.

Side effects

Same as xnsynch_flush().

Tags

task-unrestricted

References XNRMID, and xnsynch_flush().

Unblock all waiters pending on a resource.

This service atomically releases all threads which currently sleep on a given resource.

This service should be called by upper interfaces under circumstances requiring that the pending queue of a given resource is cleared, such as before the resource is deleted.

Parameters

synch	The descriptor address of the synchronization object to be flushed.
reason	Some flags to set in the information mask of every unblocked thread. Zero is an acceptable value. The following bits are pre-defined by the nucleus:

- XNRMID should be set to indicate that the synchronization object is about to be destroyed (see xnthread_resume()).
- XNBREAK should be set to indicate that the wait has been forcibly interrupted (see xnthread_

 unblock()).

Returns

XNSYNCH_RESCHED is returned if at least one thread is unblocked, which means the caller should invoke xnsched_run() for applying the new scheduling state. Otherwise, XNSYNCH_DO⊷ NE is returned.

Side effects

- The effective priority of the previous resource owner might be lowered to its base priority value as a consequence of the priority inheritance boost being cleared.
- After this operation has completed, the synchronization object is not owned by any thread.

Tags

unrestricted

Referenced by xnsynch destroy().

Initialize a synchronization object.

Initializes a synchronization object. Xenomai threads can wait on and signal such objects for serializing access to resources. This object has built-in support for priority inheritance.

synch	The address of a synchronization object descriptor the nucleus will use to store the object-specific data. This descriptor must always be valid while the object is active therefore it must be allocated in permanent memory.
flags	A set of creation flags affecting the operation. The valid flags are:

- XNSYNCH_PRIO causes the threads waiting for the resource to pend in priority order. Otherwise, FIFO ordering is used (XNSYNCH_FIFO).
- XNSYNCH_OWNER indicates that the synchronization object shall track the resource ownership, allowing a single owner at most at any point in time. Note that setting this flag implies the use of xnsynch_acquire() and xnsynch_release() instead of xnsynch_sleep_on() and xnsynch_wakeup⊷ _*().
- XNSYNCH_PIP enables priority inheritance when a priority inversion is detected among threads using this object. XNSYNCH_PIP enables XNSYNCH_OWNER and XNSYNCH_PRIO implicitly.
- XNSYNCH_DREORD (Disable REORDering) tells the nucleus that the wait queue should not be
 reordered whenever the priority of a blocked thread it holds is changed. If this flag is not specified,
 changing the priority of a blocked thread using xnthread_set_schedparam() will cause this object's
 wait queue to be reordered according to the new priority level, provided the synchronization object
 makes the waiters wait by priority order on the awaited resource (XNSYNCH PRIO).

Parameters

fastlock

Address of the fast lock word to be associated with a synchronization object with ownership tracking. Therefore, a valid fast-lock address is required if XNSYNCH_OWNER is set in *flags*.

Tags

task-unrestricted

Referenced by xnselector_init().

Access the thread leading a synch object wait queue.

This services returns the descriptor address of to the thread leading a synchronization object wait queue.

Parameters

synch The descriptor address of the target synchronization object.

Returns

The descriptor address of the unblocked thread.

Tags

unrestricted

Give the resource ownership to the next waiting thread.

This service releases the ownership of the given synchronization object. The thread which is currently leading the object's pending list, if any, is unblocked from its pending state. However, no reschedule is performed.

This service must be used only with synchronization objects that track ownership (XNSYNCH_OWNER set).

Parameters

synch	The descriptor address of the synchronization object whose ownership is changed.
thread	The descriptor address of the current owner.

Returns

The descriptor address of the unblocked thread.

Side effects

- The effective priority of the previous resource owner might be lowered to its base priority value as a consequence of the priority inheritance boost being cleared.
- The synchronization object ownership is transferred to the unblocked thread.

Tags

primary-only, might-switch

Sleep on an ownerless synchronization object.

Makes the calling thread sleep on the specified synchronization object, waiting for it to be signaled.

This service should be called by upper interfaces wanting the current thread to pend on the given resource. It must not be used with synchronization objects that are supposed to track ownership (XNSY⊷ NCH_OWNER).

synch	The descriptor address of the synchronization object to sleep on.
timeout	The timeout which may be used to limit the time the thread pends on the resource. This value is a wait time given as a count of nanoseconds. It can either be relative, absolute monotonic, or absolute adjustable depending on <i>timeout_mode</i> . Passing XN_INFINITE and setting <i>mode</i> to XN_RELATIVE specifies an unbounded wait. All other values are used to initialize a watchdog timer.
timeout_mode	The mode of the <i>timeout</i> parameter. It can either be set to XN_RELATIVE, XN_ABSOLUTE, or XN_REALTIME (see also xntimer_start()).

Returns

A bitmask which may include zero or one information bit among XNRMID, XNTIMEO and XNB REAK, which should be tested by the caller, for detecting respectively: object deletion, timeout or signal/unblock conditions which might have happened while waiting.

Tags

```
primary-only, might-switch
```

References xnthread current().

Try acquiring the ownership of a synchronization object.

This service should be called by upper interfaces wanting the current thread to acquire the ownership of the given resource. If the resource is already assigned to another thread, the call returns with an error code.

This service must be used only with synchronization objects that track ownership (XNSYNCH_OWNER set.

Parameters

synch The descriptor address of the synchronization object to acquire.

Returns

Zero is returned if *synch* has been successfully acquired. Otherwise:

- -EDEADLK is returned if synch is currently held by the calling thread.
- -EBUSY is returned if *synch* is currently held by another thread.

Tags

primary-only

References xnthread_current().

Unblock the heading thread from wait.

This service wakes up the thread which is currently leading the synchronization object's pending list. The sleeping thread is unblocked from its pending state, but no reschedule is performed.

This service should be called by upper interfaces wanting to signal the given resource so that a single waiter is resumed. It must not be used with synchronization objects that are supposed to track ownership (XNSYNCH OWNER not set).

Parameters

synch	The descriptor address of the synchronization object whose ownership is changed.
-------	--

Returns

The descriptor address of the unblocked thread.

Tags

unrestricted

Unblock a particular thread from wait.

This service wakes up a specific thread which is currently pending on the given synchronization object. The sleeping thread is unblocked from its pending state, but no reschedule is performed.

This service should be called by upper interfaces wanting to signal the given resource so that a specific waiter is resumed. It must not be used with synchronization objects that are supposed to track ownership (XNSYNCH OWNER not set).


synch	The descriptor address of the synchronization object whose ownership is changed.
sleeper	The thread to unblock which MUST be currently linked to the synchronization object's pending queue (i.e. synch->pendq).

Tags

unrestricted

6.43 Thread services

Collaboration diagram for Thread services:



Modules

Thread state flags

Bits reporting permanent or transient states of threads.

Thread information flags

Bits reporting events notified to threads.

Functions

static struct xnthread * xnthread_current (void)

Retrieve the current Cobalt core TCB.

static struct xnthread * xnthread from task (struct task struct *p)

Retrieve the Cobalt core TCB attached to a Linux task.

• static void xnthread_test_cancel (void)

Introduce a thread cancellation point.

int xnthread_init (struct xnthread *thread, const struct xnthread_init_attr *attr, struct xnsched_class *sched_class, const union xnsched_policy_param *sched_param)

Initialize a new thread.

int xnthread_start (struct xnthread *thread, const struct xnthread_start_attr *attr)

Start a newly created thread.

• int xnthread set mode (int clrmask, int setmask)

Change control mode of the current thread.

void xnthread_suspend (struct xnthread *thread, int mask, xnticks_t timeout, xntmode_t timeout
 _mode, struct xnsynch *wchan)

Suspend a thread.

void xnthread_resume (struct xnthread *thread, int mask)

Resume a thread.

int xnthread unblock (struct xnthread *thread)

Unblock a thread.

int xnthread_set_periodic (struct xnthread *thread, xnticks_t idate, xntmode_t timeout_mode, xnticks t period)

Make a thread periodic.

• int xnthread wait period (unsigned long *overruns r)

Wait for the next periodic release point.

• int xnthread_set_slice (struct xnthread *thread, xnticks_t quantum)

Set thread time-slicing information.

void xnthread cancel (struct xnthread *thread)

Cancel a thread.

256

• int xnthread_join (struct xnthread *thread, bool uninterruptible)

Join with a terminated thread.

• int xnthread_harden (void)

Migrate a Linux task to the Xenomai domain.

void xnthread_relax (int notify, int reason)

Switch a shadow thread back to the Linux domain.

int xnthread_map (struct xnthread *thread, struct completion *done)

Create a shadow thread context over a kernel task.

• int xnthread_migrate (int cpu)

Migrate the current thread.

• int xnthread_set_schedparam (struct xnthread *thread, struct xnsched_class *sched_class, const union xnsched_policy_param *sched_param)

Change the base scheduling parameters of a thread.

6.43.1 Detailed Description

6.43.2 Function Documentation

Cancel a thread.

Request cancellation of a thread. This service forces *thread* to exit from any blocking call, then to switch to secondary mode. *thread* will terminate as soon as it reaches a cancellation point. Cancellation points are defined for the following situations:

- thread self-cancels by a call to xnthread_cancel().
- thread invokes a Linux syscall (user-space shadow only).
- thread receives a Linux signal (user-space shadow only).
- thread unblocks from a Xenomai syscall (user-space shadow only).
- thread attempts to block on a Xenomai syscall (user-space shadow only).
- thread explicitly calls xnthread_test_cancel().

thread The descriptor address of the thread to termina	te.
--	-----

Tags

task-unrestricted, might-switch

Note

In addition to the common actions taken upon cancellation, a thread which belongs to the SCHE

→ D WEAK class is sent a regular SIGTERM signal.

Retrieve the current Cobalt core TCB.

Returns the address of the current Cobalt core thread descriptor, or NULL if running over a regular Linux task. This call is not affected by the current runtime mode of the core thread.

Note

The returned value may differ from xnsched_current_thread() called from the same context, since the latter returns the root thread descriptor for the current CPU if the caller is running in secondary mode.

Tags

unrestricted

Referenced by xnsynch_acquire(), xnsynch_sleep_on(), xnsynch_try_acquire(), xnthread_harden(), xnthread_join(), xnthread_relax(), xnthread_set_periodic(), xnthread_test_cancel(), and xnthread_ \leftarrow wait_period().

Retrieve the Cobalt core TCB attached to a Linux task.

Returns the address of the Cobalt core thread descriptor attached to the Linux task p, or NULL if p is a regular Linux task. This call is not affected by the current runtime mode of the core thread.

Tags

unrestricted

```
6.43.2.4 xnthread_harden()
int xnthread_harden (
```

void)

Migrate a Linux task to the Xenomai domain.

This service causes the transition of "current" from the Linux domain to Xenomai. The shadow will resume in the Xenomai domain as returning from schedule().

Tags

secondary-only, might-switch

References xnthread_current().

Initialize a new thread.

Initializes a new thread. The thread is left dormant until it is actually started by xnthread start().

Parameters

thread

The address of a thread descriptor Cobalt will use to store the thread-specific data. This descriptor must always be valid while the thread is active therefore it must be allocated in permanent memory.

Warning

Some architectures may require the descriptor to be properly aligned in memory; this is an additional reason for descriptors not to be laid in the program stack where alignement constraints might not always be satisfied.

Parameters

attı

A pointer to an attribute block describing the initial properties of the new thread. Members of this structure are defined as follows:

 name: An ASCII string standing for the symbolic name of the thread. This name is copied to a safe place into the thread descriptor. This name might be used in various situations by Cobalt for

issuing human-readable diagnostic messages, so it is usually a good idea to provide a sensible value here. NULL is fine though and means "anonymous".

- flags: A set of creation flags affecting the operation. The following flags can be part of this bitmask:
 - XNSUSP creates the thread in a suspended state. In such a case, the thread shall be explicitly resumed using the xnthread_resume() service for its execution to actually begin, additionally to issuing xnthread_start() for it. This flag can also be specified when invoking xnthread_ ⇒ start() as a starting mode.
- XNUSER shall be set if *thread* will be mapped over an existing user-space task. Otherwise, a new kernel host task is created, then paired with the new Xenomai thread.
- XNFPU (enable FPU) tells Cobalt that the new thread may use the floating-point unit. XNFPU is implicitly assumed for user-space threads even if not set in *flags*.
- affinity: The processor affinity of this thread. Passing CPU_MASK_ALL means "any cpu" from the allowed core affinity mask (cobalt_cpu_affinity). Passing an empty set is invalid.

Parameters

sched_class	The initial scheduling class the new thread should be assigned to.
sched_param	The initial scheduling parameters to set for the new thread; sched_param must be valid within the context of sched_class.

Returns

0 is returned on success. Otherwise, the following error code indicates the cause of the failure:

• -EINVAL is returned if attr->flags has invalid bits set, or attr->affinity is invalid (e.g. empty).

Tags

secondary-only

References XNFPU, XNSUSP, and XNUSER.

Join with a terminated thread.

This service waits for *thread* to terminate after a call to xnthread_cancel(). If that thread has already terminated or is dormant at the time of the call, then xnthread_join() returns immediately.

xnthread_join() adapts to the calling context (primary or secondary), switching to secondary mode if needed for the duration of the wait. Upon return, the original runtime mode is restored, unless a Linux signal is pending.

Parameters

thread	The descriptor address of the thread to join with.	
uninterruptible	Boolean telling whether the service should wait for completion uninterruptible.	

Returns

0 is returned on success. Otherwise, the following error codes indicate the cause of the failure:

- -EDEADLK is returned if the current thread attempts to join itself.
- -EINTR is returned if the current thread was unblocked while waiting for thread to terminate.
- -EBUSY indicates that another thread is already waiting for thread to terminate.

Tags

task-unrestricted, might-switch

References xnthread current().

Referenced by rtdm_task_join().

```
6.43.2.7 xnthread_map()
```

Create a shadow thread context over a kernel task.

This call maps a Cobalt core thread to the "current" Linux task running in kernel space. The priority and scheduling class of the underlying Linux task are not affected; it is assumed that the caller did set them appropriately before issuing the shadow mapping request.

This call immediately moves the calling kernel thread to the Xenomai domain.

thread	The descriptor address of the new shadow thread to be mapped to "current". This descriptor must have been previously initialized by a call to xnthread_init().
done	A completion object to be signaled when <i>thread</i> is fully mapped over the current Linux context, waiting for xnthread_start().

Returns

0 is returned on success. Otherwise:

• -ERESTARTSYS is returned if the current Linux task has received a signal, thus preventing the final migration to the Xenomai domain (i.e. in order to process the signal in the Linux domain). This error should not be considered as fatal.

- -EPERM is returned if the shadow thread has been killed before the current task had a chance to return to the caller. In such a case, the real-time mapping operation has failed globally, and no Xenomai resource remains attached to it.
- -EINVAL is returned if the thread control block bears the XNUSER bit.
- -EBUSY is returned if either the current Linux task or the associated shadow thread is already involved in a shadow mapping.

Tags

secondary-only, might-switch

Migrate the current thread.

This call makes the current thread migrate to another (real-time) CPU if its affinity allows it. This call is available from primary mode only.

Parameters

Return values

0	if the thread could migrate;
-EPERM	if the calling context is invalid, or the scheduler is locked.
-EINVAL	if the current thread affinity forbids this migration.

Tags

primary-only, might-switch

Switch a shadow thread back to the Linux domain.

This service yields the control of the running shadow back to Linux. This is obtained by suspending the shadow and scheduling a wake up call for the mated user task inside the Linux domain. The Linux task will resume on return from xnthread suspend() on behalf of the root thread.

Parameters

notify	A boolean flag indicating whether threads monitored from secondary mode switches should be sent a SIGDEBUG signal. For instance, some internal operations like task exit should not trigger such signal.
reason	The reason to report along with the SIGDEBUG signal.

Tags

primary-only, might-switch

Note

"current" is valid here since the shadow runs with the properties of the Linux task.

References splmax, and xnthread_current().

Resume a thread.

Resumes the execution of a thread previously suspended by one or more calls to xnthread_suspend(). This call removes a suspensive condition affecting the target thread. When all suspensive conditions are gone, the thread is left in a READY state at which point it becomes eligible anew for scheduling.

thread	The descriptor address of the resumed thread.
mask	The suspension mask specifying the suspensive condition to remove from the thread's wait mask. Possible values usable by the caller are:

• XNSUSP. This flag removes the explicit suspension condition. This condition might be additive to the XNPEND condition.

- XNDELAY. This flag removes the counted delay wait condition.
- XNPEND. This flag removes the resource wait condition. If a watchdog is armed, it is automatically
 disarmed by this call. Unlike the two previous conditions, only the current thread can set this
 condition for itself, i.e. no thread can force another one to pend on a resource.

When the thread is eventually resumed by one or more calls to xnthread_resume(), the caller of xnthread_suspend() in the awakened thread that suspended itself should check for the following bits in its own information mask to determine what caused its wake up:

- XNRMID means that the caller must assume that the pended synchronization object has been destroyed (see xnsynch_flush()).
- XNTIMEO means that the delay elapsed, or the watchdog went off before the corresponding synchronization object was signaled.
- XNBREAK means that the wait has been forcibly broken by a call to xnthread_unblock().

Tags

unrestricted, might-switch

Change control mode of the current thread.

Change the control mode of the current thread. The control mode affects several behaviours of the Cobalt core regarding this thread.

scheduler lock held by the current thread can be forcibly releas	Clears the corresponding bits from the control mode before setmask is applied. The scheduler lock held by the current thread can be forcibly released by passing the XNLOCK bit in this mask. In this case, the lock nesting count is also reset to zero.
setmask	The new thread mode. The following flags may be set in this bitmask:

- XNLOCK makes the current thread non-preemptible by other threads. Unless XNTRAPLB is also set for the thread, the latter may still block, dropping the lock temporarily, in which case, the lock will be reacquired automatically when the thread resumes execution.
- XNWARN enables debugging notifications for the current thread. A SIGDEBUG (Linux-originated) signal is sent when the following atypical or abnormal behavior is detected:

the current thread switches to secondary mode. Such notification comes in handy for detecting spurious relaxes.

- CONFIG_XENO_OPT_DEBUG_MUTEX_RELAXED is enabled in the kernel configuration, and the current thread is sleeping on a Cobalt mutex currently owned by a thread running in secondary mode, which reveals a priority inversion.
- the current thread is about to sleep while holding a Cobalt mutex, and CONFIG_XENO_O

 PT_DEBUG_MUTEX_SLEEP is enabled in the kernel configuration. Blocking for acquiring a mutex does not trigger such a signal though.
- the current thread has both XNTRAPLB and XNLOCK set, and attempts to block on a Cobalt service, which would cause a lock break.
- XNTRAPLB disallows breaking the scheduler lock. In the default case, a thread which holds the scheduler lock is allowed to drop it temporarily for sleeping. If this mode bit is set, such thread would return immediately with XNBREAK set from xnthread_suspend(). If XNWARN is set for the current thread, SIGDEBUG is sent in addition to raising the break condition.

Tags

primary-only, might-switch

Note

Setting *clrmask* and *setmask* to zero leads to a nop, in which case xnthread_set_mode() returns the current mode.

Make a thread periodic.

Make a thread periodic by programming its first release point and its period in the processor time line. Subsequent calls to xnthread_wait_period() will delay the thread until the next periodic release point in the processor timeline is reached.

Parameters

thread	The core thread to make periodic. If NULL, the current thread is assumed.
idate	The initial (absolute) date of the first release point, expressed in nanoseconds. The affected thread will be delayed by the first call to xnthread_wait_period() until this point is reached. If <i>idate</i> is equal to XN_INFINITE, the first release point is set to <i>period</i> nanoseconds after the current date. In the latter case, <i>timeout_mode</i> is not considered and can have any valid value.
timeout_mode	The mode of the <i>idate</i> parameter. It can either be set to XN_ABSOLUTE or XN_REALTIME with <i>idate</i> different from XN_INFINITE (see also xntimer_start()).
period	The period of the thread, expressed in nanoseconds. As a side-effect, passing XN_INFINITE attempts to stop the thread's periodic timer; in the latter case, the routine always exits succesfully, regardless of the previous state of this timer.

Generated by Doxygen

Returns

0 is returned upon success. Otherwise:

• -ETIMEDOUT is returned idate is different from XN_INFINITE and represents a date in the past.

- -EINVAL is returned if period is different from XN_INFINITE but shorter than the scheduling latency value for the target system, as available from /proc/xenomai/latency. -EINVAL is also returned if timeout_mode is not compatible with idate, such as XN_RELATIVE with idate different from XN\ightharpoonup INFINITE.
- -EPERM is returned if thread is NULL, but the caller is not a Xenomai thread.

Tags

task-unrestricted

References xnsched::cpu, and xnthread current().

```
6.43.2.13 xnthread_set_schedparam()
```

Change the base scheduling parameters of a thread.

Changes the base scheduling policy and paramaters of a thread. If the thread is currently blocked, waiting in priority-pending mode (XNSYNCH_PRIO) for a synchronization object to be signaled, Cobalt will attempt to reorder the object's wait queue so that it reflects the new sleeper's priority, unless the XNSYNCH_DREORD flag has been set for the pended object.

Parameters

thread	The descriptor address of the affected thread. See note.
sched_class	The new scheduling class the thread should be assigned to.
sched_param	The scheduling parameters to set for the thread; <i>sched_param</i> must be valid within the context of <i>sched_class</i> .

It is absolutely required to use this service to change a thread priority, in order to have all the needed housekeeping chores correctly performed. i.e. Do *not* call xnsched_set_policy() directly or worse, change the thread.cprio field by hand in any case.

Returns

0 is returned on success. Otherwise, a negative error code indicates the cause of a failure that happened in the scheduling class implementation for *sched_class*. Invalid parameters passed into *sched_param* are common causes of error.

Side effects

• This service does not call the rescheduling procedure but may affect the state of the runnable queue for the previous and new scheduling classes.

• Assigning the same scheduling class and parameters to a running or ready thread moves it to the end of the runnable queue, thus causing a manual round-robin.

Tags

task-unregistred

Note

The changes only apply to the Xenomai scheduling parameters for *thread*. There is no propagation/translation of such changes to the Linux scheduler for the task mated to the Xenomai target thread.

Set thread time-slicing information.

Update the time-slicing information for a given thread. This service enables or disables round-robin scheduling for the thread, depending on the value of *quantum*. By default, times-slicing is disabled for a new thread initialized by a call to xnthread init().

Parameters

thread	The descriptor address of the affected thread.
quantum	The time quantum assigned to the thread expressed in nanoseconds. If <i>quantum</i> is different from XN_INFINITE, the time-slice for the thread is set to that value and its current time credit is refilled (i.e. the thread is given a full time-slice to run next). Otherwise, if <i>quantum</i> equals XN_INFINITE, time-slicing is stopped for that thread.

Returns

0 is returned upon success. Otherwise, -EINVAL is returned if quantum is not XN_INFINITE and:

- the base scheduling class of the target thread does not support time-slicing,
- quantum is smaller than the master clock gravity for a user thread, which denotes a spurious value.

Tags

task-unrestricted

Start a newly created thread.

Starts a (newly) created thread, scheduling it for the first time. This call releases the target thread from the XNDORMANT state. This service also sets the initial mode for the new thread.

Parameters

thread	The descriptor address of the started thread which must have been previously initialized by a call to xnthread_init().
attr	A pointer to an attribute block describing the execution properties of the new thread.
	Members of this structure are defined as follows:

- mode: The initial thread mode. The following flags can be part of this bitmask:
 - XNLOCK causes the thread to lock the scheduler when it starts. The target thread will have
 to call the xnsched_unlock() service to unlock the scheduler. A non-preemptible thread may
 still block, in which case, the lock is reasserted when the thread is scheduled back in.
 - XNSUSP makes the thread start in a suspended state. In such a case, the thread will have to be explicitly resumed using the xnthread_resume() service for its execution to actually begin.
- entry: The address of the thread's body routine. In other words, it is the thread entry point.
- cookie: A user-defined opaque cookie Cobalt will pass to the emerging thread as the sole argument of its entry point.

Return values

0	if thread could be started;
-EBUSY	if thread was not dormant or stopped;

Tags

task-unrestricted, might-switch

```
6.43.2.16 xnthread_suspend()
```

Suspend a thread.

Suspends the execution of a thread according to a given suspensive condition. This thread will not be eligible for scheduling until it all the pending suspensive conditions set by this service are removed by one or more calls to xnthread_resume().

Parameters

thread	The descriptor address of the suspended thread.
mask	The suspension mask specifying the suspensive condition to add to the thread's wait mask. Possible values usable by the caller are:

- XNSUSP. This flag forcibly suspends a thread, regardless of any resource to wait for. A reverse call
 to xnthread_resume() specifying the XNSUSP bit must be issued to remove this condition, which is
 cumulative with other suspension bits.wchan should be NULL when using this suspending mode.
- XNDELAY. This flags denotes a counted delay wait (in ticks) which duration is defined by the value of the timeout parameter.
- XNPEND. This flag denotes a wait for a synchronization object to be signaled. The wchan argument must points to this object. A timeout value can be passed to bound the wait. This suspending mode should not be used directly by the client interface, but rather through the xnsynch_sleep_on() call.

Parameters

timeout	The timeout which may be used to limit the time the thread pends on a resource. This
	value is a wait time given in nanoseconds. It can either be relative, absolute monotonic, or
	absolute adjustable depending on timeout_mode.

Passing XN_INFINITE **and** setting *timeout_mode* to XN_RELATIVE specifies an unbounded wait. All other values are used to initialize a watchdog timer. If the current operation mode of the system timer is oneshot and *timeout* elapses before xnthread_suspend() has completed, then the target thread will not be suspended, and this routine leads to a null effect.

Parameters

timeout_mode	The mode of the <i>timeout</i> parameter. It can either be set to XN_RELATIVE, XN_ABSOLUTE, or XN_REALTIME (see also xntimer_start()).
wchan	The address of a pended resource. This parameter is used internally by the synchronization object implementation code to specify on which object the suspended thread pends. NULL is a legitimate value when this parameter does not apply to the current suspending mode (e.g. XNSUSP).

Note

If the target thread has received a Linux-originated signal, then this service immediately exits without suspending the thread, but raises the XNBREAK condition in its information mask.

Tags

unrestricted, might-switch

```
6.43.2.17 xnthread_test_cancel()

void xnthread_test_cancel (
```

void) [inline], [static]

Introduce a thread cancellation point.

Terminates the current thread if a cancellation request is pending for it, i.e. if xnthread_cancel() was called.

Tags

mode-unrestricted

References xnthread_current().

Unblock a thread.

Breaks the thread out of any wait it is currently in. This call removes the XNDELAY and XNPEND suspensive conditions previously put by xnthread_suspend() on the target thread. If all suspensive conditions are gone, the thread is left in a READY state at which point it becomes eligible anew for scheduling.

Parameters

thread The descriptor address of the unblocked thread.

This call neither releases the thread from the XNSUSP, XNRELAX, XNDORMANT or XNHELD suspensive conditions.

When the thread resumes execution, the XNBREAK bit is set in the unblocked thread's information mask. Unblocking a non-blocked thread is perfectly harmless.

Returns

non-zero is returned if the thread was actually unblocked from a pending wait state, 0 otherwise.

Tags

unrestricted, might-switch

```
6.43.2.19 xnthread_wait_period()
```

```
int xnthread_wait_period (
          unsigned long * overruns_r )
```

Wait for the next periodic release point.

Make the current thread wait for the next periodic release point in the processor time line.

Parameters

If non-NULL, overruns_r must be a pointer to a memory location which will be written
with the count of pending overruns. This value is copied only when
xnthread_wait_period() returns -ETIMEDOUT or success; the memory location
remains unmodified otherwise. If NULL, this count will never be copied back.

Returns

0 is returned upon success; if *overruns_r* is valid, zero is copied to the pointed memory location. Otherwise:

- -EWOULDBLOCK is returned if xnthread_set_periodic() has not previously been called for the calling thread.
- -EINTR is returned if xnthread_unblock() has been called for the waiting thread before the next periodic release point has been reached. In this case, the overrun counter is reset too.
- -ETIMEDOUT is returned if the timer has overrun, which indicates that one or more previous release points have been missed by the calling thread. If *overruns_r* is valid, the count of pending overruns is copied to the pointed memory location.

Tags

primary-only, might-switch

References xnthread_current().

6.44 Timer services 271

6.44 Timer services

The Xenomai timer facility depends on a clock source (xnclock) for scheduling the next activation times. Collaboration diagram for Timer services:



Functions

void xntimer_destroy (struct xntimer *timer)

Release a timer object.

static xnticks_t xntimer_interval (struct xntimer *timer)

Return the timer interval value.

• int xntimer_start (struct xntimer *timer, xnticks_t value, xnticks_t interval, xntmode_t mode)

Arm a timer.

xnticks_t xntimer_get_date (struct xntimer *timer)

Return the absolute expiration date.

• static void xntimer_stop (struct xntimer *timer)

Disarm a timer.

static xnticks_t xntimer_get_timeout (struct xntimer *timer)

Return the relative expiration date.

 void xntimer_init (struct xntimer *timer, struct xnclock *clock, void(*handler)(struct xntimer *timer), struct xnsched *sched, int flags)

Initialize a timer object.

void __xntimer_migrate (struct xntimer *timer, struct xnsched *sched)

Migrate a timer.

• unsigned long long xntimer get overruns (struct xntimer *timer, xnticks t now)

Get the count of overruns for the last tick.

• static int program_htick_shot (unsigned long delay, struct clock_event_device *cdev)

Program next host tick as a Xenomai timer event.

static void switch_htick_mode (enum clock_event_mode mode, struct clock_event_device *cdev)

Tick mode switch emulation callback.

int xntimer_grab_hardware (void)

Grab the hardware timer on all real-time CPUs.

• void xntimer_release_hardware (void)

Release hardware timers.

6.44.1 Detailed Description

The Xenomai timer facility depends on a clock source (xnclock) for scheduling the next activation times.

The core provides and depends on a monotonic clock source (nkclock) with nanosecond resolution, driving the platform timer hardware exposed by the interrupt pipeline.

6.44.2 Function Documentation

Migrate a timer.

This call migrates a timer to another cpu. In order to avoid pathological cases, it must be called from the CPU to which *timer* is currently attached.

Parameters

timer	The address of the timer object to be migrated.
sched	The address of the destination per-CPU scheduler slot.

Tags

unrestricted, atomic-entry

```
6.44.2.2 program_htick_shot()

static int program_htick_shot (
          unsigned long delay,
          struct clock_event_device * cdev ) [static]
```

Program next host tick as a Xenomai timer event.

Program the next shot for the host tick on the current CPU. Emulation is done using a nucleus timer attached to the master timebase.

Parameters

delay	The time delta from the current date to the next tick, expressed as a count of nanoseconds.
cdev	An pointer to the clock device which notifies us.

Tags

unrestricted

6.44 Timer services 273

Tick mode switch emulation callback.

Changes the host tick mode for the tick device of the current CPU.

Parameters

```
mode The new mode to switch to. The possible values are:
```

- CLOCK_EVT_MODE_ONESHOT, for a switch to oneshot mode.
- CLOCK_EVT_MODE_PERIODIC, for a switch to periodic mode. The current implementation for the generic clockevent layer Linux exhibits should never downgrade from a oneshot to a periodic tick mode, so this mode should not be encountered. This said, the associated code is provided, basically for illustration purposes.
- CLOCK_EVT_MODE_SHUTDOWN, indicates the removal of the current tick device. Normally, the
 nucleus only interposes on tick devices which should never be shut down, so this mode should not
 be encountered.

Parameters

cdev An opaque pointer to the clock device which notifies us.

Tags

unrestricted

Note

GENERIC CLOCKEVENTS is required from the host kernel.

Release a timer object.

Destroys a timer. After it has been destroyed, all resources associated with the timer have been released. The timer is automatically deactivated before deletion if active on entry.

Parameters

timer	The address of a valid timer descriptor.
-------	--

Tags

unrestricted

Return the absolute expiration date.

Return the next expiration date of a timer as an absolute count of nanoseconds.

Parameters

timer The address of a valid timer descriptor	r.
---	----

Returns

The expiration date in nanoseconds. The special value XN_INFINITE is returned if *timer* is currently disabled.

Tags

unrestricted, atomic-entry

Get the count of overruns for the last tick.

This service returns the count of pending overruns for the last tick of a given timer, as measured by the difference between the expected expiry date of the timer and the date *now* passed as argument.

timer	The address of a valid timer descriptor.
now	<pre>current date (as xnclock_read_raw(xntimer_clock(timer)))</pre>

6.44 Timer services 275

Returns

the number of overruns of timer at date now

Tags

unrestricted, atomic-entry

Return the relative expiration date.

This call returns the count of nanoseconds remaining until the timer expires.

Parameters

timer The address of a valid timer descriptor.

Returns

The count of nanoseconds until expiry. The special value XN_INFINITE is returned if *timer* is currently disabled. It might happen that the timer expires when this service runs (even if the associated handler has not been fired yet); in such a case, 1 is returned.

Tags

unrestricted, atomic-entry

Grab the hardware timer on all real-time CPUs.

xntimer_grab_hardware() grabs and tunes the hardware timer for all real-time CPUs.

Host tick emulation is performed for sharing the clock chip between Linux and Xenomai.

Returns

a positive value is returned on success, representing the duration of a Linux periodic tick expressed as a count of nanoseconds; zero should be returned when the Linux kernel does not undergo periodic timing on the given CPU (e.g. oneshot mode). Otherwise:

- -EBUSY is returned if the hardware timer has already been grabbed. xntimer_release_hardware() must be issued before xntimer_grab_hardware() is called again.
- -ENODEV is returned if the hardware timer cannot be used. This situation may occur after the kernel disabled the timer due to invalid calibration results; in such a case, such hardware is unusable for any timing duties.

Tags

```
secondary-only
```

References xnsched::cpu, and xnintr_init().

Initialize a timer object.

Creates a timer. When created, a timer is left disarmed; it must be started using xntimer_start() in order to be activated.

Parameters

timer	The address of a timer descriptor the nucleus will use to store the object-specific data. This descriptor must always be valid while the object is active therefore it must be allocated in permanent memory.
clock	The clock the timer relates to. Xenomai defines a monotonic system clock, with nanosecond resolution, named nkclock. In addition, external clocks driven by other tick sources may be created dynamically if CONFIG_XENO_OPT_EXTCLOCK is defined.
handler	The routine to call upon expiration of the timer.
sched	An optional pointer to the per-CPU scheduler slot the new timer is affine to. If non-NULL, the timer will fire on the CPU <i>sched</i> is bound to, otherwise it will fire either on the current CPU if real-time, or on the first real-time CPU.
flags	A set of flags describing the timer. The valid flags are:

XNTIMER_NOBLCK, the timer won't be frozen while GDB takes over control of the application.

A set of clock gravity hints can be passed via the *flags* argument, used for optimizing the built-in heuristics aimed at latency reduction:

6.44 Timer services 277

- XNTIMER_IGRAVITY, the timer activates a leaf timer handler.
- XNTIMER_KGRAVITY, the timer activates a kernel thread.
- XNTIMER_UGRAVITY, the timer activates a user-space thread.

There is no limitation on the number of timers which can be created/active concurrently.

Tags

unrestricted

Return the timer interval value.

Return the timer interval value in nanoseconds.

Parameters

```
timer The address of a valid timer descriptor.
```

Returns

The duration of a period in nanoseconds. The special value XN_INFINITE is returned if *timer* is currently disabled or one shot.

Tags

unrestricted, atomic-entry

```
6.44.2.11 xntimer_release_hardware()

void xntimer_release_hardware (

void )
```

Release hardware timers.

Releases hardware timers previously grabbed by a call to xntimer_grab_hardware().

Tags

secondary-only

References xnsched::cpu.

Arm a timer.

Activates a timer so that the associated timeout handler will be fired after each expiration time. A timer can be either periodic or one-shot, depending on the reload value passed to this routine. The given timer must have been previously initialized.

A timer is attached to the clock specified in xntimer_init().

Parameters

timer	The address of a valid timer descriptor.
value	The date of the initial timer shot, expressed in nanoseconds.
interval	The reload value of the timer. It is a periodic interval value to be used for reprogramming the next timer shot, expressed in nanoseconds. If <i>interval</i> is equal to XN_INFINITE, the timer will not be reloaded after it has expired.
mode	The timer mode. It can be XN_RELATIVE if <i>value</i> shall be interpreted as a relative date, XN_ABSOLUTE for an absolute date based on the monotonic clock of the related time base (as returned my xnclock_read_monotonic()), or XN_REALTIME if the absolute date is based on the adjustable real-time date for the relevant clock (obtained from xnclock_read_realtime()).

Returns

0 is returned upon success, or -ETIMEDOUT if an absolute date in the past has been given. In such an event, the timer is nevertheless armed for the next shot in the timeline if *interval* is different from XN_INFINITE.

Tags

unrestricted, atomic-entry

Disarm a timer.

This service deactivates a timer previously armed using xntimer_start(). Once disarmed, the timer can be subsequently re-armed using the latter service.

6.44 Timer services 279

Parameters

timer The address of a valid timer descriptor.
--


Tags

unrestricted, atomic-entry

6.45 Virtual file services

Virtual files provide a mean to export Xenomai object states to user-space, based on common kernel interfaces.

Collaboration diagram for Virtual file services:



Data Structures

• struct xnvfile_lock_ops

Vfile locking operations.

struct xnvfile_regular_ops

Regular vfile operation descriptor.

struct xnvfile_regular_iterator

Regular vfile iterator.

struct xnvfile_snapshot_ops

Snapshot vfile operation descriptor.

struct xnvfile_rev_tag

Snapshot revision tag.

struct xnvfile_snapshot

Snapshot vfile descriptor.

struct xnvfile_snapshot_iterator

Snapshot-driven vfile iterator.

Functions

• int xnvfile_init_snapshot (const char *name, struct xnvfile_snapshot *vfile, struct xnvfile_directory *parent)

Initialize a snapshot-driven vfile.

• int xnvfile_init_regular (const char *name, struct xnvfile_regular *vfile, struct xnvfile_directory *parent)

Initialize a regular vfile.

- int xnvfile_init_dir (const char *name, struct xnvfile_directory *vdir, struct xnvfile_directory *parent)

 Initialize a virtual directory entry.
- int xnvfile_init_link (const char *from, const char *to, struct xnvfile_link *vlink, struct xnvfile_
 directory *parent)

Initialize a virtual link entry.

void xnvfile_destroy (struct xnvfile *vfile)

Removes a virtual file entry.

• ssize_t xnvfile_get_blob (struct xnvfile_input *input, void *data, size_t size)

Read in a data bulk written to the vfile.

• ssize_t xnvfile_get_string (struct xnvfile_input *input, char *s, size_t maxlen)

Read in a C-string written to the vfile.

• ssize_t xnvfile_get_integer (struct xnvfile_input *input, long *valp)

Evaluate the string written to the vfile as a long integer.

6.45 Virtual file services 281

Variables

struct xnvfile_directory cobalt_vfroot
 Xenomai vfile root directory.

 struct xnvfile directory cobalt vfroot

Xenomai vfile root directory.

6.45.1 Detailed Description

Virtual files provide a mean to export Xenomai object states to user-space, based on common kernel interfaces.

This encapsulation is aimed at:

- supporting consistent collection of very large record-based output, without encurring latency peaks for undergoing real-time activities.
- in the future, hiding discrepancies between linux kernel releases, regarding the proper way to export kernel object states to userland, either via the /proc interface or by any other mean.

This virtual file implementation offers record-based read support based on seq_files, single-buffer write support, directory and link handling, all visible from the /proc namespace.

The vfile support exposes four filesystem object types:

 snapshot-driven file (struct xnvfile_snapshot). This is commonly used to export real-time object states via the /proc filesystem. To minimize the latency involved in protecting the vfile routines from changes applied by real-time code on such objects, a snapshot of the data to output is first taken under proper locking, before the collected data is formatted and sent out in a lockless manner.

Because a large number of records may have to be output, the data collection phase is not strictly atomic as a whole, but only protected at record level. The vfile implementation can be notified of updates to the underlying data set, and restart the collection from scratch until the snapshot is fully consistent.

- regular sequential file (struct xnvfile_regular). This is basically an encapsulated sequential file
 object as available from the host kernel (i.e. seq_file), with a few additional features to make it
 more handy in a Xenomai environment, like implicit locking support and shortened declaration for
 simplest, single-record output.
- virtual link (struct xnvfile_link). This is a symbolic link feature integrated with the vfile semantics. The link target is computed dynamically at creation time from a user-given helper routine.
- virtual directory (struct xnvfile_directory). A directory object, which can be used to create a hierarchy for ordering a set of vfile objects.

6.45.2 Function Documentation

Removes a virtual file entry.

Parameters

vfile A pointer to the virtual file descriptor to remove
--

Tags

secondary-only

Read in a data bulk written to the vfile.

When writing to a vfile, the associated store() handler from the snapshot-driven vfile or regular vfile is called, with a single argument describing the input data. xnvfile_get_blob() retrieves this data as an untyped binary blob, and copies it back to the caller's buffer.

Parameters

input	A pointer to the input descriptor passed to the store() handler.	
data	The address of the destination buffer to copy the input data to.	
size	The maximum number of bytes to copy to the destination buffer. If <i>size</i> is larger than the actual data size, the input is truncated to <i>size</i> .	

Returns

The number of bytes read and copied to the destination buffer upon success. Otherwise, a negative error code is returned:

• -EFAULT indicates an invalid source buffer address.

Tags

secondary-only

Referenced by xnvfile_get_integer(), and xnvfile_get_string().

6.45 Virtual file services 283

Evaluate the string written to the vfile as a long integer.

When writing to a vfile, the associated store() handler from the snapshot-driven vfile or regular vfile is called, with a single argument describing the input data. xnvfile_get_integer() retrieves and interprets this data as a long integer, and copies the resulting value back to *valp*.

The long integer can be expressed in decimal, octal or hexadecimal bases depending on the prefix found.

Parameters

input	A pointer to the input descriptor passed to the store() handler.	
valp	The address of a long integer variable to receive the value.	

Returns

The number of characters read while evaluating the input as a long integer upon success. Otherwise, a negative error code is returned:

- -EINVAL indicates a parse error on the input stream; the written text cannot be evaluated as a long integer.
- -EFAULT indicates an invalid source buffer address.

Tags

secondary-only

References xnvfile_get_blob().

Read in a C-string written to the vfile.

When writing to a vfile, the associated store() handler from the snapshot-driven vfile or regular vfile is called, with a single argument describing the input data. xnvfile_get_string() retrieves this data as a null-terminated character string, and copies it back to the caller's buffer.

Parameters

input	A pointer to the input descriptor passed to the store() handler.	
s	The address of the destination string buffer to copy the input data to.	
maxlen	The maximum number of bytes to copy to the destination buffer, including the ending null character. If <i>maxlen</i> is larger than the actual string length, the input is truncated to <i>maxlen</i> .	

Returns

The number of characters read upon success. Otherwise, a negative error code is returned:

• -EFAULT indicates an invalid source buffer address.

Tags

```
secondary-only
```

References xnvfile_get_blob().

Initialize a virtual directory entry.

Parameters

name	The name which should appear in the pseudo-filesystem, identifying the vdir entry.	
vdir	A pointer to the virtual directory descriptor to initialize.	
parent	A pointer to a virtual directory descriptor standing for the parent directory of the new vdir. If NULL, the /proc root directory will be used. /proc/xenomai is mapped on the globally available <i>cobalt_vfroot</i> vdir.	

Returns

0 is returned on success. Otherwise:

• -ENOMEM is returned if the virtual directory entry cannot be created in the /proc hierarchy.

Tags

secondary-only

6.45 Virtual file services 285

Initialize a virtual link entry.

Parameters

from	The name which should appear in the pseudo-filesystem, identifying the vlink entry.	
to	The target file name which should be referred to symbolically by name.	
vlink	A pointer to the virtual link descriptor to initialize.	
parent	A pointer to a virtual directory descriptor standing for the parent directory of the new vlink. If NULL, the /proc root directory will be used. /proc/xenomai is mapped on the globally available <i>cobalt_vfroot</i> vdir.	

Returns

0 is returned on success. Otherwise:

• -ENOMEM is returned if the virtual link entry cannot be created in the /proc hierarchy.

Tags

secondary-only

Initialize a regular vfile.

Parameters

name	The name which should appear in the pseudo-filesystem, identifying the vfile entry.	
vfile	A pointer to a vfile descriptor to initialize from. The following fields in this structure should be filled in prior to call this routine:	

• .privsz is the size (in bytes) of the private data area to be reserved in the vfile iterator. A NULL value indicates that no private area should be reserved.

• entry.lockops is a pointer to a lockingdescriptor", defining the lock and unlock operations for the vfile. This pointer may be left to NULL, in which case no locking will be applied.

.ops is a pointer to an operation descriptor.

Parameters

parent	A pointer to a virtual directory descriptor; the vfile entry will be created into this directory. If
	NULL, the /proc root directory will be used. /proc/xenomai is mapped on the globally
	available cobalt_vfroot vdir.

Returns

0 is returned on success. Otherwise:

• -ENOMEM is returned if the virtual file entry cannot be created in the /proc hierarchy.

Tags

secondary-only

Initialize a snapshot-driven vfile.

Parameters

name	The name which should appear in the pseudo-filesystem, identifying the vfile entry.
vfile	A pointer to a vfile descriptor to initialize from. The following fields in this structure should be filled in prior to call this routine:

- .privsz is the size (in bytes) of the private data area to be reserved in the vfile iterator. A NULL value indicates that no private area should be reserved.
- .datasz is the size (in bytes) of a single record to be collected by the next() handler from the operation descriptor.
- .tag is a pointer to a mandatory vfile revision tag structure (struct xnvfile_rev_tag). This tag will be
 monitored for changes by the vfile core while collecting data to output, so that any update detected
 will cause the current snapshot data to be dropped, and the collection to restart from the beginning.
 To this end, any change to the data which may be part of the collected records, should also invoke
 xnvfile_touch() on the associated tag.

6.45 Virtual file services 287

• entry.lockops is a pointer to a lock descriptor, defining the lock and unlock operations for the vfile. This pointer may be left to NULL, in which case the operations on the nucleus lock (i.e. nklock) will be used internally around calls to data collection handlers (see operation descriptor).

• .ops is a pointer to an operation descriptor.

Parameters

parent	A pointer to a virtual directory descriptor; the vfile entry will be created into this directory. If
	NULL, the /proc root directory will be used. /proc/xenomai is mapped on the globally
	available <i>cobalt_vfroot</i> vdir.

Returns

0 is returned on success. Otherwise:

• -ENOMEM is returned if the virtual file entry cannot be created in the /proc hierarchy.

Tags

secondary-only

6.45.3 Variable Documentation

6.45.3.1 cobalt_vfroot [1/2]

struct xnvfile_directory cobalt_vfroot

Xenomai vfile root directory.

This vdir maps the /proc/xenomai directory. It can be used to create a hierarchy of Xenomai-related vfiles under this root.

6.45.3.2 cobalt_vfroot [2/2]

struct xnvfile_directory cobalt_vfroot


Xenomai vfile root directory.

This vdir maps the /proc/xenomai directory. It can be used to create a hierarchy of Xenomai-related vfiles under this root.

6.46 Analogy framework

A RTDM-based interface for implementing DAQ card drivers.

Collaboration diagram for Analogy framework:



Modules

- Driver API
 - Programming interface provided to DAQ card drivers.
- Analogy user API

6.46.1 Detailed Description


A RTDM-based interface for implementing DAQ card drivers.

6.47 Driver API 289

6.47 Driver API

Programming interface provided to DAQ card drivers.

Collaboration diagram for Driver API:

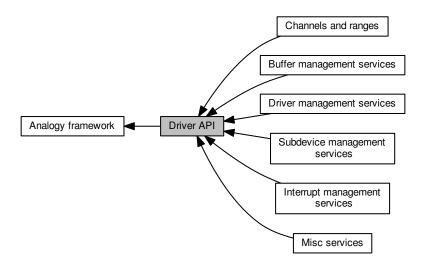

Modules

Channels and ranges

Channels.

• Driver management services

Analogy driver registration / unregistration.

- Subdevice management services
 - Subdevice declaration in a driver.
- Buffer management services
 - Buffer management services.
- Interrupt management services
- Misc services

6.47.1 Detailed Description

Programming interface provided to DAQ card drivers.

6.48 Driver management services

Analogy driver registration / unregistration.

Collaboration diagram for Driver management services:



Functions

- int a4l_register_drv (struct a4l_driver *drv)

 Register an Analogy driver.
- int a4l_unregister_drv (struct a4l_driver *drv)

 Unregister an Analogy driver.

6.48.1 Detailed Description

Analogy driver registration / unregistration.

In a common Linux char driver, the developer has to register a fops structure filled with callbacks for read / write / mmap / ioctl operations.

Analogy drivers do not have to implement read / write / mmap / ioctl functions, these procedures are implemented in the Analogy generic layer. Then, the transfers between user-space and kernel-space are already managed. Analogy drivers work with commands and instructions which are some kind of more dedicated read / write operations. And, instead of registering a fops structure, a Analogy driver must register some a4l_driver structure.

6.48.2 Function Documentation

Register an Analogy driver.

After initialising a driver structure, the driver must be made available so as to be attached.

Parameters

in	drv	Driver descriptor structure
----	-----	-----------------------------

Returns

0 on success, otherwise negative error code.

References a4l_driver::board_name.

Unregister an Analogy driver.

This function removes the driver descriptor from the Analogy driver list. The driver cannot be attached anymore.

Parameters

in a	<i>lrv</i> D	river descriptor structure
------	--------------	----------------------------

Returns

0 on success, otherwise negative error code.

References a4I_driver::board_name.

6.49 Subdevice management services

Subdevice declaration in a driver.

Collaboration diagram for Subdevice management services:



Functions

- struct a4l_subdevice * a4l_alloc_subd (int sizeof_priv, void(*setup)(struct a4l_subdevice *))
 Allocate a subdevice descriptor.
- int a4l_add_subd (struct a4l_device *dev, struct a4l_subdevice *subd)

Add a subdevice to the driver descriptor.

struct a4l_subdevice * a4l_get_subd (struct a4l_device *dev, int idx)
 Get a pointer to the subdevice descriptor referenced by its registration index.

Subdevices types

Flags to define the subdevice type

- #define A4L_SUBD_UNUSED (A4L_SUBD_MASK_SPECIAL|0x1)
 Unused subdevice.
- #define A4L_SUBD_AI (A4L_SUBD_MASK_READ|0x2)

Analog input subdevice.

#define A4L_SUBD_AO (A4L_SUBD_MASK_WRITE|0x4)

Analog output subdevice.

- #define A4L_SUBD_DI (A4L_SUBD_MASK_READ|0x8)
 Digital input subdevice.
- #define A4L_SUBD_DO (A4L_SUBD_MASK_WRITE|0x10)
- Digital output subdevice.#define A4L_SUBD_DIO (A4L_SUBD_MASK_SPECIAL|0x20)

Digital input/output subdevice.

- #define A4L_SUBD_COUNTER (A4L_SUBD_MASK_SPECIAL|0x40)
 Counter subdevice.
- #define A4L_SUBD_TIMER (A4L_SUBD_MASK_SPECIAL|0x80)
 Timer subdevice.
- #define A4L_SUBD_MEMORY (A4L_SUBD_MASK_SPECIAL|0x100)
 Memory, EEPROM, DPRAM.
- #define A4L_SUBD_CALIB (A4L_SUBD_MASK_SPECIAL|0x200)

Calibration subdevice DACs.

• #define A4L_SUBD_PROC (A4L_SUBD_MASK_SPECIAL|0x400)

Processor, DSP.

#define A4L_SUBD_SERIAL (A4L_SUBD_MASK_SPECIAL|0x800)

Serial IO subdevice.

#define A4L_SUBD_TYPES

Mask which gathers all the types.

Subdevice features

Flags to define the subdevice's capabilities

#define A4L SUBD CMD 0x1000

The subdevice can handle command (i.e it can perform asynchronous acquisition)

#define A4L SUBD MMAP 0x8000

The subdevice support mmap operations (technically, any driver can do it; however, the developer might want that his driver must be accessed through read / write.

Subdevice status

Flags to define the subdevice's status

#define A4L_SUBD_BUSY_NR 0

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

#define A4L_SUBD_BUSY (1 << A4L_SUBD_BUSY_NR)

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

#define A4L_SUBD_CLEAN_NR 1

The subdevice is about to be cleaned in the middle of the detach procedure.

#define A4L_SUBD_CLEAN (1 << A4L_SUBD_CLEAN_NR)

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

6.49.1 Detailed Description

Subdevice declaration in a driver.

The subdevice structure is the most complex one in the Analogy driver layer. It contains some description fields to fill and some callbacks to declare.

The description fields are:

- flags: to define the subdevice type and its capabilities;
- chan_desc: to describe the channels which compose the subdevice;
- rng_desc: to declare the usable ranges;

The functions callbakes are:

• do_cmd() and do_cmdtest(): to performe asynchronous acquisitions thanks to commands;

- cancel(): to abort a working asynchronous acquisition;
- munge(): to apply modifications on the data freshly acquired during an asynchronous transfer.
 Warning: using this feature with can significantly reduce the performances (if the munge operation is complex, it will trigger high CPU charge and if the acquisition device is DMA capable, many cache-misses and cache-replaces will occur (the benefits of the DMA controller will vanish);
- trigger(): optionnaly to launch an asynchronous acquisition;
- insn_read(), insn_write(), insn_bits(), insn_config(): to perform synchronous acquisition operations.

Once the subdevice is filled, it must be inserted into the driver structure thanks to a4l add subd().

6.49.2 Function Documentation

Add a subdevice to the driver descriptor.

Once the driver descriptor structure is initialized, the function a4l_add_subd() must be used so to add some subdevices to the driver.

Parameters

in	dev	Device descriptor structure
in	subd	Subdevice descriptor structure

Returns

the index with which the subdevice has been registered, in case of error a negative error code is returned.

References a4I subdevice::dev, a4I subdevice::idx, and a4I subdevice::list.

Allocate a subdevice descriptor.

This is a helper function so as to get a suitable subdevice descriptor

Parameters

in	sizeof_priv	Size of the subdevice's private data
in	setup	Setup function to be called after the allocation

Returns

the index with which the subdevice has been registered, in case of error a negative error code is returned.

References rtdm_malloc().

Get a pointer to the subdevice descriptor referenced by its registration index.

This function is scarcely useful as all the drivers callbacks get the related subdevice descriptor as first argument. This function is not optimized, it goes through a linked list to get the proper pointer. So it must not be used in real-time context but at initialization / cleanup time (attach / detach).

Parameters

in	dev	Device descriptor structure
in	idx	Subdevice index

Returns

0 on success, otherwise negative error code.

6.50 Buffer management services

Buffer management services.

Collaboration diagram for Buffer management services:



Functions

- int a4l_buf_prepare_absput (struct a4l_subdevice *subd, unsigned long count)
 - Update the absolute count of data sent from the device to the buffer since the start of the acquisition and after the next DMA shot.
- int a4l_buf_commit_absput (struct a4l_subdevice *subd, unsigned long count)
 - Set the absolute count of data which was sent from the device to the buffer since the start of the acquisition and until the last DMA shot.
- int a4l buf prepare put (struct a4l subdevice *subd, unsigned long count)
 - Set the count of data which is to be sent to the buffer at the next DMA shot.
- int a4l_buf_commit_put (struct a4l_subdevice *subd, unsigned long count)
 - Set the count of data sent to the buffer during the last completed DMA shots.
- int a4l_buf_put (struct a4l_subdevice *subd, void *bufdata, unsigned long count)
 - Copy some data from the device driver to the buffer.
- int a4l_buf_prepare_absget (struct a4l_subdevice *subd, unsigned long count)
 - Update the absolute count of data sent from the buffer to the device since the start of the acquisition and after the next DMA shot.
- int a4l buf commit absget (struct a4l subdevice *subd, unsigned long count)
 - Set the absolute count of data which was sent from the buffer to the device since the start of the acquisition and until the last DMA shot.
- int a4l_buf_prepare_get (struct a4l_subdevice *subd, unsigned long count)
 - Set the count of data which is to be sent from the buffer to the device at the next DMA shot.
- int a4l buf commit get (struct a4l subdevice *subd, unsigned long count)
 - Set the count of data sent from the buffer to the device during the last completed DMA shots.
- int a4l_buf_get (struct a4l_subdevice *subd, void *bufdata, unsigned long count)
 - Copy some data from the buffer to the device driver.
- int a4l_buf_evt (struct a4l_subdevice *subd, unsigned long evts)
 - Signal some event(s) to a user-space program involved in some read / write operation.
- unsigned long a4l_buf_count (struct a4l_subdevice *subd)
 - Get the data amount available in the Analogy buffer.
- struct a4l_cmd_desc * a4l_get_cmd (struct a4l_subdevice *subd)
 - Get the current Analogy command descriptor.
- int a4l_get_chan (struct a4l_subdevice *subd)
 - Get the channel index according to its type.

6.50.1 Detailed Description

Buffer management services.

The buffer is the key component of the Analogy infrastructure. It manages transfers between the userspace and the Analogy drivers thanks to generic functions which are described hereafter. Thanks to the buffer subsystem, the driver developer does not have to care about the way the user program retrieves or sends data.

To write a classical char driver, the developer has to fill a fops structure so as to provide transfer operations to the user program (read, write, ioctl and mmap if need be).

The Analogy infrastructure manages the whole interface with the userspace; the common read, write, mmap, etc. callbacks are generic Analogy functions. These functions manage (and perform, if need be) transfers between the user-space and an asynchronous buffer thanks to lockless mechanisms.

Consequently, the developer has to use the proper buffer functions in order to write / read acquired data into / from the asynchronous buffer.

Here are listed the functions:

- a4l_buf_prepare_(abs)put() and a4l_buf_commit_(abs)put()
- a4l_buf_prepare_(abs)get() and a4l_buf_commit_(abs)get()
- a4l_buf_put()
- a4l_buf_get()
- a4l_buf_evt().

The functions count might seem high; however, the developer needs a few of them to write a driver. Having so many functions enables to manage any transfer cases:

- If some DMA controller is available, there is no need to make the driver copy the acquired data into the asynchronous buffer, the DMA controller must directly trigger DMA shots into / from the buffer. In that case, a function a4l_buf_prepare_*() must be used so as to set up the DMA transfer and a function a4l_buf_commit_*() has to be called to complete the transfer().
- For DMA controllers which need to work with global counter (the transferred data count since the beginning of the acquisition), the functions a4l_buf_*_abs_*() have been made available.
- If no DMA controller is available, the driver has to perform the copy between the hardware component and the asynchronous buffer. In such cases, the functions a4l_buf_get() and a4l_buf_put() are useful.

6.50.2 Function Documentation

Set the absolute count of data which was sent from the buffer to the device since the start of the acquisition and until the last DMA shot.

The functions a4l_buf_prepare_(abs)put(), a4l_buf_commit_(abs)put(), a4l_buf_prepare_(abs)get() and a4l_buf_commit_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

Parameters

in	subd	Subdevice descriptor structure	
in	count	The data count transferred to the device during the last DMA shot plus the data count	
		which have been sent since the beginning of the acquisition	

Returns

0 on success, otherwise negative error code.

References A4L_SUBD_BUSY_NR, a4l_subdevice::buf, and a4l_subdevice::status.

Set the absolute count of data which was sent from the device to the buffer since the start of the acquisition and until the last DMA shot.

The functions a4l_buf_prepare_(abs)put(), a4l_buf_commit_(abs)put(), a4l_buf_prepare_(abs)get() and a4l_buf_commit_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

Parameters

in	subd	Subdevice descriptor structure
in	count	The data count transferred to the buffer during the last DMA shot plus the data count which have been sent / retrieved since the beginning of the acquisition

Returns

0 on success, otherwise negative error code.

References A4L SUBD BUSY NR, a4I subdevice::buf, and a4I subdevice::status.

Set the count of data sent from the buffer to the device during the last completed DMA shots.

The functions a4l_buf_prepare_(abs)put(), a4l_buf_commit_(abs)put(), a4l_buf_prepare_(abs)get() and a4l_buf_commit_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

Parameters

in	subd	Subdevice descriptor structure
in	count	The amount of data transferred

Returns

0 on success, otherwise negative error code.

References A4L_SUBD_BUSY_NR, a4l_subdevice::buf, and a4l_subdevice::status.

Set the count of data sent to the buffer during the last completed DMA shots.

The functions a4l_buf_prepare_(abs)put(), a4l_buf_commit_(abs)put(), a4l_buf_prepare_(abs)get() and a4l_buf_commit_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

Parameters

in	subd	Subdevice descriptor structure
in	count	The amount of data transferred

Returns

0 on success, otherwise negative error code.

References A4L_SUBD_BUSY_NR, a4l_subdevice::buf, and a4l_subdevice::status.

Get the data amount available in the Analogy buffer.

Parameters

in	subd	Subdevice descriptor structure
----	------	--------------------------------

Returns

the amount of data available in the Analogy buffer.

References A4L_SUBD_BUSY_NR, a4l_subdevice::buf, and a4l_subdevice::status.

Signal some event(s) to a user-space program involved in some read / write operation.

The function a4l_buf_evt() is useful in many cases:

- To wake-up a process waiting for some data to read.
- To wake-up a process waiting for some data to write.
- To notify the user-process an error has occured during the acquistion.

Parameters

in	subd	Subdevice descriptor structure	
in	evts	Some specific event to notify:	
		 A4L_BUF_ERROR to indicate some error has occured during the transfer 	
		 A4L_BUF_EOA to indicate the acquisition is complete (this event is automatically set, it should not be used). 	

Returns

0 on success, otherwise negative error code.

References A4L_SUBD_BUSY_NR, a4l_subdevice::buf, and a4l_subdevice::status.

```
void * bufdata,
unsigned long count )
```

Copy some data from the buffer to the device driver.

The function a4l_buf_get() must copy data coming from the Analogy buffer to some acquisition device. This ring-buffer is an intermediate area between the device driver and the user-space program, which is supposed to provide the data to send to the device.

Parameters

in	subd	Subdevice descriptor structure
in	bufdata	The data buffer to copy into the Analogy buffer
in	count	The amount of data to copy

Returns

0 on success, otherwise negative error code.

References A4L_SUBD_BUSY_NR, a4l_subdevice::buf, and a4l_subdevice::status.

Update the absolute count of data sent from the buffer to the device since the start of the acquisition and after the next DMA shot.

The functions a4l_buf_prepare_(abs)put(), a4l_buf_commit_(abs)put(), a4l_buf_prepare_(abs)get() and a4l_buf_commit_(absg)et() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

Parameters

in	subd	Subdevice descriptor structure
in	count	The data count to be transferred during the next DMA shot plus the data count which have been copied since the start of the acquisition

Returns

0 on success, otherwise negative error code.

References A4L_SUBD_BUSY_NR, a4l_subdevice::buf, and a4l_subdevice::status.

Update the absolute count of data sent from the device to the buffer since the start of the acquisition and after the next DMA shot.

The functions a4l_buf_prepare_(abs)put(), a4l_buf_commit_(abs)put(), a4l_buf_prepare_(abs)get() and a4l_buf_commit_(absg)et() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

Parameters

in	subd	Subdevice descriptor structure	
in	count	The data count to be transferred during the next DMA shot plus the data count which	
		have been copied since the start of the acquisition	

Returns

0 on success, otherwise negative error code.

References A4L_SUBD_BUSY_NR, a4l_subdevice::buf, and a4l_subdevice::status.

Set the count of data which is to be sent from the buffer to the device at the next DMA shot.

The functions a4l_buf_prepare_(abs)put(), a4l_buf_commit_(abs)put(), a4l_buf_prepare_(abs)get() and a4l_buf_commit_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

Parameters

in	subd	Subdevice descriptor structure
in	count	The data count to be transferred

Returns

0 on success, otherwise negative error code.

References A4L_SUBD_BUSY_NR, a4l_subdevice::buf, and a4l_subdevice::status.

Set the count of data which is to be sent to the buffer at the next DMA shot.

The functions a4l_buf_prepare_(abs)put(), a4l_buf_commit_(abs)put(), a4l_buf_prepare_(abs)get() and a4l_buf_commit_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

Parameters

in	subd	Subdevice descriptor structure
in	count	The data count to be transferred

Returns

0 on success, otherwise negative error code.

References A4L SUBD BUSY NR, a4I subdevice::buf, and a4I subdevice::status.

Copy some data from the device driver to the buffer.

The function a4l_buf_put() must copy data coming from some acquisition device to the Analogy buffer. This ring-buffer is an intermediate area between the device driver and the user-space program, which is supposed to recover the acquired data.

Parameters

in	subd	Subdevice descriptor structure
in	bufdata	The data buffer to copy into the Analogy buffer
in	count	The amount of data to copy

Returns

0 on success, otherwise negative error code.

References A4L_SUBD_BUSY_NR, a4l_subdevice::buf, and a4l_subdevice::status.

Get the channel index according to its type.

Parameters

in	subd	Subdevice descriptor structure
----	------	--------------------------------

Returns

the channel index.

References A4L_CHAN_GLOBAL_CHANDESC, a4l_get_cmd(), a4l_subdevice::buf, a4l_subdevice::chan_desc, a4l_cmd_desc::chan_desc, a4l_channels_desc::chans, a4l_channels_desc::mode, a4l-channel::nb_bits, and a4l_cmd_desc::nb_chan.

```
6.50.2.14 a4l_get_cmd()

struct a4l_cmd_desc* a4l_get_cmd (

struct a4l_subdevice * subd )
```

Get the current Analogy command descriptor.

Parameters

in	subd	Subdevice descriptor structure
----	------	--------------------------------


Returns

the command descriptor.

Referenced by a4l_get_chan().

6.51 Interrupt management services

Collaboration diagram for Interrupt management services:



Functions

- unsigned int a4l_get_irq (struct a4l_device *dev)
 Get the interrupt number in use for a specific device.
- int a4l_request_irq (struct a4l_device *dev, unsigned int irq, a4l_irq_hdlr_t handler, unsigned long flags, void *cookie)

Register an interrupt handler for a specific device.

• int a4l_free_irq (struct a4l_device *dev, unsigned int irq)

Release an interrupt handler for a specific device.

6.51.1 Detailed Description

6.51.2 Function Documentation

Release an interrupt handler for a specific device.

Parameters

in	dev	Device descriptor structure
in	irq	Line number of the addressed IRQ

Returns

0 on success, otherwise negative error code.

Get the interrupt number in use for a specific device.

Parameters

in	dev	Device descriptor structure
----	-----	-----------------------------

Returns

the line number used or A4L_IRQ_UNUSED if no interrupt is registered.

References A4L_SUBD_AI, A4L_SUBD_AO, A4L_SUBD_CALIB, A4L_SUBD_COUNTER, A4L_SUBD_DI, A4L_SUBD_DIO, A4L_SUBD_DO, A4L_SUBD_MEMORY, A4L_SUBD_PROC, A4L_SUBD_S⇔ ERIAL, A4L_SUBD_TIMER, A4L_SUBD_TYPES, and A4L_SUBD_UNUSED.

Register an interrupt handler for a specific device.

Parameters

in	dev	Device descriptor structure
in	irq	Line number of the addressed IRQ
in	handler	Interrupt handler
in	flags	Registration flags:
		 RTDM_IRQTYPE_SHARED: enable IRQ-sharing with other drivers (Warning: real-time drivers and non-real-time drivers cannot share an interrupt line).
		 RTDM_IRQTYPE_EDGE: mark IRQ as edge-triggered (Warning: this flag is meaningless in RTDM-less context).
		 A4L_IRQ_DISABLED: keep IRQ disabled when calling the action handler (Warning: this flag is ignored in RTDM-enabled configuration).
in	cookie	Pointer to be passed to the interrupt handler on invocation


Returns

0 on success, otherwise negative error code.

6.52 Misc services 309

6.52 Misc services

Collaboration diagram for Misc services:



Functions

• unsigned long long a4l_get_time (void)

Get the absolute time in nanoseconds.

- 6.52.1 Detailed Description
- 6.52.2 Function Documentation

Get the absolute time in nanoseconds.

Returns

the absolute time expressed in nanoseconds

References rtdm_clock_read(), rtdm_event_clear(), rtdm_event_destroy(), rtdm_event_init(), rtdm_event_signal(), rtdm_event_timedwait(), rtdm_event_wait(), rtdm_irq_free(), rtdm_irq_get_arg, RTDextbook_notes and rtdm_nrtsig_pend(), rtdm_irq_request(), rtdm_nrtsig_destroy(), rtdm_nrtsig_init(), and rtdm_nrtsig_pend().

6.53 Clocks and timers

Cobalt/POSIX clock and timer services.

Collaboration diagram for Clocks and timers:



Functions

int clock_getres (clockid_t clock_id, struct timespec *tp)

Get the resolution of the specified clock.

int clock_gettime (clockid_t clock_id, struct timespec *tp)

Read the specified clock.

int clock_settime (clockid_t clock_id, const struct timespec *tp)

Set the specified clock.

- int clock_nanosleep (clockid_t clock_id, int flags, const struct timespec *rqtp, struct timespec *rmtp)

 Sleep some amount of time.
- int nanosleep (const struct timespec *rqtp, struct timespec *rmtp)

Sleep some amount of time.

 int timer_create (clockid_t clockid, const struct sigevent *__restrict__ evp, timer_t *__restrict__ timerid)

Create a timer.

int timer_delete (timer_t timerid)

Delete a timer object.

int timer_settime (timer_t timerid, int flags, const struct itimerspec *__restrict__ value, struct itimerspec *__restrict__ ovalue)

Start or stop a timer.

• int timer_gettime (timer_t timerid, struct itimerspec *value)

Get timer next expiration date and reload value.

• int timer_getoverrun (timer_t timerid)

Get expiration overruns count since the most recent timer expiration signal delivery.

6.53.1 Detailed Description

Cobalt/POSIX clock and timer services.

Cobalt supports three built-in clocks:

CLOCK_REALTIME maps to the nucleus system clock, keeping time as the amount of time since the Epoch, with a resolution of one nanosecond.

6.53 Clocks and timers 311

CLOCK_MONOTONIC maps to an architecture-dependent high resolution counter, so is suitable for measuring short time intervals. However, when used for sleeping (with clock_nanosleep()), the CLOC

K MONOTONIC clock has a resolution of one nanosecond, like the CLOCK REALTIME clock.

CLOCK_MONOTONIC_RAW is Linux-specific, and provides monotonic time values from a hardware timer which is not adjusted by NTP. This is strictly equivalent to CLOCK_MONOTONIC with Cobalt, which is not NTP adjusted either.

In addition, external clocks can be dynamically registered using the cobalt_clock_register() service. These clocks are fully managed by Cobalt extension code, which should advertise each incoming tick by calling xnclock_tick() for the relevant clock, from an interrupt context.

Timer objects may be created with the timer_create() service using any of the built-in or external clocks. The resolution of these timers is clock-specific. However, built-in clocks all have nanosecond resolution, as specified for clock nanosleep().

See also

Specification.

6.53.2 Function Documentation

Get the resolution of the specified clock.

This service returns, at the address res, if it is not NULL, the resolution of the clock clock id.

For both CLOCK_REALTIME and CLOCK_MONOTONIC, this resolution is the duration of one system clock tick. No other clock is supported.

Parameters

clock <i>⊷</i> _id	clock identifier, either CLOCK_REALTIME or CLOCK_MONOTONIC;
tp	the address where the resolution of the specified clock will be stored on success.

Return values

0	on success;
-1	with errno set if:
	• EINVAL, clock_id is invalid;

See also

Specification.

Tags

unrestricted

Read the specified clock.

This service returns, at the address tp the current value of the clock clock_id. If clock_id is:

- CLOCK_REALTIME, the clock value represents the amount of time since the Epoch, with a precision of one system clock tick;
- CLOCK_MONOTONIC or CLOCK_MONOTONIC_RAW, the clock value is given by an architecture-dependent high resolution counter, with a precision independent from the system clock tick duration.
- CLOCK_HOST_REALTIME, the clock value as seen by the host, typically Linux. Resolution and
 precision depend on the host, but it is guaranteed that both, host and Cobalt, see the same information.

Parameters

clock⊷ _id	clock identifier, either CLOCK_REALTIME, CLOCK_MONOTONIC, or CLOCK_HOST_REALTIME;
tp	the address where the value of the specified clock will be stored.

Return values

0	on success;
-1	with errno set if:
	• EINVAL, clock_id is invalid.

See also

Specification.

Tags

unrestricted

6.53 Clocks and timers 313

```
6.53.2.3 clock_nanosleep()
```

Sleep some amount of time.

This service suspends the calling thread until the wakeup time specified by rqtp, or a signal is delivered to the caller. If the flag TIMER_ABSTIME is set in the flags argument, the wakeup time is specified as an absolute value of the clock $clock_id$. If the flag TIMER_ABSTIME is not set, the wakeup time is specified as a time interval.

If this service is interrupted by a signal, the flag TIMER_ABSTIME is not set, and *rmtp* is not *NULL*, the time remaining until the specified wakeup time is returned at the address *rmtp*.

The resolution of this service is one system clock tick.

Parameters

clock⊷ _id	clock identifier, either CLOCK_REALTIME or CLOCK_MONOTONIC.
flags	one of:0 meaning that the wakeup time rqtp is a time interval;
	TIMER_ABSTIME, meaning that the wakeup time is an absolute value of the clock clock_id. clock_id.
rqtp	address of the wakeup time.
rmtp	address where the remaining time before wakeup will be stored if the service is interrupted by a signal.

Returns

0 on success;

an error number if:

- EPERM, the caller context is invalid;
- ENOTSUP, the specified clock is unsupported;
- EINVAL, the specified wakeup time is invalid;
- EINTR, this service was interrupted by a signal.

See also

Specification.

Tags

xthread-only, switch-primary

Referenced by clock_settime(), and nanosleep().

Set the specified clock.

This allow setting the CLOCK_REALTIME clock.

Parameters

clock← _id	the id of the clock to be set, only CLOCK_REALTIME is supported.
tp	the address of a struct timespec specifying the new date.

Return values

0	on success;
-1	with errno set if:
	• EINVAL, clock_id is not CLOCK_REALTIME;
	 EINVAL, the date specified by tp is invalid.

See also

Specification.

Tags

unrestricted

References clock_nanosleep().

Sleep some amount of time.

This service suspends the calling thread until the wakeup time specified by *rqtp*, or a signal is delivered. The wakeup time is specified as a time interval.

If this service is interrupted by a signal and *rmtp* is not *NULL*, the time remaining until the specified wakeup time is returned at the address *rmtp*.

The resolution of this service is one system clock tick.

6.53 Clocks and timers 315

Parameters

rqtp	address of the wakeup time.
rmtp	address where the remaining time before wakeup will be stored if the service is interrupted by a signal.

Return values

0	on success;
-1	with errno set if:
	 EPERM, the caller context is invalid;
	 EINVAL, the specified wakeup time is invalid;
	EINTR, this service was interrupted by a signal.

See also

Specification.

Tags

xthread-only, switch-primary

References clock_nanosleep().

Create a timer.

This service creates a timer based on the clock *clockid*.

If *evp* is not *NULL*, it describes the notification mechanism used on timer expiration. Only thread-directed notification is supported (evp->sigev_notify set to *SIGEV_THREAD_ID*).

If evp is NULL, the current Cobalt thread will receive the notifications with signal SIGALRM.

The recipient thread is delivered notifications when it calls any of the sigwait(), sigtimedwait() or sigwait-info() services.

If this service succeeds, an identifier for the created timer is returned at the address *timerid*. The timer is unarmed until started with the timer_settime() service.

Parameters

clockid	clock used as a timing base;
evp	description of the asynchronous notification to occur when the timer expires;
timerid	address where the identifier of the created timer will be stored on success.

Return values

0	on success;
-1	with errno set if:
	EINVAL, the clock <i>clockid</i> is invalid;
	 EINVAL, the member sigev_notify of the sigevent structure at the address evp is not SIGEV_THREAD_ID;
	 EINVAL, the member sigev_signo of the sigevent structure is an invalid signal number;
	EAGAIN, the maximum number of timers was exceeded, recompile with a larger value.

See also

Specification.

Tags

thread-unrestricted

Referenced by pthread_make_periodic_np().

Delete a timer object.

This service deletes the timer timerid.

Parameters

timerid identifier of the timer to be removed;
--

Return values

0	on success;
---	-------------

6.53 Clocks and timers 317

Return values

-1 with errno set if:

- EINVAL, timerid is invalid;
- EPERM, the timer timerid does not belong to the current process.

See also

Specification.

Tags

thread-unrestricted

References timer_settime().

6.53.2.8 timer_getoverrun()

Get expiration overruns count since the most recent timer expiration signal delivery.

This service returns *timerid* expiration overruns count since the most recent timer expiration signal delivery. If this count is more than *DELAYTIMER_MAX* expirations, *DELAYTIMER_MAX* is returned.

Parameters

timerid Timer identifier.

Returns

the overruns count on success:

- -1 with errno set if:
 - EINVAL, timerid is invalid;
 - EPERM, the timer timerid does not belong to the current process.

See also

Specification.

Tags

unrestricted

Get timer next expiration date and reload value.

This service stores, at the address *value*, the expiration date (member *it_value*) and reload value (member *it_interval*) of the timer *timerid*. The values are returned as time intervals, and as multiples of the system clock tick duration (see note in section Clocks and timers services for details on the duration of the system clock tick). If the timer was not started, the returned members *it_value* and *it_interval* of *value* are zero.

Parameters

timerid	timer identifier;]
value	address where the timer expiration date and reload value are stored on success.]

Return values

0 on success;
 -1 with errno set if:

 EINVAL, timerid is invalid. For timerid to be valid, it must belong to the current process.

See also

Specification.

Tags

unrestricted

Start or stop a timer.

This service sets a timer expiration date and reload value of the timer *timerid*. If *ovalue* is not *NULL*, the current expiration date and reload value are stored at the address *ovalue* as with timer_gettime().

If the member *it_value* of the **itimerspec** structure at *value* is zero, the timer is stopped, otherwise the timer is started. If the member *it_interval* is not zero, the timer is periodic. The current thread must be a Cobalt thread (created with pthread create()) and will be notified via signal of timer expirations.

When starting the timer, if *flags* is TIMER_ABSTIME, the expiration value is interpreted as an absolute date of the clock passed to the timer_create() service. Otherwise, the expiration value is interpreted as a time interval.

Expiration date and reload value are rounded to an integer count of nanoseconds.

6.53 Clocks and timers 319

Parameters

timerid	identifier of the timer to be started or stopped;
flags	one of 0 or TIMER_ABSTIME;
value	address where the specified timer expiration date and reload value are read;
ovalue	address where the specified timer previous expiration date and reload value are stored if not <i>NULL</i> .

Return values

0	on success;
-1	with errno set if:
	 EINVAL, the specified timer identifier, expiration date or reload value is invalid. For timerid to be valid, it must belong to the current process.

See also

Specification.

Tags

xcontext, switch-primary

Referenced by pthread_make_periodic_np(), and timer_delete().

6.54 Condition variables

Cobalt/POSIX condition variable services.

Collaboration diagram for Condition variables:



Functions

- int pthread_cond_init (pthread_cond_t *cond, const pthread_condattr_t *attr)

 Initialize a condition variable.
- int pthread_cond_destroy (pthread_cond_t *cond)

Destroy a condition variable.

int pthread_cond_wait (pthread_cond_t *cond, pthread_mutex_t *mutex)

Wait on a condition variable.

 int pthread_cond_timedwait (pthread_cond_t *cond, pthread_mutex_t *mutex, const struct timespec *abstime)

Wait a bounded time on a condition variable.

int pthread_cond_signal (pthread_cond_t *cond)

Signal a condition variable.

int pthread_cond_broadcast (pthread_cond_t *cond)

Broadcast a condition variable.

int pthread_condattr_init (pthread_condattr_t *attr)

Initialize a condition variable attributes object.

int pthread_condattr_destroy (pthread_condattr_t *attr)

Destroy a condition variable attributes object.

int pthread_condattr_getclock (const pthread_condattr_t *attr, clockid_t *clk_id)

Get the clock selection attribute from a condition variable attributes object.

• int pthread_condattr_setclock (pthread_condattr_t *attr, clockid_t clk_id)

Set the clock selection attribute of a condition variable attributes object.

int pthread_condattr_getpshared (const pthread_condattr_t *attr, int *pshared)

Get the process-shared attribute from a condition variable attributes object.

• int pthread_condattr_setpshared (pthread_condattr_t *attr, int pshared)

Set the process-shared attribute of a condition variable attributes object.

6.54 Condition variables 321

6.54.1 Detailed Description

Cobalt/POSIX condition variable services.

A condition variable is a synchronization object that allows threads to suspend execution until some predicate on shared data is satisfied. The basic operations on conditions are: signal the condition (when the predicate becomes true), and wait for the condition, suspending the thread execution until another thread signals the condition.

A condition variable must always be associated with a mutex, to avoid the race condition where a thread prepares to wait on a condition variable and another thread signals the condition just before the first thread actually waits on it.

Before it can be used, a condition variable has to be initialized with pt/pt/<a> a condition variable, a condition variable, namely the pubm.co.org/pt/https://pubm.co.org/pt/https://pubm.co.org/pt/https://pubm.co.org/pt/pubm.co.org/pt/https://pubm.co.org/pt/<a href="https://pubm.co.org/pt/"

Note that only pthread_cond_init() may be used to initialize a condition variable, using the static initializer PTHREAD COND INITIALIZER is not supported.

6.54.2 Function Documentation

Broadcast a condition variable.

This service unblocks all threads blocked on the condition variable cnd.

Parameters

cond the condition variable to be signalled.

Returns

0 on succes, an error number if:

- EINVAL, the condition variable is invalid;
- EPERM, the condition variable is not process-shared and does not belong to the current process.

See also

```
Specification.
```

Tags

xthread-only

Destroy a condition variable.

This service destroys the condition variable *cond*, if no thread is currently blocked on it. The condition variable becomes invalid for all condition variable services (they all return the EINVAL error) except pthread_cond_init()).

Parameters

cond the condition variable to be destroyed.

Returns

0 on succes,

an error number if:

- EINVAL, the condition variable cond is invalid;
- EPERM, the condition variable is not process-shared and does not belong to the current process;
- EBUSY, some thread is currently using the condition variable.

See also

Specification.

Tags

thread-unrestricted

Initialize a condition variable.

This service initializes the condition variable *cond*, using the condition variable attributes object *attr*. If *attr* is *NULL*, default attributes are used (see pthread_condattr_init(")).

6.54 Condition variables 323

Parameters

cond	the condition variable to be initialized;
attr	the condition variable attributes object.

Returns

0 on succes,

an error number if:

- EINVAL, the condition variable attributes object attr is invalid or uninitialized;
- EBUSY, the condition variable cond was already initialized;
- ENOMEM, insufficient memory available from the system heap to initialize the condition variable, increase CONFIG_XENO_OPT_SYS_HEAPSZ.
- EAGAIN, no registry slot available, check/raise CONFIG_XENO_OPT_REGISTRY_NRSL

 OTS.

See also

Specification.

Tags

thread-unrestricted

Signal a condition variable.

This service unblocks one thread blocked on the condition variable cnd.

If more than one thread is blocked on the specified condition variable, the highest priority thread is unblocked.

Parameters

cond	the condition variable to be signalled.
------	---

Returns

0 on succes,

an error number if:

- EINVAL, the condition variable is invalid;
- EPERM, the condition variable is not process-shared and does not belong to the current process.

See also

```
Specification.
```

Tags

xthread-only

Wait a bounded time on a condition variable.

const struct timespec * abstime)

This service is equivalent to pthread_cond_wait(), except that the calling thread remains blocked on the condition variable *cnd* only until the timeout specified by *abstime* expires.

The timeout *abstime* is expressed as an absolute value of the *clock* attribute passed to pthread_cond __init(). By default, CLOCK_REALTIME is used.

Parameters

cond	the condition variable to wait for;
mutex	the mutex associated with cnd;
abstime	the timeout, expressed as an absolute value of the clock attribute passed to pthread_cond_init().

Returns

0 on success,

an error number if:

- EPERM, the caller context is invalid;
- EPERM, the specified condition variable is not process-shared and does not belong to the current process;
- EINVAL, the specified condition variable, mutex or timeout is invalid;
- EINVAL, another thread is currently blocked on *cnd* using another mutex than *mx*;
- EPERM, the specified mutex is not owned by the caller;
- ETIMEDOUT, the specified timeout expired.

See also

Specification.

Tags

xthread-only, switch-primary

6.54 Condition variables 325

Wait on a condition variable.

This service atomically unlocks the mutex mx, and block the calling thread until the condition variable cnd is signalled using pthread_cond_signal() or pthread_cond_broadcast(). When the condition is signaled, this service re-acquire the mutex before returning.

Spurious wakeups occur if a signal is delivered to the blocked thread, so, an application should not assume that the condition changed upon successful return from this service.

Even if the mutex mx is recursive and its recursion count is greater than one on entry, it is unlocked before blocking the caller, and the recursion count is restored once the mutex is re-acquired by this service before returning.

Once a thread is blocked on a condition variable, a dynamic binding is formed between the condition vairable cnd and the mutex mx; if another thread calls this service specifying cnd as a condition variable but another mutex than mx, this service returns immediately with the EINVAL status.

This service is a cancellation point for Cobalt threads (created with the pthread_create() service). When such a thread is cancelled while blocked in a call to this service, the mutex mx is re-acquired before the cancellation cleanup handlers are called.

Parameters

cond	the condition variable to wait for;
mutex	the mutex associated with <i>cnd</i> .

Returns

0 on success, an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the specified condition variable or mutex is invalid;
- EPERM, the specified condition variable is not process-shared and does not belong to the current process;
- EINVAL, another thread is currently blocked on cnd using another mutex than mx;
- EPERM, the specified mutex is not owned by the caller.

See also

```
Specification.
```

Tags

xthread-only, switch-primary

```
6.54.2.7 pthread_condattr_destroy()
```

Destroy a condition variable attributes object.

This service destroys the condition variable attributes object attr. The object becomes invalid for all condition variable services (they all return EINVAL) except pthread_condattr_init().

Parameters

```
attr the initialized mutex attributes object to be destroyed.
```

Returns

0 on success;

an error number if:

• EINVAL, the mutex attributes object attr is invalid.

See also

```
Specification.
```

Tags

thread-unrestricted

```
6.54.2.8 pthread_condattr_getclock()
```

Get the clock selection attribute from a condition variable attributes object.

This service stores, at the address *clk_id*, the value of the *clock* attribute in the condition variable attributes object *attr*.

See pthread_cond_timedwait() for a description of the effect of this attribute on a condition variable. The clock ID returned is CLOCK_REALTIME or CLOCK_MONOTONIC.

Parameters

attr	an initialized condition variable attributes object,
clk⇔ _id	address where the <i>clock</i> attribute value will be stored on success.

6.54 Condition variables 327

Returns

0 on success, an error number if:

• EINVAL, the attribute object attr is invalid.

See also

```
Specification.
```

Tags

thread-unrestricted

```
6.54.2.9 pthread_condattr_getpshared()
```

Get the process-shared attribute from a condition variable attributes object.

This service stores, at the address *pshared*, the value of the *pshared* attribute in the condition variable attributes object *attr*.

The *pshared* attribute may only be one of *PTHREAD_PROCESS_PRIVATE* or *PTHREAD_PROCES S_SHARED*. See <u>pthread_condattr_setpshared()</u> for the meaning of these two constants.

Parameters

attr	an initialized condition variable attributes object.
pshared	address where the value of the <i>pshared</i> attribute will be stored on success.

Returns

0 on success,

an error number if:

- EINVAL, the pshared address is invalid;
- EINVAL, the condition variable attributes object attr is invalid.

See also

Specification.

Tags

thread-unrestricted

Initialize a condition variable attributes object.

This services initializes the condition variable attributes object *attr* with default values for all attributes. Default value are:

- for the clock attribute, CLOCK_REALTIME;
- for the pshared attribute PTHREAD_PROCESS_PRIVATE.

If this service is called specifying a condition variable attributes object that was already initialized, the attributes object is reinitialized.

Parameters

```
attr the condition variable attributes object to be initialized.
```

Returns

0 on success; an error number if:

• ENOMEM, the condition variable attribute object pointer attr is NULL.

See also

```
Specification.
```

Tags

thread-unrestricted

Set the clock selection attribute of a condition variable attributes object.

This service set the *clock* attribute of the condition variable attributes object attr.

See pthread_cond_timedwait() for a description of the effect of this attribute on a condition variable.

6.54 Condition variables 329

Parameters

attr	an initialized condition variable attributes object,
clk⊷ _id	value of the <i>clock</i> attribute, may be <i>CLOCK_REALTIME</i> or <i>CLOCK_MONOTONIC</i> .

Returns

0 on success,

an error number if:

- EINVAL, the condition variable attributes object attr is invalid;
- EINVAL, the value of *clk_id* is invalid for the *clock* attribute.

See also

Specification.

Tags

thread-unrestricted

```
6.54.2.12 pthread_condattr_setpshared()
```

Set the process-shared attribute of a condition variable attributes object.

This service set the *pshared* attribute of the condition variable attributes object attr.

Parameters

attr	an initialized condition variable attributes object.
pshared	value of the <i>pshared</i> attribute, may be one of:
	 PTHREAD_PROCESS_PRIVATE, meaning that a condition variable created with the attributes object attr will only be accessible by threads within the same process as the thread that initialized the condition variable;
	 PTHREAD_PROCESS_SHARED, meaning that a condition variable created with the attributes object attr will be accessible by any thread that has access to the memory where the condition variable is allocated.

Returns

0 on success, an error status if:

- EINVAL, the condition variable attributes object attr is invalid;
- EINVAL, the value of *pshared* is invalid.

See also

Specification.

Tags


thread-unrestricted

6.55 POSIX interface 331

6.55 POSIX interface

The Cobalt/POSIX interface is an implementation of a subset of the <u>Single Unix specification</u> over the Cobalt core.

Collaboration diagram for POSIX interface:

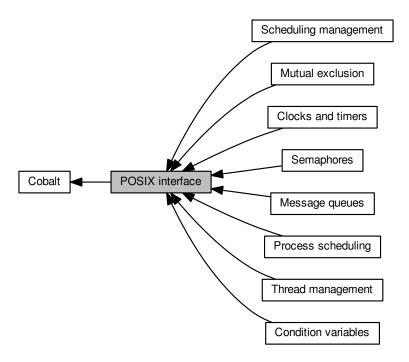

Modules

· Clocks and timers

Cobalt/POSIX clock and timer services.

Condition variables

Cobalt/POSIX condition variable services.

Message queues

Cobalt/POSIX message queue services.

Mutual exclusion

Cobalt/POSIX mutual exclusion services.

• Process scheduling

Cobalt/POSIX process scheduling.

Semaphores

Cobalt/POSIX semaphore services.

• Thread management

Cobalt (POSIX) thread management services.

Scheduling management

Cobalt scheduling management services.

6.55.1 Detailed Description

The Cobalt/POSIX interface is an implementation of a subset of the Single Unix specification over the Cobalt core.

6.56 Message queues 333

6.56 Message queues

Cobalt/POSIX message queue services.

Collaboration diagram for Message queues:



Functions

• mqd t mq open (const char *name, int oflags,...)

Open a message queue.

int mq_close (mqd_t mqd)

Close a message queue.

int mq_unlink (const char *name)

Unlink a message queue.

int mq_getattr (mqd_t mqd, struct mq_attr *attr)

Get message queue attributes.

int mq_setattr (mqd_t mqd, const struct mq_attr *__restrict__ attr, struct mq_attr *__restrict__
oattr)

Set message queue attributes.

• int mq_send (mqd_t q, const char *buffer, size_t len, unsigned prio)

Send a message to a message queue.

 int mq_timedsend (mqd_t q, const char *buffer, size_t len, unsigned prio, const struct timespec *timeout)

Attempt, during a bounded time, to send a message to a message queue.

• ssize_t mq_receive (mqd_t q, char *buffer, size_t len, unsigned *prio)

Receive a message from a message queue.

 ssize_t mq_timedreceive (mqd_t q, char *__restrict__ buffer, size_t len, unsigned *__restrict__ prio, const struct timespec *__restrict__ timeout)

Attempt, during a bounded time, to receive a message from a message queue.

• int mq notify (mqd t mqd, const struct sigevent *evp)

Enable notification on message arrival.

6.56.1 Detailed Description

Cobalt/POSIX message queue services.

A message queue allow exchanging data between real-time threads. For a POSIX message queue, maximum message length and maximum number of messages are fixed when it is created with mq_open().

6.56.2 Function Documentation

```
6.56.2.1 mq\_close() int mq\_close() mqd\_t mqd)
```

Close a message queue.

This service closes the message queue descriptor mqd. The message queue is destroyed only when all open descriptors are closed, and when unlinked with a call to the $mq_unlink()$ service.

Parameters

mqd | message queue descriptor.

Return values

0	on success;
-1	with errno set if:
	• EBADF, mqd is an invalid message queue descriptor;
	EPERM, the caller context is invalid.

See also

Specification.

Tags

thread-unrestricted, switch-secondary

Get message queue attributes.

This service stores, at the address attr, the attributes of the messages queue descriptor mqd.

The following attributes are set:

- mq_flags, flags of the message queue descriptor mqd;
- mq maxmsg, maximum number of messages in the message queue;
- mq_msgsize, maximum message size;
- mq_curmsgs, number of messages currently in the queue.

Parameters

mqd	message queue descriptor;
attr	address where the message queue attributes will be stored on success.

Return values

0	on success;	
-1	with errno set if:	
	• EBADF, <i>mqd</i> is not a valid descriptor.	

See also

Specification.

Tags

thread-unrestricted

References mg setattr().

Enable notification on message arrival.

If *evp* is not *NULL* and is the address of a **sigevent** structure with the *sigev_notify* member set to S← IGEV_SIGNAL, the current thread will be notified by a signal when a message is sent to the message queue *mqd*, the queue is empty, and no thread is blocked in call to mq_receive() or mq_timedreceive(). After the notification, the thread is unregistered.

If evp is NULL or the sigev_notify member is SIGEV_NONE, the current thread is unregistered.

Only one thread may be registered at a time.

If the current thread is not a Cobalt thread (created with pthread_create()), this service fails.

Parameters

mqd	message queue descriptor;
evp	pointer to an event notification structure.

Return values

```
0 on success;
-1 with errno set if:
• EINVAL, evp is invalid;
• EPERM, the caller context is invalid;
• EBADF, mqd is not a valid message queue descriptor;
• EBUSY, another thread is already registered.
```

See also

Specification.

Tags

xthread-only, switch-primary

Open a message queue.

This service opens the message queue named *name*.

One of the following values should be set in oflags:

- O_RDONLY, meaning that the returned queue descriptor may only be used for receiving messages;
- O_WRONLY, meaning that the returned queue descriptor may only be used for sending messages;
- O_RDWR, meaning that the returned queue descriptor may be used for both sending and receiving messages.

If no message queue named *name* exists, and *oflags* has the *O_CREAT* bit set, the message queue is created by this function, taking two more arguments:

- a *mode* argument, of type **mode_t**, currently ignored;
- an attr argument, pointer to an **mq_attr** structure, specifying the attributes of the new message queue.

If *oflags* has the two bits *O_CREAT* and *O_EXCL* set and the message queue alread exists, this service fails.

If the O_NONBLOCK bit is set in *oflags*, the mq_send(), mq_receive(), mq_timedsend() and mq_ timedreceive() services return -1 with *errno* set to EAGAIN instead of blocking their caller.

The following arguments of the **mq_attr** structure at the address *attr* are used when creating a message queue:

- mq_maxmsg is the maximum number of messages in the queue (128 by default);
- mq msgsize is the maximum size of each message (128 by default).

name may be any arbitrary string, in which slashes have no particular meaning. However, for portability, using a name which starts with a slash and contains no other slash is recommended.

Parameters

name	name of the message queue to open;
oflags	flags.

Returns

a message queue descriptor on success;

- -1 with errno set if:
 - ENAMETOOLONG, the length of the name argument exceeds 64 characters;
 - EEXIST, the bits O_CREAT and O_EXCL were set in oflags and the message queue already exists;
 - ENOENT, the bit O CREAT is not set in oflags and the message queue does not exist;
 - ENOSPC, allocation of system memory failed, or insufficient memory available from the system heap to create the queue, try increasing CONFIG XENO OPT SYS HEAPSZ;
 - EPERM, attempting to create a message queue from an invalid context;
 - EINVAL, the attr argument is invalid;
 - EMFILE, too many descriptors are currently open.
 - EAGAIN, no registry slot available, check/raise CONFIG_XENO_OPT_REGISTRY_NRSL

 OTS.

See also

Specification.

Tags

thread-unrestricted, switch-secondary

Receive a message from a message queue.

If the message queue *fd* is not empty and if *len* is greater than the *mq_msgsize* of the message queue, this service copies, at the address *buffer*, the queued message with the highest priority.

If the queue is empty and the flag *O_NONBLOCK* is not set for the descriptor *fd*, the calling thread is suspended until some message is sent to the queue. If the queue is empty and the flag *O_NONBLOCK* is set for the descriptor *fd*, this service returns immediately a value of -1 with *errno* set to EAGAIN.

Parameters

q	the queue descriptor; the address where the received message will be stored on success;	
buffer		
len	buffer length;	
prio	address where the priority of the received message will be stored on success.	

Returns

the message length, and copy a message at the address buffer on success;

- -1 with no message unqueued and errno set if:
 - EBADF, fd is not a valid descriptor open for reading;
 - EMSGSIZE, the length *len* is lesser than the message queue mq_msgsize attribute;
 - EAGAIN, the queue is empty, and the flag O_NONBLOCK is set for the descriptor fd;
 - EPERM, the caller context is invalid;
 - EINTR, the service was interrupted by a signal.

See also

Specification.

Tags

xthread-only, switch-primary

 $References\ mq_timedreceive().$

Send a message to a message queue.

If the message queue *fd* is not full, this service sends the message of length *len* pointed to by the argument *buffer*, with priority *prio*. A message with greater priority is inserted in the queue before a message with lower priority.

If the message queue is full and the flag *O_NONBLOCK* is not set, the calling thread is suspended until the queue is not full. If the message queue is full and the flag *O_NONBLOCK* is set, the message is not sent and the service returns immediately a value of -1 with *errno* set to EAGAIN.

Parameters

q	message queue descriptor;
buffer	pointer to the message to be sent;
len	length of the message;
prio	priority of the message.

Returns

0 and send a message on success;

- -1 with no message sent and errno set if:
 - EBADF, fd is not a valid message queue descriptor open for writing;
 - EMSGSIZE, the message length *len* exceeds the *mq_msgsize* attribute of the message queue;
 - EAGAIN, the flag O_NONBLOCK is set for the descriptor fd and the message queue is full;
 - EPERM, the caller context is invalid;
 - EINTR, the service was interrupted by a signal.

See also

Specification.

Tags

xthread-only, switch-primary

References mq_timedsend().

Set message queue attributes.

This service sets the flags of the *mqd* descriptor to the value of the member *mq_flags* of the **mq_attr** structure pointed to by *attr*.

The previous value of the message queue attributes are stored at the address oattr if it is not NULL.

Only setting or clearing the O_NONBLOCK flag has an effect.

Parameters

mqd message queue descriptor;		
attr	pointer to new attributes (only mq_flags is used);	
oattr	if not NULL, address where previous message queue attributes will be stored on success.	

Return values

```
    0 on success;
    -1 with errno set if:
    • EBADF, mqd is not a valid message queue descriptor.
```

See also

Specification.

Tags

thread-unrestricted

Referenced by mq_getattr().

Attempt, during a bounded time, to receive a message from a message queue.

This service is equivalent to mq_receive(), except that if the flag *O_NONBLOCK* is not set for the descriptor *fd* and the message queue is empty, the calling thread is only suspended until the timeout *abs_timeout* expires.

Parameters

q	the queue descriptor;	
buffer	the address where the received message will be stored on success;	
len	buffer length;	
prio	address where the priority of the received message will be stored on success.	
timeout	the timeout, expressed as an absolute value of the CLOCK_REALTIME clock.	

Returns

the message length, and copy a message at the address buffer on success;

- -1 with no message unqueued and errno set if:
 - EBADF, fd is not a valid descriptor open for reading;
 - EMSGSIZE, the length *len* is lesser than the message queue *mq_msgsize* attribute;
 - EAGAIN, the queue is empty, and the flag O_NONBLOCK is set for the descriptor fd;
 - EPERM, the caller context is invalid;
 - EINTR, the service was interrupted by a signal;
 - ETIMEDOUT, the specified timeout expired.

See also

```
Specification.
```

Tags

xthread-only, switch-primary

Referenced by mg receive().

```
6.56.2.9 mq_timedsend()
```

Attempt, during a bounded time, to send a message to a message queue.

This service is equivalent to $mq_send()$, except that if the message queue is full and the flag $O_NON \hookrightarrow BLOCK$ is not set for the descriptor fd, the calling thread is only suspended until the timeout specified by $abs\ timeout\ expires$.

Parameters

q	message queue descriptor;	
buffer	pointer to the message to be sent;	
Gelegerated by Desmogeth of the message;		
prio	priority of the message;	
timeout	the timeout, expressed as an absolute value of the CLOCK_REALTIME clock.	

Returns

0 and send a message on success;

- -1 with no message sent and errno set if:
 - EBADF, fd is not a valid message queue descriptor open for writing;
 - EMSGSIZE, the message length exceeds the *mq_msgsize* attribute of the message queue;
 - EAGAIN, the flag O_NONBLOCK is set for the descriptor fd and the message queue is full;
 - EPERM, the caller context is invalid;
 - ETIMEDOUT, the specified timeout expired;
 - EINTR, the service was interrupted by a signal.

See also

```
Specification.
```

Tags

xthread-only, switch-primary

Referenced by mq_send().

Unlink a message queue.

This service unlinks the message queue named name. The message queue is not destroyed until all queue descriptors obtained with the $mq_open()$ service are closed with the $mq_open()$ service. However, after a call to this service, the unlinked queue may no longer be reached with the $mq_open()$ service.

Parameters

name | name of the message queue to be unlinked.

Return values

0	on success;
-1	with errno set if:
	EPERM, the caller context is invalid;
	 ENAMETOOLONG, the length of the name argument exceeds 64 characters;
	ENOENT, the message queue does not exist.

See also

Specification.

Tags

thread-unrestricted, switch-secondary

6.57 Mutual exclusion

Cobalt/POSIX mutual exclusion services.

Collaboration diagram for Mutual exclusion:



Functions

- int pthread_mutex_init (pthread_mutex_t *mutex, const pthread_mutexattr_t *attr)
 Initialize a mutex.
- int pthread_mutex_destroy (pthread_mutex_t *mutex)

Destroy a mutex.

int pthread_mutex_lock (pthread_mutex_t *mutex)

Lock a mutex.

int pthread_mutex_timedlock (pthread_mutex_t *mutex, const struct timespec *to)

Attempt, during a bounded time, to lock a mutex.

int pthread_mutex_trylock (pthread_mutex_t *mutex)

Attempt to lock a mutex.

int pthread_mutex_unlock (pthread_mutex_t *mutex)

Unlock a mutex.

int pthread_mutexattr_init (pthread_mutexattr_t *attr)

Initialize a mutex attributes object.

int pthread_mutexattr_destroy (pthread_mutexattr_t *attr)

Destroy a mutex attributes object.

int pthread_mutexattr_gettype (const pthread_mutexattr_t *attr, int *type)

Get the mutex type attribute from a mutex attributes object.

int pthread_mutexattr_settype (pthread_mutexattr_t *attr, int type)

Set the mutex type attribute of a mutex attributes object.

• int pthread_mutexattr_getprotocol (const pthread_mutexattr_t *attr, int *proto)

Get the protocol attribute from a mutex attributes object.

int pthread_mutexattr_setprotocol (pthread_mutexattr_t *attr, int proto)

Set the protocol attribute of a mutex attributes object.

• int pthread_mutexattr_getpshared (const pthread_mutexattr_t *attr, int *pshared)

Get the process-shared attribute of a mutex attributes object.

• int pthread_mutexattr_setpshared (pthread_mutexattr_t *attr, int pshared)

Set the process-shared attribute of a mutex attributes object.

6.57 Mutual exclusion 345

6.57.1 Detailed Description

Cobalt/POSIX mutual exclusion services.

A mutex is a MUTual EXclusion device, and is useful for protecting shared data structures from concurrent modifications, and implementing critical sections and monitors.

A mutex has two possible states: unlocked (not owned by any thread), and locked (owned by one thread). A mutex can never be owned by two different threads simultaneously. A thread attempting to lock a mutex that is already locked by another thread is suspended until the owning thread unlocks the mutex first.

Before it can be used, a mutex has to be initialized with pthread_mutex_init(). An attribute object, which reference may be passed to this service, allows to select the features of the created mutex, namely its type (see pthread_mutexattr_settype()), the priority protocol it uses (see pthread_mutexattr_ setprotocol()) and whether it may be shared between several processes (see pthread_mutexattr_ setpshared()).

By default, Cobalt mutexes are of the normal type, use no priority protocol and may not be shared between several processes.

Note that only pthread_mutex_init() may be used to initialize a mutex, using the static initializer PTHR← EAD MUTEX INITIALIZER is not supported.

6.57.2 Function Documentation

Destroy a mutex.

This service destroys the mutex *mx*, if it is unlocked and not referenced by any condition variable. The mutex becomes invalid for all mutex services (they all return the EINVAL error) except pthread_mutex←_init().

Parameters

mutex to be destroyed.

Returns

0 on success,

an error number if:

- EINVAL, the mutex mx is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- EBUSY, the mutex is locked, or used by a condition variable.

See also

Specification.

Tags

thread-unrestricted

Initialize a mutex.

This services initializes the mutex mx, using the mutex attributes object attr. If attr is NULL, default attributes are used (see pthread_mutexattr_init()).

Parameters

mutex	the mutex to be initialized;
attr	the mutex attributes object.

Returns

0 on success,

an error number if:

- EINVAL, the mutex attributes object attr is invalid or uninitialized;
- EBUSY, the mutex mx was already initialized;
- ENOMEM, insufficient memory available from the system heap to initialize the mutex, increase CONFIG XENO OPT SYS HEAPSZ.
- EAGAIN, insufficient memory available to initialize the mutex, increase CONFIG_XENO_O
 PT_SHARED_HEAPSZ for a process-shared mutex, or CONFIG_XENO_OPT_PRIVATE_

 HEAPSZ for a process-private mutex.
- EAGAIN, no registry slot available, check/raise CONFIG_XENO_OPT_REGISTRY_NRSL

 OTS.

See also

Specification.

Tags

thread-unrestricted

6.57 Mutual exclusion 347

Lock a mutex.

This service attempts to lock the mutex mx. If the mutex is free, it becomes locked. If it was locked by another thread than the current one, the current thread is suspended until the mutex is unlocked. If it was already locked by the current mutex, the behaviour of this service depends on the mutex type:

- for mutexes of the PTHREAD_MUTEX_NORMAL type, this service deadlocks;
- for mutexes of the *PTHREAD_MUTEX_ERRORCHECK* type, this service returns the EDEADLK error number:
- for mutexes of the PTHREAD_MUTEX_RECURSIVE type, this service increments the lock recursion count and returns 0.

Parameters

mutex the mutex to be locked.

Returns

0 on success

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex mx is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- EDEADLK, the mutex is of the *PTHREAD_MUTEX_ERRORCHECK* type and was already locked by the current thread;
- EAGAIN, the mutex is of the *PTHREAD_MUTEX_RECURSIVE* type and the maximum number of recursive locks has been exceeded.

See also

```
Specification.
```

Tags

xthread-only, switch-primary

References pthread_mutex_timedlock(), XNDEBUG, XNRELAX, and XNWEAK.

Attempt, during a bounded time, to lock a mutex.

This service is equivalent to <a href="https://pubm.nih.google-nih

Parameters

mutex	the mutex to be locked;
to	the timeout, expressed as an absolute value of the CLOCK_REALTIME clock.

Returns

0 on success;

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex *mx* is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- ETIMEDOUT, the mutex could not be locked and the specified timeout expired;
- EDEADLK, the mutex is of the *PTHREAD_MUTEX_ERRORCHECK* type and the mutex was already locked by the current thread;
- EAGAIN, the mutex is of the *PTHREAD_MUTEX_RECURSIVE* type and the maximum number of recursive locks has been exceeded.

See also

Specification.

Tags

xthread-only, switch-primary

References XNDEBUG, XNRELAX, and XNWEAK.

Referenced by pthread_mutex_lock().

```
6.57.2.5 pthread_mutex_trylock()
```

Attempt to lock a mutex.

This service is equivalent to pthread_mutex_lock(), except that if the mutex mx is locked by another thread than the current one, this service returns immediately.

Parameters

mutov	the mutex to be locked.
HIIULEX	I THE HILLEX TO DE TOCKEU.

6.57 Mutual exclusion 349

Returns

0 on success;

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- EBUSY, the mutex was locked by another thread than the current one;
- EAGAIN, the mutex is recursive, and the maximum number of recursive locks has been exceeded.

See also

Specification.

Tags

xthread-only, switch-primary

References XNDEBUG, XNRELAX, and XNWEAK.

Unlock a mutex.

This service unlocks the mutex mx. If the mutex is of the $PTHREAD_MUTEX_RECURSIVE$ type and the locking recursion count is greater than one, the lock recursion count is decremented and the mutex remains locked.

Attempting to unlock a mutex which is not locked or which is locked by another thread than the current one yields the EPERM error, whatever the mutex *type* attribute.

Parameters

mutex to be released.

Returns

0 on success:

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex mx is invalid;
- EPERM, the mutex was not locked by the current thread.

See also

```
Specification.
```

Tags

xthread-only, switch-primary

References pthread_mutexattr_destroy(), pthread_mutexattr_getprotocol(), pthread_mutexattr_color, pthread_mutexattr_setprotocol(), pthread_mutexattr_setprotocol(), pthread_mutexattr_setpshared(), pthread_mutexattr_settype(), XNDEBUG, and XNWEAK.

Destroy a mutex attributes object.

This service destroys the mutex attributes object *attr*. The object becomes invalid for all mutex services (they all return EINVAL) except pthread_mutexattr_init().

Parameters

attr | the initialized mutex attributes object to be destroyed.

Returns

0 on success; an error number if:

• EINVAL, the mutex attributes object attr is invalid.

See also

Specification.

Tags

thread-unrestricted

Referenced by pthread_mutex_unlock().

6.57 Mutual exclusion 351

```
6.57.2.8 pthread_mutexattr_getprotocol()
```

Get the protocol attribute from a mutex attributes object.

This service stores, at the address *proto*, the value of the *protocol* attribute in the mutex attributes object *attr*.

The *protcol* attribute may only be one of *PTHREAD_PRIO_NONE* or *PTHREAD_PRIO_INHERIT*. See pthread_mutexattr_setprotocol() for the meaning of these two constants.

Parameters

attr	an initialized mutex attributes object;]
proto	address where the value of the <i>protocol</i> attribute will be stored on success.]

Returns

0 on success,

an error number if:

- EINVAL, the proto address is invalid;
- EINVAL, the mutex attributes object attr is invalid.

See also

```
Specification.
```

Tags

thread-unrestricted

Referenced by pthread mutex unlock().

```
6.57.2.9 pthread_mutexattr_getpshared()
```

Get the process-shared attribute of a mutex attributes object.

This service stores, at the address *pshared*, the value of the *pshared* attribute in the mutex attributes object *attr*.

The pashared attribute may only be one of PTHREAD_PROCESS_PRIVATE or PTHREAD_PROCE SS_SHARED. See pthread_mutexattr_setpshared() for the meaning of these two constants.

Parameters

352

attr	an initialized mutex attributes object;
pshared	address where the value of the <i>pshared</i> attribute will be stored on success.

Returns

0 on success;

an error number if:

- EINVAL, the *pshared* address is invalid;
- EINVAL, the mutex attributes object attr is invalid.

See also

Specification.

Tags

thread-unrestricted

Referenced by pthread_mutex_unlock().

Get the mutex type attribute from a mutex attributes object.

This service stores, at the address type, the value of the type attribute in the mutex attributes object attr.

See pthread_mutex_lock() and pthread_mutex_unlock() for a description of the values of the type attribute and their effect on a mutex.

Parameters

attr	an initialized mutex attributes object,
type	address where the <i>type</i> attribute value will be stored on success.

Returns

0 on sucess, an error number if:

- EINVAL, the type address is invalid;
- EINVAL, the mutex attributes object attr is invalid.

6.57 Mutual exclusion 353

```
See also
```

```
Specification.
```

Tags

thread-unrestricted

Referenced by pthread_mutex_unlock().

Initialize a mutex attributes object.

This services initializes the mutex attributes object *attr* with default values for all attributes. Default value are :

- for the *type* attribute, *PTHREAD_MUTEX_NORMAL*;
- for the protocol attribute, PTHREAD_PRIO_NONE;
- for the pshared attribute, PTHREAD_PROCESS_PRIVATE.

If this service is called specifying a mutex attributes object that was already initialized, the attributes object is reinitialized.

Parameters

```
attr | the mutex attributes object to be initialized.
```

Returns

0 on success; an error number if:

• ENOMEM, the mutex attributes object pointer attr is NULL.

See also

Specification.

Tags

thread-unrestricted

Referenced by pthread_mutex_unlock().

Set the protocol attribute of a mutex attributes object.

This service set the *type* attribute of the mutex attributes object attr.

Parameters

attr	an initialized mutex attributes object,
proto	value of the <i>protocol</i> attribute, may be one of:
	 PTHREAD_PRIO_NONE, meaning that a mutex created with the attributes object attr will not follow any priority protocol;
	 PTHREAD_PRIO_INHERIT, meaning that a mutex created with the attributes object attr, will follow the priority inheritance protocol.

The value PTHREAD_PRIO_PROTECT (priority ceiling protocol) is unsupported.

Returns

0 on success,

an error number if:

- EINVAL, the mutex attributes object attr is invalid;
- ENOTSUP, the value of proto is unsupported;
- EINVAL, the value of proto is invalid.

See also

```
Specification.
```

Tags

thread-unrestricted

Referenced by pthread_mutex_unlock().

Set the process-shared attribute of a mutex attributes object.

This service set the *pshared* attribute of the mutex attributes object attr.

6.57 Mutual exclusion 355

Parameters

attr	an initialized mutex attributes object.
pshared	value of the <i>pshared</i> attribute, may be one of:
	 PTHREAD_PROCESS_PRIVATE, meaning that a mutex created with the attributes object attr will only be accessible by threads within the same process as the thread that initialized the mutex;
	 PTHREAD_PROCESS_SHARED, meaning that a mutex created with the attributes object attr will be accessible by any thread that has access to the memory where the mutex is allocated.

Returns

0 on success,

an error status if:

- EINVAL, the mutex attributes object attr is invalid;
- EINVAL, the value of pshared is invalid.

See also

Specification.

Tags

thread-unrestricted

Referenced by pthread_mutex_unlock().

Set the mutex type attribute of a mutex attributes object.

This service set the *type* attribute of the mutex attributes object attr.

See pthread_mutex_unlock() for a description of the values of the type attribute and their effect on a mutex.

The PTHREAD_MUTEX_DEFAULT default type is the same as PTHREAD_MUTEX_NORMAL. Note that using a recursive Cobalt mutex with a Cobalt condition variable is safe (see pthread_cond_wait() documentation).

Parameters

attr	an initialized mutex attributes object,
type Generate	value of the <i>type</i> attribute.

Returns

0 on success, an error number if:

• EINVAL, the mutex attributes object attr is invalid;

• EINVAL, the value of *type* is invalid for the *type* attribute.

See also

Specification.

Tags

thread-unrestricted

Referenced by pthread_mutex_unlock().

6.58 Process scheduling

Cobalt/POSIX process scheduling.

Collaboration diagram for Process scheduling:



Functions

int sched_yield (void)

Yield the processor.

int sched_get_priority_min (int policy)

Get minimum priority of the specified scheduling policy.

int sched_get_priority_min_ex (int policy)

Get extended minimum priority of the specified scheduling policy.

int sched_get_priority_max (int policy)

Get maximum priority of the specified scheduling policy.

int sched_setscheduler (pid_t pid, int policy, const struct sched_param *param)

Set the scheduling policy and parameters of the specified process.

• int sched_setscheduler_ex (pid_t pid, int policy, const struct sched_param_ex *param_ex)

Set extended scheduling policy of a process.

• int sched_getscheduler (pid_t pid)

Get the scheduling policy of the specified process.

- int sched_getscheduler_ex (pid_t pid, int *policy_r, struct sched_param_ex *param_ex)

 Get extended scheduling policy of a process.
- int sched_get_priority_max_ex (int policy)

Get extended maximum priority of the specified scheduling policy.

- int sched_setconfig_np (int cpu, int policy, const union sched_config *config, size_t len)

 Set CPU-specific scheduler settings for a policy.
- ssize_t sched_getconfig_np (int cpu, int policy, union sched_config *config, size_t *len_r)

 *Retrieve CPU-specific scheduler settings for a policy.

6.58.1 Detailed Description

Cobalt/POSIX process scheduling.

See also

Specification.

6.58.2 Function Documentation

Get maximum priority of the specified scheduling policy.

This service returns the maximum priority of the scheduling policy policy.

Parameters

```
policy scheduling policy.
```

Return values

0	on success;
-1	with errno set if:
	• EINVAL, <i>policy</i> is invalid.

See also

Specification.

Tags

thread-unrestricted

References sched_setscheduler().

Referenced by sched_get_priority_max_ex().

Get extended maximum priority of the specified scheduling policy.

This service returns the maximum priority of the scheduling policy *policy*, reflecting any Cobalt extension to standard classes.

Parameters

policy scheduling policy.	
---------------------------	--

Return values

0	on success;
-1	with errno set if:
	• EINVAL, <i>policy</i> is invalid.

See also

Specification.

Tags

thread-unrestricted

References sched_get_priority_max().

```
6.58.2.3 sched_get_priority_min()
```

Get minimum priority of the specified scheduling policy.

This service returns the minimum priority of the scheduling policy *policy*.

Parameters

policy scheduling policy.

Return values

0	on success;
-1	with errno set if:
	• EINVAL, <i>policy</i> is invalid.

See also

Specification.

Tags

thread-unrestricted

Referenced by sched_get_priority_min_ex().

Get extended minimum priority of the specified scheduling policy.

This service returns the minimum priority of the scheduling policy, reflecting any Cobalt extension to the standard classes.

Parameters

scheduling policy	policy
-------------------	--------

Return values

0	on success;
-1	with errno set if:
	• EINVAL, <i>policy</i> is invalid.

See also

```
Specification.
```

Tags

thread-unrestricted

References sched_get_priority_min().

Retrieve CPU-specific scheduler settings for a policy.

A configuration is strictly local to the target *cpu*, and may differ from other processors.

Parameters

сри	processor to retrieve the configuration of.
policy	scheduling policy to which the configuration data applies. Currently, only SCHED_TP and SCHED_QUOTA are valid input.
config	a pointer to a memory area which receives the configuration settings upon success of this call.

SCHED_TP specifics

On successful return, config->quota.tp contains the TP schedule active on cpu.

SCHED_QUOTA specifics

On entry, config->quota.get.tgid must contain the thread group identifier to inquire about.

On successful exit, config->quota.info contains the information related to the thread group referenced to by config->quota.get.tgid.

Parameters

in,out	len⊷	a pointer to a variable for collecting the overall length of the configuration data
	_r	returned (in bytes). This variable must contain the amount of space available in
		config when the request is issued.

Returns

the number of bytes copied to *config* on success; a negative error number if:

- EINVAL, *cpu* is invalid, or *policy* is unsupported by the current kernel configuration, or *len* cannot hold the retrieved configuration data.
- ESRCH, with *policy* equal to SCHED_QUOTA, if the group identifier required to perform the operation is not valid (i.e. config->quota.get.tgid is invalid).
- ENOMEM, lack of memory to perform the operation.
- ENOSPC, len is too short.

Tags

thread-unrestricted, switch-primary

```
6.58.2.6 sched_getscheduler()
int sched_getscheduler (
```

pid_t pid)

Get the scheduling policy of the specified process.

This service retrieves the scheduling policy of the Cobalt process identified by pid.

If *pid* does not identify an existing Cobalt thread/process, this service falls back to the regular sched_ egetscheduler() service.

Parameters

```
pid target process/thread;
```

Returns

0 on success;

an error number if:

- ESRCH, pid is not found;
- EINVAL, pid is negative
- EFAULT, param_ex is an invalid address;

See also

```
Specification.
```

Tags

thread-unrestricted

```
6.58.2.7 sched_getscheduler_ex()
```

Get extended scheduling policy of a process.

This service is an extended version of the sched_getscheduler() service, which supports Cobalt-specific and/or additional scheduling policies, not available with the host Linux environment. It retrieves the scheduling policy of the Cobalt process/thread identified by *pid*, and the associated scheduling parameters (e.g. the priority).

Parameters

pid	queried process/thread. If zero, the current thread is assumed.	
policy_r	a pointer to a variable receiving the current scheduling policy of pid.	
param_ex	a pointer to a structure receiving the current scheduling parameters of pid.	ated by Doxygen

Returns

0 on success; an error number if:

- ESRCH, pid is not a Cobalt thread;
- EINVAL, pid is negative or param_ex is NULL;
- EFAULT, param_ex is an invalid address;

Tags

thread-unrestricted

Set CPU-specific scheduler settings for a policy.

A configuration is strictly local to the target cpu, and may differ from other processors.

Parameters

сри	processor to load the configuration of.
policy	scheduling policy to which the configuration data applies. Currently, SCHED_TP and SCHED_QUOTA are valid.
config	a pointer to the configuration data to load on cpu, applicable to policy.

Settings applicable to SCHED_TP

This call controls the temporal partitions for cpu, depending on the operation requested.

- config.tp.op specifies the operation to perform:
- sched_tp_install installs a new TP schedule on cpu, defined by config.tp.windows[]. The global time frame is not activated upon return from this request yet; sched_tp_start must be issued to activate the temporal scheduling on CPU.
- sched_tp_uninstall removes the current TP schedule from cpu, releasing all the attached resources. If no TP schedule exists on CPU, this request has no effect.
- sched_tp_start enables the temporal scheduling on cpu, starting the global time frame. If no TP schedule exists on cpu, this action has no effect.
- sched_tp_stop disables the temporal scheduling on cpu. The current TP schedule is not uninstalled though, and may be re-started later by a sched_tp_start request.

Attention

As a consequence of this request, threads assigned to the un-scheduled partitions may be starved from CPU time.

- for a *sched_tp_install* operation, config.tp.nr_windows indicates the number of elements present in the config.tp.windows[] array. If config.tp.nr_windows is zero, the action taken is identical to *sched tp uninstall*.
- if config.tp.nr_windows is non-zero, config.tp.windows[] is a set scheduling time slots for threads assigned to *cpu*. Each window is specified by its offset from the start of the global time frame (windows[].offset), its duration (windows[].duration), and the partition id it should activate during such period of time (windows[].ptid). This field is not considered for other requests than *sched_* to install.

Time slots must be strictly contiguous, i.e. windows[n].offset + windows[n].duration shall equal windows[n + 1].offset. If windows[].ptid is in the range [0..CONFIG_XENO_OPT_SCHED_TP_NRP← ART-1], SCHED_TP threads which belong to the partition being referred to may be given CPU time on *cpu*, from time windows[].offset to windows[].offset + windows[].duration, provided those threads are in a runnable state.

Time holes between valid time slots may be defined using windows activating the pseudo partition -1. When such window is active in the global time frame, no CPU time is available to SCHED_TP threads on *cpu*.

Note

The sched_tp_confsz(nr_windows) macro returns the length of config.tp depending on the number of time slots to be defined in config.tp.windows[], as specified by config.tp.nr_windows.

Settings applicable to SCHED QUOTA

This call manages thread groups running on *cpu*, defining per-group quota for limiting their CPU consumption.

- config.quota.op should define the operation to be carried out. Valid operations are:
 - sched_quota_add for creating a new thread group on cpu. The new group identifier will be written back to info.tgid upon success. A new group is given no initial runtime budget when created. sched quota set should be issued to enable it.
 - sched_quota_remove for deleting a thread group on cpu. The group identifier should be passed in config.guota.remove.tgid.
 - sched_quota_set for updating the scheduling parameters of a thread group defined on cpu.
 The group identifier should be passed in config.quota.set.tgid, along with the allotted percentage of the quota interval (config.quota.set.quota), and the peak percentage allowed (config.contage.equota.set.quota_peak).

All three operations fill in the *config.info* structure with the information reflecting the state of the scheduler on *cpu* with respect to *policy*, after the requested changes have been applied.

Parameters

len overall length of the configuration data (in bytes).

Returns

0 on success; an error number if:

- EINVAL, *cpu* is invalid, or *policy* is unsupported by the current kernel configuration, *len* is invalid, or *config* contains invalid parameters.
- ENOMEM, lack of memory to perform the operation.
- EBUSY, with *policy* equal to SCHED_QUOTA, if an attempt is made to remove a thread group which still manages threads.
- ESRCH, with policy equal to SCHED_QUOTA, if the group identifier required to perform the operation is not valid.

Tags

thread-unrestricted, switch-primary

Set the scheduling policy and parameters of the specified process.

This service set the scheduling policy of the Cobalt process identified by *pid* to the value *policy*, and its scheduling parameters (i.e. its priority) to the value pointed to by *param*.

If the current Linux thread ID is passed (see gettid(2)), this service turns the current regular POSIX thread into a Cobalt thread. If *pid* is neither the identifier of the current thread nor the identifier of an existing Cobalt thread, this service falls back to the regular sched_setscheduler() service.

Parameters

pid	target process/thread;
policy	scheduling policy, one of SCHED_FIFO, SCHED_RR, or SCHED_OTHER;
param	scheduling parameters address.

Returns

0 on success:

an error number if:

- ESRCH, pid is invalid;
- EINVAL, policy or param->sched priority is invalid;
- EAGAIN, insufficient memory available from the system heap, increase CONFIG_XENO_O
 —
 PT_SYS_HEAPSZ;
- EFAULT, param is an invalid address;

See also

Specification.

Note

See sched setscheduler ex().

Tags

thread-unrestricted, switch-secondary, switch-primary

References sched_setscheduler_ex().

Referenced by sched_get_priority_max().

```
6.58.2.10 sched setscheduler ex()
```

Set extended scheduling policy of a process.

This service is an extended version of the sched_setscheduler() service, which supports Cobalt-specific and/or additional scheduling policies, not available with the host Linux environment. It sets the scheduling policy of the Cobalt process/thread identified by *pid* to the value *policy*, and the scheduling parameters (e.g. its priority) to the value pointed to by *par*.

If the current Linux thread ID or zero is passed (see gettid(2)), this service may turn the current regular POSIX thread into a Cobalt thread.

Parameters

pid	target process/thread. If zero, the current thread is assumed.
policy	scheduling policy, one of SCHED_WEAK, SCHED_FIFO, SCHED_COBALT, SCHED_RR, SCHED_SPORADIC, SCHED_TP, SCHED_QUOTA or SCHED_NORMAL;
param_ex	address of scheduling parameters. As a special exception, a negative sched_priority value is interpreted as if SCHED_WEAK was given in <i>policy</i> , using the absolute value of this parameter as the weak priority level.

When CONFIG_XENO_OPT_SCHED_WEAK is enabled, SCHED_WEAK exhibits priority levels in the [0..99] range (inclusive). Otherwise, sched priority must be zero for the SCHED WEAK policy.

Returns

0 on success;

an error number if:

- ESRCH, pid is not found;
- EINVAL, pid is negative, param_ex is NULL, any of policy or param_ex->sched_priority is invalid:
- EAGAIN, insufficient memory available from the system heap, increase CONFIG_XENO_O
 —
 PT_SYS_HEAPSZ;
- EFAULT, param_ex is an invalid address;

Note

See sched_setscheduler().

Tags

thread-unrestricted, switch-secondary, switch-primary

Referenced by sched_setscheduler().

Yield the processor.

This function move the current thread at the end of its priority group.

Return values



See also

Specification.

Tags

thread-unrestricted, switch-primary

References XNRELAX, and XNWEAK.

Referenced by pthread_yield().

6.59 Semaphores

Cobalt/POSIX semaphore services.

Collaboration diagram for Semaphores:



Functions

• int sem_init (sem_t *sem, int pshared, unsigned int value)

Initialize an unnamed semaphore.

int sem_destroy (sem_t *sem)

Destroy an unnamed semaphore.

• int sem_post (sem_t *sem)

Post a semaphore.

int sem_trywait (sem_t *sem)

Attempt to decrement a semaphore.

int sem_wait (sem_t *sem)

Decrement a semaphore.

• int sem_timedwait (sem_t *sem, const struct timespec *abs_timeout)

Attempt to decrement a semaphore with a time limit.

int sem_close (sem_t *sem)

Close a named semaphore.

int sem_unlink (const char *name)

Unlink a named semaphore.

6.59.1 Detailed Description

Cobalt/POSIX semaphore services.

Semaphores are counters for resources shared between threads. The basic operations on semaphores are: increment the counter atomically, and wait until the counter is non-null and decrement it atomically.

Semaphores have a maximum value past which they cannot be incremented. The macro $SEM_{VALU} \leftarrow E_{MAX}$ is defined to be this maximum value.

6.59.2 Function Documentation

6.59 Semaphores 369

```
6.59.2.1 sem_close()

int sem_close (

sem_t * sem )
```

Close a named semaphore.

This service closes the semaphore *sem*. The semaphore is destroyed only when unlinked with a call to the sem_unlink() service and when each call to sem_open() matches a call to this service.

When a semaphore is destroyed, the memory it used is returned to the system heap, so that further references to this semaphore are not guaranteed to fail, as is the case for unnamed semaphores.

This service fails if sem is an unnamed semaphore.

Parameters

sem	the semaphore to be closed.
-----	-----------------------------

Return values

0 on success;
 -1 with errno set if:

 EINVAL, the semaphore sem is invalid or is an unnamed semaphore.

See also

Specification.

Tags

thread-unrestricted, switch-secondary

Destroy an unnamed semaphore.

This service destroys the semaphore *sem*. Threads currently blocked on *sem* are unblocked and the service they called return -1 with *errno* set to EINVAL. The semaphore is then considered invalid by all semaphore services (they all fail with *errno* set to EINVAL) except <u>sem_init()</u>.

This service fails if *sem* is a named semaphore.

Parameters

sem	the semaphore to be destroyed.
-----	--------------------------------

Return values

always	0 on success. If SEM_WARNDEL was mentioned in sem_init_np(), the semaphore is deleted as requested and a strictly positive value is returned to warn the caller if threads were pending on it, otherwise zero is returned. If SEM_NOBUSYDEL was mentioned in sem_init_np(), sem_destroy() may succeed only if no thread is waiting on the semaphore to delete, otherwise -EBUSY is returned.
-1	with errno set if:
	 EINVAL, the semaphore sem is invalid or a named semaphore;
	 EPERM, the semaphore sem is not process-shared and does not belong to the current process.
	 EBUSY, a thread is currently waiting on the semaphore sem with SEM_NOBUSYDEL set.

See also

Specification.

Tags

thread-unrestricted

Initialize an unnamed semaphore.

This service initializes the semaphore *sm*, with the value *value*.

This service fails if sm is already initialized or is a named semaphore.

Parameters

sem	the semaphore to be initialized;
pshared	if zero, means that the new semaphore may only be used by threads in the same process as the thread calling <pre>sem_init()</pre> ; if non zero, means that the new semaphore may be used by any thread that has access to the memory where the semaphore is allocated.
value	the semaphore initial value.

6.59 Semaphores 371

Return values

0 on success,

-1 with errno set if:

- EBUSY, the semaphore sm was already initialized;
- EAGAIN, insufficient memory available to initialize the semaphore, increase CONFIG_XENO_OPT_SHARED_HEAPSZ for a process-shared semaphore, or CONFIG_XENO_OPT_PRIVATE_HEAPSZ for a process-private semaphore.
- EAGAIN, no registry slot available, check/raise CONFIG XENO OPT REGISTRY NRSLOTS.
- EINVAL, the value argument exceeds SEM VALUE MAX.

See also

Specification.

Tags

thread-unrestricted

Post a semaphore.

This service posts the semaphore sem.

If no thread is currently blocked on this semaphore, its count is incremented unless "pulse" mode is enabled for it (see sem_init_np(), SEM_PULSE). If a thread is blocked on the semaphore, the thread heading the wait gueue is unblocked.

Parameters

sem the semaphore to be signaled.

Return values

0 on success;

Return values

- -1 with errno set if:
 - EINVAL, the specified semaphore is invalid or uninitialized;
 - EPERM, the semaphore *sm* is not process-shared and does not belong to the current process;
 - EAGAIN, the semaphore count is *SEM_VALUE_MAX*.

See also

Specification.

Tags

unrestricted

Attempt to decrement a semaphore with a time limit.

const struct timespec * abs_timeout)

This service is equivalent to sem_wait(), except that the caller is only blocked until the timeout abs_← timeout expires.

Parameters

sem	the semaphore to be decremented;
abs_timeout	the timeout, expressed as an absolute value of the relevant clock for the semaphore, either CLOCK_MONOTONIC if SEM_RAWCLOCK was mentioned via sem_init_np(), or CLOCK_REALTIME otherwise.

Return values

0 on success;

6.59 Semaphores 373

Return values

- -1 with errno set if:
 - EPERM, the caller context is invalid;
 - EINVAL, the semaphore is invalid or uninitialized;
 - EINVAL, the specified timeout is invalid;
 - EPERM, the semaphore *sm* is not process-shared and does not belong to the current process;
 - EINTR, the caller was interrupted by a signal while blocked in this service;
 - ETIMEDOUT, the semaphore could not be decremented and the specified timeout expired.

See also

Specification.

Tags

xthread-only, switch-primary

References sem_trywait().

Attempt to decrement a semaphore.

This service is equivalent to sem_wait(), except that it returns immediately if the semaphore sem is currently depleted, and that it is not a cancellation point.

Parameters

sem the semaphore to be decremented.

Return values

0 on success;

Return values

- -1 with *errno* set if:
 - EINVAL, the specified semaphore is invalid or uninitialized;
 - EPERM, the semaphore *sem* is not process-shared and does not belong to the current process;
 - EAGAIN, the specified semaphore is currently fully depleted.

•

See also

Specification.

Tags

xthread-only

Referenced by sem_timedwait(), and sem_wait().

Unlink a named semaphore.

This service unlinks the semaphore named *name*. This semaphore is not destroyed until all references obtained with sem_open() are closed by calling sem_close(). However, the unlinked semaphore may no longer be reached with the sem_open() service.

When a semaphore is destroyed, the memory it used is returned to the system heap, so that further references to this semaphore are not guaranteed to fail, as is the case for unnamed semaphores.

Parameters

name the name of the semaphore to be unlinked.

Return values

0	on success;
-1	with errno set if:
	• ENAMETOOLONG, the length of the <i>name</i> argument exceeds 64 characters;
	ENOENT, the named semaphore does not exist.

6.59 Semaphores 375

See also

Specification.

Tags

thread-unrestricted, switch-secondary

Decrement a semaphore.

This service decrements the semaphore *sem* if it is currently if its value is greater than 0. If the semaphore's value is currently zero, the calling thread is suspended until the semaphore is posted, or a signal is delivered to the calling thread.

This service is a cancellation point for Cobalt threads (created with the pthread_create() service). When such a thread is cancelled while blocked in a call to this service, the semaphore state is left unchanged before the cancellation cleanup handlers are called.

Parameters

sem the semaphore to be decremented.

Return values

0 on success;

-1 with errno set if:

- EPERM, the caller context is invalid;
- EINVAL, the semaphore is invalid or uninitialized;
- EPERM, the semaphore *sem* is not process-shared and does not belong to the current process;
- EINTR, the caller was interrupted by a signal while blocked in this service.

See also

Specification.

Tags

xthread-only, switch-primary

References sem_trywait().

6.60 Thread management

Cobalt (POSIX) thread management services.

Collaboration diagram for Thread management:



Functions

- int pthread_create (pthread_t *ptid_r, const pthread_attr_t *attr, void *(*start)(void *), void *arg)

 Create a new thread.
- int pthread_setmode_np (int clrmask, int setmask, int *mode_r)

 Set the mode of the current thread.
- int pthread_setname_np (pthread_t thread, const char *name)

 Set a thread name.
- int pthread_kill (pthread_t thread, int sig)
 - Send a signal to a thread.
- int pthread_join (pthread_t thread, void **retval)

Wait for termination of a specified thread.

6.60.1 Detailed Description

Cobalt (POSIX) thread management services.

See also

Specification.

6.60.2 Function Documentation

Create a new thread.

This service creates a thread managed by the Cobalt core in a dual kernel configuration.

Attributes of the new thread depend on the attr argument. If attr is NULL, default values for these attributes are used.

Returning from the start routine has the same effect as calling pthread_exit() with the return value.

Parameters

ptid⊷	address where the identifier of the new thread will be stored on success;
_r	
attr	thread attributes;
start	thread start routine;
arg	opaque user-supplied argument passed to start;

Returns

0 on success;

an error number if:

- EINVAL, attr is invalid;
- EAGAIN, insufficient memory available from the system heap to create a new thread, increase CONFIG_XENO_OPT_SYS_HEAPSZ;
- EINVAL, thread attribute *inheritsched* is set to PTHREAD_INHERIT_SCHED and the calling thread does not belong to the Cobalt interface;

See also

Specification.

Note

When creating a Cobalt thread for the first time, libcobalt installs an internal handler for the SIGSHAD → OW signal. If you had previously installed a handler for such signal before that point, such handler will be exclusively called for any SIGSHADOW occurrence Xenomai did not send.

If, however, an application-defined handler for SIGSHADOW is installed afterwards, overriding the lib-cobalt handler, the new handler is required to call cobalt_sigshadow_handler() on entry. This routine returns a non-zero value for every occurrence of SIGSHADOW issued by the Cobalt core. If zero instead, the application-defined handler should process the signal.

int cobalt sigshadow handler(int sig, siginfo t *si, void *ctxt);

You should register your handler with sigaction(2), setting the SA_SIGINFO flag.

Tags

thread-unrestricted, switch-secondary

Wait for termination of a specified thread.

If *thread* is running and joinable, this service blocks the caller until *thread* terminates or detaches. When *thread* terminates, the caller is unblocked and its return value is stored at the address *value_ptr*.

On the other hand, if *thread* has already finished execution, its return value collected earlier is stored at the address *value_ptr* and this service returns immediately.

This service is a cancelation point for Cobalt threads: if the calling thread is canceled while blocked in a call to this service, the cancelation request is honored and *thread* remains joinable.

Multiple simultaneous calls to pthread_join() specifying the same running target thread block all the callers until the target thread terminates.

Parameters

thread	identifier of the thread to wait for;
retval	address where the target thread return value will be stored on success.

Returns

0 on success;

an error number if:

- ESRCH, thread is invalid;
- EDEADLK, attempting to join the calling thread;
- EINVAL, thread is detached;
- EPERM, the caller context is invalid.

See also

```
Specification.
```

Tags

xthread-only, switch-secondary, switch-primary

References pthread setschedparam().

Send a signal to a thread.

This service send the signal *sig* to the Cobalt thread *thread* (created with pthread_create()). If *sig* is zero, this service check for existence of the thread *thread*, but no signal is sent.

Parameters

thread	thread identifier;
sig	signal number.

Returns

0 on success:

an error number if:

- EINVAL, sig is an invalid signal number;
- EAGAIN, the maximum number of pending signals has been exceeded;
- ESRCH, thread is an invalid thread identifier.

See also

Specification.

Tags

thread-unrestricted, switch-primary

```
6.60.2.4 pthread_setmode_np()
```

```
int pthread_setmode_np (
    int clrmask,
    int setmask,
    int * mode_r )
```

Set the mode of the current thread.

This service sets the mode of the calling thread, which affects its behavior under particular circumstances. *clrmask* and *setmask* are two masks of mode bits which are respectively cleared and set by pthread_setmode_np():

- PTHREAD_LOCK_SCHED, when set, locks the scheduler, which prevents the current thread from being switched out until the scheduler is unlocked. Unless PTHREAD_DISABLE_LOCKBREAK is also set, the thread may still block, dropping the lock temporarily, in which case, the lock will be reacquired automatically when the thread resumes execution. When PTHREAD_LOCK_SCHED is cleared, the current thread drops the scheduler lock, and the rescheduling procedure is initiated.
- When set, PTHREAD_WARNSW enables debugging notifications for the current thread. A S

 IGDEBUG (Linux-originated) signal is sent when the following atypical or abnormal behavior is detected:
 - the current thread switches to secondary mode. Such notification comes in handy for detecting spurious relaxes, with one of the following reason codes:
 - * SIGDEBUG_MIGRATE_SYSCALL, if the thread issued a regular Linux system call.
 - * SIGDEBUG_MIGRATE_SIGNAL, if the thread had to leave real-time mode for handling a Linux signal.

* SIGDEBUG_MIGRATE_FAULT, if the thread had to leave real-time mode for handling a processor fault/exception.

- the current thread is sleeping on a Cobalt mutex currently owned by a thread running in secondary mode, which reveals a priority inversion. In such an event, the reason code passed to the signal handler will be SIGDEBUG_MIGRATE_PRIOINV.
- the current thread is about to sleep while holding a Cobalt mutex, and CONFIG_XENO_← OPT_DEBUG_MUTEX_SLEEP is enabled in the kernel configuration. In such an event, the reason code passed to the signal handler will be SIGDEBUG_MUTEX_SLEEP. Blocking for acquiring a mutex does not trigger such signal though.
- the current thread has enabled PTHREAD_DISABLE_LOCKBREAK and PTHREAD_LOC
 K_SCHED, then attempts to block on a Cobalt service, which would cause a lock break. In such an event, the reason code passed to the signal handler will be SIGDEBUG_LOCK_B
 REAK.
- PTHREAD_DISABLE_LOCKBREAK disallows breaking the scheduler lock. Normally, the scheduler lock is dropped implicitly when the current owner blocks, then reacquired automatically when the owner resumes execution. If PTHREAD_DISABLE_LOCKBREAK is set, the scheduler lock owner would return with EINTR immediately from any blocking call instead (see PTHREAD_WA← RNSW notifications).
- PTHREAD_CONFORMING can be passed in setmask to switch the current Cobalt thread to its
 preferred runtime mode. The only meaningful use of this switch is to force a real-time thread back
 to primary mode eagerly. Other usages have no effect.

This service is a non-portable extension of the Cobalt interface.

Parameters

clrmask	set of bits to be cleared.
setmask	set of bits to be set.
mode⊷ _r	If non-NULL, <i>mode_r</i> must be a pointer to a memory location which will be written upon success with the previous set of active mode bits. If NULL, the previous set of active mode bits will not be returned.

Returns

0 on success, otherwise:

• EINVAL, some bit in *clrmask* or *setmask* is invalid.

Note

Setting *clrmask* and *setmask* to zero leads to a nop, only returning the previous mode if *mode_r* is a valid address.

Attention

Issuing PTHREAD_CONFORMING is most likely useless or even introduces pure overhead in regular applications, since the Cobalt core performs the necessary mode switches, only when required.

Tags

xthread-only, switch-primary

```
6.60.2.5 pthread_setname_np()
```

Set a thread name.

This service set to *name*, the name of *thread*. This name is used for displaying information in /proc/xenomai/sched.

This service is a non-portable extension of the Cobalt interface.

Parameters

thread	target thread;
name	name of the thread.

Returns

0 on success; an error number if:

• ESRCH, thread is invalid.


Tags

xthread-only

6.61 Scheduling management

Cobalt scheduling management services.

Collaboration diagram for Scheduling management:



Functions

- int pthread_setschedparam (pthread_t thread, int policy, const struct sched_param *param)
 Set the scheduling policy and parameters of the specified thread.
- int pthread_setschedparam_ex (pthread_t thread, int policy, const struct sched_param_ex *param_ex)

Set extended scheduling policy of thread.

int pthread_getschedparam (pthread_t thread, int *__restrict__ policy, struct sched_param *__
restrict__ param)

Get the scheduling policy and parameters of the specified thread.

int pthread_getschedparam_ex (pthread_t thread, int *__restrict__ policy_r, struct sched_param
 _ex *__restrict__ param_ex)

Get extended scheduling policy of thread.

int pthread_yield (void)

Yield the processor.

6.61.1 Detailed Description

Cobalt scheduling management services.

6.61.2 Function Documentation

```
6.61.2.1 pthread_getschedparam()
```

Get the scheduling policy and parameters of the specified thread.

This service returns, at the addresses *policy* and *par*, the current scheduling policy and scheduling parameters (i.e. priority) of the Cobalt thread *tid*. If *thread* is not the identifier of a Cobalt thread, this service fallback to the regular POSIX pthread_getschedparam() service.

Parameters

th	hread	target thread;
р	olicy	address where the scheduling policy of tid is stored on success;
p	aram	address where the scheduling parameters of tid is stored on success.

Returns

0 on success; an error number if:

• ESRCH, tid is invalid.

See also

```
Specification.
```

Tags

thread-unrestricted

References pthread_getschedparam_ex().

Referenced by pthread_getschedparam_ex().

```
6.61.2.2 pthread_getschedparam_ex()
```

Get extended scheduling policy of thread.

This service is an extended version of the regular pthread_getschedparam() service, which also supports Cobalt-specific policies, not available with the host Linux environment.

Parameters

thread	target thread;
policy_r	address where the scheduling policy of thread is stored on success;
param_ex	address where the scheduling parameters of thread are stored on success.

Returns

0 on success; an error number if:

• ESRCH, thread is invalid.

See also

Specification.

Tags

thread-unrestricted

References pthread_getschedparam().

Referenced by pthread getschedparam().

```
6.61.2.3 pthread setschedparam()
```

Set the scheduling policy and parameters of the specified thread.

This service set the scheduling policy of the Cobalt thread identified by *pid* to the value *policy*, and its scheduling parameters (i.e. its priority) to the value pointed to by *param*.

If pthread_self() is passed, this service turns the current thread into a Cobalt thread. If *thread* is not the identifier of a Cobalt thread, this service falls back to the regular pthread_setschedparam() service.

Parameters

thread	target Cobalt thread;
policy	scheduling policy, one of SCHED_FIFO, SCHED_RR, or SCHED_OTHER;
param	address of scheduling parameters.

Returns

0 on success;

an error number if:

- ESRCH, pid is invalid;
- EINVAL, policy or param->sched_priority is invalid;
- EAGAIN, insufficient memory available from the system heap, increase CONFIG_XENO_O⊷ PT_SYS_HEAPSZ;
- EFAULT, param is an invalid address;

See also

Specification.

Note

See pthread_create(), pthread_setschedparam_ex().

Tags

thread-unrestricted, switch-secondary, switch-primary

References pthread_setschedparam_ex().

Referenced by pthread_join().

```
6.61.2.4 pthread_setschedparam_ex()
```

Set extended scheduling policy of thread.

This service is an extended version of the regular pthread_setschedparam() service, which supports Cobalt-specific scheduling policies, not available with the host Linux environment.

This service set the scheduling policy of the Cobalt thread thread to the value *policy*, and its scheduling parameters (e.g. its priority) to the value pointed to by *param_ex*.

If *thread* does not match the identifier of a Cobalt thread, this action falls back to the regular pthread_ setschedparam() service.

Parameters

thread	target Cobalt thread;
policy	scheduling policy, one of SCHED_WEAK, SCHED_FIFO, SCHED_COBALT, SCHED_RR, SCHED_SPORADIC, SCHED_TP, SCHED_QUOTA or SCHED_NORMAL;
param_ex	scheduling parameters address. As a special exception, a negative sched_priority value is interpreted as if SCHED_WEAK was given in <i>policy</i> , using the absolute value of this parameter as the weak priority level.

When CONFIG_XENO_OPT_SCHED_WEAK is enabled, SCHED_WEAK exhibits priority levels in the [0..99] range (inclusive). Otherwise, sched_priority must be zero for the SCHED_WEAK policy.

Returns

0 on success; an error number if:

• ESRCH, thread is invalid;

• EINVAL, policy or param_ex->sched_priority is invalid;

- EAGAIN, insufficient memory available from the system heap, increase CONFIG_XENO_O → PT_SYS_HEAPSZ;
- EFAULT, param_ex is an invalid address;
- EPERM, the calling process does not have superuser permissions.

```
See also
      Specification.
Note
See pthread_create(), pthread_setschedparam().
Tags
     thread-unrestricted, switch-secondary, switch-primary
Referenced by pthread_setschedparam().
6.61.2.5 pthread yield()
 int pthread_yield (
              void )
 Yield the processor.
This function move the current thread at the end of its priority group.
 Return values
  0
 See also
      Specification.
Tags
     thread-unrestricted, switch-primary
References sched_yield().
```

6.62 Smokey API 387

6.62 Smokey API

A simple infrastructure for writing and running smoke tests.

A simple infrastructure for writing and running smoke tests.

Smokey is based on the Copperplate API, therefore is available over the single and dual kernel Xenomai configurations indifferently.

The API provides a set of services for declaring any number of test plugins, embodied into a test program. Each plugin usually implements a single smoke test, checking a particular feature of interest. Each plugin present in the running executable is automatically detected by the Smokey init routine. In addition, the Smokey API parses all arguments and options passed on the command line to the executable, running pre-defined actions which are therefore automatically recognized by all programs linked against the Smokey library.

Writing smoke tests with Smokey

A smoke test is composed of a routine which implements the test code, and a set of runtime settings/attributes for running such code. The routine prototype shall be:

```
int run_<test_name>(struct smokey_test *t, int argc, char *const argv[])
```

The test routine should return a zero value for success, or any negated POSIX error code for indicating the failure to the test driver (e.g. -EINVAL if some value is found to be wrong).

With *t* referring to the Smokey test descriptor, and *argc*, *argv* the argument count and vector expunged from all the inner options which may have been previously interpreted by the Smokey API and inner layers (such as Copperplate).

The Smokey API provides the services to declare a complete test (named **foo** in this example) as follows:

```
#include <smokey/smokey.h>
smokey_test_plugin(foo, // test name
                    SMOKEY_ARGLIST( // argument list
                         SMOKEY_INT(some_integer),
                         SMOKEY_STRING(some_string),
                         SMOKEY_BOOL(some_boolean),
                    // description
               "A dummy Smokey-based test plugin\n"
               '\taccepting three optional arguments:\n'
               "\tsome_integer=<value>\n"
               "\tsome string=<string>\n"
              "\tsome\_bool[=0/1]\n'
static int run_foo(struct smokey_test *t, int argc, char *const argv[])
     int i_arg = 0, nargs;
     char *s_arg = NULL;
     bool b_arg = false;
        nargs = smokey_parse_args(t, argc, argv);
     if (SMOKEY_ARG_ISSET(foo, some_integer))
         _arg = SMOKEY_ARG_INT(foo, some_integer);
     if (SMOKEY_ARG_ISSET(foo, some_string))
         s_arg = SMOKEY_ARG_STRING(foo, some_string);
     if (SMOKEY_ARG_ISSET(foo, some_boolean))
b_arg = SMOKEY_ARG_INT(foo, some_boolean);
     return run_some_hypothetical_smoke_test_code(i_arg, s_arg, b_arg);
```

As illustrated, a smoke test is at least composed of a test plugin descriptor (i.e. *smokey_test_plugin()*), and a run handler named after the test.

Test arguments

Smokey recognizes three argument declarators, namely: SMOKEY_INT(name) for a C (signed) integer, SMOKEY_BOOL(name) for a boolean value and SMOKEY_STRING(name) for a character string.

Each argument can be passed to the test code as a name=value pair, where *name* should match one of the declarators. Before the test-specific arguments can be accessed, a call to smokey_parse_args() must be issued by the test code, passing the parameters received in the run handler. This routine returns the number of arguments found on the command line matching the an entry in SMOKEY_ARGLIST().

Once smokey_parse_args() has returned with a non-zero value, each argument can be checked individually for presence. If a valid argument was matched on the command line, SMOKEY_ARG_ISS ET(test_name, arg_name) returns non-zero. In the latter case, its value can be retrieved by a similar call to SMOKEY_ARG_INT(test_name, arg_name), SMOKEY_ARG_STRING(test_name, arg_name) or SMOKEY_ARG_BOOL(test_name, arg_name).

In the above example, passing "some_integer=3" on the command line of any program implementing such Smokey-based test would cause the variable i_arg to receive "3" as a value.

Pre-defined Smokey options

Any program linked against the Smokey API implicitly recognizes the following options:

—list dumps the list of tests implemented in the program to stdout. The information given includes
the description strings provided in the plugin declarators (smokey_test_plugin()). The position and
symbolic name of each test is also issued, which may be used in id specifications with the –run
option (see below).

Note

Test positions may vary depending on changes to the host program like adding or removing other tests, the symbolic name however is stable and identifies each test uniquely.

-run[=<id[,id...]>] selects the tests to be run, determining the active test list among the overall set
of tests detected in the host program. The test driver code (e.g. implementing a test harness
program on top of Smokey) may then iterate over the smokey_test_list for accessing each active
test individually, in the enumeration order specified by the user (Use for_each_smokey_test() for
that).

If no argument is passed to -run, Smokey assumes that all tests detected in the current program should be picked, filling *smokey test list* with tests by increasing position order.

Otherwise, id may be a test position, a symbolic name, or a range thereof delimited by a dash character. A symbolic name may be matched using a glob(3) type regular expression.

id specification may be:

- 0-9, picks tests #0 to #9
- -3, picks tests #0 to #3

6.62 Smokey API 389

- 5-, picks tests #5 to the highest possible test position
- 2-0, picks tests #2 to #0, in decreasing order
- foo, picks test foo only
- 0,1,foo- picks tests #0, #1, and any test from foo up to the last test defined
- fo* picks any test with a name starting by "fo"
- -exclude=<id[,id...]> excludes the given tests from the test list. The format of the argument is identical to the one accepted by the -run option.
- –keep-going sets the boolean flag smokey_keep_going to a non-zero value, indicating to the test
 driver that receiving a failure code from a smoke test should not abort the test loop. This flag is not
 otherwise interpreted by the Smokey API.
- -verbose[=level] sets the integer *smokey_verbose_mode* to a non-zero value, which should be interpreted by all parties as the desired verbosity level (defaults to 1).
- -vm gives a hint to the test code, about running in a virtual environment, such as KVM. When
 passed, the boolean smokey_on_vm is set. Each test may act upon this setting, such as skipping
 time-dependent checks that may fail due to any slowdown induced by the virtualization.

Writing a test driver based on the Smokey API

A test driver provides the main() entry point, which should iterate over the test list (*smokey_test_list*) prepared by the Smokey API, for running each test individually. The *for_each_smokey_test()* helper is available for iterating over the active test list.

When this entry point is called, all the initialization chores, including the test detection and the active test selection have been performed by the Smokey API already.

Issuing information notices

The printf-like *smokey_note()* routine is available for issuing notices to the output device (currently std-out), unless –silent was detected on the command line. smokey_note() outputs a terminating newline character. Notes are enabled for any verbosity level greater than zero.

Issuing trace messages

The printf-like <code>smokey_trace()</code> routine is available for issuing progress messages to the output device (currently stdout), unless <code>-silent</code> was detected on the command line. <code>smokey_trace()</code> outputs a terminating newline character. Traces are enabled for any verbosity level greater than one.

Therefore, a possible implementation of a test driver could be as basic as:

6.63 Asynchronous acquisition API

Collaboration diagram for Asynchronous acquisition API:



Data Structures

struct a4l_cmd_desc

Structure describing the asynchronous instruction.

Functions

• int a4l_snd_command (a4l_desc_t *dsc, a4l_cmd_t *cmd)

Send a command to an Analoy device.

int a4l_snd_cancel (a4l_desc_t *dsc, unsigned int idx_subd)

Cancel an asynchronous acquisition.

• int a4l_set_bufsize (a4l_desc_t *dsc, unsigned int idx_subd, unsigned long size)

Change the size of the asynchronous buffer.

• int a4l_get_bufsize (a4l_desc_t *dsc, unsigned int idx_subd, unsigned long *size)

Get the size of the asynchronous buffer.

 int a4l_mark_bufrw (a4l_desc_t *dsc, unsigned int idx_subd, unsigned long cur, unsigned long *new)

Update the asynchronous buffer state.

int a4l_poll (a4l_desc_t *dsc, unsigned int idx_subd, unsigned long ms_timeout)

Get the available data count.

• int a4l_mmap (a4l_desc_t *dsc, unsigned int idx_subd, unsigned long size, void **ptr)

Map the asynchronous ring-buffer into a user-space.

ANALOGY CMD xxx

Common command flags definitions

#define A4L_CMD_SIMUL 0x1

Do not execute the command, just check it.

• #define A4L_CMD_BULK 0x2

Perform data recovery / transmission in bulk mode.

#define A4L_CMD_WRITE 0x4

Perform a command which will write data to the device.

TRIG xxx

Command triggers flags definitions

#define TRIG NONE 0x00000001

Never trigger.

#define TRIG NOW 0x00000002

Trigger now + N ns.

#define TRIG FOLLOW 0x00000004

Trigger on next lower level trig.

• #define TRIG TIME 0x00000008

Trigger at time N ns.

#define TRIG_TIMER 0x00000010

Trigger at rate N ns.

#define TRIG COUNT 0x00000020

Trigger when count reaches N.

#define TRIG_EXT 0x00000040

Trigger on external signal N.

#define TRIG_INT 0x00000080

Trigger on analogy-internal signal N.

#define TRIG_OTHER 0x00000100

Driver defined trigger.

#define TRIG_WAKE_EOS 0x0020

Wake up on end-of-scan.

#define TRIG_ROUND_MASK 0x00030000

Trigger not implemented yet.

#define TRIG_ROUND_NEAREST 0x00000000

Trigger not implemented yet.

• #define TRIG_ROUND_DOWN 0x00010000

Trigger not implemented yet.

#define TRIG_ROUND_UP 0x00020000

Trigger not implemented yet.

#define TRIG_ROUND_UP_NEXT 0x00030000

Trigger not implemented yet.

Channel macros

Specific precompilation macros and constants useful for the channels descriptors tab located in the command structure

#define CHAN(a) ((a) & 0xffff)

Channel indication macro.

#define RNG(a) (((a) & 0xff) << 16)

Range definition macro.

#define AREF(a) (((a) & 0x03) << 24)

Reference definition macro.

#define FLAGS(a) ((a) & CR_FLAGS_MASK)

Flags definition macro.

```
• #define PACK(a, b, c) (a | RNG(b) | AREF(c))
```

Channel + range + reference definition macro.

#define PACK_FLAGS(a, b, c, d) (PACK(a, b, c) | FLAGS(d))

Channel + range + reference + flags definition macro.

#define AREF_GROUND 0x00

Analog reference is analog ground.

• #define AREF COMMON 0x01

Analog reference is analog common.

#define AREF_DIFF 0x02

Analog reference is differential.

• #define AREF_OTHER 0x03

Analog reference is undefined.

6.63.1 Detailed Description

6.63.2 Function Documentation

Get the size of the asynchronous buffer.

During asynchronous acquisition, a ring-buffer enables the transfers from / to user-space. Functions like a4l_read() or a4l_write() recovers / sends data through this intermediate buffer. Please note, there is one ring-buffer per subdevice capable of asynchronous acquisition. By default, each buffer size is set to 64 KB.

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())	
in	idx_subd	Index of the concerned subdevice	
out	size	Buffer size	

Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong

References a4l_descriptor::fd.

Update the asynchronous buffer state.

When the mapping of the asynchronous ring-buffer (thanks to a4l_mmap() is disabled, common read / write syscalls have to be used. In input case, a4l_read() must be used for:

- the retrieval of the acquired data.
- the notification to the Analogy layer that the acquired data have been consumed, then the area in the ring-buffer which was containing becomes available. In output case, a4l_write() must be called to:
- send some data to the Analogy layer.
- signal the Analogy layer that a chunk of data in the ring-buffer must be used by the driver.

In mmap configuration, these features are provided by unique function named a4l_mark_bufrw(). In input case, a4l_mark_bufrw() can :

- recover the count of data newly available in the ring-buffer.
- notify the Analogy layer how many bytes have been consumed. In output case, a4l_mark_bufrw()
- · recover the count of data available for writing.
- notify Analogy that some bytes have been written.

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())	
in	idx_subd	Index of the concerned subdevice	
in	cur	Amount of consumed data	
out	new	Amount of available data	

Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong; the descriptor and the new pointer should be checked; check also the kernel log ("dmesg")
- -EFAULT is returned if a user <-> kernel transfer went wrong

References a4I_descriptor::fd.

Map the asynchronous ring-buffer into a user-space.

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())	
in	idx_subd	ndex of the concerned subdevice	
in	size	Size of the buffer to map	
out	ptr	Address of the pointer containing the assigned address on return	

Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong, the descriptor and the pointer should be checked; check also the kernel log
- -EPERM is returned if the function is called in an RT context or if the buffer to resize is mapped in user-space (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EBUSY is returned if the buffer is already mapped in user-space

References a4l_descriptor::fd.

Get the available data count.

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())	
in	idx_subd	Index of the concerned subdevice	
in	ms_timeout	The number of miliseconds to wait for some data to be available. Passing A4L_INFINITE causes the caller to block indefinitely until some data is available. Passing A4L_NONBLOCK causes the function to return immediately without waiting for any available data	

Returns

the available data count. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- · -EINTR is returned if calling task has been unblocked by a signal

References a4l_descriptor::fd.

Change the size of the asynchronous buffer.

During asynchronous acquisition, a ring-buffer enables the transfers from / to user-space. Functions like a4l_read() or a4l_write() recovers / sends data through this intermediate buffer. The function a4l_set_bufsize() can change the size of the ring-buffer. Please note, there is one ring-buffer per subdevice capable of asynchronous acquisition. By default, each buffer size is set to 64 KB.

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())	
in	idx_subd	Index of the concerned subdevice	
in	size	New buffer size, the maximal tolerated value is 16MB (A4L_BUF_MAXSIZE)	

Returns

0 on success. Otherwise:

- -EINVAL is returned if the analogy descriptor is not correct or if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EPERM is returned if the function is called in an RT context or if the buffer to resize is mapped in user-space (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EBUSY is returned if the selected subdevice is already processing an asynchronous operation
- · -ENOMEM is returned if the system is out of memory

References a4l_sys_bufcfg(), and a4l_descriptor::fd.

Cancel an asynchronous acquisition.

The function a4l_snd_cancel() is devoted to stop an asynchronous acquisition configured thanks to an Analogy command.

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())	
in	idx_subd	Subdevice index	

Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EIO is returned if the selected subdevice does not support asynchronous operation

References a4l_descriptor::fd.

Send a command to an Analoy device.

The function a4l_snd_command() triggers asynchronous acquisition.

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())	
in	cmd	Command structure	

Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- · -ENOMEM is returned if the system is out of memory

- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EIO is returned if the selected subdevice cannot handle command
- -EBUSY is returned if the selected subdevice is already processing an asynchronous operation

References a4I_descriptor::fd.

6.64 Asynchronous acquisition API

Collaboration diagram for Asynchronous acquisition API:



Functions

- int a4l_async_read (a4l_desc_t *dsc, void *buf, size_t nbyte, unsigned long ms_timeout)

 Perform asynchronous read operation on the analog input subdevice.
- int a4l_async_write (a4l_desc_t *dsc, void *buf, size_t nbyte, unsigned long ms_timeout)

 Perform asynchronous write operation on the analog input subdevice.

6.64.1 Detailed Description

6.64.2 Function Documentation

Perform asynchronous read operation on the analog input subdevice.

The function a4l_async_read() is only useful for acquisition configured through an Analogy command.

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())	
out	buf	Input buffer	
in	nbyte	Number of bytes to read	
in	ms_timeout		

Returns

Number of bytes read, otherwise negative error code:

- -EINVAL is returned if some argument is missing or wrong, the descriptor should be checked; check also the kernel log
- -ENOENT is returned if the device's reading subdevice is idle (no command was sent)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EINTR is returned if calling task has been unblocked by a signal

Perform asynchronous write operation on the analog input subdevice.

The function a4l_async_write() is only useful for acquisition configured through an Analogy command.

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	buf	Ouput buffer
in	nbyte	Number of bytes to write
in	ms_timeout	The number of miliseconds to wait for some free area to be available. Passing A4L_INFINITE causes the caller to block indefinitely until some data is available. Passing A4L_NONBLOCK causes the function to return immediately without waiting any available space to write data.

Returns

Number of bytes written, otherwise negative error code:

- -EINVAL is returned if some argument is missing or wrong, the descriptor should be checked; check also the kernel log
- -ENOENT is returned if the device's reading subdevice is idle (no command was sent)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- · -EINTR is returned if calling task has been unblocked by a signal

6.65 Software calibration API

Collaboration diagram for Software calibration API:



Functions

- int a4l_read_calibration_file (char *name, struct a4l_calibration_data *data)

 Read the analogy generated calibration file.
- int a4l_get_softcal_converter (struct a4l_polynomial *converter, int subd, int chan, int range, struct a4l_calibration_data *data)

Get the polynomial that will be use for the software calibration.

• int a4l_rawtodcal (a4l_chinfo_t *chan, double *dst, void *src, int cnt, struct a4l_polynomial *converter)

Convert raw data (from the driver) to calibrated double units.

• int a4l_dcaltoraw (a4l_chinfo_t *chan, void *dst, double *src, int cnt, struct a4l_polynomial *converter)

Convert double values to raw calibrated data using polynomials.

6.65.1 Detailed Description

6.65.2 Function Documentation

Convert double values to raw calibrated data using polynomials.

Parameters

in	chan	Channel descriptor
out	dst	Ouput buffer
in Generate	SrC ed by Doxygen	Input buffer
in	cnt	Count of conversion to perform
in	converter	Conversion polynomial

Returns

the count of conversion performed, otherwise a negative error code:

• -EINVAL is returned if some argument is missing or wrong; chan, rng and the pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l_fill_desc() should be called before using a4l_dcaltoraw()

Get the polynomial that will be use for the software calibration.

Parameters

out	converter	Polynomial to be used on the software calibration
in	subd	Subdevice index
in	chan	Channel
in	range	Range
in	data	Calibration data read from the calibration file

Returns

-1 on error

Convert raw data (from the driver) to calibrated double units.

Parameters

in	chan	Channel descriptor
out	dst	Ouput buffer
in	src	Input buffer
in	cnt	Count of conversion to perform
in	converter	Conversion polynomial

Generated by Doxygen

Returns

the count of conversion performed, otherwise a negative error code:

• -EINVAL is returned if some argument is missing or wrong; chan, rng and the pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l_fill_desc() should be called before using a4l_rawtodcal()

Read the analogy generated calibration file.

Parameters

	in	name	Name of the calibration file
out data Pointer to the calibration file		Pointer to the calibration file contents	

6.66 Descriptor Syscall API

Collaboration diagram for Descriptor Syscall API:



Data Structures

struct a4l_descriptor

Structure containing device-information useful to users.

Functions

• int a4l_sys_desc (int fd, a4l_desc_t *dsc, int pass)

Get a descriptor on an attached device.

ANALOGY_xxx_DESC

Constants used as argument so as to define the description depth to recover

- #define A4L_BSC_DESC 0x0
 BSC stands for basic descriptor (device data)
- #define A4L_CPLX_DESC 0x1
 CPLX stands for complex descriptor (subdevice + channel + range data)
- 6.66.1 Detailed Description
- 6.66.2 Function Documentation

Get a descriptor on an attached device.

Once the device has been attached, the function a4l_get_desc() retrieves various information on the device (subdevices, channels, ranges, etc.). The function a4l_get_desc() can be called twice:

- The first time, almost all the fields, except sbdata, are set (board_name, nb_subd, idx_read_subd, idx_write_subd, magic, sbsize); the last field, sbdata, is supposed to be a pointer on a buffer, which size is defined by the field sbsize.
- The second time, the buffer pointed by sbdata is filled with data about the subdevices, the channels and the ranges.

Between the two calls, an allocation must be performed in order to recover a buffer large enough to contain all the data. These data are set up according a root-leaf organization (device -> subdevice -> channel -> range). They cannot be accessed directly; specific functions are available so as to retrieve them:

- a4l_get_subdinfo() to get some subdevice's characteristics.
- a4l get chaninfo() to get some channel's characteristics.
- a4l get rnginfo() to get some range's characteristics.

Parameters

in	fd	Driver file descriptor	
out	dsc	Device descriptor	
in	pass	Description level to retrieve:	
		 A4L_BSC_DESC to get the basic descriptor (notably the size of the data buffer to allocate). 	
		 A4L_CPLX_DESC to get the complex descriptor, the data buffer is filled with characteristics about the subdevices, the channels and the ranges. 	

Returns

0 on success. Otherwise:


- -EINVAL is returned if some argument is missing or wrong; the pass argument should be checked; check also the kernel log ("dmesg")
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENODEV is returned if the descriptor is incoherent (the device may be unattached)

References A4L_BSC_DESC, and a4l_descriptor::magic.

Referenced by a4l_open().

6.67 Descriptor API

Collaboration diagram for Descriptor API:



Functions

- int a4l_open (a4l_desc_t *dsc, const char *fname)
 - Open an Analogy device and basically fill the descriptor.
- int a4l_close (a4l_desc_t *dsc)
 - Close the Analogy device related with the descriptor.
- int a4l_fill_desc (a4l_desc_t *dsc)
 - Fill the descriptor with subdevices, channels and ranges data.
- int a4l_get_subdinfo (a4l_desc_t *dsc, unsigned int subd, a4l_sbinfo_t **info)
 - Get an information structure on a specified subdevice.
- int a4l_get_chinfo (a4l_desc_t *dsc, unsigned int subd, unsigned int chan, a4l_chinfo_t **info)

 Get an information structure on a specified channel.
- int a4l_get_rnginfo (a4l_desc_t *dsc, unsigned int subd, unsigned int chan, unsigned int rng, a4l
 _rnginfo_t **info)

Get an information structure on a specified range.

6.67.1 Detailed Description

This is the API interface used to fill and use Analogy device descriptor structure

6.67.2 Function Documentation

Close the Analogy device related with the descriptor.

The file descriptor is associated with a context. The context is one of the enabler of asynchronous transfers. So, by closing the file descriptor, the programer must keep in mind that the currently occuring asynchronous transfer will cancelled.

6.67 Descriptor API 407

Parameters

in dsc	Device descriptor
--------	-------------------

Returns

0 on success. Otherwise:

• -EINVAL is returned if some argument is missing or wrong; the the dsc pointer should be checked; check also the kernel log ("dmesg")

References a4l_sys_close(), and a4l_descriptor::fd.

Fill the descriptor with subdevices, channels and ranges data.

Parameters

	in	dsc	Device descriptor partly filled by a4l_open().
--	----	-----	--

Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong; the the dsc pointer should be checked; check also the kernel log ("dmesg")
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENODEV is returned if the descriptor is incoherent (the device may be unattached)

References a4l_descriptor::fd, and a4l_descriptor::magic.

Get an information structure on a specified channel.

Parameters

in	dsc	Device descriptor filled by a4l_open() and a4l_fill_desc()	
in	subd	Subdevice index	
in	chan	Channel index	
out	info	Channel information structure	

Returns

0 on success. Otherwise:

• -EINVAL is returned if some argument is missing or wrong; subd, chan and the dsc pointer should be checked; check also the kernel log ("dmesg"); WARNING: a4l_fill_desc() should be called before using a4l_get_chinfo()

References a4l_descriptor::magic.

Get an information structure on a specified range.

Parameters

in	dsc	Device descriptor filled by a4l_open() and a4l_fill_desc()	
in	subd	Subdevice index	
in	chan	Channel index	
in	rng	Range index	
out	info	Range information structure	

Returns

0 on success. Otherwise:

• -EINVAL is returned if some argument is missing or wrong; subd, chan, rng and the dsc pointer should be checked; check also the kernel log ("dmesg"); WARNING: a4l_fill_desc() should be called before using a4l_get_rnginfo()

References a4I_descriptor::magic.

6.67 Descriptor API 409

Get an information structure on a specified subdevice.

Parameters

in	dsc	Device descriptor filled by a4l_open() and a4l_fill_desc()	
in	subd	Subdevice index	
out	info	Subdevice information structure	

Returns

0 on success. Otherwise:

• -EINVAL is returned if some argument is missing or wrong; subd and the dsc pointer should be checked; check also the kernel log ("dmesg"); WARNING: a4l_fill_desc() should be called before using a4l_get_subdinfo().

References a4I_descriptor::magic.

Referenced by a4l_sync_dio().

Open an Analogy device and basically fill the descriptor.

Parameters

out	dsc	Device descriptor
in	fname	Device name

Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong; the fname and the dsc pointer should be checked; check also the kernel log ("dmesg")
- -EFAULT is returned if a user <-> kernel transfer went wrong

References A4L_BSC_DESC, a4l_sys_close(), a4l_sys_desc(), a4l_sys_open(), and a4l_descriptor::fd.

6.68 Math API

Collaboration diagram for Math API:



Functions

int a4l_math_polyfit (unsigned r_dim, double *r, double orig, const unsigned dim, double *x, double *y)

Calculate the polynomial fit.

- void a4l_math_mean (double *pmean, double *val, unsigned nr)
 - Calculate the aritmetic mean of an array of values.
- void a4l_math_stddev (double *pstddev, double mean, double *val, unsigned nr)
 Calculate the standard deviation of an array of values.
- void a4l_math_stddev_of_mean (double *pstddevm, double mean, double *val, unsigned nr)

 Calculate the standard deviation of the mean.
- 6.68.1 Detailed Description
- 6.68.2 Function Documentation

Calculate the aritmetic mean of an array of values.

Parameters

out	pmean	Pointer to the resulting value
in	val	Array of input values
in	nr	Number of array elements

6.68 Math API 411

```
6.68.2.2 a4l_math_polyfit()

int a4l_math_polyfit (
    unsigned r_dim,
    double * r,
    double orig,
    const unsigned dim,
    double * x,
    double * y)
```

Calculate the polynomial fit.

Parameters

in	r_dim	Number of elements of the resulting polynomial	
out	r	Polynomial	
in	orig		
in	dim	Number of elements in the polynomials	
in	X	Polynomial	
in	у	Polynomial	

Operation:

We are looking for Res such that A.Res = Y, with A the Vandermonde matrix made from the X vector.

Using the least square method, this means finding Res such that: $A^tA.Res = A^tY$

If we write A = Q.R with $Q^{\uparrow}t.Q = 1$, and R non singular, this can be reduced to: R.Res = $Q^{\uparrow}t.Y$

mat_qr() gives us R and Q^t.Y from A and Y

We can then obtain Res by back substitution using mat_upper_triangular_backsub() with R upper triangular.

Calculate the standard deviation of an array of values.

Parameters

out	pstddev	Pointer to the resulting value
in	mean	Mean value
in	val	Array of input values
in Generate	ກາ ed by Doxygen	Number of array elements

Referenced by a4l_math_stddev_of_mean().

Calculate the standard deviation of the mean.

Parameters

out	pstddevm	Pointer to the resulting value
in	mean	Mean value
in	val	Array of input values
in	nr	Number of array elements

References a4I_math_stddev().

6.69 Range / conversion API

Collaboration diagram for Range / conversion API:



Functions

- int a4l_sizeof_chan (a4l_chinfo_t *chan)
 - Get the size in memory of an acquired element.
- int a4l_sizeof_subd (a4l_sbinfo_t *subd)

Get the size in memory of a digital acquired element.

• int a4l_find_range (a4l_desc_t *dsc, unsigned int idx_subd, unsigned int idx_chan, unsigned long unit, double min, double max, a4l_rnginfo_t **rng)

Find the must suitable range.

- int a4l_rawtoul (a4l_chinfo_t *chan, unsigned long *dst, void *src, int cnt)
 - Unpack raw data (from the driver) into unsigned long values.
- int a4l_rawtof (a4l_chinfo_t *chan, a4l_rnginfo_t *rng, float *dst, void *src, int cnt)

Convert raw data (from the driver) to float-typed samples.

int a4l_rawtod (a4l_chinfo_t *chan, a4l_rnginfo_t *rng, double *dst, void *src, int cnt)

Convert raw data (from the driver) to double-typed samples.

• int a4l ultoraw (a4l chinfo t *chan, void *dst, unsigned long *src, int cnt)

Pack unsigned long values into raw data (for the driver)

• int a4l_ftoraw (a4l_chinfo_t *chan, a4l_rnginfo_t *rng, void *dst, float *src, int cnt)

Convert float-typed samples to raw data (for the driver)

• int a4l_dtoraw (a4l_chinfo_t *chan, a4l_rnginfo_t *rng, void *dst, double *src, int cnt)

Convert double-typed samples to raw data (for the driver)

6.69.1 Detailed Description

6.69.2 Function Documentation

Convert double-typed samples to raw data (for the driver)

Parameters

in	chan	Channel descriptor
in	rng	Range descriptor
out	dst	Ouput buffer
in	src	Input buffer
in	cnt	Count of conversion to perform

Returns

the count of conversion performed, otherwise a negative error code:

 -EINVAL is returned if some argument is missing or wrong; chan, rng and the pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l_fill_desc() should be called before using a4l_dtoraw()

Find the must suitable range.

Parameters

in	dsc	Device descriptor filled by a4l_open() and a4l_fill_desc()	
in	idx_subd	Index of the concerned subdevice	
in	idx_chan	Index of the concerned channel	
in	unit	Unit type used in the range	
in	min	Minimal limit value	
in	max	Maximal limit value	
out	rng	Found range	

Returns

The index of the most suitable range on success. Otherwise:

- -ENOENT is returned if a suitable range is not found.
- -EINVAL is returned if some argument is missing or wrong; idx_subd, idx_chan and the dsc pointer should be checked; check also the kernel log ("dmesg"); WARNING: a4l_fill_desc() should be called before using a4l_find_range()

References a4l_descriptor::magic.

Convert float-typed samples to raw data (for the driver)

Parameters

in	chan	Channel descriptor
in	rng	Range descriptor
out	dst	Ouput buffer
in	src	Input buffer
in	cnt	Count of conversion to perform

Returns

the count of conversion performed, otherwise a negative error code:

 -EINVAL is returned if some argument is missing or wrong; chan, rng and the pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l_fill_desc() should be called before using a4l_ftoraw()

Convert raw data (from the driver) to double-typed samples.

Parameters

in	chan	Channel descriptor
in	rng	Range descriptor
out	dst	Ouput buffer
in	src	Input buffer
Generate	ed Ық Роху	geount of conversion to perform

Returns

the count of conversion performed, otherwise a negative error code:

 -EINVAL is returned if some argument is missing or wrong; chan, rng and the pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l_fill_desc() should be called before using a4l_rawtod()

Convert raw data (from the driver) to float-typed samples.

Parameters

in	chan	Channel descriptor
in	rng	Range descriptor
out	dst	Ouput buffer
in	src	Input buffer
in	cnt	Count of conversion to perform

Returns

the count of conversion performed, otherwise a negative error code:

 -EINVAL is returned if some argument is missing or wrong; chan, rng and the pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l_fill_desc() should be called before using a4l_rawtod()

Unpack raw data (from the driver) into unsigned long values.

This function takes as input driver-specific data and scatters each element into an entry of an unsigned long table. It is a convenience routine which performs no conversion, just copy.

Parameters

in	chan	Channel descriptor
out	dst	Ouput buffer
in	src	Input buffer
in	cnt	Count of transfer to copy

Returns

the count of copy performed, otherwise a negative error code:

 -EINVAL is returned if some argument is missing or wrong; chan, dst and src pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l_fill_desc() should be called before using a4l_ultoraw()

Get the size in memory of an acquired element.

According to the board, the channels have various acquisition widths. With values like 8, 16 or 32, there is no problem finding out the size in memory (1, 2, 4); however with widths like 12 or 24, this function might be helpful to guess the size needed in RAM for a single acquired element.

Parameters

in	chan	Channel descriptor
----	------	--------------------

Returns

the size in memory of an acquired element, otherwise a negative error code:

• -EINVAL is returned if the argument chan is NULL

Get the size in memory of a digital acquired element.

This function is only useful for DIO subdevices. Digital subdevices are a specific kind of subdevice on which channels are regarded as bits composing the subdevice's bitfield. During a DIO acquisition, all bits are sampled. Therefore, a4l_sizeof_chan() is useless in this case and we have to use a4l_sizeof_ ⇒ subd(). With bitfields which sizes are 8, 16 or 32, there is no problem finding out the size in memory (1, 2, 4); however with widths like 12 or 24, this function might be helpful to guess the size needed in RAM for a single acquired element.

Parameters

in	subd	Subdevice descriptor

Returns

the size in memory of an acquired element, otherwise a negative error code:

• -EINVAL is returned if the argument chan is NULL or if the subdevice is not a digital subdevice

References A4L SUBD DI, A4L SUBD DIO, A4L SUBD DO, and A4L SUBD TYPES.

Referenced by a4I sync dio().

Pack unsigned long values into raw data (for the driver)

This function takes as input a table of unsigned long values and gather them according to the channel width. It is a convenience routine which performs no conversion, just formatting.

Parameters

in	chan	Channel descriptor
out	dst	Ouput buffer
in	src	Input buffer
in	cnt	Count of transfer to copy


Returns

the count of copy performed, otherwise a negative error code:

 -EINVAL is returned if some argument is missing or wrong; chan, dst and src pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l_fill_desc() should be called before using a4l_ultoraw() 6.70 Level 1 API 419

6.70 Level 1 API

Collaboration diagram for Level 1 API:



Modules

- Asynchronous acquisition API
- Descriptor API
- Synchronous acquisition API

6.70.1 Detailed Description

6.71 Synchronous acquisition API

Collaboration diagram for Synchronous acquisition API:



Data Structures

• struct a4l_instruction

Structure describing the synchronous instruction.

struct a4l_instruction_list

Structure describing the list of synchronous instructions.

Macros

#define A4L_INSN_WAIT_MAX 100000
 Maximal wait duration.

Functions

int a4l_snd_insnlist (a4l_desc_t *dsc, a4l_insnlst_t *arg)

Perform a list of synchronous acquisition misc operations.

int a4l snd insn (a4l desc t *dsc, a4l insn t *arg)

Perform a synchronous acquisition misc operation.

Instruction type

Flags to define the type of instruction

- #define A4L_INSN_READ (0 | A4L_INSN_MASK_READ)
 Read instruction.
- #define A4L_INSN_WRITE (1 | A4L_INSN_MASK_WRITE)
 Write instruction.
- #define A4L_INSN_BITS

"Bits" instruction

#define A4L INSN CONFIG

Configuration instruction.

#define A4L_INSN_GTOD

Get time instruction.

#define A4L_INSN_WAIT

Wait instruction.

#define A4L_INSN_INTTRIG

Trigger instruction (to start asynchronous acquisition)

Configuration instruction type

Values to define the type of configuration instruction

- #define A4L INSN CONFIG DIO INPUT 0
- #define A4L INSN CONFIG DIO OUTPUT 1
- #define A4L_INSN_CONFIG_DIO_OPENDRAIN 2
- #define A4L INSN CONFIG ANALOG TRIG 16
- #define A4L INSN CONFIG ALT SOURCE 20
- #define A4L INSN CONFIG DIGITAL TRIG 21
- #define A4L INSN CONFIG BLOCK SIZE 22
- #define A4L_INSN_CONFIG_TIMER_1 23
- #define A4L INSN CONFIG FILTER 24
- #define A4L INSN CONFIG CHANGE_NOTIFY 25
- #define A4L_INSN_CONFIG_SERIAL_CLOCK 26
- #define A4L_INSN_CONFIG_BIDIRECTIONAL_DATA 27
- #define A4L INSN CONFIG DIO QUERY 28
- #define A4L INSN CONFIG PWM OUTPUT 29
- #define A4L_INSN_CONFIG_GET_PWM_OUTPUT 30
- #define A4L INSN CONFIG ARM 31
- #define A4L_INSN_CONFIG_DISARM 32
- #define A4L_INSN_CONFIG_GET_COUNTER_STATUS 33
- #define A4L_INSN_CONFIG_RESET 34
- #define A4L_INSN_CONFIG_GPCT_SINGLE_PULSE_GENERATOR 1001 /* Use CTR as single pulsegenerator */
- #define A4L_INSN_CONFIG_GPCT_PULSE_TRAIN_GENERATOR 1002 /* Use CTR as pulse-traingenerator */
- #define A4L_INSN_CONFIG_GPCT_QUADRATURE_ENCODER 1003 /* Use the counter as encoder */
- #define A4L INSN CONFIG SET GATE SRC 2001 /* Set gate source */
- #define A4L INSN CONFIG GET GATE SRC 2002 /* Get gate source */
- #define A4L INSN CONFIG SET CLOCK SRC 2003 /* Set master clock source */
- #define A4L_INSN_CONFIG_GET_CLOCK_SRC 2004 /* Get master clock source */
- #define A4L_INSN_CONFIG_SET_OTHER_SRC 2005 /* Set other source */
- #define A4L_INSN_CONFIG_SET_COUNTER_MODE 4097
- #define A4L_INSN_CONFIG_SET_ROUTING 4099
- #define A4L INSN CONFIG GET ROUTING 4109

Counter status bits

Status bits for INSN_CONFIG_GET_COUNTER_STATUS

- #define A4L_COUNTER_ARMED 0x1
- #define A4L_COUNTER_COUNTING 0x2
- #define A4L COUNTER TERMINAL COUNT 0x4

IO direction

Values to define the IO polarity

- #define A4L INPUT 0
- #define A4L OUTPUT 1
- #define **A4L_OPENDRAIN** 2

Events types

422

Values to define the Analogy events. They might used to send some specific events through the instruction interface.

- #define **A4L EV START** 0x00040000
- #define A4L_EV_SCAN_BEGIN 0x00080000
- #define A4L EV CONVERT 0x00100000
- #define **A4L EV SCAN END** 0x00200000
- #define **A4L_EV_STOP** 0x00400000

6.71.1 Detailed Description

6.71.2 Function Documentation

Perform a synchronous acquisition misc operation.

The function a4l_snd_insn() triggers a synchronous acquisition.

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	arg	Instruction structure

Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- · -ENOMEM is returned if the system is out of memory

References a4l_descriptor::fd.

Referenced by a4l_sync_dio().

Perform a list of synchronous acquisition misc operations.

The function a4l_snd_insnlist() is able to send many synchronous instructions on a various set of sub-devices, channels, etc.

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	arg	Instructions list structure

Returns


0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENOMEM is returned if the system is out of memory

References a4I_descriptor::fd.

6.72 Level 2 API

Collaboration diagram for Level 2 API:

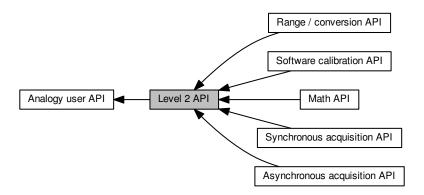

Modules

- Asynchronous acquisition API
- Software calibration API
- Math API
- Range / conversion API
- Synchronous acquisition API

6.72.1 Detailed Description

6.73 Synchronous acquisition API

Collaboration diagram for Synchronous acquisition API:



Functions

• int a4l_sync_write (a4l_desc_t *dsc, unsigned int idx_subd, unsigned int chan_desc, unsigned int ns_delay, void *buf, size_t nbyte)

Perform a synchronous acquisition write operation.

• int a4l_sync_read (a4l_desc_t *dsc, unsigned int idx_subd, unsigned int chan_desc, unsigned int ns_delay, void *buf, size_t nbyte)

Perform a synchronous acquisition read operation.

- int a4l_sync_dio (a4l_desc_t *dsc, unsigned int idx_subd, void *mask, void *buf)

 Perform a synchronous acquisition digital acquisition.
- int a4l_config_subd (a4l_desc_t *dsc, unsigned int idx_subd, unsigned int type,...)

 Configure a subdevice.

6.73.1 Detailed Description

6.73.2 Function Documentation

Configure a subdevice.

a4l_config_subd() takes a variable count of arguments. According to the configuration type, some additional argument is necessary:

- A4L INSN CONFIG DIO INPUT: the channel index (unsigned int)
- A4L_INSN_CONFIG_DIO_OUTPUT: the channel index (unsigned int)
- A4L_INSN_CONFIG_DIO_QUERY: the returned DIO polarity (unsigned int *)

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	idx_subd	Index of the concerned subdevice
in	type	Configuration parameter

Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -ENOSYS is returned if the configuration parameter is not supported

References A4L_INSN_CONFIG, and a4l_instruction::type.

Perform a synchronous acquisition digital acquisition.

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	idx_subd	Index of the concerned subdevice
in	mask	Write mask which indicates which bit(s) must be modified
in,out	buf	Input / output buffer

Returns

Number of bytes read, otherwise negative error code:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- · -ENOMEM is returned if the system is out of memory
- -ENOSYS is returned if the driver does not provide any handler "instruction bits"

References a4l_get_subdinfo(), A4L_INSN_BITS, a4l_sizeof_subd(), a4l_snd_insn(), a4l_instruction :: data_size, and a4l_instruction::type.

Perform a synchronous acquisition read operation.

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	idx_subd	Index of the concerned subdevice
in	chan_desc	Channel descriptor (channel, range and reference)
in	ns_delay	Optional delay (in nanoseconds) to wait between the setting of the input channel and sample(s) acquisition(s).
in	buf	Input buffer
in	nbyte	Number of bytes to read

Returns

Number of bytes read, otherwise negative error code:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENOMEM is returned if the system is out of memory

References A4L_INSN_READ, A4L_INSN_WAIT, and a4l_instruction::type.

Perform a synchronous acquisition write operation.

Parameters

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	idx_subd	Index of the concerned subdevice
Generated by Boxygen		Channel descriptor (channel, range and reference)
in ns_delay		Optional delay (in nanoseconds) to wait between the setting of the input channel and sample(s) acquisition(s).
in	buf	Output buffer

Returns

Number of bytes written, otherwise negative error code:


• -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)

- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENOMEM is returned if the system is out of memory

References A4L_INSN_WAIT, A4L_INSN_WRITE, and a4l_instruction::type.

6.74 Analogy user API

Collaboration diagram for Analogy user API:

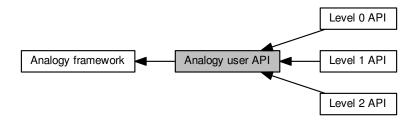

Modules


- Level 1 API
- Level 2 API
- Level 0 API

6.74.1 Detailed Description

This is the API interface of Analogy library

6.75 Level 0 API

Collaboration diagram for Level 0 API:



Modules

- Descriptor Syscall API
- Basic Syscall API
- Attach / detach Syscall API

6.75.1 Detailed Description

System call interface to core Analogy services

This interface should not be used directly by applications.

6.76 Basic Syscall API

Collaboration diagram for Basic Syscall API:



Functions

- int a4l_sys_open (const char *fname)
 - Open an Analogy device.
- int a4l_sys_close (int fd)

Close an Analogy device.

- int a4l_sys_read (int fd, void *buf, size_t nbyte)
 - Read from an Analogy device.
- int a4l_sys_write (int fd, void *buf, size_t nbyte)

 Write to an Analogy device.
- 6.76.1 Detailed Description
- 6.76.2 Function Documentation

Close an Analogy device.

Parameters

in | fd | File descriptor as returned by a4l_sys_open()

Returns

0 on success, otherwise a negative error code.

Referenced by a4l_close(), and a4l_open().

```
6.76.2.2 a4l_sys_open()

int a4l_sys_open (

const char * fname )
```

Open an Analogy device.

Parameters

)

Returns

Positive file descriptor value on success, otherwise a negative error code.

Referenced by a4l_open().

```
6.76.2.3 a4l_sys_read()

int a4l_sys_read (
    int fd,
    void * buf,
    size_t nbyte)
```

Read from an Analogy device.

The function a4l_read() is only useful for acquisition configured through an Analogy command.

Parameters

in	fd	File descriptor as returned by a4l_sys_open()
out	buf	Input buffer
in	nbyte	Number of bytes to read

Returns

Number of bytes read. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -ENOENT is returned if the device's reading subdevice is idle (no command was sent)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- · -EINTR is returned if calling task has been unblocked by a signal

```
6.76.2.4 a4l_sys_write()

int a4l_sys_write (
    int fd,
    void * buf,
    size_t nbyte )
```

Write to an Analogy device.

The function a4l_write() is only useful for acquisition configured through an Analogy command.

Parameters

	in	fd	File descriptor as returned by a4l_sys_open()
	in	buf	Output buffer
Ī	in	nbyte	Number of bytes to write

Returns

Number of bytes written. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -ENOENT is returned if the device's writing subdevice is idle (no command was sent)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EINTR is returned if calling task has been unblocked by a signal

6.77 Attach / detach Syscall API

Collaboration diagram for Attach / detach Syscall API:



Functions

- int a4l_sys_attach (int fd, a4l_lnkdesc_t *arg)

 Attach an Analogy device to a driver.
- int a4l_sys_detach (int fd)

Detach an Analogy device from a driver.

int a4l_sys_bufcfg (int fd, unsigned int idx_subd, unsigned long size)
 Configure the buffer size.

6.77.1 Detailed Description

6.77.2 Function Documentation

Attach an Analogy device to a driver.

Parameters

in	fd	File descriptor as returned by a4l_sys_open()
in	arg	Link descriptor argument

Returns

0 on success. Otherwise:

• -ENOMEM is returned if the system is out of memory

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENODEV is returned in case of internal error (Please, type "dmesg" for more info)
- -ENXIO is returned in case of internal error (Please, type "dmesg" for more info)

Configure the buffer size.

This function can configure the buffer size of the file descriptor currently in use. If the subdevice index is set to A4L_BUF_DEFMAGIC, it can also define the default buffser size at open time.

Parameters

in	fd	File descriptor as returned by a4l_sys_open()
in	idx_subd	Index of the concerned subdevice
in	size	Buffer size to be set

Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EPERM is returned if the function is called in an RT context or if the buffer to resize is mapped in user-space (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EBUSY is returned if the selected subdevice is already processing an asynchronous operation
- -ENOMEM is returned if the system is out of memory

Referenced by a4l set bufsize().

Detach an Analogy device from a driver.

Parameters

in fd File descriptor as returned by a4l_sys_	_open()
---	---------

Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EBUSY is returned if the device to be detached is in use
- -EPERM is returned if the devive to be detached still has some buffer mapped in user-space
- -ENODEV is returned in case of internal error (Please, type "dmesg" for more info)
- -ENXIO is returned in case of internal error (Please, type "dmesg" for more info)

6.78 Alarm services 437

6.78 Alarm services

General-purpose watchdog timers.

Collaboration diagram for Alarm services:



Data Structures

struct RT_ALARM_INFO
 Alarm status descriptor.

Functions

- int rt_alarm_start (RT_ALARM *alarm, RTIME value, RTIME interval) Start an alarm.
- int rt_alarm_stop (RT_ALARM *alarm)

Stop an alarm.

- int rt_alarm_inquire (RT_ALARM *alarm, RT_ALARM_INFO *info)

 Query alarm status.
- int rt_alarm_create (RT_ALARM *alarm, const char *name, void(*handler)(void *arg), void *arg)

 Create an alarm object.
- int rt_alarm_delete (RT_ALARM *alarm)

 Delete an alarm.

6.78.1 Detailed Description

General-purpose watchdog timers.

Alarms are general-purpose watchdog timers. Alchemy tasks may create any number of alarms and use them to run a user-defined handler, after a specified initial delay has elapsed. Alarms can be either one shot or periodic; in the latter case, the real-time system automatically reprograms the alarm for the next shot according to a user-defined interval value.

6.78.2 Function Documentation

Create an alarm object.

This routine creates an object triggering an alarm routine at a specified time in the future. Alarms can be periodic or oneshot, depending on the reload interval value passed to rt_alarm_start().

Parameters

alarm	The address of an alarm descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the alarm. When non-NULL and non-empty, a copy of this string is used for indexing the created alarm into the object registry.
handler	The address of the routine to call when the alarm expires. This routine is passed the <i>arg</i> value.
arg	A user-defined opaque argument passed to the handler.

Returns

Zero is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get memory from the local pool in order to create the alarm.
- -EEXIST is returned if the *name* is conflicting with an already registered alarm.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

Note

Alarms are process-private objects and thus cannot be shared by multiple processes, even if they belong to the same Xenomai session.

```
6.78.2.2 rt_alarm_delete()

int rt_alarm_delete (

RT_ALARM * alarm )
```

Delete an alarm.

This routine deletes an alarm object previously created by a call to rt_alarm_create().

6.78 Alarm services 439

Parameters

alarm The alarm descriptor.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not a valid alarm descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

```
6.78.2.3 rt_alarm_inquire()

int rt_alarm_inquire (

RT_ALARM * alarm,

RT_ALARM_INFO * info )
```

Query alarm status.

This routine returns the status information about the specified alarm.

Parameters

alarm	The alarm descriptor.
info	A pointer to the returnbuffer" to copy the information to.

Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if *alarm* is not a valid alarm descriptor.

Tags

unrestricted, switch-primary

```
6.78.2.4 rt_alarm_start()

int rt_alarm_start (

    RT_ALARM * alarm,

    RTIME value,

    RTIME interval )
```

Start an alarm.

This routine programs the trigger date of an alarm object. An alarm can be either periodic or oneshot, depending on the *interval* value.

Alarm handlers are always called on behalf of Xenomai's internal timer event routine. Therefore, Xenomai routines which can be called from such handlers are restricted to the set of services available on behalf of an asynchronous context.

This service overrides any previous setup of the expiry date and reload interval for the alarm.

Parameters

alarm	The alarm descriptor.
value	The relative date of the first expiry, expressed in clock ticks (see note).
interval	The reload value of the alarm. It is a periodic interval value to be used for reprogramming the next alarm shot, expressed in clock ticks (see note). If <i>interval</i> is equal to TM_INFINITE, the alarm will not be reloaded after it has expired.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not a valid alarm descriptor.
- · -EPERM is returned if this service was called from an invalid context.

Tags

xthread-only, switch-primary

Note

Each of the initial *value* and *interval* is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

```
6.78.2.5 rt_alarm_stop()

int rt_alarm_stop (

RT_ALARM * alarm )
```

Stop an alarm.

This routine disables an alarm object, preventing any further expiry until it is re-enabled via rt_alarm_← start().

6.78 Alarm services 441

Parameters

alarm	The alarm descriptor.
-------	-----------------------

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if *alarm* is not a valid alarm descriptor.

Tags

unrestricted, switch-primary

6.79 Buffer services

Lightweight FIFO IPC mechanism.

Collaboration diagram for Buffer services:



Data Structures

struct RT_BUFFER_INFO
 Buffer status descriptor.

Macros

#define B_PRIO 0x1 /* Pend by task priority order. */
 Creation flags.

Functions

- int rt_buffer_create (RT_BUFFER *bf, const char *name, size_t bufsz, int mode)

 Create an IPC buffer.
- int rt_buffer_delete (RT_BUFFER *bf)

Delete an IPC buffer.

ssize_t rt_buffer_write_timed (RT_BUFFER *bf, const void *ptr, size_t size, const struct timespec *abs timeout)

Write to an IPC buffer.

- static ssize_t rt_buffer_write_until (RT_BUFFER *bf, const void *ptr, size_t size, RTIME timeout)

 Write to an IPC buffer (with absolute scalar timeout).
- static ssize_t rt_buffer_write (RT_BUFFER *bf, const void *ptr, size_t size, RTIME timeout)

 Write to an IPC buffer (with relative scalar timeout).
- ssize_t rt_buffer_read_timed (RT_BUFFER *bf, void *ptr, size_t size, const struct timespec *abs
 —timeout)

Read from an IPC buffer.

- static ssize_t rt_buffer_read_until (RT_BUFFER *bf, void *ptr, size_t size, RTIME timeout)
 - Read from an IPC buffer (with absolute scalar timeout).
- static ssize_t rt_buffer_read (RT_BUFFER *bf, void *ptr, size_t size, RTIME timeout)

Read from an IPC buffer (with relative scalar timeout).

• int rt buffer clear (RT BUFFER *bf)

Clear an IPC buffer.

• int rt buffer inquire (RT BUFFER *bf, RT BUFFER INFO *info)

Query buffer status.

• int rt_buffer_bind (RT_BUFFER *bf, const char *name, RTIME timeout)

Bind to an IPC buffer.

int rt_buffer_unbind (RT_BUFFER *bf)

Unbind from an IPC buffer.

6.79 Buffer services 443

6.79.1 Detailed Description

Lightweight FIFO IPC mechanism.

A buffer is a lightweight IPC mechanism, implementing a fast, one-way producer-consumer data path. All messages written are buffered in a single memory area in strict FIFO order, until read either in blocking or non-blocking mode.

Message are always atomically handled on the write side (i.e. no interleave, no short writes), whilst only complete messages are normally returned to the read side. However, short reads may happen under a well-defined situation (see note in rt_buffer_read()), albeit they can be fully avoided by proper use of the buffer.

6.79.2 Macro Definition Documentation

```
6.79.2.1 B_PRIO  
#define B_PRIO 0x1 /* Pend by task priority order. */
Creation flags.
```

6.79.3 Function Documentation

Bind to an IPC buffer.

This routine creates a new descriptor to refer to an existing IPC buffer identified by its symbolic name. If the object does not exist on entry, the caller may block until a buffer of the given name is created.

Parameters

bf	The address of a buffer descriptor filled in by the operation. Contents of this memory is undefined upon failure.
name	A valid NULL-terminated name which identifies the buffer to bind to. This string should match the object name argument passed to rt_buffer_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing TM_INFINITE causes the caller to block indefinitely until the object is registered. Passing TM_NONBLOCK causes the service to return immediately without waiting if the object is not registered on entry.

Returns

444

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt_task_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

```
6.79.3.2 rt_buffer_clear()

int rt_buffer_clear (

RT_BUFFER * bf )
```

Clear an IPC buffer.

This routine empties a buffer from any data.

Parameters

```
bf The buffer descriptor.
```

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if bf is not a valid buffer descriptor.

Tags

unrestricted, switch-primary

6.79 Buffer services 445

Create an IPC buffer.

This routine creates an IPC object that allows tasks to send and receive data asynchronously via a memory buffer. Data may be of an arbitrary length, albeit this IPC is best suited for small to medium-sized messages, since data always have to be copied to the buffer during transit. Large messages may be more efficiently handled by message queues (RT_QUEUE).

Parameters

bf	The address of a buffer descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the buffer. When non-NULL and non-empty, a copy of this string is used for indexing the created buffer into the object registry.
bufsz	The size of the buffer space available to hold data. The required memory is obtained from the main heap.
mode	The buffer creation mode. The following flags can be OR'ed into this bitmask, each of them affecting the new buffer:

- B_FIFO makes tasks pend in FIFO order for reading data from the buffer.
- B_PRIO makes tasks pend in priority order for reading data from the buffer.

This parameter also applies to tasks blocked on the buffer's write side (see rt_buffer_write()).

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if mode is invalid or bufsz is zero.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the buffer.
- -EEXIST is returned if the *name* is conflicting with an already registered buffer.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

Note

Buffers can be shared by multiple processes which belong to the same Xenomai session.

```
6.79.3.4 rt_buffer_delete()

int rt_buffer_delete (

RT_BUFFER * bf )
```

Delete an IPC buffer.

This routine deletes a buffer object previously created by a call to rt_buffer_create().

Parameters

```
bf The buffer descriptor.
```

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if bf is not a valid buffer descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

Query buffer status.

This routine returns the status information about the specified buffer.

Parameters

bf	The buffer descriptor.
info	A pointer to the returnbuffer" to copy the information to.

Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if bf is not a valid buffer descriptor.

6.79 Buffer services 447

Tags

unrestricted, switch-primary

Read from an IPC buffer (with relative scalar timeout).

This routine is a variant of rt_buffer_read_timed() accepting a relative timeout specification expressed as a scalar value.

Parameters

bf	The buffer descriptor.
ptr	A pointer to a memory area which will be written upon success with the received data.
len	The length in bytes of the memory area pointed to by ptr.
timeout	A delay expressed in clock ticks.

Tags

xthread-nowait, switch-primary

References rt_buffer_read_timed().

Read from an IPC buffer.

This routine reads the next message from the specified buffer. If no message is available on entry, the caller is allowed to block until enough data is written to the buffer, or a timeout elapses.

Parameters

bf	The bu	ffer descriptor.
----	--------	------------------

Parameters

ptr	A pointer to a memory area which will be written upon success with the received data.
len	The length in bytes of the memory area pointed to by <i>ptr.</i> Under normal circumstances, rt_buffer_read_timed() only returns entire messages as specified by the <i>len</i> argument, or an error value. However, short reads are allowed when a potential deadlock situation is detected (see note below).
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for a message to be available from the buffer (see note). Passing NULL causes the caller to block indefinitely until enough data is available. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking in case not enough data is available.

Returns

The number of bytes read from the buffer is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs_timeout is reached before a complete message arrives.
- -EWOULDBLOCK is returned if *abs_timeout* is { .tv_sec = 0, .tv_nsec = 0 } and not enough data is immediately available on entry to form a complete message.
- -EINTR is returned if rt_task_unblock() was called for the current task before enough data became available to form a complete message.
- -EINVAL is returned if *bf* is not a valid buffer descriptor, or *len* is greater than the actual buffer length.
- -EIDRM is returned if *bf* is deleted while the caller was waiting for data. In such event, *bf* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Note

A short read (i.e. fewer bytes returned than requested by *len*) may happen whenever a pathological use of the buffer is encountered. This condition only arises when the system detects that one or more writers are waiting for sending data, while a reader would have to wait for receiving a complete message at the same time. For instance, consider the following sequence, involving a 1024-byte buffer (bf) and two threads:

writer thread > rt_write_buffer(&bf, ptr, 1, TM_INFINITE); (one byte to read, 1023 bytes available for sending) writer thread > rt_write_buffer(&bf, ptr, 1024, TM_INFINITE); (writer blocks - no space for another 1024-byte message) reader thread > rt_read_buffer(&bf, ptr, 1024, TM_INFINITE); (short read - a truncated (1-byte) message is returned)

In order to prevent both threads to wait for each other indefinitely, a short read is allowed, which may be completed by a subsequent call to rt_buffer_read() or rt_buffer_read_until(). If that case arises, thread priorities, buffer and/or message lengths should likely be fixed, in order to eliminate such condition.

Tags

xthread-nowait, switch-primary

Note

abs_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt buffer read(), and rt buffer read until().

6.79 Buffer services 449

Read from an IPC buffer (with absolute scalar timeout).

This routine is a variant of rt_buffer_read_timed() accepting an absolute timeout specification expressed as a scalar value.

Parameters

bf	The buffer descriptor.	
ptr	A pointer to a memory area which will be written upon success with the received data.	
len	The length in bytes of the memory area pointed to by ptr.	
abs_timeout	An absolute date expressed in clock ticks.	

Tags

xthread-nowait, switch-primary

References rt_buffer_read_timed().

```
6.79.3.9 rt_buffer_unbind()

int rt_buffer_unbind (

RT_BUFFER * bf )
```

Unbind from an IPC buffer.

Parameters

```
bf The buffer descriptor.
```

This routine releases a previous binding to an IPC buffer. After this call has returned, the descriptor is no more valid for referencing this object.

Tags

thread-unrestricted

Write to an IPC buffer (with relative scalar timeout).

This routine is a variant of rt_buffer_write_timed() accepting a relative timeout specification expressed as a scalar value.

Parameters

bf	The buffer descriptor.
ptr	The address of the message data to be written to the buffer.
len	The length in bytes of the message data.
timeout	A delay expressed in clock ticks.

Tags

xthread-nowait, switch-primary

References rt_buffer_write_timed().

Write to an IPC buffer.

This routine writes a message to the specified buffer. If not enough buffer space is available on entry to hold the message, the caller is allowed to block until enough room is freed, or a timeout elapses, whichever comes first.

Parameters

bf	The buffer descriptor.
ptr	The address of the message data to be written to the buffer.
len	The length in bytes of the message data. Zero is a valid value, in which case the buffer is left untouched, and zero is returned to the caller.
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for enough buffer space to be available to hold the message (see note). Passing NULL causes the caller to block indefinitely until enough buffer space is available. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking in case of buffer space shortage.

Generated by Doxygen

6.79 Buffer services 451

Returns

The number of bytes written to the buffer is returned upon success. Otherwise:

• -ETIMEDOUT is returned if the absolute *abs_timeout* date is reached before enough buffer space is available to hold the message.

- -EWOULDBLOCK is returned if abs_timeout is { .tv_sec = 0, .tv_nsec = 0 } and no buffer space is immediately available on entry to hold the message.
- -EINTR is returned if rt_task_unblock() was called for the current task before enough buffer space became available to hold the message.
- -EINVAL is returned if *bf* is not a valid buffer descriptor, or *len* is greater than the actual buffer length.
- -EIDRM is returned if *bf* is deleted while the caller was waiting for buffer space. In such event, *bf* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

abs_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt_buffer_write(), and rt_buffer_write_until().

Write to an IPC buffer (with absolute scalar timeout).

This routine is a variant of rt_buffer_write_timed() accepting an absolute timeout specification expressed as a scalar value.

Parameters

bf	The buffer descriptor.
ptr	The address of the message data to be written to the buffer.
len	The length in bytes of the message data.
abs_timeout	An absolute date expressed in clock ticks.

Tags


xthread-nowait, switch-primary

References rt_buffer_write_timed().

6.80 Condition variable services

POSIXish condition variable mechanism.

Collaboration diagram for Condition variable services:



Data Structures

• struct RT_COND_INFO

Condition variable status descriptor.

Functions

• int rt cond create (RT COND *cond, const char *name)

Create a condition variable.

• int rt_cond_delete (RT_COND *cond)

Delete a condition variable.

• int rt_cond_signal (RT_COND *cond)

Signal a condition variable.

• int rt_cond_broadcast (RT_COND *cond)

Broadcast a condition variable.

int rt_cond_wait_timed (RT_COND *cond, RT_MUTEX *mutex, const struct timespec *abs_
 timeout)

Wait on a condition variable.

static int rt_cond_wait_until (RT_COND *cond, RT_MUTEX *mutex, RTIME timeout)

Wait on a condition variable (with absolute scalar timeout).

• static int rt_cond_wait (RT_COND *cond, RT_MUTEX *mutex, RTIME timeout)

Wait on a condition variable (with relative scalar timeout).

int rt_cond_inquire (RT_COND *cond, RT_COND_INFO *info)

Query condition variable status.

• int rt_cond_bind (RT_COND *cond, const char *name, RTIME timeout)

Bind to a condition variable.

int rt_cond_unbind (RT_COND *cond)

Unbind from a condition variable.

6.80.1 Detailed Description

POSIXish condition variable mechanism.

A condition variable is a synchronization mechanism which allows tasks to suspend execution until some predicate on some arbitrary shared data is satisfied.

The basic operations on conditions are: signal the condition (when the predicate becomes true), and wait for the condition, blocking the task execution until another task signals the condition. A condition variable must always be associated with a mutex, to avoid a well-known race condition where a task prepares to wait on a condition variable and another task signals the condition just before the first task actually waits on it.

6.80.2 Function Documentation

Bind to a condition variable.

This routine creates a new descriptor to refer to an existing condition variable identified by its symbolic name. If the object not exist on entry, the caller may block until a condition variable of the given name is created.

Parameters

cond	The address of a condition variable descriptor filled in by the operation. Contents of this memory is undefined upon failure.
name	A valid NULL-terminated name which identifies the condition variable to bind to. This string should match the object name argument passed to rt_cond_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing TM_INFINITE causes the caller to block indefinitely until the object is registered. Passing TM_NONBLOCK causes the service to return immediately without waiting if the object is not registered on entry.

Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt_task_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM_NONBLOCK and the searched object is not registered on entry.

- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

Broadcast a condition variable.

All tasks currently waiting on the condition variable are immediately unblocked.

Parameters

```
cond The condition variable descriptor.
```

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if cond is not a valid condition variable descriptor.

Tags

unrestricted, switch-primary

Create a condition variable.

Create a synchronization object which allows tasks to suspend execution until some predicate on shared data is satisfied.

Parameters

cond	The address of a condition variable descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the condition variable. When non-NULL and non-empty, a copy of this string is used for indexing the created condition variable into the object registry.

Returns

Zero is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the condition variable.
- -EEXIST is returned if the *name* is conflicting with an already registered condition variable.
- · -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

Note

Condition variables can be shared by multiple processes which belong to the same Xenomai session.

Attention

If the underlying threading library does not support pthread_condattr_setclock(), timings with Alchemy condition variables will be based on CLOCK_REALTIME, and may therefore be affected by updates to the system date (e.g. NTP). This typically concerns legacy setups based on the linuxthreads library. In the normal case, timings are based on CLOCK_MONOTONIC.

Delete a condition variable.

This routine deletes a condition variable object previously created by a call to rt_cond_create().

Parameters

cond The condition variable descriptor.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not a valid condition variable descriptor.
- · -EPERM is returned if this service was called from an asynchronous context.
- -EBUSY is returned upon an attempt to destroy the object referenced by *cond* while it is referenced (for example, while being used in a rt_cond_wait(), rt_cond_wait_timed() or rt_cond_wait_until() by another task).

Tags

mode-unrestricted, switch-secondary

Query condition variable status.

This routine returns the status information about the specified condition variable.

Parameters

cond	The condition variable descriptor.
info	A pointer to the returnbuffer" to copy the information to.

Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if cond is not a valid condition variable descriptor.

Tags

unrestricted, switch-primary

Signal a condition variable.

If the condition variable *cond* is pended, this routine immediately unblocks the first waiting task (by queuing priority order).

Parameters

458

```
cond The condition variable descriptor.
```

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if cond is not a valid condition variable descriptor.

Tags

unrestricted, switch-primary

Unbind from a condition variable.

Parameters

cond The condition variable descriptor.

This routine releases a previous binding to a condition variable. After this call has returned, the descriptor is no more valid for referencing this object.

Tags

thread-unrestricted

Wait on a condition variable (with relative scalar timeout).

This routine is a variant of rt_cond_wait_timed() accepting a relative timeout specification expressed as a scalar value.

Parameters

cond	The condition variable descriptor.
mutex	The address of the mutex serializing the access to the shared data.
timeout	A delay expressed in clock ticks.

Tags

xthread-only, switch-primary

Wait on a condition variable.

This service atomically releases the mutex and blocks the calling task, until the condition variable *cond* is signaled or a timeout occurs, whichever comes first. The mutex is re-acquired before returning from this service.

Parameters

cond	The condition variable descriptor.
mutex	The address of the mutex serializing the access to the shared data.
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for the condition variable to be signaled (see note). Passing NULL causes the caller to block indefinitely.

Returns

Zero is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs_timeout is reached before the condition variable is signaled.
- -EWOULDBLOCK is returned if abs_timeout is { .tv_sec = 0, .tv_nsec = 0 } .
- -EINTR is returned if rt_task_unblock() was called for the current task.
- -EINVAL is returned if cond is not a valid condition variable descriptor.
- -EIDRM is returned if *cond* is deleted while the caller was waiting on the condition variable. In such event, *cond* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-only, switch-primary

Note

abs_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Wait on a condition variable (with absolute scalar timeout).

This routine is a variant of rt_cond_wait_timed() accepting an abs_timeout specification expressed as a scalar value.

Parameters

cond	The condition variable descriptor.
mutex	The address of the mutex serializing the access to the shared data.
abs_timeout	An absolute date expressed in clock ticks.

Tags

xthread-only, switch-primary

6.81 Event flag group services

Inter-task notification mechanism based on discrete flags.

Collaboration diagram for Event flag group services:



Data Structures

struct RT_EVENT_INFO

Event status descriptor.

Macros

#define EV_PRIO 0x1 /* Pend by task priority order. */

Creation flags.

#define EV_ANY 0x1 /* Disjunctive wait. */

Operation flags.

Functions

• int rt_event_delete (RT_EVENT *event)

Delete an event flag group.

• int rt_event_wait_timed (RT_EVENT *event, unsigned int mask, unsigned int *mask_r, int mode, const struct timespec *abs timeout)

Wait for an arbitrary set of events.

• static int rt_event_wait_until (RT_EVENT *event, unsigned int mask, unsigned int *mask_r, int mode, RTIME timeout)

Wait for an arbitrary set of events (with absolute scalar timeout).

 static int rt_event_wait (RT_EVENT *event, unsigned int mask, unsigned int *mask_r, int mode, RTIME timeout)

Wait for an arbitrary set of events (with relative scalar timeout).

• int rt_event_inquire (RT_EVENT *event, RT_EVENT_INFO *info)

Query event flag group status.

int rt_event_bind (RT_EVENT *event, const char *name, RTIME timeout)

Bind to an event flag group.

int rt_event_unbind (RT_EVENT *event)

Unbind from an event flag group.

• int rt_event_create (RT_EVENT *event, const char *name, unsigned int ivalue, int mode)

Create an event flag group.

• int rt_event_signal (RT_EVENT *event, unsigned int mask)

Signal an event.

• int rt_event_clear (RT_EVENT *event, unsigned int mask, unsigned int *mask_r)

Clear event flags.

6.81.1 Detailed Description

Inter-task notification mechanism based on discrete flags.

An event flag group is a synchronization object represented by a long-word structure; every available bit in this word represents a user-defined event flag.

When a bit is set, the associated event is said to have occurred. Xenomai tasks can use this mechanism to signal the occurrence of particular events to other tasks.

Tasks can either wait for events to occur in a conjunctive manner (all awaited events must have occurred to satisfy the wait request), or in a disjunctive way (at least one of the awaited events must have occurred to satisfy the wait request).

6.81.2 Macro Definition Documentation

```
6.81.2.1 EV_ANY
#define EV_ANY 0x1 /* Disjunctive wait. */
Operation flags.
6.81.2.2 EV_PRIO
#define EV_PRIO 0x1 /* Pend by task priority order. */
Creation flags.
```

6.81.3 Function Documentation

Bind to an event flag group.

This routine creates a new descriptor to refer to an existing event flag group identified by its symbolic name. If the object does not exist on entry, the caller may block until an event flag group of the given name is created.

Parameters

event	The address of an event flag group descriptor filled in by the operation. Contents of this memory is undefined upon failure.
name	A valid NULL-terminated name which identifies the event flag group to bind to. This string should match the object name argument passed to rt_event_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing TM_INFINITE causes the caller to block indefinitely until the object is registered. Passing TM_NONBLOCK causes the service to return immediately without waiting if the object is not registered on entry.

Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt_task_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if timeout is equal to TM_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

The timeout value is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clockresolution option, defaults to 1 nanosecond).

```
6.81.3.2 rt_event_clear()
int rt_event_clear (
              RT_EVENT * event,
              unsigned int mask,
              unsigned int * mask_r )
```

Clear event flags.

This routine clears a set of flags from event.

Parameters

event	The event descriptor.
mask	The set of event flags to be cleared.
mask⊷	If non-NULL, mask_r is the address of a memory location which will receive the previous
Concreted by	value of the event flag group before the flags are cleared.

Generated by Doxygen

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if event is not a valid event flag group descriptor.

Tags

unrestricted, switch-primary

Create an event flag group.

Event groups provide for task synchronization by allowing a set of flags (or "events") to be waited for and posted atomically. An event group contains a mask of received events; an arbitrary set of event flags can be pended or posted in a single operation.

Parameters

event	The address of an event descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the event. When non-NULL and non-empty, a copy of this string is used for indexing the created event into the object registry.
ivalue	The initial value of the group's event mask.
mode	The event group creation mode. The following flags can be OR'ed into this bitmask:

- EV FIFO makes tasks pend in FIFO order on the event flag group.
- EV_PRIO makes tasks pend in priority order on the event flag group.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if mode is invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the event flag group.
- -EEXIST is returned if the name is conflicting with an already registered event flag group.

· -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

Note

Event flag groups can be shared by multiple processes which belong to the same Xenomai session.

Delete an event flag group.

This routine deletes a event flag group previously created by a call to rt_event_create().

Parameters

```
event The event descriptor.
```

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if event is not a valid event flag group descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

Query event flag group status.

This routine returns the status information about event.

Parameters

event	The event descriptor.
info	A pointer to the returnbuffer" to copy the information to.

Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if event is not a valid event flag group descriptor.

Tags

unrestricted, switch-primary

Signal an event.

Post a set of flags to *event*. All tasks having their wait request satisfied as a result of this operation are immediately readied.

Parameters

event	The event descriptor.
mask	The set of events to be posted.

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if event is not an event flag group descriptor.

Tags

unrestricted, switch-primary

Unbind from an event flag group.

Parameters

```
event The event descriptor.
```

This routine releases a previous binding to an event flag group. After this call has returned, the descriptor is no more valid for referencing this object.

Tags

thread-unrestricted

Wait for an arbitrary set of events (with relative scalar timeout).

This routine is a variant of rt_event_wait_timed() accepting a relative timeout specification expressed as a scalar value.

Parameters

event	The event descriptor.
mask	The set of bits to wait for.
mask⊷	The value of the event mask at the time the task was readied.
· ·	
_'	
' mode	The pend mode.

Tags

xthread-nowait, switch-primary

References rt_event_wait_timed().

```
unsigned int mask,
unsigned int * mask_r,
int mode,
const struct timespec * abs_timeout )
```

Wait for an arbitrary set of events.

Waits for one or more events to be signaled in event, or until a timeout elapses.

Parameters

event	The event descriptor.
mask	The set of bits to wait for. Passing zero causes this service to return immediately with a success value; the current value of the event mask is also copied to <code>mask_r</code> .
mask⇔	The value of the event mask at the time the task was readied.
_r	
mode	The pend mode. The following flags can be OR'ed into this bitmask, each of them affecting the operation:

- EV_ANY makes the task pend in disjunctive mode (i.e. OR); this means that the request is fulfilled when at least one bit set into *mask* is set in the current event mask.
- EV_ALL makes the task pend in conjunctive mode (i.e. AND); this means that the request is fulfilled when at all bits set into *mask* are set in the current event mask.

Parameters

abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for the request to be satisfied (see note). Passing NULL causes the caller to block
	indefinitely until the request is satisfied. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return without blocking in case the request cannot be satisfied
	immediately.

Returns

Zero is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs_timeout is reached before the request is satisfied.
- -EWOULDBLOCK is returned if abs_timeout is { .tv_sec = 0, .tv_nsec = 0 } and the requested flags are not set on entry to the call.
- -EINTR is returned if rt_task_unblock() was called for the current task before the request is satisfied
- -EINVAL is returned if mode is invalid, or event is not a valid event flag group descriptor.
- -EIDRM is returned if *event* is deleted while the caller was sleeping on it. In such a case, *event* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

abs_timeout value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt_event_wait(), and rt_event_wait_until().

Wait for an arbitrary set of events (with absolute scalar timeout).

This routine is a variant of rt_event_wait_timed() accepting an absolute timeout specification expressed as a scalar value.

Parameters

event	The event descriptor.
mask	The set of bits to wait for.
mask_r	The value of the event mask at the time the task was readied.
mode	The pend mode.
abs_timeout	An absolute date expressed in clock ticks.

Tags

xthread-nowait, switch-primary

References rt_event_wait_timed().

6.82 Heap management services

Region of memory dedicated to real-time allocation.

Collaboration diagram for Heap management services:



Data Structures

struct RT_HEAP_INFO

Heap status descriptor.

Macros

#define H_PRIO 0x1 /* Pend by task priority order. */
 Creation flags.

Functions

- int rt_heap_create (RT_HEAP *heap, const char *name, size_t heapsize, int mode)

 Create a heap.
- int rt_heap_delete (RT_HEAP *heap)

Delete a heap.

 int rt_heap_alloc_timed (RT_HEAP *heap, size_t size, const struct timespec *abs_timeout, void **blockp)

Allocate a block from a heap.

- static int rt_heap_alloc_until (RT_HEAP *heap, size_t size, RTIME timeout, void **blockp)

 Allocate a block from a heap (with absolute scalar timeout).
- static int rt_heap_alloc (RT_HEAP *heap, size_t size, RTIME timeout, void **blockp)

Allocate a block from a heap (with relative scalar timeout).

• int rt_heap_free (RT_HEAP *heap, void *block)

Release a block to a heap.

• int rt_heap_inquire (RT_HEAP *heap, RT_HEAP_INFO *info)

Query heap status.

int rt_heap_bind (RT_HEAP *heap, const char *name, RTIME timeout)

Bind to a heap.

• int rt_heap_unbind (RT_HEAP *heap)

Unbind from a heap.

6.82.1 Detailed Description

Region of memory dedicated to real-time allocation.

Heaps are regions of memory used for dynamic memory allocation in a time-bounded fashion. Blocks of memory are allocated and freed in an arbitrary order and the pattern of allocation and size of blocks is not known until run time.

6.82.2 Macro Definition Documentation

```
6.82.2.1 H_PRIO  
#define H_PRIO 0x1 /* Pend by task priority order. */
Creation flags.
```

6.82.3 Function Documentation

Allocate a block from a heap (with relative scalar timeout).

This routine is a variant of rt_heap_alloc_timed() accepting a relative timeout specification expressed as a scalar value.

Tags

xthread-nowait, switch-primary

References rt_heap_alloc_timed().

```
6.82.3.2 rt_heap_alloc_timed()
int rt_heap_alloc_timed (
    RT_HEAP * heap,
    size_t size,
    const struct timespec * abs_timeout,
    void ** blockp )
```

Allocate a block from a heap.

This service allocates a block from a given heap, or returns the address of the single memory segment if H_SINGLE was mentioned in the creation mode to rt_heap_create(). When not enough memory is available on entry to this service, tasks may be blocked until their allocation request can be fulfilled.

Parameters

heap	The heap descriptor.
size	The requested size (in bytes) of the block. If the heap is managed as a single-block area (H_SINGLE), this value can be either zero, or the same value given to rt_heap_create(). In that case, the same block covering the entire heap space is returned to all callers of this service.
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for a block of the requested size to be available from the heap (see note). Passing NULL causes the caller to block indefinitely until a block is available. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking in case not block is available.
blockp	A pointer to a memory location which will be written upon success with the address of the allocated block, or the start address of the single memory segment. In the former case, the block can be freed using rt_heap_free().

Returns

Zero is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs timeout is reached before a block is available.
- -EWOULDBLOCK is returned if abs_timeout is equal to { .tv_sec = 0, .tv_nsec = 0 } and no block is immediately available on entry to fulfill the allocation request.
- -EINTR is returned if rt_task_unblock() was called for the current task before a block became available.
- -EINVAL is returned if *heap* is not a valid heap descriptor, or *heap* is managed as a single-block area (i.e. H_SINGLE mode) and *size* is non-zero but does not match the original heap size passed to rt_heap_create().
- -EIDRM is returned if *heap* is deleted while the caller was waiting for a block. In such event, *heap* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

If shared multi-processing is enabled (i.e. —enable-pshared was passed to the configure script), requests for a block size larger than twice the allocation page size are rounded up to the next page size. The allocation page size is currently 512 bytes long (HOBJ_PAGE_SIZE), which means that any request larger than 1k will be rounded up to the next 512 byte boundary. abs_timeout is interpreted as a multiple of the Alchemy clock resolution (see —alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt heap alloc(), and rt heap alloc until().

Allocate a block from a heap (with absolute scalar timeout).

This routine is a variant of rt_heap_alloc_timed() accepting an absolute timeout specification expressed as a scalar value.

Tags

474

```
xthread-nowait, switch-primary
```

References rt_heap_alloc_timed().

Bind to a heap.

This routine creates a new descriptor to refer to an existing heap identified by its symbolic name. If the object does not exist on entry, the caller may block until a heap of the given name is created.

Parameters

heap	The address of a heap descriptor filled in by the operation. Contents of this memory is undefined upon failure.
name	A valid NULL-terminated name which identifies the heap to bind to. This string should match the object name argument passed to rt_heap_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing TM_INFINITE causes the caller to block indefinitely until the object is registered. Passing TM_NONBLOCK causes the service to return immediately without waiting if the object is not registered on entry.

Returns

Zero is returned upon success. Otherwise:

• -EINTR is returned if rt_task_unblock() was called for the current task before the retrieval has completed.

- -EWOULDBLOCK is returned if *timeout* is equal to TM_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

Create a heap.

This routine creates a memory heap suitable for time-bounded allocation requests of RAM chunks. When not enough memory is available, tasks may be blocked until their allocation request can be fulfilled.

By default, heaps support allocation of multiple blocks of memory in an arbitrary order. However, it is possible to ask for single-block management by passing the H_SINGLE flag into the *mode* parameter, in which case the entire memory space managed by the heap is made available as a unique block. In this mode, all allocation requests made through rt_heap_alloc() will return the same block address, pointing at the beginning of the heap memory.

Parameters

heap	The address of a heap descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the heap. When non-NULL and non-empty, a copy of this string is used for indexing the created heap into the object registry.
heapsz	The size (in bytes) of the memory pool, blocks will be claimed and released to. This area is not extensible, so this value must be compatible with the highest memory pressure that could be expected. The valid range is between 1 byte and 2Gb.
mode	The heap creation mode. The following flags can be OR'ed into this bitmask, each of them affecting the new heap:

• H_FIFO makes tasks pend in FIFO order on the heap when waiting for available blocks.

• H_PRIO makes tasks pend in priority order on the heap when waiting for available blocks.

H SINGLE causes the entire heap space to be managed as a single memory block.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if mode is invalid, or heapsz is zero or larger than 2Gb.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the heap.
- -EEXIST is returned if the name is conflicting with an already registered heap.
- · -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

Note

Heaps can be shared by multiple processes which belong to the same Xenomai session.

Delete a heap.

This routine deletes a heap object previously created by a call to rt_heap_create(), releasing all tasks currently blocked on it.

Parameters

```
heap The heap descriptor.
```

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if heap is not a valid heap descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

```
6.82.3.7 rt_heap_free()
int rt_heap_free (
    RT_HEAP * heap,
    void * block )
```

Release a block to a heap.

This service should be used to release a block to the heap it belongs to. An attempt to fulfill the request of every task blocked on rt_heap_alloc() is made once block is returned to the memory pool.

Parameters

heap	The heap descriptor.
block	The address of the block to free.

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if *heap* is not a valid heap descriptor, or *block* is not a valid block previously allocated by the rt_heap_alloc() service from *heap*.

Tags

unrestricted, switch-primary

Query heap status.

This routine returns the status information about *heap*.

Parameters

heap	The heap descriptor.
info	A pointer to the returnbuffer" to copy the information to.

Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if *heap* is not a valid heap descriptor.

Tags

unrestricted, switch-primary

```
6.82.3.9 rt_heap_unbind()

int rt_heap_unbind (

RT_HEAP * heap )
```

Unbind from a heap.

Parameters

heap The heap descrip	otor.
-----------------------	-------

This routine releases a previous binding to a heap. After this call has returned, the descriptor is no more valid for referencing this object.

Tags


thread-unrestricted

6.83 Alchemy API 479

6.83 Alchemy API

A programming interface reminiscent from traditional RTOS APIs.

Collaboration diagram for Alchemy API:

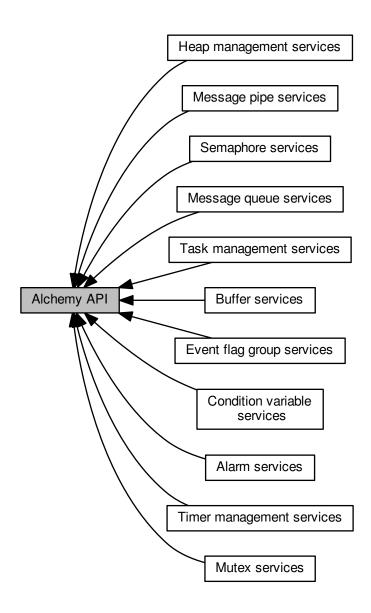

Modules

Alarm services

General-purpose watchdog timers.

• Buffer services

Lightweight FIFO IPC mechanism.

• Condition variable services

POSIXish condition variable mechanism.

• Event flag group services

Inter-task notification mechanism based on discrete flags.

• Heap management services

Region of memory dedicated to real-time allocation.

Mutex services

POSIXish mutual exclusion servicesl.

Message pipe services

Two-way communication channel between Xenomai & Linux domains.

• Message queue services

real-time IPC mechanism for sending messages of arbitrary size

• Semaphore services

Counting semaphore IPC mechanism.

Task management services

Services dealing with preemptive multi-tasking.

• Timer management services

Services for reading and spinning on the hardware timer.

6.83.1 Detailed Description

A programming interface reminiscent from traditional RTOS APIs.

This interface is an evolution of the former native API available with the Xenomai 2.x series.

6.84 Mutex services 481

6.84 Mutex services

POSIXish mutual exclusion servicesl.

Collaboration diagram for Mutex services:



Data Structures

• struct RT_MUTEX_INFO

Mutex status descriptor.

Functions

• int rt_mutex_create (RT_MUTEX *mutex, const char *name)

Create a mutex.

int rt_mutex_delete (RT_MUTEX *mutex)

Delete a mutex.

int rt mutex acquire timed (RT MUTEX *mutex, const struct timespec *abs timeout)

Acquire/lock a mutex (with absolute timeout date).

• static int rt_mutex_acquire_until (RT_MUTEX *mutex, RTIME timeout)

Acquire/lock a mutex (with absolute scalar timeout).

• static int rt mutex acquire (RT MUTEX *mutex, RTIME timeout)

Acquire/lock a mutex (with relative scalar timeout).

• int rt_mutex_release (RT_MUTEX *mutex)

Release/unlock a mutex.

• int rt_mutex_inquire (RT_MUTEX *mutex, RT_MUTEX_INFO *info)

Query mutex status.

• int rt_mutex_bind (RT_MUTEX *mutex, const char *name, RTIME timeout)

Bind to a mutex.

int rt_mutex_unbind (RT_MUTEX *mutex)

Unbind from a mutex.

6.84.1 Detailed Description

POSIXish mutual exclusion servicesl.

A mutex is a MUTual EXclusion object, and is useful for protecting shared data structures from concurrent modifications, and implementing critical sections and monitors.

A mutex has two possible states: unlocked (not owned by any task), and locked (owned by one task). A mutex can never be owned by two different tasks simultaneously. A task attempting to lock a mutex that is already locked by another task is blocked until the latter unlocks the mutex first.

Xenomai mutex services enforce a priority inheritance protocol in order to solve priority inversions.

6.84.2 Function Documentation

Acquire/lock a mutex (with relative scalar timeout).

This routine is a variant of rt_mutex_acquire_timed() accepting a relative timeout specification expressed as a scalar value.

Parameters

482

mutex	The mutex descriptor.
timeout	A delay expressed in clock ticks.

Tags

xthread-only, switch-primary

Acquire/lock a mutex (with absolute timeout date).

Attempt to lock a mutex. The calling task is blocked until the mutex is available, in which case it is locked again before this service returns. Xenomai mutexes are implicitely recursive and implement the priority inheritance protocol.

Parameters

mutex	The mutex descriptor.
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for the mutex to be available (see note). Passing NULL the caller to block indefinitely. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking in case <i>mutex</i> is already locked by another task.

6.84 Mutex services 483

Returns

Zero is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs timeout is reached before the mutex is available.
- -EWOULDBLOCK is returned if *timeout* is { .tv_sec = 0, .tv_nsec = 0 } and the mutex is not immediately available.
- -EINTR is returned if rt_task_unblock() was called for the current task.
- -EINVAL is returned if mutex is not a valid mutex descriptor.
- -EIDRM is returned if *mutex* is deleted while the caller was waiting on it. In such event, *mutex* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-only, switch-primary

Side effects

Over the Cobalt core, an Alchemy task with priority zero keeps running in primary mode until it releases the mutex, at which point it is switched back to secondary mode automatically.

Note

abs_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Acquire/lock a mutex (with absolute scalar timeout).

This routine is a variant of rt_mutex_acquire_timed() accepting an absolute timeout specification expressed as a scalar value.

Parameters

mutex	The mutex descriptor.
abs_timeout	An absolute date expressed in clock ticks.

Tags

xthread-only, switch-primary

```
6.84.2.4 rt_mutex_bind()

int rt_mutex_bind (

    RT_MUTEX * mutex,
    const char * name,
    RTIME timeout )
```

Bind to a mutex.

This routine creates a new descriptor to refer to an existing mutex identified by its symbolic name. If the object not exist on entry, the caller may block until a mutex of the given name is created.

Parameters

mutex	The address of a mutex descriptor filled in by the operation. Contents of this memory is undefined upon failure.
name	A valid NULL-terminated name which identifies the mutex to bind to. This string should match the object name argument passed to rt_mutex_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing TM_INFINITE causes the caller to block indefinitely until the object is registered. Passing TM_NONBLOCK causes the service to return immediately without waiting if the object is not registered on entry.

Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt_task_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.84 Mutex services 485

```
6.84.2.5 rt_mutex_create()

int rt_mutex_create (

RT_MUTEX * mutex,

const char * name )
```

Create a mutex.

Create a mutual exclusion object that allows multiple tasks to synchronize access to a shared resource. A mutex is left in an unlocked state after creation.

Parameters

mutex	The address of a mutex descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the mutex. When non-NULL and non-empty, a copy of this string is used for indexing the created mutex into the object registry.

Returns

Zero is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the mutex.
- -EEXIST is returned if the *name* is conflicting with an already registered mutex.
- · -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

Note

Mutexes can be shared by multiple processes which belong to the same Xenomai session.

Delete a mutex.

This routine deletes a mutex object previously created by a call to rt_mutex_create().

Parameters

mutex The mutex descriptor.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not a valid mutex descriptor.
- · -EPERM is returned if this service was called from an asynchronous context.
- -EBUSY is returned upon an attempt to destroy the object referenced by mutex while it is referenced (for example, while being used in a rt_mutex_acquite(), rt_mutex_acquire_timed() or rt_
 mutex_acquire_until() by another task).

Tags

mode-unrestricted, switch-secondary

Query mutex status.

This routine returns the status information about the specified mutex.

Parameters

mutex	The mutex descriptor.
info	A pointer to the returnbuffer" to copy the information to.

Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

- -EINVAL is returned if *mutex* is not a valid mutex descriptor.
- -EPERM is returned if this service is called from an interrupt context.

Tags

xthread-only, switch-primary

6.84 Mutex services 487

```
6.84.2.8 rt_mutex_release()

int rt_mutex_release (

RT_MUTEX * mutex )
```

Release/unlock a mutex.

This routine releases a mutex object previously locked by a call to rt_mutex_acquire() or rt_mutex_cacquire() or rt_mutex_cacquire_until(). If the mutex is pended, the first waiting task (by priority order) is immediately unblocked and transfered the ownership of the mutex; otherwise, the mutex is left in an unlocked state.

Parameters

	mutex	The mutex descriptor.
--	-------	-----------------------

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not a valid mutex descriptor.
- -EPERM is returned if *mutex* is not owned by the current task, or more generally if this service was called from a context which cannot own any mutex (e.g. interrupt context).

Tags

xthread-only, switch-primary

Unbind from a mutex.

Parameters

mutex	The mutex descriptor.
-------	-----------------------

This routine releases a previous binding to a mutex. After this call has returned, the descriptor is no more valid for referencing this object.

6.85 Message pipe services

Two-way communication channel between Xenomai & Linux domains.

Collaboration diagram for Message pipe services:



Macros

- #define P_MINOR_AUTO XNPIPE_MINOR_AUTO
 Creation flags.
- #define P_URGENT XNPIPE_URGENT
 Operation flags.

Functions

int rt_pipe_delete (RT_PIPE *pipe)

Delete a message pipe.

ssize_t rt_pipe_read_timed (RT_PIPE *pipe, void *buf, size_t size, const struct timespec *abs_
 timeout)

Read a message from a pipe.

- static ssize_t rt_pipe_read_until (RT_PIPE *pipe, void *buf, size_t size, RTIME timeout)
- static ssize_t rt_pipe_read (RT_PIPE *pipe, void *buf, size_t size, RTIME timeout)

Read from a pipe (with relative scalar timeout).

Read from a pipe (with absolute scalar timeout).

• ssize_t rt_pipe_write (RT_PIPE *pipe, const void *buf, size_t size, int mode)

Write a message to a pipe.

• ssize_t rt_pipe_stream (RT_PIPE *pipe, const void *buf, size_t size)

Stream bytes through a pipe.

int rt_pipe_bind (RT_PIPE *pipe, const char *name, RTIME timeout)

Bind to a message pipe.

• int rt pipe unbind (RT PIPE *pipe)

Unbind from a message pipe.

• int rt pipe create (RT PIPE *pipe, const char *name, int minor, size t poolsize)

Create a message pipe.

6.85.1 Detailed Description

Two-way communication channel between Xenomai & Linux domains.

A message pipe is a two-way communication channel between Xenomai threads and normal Linux threads using regular file I/O operations on a pseudo-device. Pipes can be operated in a message-oriented fashion so that message boundaries are preserved, and also in byte-oriented streaming mode from real-time to normal Linux threads for optimal throughput.

Xenomai threads open their side of the pipe using the rt_pipe_create() service; regular Linux threads do the same by opening one of the /dev/rtpN special devices, where N is the minor number agreed upon between both ends of each pipe.

In addition, named pipes are available through the registry support, which automatically creates a symbolic link from entries under /proc/xenomai/registry/rtipc/xddp/ to the corresponding special device file.

Note

Alchemy's message pipes are fully based on the XDDP protocol available from the RTDM/ipc driver.

6.85.2 Macro Definition Documentation

```
6.85.2.1 P MINOR AUTO
```

#define P_MINOR_AUTO XNPIPE_MINOR_AUTO

Creation flags.

```
6.85.2.2 P_URGENT
```

#define P_URGENT XNPIPE_URGENT

Operation flags.

6.85.3 Function Documentation

```
6.85.3.1 rt_pipe_bind()

int rt_pipe_bind (

    RT_PIPE * pipe,

    const char * name,

    RTIME timeout )
```

Bind to a message pipe.

This routine creates a new descriptor to refer to an existing message pipe identified by its symbolic name. If the object does not exist on entry, the caller may block until a pipe of the given name is created.

Parameters

pipe	The address of a pipe descriptor filled in by the operation. Contents of this memory is undefined upon failure.
name	A valid NULL-terminated name which identifies the pipe to bind to. This string should match the object name argument passed to rt_pipe_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing TM_INFINITE causes the caller to block indefinitely until the object is registered. Passing TM_NONBLOCK causes the service to return immediately without waiting if the object is not registered on entry.

Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt_task_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait

Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

Create a message pipe.

This service opens a bi-directional communication channel for exchanging messages between Xenomai threads and regular Linux threads. Pipes natively preserve message boundaries, but can also be used in byte-oriented streaming mode from Xenomai to Linux.

rt_pipe_create() always returns immediately, even if no thread has opened the associated special device file yet. On the contrary, the non real-time side could block upon attempt to open the special device file until rt_pipe_create() is issued on the same pipe from a Xenomai thread, unless O_NONBLOCK was given to the open(2) system call.

Parameters

pipe	The address of a pipe descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the pipe. When non-NULL and non-empty, a copy of this string is used for indexing the created pipe into the object registry.

Named pipes are supported through the use of the registry. Passing a valid *name* parameter when creating a message pipe causes a symbolic link to be created from /proc/xenomai/registry/rtipc/xddp/*name* to the associated special device (i.e. /dev/rtp*), so that the specific *minor* information does not need to be known from those processes for opening the proper device file. In such a case, both sides of the pipe only need to agree upon a symbolic name to refer to the same data path, which is especially useful whenever the *minor* number is picked up dynamically using an adaptive algorithm, such as passing P_MINOR_AUTO as *minor* value.

Parameters

minor	The minor number of the device associated with the pipe. Passing P_MINOR_AUTO causes the minor number to be auto-allocated. In such a case, a symbolic link will be automatically created from /proc/xenomai/registry/rtipc/xddp/name to the allocated pipe device entry. Valid minor numbers range from 0 to CONFIG_XENO_OPT_PIPE_NRDEV-1.
poolsize	Specifies the size of a dedicated buffer pool for the pipe. Passing 0 means that all message allocations for this pipe are performed on the Cobalt core heap.

Returns

The *minor* number assigned to the connection is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the pipe.
- -ENODEV is returned if *minor* is different from P_MINOR_AUTO and is not a valid minor number.
- -EEXIST is returned if the *name* is conflicting with an already registered pipe.
- -EBUSY is returned if *minor* is already open.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

```
6.85.3.3 rt_pipe_delete()

int rt_pipe_delete (

RT_PIPE * pipe )
```

Delete a message pipe.

This routine deletes a pipe object previously created by a call to rt_pipe_create(). All resources attached to that pipe are automatically released, all pending data is flushed.

Parameters

```
pipe The pipe descriptor.
```

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if pipe is not a valid pipe descriptor.
- -EIDRM is returned if *pipe* is a closed pipe descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

Read from a pipe (with relative scalar timeout).

This routine is a variant of rt_queue_read_timed() accepting a relative timeout specification expressed as a scalar value.

Parameters

pipe	The pipe descriptor.
buf	A pointer to a memory area which will be written upon success with the message received.
size	The count of bytes from the received message to read up into <i>buf</i> . If <i>size</i> is lower than the actual message size, -ENOBUFS is returned since the incompletely received message would be lost. If <i>size</i> is zero, this call returns immediately with no other action.
timeout	A delay expressed in clock ticks.

Tags

xthread-nowait, switch-primary

References rt_pipe_read_timed().

Read a message from a pipe.

This service reads the next available message from a given pipe.

Parameters

pipe	The pipe descriptor.
buf	A pointer to a memory area which will be written upon success with the message received.
size	The count of bytes from the received message to read up into <i>buf</i> . If <i>size</i> is lower than the actual message size, -ENOBUFS is returned since the incompletely received message would be lost. If <i>size</i> is zero, this call returns immediately with no other action.
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for a message to be available from the pipe (see note). Passing NULL causes the caller to block indefinitely until a message is available. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking in case no message is available.

Returns

The number of bytes available from the received message is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs_timeout is reached before a message arrives.
- -EWOULDBLOCK is returned if abs_timeout is { .tv_sec = 0, .tv_nsec = 0 } and no message is immediately available on entry to the call.
- -EINTR is returned if rt_task_unblock() was called for the current task before a message was available.
- -EINVAL is returned if pipe is not a valid pipe descriptor.
- -EIDRM is returned if *pipe* is deleted while the caller was waiting for a message. In such event, *pipe* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

abs_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt_pipe_read(), and rt_pipe_read_until().

Read from a pipe (with absolute scalar timeout).

This routine is a variant of rt_queue_read_timed() accepting an absolute timeout specification expressed as a scalar value.

Parameters

pipe	The pipe descriptor.
buf	A pointer to a memory area which will be written upon success with the message received.
size	The count of bytes from the received message to read up into <i>buf</i> . If <i>size</i> is lower than the actual message size, -ENOBUFS is returned since the incompletely received message would be lost. If <i>size</i> is zero, this call returns immediately with no other action.
abs_timeout	An absolute date expressed in clock ticks.

Tags

xthread-nowait, switch-primary

References rt_pipe_read_timed().

Stream bytes through a pipe.

This service writes a sequence of bytes to be received from the associated special device. Unlike rt_← pipe_send(), this service does not preserve message boundaries. Instead, an internal buffer is filled on the fly with the data, which will be consumed as soon as the receiver wakes up.

Data buffers sent by the rt_pipe_stream() service are always transmitted in FIFO order (i.e. P_NORMAL mode).

Parameters

pipe	The pipe descriptor.
buf	The address of the first data byte to send. The data will be copied to an internal buffer before transmission.
size	The size in bytes of the buffer. Zero is a valid value, in which case the service returns by Doxygen immediately without sending any data.

Returns

The number of bytes sent upon success; this value may be lower than *size*, depending on the available space in the internal buffer. Otherwise:

- -EINVAL is returned if mode is invalid or pipe is not a pipe descriptor.
- -ENOMEM is returned if not enough buffer space is available to complete the operation.
- -EIDRM is returned if pipe is a closed pipe descriptor.

Note

Writing data to a pipe before any peer has opened the associated special device is allowed. The output will be buffered until then, only restricted by the available memory in the associated buffer pool (see rt_pipe_create()).

Tags

xcontext, switch-primary

```
6.85.3.8 rt_pipe_unbind()

int rt_pipe_unbind (

RT_PIPE * pipe )
```

Unbind from a message pipe.

Parameters

```
pipe The pipe descriptor.
```

This routine releases a previous binding to a message pipe. After this call has returned, the descriptor is no more valid for referencing this object.

Tags

thread-unrestricted

Write a message to a pipe.

This service writes a complete message to be received from the associated special device. rt_pipe_\(\cdot\) write() always preserves message boundaries, which means that all data sent through a single call of this service will be gathered in a single read(2) operation from the special device.

This service differs from rt_pipe_send() in that it accepts a pointer to the raw data to be sent, instead of a canned message buffer.

Parameters

pipe	The pipe descriptor.
buf	The address of the first data byte to send. The data will be copied to an internal buffer
	before transmission.
size	The size in bytes of the message (payload data only). Zero is a valid value, in which case
	the service returns immediately without sending any message.
mode	A set of flags affecting the operation:

- P_URGENT causes the message to be prepended to the output queue, ensuring a LIFO ordering.
- P_NORMAL causes the message to be appended to the output queue, ensuring a FIFO ordering.

Returns

Upon success, this service returns *size*. Upon error, one of the following error codes is returned:

- -EINVAL is returned if *mode* is invalid or *pipe* is not a pipe descriptor.
- -ENOMEM is returned if not enough buffer space is available to complete the operation.
- -EIDRM is returned if *pipe* is a closed pipe descriptor.

Note

Writing data to a pipe before any peer has opened the associated special device is allowed. The output will be buffered until then, only restricted by the available memory in the associated buffer pool (see rt_pipe_create()).

Tags

xcontext, switch-primary

6.86 Message queue services

real-time IPC mechanism for sending messages of arbitrary size

Collaboration diagram for Message queue services:



Data Structures

struct RT_QUEUE_INFO

Queue status descriptor.

Macros

#define Q_PRIO 0x1 /* Pend by task priority order. */
 Creation flags.

Functions

• int rt_queue_create (RT_QUEUE *queue, const char *name, size_t poolsize, size_t qlimit, int mode)

Create a message queue.

• int rt queue delete (RT QUEUE *queue)

Delete a message queue.

void * rt_queue_alloc (RT_QUEUE *queue, size_t size)

Allocate a message buffer.

• int rt queue free (RT QUEUE *queue, void *buf)

Free a message buffer.

• int rt_queue_send (RT_QUEUE *queue, const void *buf, size_t size, int mode)

Send a message to a queue.

ssize_t rt_queue_receive_timed (RT_QUEUE *queue, void **bufp, const struct timespec *abs_

 timeout)

Receive a message from a queue (with absolute timeout date).

• static ssize_t rt_queue_receive_until (RT_QUEUE *queue, void **bufp, RTIME timeout)

Receive from a gueue (with absolute scalar timeout).

• static ssize_t rt_queue_receive (RT_QUEUE *queue, void **bufp, RTIME timeout)

Receive from a queue (with relative scalar timeout).

ssize_t rt_queue_read_timed (RT_QUEUE *queue, void *buf, size_t size, const struct timespec *abs timeout)

Read from a queue.

• static ssize_t rt_queue_read_until (RT_QUEUE *queue, void *buf, size_t size, RTIME timeout)

Read from a queue (with absolute scalar timeout).

• static ssize_t rt_queue_read (RT_QUEUE *queue, void *buf, size_t size, RTIME timeout)

Read from a queue (with relative scalar timeout).

int rt_queue_flush (RT_QUEUE *queue)

Flush pending messages from a queue.

• int rt_queue_inquire (RT_QUEUE *queue, RT_QUEUE_INFO *info)

Query queue status.

• int rt_queue_bind (RT_QUEUE *queue, const char *name, RTIME timeout)

Bind to a message queue.

• int rt_queue_unbind (RT_QUEUE *queue)

Unbind from a message queue.

6.86.1 Detailed Description

real-time IPC mechanism for sending messages of arbitrary size

Message queueing is a method by which real-time tasks can exchange or pass data through a Xenomai-managed queue of messages. Messages can vary in length and be assigned different types or usages. A message queue can be created by one task and used by multiple tasks that send and/or receive messages to the queue.

6.86.2 Macro Definition Documentation

```
6.86.2.1 Q_PRIO  
#define Q_PRIO 0x1 /* Pend by task priority order. */
Creation flags.
```

6.86.3 Function Documentation

```
6.86.3.1 rt_queue_alloc()

void * rt_queue_alloc (

RT_QUEUE * q,

size_t size )
```

Allocate a message buffer.

This service allocates a message buffer from the queue's internal pool. This buffer can be filled in with payload information, prior enqueuing it by a call to rt_queue_send(). When used in pair, these services provide a zero-copy interface for sending messages.

Parameters

q	The queue descriptor.
size	The requested size in bytes of the buffer. Zero is an acceptable value, which means that the
	message conveys no payload; in this case, the receiver will get a zero-sized message.

Returns

The address of the allocated buffer upon success, or NULL if the call fails.

Tags

unrestricted, switch-primary

```
6.86.3.2 rt_queue_bind()

int rt_queue_bind (

    RT_QUEUE * q,

    const char * name,

    RTIME timeout )
```

Bind to a message queue.

This routine creates a new descriptor to refer to an existing message queue identified by its symbolic name. If the object does not exist on entry, the caller may block until a queue of the given name is created.

Parameters

q	The address of a queue descriptor filled in by the operation. Contents of this memory is undefined upon failure.
name	A valid NULL-terminated name which identifies the queue to bind to. This string should match the object name argument passed to rt_queue_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing TM_INFINITE causes the caller to block indefinitely until the object is registered. Passing TM_NONBLOCK causes the service to return immediately without waiting if the object is not registered on entry.

Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt_task_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.

• -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

Create a message queue.

Create a message queue object which allows multiple tasks to exchange data through the use of variable-sized messages. A message queue is created empty.

Parameters

q	The address of a queue descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the queue. When non-NULL and non-empty, a copy of this string is used for indexing the created queue into the object registry.
poolsize	The size (in bytes) of the message buffer pool to be pre-allocated for holding messages. Message buffers will be claimed and released to this pool. The buffer pool memory cannot be extended. See note.
qlimit	This parameter allows to limit the maximum number of messages which can be queued at any point in time, sending to a full queue begets an error. The special value Q_UNLIMITED can be passed to disable the limit check.
mode	The queue creation mode. The following flags can be OR'ed into this bitmask, each of them affecting the new queue:

- Q_FIFO makes tasks pend in FIFO order on the queue for consuming messages.
- Q_PRIO makes tasks pend in priority order on the queue.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if mode is invalid or poolsize is zero.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the queue.
- -EEXIST is returned if the *name* is conflicting with an already registered queue.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

Note

Queues can be shared by multiple processes which belong to the same Xenomai session. Each message pending into the queue consumes four long words plus the actual payload size, aligned to the next long word boundary. e.g. a 6 byte message on a 32 bit platform would require 24 bytes of storage into the pool.

When *qlimit* is given (i.e. different from Q_UNLIMITED), this overhead is accounted for automatically, so that *qlimit* messages of *poolsize* / *qlimit* bytes can be stored into the pool concurrently. Otherwise, *poolsize* is increased by 5% internally to cope with such overhead.

Delete a message queue.

This routine deletes a queue object previously created by a call to rt_queue_create(). All resources attached to that queue are automatically released, including all pending messages.

Parameters

q The queue descriptor.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if q is not a valid queue descriptor.
- · -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

```
6.86.3.5 \text{rt\_queue\_flush}() int rt_queue_flush ( \text{RT\_QUEUE} * q )
```

Flush pending messages from a queue.

This routine flushes all messages currently pending in a queue, releasing all message buffers appropriately.

Parameters

```
q The queue descriptor.
```

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if *q* is not a valid queue descriptor.

Tags

unrestricted, switch-primary

Free a message buffer.

This service releases a message buffer to the queue's internal pool.

Parameters

q	The queue descriptor.
buf	The address of the message buffer to free. Even zero-sized messages carrying no payload data must be freed, since they are assigned a valid memory space to store internal information.

Returns

Zero is returned upon success, or -EINVAL if *buf* is not a valid message buffer previously allocated by the rt_queue_alloc() service, or the caller did not get ownership of the message through a successful return from rt_queue_receive().

Tags

unrestricted, switch-primary

```
6.86.3.7 rt_queue_inquire()

int rt_queue_inquire (

RT_QUEUE * q,

RT_QUEUE_INFO * info )
```

Query queue status.

This routine returns the status information about the specified queue.

Parameters

q	The queue descriptor.
info	A pointer to the returnbuffer" to copy the information to.

Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if *q* is not a valid queue descriptor.

Tags

unrestricted, switch-primary

Read from a queue (with relative scalar timeout).

This routine is a variant of rt_queue_read_timed() accepting a relative timeout specification expressed as a scalar value.

Parameters

q	The queue descriptor.
buf A pointer to a memory area which will be written upon success with the received mess Generated by Decay Production.	
size	The length in bytes of the memory area pointed to by buf.
timeout	A delay expressed in clock ticks.

Tags

xthread-nowait, switch-primary

References rt_queue_read_timed().

Read from a queue.

This service reads the next available message from a given queue.

Parameters

q	The queue descriptor.
buf	A pointer to a memory area which will be written upon success with the received message payload. The internal message buffer conveying the data is automatically freed by this call. If —enable-pshared is enabled in the configuration, <i>buf</i> must have been obtained from the Xenomai memory allocator via xnmalloc() or any service based on it, such as rt_heap_alloc().
size	The length in bytes of the memory area pointed to by <i>buf</i> . Messages larger than <i>size</i> are truncated appropriately.
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for a message to be available from the queue (see note). Passing NULL causes the caller to block indefinitely until a message is available. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking in case no message is available.

Returns

The number of bytes copied to *buf* is returned upon success. Zero is a possible value corresponding to a zero-sized message passed to rt_queue_send() or rt_queue_write(). Otherwise:

- -ETIMEDOUT is returned if abs_timeout is reached before a message arrives.
- -EWOULDBLOCK is returned if abs_timeout is { .tv_sec = 0, .tv_nsec = 0 } and no message is immediately available on entry to the call.
- -EINTR is returned if rt_task_unblock() was called for the current task before a message was available.
- -EINVAL is returned if q is not a valid queue descriptor.
- -EIDRM is returned if q is deleted while the caller was waiting for a message. In such event, q is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

abs_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt_queue_read(), and rt_queue_read_until().

```
6.86.3.10 rt_queue_read_until()

ssize_t rt_queue_read_until (

    RT_QUEUE * q,
    void * buf,
    size_t size,
    RTIME abs_timeout ) [inline], [static]
```

Read from a queue (with absolute scalar timeout).

This routine is a variant of rt_queue_read_timed() accepting an absolute timeout specification expressed as a scalar value.

Parameters

q	The queue descriptor.
buf	A pointer to a memory area which will be written upon success with the received message payload.
size	The length in bytes of the memory area pointed to by buf.
abs_timeout	An absolute date expressed in clock ticks.

Tags

xthread-nowait, switch-primary

References rt_queue_read_timed().

Receive from a queue (with relative scalar timeout).

This routine is a variant of rt_queue_receive_timed() accepting a relative timeout specification expressed as a scalar value.

Parameters

q	The queue descriptor.
bufp	A pointer to a memory location which will be written with the address of the received message.
timeout	A delay expressed in clock ticks.

Tags

xthread-nowait, switch-primary

References rt_queue_receive_timed().

Receive a message from a queue (with absolute timeout date).

This service receives the next available message from a given queue.

Parameters

q	The queue descriptor.
bufp	A pointer to a memory location which will be written with the address of the received message, upon success. Once consumed, the message space should be freed using rt_queue_free().
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for a message to be available from the queue (see note). Passing NULL causes the caller to block indefinitely until a message is available. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking in case no message is available.

Returns

The number of bytes available from the received message is returned upon success. Zero is a possible value corresponding to a zero-sized message passed to rt_queue_send() or rt_queue_write(). Otherwise:

- -ETIMEDOUT is returned if abs_timeout is reached before a message arrives.
- -EWOULDBLOCK is returned if abs_timeout is { .tv_sec = 0, .tv_nsec = 0 } and no message is immediately available on entry to the call.
- -EINTR is returned if rt_task_unblock() was called for the current task before a message was available.

- -EINVAL is returned if q is not a valid queue descriptor.
- -EIDRM is returned if *q* is deleted while the caller was waiting for a message. In such event, *q* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

abs_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt_queue_receive(), and rt_queue_receive_until().

Receive from a queue (with absolute scalar timeout).

This routine is a variant of rt_queue_receive_timed() accepting an absolute timeout specification expressed as a scalar value.

Parameters

q	The queue descriptor.
bufp	A pointer to a memory location which will be written with the address of the received message.
abs_timeout	An absolute date expressed in clock ticks.

Tags

xthread-nowait, switch-primary

References rt_queue_receive_timed().

```
const void * buf,
size_t size,
int mode )
```

Send a message to a queue.

This service sends a complete message to a given queue. The message must have been allocated by a previous call to rt queue alloc().

Parameters

q	The queue descriptor.
buf	The address of the message buffer to be sent. The message buffer must have been allocated using the rt_queue_alloc() service. Once passed to rt_queue_send(), the memory pointed to by <i>buf</i> is no more under the control of the sender and thus should not be referenced by it anymore; deallocation of this memory must be handled on the receiving side.
size	The actual size in bytes of the message, which may be lower than the allocated size for the buffer obtained from rt_queue_alloc(). Zero is a valid value, in which case an empty message will be sent.
mode	A set of flags affecting the operation:

- Q_URGENT causes the message to be prepended to the message queue, ensuring a LIFO ordering.
- Q_NORMAL causes the message to be appended to the message queue, ensuring a FIFO ordering.
- Q_BROADCAST causes the message to be sent to all tasks currently waiting for messages. The
 message is not copied; a reference count is maintained instead so that the message will remain
 valid until the last receiver releases its own reference using rt_queue_free(), after which the message space will be returned to the queue's internal pool.

Returns

Upon success, this service returns the number of receivers which got awaken as a result of the operation. If zero is returned, no task was waiting on the receiving side of the queue, and the message has been enqueued. Upon error, one of the following error codes is returned:

- -EINVAL is returned if q is not a message queue descriptor, mode is invalid, or buf is NULL.
- -ENOMEM is returned if queuing the message would exceed the limit defined for the queue at creation.

Tags

unrestricted, switch-primary

```
6.86.3.15 rt_queue_unbind() int rt_queue_unbind (  RT_QUEUE * q )
```

Unbind from a message queue.

١	Pa	ra	m	Δt	Δ	rc

q The queue descriptor.

This routine releases a previous binding to a message queue. After this call has returned, the descriptor is no more valid for referencing this object.


Tags

thread-unrestricted

6.87 Semaphore services

Counting semaphore IPC mechanism.

Collaboration diagram for Semaphore services:



Data Structures

• struct RT_SEM_INFO

Semaphore status descriptor.

Macros

#define S_PRIO 0x1 /* Pend by task priority order. */
 Creation flags.

Functions

- int rt_sem_create (RT_SEM *sem, const char *name, unsigned long icount, int mode)
- Create a counting semaphore.int rt_sem_delete (RT_SEM *sem)

Delete a semaphore.

• int rt_sem_p_timed (RT_SEM *sem, const struct timespec *abs_timeout)

Pend on a semaphore.

static int rt_sem_p_until (RT_SEM *sem, RTIME timeout)

Pend on a semaphore (with absolute scalar timeout).

• static int rt_sem_p (RT_SEM *sem, RTIME timeout)

Pend on a semaphore (with relative scalar timeout).

• int rt_sem_v (RT_SEM *sem)

Signal a semaphore.

• int rt_sem_broadcast (RT_SEM *sem)

Broadcast a semaphore.

• int rt_sem_inquire (RT_SEM *sem, RT_SEM_INFO *info)

Query semaphore status.

• int rt_sem_bind (RT_SEM *sem, const char *name, RTIME timeout)

Bind to a semaphore.

int rt_sem_unbind (RT_SEM *sem)

Unbind from a semaphore.

6.87.1 Detailed Description

Counting semaphore IPC mechanism.

A counting semaphore is a synchronization object for controlling the concurrency level allowed in accessing a resource from multiple real-time tasks, based on the value of a count variable accessed atomically. The semaphore is used through the P ("Proberen", from the Dutch "test and decrement") and V ("Verhogen", increment) operations. The P operation decrements the semaphore count by one if non-zero, or waits until a V operation is issued by another task. Conversely, the V operation releases a resource by incrementing the count by one, unblocking the heading task waiting on the P operation if any. Waiting on a semaphore may cause a priority inversion.

If no more than a single resource is made available at any point in time, the semaphore enforces mutual exclusion and thus can be used to serialize access to a critical section. However, mutexes should be used instead in order to prevent priority inversions, based on the priority inheritance protocol.

6.87.2 Macro Definition Documentation

```
6.87.2.1 S_PRIO

#define S_PRIO 0x1 /* Pend by task priority order. */

Creation flags.
```

6.87.3 Function Documentation

Bind to a semaphore.

This routine creates a new descriptor to refer to an existing semaphore identified by its symbolic name. If the object does not exist on entry, the caller may block until a semaphore of the given name is created.

Parameters

sem	The address of a semaphore descriptor filled in by the operation. Contents of this memory is undefined upon failure.
name	A valid NULL-terminated name which identifies the semaphore to bind to. This string should match the object name argument passed to rt_sem_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing
Generated by	DTM_INFINITE causes the caller to block indefinitely until the object is registered. Passing TM_NONBLOCK causes the service to return immediately without waiting if the object is not registered on entry.

Returns

Zero is returned upon success. Otherwise:

• -EINTR is returned if rt_task_unblock() was called for the current task before the retrieval has completed.

- -EWOULDBLOCK is returned if *timeout* is equal to TM_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

Broadcast a semaphore.

All tasks currently waiting on the semaphore are immediately unblocked. The semaphore count is set to zero.

Parameters

sem The semaphore descriptor.

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if sem is not a valid semaphore descriptor.

Tags

unrestricted

Create a counting semaphore.

Parameters

sem	The address of a semaphore descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the semaphore. When non-NULL and non-empty, a copy of this string is used for indexing the created semaphore into the object registry.
icount	The initial value of the counting semaphore.
mode	The semaphore creation mode. The following flags can be OR'ed into this bitmask:

- S_FIFO makes tasks pend in FIFO order on the semaphore.
- S_PRIO makes tasks pend in priority order on the semaphore.
- S_PULSE causes the semaphore to behave in "pulse" mode. In this mode, the V (signal) operation
 attempts to release a single waiter each time it is called, without incrementing the semaphore
 count, even if no waiter is pending. For this reason, the semaphore count in pulse mode remains
 zero.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *icount* is non-zero and S_PULSE is set in *mode*, or *mode* is otherwise invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the semaphore.
- -EEXIST is returned if the *name* is conflicting with an already registered semaphore.
- · -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

Note

Semaphores can be shared by multiple processes which belong to the same Xenomai session.

```
6.87.3.4 rt_sem_delete()

int rt_sem_delete (

RT_SEM * sem )
```

Delete a semaphore.

This routine deletes a semaphore previously created by a call to rt_sem_create().

Parameters

```
sem The semaphore descriptor.
```

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if sem is not a valid semaphore descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

mode-unrestricted, switch-secondary

```
6.87.3.5 rt_sem_inquire()

int rt_sem_inquire (

    RT_SEM * sem,

    RT_SEM_INFO * info )
```

Query semaphore status.

This routine returns the status information about the specified semaphore.

Parameters

sem	The semaphore descriptor.
info	A pointer to the returnbuffer" to copy the information to.

Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if sem is not a valid semaphore descriptor.

Tags

unrestricted

Pend on a semaphore (with relative scalar timeout).

This routine is a variant of rt_sem_p_timed() accepting a relative timeout specification expressed as a scalar value.

Parameters

sem	The semaphore descriptor.
timeout	A delay expressed in clock ticks.

Tags

xthread-nowait, switch-primary

References rt_sem_p_timed().

Pend on a semaphore.

Test and decrement the semaphore count. If the semaphore value is greater than zero, it is decremented by one and the service immediately returns to the caller. Otherwise, the caller is blocked until the semaphore is either signaled or destroyed, unless a non-blocking operation was required.

Parameters

sem	The semaphore descriptor.
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for the request to be satisfied (see note). Passing NULL causes the caller to block indefinitely until the request is satisfied. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return without blocking in case the request cannot be satisfied immediately.

Returns

Zero is returned upon success. Otherwise:

• -ETIMEDOUT is returned if abs_timeout is reached before the request is satisfied.

- -EWOULDBLOCK is returned if abs_timeout is { .tv_sec = 0, .tv_nsec = 0 } and the semaphore count is zero on entry.
- -EINTR is returned if rt_task_unblock() was called for the current task before the request is satisfied.
- -EINVAL is returned if sem is not a valid semaphore descriptor.
- -EIDRM is returned if *sem* is deleted while the caller was sleeping on it. In such a case, *sem* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

abs_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt_sem_p(), and rt_sem_p_until().

Pend on a semaphore (with absolute scalar timeout).

This routine is a variant of rt_sem_p_timed() accepting an absolute timeout specification expressed as a scalar value.

Parameters

sem	The semaphore descriptor.
abs_timeout	An absolute date expressed in clock ticks.

Tags

xthread-nowait, switch-primary

References rt_sem_p_timed().

```
6.87.3.9 rt_sem_unbind()

int rt_sem_unbind (

RT_SEM * sem )
```

Unbind from a semaphore.

Parameters

```
sem The semaphore descriptor.
```

This routine releases a previous binding to a semaphore. After this call has returned, the descriptor is no more valid for referencing this object.

Tags

thread-unrestricted

Signal a semaphore.

If the semaphore is pended, the task heading the wait queue is immediately unblocked. Otherwise, the semaphore count is incremented by one, unless the semaphore is used in "pulse" mode (see rt_seme_create()).

Parameters

sem	The semaphore descriptor.

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if sem is not a valid semaphore descriptor.

Tags

unrestricted

6.88 Task management services

Services dealing with preemptive multi-tasking.

Collaboration diagram for Task management services:



Data Structures

• struct RT TASK INFO

Task status descriptor.

Macros

#define T_LOPRIO 0

Task priorities.

#define T_LOCK __THREAD_M_LOCK

Task mode bits.

• #define T_WARNSW __THREAD_M_WARNSW

Cobalt only, nop over Mercury.

Functions

int rt_task_delete (RT_TASK *task)

Delete a real-time task.

• int rt_task_set_affinity (RT_TASK *task, const cpu_set_t *cpus)

Set CPU affinity of real-time task.

• int rt_task_start (RT_TASK *task, void(*entry)(void *arg), void *arg)

Start a real-time task.

• int rt_task_shadow (RT_TASK *task, const char *name, int prio, int mode)

Turn caller into a real-time task.

int rt_task_join (RT_TASK *task)

Wait on the termination of a real-time task.

int rt_task_wait_period (unsigned long *overruns_r)

Wait for the next periodic release point.

int rt_task_sleep (RTIME delay)

Delay the current real-time task (with relative delay).

int rt task sleep until (RTIME date)

Delay the current real-time task (with absolute wakeup date).

• int rt_task_same (RT_TASK *task1, RT_TASK *task2)

Compare real-time task descriptors.

• int rt_task_suspend (RT_TASK *task)

Suspend a real-time task.

int rt_task_resume (RT_TASK *task)

Resume a real-time task.

RT TASK * rt task self (void)

Retrieve the current task descriptor.

• int rt task set priority (RT TASK *task, int prio)

Change the base priority of a real-time task.

• int rt task set mode (int clrmask, int setmask, int *mode r)

Change the current task mode.

int rt_task_yield (void)

Manual round-robin.

int rt_task_unblock (RT_TASK *task)

Unblock a real-time task.

• int rt task slice (RT TASK *task, RTIME quantum)

Set a task's round-robin quantum.

• int rt task inquire (RT TASK *task, RT TASK INFO *info)

Retrieve information about a real-time task.

ssize_t rt_task_send_timed (RT_TASK *task, RT_TASK_MCB *mcb_s, RT_TASK_MCB *mcb_r, const struct timespec *abs_timeout)

Send a message to a real-time task.

static ssize_t rt_task_send_until (RT_TASK *task, RT_TASK_MCB *mcb_s, RT_TASK_MCB *mcb r, RTIME timeout)

Send a message to a real-time task (with absolute scalar timeout).

• static ssize_t rt_task_send (RT_TASK *task, RT_TASK_MCB *mcb_s, RT_TASK_MCB *mcb_r, RTIME timeout)

Send a message to a real-time task (with relative scalar timeout).

• int rt_task_receive_timed (RT_TASK_MCB *mcb_r, const struct timespec *abs_timeout)

Receive a message from a real-time task.

static int rt_task_receive_until (RT_TASK_MCB *mcb_r, RTIME timeout)

Receive a message from a real-time task (with absolute scalar timeout).

• static int rt_task_receive (RT_TASK_MCB *mcb_r, RTIME timeout)

Receive a message from a real-time task (with relative scalar timeout).

int rt_task_reply (int flowid, RT_TASK_MCB *mcb_s)

Reply to a remote task message.

int rt_task_bind (RT_TASK *task, const char *name, RTIME timeout)

Bind to a task.

int rt task unbind (RT TASK *task)

Unbind from a task.

int rt_task_create (RT_TASK *task, const char *name, int stksize, int prio, int mode)

Create a task with Alchemy personality.

• int rt_task_set_periodic (RT_TASK *task, RTIME idate, RTIME period)

Make a real-time task periodic.

• int rt_task_spawn (RT_TASK *task, const char *name, int stksize, int prio, int mode, void(*entry)(void *arg), void *arg)

Create and start a real-time task.

6.88.1 Detailed Description

Services dealing with preemptive multi-tasking.

Each Alchemy task is an independent portion of the overall application code embodied in a C procedure, which executes on its own stack context.

6.88.2 Macro Definition Documentation

```
6.88.2.1 T_LOCK

#define T_LOCK __THREAD_M_LOCK

Task mode bits.

Referenced by rt_task_set_mode().

6.88.2.2 T_LOPRIO

#define T_LOPRIO 0
```

```
6.88.2.3 T_WARNSW
```

Task priorities.

```
#define T_WARNSW __THREAD_M_WARNSW
```

Cobalt only, nop over Mercury.

Referenced by rt_task_set_mode().

6.88.3 Function Documentation

```
6.88.3.1 rt_task_bind()

int rt_task_bind (

    RT_TASK * task,
    const char * name,
    RTIME timeout )
```

Bind to a task.

This routine creates a new descriptor to refer to an existing Alchemy task identified by its symbolic name. If the object does not exist on entry, the caller may block until a task of the given name is created.

Parameters

task	The address of a task descriptor filled in by the operation. Contents of this memory is undefined upon failure.
name	A valid NULL-terminated name which identifies the task to bind to. This string should match the object name argument passed to rt_task_create(), or rt_task_shadow().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing TM_INFINITE causes the caller to block indefinitely until the object is registered. Passing TM_NONBLOCK causes the service to return immediately without waiting if the object is not registered on entry.

Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt_task_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

Create a task with Alchemy personality.

This service creates a task with access to the full set of Alchemy services. If *prio* is non-zero, the new task belongs to Xenomai's real-time FIFO scheduling class, aka SCHED_FIFO. If *prio* is zero, the task belongs to the regular SCHED_OTHER class.

Creating tasks with zero priority is useful for running non real-time processes which may invoke blocking real-time services, such as pending on a semaphore, reading from a message queue or a buffer, and so on.

Once created, the task is left dormant until it is actually started by rt_task_start().

Parameters

task	The address of a task descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the task. When non-NULL and non-empty, a copy of this string is used for indexing the created task into the object registry.
stksize	The size of the stack (in bytes) for the new task. If zero is passed, a system-dependent default size will be substituted.
prio	The base priority of the new task. This value must be in the [0 99] range, where 0 is the lowest effective priority.
mode	The task creation mode. The following flags can be OR'ed into this bitmask:

- T_JOINABLE allows another task to wait on the termination of the new task. rt_task_join() shall be called for this task to clean up any resources after its termination.
- T_LOCK causes the new task to lock the scheduler prior to entering the user routine specified by rt_task_start(). A call to rt_task_set_mode() from the new task is required to drop this lock.
- When running over the Cobalt core, T_WARNSW causes the SIGDEBUG signal to be sent to the current task whenever it switches to the secondary mode. This feature is useful to detect unwanted migrations to the Linux domain. This flag has no effect over the Mercury core.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if either prio, mode or stksize are invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the task.
- -EEXIST is returned if the *name* is conflicting with an already registered task.

Tags

mode-unrestricted, switch-secondary

Side effects

- When running over the Cobalt core:
 - calling rt task create() causes SCHED FIFO tasks to switch to secondary mode.
 - members of Xenomai's SCHED_FIFO class running in the primary domain have utmost priority over all Linux activities in the system, including Linux interrupt handlers.
- When running over the Mercury core, the new task belongs to the regular POSIX SCHED_F

 IFO class.

Note

Tasks can be referred to from multiple processes which all belong to the same Xenomai session.

Examples:

cross-link.c.

```
6.88.3.3 rt_task_delete() int rt_task_delete ( RT_TASK * task)
```

Delete a real-time task.

This call terminates a task previously created by rt task create().

Tasks created with the T_JOINABLE flag shall be joined by a subsequent call to rt_task_join() once successfully deleted, to reclaim all resources.

Parameters

```
task The task descriptor.
```

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if task is not a valid task descriptor.
- -EPERM is returned if *task* is NULL and this service was called from an invalid context. In addition, this error is always raised when this service is called from asynchronous context, such as a timer/alarm handler.

Tags

mode-unrestricted, switch-secondary

Note

The caller must be an Alchemy task if task is NULL.

Examples:

cross-link.c.

Retrieve information about a real-time task.

Return various information about an Alchemy task. This service may also be used to probe for task existence.

Parameters

task	The task descriptor. If task is NULL, the information about the current task is returned.
info	The address of a structure the task information will be written to. Passing NULL is valid, in
	which case the system is only probed for existence of the specified task.

Returns

Zero is returned if the task exists. In addition, if info is non-NULL, it is filled in with task information.

- -EINVAL is returned if *task* is not a valid task descriptor, or if *prio* is invalid.
- -EPERM is returned if task is NULL and this service was called from an invalid context.

Tags

mode-unrestricted, switch-primary

Note

The caller must be an Alchemy task if task is NULL.

```
6.88.3.5 rt_task_join()

int rt_task_join (

RT_TASK * task )
```

Wait on the termination of a real-time task.

This service blocks the caller in non-real-time context until *task* has terminated. All resources are released after successful completion of this service.

The specified task must have been created by the same process that wants to join it, and the T_JOIN ← ABLE mode flag must have been set on creation to rt_task_create().

Tasks created with the T_JOINABLE flag shall be joined by a subsequent call to rt_task_join() once successfully deleted, to reclaim all resources.

Parameters

task The task descriptor.

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if task is not a valid task descriptor.

• -EINVAL is returned if the task was not created with T_JOINABLE set or some other task is already waiting on the termination.

- -EDEADLK is returned if task refers to the caller.
- -ESRCH is returned if task no longer exists or refers to task created by a different process.

Tags

mode-unrestricted, switch-primary

Note

After successful completion of this service, it is neither required nor valid to additionally invoke rt_task_delete() on the same task.

Receive a message from a real-time task (with relative scalar timeout).

This routine is a variant of rt_task_receive_timed() accepting a relative timeout specification expressed as a scalar value.

Parameters

mcb⊷ _r	The address of a message control block referring to the receive message area.
timeout	A delay expressed in clock ticks.

Tags

xthread-only, switch-primary

References rt_task_receive_timed().

Receive a message from a real-time task.

This service is part of the synchronous message passing support available to Alchemy tasks. The caller receives a variable-sized message from another task. The sender is blocked until the caller invokes rt task reply() to finish the transaction.

A basic message control block is used to store the location and size of the data area to receive from the client, in addition to a user-defined operation code.

Parameters

mcb⊷	The address of a message control block referring to the receive message area. The fields
_r	from this control block should be set as follows:

- mcb_r->data should contain the address of a buffer large enough to collect the data sent by the remote task;
- mcb_r->size should contain the size in bytes of the buffer space pointed at by mcb_r->data. If mcb_r->size is lower than the actual size of the received message, no data copy takes place and -ENOBUFS is returned to the caller. See note.

Upon return, mcb_r->opcode will contain the operation code sent from the remote task using rt_task_← send().

Parameters

abs_timeout	The number of clock ticks to wait for receiving a message (see note). Passing NULL
	causes the caller to block indefinitely until a remote task eventually sends a message.
	Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without
	waiting if no remote task is currently waiting for sending a message.

Returns

A strictly positive value is returned upon success, representing a flow identifier for the opening transaction; this token should be passed to rt_task_reply(), in order to send back a reply to and unblock the remote task appropriately. Otherwise:

- -EPERM is returned if this service was called from an invalid context.
- -EINTR is returned if rt_task_unblock() was called for the current task before a message was received.
- -ENOBUFS is returned if *mcb_r* does not point at a message area large enough to collect the remote task's message.
- -EWOULDBLOCK is returned if abs_timeout is { .tv_sec = 0, .tv_nsec = 0 } and no remote task is currently waiting for sending a message to the caller.
- -ETIMEDOUT is returned if no message was received within the timeout.

Tags

xthread-only, switch-primary

Note

abs_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt_task_receive(), and rt_task_receive_until().

Receive a message from a real-time task (with absolute scalar timeout).

This routine is a variant of rt_task_receive_timed() accepting an absolute timeout specification expressed as a scalar value.

Parameters

mcb_r	The address of a message control block referring to the receive message area.
abs_timeout	An absolute date expressed in clock ticks.

Tags

xthread-only, switch-primary

References rt_task_receive_timed().

Reply to a remote task message.

This service is part of the synchronous message passing support available to Alchemy tasks. The caller sends a variable-sized message back to a remote task, in response to this task's initial message received by a call to rt_task_receive(). As a consequence of calling rt_task_reply(), the remote task will be unblocked from the rt_task_send() service.

A basic message control block is used to store the location and size of the data area to send back, in addition to a user-defined status code.

Parameters

flowid	The flow identifier returned by a previous call to rt_task_receive() which uniquely identifies
	the current transaction.
mcb⇔	The address of an optional message control block referring to the message to be sent
_s	back. If mcb_s is NULL, the remote will be unblocked without getting any reply data. When
	mcb_s is valid, the fields from this control block should be set as follows:

- mcb s->data should contain the address of the payload data to send to the remote task.
- mcb_s->size should contain the size in bytes of the payload data pointed at by mcb_s->data. Zero
 is a legitimate value, and indicates that no payload data will be transferred. In the latter case,
 mcb_s->data will be ignored.
- mcb_s->opcode is an opaque status code carried during the message transfer the caller can fill
 with any appropriate value. It will be made available "as is" to the remote task into the status code
 field by the rt_task_send() service. If mcb_s is NULL, Zero will be returned to the remote task into
 the status code field.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if flowid is invalid.
- -ENXIO is returned if flowid does not match the expected identifier returned from the latest call
 of the current task to rt_task_receive(), or if the remote task stopped waiting for the reply in the
 meantime (e.g. the remote could have been deleted or forcibly unblocked).
- -ENOBUFS is returned if the reply data referred to by *mcb_s* is larger than the reply area mentioned by the remote task when calling <u>rt_task_send()</u>. In such a case, the remote task also receives -← ENOBUFS on return from <u>rt_task_send()</u>.
- -EPERM is returned if this service was called from an invalid context.

Tags

xthread-only, switch-primary

```
6.88.3.10 rt_task_resume()

int rt_task_resume (

RT_TASK * task )
```

Resume a real-time task.

Forcibly resume the execution of a task which was previously suspended by a call to rt_task_suspend(), if the suspend nesting count decrements to zero.

Parameters

task The task descriptor.	task	The task descriptor.
-----------------------------	------	----------------------

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if task is not a valid task descriptor.

Tags

unrestricted, switch-primary

Note

Blocked and suspended task states are cumulative. Therefore, resuming a task currently waiting on a synchronization object (e.g. semaphore, queue) does not make it eligible for scheduling until the awaited resource is eventually acquired, or a timeout elapses.

```
6.88.3.11 rt_task_same()

int rt_task_same (

RT_TASK * task1,

RT_TASK * task2)
```

Compare real-time task descriptors.

This predicate returns true if *task1* and *task2* refer to the same task.

Parameters

task1	First task descriptor to compare.
task2	Second task descriptor to compare.

Returns

A non-zero value is returned if both descriptors refer to the same task, zero otherwise.

Tags

unrestricted

Retrieve the current task descriptor.

Return the address of the current Alchemy task descriptor.

Returns

The address of the task descriptor referring to the current Alchemy task is returned upon success, or NULL if not called from a valid Alchemy task context.

Tags

xthread-only

```
6.88.3.13 rt_task_send()

ssize_t rt_task_send (

RT_TASK * task,

RT_TASK_MCB * mcb_s,

RT_TASK_MCB * mcb_r,

RTIME timeout ) [inline], [static]
```

Send a message to a real-time task (with relative scalar timeout).

This routine is a variant of rt_task_send_timed() accepting a relative timeout specification expressed as a scalar value.

Parameters

task	The task descriptor.
mcb⊷	The address of the message control block referring to the message to be sent.
_s	
mcb⊷	The address of an optional message control block referring to the reply message area.
_r	
timeout	A delay expressed in clock ticks.

Tags

xthread-only, switch-primary

References rt_task_send_timed().

Send a message to a real-time task.

This service is part of the synchronous message passing support available to Alchemy tasks. The caller sends a variable-sized message to another task, waiting for the remote to receive the initial message by a call to rt_task_receive(), then reply to it using rt_task_reply().

A basic message control block is used to store the location and size of the data area to send or retrieve upon reply, in addition to a user-defined operation code.

Parameters

task The task descriptor.	
mcb⇔	The address of the message control block referring to the message to be sent. The fields
_s	from this control block should be set as follows:

- mcb s->data should contain the address of the payload data to send to the remote task.
- mcb_s->size should contain the size in bytes of the payload data pointed at by mcb_s->data. Zero is a legitimate value, and indicates that no payload data will be transferred. In the latter case, mcb_s->data will be ignored.
- mcb_s->opcode is an opaque operation code carried during the message transfer, the caller can fill with any appropriate value. It will be made available "as is" to the remote task into the operation code field by the rt_task_receive() service.

Parameters

mcb⊷	The address of an optional message control block referring to the reply message area. If
_r	mcb_r is NULL and a reply is sent back by the remote task, the reply message will be
	discarded, and -ENOBUFS will be returned to the caller. When mcb_r is valid, the fields
	from this control block should be set as follows:

- mcb_r->data should contain the address of a buffer large enough to collect the reply data from the remote task.
- mcb_r->size should contain the size in bytes of the buffer space pointed at by mcb_r->data. If mcb_r->size is lower than the actual size of the reply message, no data copy takes place and -ENOBUFS is returned to the caller.

Upon return, mcb_r->opcode will contain the status code sent back from the remote task using rt_task
_reply(), or zero if unspecified.

Parameters

abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for the
	recipient task to reply to the initial message (see note). Passing NULL causes the
	caller to block indefinitely until a reply is received. Passing { .tv_sec = 0, .tv_nsec = 0
	} causes the service to return without blocking in case the recipient task is not waiting
	for messages at the time of the call.

Returns

A positive value is returned upon success, representing the length (in bytes) of the reply message returned by the remote task. Zero is a success status, meaning either that mcb_r was NULL on entry, or that no actual message was passed to the remote call to rt task reply(). Otherwise:

- -EINVAL is returned if task is not a valid task descriptor.
- -EPERM is returned if this service was called from an invalid context.
- -ENOBUFS is returned if mcb_r does not point at a message area large enough to collect the remote task's reply. This includes the case where mcb_r is NULL on entry, despite the remote task attempts to send a reply message.
- -EWOULDBLOCK is returned if abs_timeout is { .tv_sec = 0, .tv_nsec = 0 } and the recipient task is not currently waiting for a message on the rt_task_receive() service.
- -EIDRM is returned if task has been deleted while waiting for a reply.
- -EINTR is returned if rt_task_unblock() was called for the current task before any reply was received from the recipient task.

Tags

xthread-only, switch-primary

Note

abs_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt_task_send(), and rt_task_send_until().

Send a message to a real-time task (with absolute scalar timeout).

This routine is a variant of rt_task_send_timed() accepting an absolute timeout specification expressed as a scalar value.

Parameters

task	The task descriptor.
mcb_s	The address of the message control block referring to the message to be sent.
mcb_r	The address of an optional message control block referring to the reply message area.
abs_timeout	An absolute date expressed in clock ticks.

Tags

xthread-only, switch-primary

References rt task send timed().

Set CPU affinity of real-time task.

This calls makes task affine to the set of CPUs defined by cpus.

Parameters

task	The task descriptor. If <i>task</i> is NULL, the CPU affinity of the current task is changed.
cpus	The set of CPUs task should be affine to.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is NULL but the caller is not a Xenomai task, or if *task* is non-NULL but not a valid task descriptor.
- -EINVAL is returned if *cpus* contains no processors that are currently physically on the system and permitted to the process according to any restrictions that may be imposed by the "cpuset" mechanism described in cpuset(7).

Tags

mode-unrestricted, switch-secondary

Note

The caller must be an Alchemy task if task is NULL.

Change the current task mode.

Each Alchemy task has a set of internal flags determining several operating conditions. rt_task_set — _mode() takes a bitmask of mode bits to clear for disabling the corresponding modes for the current task, and another one to set for enabling them. The mode bits which were previously in effect before the change can be returned upon request.

The following bits can be part of the bitmask:

- T_LOCK causes the current task to lock the scheduler on the current CPU, preventing all further involuntary task switches on this CPU. Clearing this bit unlocks the scheduler.
- Only when running over the Cobalt core:
 - T_WARNSW causes the SIGDEBUG signal to be sent to the current task whenever it switches to the secondary mode. This feature is useful to detect unwanted migrations to the Linux domain.
 - T_CONFORMING can be passed in *setmask* to switch the current Alchemy task to its preferred runtime mode. The only meaningful use of this switch is to force a real-time task back to primary mode (see note). Any other use leads to a nop.

These two last flags have no effect over the Mercury core, and are simply ignored.

Parameters

clrmask	A bitmask of mode bits to clear for the current task, before <i>setmask</i> is applied. Zero is an acceptable value which leads to a no-op.
setmask	A bitmask of mode bits to set for the current task. Zero is an acceptable value which leads to a no-op.
mode⊷ _r	If non-NULL, <i>mode_r</i> must be a pointer to a memory location which will be written upon success with the previous set of active mode bits. If NULL, the previous set of active mode bits will not be returned.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is not a valid task descriptor, or if any bit from *clrmask* or *setmask* is invalid.
- -EPERM is returned if this service was called from an invalid context.

Tags

xthread-only, switch-primary

Note

The caller must be an Alchemy task.

Forcing the task mode using the T_CONFORMING bit from user code is almost always wrong, since the Xenomai/cobalt core handles mode switches internally when/if required. Most often, manual mode switching from applications introduces useless overhead. This mode bit is part of the API only to cover rare use cases in middleware code based on the Alchemy interface.

References T LOCK, and T WARNSW.

Make a real-time task periodic.

Make a task periodic by programing its first release point and its period in the processor time line. *task* should then call rt_task_wait_period() to sleep until the next periodic release point in the processor timeline is reached.

Parameters

task	The task descriptor. If <i>task</i> is NULL, the current task is made periodic. <i>task</i> must belong the current process.
idate	The initial (absolute) date of the first release point, expressed in clock ticks (see note). If <i>idate</i> is equal to TM_NOW, the current system date is used.
period	The period of the task, expressed in clock ticks (see note). Passing TM_INFINITE stops the task's periodic timer if enabled, then returns successfully.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is NULL but the caller is not a Xenomai task, or if *task* is non-NULL but not a valid task descriptor.
- -ETIMEDOUT is returned if *idate* is different from TM_INFINITE and represents a date in the past.

Tags

mode-unrestricted, switch-primary

Note

The caller must be an Alchemy task if task is NULL.

Over Cobalt, -EINVAL is returned if *period* is different from TM_INFINITE but shorter than the user scheduling latency value for the target system, as displayed by /proc/xenomai/latency.

The *idate* and *period* values are interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

Attention

Unlike its Xenomai 2.x counterpart, rt_task_set_periodic() will **NOT** block *task* until *idate* is reached. The first beat in the periodic timeline should be awaited for by a call to rt_task_wait←_period().

Examples:

cross-link.c.

Change the base priority of a real-time task.

The base priority of a task defines the relative importance of the work being done by each task, which gains conrol of the CPU accordingly.

Changing the base priority of a task does not affect the priority boost the target task might have obtained as a consequence of a priority inheritance undergoing.

Parameters

task	The task descriptor. If <i>task</i> is NULL, the priority of the current task is changed.
prio	The new priority. This value must range from [T_LOPRIO T_HIPRIO] (inclusive) where T_LOPRIO is the lowest effective priority.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is not a valid task descriptor, or if *prio* is invalid.
- -EPERM is returned if task is NULL and this service was called from an invalid context.

Tags

mode-unrestricted, switch-primary

Note

The caller must be an Alchemy task if *task* is NULL.

Assigning the same priority to a running or ready task moves it to the end of its priority group, thus causing a manual round-robin.

Turn caller into a real-time task.

Set the calling thread personality to the Alchemy API, enabling the full set of Alchemy services. Upon success, the caller is no more a regular POSIX thread, but a Xenomai-extended thread.

If *prio* is non-zero, the new task moves to Xenomai's real-time FIFO scheduling class, aka SCHED_FIFO. If *prio* is zero, the task moves to the regular SCHED_OTHER class.

Running Xenomai tasks with zero priority is useful for running non real-time processes which may invoke blocking real-time services, such as pending on a semaphore, reading from a message queue or a buffer, and so on.

Parameters

task	If non-NULL, the address of a task descriptor which can be later used to identify uniquely the task, upon success of this call. If NULL, no descriptor is returned.
name	An ASCII string standing for the symbolic name of the task. When non-NULL and non-empty, a copy of this string is used for indexing the task into the object registry.
prio	The base priority of the task. This value must be in the [0 99] range, where 0 is the lowest effective priority.
mode	The task shadowing mode. The following flags can be OR'ed into this bitmask:

- T_LOCK causes the current task to lock the scheduler before returning to the caller, preventing all
 further involuntary task switches on the current CPU. A call to rt_task_set_mode() from the current
 task is required to drop this lock.
- When running over the Cobalt core, T_WARNSW causes the SIGDEBUG signal to be sent to the current task whenever it switches to the secondary mode. This feature is useful to detect unwanted migrations to the Linux domain. This flag has no effect over the Mercury core.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if prio is invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the task extension.
- -EEXIST is returned if the *name* is conflicting with an already registered task.
- -EBUSY is returned if the caller is not a regular POSIX thread.

Tags

pthread-only, switch-secondary, switch-primary

Side effects

Over Cobalt, if the caller is a plain POSIX thread, it is turned into a Xenomai *shadow* thread, with full access to all Cobalt services. The caller always returns from this service in primary mode.

Note

Tasks can be referred to from multiple processes which all belong to the same Xenomai session.

Examples:

rtcanrecv.c, and rtcansend.c.

Delay the current real-time task (with relative delay).

This routine is a variant of rt task sleep until() accepting a relative timeout specification.

Parameters

delay

A relative delay expressed in clock ticks (see note). A zero delay causes this service to return immediately to the caller with a success status.

Returns

See rt_task_sleep_until().

Tags

xthread-only, switch-primary

Note

The *delay* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

Examples:

cross-link.c, and rtcansend.c.

Delay the current real-time task (with absolute wakeup date).

Delay the execution of the calling task until a given date is reached. The caller is put to sleep, and does not consume any CPU time in such a state.

Parameters

date

An absolute date expressed in clock ticks, specifying a wakeup date (see note). As a special case, TM_INFINITE is an acceptable value that causes the caller to block indefinitely, until rt_task_unblock() is called against it. Otherwise, any wake up date in the past causes the task to return immediately.

Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt_task_unblock() was called for the current task.
- -ETIMEDOUT is returned if date has already elapsed.
- · -EPERM is returned if this service was called from an invalid context.

Tags

xthread-only, switch-primary

Note

The caller must be an Alchemy task if task is NULL.

The *date* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

```
6.88.3.23 rt_task_slice()

int rt_task_slice (

RT_TASK * task,

RTIME quantum )
```

Set a task's round-robin quantum.

Set the time credit allotted to a task undergoing the round-robin scheduling. If *quantum* is non-zero, rt_task_slice() also refills the current quantum for the target task, otherwise, time-slicing is stopped for that task.

In other words, rt_task_slice() should be used to toggle round-robin scheduling for an Alchemy task.

Parameters

task	The task descriptor. If <i>task</i> is NULL, the time credit of the current task is changed. <i>task</i> must belong to the current process.
quantum	The round-robin quantum for the task expressed in clock ticks (see note).

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is not a valid task descriptor, or if *prio* is invalid.
- -EPERM is returned if task is NULL and this service was called from an invalid context.

Tags

mode-unrestricted, switch-primary

Note

The caller must be an Alchemy task if task is NULL.

The *quantum* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

Create and start a real-time task.

This service spawns a task by combining calls to rt_task_create() and rt_task_start() for the new task.

Parameters

task	The address of a task descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the task. When non-NULL and non-empty, a copy of this string is used for indexing the created task into the object registry.
stksize	The size of the stack (in bytes) for the new task. If zero is passed, a system-dependent default size will be substituted.
prio	The base priority of the new task. This value must be in the [0 99] range, where 0 is the lowest effective priority.
mode	The task creation mode. See rt_task_create().
entry	The address of the task entry point.
arg	A user-defined opaque argument entry will receive.

Returns

```
See rt_task_create().
```

Tags

mode-unrestricted, switch-secondary

Side effects

```
see rt_task_create().
```

Start a real-time task.

This call starts execution of a task previously created by rt_task_create(). This service causes the started task to leave the initial dormant state.

Parameters

task	The task descriptor.
entry	The address of the task entry point.
arg	A user-defined opaque argument entry will receive.

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if task is not a valid task descriptor.

Tags

mode-unrestricted, switch-primary

Note

Starting an already started task leads to a nop, returning a success status.

Examples:

cross-link.c.

Suspend a real-time task.

Forcibly suspend the execution of a task. This task will not be eligible for scheduling until it is explicitly resumed by a call to rt_task_resume(). In other words, the suspended state caused by a call to rt_task_suspend() is cumulative with respect to the delayed and blocked states caused by other services, and is managed separately from them.

A nesting count is maintained so that rt task suspend() and rt task resume() must be used in pairs.

Receiving a Linux signal causes the suspended task to resume immediately.

Parameters

task The task descriptor. If task is NULL, the current task is suspended.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is NULL but the caller is not a Xenomai task, or if *task* is non-NULL but not a valid task descriptor.
- -EINTR is returned if a Linux signal has been received by the caller if suspended.
- -EPERM is returned if task is NULL and this service was called from an invalid context.

Tags

mode-unrestricted, switch-primary

Note

The caller must be an Alchemy task if *task* is NULL.

Blocked and suspended task states are cumulative. Therefore, suspending a task currently waiting on a synchronization object (e.g. semaphore, queue) holds its execution until it is resumed, despite the awaited resource may have been acquired, or a timeout has elapsed in the meantime.

```
6.88.3.27 \quad \text{rt\_task\_unbind()} \text{int rt\_task\_unbind (} \\ \text{RT\_TASK} * \textit{task} \text{)}
```

Unbind from a task.

Parameters

```
task The task descriptor.
```

This routine releases a previous binding to an Alchemy task. After this call has returned, the descriptor is no more valid for referencing this object.

Tags

thread-unrestricted

```
6.88.3.28 rt_task_unblock()

int rt_task_unblock (

RT_TASK * task )
```

Unblock a real-time task.

Break the task out of any wait it is currently in. This call clears all delay and/or resource wait condition for the target task.

However, rt_task_unblock() does not resume a task which has been forcibly suspended by a previous call to rt_task_suspend(). If all suspensive conditions are gone, the task becomes eligible anew for scheduling.

Parameters

task	The task descriptor.

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if task is not a valid task descriptor.

Tags

unrestricted, switch-primary

Wait for the next periodic release point.

Delay the current task until the next periodic release point is reached. The periodic timer should have been previously started for *task* by a call to rt_task_set_periodic().

Parameters

overruns⇔	If non-NULL, overruns_r shall be a pointer to a memory location which will be written
_r	with the count of pending overruns. This value is written to only when
	rt_task_wait_period() returns -ETIMEDOUT or success. The memory location remains
	unmodified otherwise. If NULL, this count will not be returned.

Returns

Zero is returned upon success. If *overruns_r* is non-NULL, zero is written to the pointed memory location. Otherwise:

- -EWOULDBLOCK is returned if rt_task_set_periodic() was not called for the current task.
- -EINTR is returned if rt_task_unblock() was called for the waiting task before the next periodic release point was reached. In this case, the overrun counter is also cleared.
- -ETIMEDOUT is returned if a timer overrun occurred, which indicates that a previous release point was missed by the calling task. If *overruns_r* is non-NULL, the count of pending overruns is written to the pointed memory location.
- -EPERM is returned if this service was called from an invalid context.

Tags

xthread-only, switch-primary

Note

If the current release point has already been reached at the time of the call, the current task immediately returns from this service with no delay.

Examples:

cross-link.c.

Manual round-robin.

Move the current task to the end of its priority group, so that the next equal-priority task in ready state is switched in.

Returns

Zero is returned upon success. Otherwise:

· -EPERM is returned if this service was called from an invalid context.

Tags

xthread-only, switch-primary

6.89 Timer management services

Services for reading and spinning on the hardware timer.

Collaboration diagram for Timer management services:



Data Structures

struct rt_timer_info

Timer status descriptor.

Typedefs

typedef struct rt_timer_info RT_TIMER_INFO
 Timer status descriptor.

Functions

• static RTIME rt_timer_read (void)

Return the current system time.

• SRTIME rt_timer_ns2ticks (SRTIME ns)

Convert nanoseconds to Alchemy clock ticks.

SRTIME rt_timer_ticks2ns (SRTIME ticks)

Convert Alchemy clock ticks to nanoseconds.

• void rt_timer_inquire (RT_TIMER_INFO *info)

Inquire about the Alchemy clock.

void rt_timer_spin (RTIME ns)

Busy wait burning CPU cycles.

6.89.1 Detailed Description

Services for reading and spinning on the hardware timer.

6.89.2 Typedef Documentation

```
6.89.2.1 RT_TIMER_INFO
```

```
typedef struct rt_timer_info RT_TIMER_INFO
```

Timer status descriptor.

This structure reports information about the Alchemy clock, returned by a call to rt timer inquire().

6.89.3 Function Documentation

Inquire about the Alchemy clock.

Return status information about the Alchemy clock.

Parameters

info The address of a structure to fill with the clock information.

Tags

unrestricted

References rt_timer_info::period.

Convert nanoseconds to Alchemy clock ticks.

Convert a count of nanoseconds to Alchemy clock ticks. This routine operates on signed nanosecond values. This is the converse call to rt_timer_ticks2ns().

Parameters

ns The count of nanoseconds to convert.

Returns

The corresponding value expressed in clock ticks of the Alchemy clock. The resolution of the Alchemy clock can be set using the –alchemy-clock-resolution option when starting the application process (defaults to 1 nanosecond).

Tags

unrestricted

Examples:

cross-link.c, and rtcansend.c.

Return the current system time.

Return the current time maintained by the Xenomai core clock.

Returns

The current time expressed in clock ticks (see note).

Tags

unrestricted

Note

The *time* value is a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

Examples:

cross-link.c.

```
6.89.3.4 rt_timer_spin()

void rt_timer_spin (

RTIME ns )
```

Busy wait burning CPU cycles.

Enter a busy waiting loop for a count of nanoseconds.

Since this service is always called with interrupts enabled, the caller might be preempted by other real-time activities, therefore the actual delay might be longer than specified.

Parameters

ns The time to wait expressed in nanoseconds.

Tags

unrestricted

Convert Alchemy clock ticks to nanoseconds.

Convert a count of Alchemy clock ticks to nanoseconds. This routine operates on signed nanosecond values. This is the converse call to rt_timer_ns2ticks().

Parameters

ns The count of nanoseconds to convert.

Returns

The corresponding value expressed in nanoseconds. The resolution of the Alchemy clock can be set using the –alchemy-clock-resolution option when starting the application process (defaults to 1 nanosecond).

Tags

unrestricted

6.90 VxWorks® emulator

A VxWorks® emulation library on top of Xenomai.

A VxWorks® emulation library on top of Xenomai.

The emulator mimicks the behavior described in the public documentation of the WIND 5.x API for the following class of services:

- taskLib, taskInfoLib, taskHookLib,
- semLib, msgQLib, wdLib, memPartLib
- intLib, tickLib, sysLib (partial)
- errnoLib, IstLib, kernelLib (partial)

6.91 pSOS® emulator

A pSOS® emulation library on top of Xenomai.

A pSOS® emulation library on top of Xenomai.

The emulator mimicks the behavior described in the public documentation of the pSOS 2.x API for the following class of services:

- Tasks, Events, Queues, Semaphores
- Partitions, Regions, Timers

6.92 Transition Kit 553

6.92 Transition Kit

A set of wrappers and services easing the transition from Xenomai 2.x to 3.x.

• int COMPAT__rt_task_create (RT_TASK *task, const char *name, int stksize, int prio, int mode) Create a real-time task (compatibility service).

• int COMPAT rt task set periodic (RT TASK *task, RTIME idate, RTIME period)

Make a real-time task periodic (compatibility service).

• int COMPAT rt alarm create (RT ALARM *alarm, const char *name)

Create an alarm object (compatibility service).

• int rt alarm wait (RT ALARM *alarm)

Wait for the next alarm shot (compatibility service).

int COMPAT__rt_event_create (RT_EVENT *event, const char *name, unsigned long ivalue, int mode)

Create an event flag group.

- int COMPAT__rt_event_signal (RT_EVENT *event, unsigned long mask) Signal an event.
- int COMPAT__rt_event_clear (RT_EVENT *event, unsigned long mask, unsigned long *mask_r)

 Clear event flags.
- int COMPAT__rt_pipe_create (RT_PIPE *pipe, const char *name, int minor, size_t poolsize)

 Create a message pipe.
- int pthread_make_periodic_np (pthread_t thread, struct timespec *starttp, struct timespec *periodtp)

Make a thread periodic (compatibility service).

int pthread_wait_np (unsigned long *overruns_r)

Wait for the next periodic release point (compatibility service)

6.92.1 Detailed Description

A set of wrappers and services easing the transition from Xenomai 2.x to 3.x.

This interface provides a source compatibility layer for building applications based on the Xenomai 2.x posix and native APIs over Xenomai 3.x.

6.92.2 Function Documentation

```
6.92.2.1 COMPAT__rt_alarm_create()

int COMPAT__rt_alarm_create (

    RT_ALARM * alarm,
    const char * name )
```

Create an alarm object (compatibility service).

This routine creates an object triggering an alarm routine at a specified time in the future. Alarms can be periodic or oneshot, depending on the reload interval value passed to rt_alarm_start(). A task can wait for timeouts using the rt_alarm_wait() service.

Parameters

alarm	The address of an alarm descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the alarm. When non-NULL and non-empty, a copy of this string is used for indexing the created alarm into the object registry.

Returns

Zero is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get memory from the local pool in order to create the alarm.
- -EEXIST is returned if the *name* is conflicting with an already registered alarm.
- · -EPERM is returned if this service was called from an asynchronous context.

Tags

thread-unrestricted, switch-secondary

Note

Alarms are process-private objects and thus cannot be shared by multiple processes, even if they belong to the same Xenomai session.

Deprecated This is a compatibility service from the Transition Kit.

Clear event flags.

This call is the legacy form of the rt_event_clear() service, using a long event mask. The new form uses a regular integer to hold the event mask instead.

Parameters

event	The event descriptor.
mask	The set of event flags to be cleared.
mask⊷ _r	If non-NULL, <i>mask_r</i> is the address of a memory location which will receive the previous value of the event flag group before the flags are cleared.

6.92 Transition Kit 555

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if event is not a valid event flag group descriptor.

Tags

unrestricted, switch-primary

Deprecated This is a compatibility service from the Transition Kit.

Create an event flag group.

This call is the legacy form of the rt_event_create() service, using a long event mask. The new form uses a regular integer to hold the event mask instead.

Parameters

event	The address of an event descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the event. When non-NULL and non-empty, a copy of this string is used for indexing the created event into the object registry.
ivalue	The initial value of the group's event mask.
mode	The event group creation mode. The following flags can be OR'ed into this bitmask:

- EV_FIFO makes tasks pend in FIFO order on the event flag group.
- EV_PRIO makes tasks pend in priority order on the event flag group.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if mode is invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the event flag group.

- -EEXIST is returned if the *name* is conflicting with an already registered event flag group.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

thread-unrestricted, switch-secondary

Note

Event flag groups can be shared by multiple processes which belong to the same Xenomai session.

Deprecated This is a compatibility service from the Transition Kit.

Signal an event.

This call is the legacy form of the rt_event_signal() service, using a long event mask. The new form uses a regular integer to hold the event mask instead.

Parameters

event	The event descriptor.
mask	The set of events to be posted.

Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if event is not an event flag group descriptor.

Tags

unrestricted, switch-primary

Deprecated This is a compatibility service from the Transition Kit.

6.92 Transition Kit 557

Create a message pipe.

This call is the legacy form of the rt_pipe_create() service, which returns a zero status upon success. The new form returns the *minor* number assigned to the connection instead, which is useful when P_ \leftarrow MINOR_AUTO is specified in the call (see the discussion about the *minor* parameter).

This service opens a bi-directional communication channel for exchanging messages between Xenomai threads and regular Linux threads. Pipes natively preserve message boundaries, but can also be used in byte-oriented streaming mode from Xenomai to Linux.

rt_pipe_create() always returns immediately, even if no thread has opened the associated special device file yet. On the contrary, the non real-time side could block upon attempt to open the special device file until rt_pipe_create() is issued on the same pipe from a Xenomai thread, unless O_NONBLOCK was given to the open(2) system call.

Parameters

pipe	The address of a pipe descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the pipe. When non-NULL and non-empty, a copy of this string is used for indexing the created pipe into the object registry.

Named pipes are supported through the use of the registry. Passing a valid *name* parameter when creating a message pipe causes a symbolic link to be created from /proc/xenomai/registry/rtipc/xddp/*name* to the associated special device (i.e. /dev/rtp*), so that the specific *minor* information does not need to be known from those processes for opening the proper device file. In such a case, both sides of the pipe only need to agree upon a symbolic name to refer to the same data path, which is especially useful whenever the *minor* number is picked up dynamically using an adaptive algorithm, such as passing P MINOR AUTO as *minor* value.

Parameters

minor	The minor number of the device associated with the pipe. Passing P_MINOR_AUTO causes the minor number to be auto-allocated. In such a case, a symbolic link will be automatically created from /proc/xenomai/registry/rtipc/xddp/name to the allocated pipe device entry. Valid minor numbers range from 0 to CONFIG_XENO_OPT_PIPE_NRDEV-1.
poolsize	Specifies the size of a dedicated buffer pool for the pipe. Passing 0 means that all message allocations for this pipe are performed on the Cobalt core heap.

Returns

This compatibility call returns zero upon success. Otherwise:

 -ENOMEM is returned if the system fails to get memory from the main heap in order to create the pipe.

• -ENODEV is returned if minor is different from P_MINOR_AUTO and is not a valid minor number.

- -EEXIST is returned if the *name* is conflicting with an already registered pipe.
- -EBUSY is returned if minor is already open.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

thread-unrestricted, switch-secondary

Create a real-time task (compatibility service).

This service creates a task with access to the full set of Xenomai real-time services.

This service creates a task with access to the full set of Xenomai real-time services. If *prio* is non-zero, the new task belongs to Xenomai's real-time FIFO scheduling class, aka SCHED_FIFO. If *prio* is zero, the task belongs to the regular SCHED_OTHER class.

Creating tasks with zero priority is useful for running non real-time processes which may invoke blocking real-time services, such as pending on a semaphore, reading from a message queue or a buffer, and so on

Once created, the task is left dormant until it is actually started by rt_task_start().

Parameters

task	The address of a task descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the task. When non-NULL and non-empty, a copy of this string is used for indexing the created task into the object registry.
stksize	The size of the stack (in bytes) for the new task. If zero is passed, a system-dependent default size will be substituted.
prio	The base priority of the new task. This value must be in the [0 99] range, where 0 is the lowest effective priority.
mode	The task creation mode. The following flags can be OR'ed into this bitmask:

- T_FPU allows the task to use the FPU whenever available on the platform. This flag may be omitted, as it is automatically set when a FPU is present on the platform, cleared otherwise.
- T_SUSP causes the task to start in suspended mode. In such a case, the thread will have to be explicitly resumed using the rt_task_resume() service for its execution to actually begin.

6.92 Transition Kit 559

T_CPU(cpuid) makes the new task affine to CPU # cpuid. CPU identifiers range from 0 to 7 (inclusive).

• T_JOINABLE allows another task to wait on the termination of the new task. rt_task_join() shall be called for this task to clean up any resources after its termination.

Passing T_FPU|T_CPU(1) in the *mode* parameter thus creates a task with FPU support enabled and which will be affine to CPU #1.

 When running over the Cobalt core, T_WARNSW causes the SIGDEBUG signal to be sent to the current task whenever it switches to the secondary mode. This feature is useful to detect unwanted migrations to the Linux domain. This flag has no effect over the Mercury core.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if either prio, mode or stksize are invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the task.
- -EEXIST is returned if the name is conflicting with an already registered task.

Tags

thread-unrestricted, switch-secondary

Side effects

- calling rt_task_create() causes SCHED_FIFO tasks to switch to secondary mode.
- members of Xenomai's SCHED_FIFO class running in the primary domain have utmost priority over all Linux activities in the system, including Linux interrupt handlers.

Note

Tasks can be referred to from multiple processes which all belong to the same Xenomai session.

Deprecated This is a compatibility service from the Transition Kit.

Make a real-time task periodic (compatibility service).

Make a task periodic by programing its first release point and its period in the processor time line. *task* should then call rt_task_wait_period() to sleep until the next periodic release point in the processor timeline is reached.

Parameters

task	The task descriptor. If <i>task</i> is NULL, the current task is made periodic. <i>task</i> must belong the current process.
idate	The initial (absolute) date of the first release point, expressed in clock ticks (see note). If <i>idate</i> is equal to TM_NOW, the current system date is used. Otherwise, if <i>task</i> is NULL or equal to <i>rt_task_self()</i> , the caller is delayed until <i>idate</i> has elapsed.
period	The period of the task, expressed in clock ticks (see note). Passing TM_INFINITE stops the task's periodic timer if enabled, then returns successfully.

Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is NULL but the caller is not a Xenomai task, or if *task* is non-NULL but not a valid task descriptor.
- -ETIMEDOUT is returned if idate is different from TM INFINITE and represents a date in the past.

Tags

thread-unrestricted, switch-primary

Note

The caller must be an Alchemy task if task is NULL.

Unlike the original Xenomai 2.x call, this emulation delays the caller until *idate* has elapsed only if *task* is NULL or equal to rt_task_self().

Side effects

Over Cobalt, -EINVAL is returned if *period* is different from TM_INFINITE but shorter than the user scheduling latency value for the target system, as displayed by /proc/xenomai/latency.

Note

The *idate* and *period* values are interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

Deprecated This is a compatibility service from the Transition Kit.

Make a thread periodic (compatibility service).

This service makes the POSIX thread periodic.

6.92 Transition Kit 561

Parameters

thread	thread to arm a periodic timer for.
starttp	start time, expressed as an absolute value of the CLOCK_REALTIME clock.
periodtp	period, expressed as a time interval.

Returns

0 on success:

an error number if:

- ESRCH. thread is invalid.
- ETIMEDOUT, the start time has already passed.
- EPERM, the caller is not a Xenomai thread.
- EINVAL, thread does not refer to the current thread.

Note

Unlike the original Xenomai 2.x call, this emulation does not delay the caller waiting for the first periodic release point. In addition, thread must be equal to pthread self().

Deprecated This service is a non-portable extension of the Xenomai 2.x POSIX interface, not available with Xenomai 3.x. Instead, Cobalt-based applications should set up a periodic timer using the timer create(), timer settime() call pair, then wait for release points via sigwaitinfo(). Overruns can be detected by looking at the siginfo.si overrun field. Alternatively, applications may obtain a file descriptor referring to a Cobalt timer via the timerfd() call, and read() from it to wait for timeouts.

References timer create(), and timer settime().

```
6.92.2.9 pthread wait np()
int pthread_wait_np (
              unsigned long * overruns_r )
```

Wait for the next periodic release point (compatibility service)

Delay the current thread until the next periodic release point is reached. The periodic timer should have been previously started for thread by a call to pthread_make_periodic_np().

Parameters

overruns⊷	If non-NULL, <i>overruns_r</i> shall be a pointer to a memory location which will be written
_r	with the count of pending overruns. This value is written to only when
	<pre>pthread_wait_np() returns ETIMEDOUT or success. The memory location remains</pre>
	unmodified otherwise. If NULL, this count will not be returned.

Returns

Zero is returned upon success. If *overruns_r* is non-NULL, zero is written to the pointed memory location. Otherwise:

- EWOULDBLOCK is returned if pthread_make_periodic_np() was not called for the current thread.
- EINTR is returned if thread was interrupted by a signal before the next periodic release point was reached.
- ETIMEDOUT is returned if a timer overrun occurred, which indicates that a previous release point was missed by the calling thread. If *overruns_r* is non-NULL, the count of pending overruns is written to the pointed memory location.
- EPERM is returned if this service was called from an invalid context.

Note

If the current release point has already been reached at the time of the call, the current thread immediately returns from this service with no delay.

Deprecated This service is a non-portable extension of the Xenomai 2.x POSIX interface, not available with Xenomai 3.x. Instead, Cobalt-based applications should set up a periodic timer using the timer_create(), timer_settime() call pair, then wait for release points via sigwaitinfo(). Overruns can be detected by looking at the siginfo.si_overrun field. Alternatively, applications may obtain a file descriptor referring to a Cobalt timer via the timerfd() call, and read() from it to wait for timeouts.

```
6.92.2.10 rt_alarm_wait()

int rt_alarm_wait (

RT_ALARM * alarm )
```

Wait for the next alarm shot (compatibility service).

This service allows the current task to suspend execution until the specified alarm triggers. The priority of the current task is raised above all other tasks - except those also undergoing an alarm wait.

Returns

Zero is returned upon success, after the alarm timed out. Otherwise:

- -EINVAL is returned if alarm is not a valid alarm descriptor.
- · -EPERM is returned if this service was called from an invalid context.
- -EINTR is returned if rt_task_unblock() was called for the current task before the request is satisfied.
- -EIDRM is returned if *alarm* is deleted while the caller was sleeping on it. In such a case, *alarm* is no more valid upon return of this service.

Tags

xthread-only, switch-primary

Deprecated This is a compatibility service from the Transition Kit.

Chapter 7

Data Structure Documentation

7.1 a4l_channel Struct Reference

Structure describing some channel's characteristics.

Data Fields

- unsigned long flags
- unsigned long nb_bits

7.1.1 Detailed Description

Structure describing some channel's characteristics.

7.1.2 Field Documentation

```
7.1.2.1 flags
unsigned long a41_channel::flags
```

Channel flags to define the reference.

```
7.1.2.2 nb_bits

unsigned long a4l_channel::nb_bits

Channel resolution.

Referenced by a4l_get_chan().
```


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/analogy/channel_range.h

7.2 a4l_channels_desc Struct Reference

Structure describing a channels set.

Collaboration diagram for a4l_channels_desc:

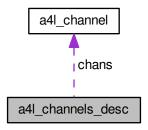

Data Fields

- unsigned long mode
- unsigned long length
- struct a4l_channel chans []

7.2.1 Detailed Description

Structure describing a channels set.

7.2.2 Field Documentation

7.2.2.1 chans

struct a4l_channel a4l_channels_desc::chans[]

Channels tab

Referenced by a4l_get_chan().

```
7.2.2.2 length
```

unsigned long a4l_channels_desc::length

Channels count

7.2.2.3 mode

unsigned long a4l_channels_desc::mode

Declaration mode (global or per channel)

Referenced by a4l_get_chan().

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/analogy/channel_range.h

7.3 a4l_cmd_desc Struct Reference

Structure describing the asynchronous instruction.

Data Fields

unsigned char idx subd

Subdevice to which the command will be applied.

unsigned long flags

Command flags.

unsigned int start_src

Start trigger type.

• unsigned int start_arg

Start trigger argument.

unsigned int scan begin src

Scan begin trigger type.

unsigned int scan_begin_arg

Scan begin trigger argument.

• unsigned int convert_src

Convert trigger type.

unsigned int convert_arg

Convert trigger argument.

unsigned int scan_end_src

Scan end trigger type.

unsigned int scan_end_arg

Scan end trigger argument.

• unsigned int stop_src

Stop trigger type.

unsigned int stop_arg

Stop trigger argument.

unsigned char nb_chan

Count of channels related with the command.

• unsigned int * chan_descs

Tab containing channels descriptors.

• unsigned int data_len

< cmd simulation valid stages (driver dependent)

sampl_t * data

Driver specific buffer pointer.

7.3.1 Detailed Description

Structure describing the asynchronous instruction.

See also

a4l_snd_command()

7.3.2 Field Documentation

```
7.3.2.1 data_len
```

unsigned int a4l_cmd_desc::data_len

< cmd simulation valid stages (driver dependent)

Driver specific buffer size

7.3.2.2 idx subd

unsigned char a4l_cmd_desc::idx_subd

Subdevice to which the command will be applied.

The documentation for this struct was generated from the following file:

include/rtdm/uapi/analogy.h

7.4 a4l_descriptor Struct Reference

Structure containing device-information useful to users.

Data Fields

• char board_name [A4L_NAMELEN]

Board name.

• char driver_name [A4L_NAMELEN]

Driver name.

• int nb_subd

Subdevices count.

int idx read subd

Input subdevice index.

int idx_write_subd

Output subdevice index.

int fd

File descriptor.

unsigned int magic

Opaque field.

• int sbsize

Data buffer size.

void * sbdata

Data buffer pointer.

7.4.1 Detailed Description

Structure containing device-information useful to users.

See also

a4l get desc()

7.4.2 Field Documentation

```
7.4.2.1 board_name
```

char a4l_descriptor::board_name[A4L_NAMELEN]

Board name.

7.4.2.2 driver_name

char a41_descriptor::driver_name[A4L_NAMELEN]

Driver name.

7.4.2.3 fd

int a4l_descriptor::fd

File descriptor.

Referenced by a4l_close(), a4l_fill_desc(), a4l_get_bufsize(), a4l_mark_bufrw(), a4l_mmap(), a4l_ \leftrightarrow open(), a4l_poll(), a4l_set_bufsize(), a4l_snd_cancel(), a4l_snd_command(), a4l_snd_insn(), and a4l \leftarrow _snd_insnlist().

7.4.2.4 idx_read_subd

int a4l_descriptor::idx_read_subd

Input subdevice index.

7.4.2.5 idx_write_subd

int a4l_descriptor::idx_write_subd

Output subdevice index.

7.4.2.6 magic

unsigned int a41_descriptor::magic

Opaque field.

Referenced by a4l_fill_desc(), a4l_find_range(), a4l_get_chinfo(), a4l_get_rnginfo(), a4l_get_subdinfo(), a4l_sys_desc().

7.4.2.7 nb_subd

int a4l_descriptor::nb_subd

Subdevices count.

7.4.2.8 sbdata

void* a4l_descriptor::sbdata

Data buffer pointer.

7.4.2.9 sbsize

int a4l_descriptor::sbsize

Data buffer size.

The documentation for this struct was generated from the following file:

• include/rtdm/analogy.h

7.5 a4l_driver Struct Reference

Structure containing driver declaration data.

struct list_head list

List stuff.

struct module * owner

Pointer to module containing the code.

unsigned int flags

Type / status driver's flags.

• char * board name

Board name.

char * driver_name

driver name

int privdata_size

Size of the driver's private data.

int(* attach)(struct a4l_device *, struct a4l_link_desc *)

Attach procedure.

int(* detach)(struct a4l_device *)

Detach procedure.

7.5.1 Detailed Description

Structure containing driver declaration data.

See also

rt_task_inquire()

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/analogy/driver.h

7.6 a4l instruction Struct Reference

Structure describing the synchronous instruction.

Data Fields

unsigned int type

Instruction type.

unsigned int idx_subd

Subdevice to which the instruction will be applied.

• unsigned int chan_desc

Channel descriptor.

unsigned int data_size

Size of the intruction data.

• void * data

Instruction data.

7.6.1 Detailed Description

Structure describing the synchronous instruction.

See also

a4l_snd_insn()

7.6.2 Field Documentation

7.6.2.1 idx_subd

unsigned int a4l_instruction::idx_subd

Subdevice to which the instruction will be applied.


The documentation for this struct was generated from the following file:

• include/rtdm/uapi/analogy.h

7.7 a4l_instruction_list Struct Reference

Structure describing the list of synchronous instructions.

Collaboration diagram for a4l_instruction_list:

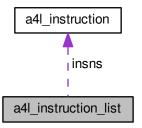

Data Fields

 unsigned int count Instructions count.

• a4l_insn_t * insns

Tab containing the instructions pointers.

7.7.1 Detailed Description

Structure describing the list of synchronous instructions.

See also

```
a4l_snd_insnlist()
```

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/analogy.h

7.8 a4l_range Struct Reference

Structure describing a (unique) range.

Data Fields

- long min
- long max
- unsigned long flags

7.8.1 Detailed Description

Structure describing a (unique) range.

7.8.2 Field Documentation

```
7.8.2.1 flags
```

unsigned long a4l_range::flags

Range flags (unit, etc.)

7.8.2.2 max

long a4l_range::max

Maximal falue

7.8.2.3 min

long a4l_range::min

Minimal value


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/analogy/channel_range.h

7.9 a4l_subdevice Struct Reference

Structure describing the subdevice.

Collaboration diagram for a4l_subdevice:

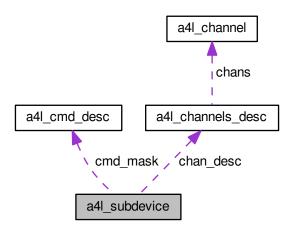

Data Fields

- struct list_head list
 - List stuff.
- struct a4l_device * dev

Containing device.

- unsigned int idx
 - Subdevice index.
- struct a4l_buffer * buf
 - Linked buffer.
- unsigned long status
 - Subdevice's status.
- unsigned long flags

Type flags.

• struct a4l_channels_desc * chan_desc

Tab of channels descriptors pointers.

struct a4l_rngdesc * rng_desc

Tab of ranges descriptors pointers.

struct a4l_cmd_desc * cmd_mask

Command capabilities mask.

int(* insn_read)(struct a4l_subdevice *, struct a4l_kernel_instruction *)
 Callback for the instruction "read".

int(* insn_write)(struct a4l_subdevice *, struct a4l_kernel_instruction *)
 Callback for the instruction "write".

int(* insn_bits)(struct a4l_subdevice *, struct a4l_kernel_instruction *)
 Callback for the instruction "bits".

• int(* insn_config)(struct a4l_subdevice *, struct a4l_kernel_instruction *)

Callback for the configuration instruction.

int(* do_cmd)(struct a4l_subdevice *, struct a4l_cmd_desc *)

Callback for command handling.

int(* do_cmdtest)(struct a4l_subdevice *, struct a4l_cmd_desc *)

Callback for command checking.

void(* cancel)(struct a4l_subdevice *)

Callback for asynchronous transfer cancellation.

void(* munge)(struct a4l_subdevice *, void *, unsigned long)
 Callback for munge operation.

int(* trigger)(struct a4l_subdevice *, lsampl_t)
 Callback for trigger operation.

char priv [0]

Private data.

7.9.1 Detailed Description

Structure describing the subdevice.

```
See also a4l_add_subd()
```

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/analogy/subdevice.h

7.10 atomic t Struct Reference

Copyright © 2011 Gilles Chanteperdrix gilles.chanteperdrix@xenomai.org.

7.10.1 Detailed Description

Copyright © 2011 Gilles Chanteperdrix gilles.chanteperdrix@xenomai.org.

Copyright © 2013 Philippe Gerum rpm@xenomai.org.

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.


The documentation for this struct was generated from the following file:

• include/boilerplate/atomic.h

7.11 can bittime Struct Reference

Custom CAN bit-time definition.

Collaboration diagram for can_bittime:

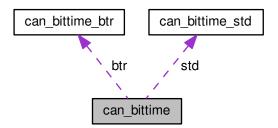

Data Fields

- can_bittime_type_t type
 Type of bit-time definition.
- struct can_bittime_std std
 Standard bit-time.
- struct can_bittime_btr btr

Hardware-spcific BTR bit-time.

7.11.1 Detailed Description

Custom CAN bit-time definition.

Examples:

rtcanconfig.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

7.12 can_bittime_btr Struct Reference

Hardware-specific BTR bit-times.

Data Fields

uint8_t btr0

Bus timing register 0.

uint8_t btr1

Bus timing register 1.

7.12.1 Detailed Description

Hardware-specific BTR bit-times.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

7.13 can_bittime_std Struct Reference

Standard bit-time parameters according to Bosch.

Data Fields

uint32_t brp

Baud rate prescaler.

uint8_t prop_seg

from 1 to 8

uint8_t phase_seg1

from 1 to 8

uint8_t phase_seg2

from 1 to 8

uint8_t sjw:7

from 1 to 4

uint8_t sam:1

1 - enable triple sampling

7.13.1 Detailed Description

Standard bit-time parameters according to Bosch.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

7.14 can filter Struct Reference

Filter for reception of CAN messages.

Data Fields

• uint32 t can id

CAN ID which must match with incoming IDs after passing the mask.

uint32_t can_mask

Mask which is applied to incoming IDs.

7.14.1 Detailed Description

Filter for reception of CAN messages.

This filter works as follows: A received CAN ID is AND'ed bitwise with can_mask and then compared to can_id. This also includes the CAN_EFF_FLAG and CAN_RTR_FLAG of CAN_xxx_FLAG. If this comparison is true, the message will be received by the socket. The logic can be inverted with the can_id flag CAN_INV_FILTER:

```
if (can_id & CAN_INV_FILTER) {
   if ((received_can_id & can_mask) != (can_id & ~CAN_INV_FILTER))
        accept-message;
} else {
   if ((received_can_id & can_mask) == can_id)
        accept-message;
}
```

Multiple filters can be arranged in a filter list and set with Sockopts. If one of these filters matches a CAN ID upon reception of a CAN frame, this frame is accepted.

Examples:

can-rtt.c, and rtcanrecv.c.

7.14.2 Field Documentation

```
7.14.2.1 can_id
```

```
uint32_t can_filter::can_id
```

CAN ID which must match with incoming IDs after passing the mask.

The filter logic can be inverted with the flag CAN_INV_FILTER.

Examples:

can-rtt.c, and rtcanrecv.c.

```
7.14.2.2 can_mask
```

```
uint32_t can_filter::can_mask
```

Mask which is applied to incoming IDs.

See CAN ID masks if exactly one CAN ID should come through.

Examples:

can-rtt.c, and rtcanrecv.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

7.15 can_frame Struct Reference

Raw CAN frame.

Public Member Functions

uint8_t data [8] __attribute__ ((aligned(8)))
 Payload data bytes.

Data Fields

can_id_t can_id

CAN ID of the frame.

uint8_t can_dlc

Size of the payload in bytes.

7.15.1 Detailed Description

Raw CAN frame.

Central structure for receiving and sending CAN frames.

Examples:

can-rtt.c, rtcanrecv.c, and rtcansend.c.

7.15.2 Field Documentation

7.15.2.1 can id

can_id_t can_frame::can_id

CAN ID of the frame.

See CAN ID flags for special bits.

Examples:

can-rtt.c, and rtcansend.c.


The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

7.16 can_ifreq Struct Reference

CAN interface request descriptor.

Collaboration diagram for can_ifreq:

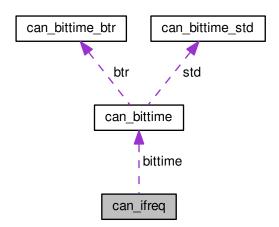

7.16.1 Detailed Description

CAN interface request descriptor.

Parameter block for submitting CAN control requests.

Examples:

can-rtt.c, rtcanconfig.c, rtcanrecv.c, and rtcansend.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

7.17 macb dma desc Struct Reference

Hardware DMA descriptor.

Data Fields

u32 addr

DMA address of data buffer.

u32 ctrl

Control and status bits.

7.17.1 Detailed Description

Hardware DMA descriptor.

The documentation for this struct was generated from the following file:

• kernel/drivers/net/drivers/rt_macb.h

7.18 macb_tx_skb Struct Reference

Data about an skb which is being transmitted.

Data Fields

struct rtskb * skb

skb currently being transmitted

dma_addr_t mapping

DMA address of the skb's data buffer.

7.18.1 Detailed Description

Data about an skb which is being transmitted.

The documentation for this struct was generated from the following file:

kernel/drivers/net/drivers/rt_macb.h

7.19 RT ALARM INFO Struct Reference

Alarm status descriptor.

Data Fields

• unsigned long expiries

Number of past expiries.

• char name [XNOBJECT_NAME_LEN]

Name of alarm object.

int active

Active flag.

7.19.1 Detailed Description

Alarm status descriptor.

This structure reports various static and runtime information about a real-time alarm, returned by a call to rt_alarm_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/alarm.h

7.20 RT_BUFFER_INFO Struct Reference

Buffer status descriptor.

Data Fields

int iwaiters

Number of tasks waiting on the read side of the buffer for input data.

int owaiters

Number of tasks waiting on the write side of the buffer for sending out data.

size_t totalmem

Overall size of buffer (in bytes).

size_t availmem

Amount of memory currently available for holding more data.

• char name [XNOBJECT_NAME_LEN]

Name of the buffer.

7.20.1 Detailed Description

Buffer status descriptor.

This structure reports various static and runtime information about a real-time buffer, returned by a call to rt_buffer_inquire().

The documentation for this struct was generated from the following file:

include/alchemy/buffer.h

7.21 RT_COND_INFO Struct Reference

Condition variable status descriptor.

Data Fields

• char name [XNOBJECT_NAME_LEN]

Name of condition variable.

7.21.1 Detailed Description

Condition variable status descriptor.

This structure reports various static and runtime information about a condition variable, returned by a call to rt_cond_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/cond.h

7.22 RT EVENT INFO Struct Reference

Event status descriptor.

Data Fields

· unsigned int value

Current value of the event flag group.

• int nwaiters

Number of tasks currently waiting for events.

• char name [XNOBJECT_NAME_LEN]

Name of event flag group.

7.22.1 Detailed Description

Event status descriptor.

This structure reports various static and runtime information about an event flag group, returned by a call to rt_event_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/event.h

7.23 RT HEAP INFO Struct Reference

Heap status descriptor.

Data Fields

int nwaiters

Number of tasks waiting for available memory in rt_heap_alloc().

int mode

Creation mode flags as given to rt_heap_create().

size_t heapsize

Size of heap (in bytes) as given to rt heap create().

• size_t usablemem

Maximum amount of memory available from the heap.

size_t usedmem

Amount of heap memory currently consumed.

• char name [XNOBJECT_NAME_LEN]

Name of heap.

7.23.1 Detailed Description

Heap status descriptor.

This structure reports various static and runtime information about a real-time heap, returned by a call to rt heap inquire().

7.23.2 Field Documentation

7.23.2.1 heapsize

size_t RT_HEAP_INFO::heapsize

Size of heap (in bytes) as given to rt_heap_create().

The maximum amount of memory available from this heap may be larger, due to internal padding.

7.23.2.2 usablemem

```
size_t RT_HEAP_INFO::usablemem
```

Maximum amount of memory available from the heap.

This value accounts for the overhead of internal data structures required to maintain the heap.

7.23.2.3 usedmem

```
size_t RT_HEAP_INFO::usedmem
```

Amount of heap memory currently consumed.

info.usablemem - info.usedmem computes the current amount of free memory in the relevant heap.

The documentation for this struct was generated from the following file:

• include/alchemy/heap.h

7.24 RT_MUTEX_INFO Struct Reference

Mutex status descriptor.

Data Fields

• RT_TASK owner

Current mutex owner, or NO_ALCHEMY_TASK if unlocked.

• char name [XNOBJECT_NAME_LEN]

Name of mutex.

7.24.1 Detailed Description

Mutex status descriptor.

This structure reports various static and runtime information about a mutex, returned by a call to rt_\(\sigma\) mutex_inquire().

7.24.2 Field Documentation

7.24.2.1 owner

RT_TASK RT_MUTEX_INFO::owner

Current mutex owner, or NO_ALCHEMY_TASK if unlocked.

This information is in essence transient, and may not be valid anymore once used by the caller.

The documentation for this struct was generated from the following file:

• include/alchemy/mutex.h

7.25 RT_QUEUE_INFO Struct Reference

Queue status descriptor.

Data Fields

int nwaiters

Number of tasks currently waiting on the queue for messages.

int nmessages

Number of messages pending in queue.

int mode

Queue mode bits, as given to rt_queue_create().

size_t qlimit

Maximum number of messages in queue, zero if unlimited.

size_t poolsize

Size of memory pool for holding message buffers (in bytes).

size_t usedmem

Amount of memory consumed from the buffer pool.

char name [XNOBJECT_NAME_LEN]

Name of message queue.

7.25.1 Detailed Description

Queue status descriptor.

This structure reports various static and runtime information about a real-time queue, returned by a call to rt_queue_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/queue.h

7.26 RT_SEM_INFO Struct Reference

Semaphore status descriptor.

unsigned long count

Current semaphore value.

int nwaiters

Number of tasks waiting on the semaphore.

• char name [XNOBJECT_NAME_LEN]

Name of semaphore.

7.26.1 Detailed Description

Semaphore status descriptor.

This structure reports various static and runtime information about a semaphore, returned by a call to rt_sem_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/sem.h

7.27 RT_TASK_INFO Struct Reference

Task status descriptor.

Data Fields

• int prio

Task priority.

struct threadobj_stat stat

Task status.

• char name [XNOBJECT_NAME_LEN]

Name of task.

pid_t pid

Host pid.

7.27.1 Detailed Description

Task status descriptor.

This structure reports various static and runtime information about a real-time task, returned by a call to rt_task_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/task.h

7.28 rt_timer_info Struct Reference

Timer status descriptor.

Data Fields

RTIME period

Clock resolution in nanoseconds.

• RTIME date

Current monotonic date expressed in clock ticks.

7.28.1 Detailed Description

Timer status descriptor.

This structure reports information about the Alchemy clock, returned by a call to rt_timer_inquire().

7.28.2 Field Documentation

7.28.2.1 date

RTIME rt_timer_info::date

Current monotonic date expressed in clock ticks.

The duration of a tick depends on the Alchemy clock resolution for the process (see –alchemy-clock-resolution option, defaults to 1 nanosecond).


The documentation for this struct was generated from the following file:

• include/alchemy/timer.h

7.29 rtdm dev context Struct Reference

Device context.

Collaboration diagram for rtdm_dev_context:

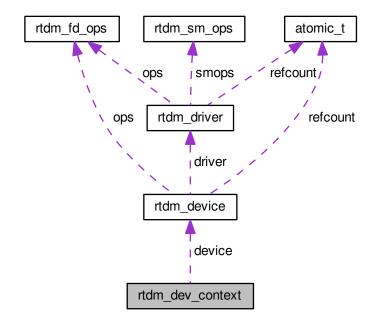

Data Fields

- struct rtdm_device * device
 - Set of active device operation handlers.
- char dev_private [0]

Begin of driver defined context data structure.

7.29.1 Detailed Description

Device context.

A device context structure is associated with every open device instance. RTDM takes care of its creation and destruction and passes it to the operation handlers when being invoked.

Drivers can attach arbitrary data immediately after the official structure. The size of this data is provided via rtdm_driver.context_size during device registration.

7.29.2 Field Documentation

7.29.2.1 device

```
struct rtdm_device* rtdm_dev_context::device
```

Set of active device operation handlers.

Reference to owning device


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/driver.h

7.30 rtdm_device Struct Reference

RTDM device.

Collaboration diagram for rtdm_device:

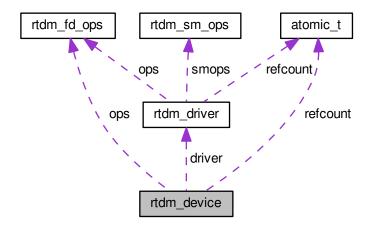

Data Fields

• struct rtdm_driver * driver

Device driver.

void * device data

Driver definable device data.

• const char * label

Device label template for composing the device name.

• int minor

Minor number of the device.

struct {};

Reserved area.

7.30.1 Detailed Description

RTDM device.

This descriptor describes a RTDM device instance. The structure holds runtime data, therefore it must reside in writable memory.

7.30.2 Field Documentation

```
7.30.2.1 "@11
```

struct { ... }

Reserved area.

7.30.2.2 driver

struct rtdm_driver* rtdm_device::driver

Device driver.

Referenced by rtdm_dev_unregister(), and udd_get_device().

7.30.2.3 label

const char* rtdm_device::label

Device label template for composing the device name.

A limited printf-like format string is assumed, with a provision for replacing the first d/i placeholder found in the string by the device minor number. It is up to the driver to actually mention this placeholder or not, depending on the naming convention for its devices. For named devices, the corresponding device node will automatically appear in the /dev/rtdm hierarchy with hotplug-enabled device filesystems (DEVTMP FS).

7.30.2.4 minor

int rtdm_device::minor

Minor number of the device.

If RTDM_FIXED_MINOR is present in the driver flags, the value stored in this field is used verbatim by rtdm_dev_register(). Otherwise, the RTDM core automatically assigns minor numbers to all devices managed by the driver referred to by driver, in order of registration, storing the resulting values into this field.

Device nodes created for named devices in the Linux /dev hierarchy are assigned this minor number.

The minor number of the current device handling an I/O request can be retreived by a call to rtdm_fd_← minor().

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/driver.h

7.31 rtdm device info Struct Reference

Device information.

Data Fields

int device_flags

Device flags, see Device Flags for details.

int device_class

Device class ID, see RTDM_CLASS_xxx.

• int device sub class

Device sub-class, either RTDM_SUBCLASS_GENERIC or a RTDM_SUBCLASS_xxx definition of the related Device Profile.

• int profile_version

Supported device profile version.

7.31.1 Detailed Description

Device information.


The documentation for this struct was generated from the following file:

• include/rtdm/uapi/rtdm.h

7.32 rtdm_driver Struct Reference

RTDM driver.

Collaboration diagram for rtdm_driver:

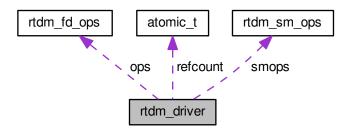

Data Fields

• struct rtdm_profile_info profile_info

Class profile information.

• int device_flags

Device flags, see Device Flags for details.

• size_t context_size

Size of the private memory area the core should automatically allocate for each open file descriptor, which is usable for storing the context data associated to each connection.

• int protocol_family

Protocol device identification: protocol family (PF_xxx)

int socket_type

Protocol device identification: socket type (SOCK_xxx)

struct rtdm_fd_ops ops

I/O operation handlers.

• struct rtdm_sm_ops smops

State management handlers.

int device_count

Count of devices this driver manages.

int base_minor

Base minor for named devices.

```
struct {
};
```

Reserved area.

7.32.1 Detailed Description

RTDM driver.

This descriptor describes a RTDM device driver. The structure holds runtime data, therefore it must reside in writable memory.

7.32.2 Field Documentation

7.32.2.1 base minor

int rtdm_driver::base_minor

Base minor for named devices.

7.32.2.2 context_size

size_t rtdm_driver::context_size

Size of the private memory area the core should automatically allocate for each open file descriptor, which is usable for storing the context data associated to each connection.

The allocated memory is zero-initialized. The start of this area can be retrieved by a call to rtdm_fd_to private().

7.32.2.3 device count

int rtdm_driver::device_count

Count of devices this driver manages.

This value is used to allocate a chrdev region for named devices.

7.32.2.4 device_flags

int rtdm_driver::device_flags

Device flags, see Device Flags for details.

```
7.32.2.5 profile info
```

struct rtdm_profile_info rtdm_driver::profile_info

Class profile information.

The RTDM_PROFILE_INFO() macro must be used for filling up this field.

Referenced by rtdm_drv_set_sysclass(), and udd_get_device().

The documentation for this struct was generated from the following file:

include/cobalt/kernel/rtdm/driver.h

7.33 rtdm fd ops Struct Reference

RTDM file operation descriptor.

Data Fields

int(* open)(struct rtdm_fd *fd, int oflags)

See rtdm_open_handler().

int(* socket)(struct rtdm_fd *fd, int protocol)

See rtdm socket handler().

void(* close)(struct rtdm_fd *fd)

See rtdm close handler().

- int(* ioctl_rt)(struct rtdm_fd *fd, unsigned int request, void __user *arg)
 See rtdm_ioctl_handler().
- int(* ioctl_nrt)(struct rtdm_fd *fd, unsigned int request, void __user *arg)
- See rtdm_ioctl_handler().
 ssize_t(* read_rt)(struct rtdm_fd *fd, void __user *buf, size_t size)
- See rtdm_read_handler().
- ssize_t(* read_nrt)(struct rtdm_fd *fd, void __user *buf, size_t size)

 See rtdm_read_handler().
- ssize_t(* write_rt)(struct rtdm_fd *fd, const void __user *buf, size_t size)

 See rtdm write handler().
- ssize_t(* write_nrt)(struct rtdm_fd *fd, const void __user *buf, size_t size)
 See rtdm write handler().
- ssize_t(* recvmsg_rt)(struct rtdm_fd *fd, struct user_msghdr *msg, int flags)

 See rtdm_recvmsg_handler().
- ssize_t(* recvmsg_nrt)(struct rtdm_fd *fd, struct user_msghdr *msg, int flags)

 See rtdm recvmsg handler().
- ssize_t(* sendmsg_rt)(struct rtdm_fd *fd, const struct user_msghdr *msg, int flags)

 See rtdm_sendmsg_handler().
- ssize_t(* sendmsg_nrt)(struct rtdm_fd *fd, const struct user_msghdr *msg, int flags)
 See rtdm_sendmsg_handler().
- int(* select)(struct rtdm_fd *fd, struct xnselector *selector, unsigned int type, unsigned int index)

 See rtdm_select_handler().
- int(* mmap)(struct rtdm_fd *fd, struct vm_area_struct *vma)

See rtdm_mmap_handler().

unsigned long(* get_unmapped_area)(struct rtdm_fd *fd, unsigned long len, unsigned long pgoff, unsigned long flags)

See rtdm_get_unmapped_area_handler().

7.33.1 Detailed Description

RTDM file operation descriptor.

This structure describes the operations available with a RTDM device, defining handlers for submitting I/O requests. Those handlers are implemented by RTDM device drivers.

7.33.2 Field Documentation

```
7.33.2.1 close
void(* rtdm_fd_ops::close) (struct rtdm_fd *fd)
See rtdm_close_handler().
7.33.2.2 get_unmapped_area
unsigned long(* rtdm_fd_ops::get_unmapped_area) (struct rtdm_fd *fd, unsigned long len, unsigned long pgoff,
unsigned long flags)
See rtdm_get_unmapped_area_handler().
7.33.2.3 ioctl nrt
int(* rtdm_fd_ops::ioctl_nrt) (struct rtdm_fd *fd, unsigned int request, void __user *arg)
See rtdm_ioctl_handler().
7.33.2.4 ioctl_rt
int(* rtdm_fd_ops::ioctl_rt) (struct rtdm_fd *fd, unsigned int request, void __user *arg)
See rtdm_ioctl_handler().
```

```
7.33.2.5 mmap
int(* rtdm_fd_ops::mmap) (struct rtdm_fd *fd, struct vm_area_struct *vma)
See rtdm_mmap_handler().
7.33.2.6 open
int(* rtdm_fd_ops::open) (struct rtdm_fd *fd, int oflags)
See rtdm_open_handler().
7.33.2.7 read_nrt
ssize_t(* rtdm_fd_ops::read_nrt) (struct rtdm_fd *fd, void __user *buf, size_t size)
See rtdm read handler().
7.33.2.8 read rt
ssize_t(* rtdm_fd_ops::read_rt) (struct rtdm_fd *fd, void __user *buf, size_t size)
See rtdm_read_handler().
7.33.2.9 recvmsg_nrt
ssize_t(* rtdm_fd_ops::recvmsg_nrt) (struct rtdm_fd *fd, struct user_msghdr *msg, int flags)
See rtdm_recvmsg_handler().
7.33.2.10 recvmsg_rt
ssize_t(* rtdm_fd_ops::recvmsg_rt) (struct rtdm_fd *fd, struct user_msghdr *msg, int flags)
See rtdm_recvmsg_handler().
```

```
7.33.2.11 select
int(* rtdm_fd_ops::select) (struct rtdm_fd *fd, struct xnselector *selector, unsigned int type, unsigned int
index)
See rtdm_select_handler().
7.33.2.12 sendmsg nrt
ssize_t(* rtdm_fd_ops::sendmsg_nrt) (struct rtdm_fd *fd, const struct user_msghdr *msg, int flags)
See rtdm_sendmsg_handler().
7.33.2.13 sendmsg_rt
ssize\_t(* \ rtdm\_fd\_ops::sendmsg\_rt) \ (struct \ rtdm\_fd \ *fd, \ const \ struct \ user\_msghdr \ *msg, \ int \ flags)
See rtdm_sendmsg_handler().
7.33.2.14 socket
int(* rtdm_fd_ops::socket) (struct rtdm_fd *fd, int protocol)
See rtdm_socket_handler().
7.33.2.15 write_nrt
ssize_t(* rtdm_fd_ops::write_nrt) (struct rtdm_fd *fd, const void __user *buf, size_t size)
See rtdm_write_handler().
7.33.2.16 write rt
ssize_t(* rtdm_fd_ops::write_rt) (struct rtdm_fd *fd, const void __user *buf, size_t size)
See rtdm_write_handler().
The documentation for this struct was generated from the following file:
```

• include/cobalt/kernel/rtdm/fd.h

7.34 rtdm sm ops Struct Reference

RTDM state management handlers.

Data Fields

- int(* start)(struct rtdm_driver *drv)
 Handler called upon transition to COBALT STATE WARMUP.
- int(* stop)(struct rtdm_driver *drv)
 Handler called upon transition to COBALT_STATE_TEARDOWN.

7.34.1 Detailed Description

RTDM state management handlers.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/driver.h

7.35 rtdm spi config Struct Reference

7.35.1 Detailed Description

Note

Copyright (C) 2016 Philippe Gerum rpm@xenomai.org

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

The documentation for this struct was generated from the following file:

include/rtdm/uapi/spi.h

7.36 rtipc_port_label Struct Reference

Port label information structure.

• char label [XNOBJECT_NAME_LEN]

Port label string, null-terminated.

7.36.1 Detailed Description

Port label information structure.

Examples:

bufp-label.c, iddp-label.c, and xddp-label.c.

7.36.2 Field Documentation

7.36.2.1 label

char rtipc_port_label::label[XNOBJECT_NAME_LEN]

Port label string, null-terminated.

Examples:

bufp-label.c, iddp-label.c, and xddp-label.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/ipc.h

7.37 rtser_config Struct Reference

Serial device configuration.

int config_mask

mask specifying valid fields, see RTSER SET xxx

int baud_rate

baud rate, default RTSER_DEF_BAUD

int parity

number of parity bits, see RTSER_xxx_PARITY

int data_bits

number of data bits, see RTSER xxx BITS

int stop_bits

number of stop bits, see RTSER_xxx_STOPB

int handshake

handshake mechanisms, see RTSER_xxx_HAND

int fifo_depth

reception FIFO interrupt threshold, see RTSER FIFO xxx

nanosecs_rel_t rx_timeout

reception timeout, see RTSER_TIMEOUT_xxx for special values

nanosecs_rel_t tx_timeout

transmission timeout, see RTSER_TIMEOUT_xxx for special values

nanosecs_rel_t event_timeout

event timeout, see RTSER_TIMEOUT_xxx for special values

int timestamp_history

enable timestamp history, see RTSER_xxx_TIMESTAMP_HISTORY

int event_mask

event mask to be used with RTSER_RTIOC_WAIT_EVENT, see RTSER_EVENT_xxx

• int rs485

enable RS485 mode, see RTSER RS485 xxx

7.37.1 Detailed Description

Serial device configuration.

Examples:

cross-link.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/serial.h

7.38 rtser event Struct Reference

Additional information about serial device events.

int events

signalled events, see RTSER_EVENT_xxx

int rx_pending

number of pending input characters

nanosecs_abs_t last_timestamp

last interrupt timestamp

nanosecs_abs_t rxpend_timestamp

reception timestamp of oldest character in input queue

7.38.1 Detailed Description

Additional information about serial device events.

Examples:

cross-link.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/serial.h

7.39 rtser status Struct Reference

Serial device status.

Data Fields

• int line_status

line status register, see RTSER_LSR_xxx

int modem_status

modem status register, see RTSER_MSR_xxx

7.39.1 Detailed Description

Serial device status.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/serial.h

7.40 sockaddr_can Struct Reference

Socket address structure for the CAN address family.

- sa_family_t can_family
 CAN address family, must be AF_CAN.
- int can_ifindex

Interface index of CAN controller.

7.40.1 Detailed Description

Socket address structure for the CAN address family.

Examples:

can-rtt.c, rtcanrecv.c, and rtcansend.c.

7.40.2 Field Documentation

```
7.40.2.1 can_ifindex
```

int sockaddr_can::can_ifindex

Interface index of CAN controller.

See SIOCGIFINDEX.

Examples:

can-rtt.c, rtcanrecv.c, and rtcansend.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

7.41 sockaddr_ipc Struct Reference

Socket address structure for the RTIPC address family.

Data Fields

- sa_family_t sipc_family
 RTIPC address family, must be AF_RTIPC.
- rtipc_port_t sipc_port

Port number.

7.41.1 Detailed Description

Socket address structure for the RTIPC address family.

Examples:

bufp-label.c, bufp-readwrite.c, iddp-label.c, iddp-sendrecv.c, xddp-echo.c, xddp-label.c, and xddp-stream.c.

7.41.2 Field Documentation

7.41.2.1 sipc port

rtipc_port_t sockaddr_ipc::sipc_port

Port number.

Examples:


bufp-label.c, bufp-readwrite.c, iddp-label.c, iddp-sendrecv.c, xddp-echo.c, xddp-label.c, and xddp-stream.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/ipc.h

7.42 udd device Struct Reference

Collaboration diagram for udd_device:

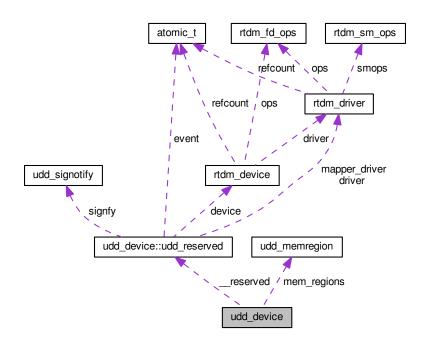

Data Structures

struct udd_reserved

Reserved to the UDD core.

Data Fields

• const char * device_name

Name of the device managed by the mini-driver, appears automatically in the /dev/rtdm namespace upon creation.

int device flags

Additional device flags (e.g.

int device_subclass

Subclass code of the device managed by the mini-driver (see RTDM_SUBCLASS_xxx definition in the Device Profiles).

int irq

IRQ number.

struct udd_memregion mem_regions [UDD_NR_MAPS]

Array of memory regions defined by the device.

int(* open)(struct rtdm_fd *fd, int oflags)

Ancillary open() handler, optional.

void(* close)(struct rtdm_fd *fd)

Ancillary close() handler, optional.

• int(* ioctl)(struct rtdm fd *fd, unsigned int request, void *arg)

Ancillary ioctl() handler, optional.

• int(* mmap)(struct rtdm_fd *fd, struct vm_area_struct *vma)

Ancillary mmap() handler for the mapper device, optional.

• int(* interrupt)(struct udd_device *udd)

7.42.1 Detailed Description

UDD device descriptor.

This descriptor defines the characteristics of a UDD-based mini-driver when registering via a call to udd_register_device().

7.42.2 Field Documentation

```
7.42.2.1 close
```

void(* udd_device::close) (struct rtdm_fd *fd)

Ancillary close() handler, optional.

See rtdm close handler().

Note

This handler is called from secondary mode only.

7.42.2.2 device_flags

int udd_device::device_flags

Additional device flags (e.g.

RTDM EXCLUSIVE) RTDM NAMED DEVICE may be omitted).

Referenced by udd_register_device().

7.42.2.3 device subclass

int udd_device::device_subclass

Subclass code of the device managed by the mini-driver (see RTDM_SUBCLASS_xxx definition in the Device Profiles).

The main class code is pre-set to RTDM_CLASS_UDD.

7.42.2.4 interrupt

int(* udd_device::interrupt) (struct udd_device *udd)

Ancillary handler for receiving interrupts. This handler must be provided if the mini-driver hands over I ← RQ handling to the UDD core, by setting the *irq* field to a valid value, different from UDD_IRQ_CUSTOM and UDD_IRQ_NONE.

The ->interrupt() handler shall return one of the following status codes:

- RTDM_IRQ_HANDLED, if the mini-driver successfully handled the IRQ. This flag can be combined with RTDM_IRQ_DISABLE to prevent the Cobalt kernel from re-enabling the interrupt line upon return, otherwise it is re-enabled automatically.
- RTDM_IRQ_NONE, if the interrupt does not match any IRQ the mini-driver can handle.

Once the ->interrupt() handler has returned, the UDD core notifies user-space Cobalt threads waiting for IRQ events (if any).

Note

This handler is called from primary mode only.

Referenced by udd register device().

7.42.2.5 ioctl

int(* udd_device::ioctl) (struct rtdm_fd *fd, unsigned int request, void *arg)

Ancillary ioctl() handler, optional.

See rtdm_ioctl_handler().

If this routine returns -ENOSYS, the default action implemented by the UDD core for the corresponding request will be applied, as if no ioctl handler had been defined.

Note

This handler is called from primary mode only.

7.42.2.6 irq

int udd_device::irq

IRQ number.

If valid, the UDD core manages the corresponding interrupt line, installing a base handler. Otherwise, a special value can be passed for declaring unmanaged IRQs.

Referenced by udd_disable_irq(), udd_enable_irq(), udd_register_device(), and udd_unregister_device().

7.42.2.7 mem_regions

struct udd_memregion udd_device::mem_regions[UDD_NR_MAPS]

Array of memory regions defined by the device.

The array can be sparse, with some entries bearing the UDD_MEM_NONE type interleaved with valid ones. See the discussion about UDD memory regions.

7.42.2.8 mmap

int(* udd_device::mmap) (struct rtdm_fd *fd, struct vm_area_struct *vma)

Ancillary mmap() handler for the mapper device, optional.

See rtdm_mmap_handler(). The mapper device operates on a valid region defined in the mem_regions[] array. A pointer to the region can be obtained by a call to udd_get_region().

If this handler is NULL, the UDD core establishes the mapping automatically, depending on the memory type defined for the region.

Note

This handler is called from secondary mode only.

```
7.42.2.9 open
```

```
int(* udd_device::open) (struct rtdm_fd *fd, int oflags)
```

Ancillary open() handler, optional.

See rtdm_open_handler().

Note

This handler is called from secondary mode only.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/udd.h

7.43 udd_memregion Struct Reference

Data Fields

- const char * name
 - Name of the region (informational but required)
- unsigned long addr
 - Start address of the region.
- size_t len
 - Length (in bytes) of the region.
- int type

Type of the region.

7.43.1 Detailed Description

UDD memory region descriptor.

This descriptor defines the characteristics of a memory region declared to the UDD core by the minidriver. All valid regions should be declared in the udd_device.mem_regions[] array, invalid/unassigned ones should bear the UDD_MEM_NONE type.

The UDD core exposes each region via the mmap(2) interface to the application. To this end, a companion mapper device is created automatically when registering the mini-driver.

The mapper device creates special files in the RTDM namespace for reaching the individual regions, which the application can open then map to its address space via the mmap(2) system call.

For instance, declaring a region of physical memory at index #2 of the memory region array could be done as follows:

```
static struct udd_device udd;

static int foocard_pci_probe(struct pci_dev *dev, const struct pci_device_id *id)
{
    udd.device_name = "foocard";
    ...
    udd.mem_regions[2].name = "ADC";
    udd.mem_regions[2].addr = pci_resource_start(dev, 1);
    udd.mem_regions[2].len = pci_resource_len(dev, 1);
    udd.mem_regions[2].type = UDD_MEM_PHYS;
    ...
    return udd_register_device(&udd);
}
```

This will make such region accessible via the mapper device using the following sequence of code, via the default ->mmap() handler from the UDD core:

```
int fd, fdm;
void *p;

fd = open("/dev/foocard", O_RDWR);
fdm = open("/dev/foocard,mapper@2", O_RDWR);
p = mmap(NULL, 4096, PROT_READ|PROT_WRITE, 0, fdm, 0);
```

Note

No mapper device is created unless a valid region has been declared in the udd_device.mem_ regions[] array.

7.43.2 Field Documentation

```
7.43.2.1 addr
```

unsigned long udd_memregion::addr

Start address of the region.

This may be a physical or virtual address, depending on the memory type.

```
7.43.2.2 len
```

```
size_t udd_memregion::len
```

Length (in bytes) of the region.

This value must be PAGE_SIZE aligned.

```
7.43.2.3 type
```

```
int udd_memregion::type
```

Type of the region.

See the discussion about UDD memory types for possible values.


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/udd.h

7.44 udd_device::udd_reserved Struct Reference

Reserved to the UDD core.

Collaboration diagram for udd_device::udd_reserved:

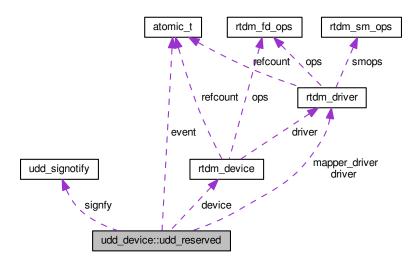

7.44.1 Detailed Description

Reserved to the UDD core.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/udd.h

7.45 udd_signotify Struct Reference

UDD event notification descriptor.

Data Fields

- pid_t pid
 - PID of the Cobalt thread to notify upon interrupt receipt.
- int sig

Signal number to send to PID for notifying, which must be in the range [SIGRTMIN .

7.45.1 Detailed Description

UDD event notification descriptor.

This structure shall be used to pass the information required to enable/disable the notification by signal upon interrupt receipt.

If PID is zero or negative, the notification is disabled. Otherwise, the Cobalt thread whose PID is given will receive the Cobalt signal also mentioned, along with the count of interrupts at the time of the receipt stored in siginfo.si_int. A Cobalt thread must explicitly wait for notifications using the sigwaitinfo() or sigtimedwait() services (no asynchronous mode available).

7.45.2 Field Documentation

7.45.2.1 pid

pid_t udd_signotify::pid

PID of the Cobalt thread to notify upon interrupt receipt.

If pid is zero or negative, the notification is disabled.

7.45.2.2 sig

int udd_signotify::sig

Signal number to send to PID for notifying, which must be in the range [SIGRTMIN .

. SIGRTMAX] inclusive. This value is not considered if *pid* is zero or negative.

The documentation for this struct was generated from the following file:

include/rtdm/uapi/udd.h

7.46 xnheap::xnbucket Struct Reference

log2 bucket list

7.46.1 Detailed Description

log2 bucket list

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/heap.h

7.47 xnsched Struct Reference

Scheduling information structure.

Data Fields

- unsigned long status
- unsigned long Iflags
- struct xnthread * curr
- int cpu
- cpumask_t resched
- struct xnsched_rt rt
- volatile unsigned inesting
- struct xntimer htimer
- struct xntimer rrbtimer

7.47.1 Detailed Description

Scheduling information structure.

7.47.2 Field Documentation

7.47.2.1 cpu

int xnsched::cpu

Mask of CPUs needing rescheduling.

Referenced by xnthread_set_periodic(), xntimer_grab_hardware(), and xntimer_release_hardware().

7.47.2.2 curr

struct xnthread* xnsched::curr

Owner CPU id.

7.47.2.3 htimer

struct xntimer xnsched::htimer

Round-robin timer.

```
7.47.2.4 inesting
volatile \ unsigned \ xnsched{::} inesting
Host timer.
7.47.2.5 Iflags
unsigned long xnsched::lflags
Current thread.
7.47.2.6 resched
cpumask_t xnsched::resched
Context of built-in real-time class.
7.47.2.7 rrbtimer
struct xntimer xnsched::rrbtimer
Root thread control block.
7.47.2.8 rt
struct xnsched_rt xnsched::rt
Interrupt nesting level.
7.47.2.9 status
unsigned long xnsched::status
```

< Scheduler specific status bitmask. Scheduler specific local flags bitmask.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/sched.h

7.48 xnvfile_lock_ops Struct Reference

Vfile locking operations.

Data Fields

- int(* get)(struct xnvfile *vfile)
- void(* put)(struct xnvfile *vfile)

7.48.1 Detailed Description

Vfile locking operations.

This structure describes the operations to be provided for implementing locking support on vfiles. They apply to both snapshot-driven and regular vfiles.

7.48.2 Field Documentation

7.48.2.1 get

int(* xnvfile_lock_ops::get) (struct xnvfile *vfile)

This handler should grab the desired lock.

Parameters

vfile A pointer to the virtual file which needs locking.

Returns

zero should be returned if the call succeeds. Otherwise, a negative error code can be returned; upon error, the current vfile operation is aborted, and the user-space caller is passed back the error value.

7.48.2.2 put

void(* xnvfile_lock_ops::put) (struct xnvfile *vfile)

This handler should release the lock previously grabbed by the get() handler.

Parameters

vfile A pointer to the virtual file which currently holds the lock to release.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

7.49 xnvfile_regular_iterator Struct Reference

Regular vfile iterator.

Data Fields

• loff_t pos

Current record position while iterating.

• struct seq_file * seq

Backlink to the host sequential file supporting the vfile.

• struct xnvfile regular * vfile

Backlink to the vfile being read.

• char private [0]

Start of private area.

7.49.1 Detailed Description

Regular vfile iterator.

This structure defines an iterator over a regular vfile.

7.49.2 Field Documentation

```
7.49.2.1 pos
```

loff_t xnvfile_regular_iterator::pos

Current record position while iterating.

7.49.2.2 private

char xnvfile_regular_iterator::private[0]

Start of private area.

Use xnvfile_iterator_priv() to address it.

```
7.49.2.3 seq
```

```
struct seq_file* xnvfile_regular_iterator::seq
```

Backlink to the host sequential file supporting the vfile.

7.49.2.4 vfile

```
struct xnvfile_regular* xnvfile_regular_iterator::vfile
```

Backlink to the vfile being read.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

7.50 xnvfile_regular_ops Struct Reference

Regular vfile operation descriptor.

Data Fields

- int(* rewind)(struct xnvfile_regular_iterator *it)
- void *(* begin)(struct xnvfile regular iterator *it)
- void *(* next)(struct xnvfile_regular_iterator *it)
- void(* end)(struct xnvfile_regular_iterator *it)
- int(* show)(struct xnvfile_regular_iterator *it, void *data)
- ssize_t(* store)(struct xnvfile_input *input)

7.50.1 Detailed Description

Regular vfile operation descriptor.

This structure describes the operations available with a regular vfile. It defines handlers for sending back formatted kernel data upon a user-space read request, and for obtaining user data upon a user-space write request.

7.50.2 Field Documentation

```
7.50.2.1 begin
```

```
void*(* xnvfile_regular_ops::begin) (struct xnvfile_regular_iterator *it)
```

This handler should prepare for iterating over the records upon a read request, starting from the specified position.

Parameters

it

A pointer to the current vfile iterator. On entry, it->pos is set to the (0-based) position of the first record to output. This handler may be called multiple times with different position requests.

Returns

A pointer to the first record to format and output, to be passed to the show() handler as its data parameter, if the call succeeds. Otherwise:

- NULL in case no record is available, in which case the read operation will terminate immediately with no output.
- VFILE_SEQ_START, a special value indicating that the show() handler should receive a NULL data pointer first, in order to output a header.
- ERR_PTR(errno), where errno is a negative error code; upon error, the current operation will be aborted immediately.

Note

This handler is optional; if none is given in the operation descriptor (i.e. NULL value), the show() handler() will be called only once for a read operation, with a NULL *data* parameter. This particular setting is convenient for simple regular viiles having a single, fixed record to output.

7.50.2.2 end

```
void(* xnvfile_regular_ops::end) (struct xnvfile_regular_iterator *it)
```

This handler is called after all records have been output.

Parameters

it A pointer to the current vfile iterator.

Note

This handler is optional and the pointer may be NULL.

7.50.2.3 next

```
void*(* xnvfile_regular_ops::next) (struct xnvfile_regular_iterator *it)
```

This handler should return the address of the next record to format and output by the show()handler".

Parameters

it

A pointer to the current vfile iterator. On entry, it->pos is set to the (0-based) position of the next record to output.

Returns

A pointer to the next record to format and output, to be passed to the show() handler as its data parameter, if the call succeeds. Otherwise:

- NULL in case no record is available, in which case the read operation will terminate immediately with no output.
- ERR_PTR(errno), where errno is a negative error code; upon error, the current operation will be aborted immediately.

Note

This handler is optional; if none is given in the operation descriptor (i.e. NULL value), the read operation will stop after the first invocation of the show() handler.

7.50.2.4 rewind

```
int(* xnvfile_regular_ops::rewind) (struct xnvfile_regular_iterator *it)
```

This handler is called only once, when the virtual file is opened, before the begin() handler is invoked.

Parameters

it A pointer to the vfile iterator which will be used to read the file contents.

Returns

Zero should be returned upon success. Otherwise, a negative error code aborts the operation, and is passed back to the reader.

Note

This handler is optional. It should not be used to allocate resources but rather to perform consistency checks, since no closure call is issued in case the open sequence eventually fails.

7.50.2.5 show

int(* xnvfile_regular_ops::show) (struct xnvfile_regular_iterator *it, void *data)

This handler should format and output a record.

xnvfile_printf(), xnvfile_write(), xnvfile_puts() and xnvfile_putc() are available to format and/or emit the output. All routines take the iterator argument *it* as their first parameter.

Parameters

it	A pointer to the current vfile iterator.
data	A pointer to the record to format then output. The first call to the handler may receive a NULL data pointer, depending on the presence and/or return of a hander; the show handler should test this special value to output any header that fits, prior to receiving more calls with actual records.

Returns

zero if the call succeeds, also indicating that the handler should be called for the next record if any. Otherwise:

- A negative error code. This will abort the output phase, and return this status to the reader.
- VFILE_SEQ_SKIP, a special value indicating that the current record should be skipped and will not be output.

7.50.2.6 store

```
ssize_t(* xnvfile_regular_ops::store) (struct xnvfile_input *input)
```

This handler receives data written to the vfile, likely for updating some kernel setting, or triggering any other action which fits. This is the only handler which deals with the write-side of a vfile. It is called when writing to the /proc entry of the vfile from a user-space process.

The input data is described by a descriptor passed to the handler, which may be subsequently passed to parsing helper routines. For instance, xnvfile_get_string() will accept the input descriptor for returning the written data as a null-terminated character string. On the other hand, xnvfile_get_integer() will attempt to return a long integer from the input data.

Parameters

input A pointer to an input descriptor. It refers to an opaque data from the handler's standpoint.

Returns

the number of bytes read from the input descriptor if the call succeeds. Otherwise, a negative error code. Return values from parsing helper routines are commonly passed back to the caller by the store() handler.

Note

This handler is optional, and may be omitted for read-only vfiles.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

7.51 xnvfile_rev_tag Struct Reference

Snapshot revision tag.

Data Fields

int rev

Current revision number.

7.51.1 Detailed Description

Snapshot revision tag.

This structure defines a revision tag to be used with snapshot-driven vfiles.

7.51.2 Field Documentation

7.51.2.1 rev

int xnvfile_rev_tag::rev

Current revision number.


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

7.52 xnvfile_snapshot Struct Reference

Snapshot vfile descriptor.

Collaboration diagram for xnvfile_snapshot:

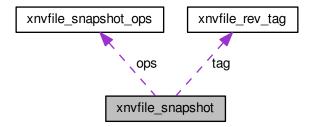

7.52.1 Detailed Description

Snapshot vfile descriptor.

This structure describes a snapshot-driven vfile. Reading from such a vfile involves a preliminary data collection phase under lock protection, and a subsequent formatting and output phase of the collected data records. Locking is done in a way that does not increase worst-case latency, regardless of the number of records to be collected for output.


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

7.53 xnvfile_snapshot_iterator Struct Reference

Snapshot-driven vfile iterator.

Collaboration diagram for xnvfile_snapshot_iterator:

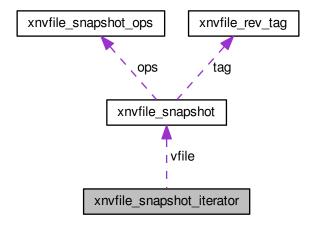

Data Fields

• int nrdata

Number of collected records.

caddr_t databuf

Address of record buffer.

struct seq_file * seq

Backlink to the host sequential file supporting the vfile.

• struct xnvfile_snapshot * vfile

Backlink to the vfile being read.

void(* endfn)(struct xnvfile_snapshot_iterator *it, void *buf)

Buffer release handler.

• char private [0]

Start of private area.

7.53.1 Detailed Description

Snapshot-driven vfile iterator.

This structure defines an iterator over a snapshot-driven vfile.

7.53.2 Field Documentation

```
7.53.2.1 databuf
```

caddr_t xnvfile_snapshot_iterator::databuf

Address of record buffer.

7.53.2.2 endfn

void(* xnvfile_snapshot_iterator::endfn) (struct xnvfile_snapshot_iterator *it, void *buf)

Buffer release handler.

7.53.2.3 nrdata

int xnvfile_snapshot_iterator::nrdata

Number of collected records.

7.53.2.4 private

char xnvfile_snapshot_iterator::private[0]

Start of private area.

Use xnvfile_iterator_priv() to address it.

7.53.2.5 seq

struct seq_file* xnvfile_snapshot_iterator::seq

Backlink to the host sequential file supporting the vfile.

7.53.2.6 vfile

struct xnvfile_snapshot* xnvfile_snapshot_iterator::vfile

Backlink to the vfile being read.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

7.54 xnvfile_snapshot_ops Struct Reference

Snapshot vfile operation descriptor.

Data Fields

- int(* rewind)(struct xnvfile snapshot iterator *it)
- void *(* begin)(struct xnvfile snapshot iterator *it)
- void(* end)(struct xnvfile snapshot iterator *it, void *buf)
- int(* next)(struct xnvfile_snapshot_iterator *it, void *data)
- int(* show)(struct xnvfile snapshot iterator *it, void *data)
- ssize t(* store)(struct xnvfile input *input)

7.54.1 Detailed Description

Snapshot vfile operation descriptor.

This structure describes the operations available with a snapshot-driven vfile. It defines handlers for returning a printable snapshot of some Xenomai object contents upon a user-space read request, and for updating this object upon a user-space write request.

7.54.2 Field Documentation

```
7.54.2.1 begin
```

```
void*(* xnvfile_snapshot_ops::begin) (struct xnvfile_snapshot_iterator *it)
```

This handler should allocate the snapshot buffer to hold records during the data collection phase. When specified, all records collected via the next()handler" will be written to a cell from the memory area returned by begin().

Parameters

it A pointer to the current snapshot iterator.

Returns

A pointer to the record buffer, if the call succeeds. Otherwise:

- NULL in case of allocation error. This will abort the data collection, and return -ENOMEM to the reader.
- VFILE_SEQ_EMPTY, a special value indicating that no record will be output. In such a case, the
 next() handler will not be called, and the data collection will stop immediately. However, the show()
 handler will still be called once, with a NULL data pointer (i.e. header display request).

Note

This handler is optional; if none is given, an internal allocation depending on the value returned by the rewind() handler can be obtained.

7.54.2.2 end

```
void(* xnvfile_snapshot_ops::end) (struct xnvfile_snapshot_iterator *it, void *buf)
```

This handler releases the memory buffer previously obtained from begin(). It is usually called after the snapshot data has been output by show(), but it may also be called before rewinding the vfile after a revision change, to release the dropped buffer.

Parameters

it	A pointer to the current snapshot iterator.
buf	A pointer to the buffer to release.

Note

This routine is optional and the pointer may be NULL. It is not needed upon internal buffer allocation; see the description of the rewind()handler".

7.54.2.3 next

```
int(* xnvfile_snapshot_ops::next) (struct xnvfile_snapshot_iterator *it, void *data)
```

This handler fetches the next record, as part of the snapshot data to be sent back to the reader via the show().

Parameters

it	A pointer to the current snapshot iterator.
data	A pointer to the record to fill in.

Returns

a strictly positive value, if the call succeeds and leaves a valid record into *data*, which should be passed to the show() handler() during the formatting and output phase. Otherwise:

- A negative error code. This will abort the data collection, and return this status to the reader.
- VFILE_SEQ_SKIP, a special value indicating that the current record should be skipped. In such a case, the *data* pointer is not advanced to the next position before the next() handler is called anew.

Note

This handler is called with the vfile lock held. Before each invocation of this handler, the vfile core checks whether the revision tag has been touched, in which case the data collection is restarted from scratch. A data collection phase succeeds whenever all records can be fetched via the next() handler, while the revision tag remains unchanged, which indicates that a consistent snapshot of the object state was taken.

7.54.2.4 rewind

int(* xnvfile_snapshot_ops::rewind) (struct xnvfile_snapshot_iterator *it)

This handler (re-)initializes the data collection, moving the seek pointer at the first record. When the file revision tag is touched while collecting data, the current reading is aborted, all collected data dropped, and the vfile is eventually rewound.

Parameters

it A pointer to the current snapshot iterator. Two useful information can be retrieved from this iterator in this context:

- it->vfile is a pointer to the descriptor of the virtual file being rewound.
- xnvfile_iterator_priv(it) returns a pointer to the private data area, available from the descriptor, which size is vfile->privsz. If the latter size is zero, the returned pointer is meaningless and should not be used.

Returns

A negative error code aborts the data collection, and is passed back to the reader. Otherwise:

- a strictly positive value is interpreted as the total number of records which will be returned by the next() handler during the data collection phase. If no begin() handler is provided in the operation descriptor, this value is used to allocate the snapshot buffer internally. The size of this buffer would then be vfile->datasz * value.
- zero leaves the allocation to the begin() handler if present, or indicates that no record is to be output in case such handler is not given.

Note

This handler is optional; a NULL value indicates that nothing needs to be done for rewinding the vfile. It is called with the vfile lock held.

7.54.2.5 show

```
int(* xnvfile_snapshot_ops::show) (struct xnvfile_snapshot_iterator *it, void *data)
```

This handler should format and output a record from the collected data.

xnvfile_printf(), xnvfile_write(), xnvfile_puts() and xnvfile_putc() are available to format and/or emit the output. All routines take the iterator argument *it* as their first parameter.

Parameters

it	A pointer to the current snapshot iterator.	
data	A pointer to the record to format then output. The first call to the handler is always passed a NULL <i>data</i> pointer; the show handler should test this special value to output any header that fits, prior to receiving more calls with actual records.	

Returns

zero if the call succeeds, also indicating that the handler should be called for the next record if any. Otherwise:

- A negative error code. This will abort the output phase, and return this status to the reader.
- VFILE_SEQ_SKIP, a special value indicating that the current record should be skipped and will not be output.

7.54.2.6 store

```
ssize_t(* xnvfile_snapshot_ops::store) (struct xnvfile_input *input)
```

This handler receives data written to the vfile, likely for updating the associated Xenomai object's state, or triggering any other action which fits. This is the only handler which deals with the write-side of a vfile. It is called when writing to the /proc entry of the vfile from a user-space process.

The input data is described by a descriptor passed to the handler, which may be subsequently passed to parsing helper routines. For instance, xnvfile_get_string() will accept the input descriptor for returning the written data as a null-terminated character string. On the other hand, xnvfile_get_integer() will attempt to return a long integer from the input data.

Parameters

input A pointer to an input descriptor. It refers to an opaque data from the handler's standpoint.

Returns

the number of bytes read from the input descriptor if the call succeeds. Otherwise, a negative error code. Return values from parsing helper routines are commonly passed back to the caller by the store() handler.

Note

This handler is optional, and may be omitted for read-only vfiles.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h


Chapter 8

File Documentation

8.1 include/cobalt/kernel/rtdm/analogy/channel_range.h File Reference


Analogy for Linux, channel, range related features.

Include dependency graph for channel_range.h:

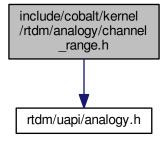

File Documentation

This graph shows which files directly or indirectly include this file:

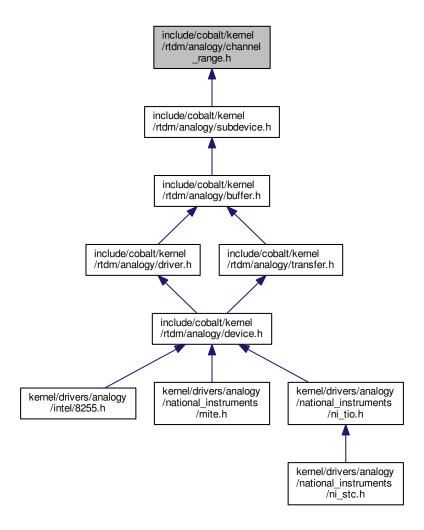

Data Structures

- struct a4l channel
 - Structure describing some channel's characteristics.
- struct a4l_channels_desc
 - Structure describing a channels set.
- struct a4l_range
 - Structure describing a (unique) range.

Macros

- #define A4L_CHAN_GLOBAL 0x10
 - Internal use flag (must not be used by driver developer)
- #define A4L_RNG_GLOBAL 0x8
 - Internal use flag (must not be used by driver developer)

• #define RANGE(x, y)

Macro to declare a (unique) range with no unit defined.

• #define RANGE_V(x, y)

Macro to declare a (unique) range in Volt.

#define RANGE_mA(x, y)

Macro to declare a (unique) range in milliAmpere.

#define RANGE_ext(x, y)

Macro to declare a (unique) range in some external reference.

• #define A4L RNG GLOBAL RNGDESC 0

Constant to define a ranges descriptor as global (inter-channel)

#define A4L RNG PERCHAN RNGDESC 1

Constant to define a ranges descriptor as specific for a channel.

#define RNG GLOBAL(x)

Macro to declare a ranges global descriptor in one line.

Channel reference

Flags to define the channel's reference

- #define A4L_CHAN_AREF_GROUND 0x1
 Ground reference.
- #define A4L_CHAN_AREF_COMMON 0x2
 Common reference.
- #define A4L CHAN AREF DIFF 0x4

Differential reference.

#define A4L_CHAN_AREF_OTHER 0x8

Misc reference.

Channels declaration mode

Constant to define whether the channels in a descriptor are identical

- #define A4L_CHAN_GLOBAL_CHANDESC 0
 Global declaration, the set contains channels with similar characteristics.
- #define A4L CHAN PERCHAN CHANDESC 1

Per channel declaration, the decriptor gathers differents channels.

8.1.1 Detailed Description

Analogy for Linux, channel, range related features.

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

File Documentation


8.2 include/cobalt/kernel/rtdm/analogy/driver.h File Reference

Analogy for Linux, driver facilities.

Include dependency graph for driver.h:

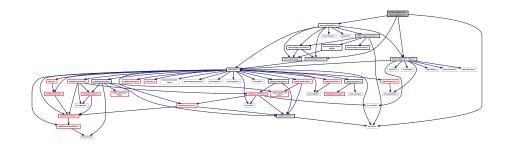

This graph shows which files directly or indirectly include this file:

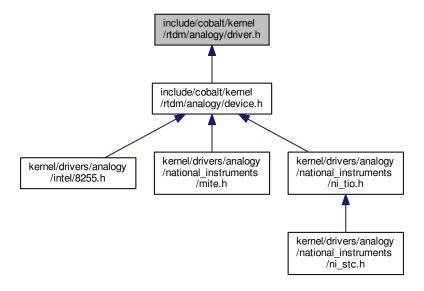

Data Structures

• struct a4l_driver

Structure containing driver declaration data.

8.2.1 Detailed Description

Analogy for Linux, driver facilities.

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


8.3 include/cobalt/kernel/rtdm/driver.h File Reference

Real-Time Driver Model for Xenomai, driver API header.

Include dependency graph for driver.h:

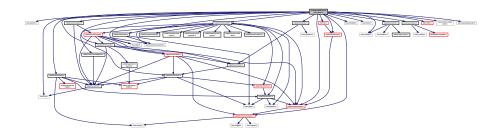

This graph shows which files directly or indirectly include this file:

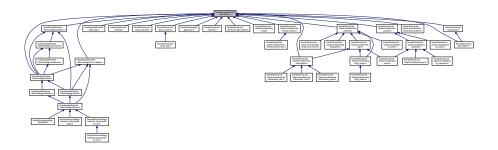

Data Structures

struct rtdm_dev_context

Device context.

struct rtdm_sm_ops

RTDM state management handlers.

struct rtdm_driver

RTDM driver.

• struct rtdm_device

RTDM device.

634 File Documentation

Macros

#define RTDM MAX MINOR 1024

Maximum number of named devices per driver.

#define cobalt atomic enter(context)

Enter atomic section (dual kernel only)

#define cobalt_atomic_leave(__context)

Leave atomic section (dual kernel only)

• #define RTDM EXECUTE ATOMICALLY(code block)

Execute code block atomically (DEPRECATED)

• #define RTDM_LOCK_UNLOCKED(__name) IPIPE_SPIN_LOCK_UNLOCKED

Static lock initialisation.

#define rtdm_lock_get_irqsave(__lock, __context) ((__context) = __rtdm_lock_get_irqsave(__ ← lock))

Acquire lock and disable preemption, by stalling the head domain.

#define rtdm_lock_irqsave(__context) splhigh(__context)

Disable preemption locally.

• #define rtdm_lock_irqrestore(__context) splexit(__context)

Restore preemption state.

• #define rtdm_irq_get_arg(irq_handle, type) ((type *)irq_handle->cookie)

Retrieve IRQ handler argument.

Device Flags

Static flags describing a RTDM device

#define RTDM EXCLUSIVE 0x0001

If set, only a single instance of the device can be requested by an application.

#define RTDM FIXED MINOR 0x0002

Use fixed minor provided in the rtdm_device description for registering.

#define RTDM_NAMED_DEVICE 0x0010

If set, the device is addressed via a clear-text name.

#define RTDM PROTOCOL DEVICE 0x0020

If set, the device is addressed via a combination of protocol ID and socket type.

• #define RTDM DEVICE TYPE MASK 0x00F0

Mask selecting the device type.

#define RTDM_SECURE_DEVICE 0x80000000

Flag indicating a secure variant of RTDM (not supported here)

RTDM IRQTYPE xxx

Interrupt registrations flags

#define RTDM_IRQTYPE_SHARED XN_IRQTYPE_SHARED

Enable IRQ-sharing with other real-time drivers.

• #define RTDM IRQTYPE EDGE XN IRQTYPE EDGE

Mark IRQ as edge-triggered, relevant for correct handling of shared edge-triggered IRQs.

RTDM IRQ xxx

Return flags of interrupt handlers

#define RTDM IRQ NONE XN IRQ NONE

Unhandled interrupt.

#define RTDM_IRQ_HANDLED XN_IRQ_HANDLED

Denote handled interrupt.

#define RTDM_IRQ_DISABLE XN_IRQ_DISABLE

Request interrupt disabling on exit.

Task Priority Range

Maximum and minimum task priorities

- #define RTDM TASK LOWEST PRIORITY 0
- #define RTDM_TASK_HIGHEST_PRIORITY 99

Task Priority Modification

Raise or lower task priorities by one level

- #define RTDM_TASK_RAISE_PRIORITY (+1)
- #define RTDM_TASK_LOWER_PRIORITY (-1)

Typedefs

- typedef ipipe_spinlock_t rtdm_lock_t
 - Lock variable.
- typedef unsigned long rtdm_lockctx_t

Variable to save the context while holding a lock.

- typedef int(* rtdm_irq_handler_t) (rtdm_irq_t *irq_handle)
 - Interrupt handler.
- typedef void(* rtdm_nrtsig_handler_t) (rtdm_nrtsig_t *nrt_sig, void *arg)

Non-real-time signal handler.

• typedef void(* rtdm_timer_handler_t) (rtdm_timer_t *timer)

Timer handler.

typedef void(* rtdm_task_proc_t) (void *arg)

Real-time task procedure.

Enumerations

RTDM SELECTTYPE xxx

Event types select can bind to

enum rtdm_selecttype { RTDM_SELECTTYPE_READ = XNSELECT_READ, RTDM_SELEC
 TTYPE_WRITE = XNSELECT_WRITE, RTDM_SELECTTYPE_EXCEPT = XNSELECT_EX
 CEPT }

RTDM_TIMERMODE_xxx

Timer operation modes

 enum rtdm_timer_mode { RTDM_TIMERMODE_RELATIVE = XN_RELATIVE, RTDM_TIME↔ RMODE_ABSOLUTE = XN_ABSOLUTE, RTDM_TIMERMODE_REALTIME = XN_REALTIME
 } 636 File Documentation

Functions

static void * rtdm_fd_to_private (struct rtdm_fd *fd)

Locate the driver private area associated to a device context structure.

static struct rtdm_fd * rtdm_private_to_fd (void *dev_private)

Locate a device file descriptor structure from its driver private area.

• static bool rtdm_fd_is_user (struct rtdm_fd *fd)

Tell whether the passed file descriptor belongs to an application.

static struct rtdm device * rtdm fd device (struct rtdm fd *fd)

Locate a device structure from a file descriptor.

int rtdm_dev_register (struct rtdm_device *device)

Register a RTDM device.

void rtdm_dev_unregister (struct rtdm_device *device)

Unregister a RTDM device.

• void rtdm_toseq_init (rtdm_toseq_t *timeout_seq, nanosecs_rel_t timeout)

Initialise a timeout sequence.

static void rtdm_lock_init (rtdm_lock_t *lock)

Dynamic lock initialisation.

static void rtdm_lock_get (rtdm_lock_t *lock)

Acquire lock from non-preemptible contexts.

static void rtdm_lock_put (rtdm_lock_t *lock)

Release lock without preemption restoration.

static void rtdm lock put irgrestore (rtdm lock t *lock, rtdm lockctx t context)

Release lock and restore preemption state.

• int rtdm_irq_request (rtdm_irq_t *irq_handle, unsigned int irq_no, rtdm_irq_handler_t handler, unsigned long flags, const char *device_name, void *arg)

Register an interrupt handler.

• void rtdm schedule nrt work (struct work struct *lostage work)

Put a work task in Linux non real-time global workqueue from primary mode.

void rtdm_timer_destroy (rtdm_timer_t *timer)

Destroy a timer.

• int rtdm_timer_start (rtdm_timer_t *timer, nanosecs_abs_t expiry, nanosecs_rel_t interval, enum rtdm_timer_mode mode)

Start a timer.

• void rtdm timer stop (rtdm timer t *timer)

Stop a timer.

int rtdm_task_init (rtdm_task_t *task, const char *name, rtdm_task_proc_t task_proc, void *arg, int priority, nanosecs_rel_t period)

Initialise and start a real-time task.

void rtdm_task_busy_sleep (nanosecs_rel_t delay)

Busy-wait a specified amount of time.

void rtdm_event_init (rtdm_event_t *event, unsigned long pending)

Initialise an event.

int rtdm_event_wait (rtdm_event_t *event)

Wait on event occurrence.

int rtdm_event_timedwait (rtdm_event_t *event, nanosecs_rel_t timeout, rtdm_toseq_t *timeout
 _seq)

Wait on event occurrence with timeout.

void rtdm_event_signal (rtdm_event_t *event)

Signal an event occurrence.

void rtdm_event_clear (rtdm_event_t *event)

Clear event state.

void rtdm_event_pulse (rtdm_event_t *event)

Signal an event occurrence to currently listening waiters.

void rtdm_event_destroy (rtdm_event_t *event)

Destroy an event.

void rtdm_sem_init (rtdm_sem_t *sem, unsigned long value)

Initialise a semaphore.

int rtdm_sem_down (rtdm_sem_t *sem)

Decrement a semaphore.

Decrement a semaphore with timeout.

void rtdm_sem_up (rtdm_sem_t *sem)

Increment a semaphore.

void rtdm_sem_destroy (rtdm_sem_t *sem)

Destroy a semaphore.

void rtdm_mutex_init (rtdm_mutex_t *mutex)

Initialise a mutex.

int rtdm_mutex_lock (rtdm_mutex_t *mutex)

Request a mutex.

int rtdm_mutex_timedlock (rtdm_mutex_t *mutex, nanosecs_rel_t timeout, rtdm_toseq_
 t *timeout_seq)

Request a mutex with timeout.

void rtdm_mutex_unlock (rtdm_mutex_t *mutex)

Release a mutex.

void rtdm_mutex_destroy (rtdm_mutex_t *mutex)

Destroy a mutex.

int rtdm_ratelimit (struct rtdm_ratelimit_state *rs, const char *func)

Enforces a rate limit.

RTDM profile information descriptor

RTDM profile information

This descriptor details the profile information associated to a RTDM class of device managed by a driver.

#define RTDM_CLASS_MAGIC 0x8284636c

Initializer for class profile information.

• #define RTDM_PROFILE_INFO(__name, __id, __subid, __version)

Initializer for class profile information.

• int rtdm_drv_set_sysclass (struct rtdm_driver *drv, struct class *cls)

Set the kernel device class of a RTDM driver.

638 File Documentation

8.3.1 Detailed Description

Real-Time Driver Model for Xenomai, driver API header.

Copyright (C) 2005-2007 Jan Kiszka jan.kiszka@web.de Copyright (C) 2005 Joerg Langenberg joerg.langenberg@gmx.net Copyright (C) 2008 Gilles Chanteperdrix gilles.chanteperdrix@xenomai.

org Copyright (C) 2014 Philippe Gerum rpm@xenomai.org

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

8.3.2 Macro Definition Documentation

8.3.2.1 RTDM CLASS MAGIC

#define RTDM_CLASS_MAGIC 0x8284636c

Initializer for class profile information.

This macro must be used to fill in the class profile information field from a RTDM driver.

Parameters

name	Class name (unquoted).	
id Class major identification number (profile_version.class_id		
subid	Class minor identification number (profile_version.subclass_id).	
version Profile version number.		

Note

See Device Profiles.

8.3.2.2 RTDM_PROFILE_INFO

```
__id,
__subid,
__version )
```

Value:

```
{
    .name = ( # __name ),
    .class_id = (__id),
    .subclass_id = (__subid),
    .version = (__version),
    .magic = ~RTDM_CLASS_MAGIC,
    .owner = THIS_MODULE,
    .kdev_class = NULL,
}
```

Initializer for class profile information.

This macro must be used to fill in the class profile information field from a RTDM driver.

Parameters

name	Class name (unquoted).	
id Class major identification number (profile_version.class_id)		
subid	Class minor identification number (profile_version.subclass_id).	
version	Profile version number.	

Note

See Device Profiles.

8.3.3 Function Documentation

Locate a device structure from a file descriptor.

Parameters

d			
	in	fd	File descriptor
	TIL	IU	i ile descriptor

Returns

The address of the device structure to which this file descriptor is attached.

Referenced by udd_get_device().

File Documentation

Tell whether the passed file descriptor belongs to an application.

Parameters

in	fd	File descriptor
----	----	-----------------

Returns

true if passed file descriptor belongs to an application, false otherwise.

Locate the driver private area associated to a device context structure.

Parameters

in	fd	File descriptor structure associated with opened device instance
----	----	--

Returns

The address of the private driver area associated to file descriptor.

Locate a device file descriptor structure from its driver private area.

Parameters

in	dev_private	Address of a private context area
----	-------------	-----------------------------------


Returns

The address of the file descriptor structure defining dev_private.


8.4 include/cobalt/kernel/rtdm/analogy/subdevice.h File Reference

Analogy for Linux, subdevice related features.

Include dependency graph for subdevice.h:

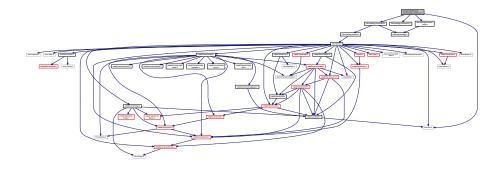

This graph shows which files directly or indirectly include this file:

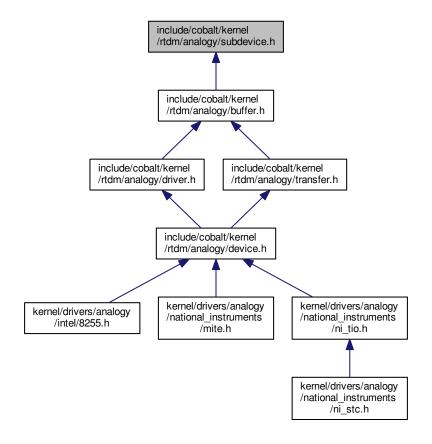

Data Structures

• struct a4l_subdevice

Structure describing the subdevice.

8.4.1 Detailed Description

Analogy for Linux, subdevice related features.

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr


Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

8.5 include/rtdm/can.h File Reference

Include dependency graph for can.h:

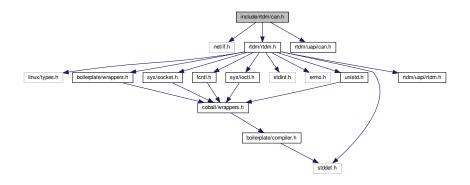

This graph shows which files directly or indirectly include this file:

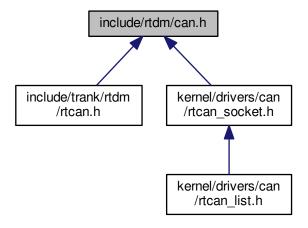

8.5.1 Detailed Description

Note

Copyright (C) 2006 Wolfgang Grandegger wg@grandegger.com Copyright (C) 2005, 2006 Sebastian Smolorz Sebastian.Smolorz@stud.uni-hannover.de

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU


General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

8.6 include/rtdm/uapi/can.h File Reference

Real-Time Driver Model for RT-Socket-CAN, CAN device profile header.

This graph shows which files directly or indirectly include this file:

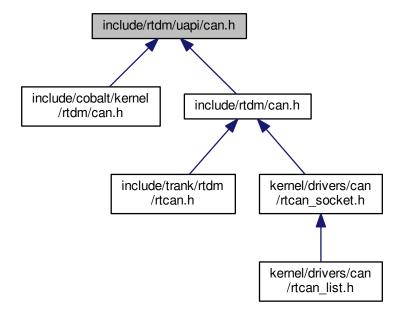

Data Structures

• struct can_bittime_std

Standard bit-time parameters according to Bosch.

• struct can_bittime_btr

Hardware-specific BTR bit-times.

• struct can_bittime

Custom CAN bit-time definition.

struct can_filter

Filter for reception of CAN messages.

struct sockaddr_can

Socket address structure for the CAN address family.

struct can_frame

Raw CAN frame.

struct can_ifreq

CAN interface request descriptor.

Macros

• #define AF CAN 29

CAN address family.

• #define PF CAN AF CAN

CAN protocol family.

• #define SOL_CAN_RAW 103

CAN socket levels.

CAN ID masks

Bit masks for masking CAN IDs

#define CAN EFF MASK 0x1FFFFFF

Bit mask for extended CAN IDs.

#define CAN_SFF_MASK 0x000007FF

Bit mask for standard CAN IDs.

CAN ID flags

Flags within a CAN ID indicating special CAN frame attributes

• #define CAN_EFF_FLAG 0x80000000

Extended frame.

• #define CAN_RTR_FLAG 0x40000000

Remote transmission frame.

#define CAN_ERR_FLAG 0x20000000

Error frame (see Errors), not valid in struct can_filter.

#define CAN_INV_FILTER CAN_ERR_FLAG

Invert CAN filter definition, only valid in struct can filter.

Particular CAN protocols

Possible protocols for the PF_CAN protocol family Currently only the RAW protocol is supported.

#define CAN RAW 1

Raw protocol of PF_CAN, applicable to socket type SOCK_RAW.

CAN controller modes

Special CAN controllers modes, which can be or'ed together.

Note

These modes are hardware-dependent. Please consult the hardware manual of the CAN controller for more detailed information.

- #define CAN CTRLMODE LISTENONLY 0x1
- #define CAN CTRLMODE LOOPBACK 0x2
- #define CAN_CTRLMODE_3_SAMPLES 0x4

Timestamp switches

Arguments to pass to RTCAN_RTIOC_TAKE_TIMESTAMP

- #define RTCAN_TAKE_NO_TIMESTAMPS 0
 - Switch off taking timestamps.
- #define RTCAN_TAKE_TIMESTAMPS 1

Do take timestamps.

RAW socket options

Setting and getting CAN RAW socket options.

- #define CAN_RAW_FILTER 0x1
 - CAN filter definition.
- #define CAN_RAW_ERR_FILTER 0x2

CAN error mask.

• #define CAN RAW LOOPBACK 0x3

CAN TX loopback.

#define CAN_RAW_RECV_OWN_MSGS 0x4

CAN receive own messages.

IOCTLs

CAN device IOCTLs

Deprecated Passing struct ifreqas a request descriptor for CAN IOCTLs is still accepted for backward compatibility, however it is recommended to switch to struct can_ifreqat the first opportunity.

- #define SIOCGIFINDEX defined_by_kernel_header_file
 Get CAN interface index by name.
- #define SIOCSCANBAUDRATE _IOW(RTIOC_TYPE_CAN, 0x01, struct can_ifreq)
 Set baud rate.
- #define SIOCGCANBAUDRATE _IOWR(RTIOC_TYPE_CAN, 0x02, struct can_ifreq)
 Get baud rate.
- #define SIOCSCANCUSTOMBITTIME _IOW(RTIOC_TYPE_CAN, 0x03, struct can_ifreq) Set custom bit time parameter.
- #define SIOCGCANCUSTOMBITTIME _IOWR(RTIOC_TYPE_CAN, 0x04, struct can_ifreq) Get custom bit-time parameters.
- #define SIOCSCANMODE _IOW(RTIOC_TYPE_CAN, 0x05, struct can_ifreq)
 Set operation mode of CAN controller.
- #define SIOCGCANSTATE _IOWR(RTIOC_TYPE_CAN, 0x06, struct can_ifreq)
 Get current state of CAN controller.
- #define SIOCSCANCTRLMODE _IOW(RTIOC_TYPE_CAN, 0x07, struct can_ifreq)
 Set special controller modes.
- #define SIOCGCANCTRLMODE _IOWR(RTIOC_TYPE_CAN, 0x08, struct can_ifreq)
 Get special controller modes.
- #define RTCAN_RTIOC_TAKE_TIMESTAMP_IOW(RTIOC_TYPE_CAN, 0x09, int)
 Enable or disable storing a high precision timestamp upon reception of a CAN frame.
- #define RTCAN_RTIOC_RCV_TIMEOUT _IOW(RTIOC_TYPE_CAN, 0x0A, nanosecs_rel_t) Specify a reception timeout for a socket.
- #define RTCAN_RTIOC_SND_TIMEOUT_IOW(RTIOC_TYPE_CAN, 0x0B, nanosecs_rel_t) Specify a transmission timeout for a socket.

Error mask

Error class (mask) in can_id field of struct can frame to be used with CAN RAW ERR FILTER.

Note: Error reporting is hardware dependent and most CAN controllers report less detailed error conditions than the SJA1000.

Note: In case of a bus-off error condition (CAN_ERR_BUSOFF), the CAN controller is **not** restarted automatically. It is the application's responsibility to react appropriately, e.g. calling CAN_MODE_

START.

Note: Bus error interrupts (CAN_ERR_BUSERROR) are enabled when an application is calling a Recv function on a socket listening on bus errors (using CAN_RAW_ERR_FILTER). After one bus error has occured, the interrupt will be disabled to allow the application time for error processing and to efficiently avoid bus error interrupt flooding.

- #define CAN_ERR_TX_TIMEOUT 0x00000001U
 - TX timeout (netdevice driver)
- #define CAN_ERR_LOSTARB 0x00000002U

Lost arbitration (see data[0])

#define CAN_ERR_CRTL 0x00000004U

Controller problems (see data[1])

- #define CAN_ERR_PROT 0x00000008U
 - Protocol violations (see data[2], data[3])
- #define CAN_ERR_TRX 0x00000010U
 - Transceiver status (see data[4])
- #define CAN_ERR_ACK 0x00000020U
 - Received no ACK on transmission.
- #define CAN_ERR_BUSOFF 0x00000040U
 Bus off
- #define CAN_ERR_BUSERROR 0x00000080U
 Bus error (may flood!)
- #define CAN_ERR_RESTARTED 0x00000100U
 - Controller restarted.
- #define CAN_ERR_MASK 0x1FFFFFFFU
 Omit EFF, RTR, ERR flags.

Arbitration lost error

Error in the data[0] field of struct can frame.

 #define CAN_ERR_LOSTARB_UNSPEC 0x00 unspecified

Controller problems

Error in the data[1] field of struct can frame.

- #define CAN_ERR_CRTL_UNSPEC 0x00
 unspecified
- #define CAN_ERR_CRTL_RX_OVERFLOW 0x01 RX buffer overflow.
- #define CAN_ERR_CRTL_TX_OVERFLOW 0x02
 TX buffer overflow.
- #define CAN_ERR_CRTL_RX_WARNING 0x04
 - reached warning level for RX errors
- #define CAN_ERR_CRTL_TX_WARNING 0x08
 - reached warning level for TX errors
- #define CAN_ERR_CRTL_RX_PASSIVE 0x10
 reached passive level for RX errors
- #define CAN_ERR_CRTL_TX_PASSIVE 0x20
 reached passive level for TX errors

Protocol error type

Error in the data[2] field of struct can_frame.

- #define CAN_ERR_PROT_UNSPEC 0x00 unspecified
- #define CAN_ERR_PROT_BIT 0x01
 - single bit error
- #define CAN_ERR_PROT_FORM 0x02
 - frame format error
- #define CAN_ERR_PROT_STUFF 0x04 bit stuffing error
- #define CAN_ERR_PROT_BIT0 0x08
 - unable to send dominant bit
- #define CAN ERR PROT BIT1 0x10
 - unable to send recessive bit
- #define CAN_ERR_PROT_OVERLOAD 0x20 bus overload
- #define CAN ERR PROT ACTIVE 0x40

active error announcement
 #define CAN ERR PROT TX 0x80

error occured on transmission

Protocol error location

Error in the data[4] field of struct can frame.

- #define CAN_ERR_PROT_LOC_UNSPEC 0x00 unspecified
- #define CAN_ERR_PROT_LOC_SOF 0x03 start of frame
- #define CAN_ERR_PROT_LOC_ID28_21 0x02
 ID bits 28 21 (SFF: 10 3)
- #define CAN_ERR_PROT_LOC_ID20_18 0x06
 ID bits 20 18 (SFF: 2 0)
- #define CAN_ERR_PROT_LOC_SRTR 0x04 substitute RTR (SFF: RTR)
- #define CAN_ERR_PROT_LOC_IDE 0x05 identifier extension
- #define CAN_ERR_PROT_LOC_ID17_13 0x07
 ID bits 17-13.
- #define CAN_ERR_PROT_LOC_ID12_05 0x0F ID bits 12-5.
- #define CAN_ERR_PROT_LOC_ID04_00 0x0E
 ID bits 4-0.
- #define CAN_ERR_PROT_LOC_RTR 0x0C RTR.
- #define CAN_ERR_PROT_LOC_RES1 0x0D reserved bit 1
- #define CAN_ERR_PROT_LOC_RES0 0x09 reserved bit 0
- #define CAN_ERR_PROT_LOC_DLC 0x0B data length code
- #define CAN_ERR_PROT_LOC_DATA 0x0A data section
- #define CAN_ERR_PROT_LOC_CRC_SEQ 0x08
 CRC sequence.
- #define CAN_ERR_PROT_LOC_CRC_DEL 0x18

 CRC delimiter.
- #define CAN_ERR_PROT_LOC_ACK 0x19
 ACK slot.
- #define CAN_ERR_PROT_LOC_ACK_DEL 0x1B ACK delimiter.
- #define CAN_ERR_PROT_LOC_EOF 0x1A end of frame
- #define CAN_ERR_PROT_LOC_INTERM 0x12 intermission
- #define CAN_ERR_TRX_UNSPEC 0x00
 0000 0000
- #define CAN_ERR_TRX_CANH_NO_WIRE 0x04
 0000 0100
- #define CAN_ERR_TRX_CANH_SHORT_TO_BAT 0x05 0000 0101
- #define CAN_ERR_TRX_CANH_SHORT_TO_VCC 0x06 0000 0110
- #define CAN_ERR_TRX_CANH_SHORT_TO_GND 0x07 0000 0111
- #define CAN_ERR_TRX_CANL_NO_WIRE 0x40

```
0100 0000
```

- #define CAN_ERR_TRX_CANL_SHORT_TO_BAT 0x50
 0101 0000
- #define CAN_ERR_TRX_CANL_SHORT_TO_VCC 0x60 0110 0000
- #define CAN_ERR_TRX_CANL_SHORT_TO_GND 0x70 0111 0000
- #define CAN_ERR_TRX_CANL_SHORT_TO_CANH 0x80 1000 0000

Typedefs

• typedef uint32_t can_id_t

Type of CAN id (see CAN_xxx_MASK and CAN_xxx_FLAG)

• typedef can_id_t can_err_mask_t

Type of CAN error mask.

typedef uint32_t can_baudrate_t

Baudrate definition in bits per second.

• typedef enum CAN_BITTIME_TYPE can_bittime_type_t

See CAN_BITTIME_TYPE.

typedef enum CAN_MODE can_mode_t

See CAN MODE.

typedef int can_ctrlmode_t

See CAN CTRLMODE.

typedef enum CAN_STATE can_state_t

See CAN STATE.

• typedef struct can_filter can_filter_t

Filter for reception of CAN messages.

typedef struct can_frame can_frame_t

Raw CAN frame.

Enumerations

• enum CAN_BITTIME_TYPE { CAN_BITTIME_STD, CAN_BITTIME_BTR } Supported CAN bit-time types.

CAN operation modes

Modes into which CAN controllers can be set

enum CAN_MODE { CAN_MODE_STOP = 0, CAN_MODE_START, CAN_MODE_SLEEP }

CAN controller states

States a CAN controller can be in.

enum CAN_STATE {
 CAN_STATE_ERROR_ACTIVE = 0, CAN_STATE_ACTIVE = 0, CAN_STATE_ERROR_WA
 RNING = 1, CAN_STATE_BUS_WARNING = 1,
 CAN_STATE_ERROR_PASSIVE = 2, CAN_STATE_BUS_PASSIVE = 2, CAN_STATE_BU
 S_OFF, CAN_STATE_SCANNING_BAUDRATE,
 CAN_STATE_STOPPED, CAN_STATE_SLEEPING }

8.6.1 Detailed Description

Real-Time Driver Model for RT-Socket-CAN, CAN device profile header.

Note

Copyright (C) 2006 Wolfgang Grandegger wg@grandegger.com Copyright (C) 2005, 2006 Sebastian Smolorz Sebastian.Smolorz@stud.uni-hannover.de

This RTDM CAN device profile header is based on:

include/linux/can.h, include/linux/socket.h, net/can/pf_can.h in linux-can.patch, a CAN socket framework for Linux

Copyright (C) 2004, 2005, Robert Schwebel, Benedikt Spranger, Marc Kleine-Budde, Pengutronix

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU

General Public License for more details.


You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

8.7 include/cobalt/kernel/rtdm/fd.h File Reference

Include dependency graph for fd.h:



This graph shows which files directly or indirectly include this file:

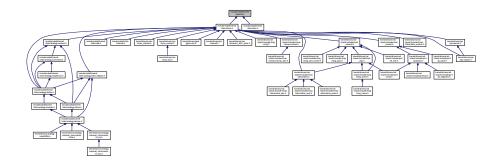

Data Structures

struct rtdm_fd_ops

RTDM file operation descriptor.

Functions

• int rtdm_open_handler (struct rtdm_fd *fd, int oflags)

Open handler for named devices.

• int rtdm socket handler (struct rtdm fd *fd, int protocol)

Socket creation handler for protocol devices.

void rtdm_close_handler (struct rtdm_fd *fd)

Close handler.

• int rtdm_ioctl_handler (struct rtdm_fd *fd, unsigned int request, void user *arg)

IOCTL handler.

• ssize_t rtdm_read_handler (struct rtdm_fd *fd, void __user *buf, size_t size)

Read handler.

• ssize_t rtdm_write_handler (struct rtdm_fd *fd, const void __user *buf, size_t size)

Write handler.

ssize_t rtdm_recvmsg_handler (struct rtdm_fd *fd, struct user_msghdr *msg, int flags)

Receive message handler.

• ssize_t rtdm_sendmsg_handler (struct rtdm_fd *fd, const struct user_msghdr *msg, int flags)

Transmit message handler.

int rtdm_select_handler (struct rtdm_fd *fd, struct xnselector *selector, unsigned int type, unsigned int index)

Select handler.

• int rtdm mmap handler (struct rtdm fd *fd, struct vm area struct *vma)

Memory mapping handler.

• unsigned long rtdm_get_unmapped_area_handler (struct rtdm_fd *fd, unsigned long len, unsigned long pgoff, unsigned long flags)

Allocate mapping region in address space.

struct rtdm_fd * rtdm_fd_get (int ufd, unsigned int magic)

Retrieve and lock a RTDM file descriptor.

int rtdm_fd_lock (struct rtdm_fd *fd)

Hold a reference on a RTDM file descriptor.

void rtdm_fd_put (struct rtdm_fd *fd)

Release a RTDM file descriptor obtained via rtdm_fd_get()

void rtdm_fd_unlock (struct rtdm_fd *fd)

Drop a reference on a RTDM file descriptor.

• int rtdm_fd_select (int ufd, struct xnselector *selector, unsigned int type)

Bind a selector to specified event types of a given file descriptor.

8.7.1 Detailed Description

operation handlers

8.7.2 Function Documentation

Retrieve and lock a RTDM file descriptor.

Parameters

in	ufd	User-side file descriptor
in	magic	Magic word for lookup validation

Returns

Pointer to the RTDM file descriptor matching ufd, or ERR_PTR(-EBADF).

Note

The file descriptor returned must be later released by a call to rtdm_fd_put().

Tags

unrestricted

Referenced by rtdm_fd_select().

Hold a reference on a RTDM file descriptor.

Parameters

in	fd	Target file descriptor
----	----	------------------------

Note

rtdm_fd_lock() increments the reference counter of fd. You only need to call this function in special scenarios, e.g. when keeping additional references to the file descriptor that have different lifetimes. Only use rtdm_fd_lock() on descriptors that are currently locked via an earlier rtdm_fd\(\text{___get()}/rtdm_fd_lock() or while running a device operation handler.

Tags

unrestricted

Release a RTDM file descriptor obtained via rtdm_fd_get()

Parameters

in	fd	RTDM file descriptor to release
----	----	---------------------------------

Note

Every call to rtdm_fd_get() must be matched by a call to rtdm_fd_put().

Tags

unrestricted

Referenced by rtdm_fd_select().

Bind a selector to specified event types of a given file descriptor.

This function is invoked by higher RTOS layers implementing select-like services. It shall not be called directly by RTDM drivers.

Parameters

in	ufd	User-side file descriptor to bind to
in,out	selector	Selector object that shall be bound to the given event
in	type	Event type the caller is interested in

Returns

0 on success, otherwise:

• -EBADF is returned if the file descriptor ufd cannot be resolved.

• -EINVAL is returned if type is invalid.

Tags

task-unrestricted

References rtdm_fd_get(), rtdm_fd_put(), splnone, and spltest.

```
8.7.2.5 rtdm_fd_unlock()
void rtdm_fd_unlock (
```

Drop a reference on a RTDM file descriptor.

struct rtdm_fd * fd)

Parameters

	in	fd	Target file descriptor
--	----	----	------------------------

Note

Every call to rtdm_fd_lock() must be matched by a call to rtdm_fd_unlock().


Tags

unrestricted


8.8 include/rtdm/uapi/ipc.h File Reference

This file is part of the Xenomai project.

Include dependency graph for ipc.h:

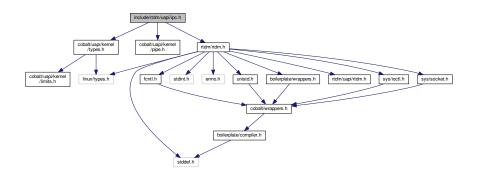

This graph shows which files directly or indirectly include this file:

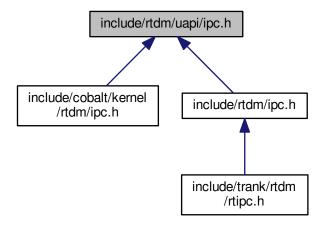

Data Structures

struct rtipc port label

Port label information structure.

struct sockaddr_ipc

Socket address structure for the RTIPC address family.

Macros

XDDP socket options

Setting and getting XDDP socket options.

- #define XDDP_LABEL 1
 - XDDP label assignment.
- #define XDDP_POOLSZ 2
 - XDDP local pool size configuration.
- #define XDDP_BUFSZ 3
 - XDDP streaming buffer size configuration.
- #define XDDP_MONITOR 4
 - XDDP monitoring callback.

XDDP events

Specific events occurring on XDDP channels, which can be monitored via the XDDP_MONITOR socket option.

- #define XDDP_EVTIN 1
 - Monitor writes to the non real-time endpoint.
- #define XDDP_EVTOUT 2
 - Monitor reads from the non real-time endpoint.
- #define XDDP EVTDOWN 3

Monitor close from the non real-time endpoint.

• #define XDDP_EVTNOBUF 4

Monitor memory shortage for non real-time datagrams.

IDDP socket options

Setting and getting IDDP socket options.

• #define IDDP_LABEL 1

IDDP label assignment.

• #define IDDP POOLSZ 2

IDDP local pool size configuration.

BUFP socket options

Setting and getting BUFP socket options.

• #define BUFP_LABEL 1

BUFP label assignment.

• #define BUFP_BUFSZ 2

BUFP buffer size configuration.

Socket level options

Setting and getting supported standard socket level options.

- #define SO_SNDTIMEO defined_by_kernel_header_file

 IPCPROTO_IDDP and IPCPROTO_BUFP protocols support the standard SO_SNDTIMEO socket option, from the SOL_SOCKET level.
- #define SO_RCVTIMEO defined_by_kernel_header_file

 All RTIPC protocols support the standard SO_RCVTIMEO socket option, from the SOL_SOCKET level.

Typedefs

typedef int16_t rtipc_port_t

Port number type for the RTIPC address family.

Enumerations

RTIPC protocol list

protocols for the PF_RTIPC protocol family

enum { IPCPROTO_IPC = 0, IPCPROTO_XDDP = 1, IPCPROTO_IDDP = 2, IPCPROTO_B
 UFP = 3 }

Functions

Supported operations

Standard socket operations supported by the RTIPC protocols.

- int socket__AF_RTIPC (int domain=AF_RTIPC, int type=SOCK_DGRAM, int protocol)

 Create an endpoint for communication in the AF_RTIPC domain.
- int close__AF_RTIPC (int sockfd)
 - Close a RTIPC socket descriptor.
- int bind__AF_RTIPC (int sockfd, const struct sockaddr_ipc *addr, socklen_t addrlen)

 Bind a RTIPC socket to a port.
- int connect__AF_RTIPC (int sockfd, const struct sockaddr_ipc *addr, socklen_t addrlen)

 Initiate a connection on a RTIPC socket.
- int setsockopt__AF_RTIPC (int sockfd, int level, int optname, const void *optval, socklen_
 t optlen)

Set options on RTIPC sockets.

- int getsockopt__AF_RTIPC (int sockfd, int level, int optname, void *optval, socklen_t *optlen)

 Get options on RTIPC sockets.
- ssize_t sendmsg__AF_RTIPC (int sockfd, const struct msghdr *msg, int flags)
 Send a message on a RTIPC socket.
- ssize_t recvmsg__AF_RTIPC (int sockfd, struct msghdr *msg, int flags)
 Receive a message from a RTIPC socket.
- int getsockname__AF_RTIPC (int sockfd, struct sockaddr_ipc *addr, socklen_t *addrlen)
 Get socket name.
- int getpeername__AF_RTIPC (int sockfd, struct sockaddr_ipc *addr, socklen_t *addrlen)
 Get socket peer.

8.8.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2009 Philippe Gerum rpm@xenomai.org


This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

8.9 include/rtdm/rtdm.h File Reference

Include dependency graph for rtdm.h:

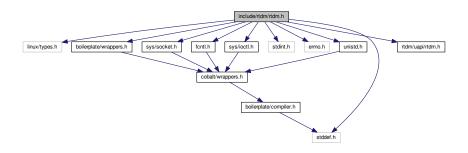

This graph shows which files directly or indirectly include this file:



8.9.1 Detailed Description

Note

Copyright (C) 2005, 2006 Jan Kiszka jan.kiszka@web.de Copyright (C) 2005 Joerg Langenberg joerg.langenberg@gmx.net

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

8.10 include/rtdm/uapi/rtdm.h File Reference

Real-Time Driver Model for Xenomai, user API header.

This graph shows which files directly or indirectly include this file:



Data Structures

struct rtdm_device_info

Device information.

Macros

API Versioning

#define RTDM API VER 9

Common user and driver API version.

#define RTDM_API_MIN_COMPAT_VER 9

Minimum API revision compatible with the current release.

RTDM TIMEOUT xxx

Special timeout values

- #define RTDM TIMEOUT INFINITE 0
 - Block forever.
- #define RTDM_TIMEOUT_NONE (-1)

Any negative timeout means non-blocking.

RTDM CLASS xxx

Device classes

- #define RTDM_CLASS_PARPORT 1#define RTDM_CLASS_SERIAL 2
- #define RTDM CLASS CAN 3
- #define RTDM CLASS NETWORK 4
- #define RTDM CLASS RTMAC 5
- #define RTDM_CLASS_TESTING 6
- #define RTDM_CLASS_RTIPC 7
- #define RTDM_CLASS_COBALT 8
 #define RTDM_CLASS_UDD 9
- #define RTDM_CLASS_MEMORY 10
- #define RTDM CLASS GPIO 11
- #define RTDM CLASS SPI 12
- #define RTDM_CLASS_MISC 223
- #define RTDM_CLASS_EXPERIMENTAL 224
- #define RTDM_CLASS_MAX 255

Device Naming

Maximum length of device names (excluding the final null character)

#define RTDM MAX DEVNAME LEN 31

RTDM_PURGE_xxx_BUFFER

Flags selecting buffers to be purged

- #define RTDM PURGE RX BUFFER 0x0001
- #define RTDM_PURGE_TX_BUFFER 0x0002

Common IOCTLs

The following IOCTLs are common to all device rtdm profiles.

#define RTIOC DEVICE INFO IOR(RTIOC TYPE COMMON, 0x00, struct rtdm device ←

Retrieve information about a device or socket.

#define RTIOC_PURGE_IOW(RTIOC_TYPE_COMMON, 0x10, int)

Purge internal device or socket buffers.

Typedefs

• typedef uint64_t nanosecs_abs_t

RTDM type for representing absolute dates.

typedef int64_t nanosecs_rel_t

RTDM type for representing relative intervals.

typedef struct rtdm_device_info rtdm_device_info_t

Device information.

8.10.1 Detailed Description

Real-Time Driver Model for Xenomai, user API header.

Note

Copyright (C) 2005, 2006 Jan Kiszka jan.kiszka@web.de Copyright (C) 2005 Joerg Langenberg joerg.langenberg@gmx.net

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.


8.11 include/rtdm/serial.h File Reference

Real-Time Driver Model for Xenomai, serial device profile header.

Include dependency graph for serial.h:

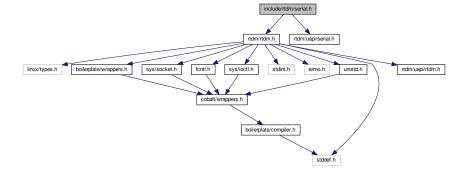

This graph shows which files directly or indirectly include this file:

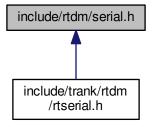

8.11.1 Detailed Description

Real-Time Driver Model for Xenomai, serial device profile header.

Note

Copyright (C) 2005-2007 Jan Kiszka jan.kiszka@web.de

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

8.12 include/rtdm/uapi/serial.h File Reference

Real-Time Driver Model for Xenomai, serial device profile header.

This graph shows which files directly or indirectly include this file:

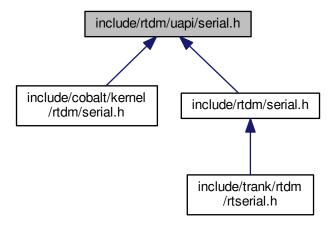

Data Structures

struct rtser config

Serial device configuration.

• struct rtser_status

Serial device status.

struct rtser_event

Additional information about serial device events.

Macros

• #define RTSER_RTIOC_BREAK_CTL_IOR(RTIOC_TYPE_SERIAL, 0x06, int)

Set or clear break on UART output line.

RTSER_DEF_BAUD

Default baud rate

• #define RTSER DEF BAUD 9600

RTSER XXX PARITY

Number of parity bits

- #define RTSER NO PARITY 0x00
- #define RTSER_ODD_PARITY 0x01
- #define RTSER_EVEN_PARITY 0x03
- #define RTSER_DEF_PARITY RTSER_NO_PARITY

RTSER XXX BITS

Number of data bits

- #define RTSER 5 BITS 0x00
- #define RTSER 6 BITS 0x01
- #define RTSER_7_BITS 0x02
- #define RTSER_8_BITS 0x03
- #define RTSER_DEF_BITS RTSER_8_BITS

RTSER_xxx_STOPB

Number of stop bits

- #define RTSER 1 STOPB 0x00
 - valid only in combination with 5 data bits
- #define RTSER_1_5_STOPB 0x01
 - valid only in combination with 5 data bits
- #define RTSER_2_STOPB 0x01
 - valid only in combination with 5 data bits
- #define RTSER_DEF_STOPB RTSER_1_STOPB

valid only in combination with 5 data bits

RTSER xxx HAND

Handshake mechanisms

- #define RTSER NO HAND 0x00
- #define RTSER RTSCTS HAND 0x01
- #define RTSER DEF HAND RTSER NO HAND

RTSER RS485 xxx

RS485 mode with automatic RTS handling

- #define RTSER RS485 DISABLE 0x00
- #define RTSER RS485 ENABLE 0x01
- #define RTSER DEF RS485 RTSER RS485 DISABLE

RTSER_FIFO_xxx

Reception FIFO interrupt threshold

- #define RTSER FIFO DEPTH 1 0x00
- #define RTSER FIFO DEPTH 4 0x40
- #define RTSER FIFO DEPTH 8 0x80
- #define RTSER FIFO DEPTH 14 0xC0
- #define RTSER DEF FIFO DEPTH RTSER FIFO DEPTH 1

RTSER_TIMEOUT_xxx

Special timeout values, see also RTDM TIMEOUT xxx

- #define RTSER TIMEOUT INFINITE RTDM TIMEOUT INFINITE
- #define RTSER_TIMEOUT_NONE RTDM_TIMEOUT_NONE
- #define RTSER DEF TIMEOUT RTDM TIMEOUT INFINITE

RTSER XXX TIMESTAMP HISTORY

Timestamp history control

- #define RTSER RX TIMESTAMP HISTORY 0x01
- #define RTSER_DEF_TIMESTAMP_HISTORY 0x00

RTSER_EVENT_xxx

Events bits

- #define RTSER_EVENT_RXPEND 0x01

- #define RTSER_EVENT_ERRPEND 0x02 #define RTSER_EVENT_MODEMHI 0x04 #define RTSER_EVENT_MODEMLO 0x08
- #define RTSER_EVENT_TXEMPTY 0x10
- #define RTSER DEF EVENT MASK 0x00

RTSER_SET_xxx

Configuration mask bits

- #define RTSER_SET_BAUD 0x0001 #define RTSER_SET_PARITY 0x0002
- #define RTSER SET DATA_BITS 0x0004
- #define RTSER SET STOP BITS 0x0008
- #define RTSER_SET_HANDSHAKE 0x0010
- #define RTSER_SET_FIFO DEPTH 0x0020
- #define RTSER SET TIMEOUT RX 0x0100
- #define RTSER SET TIMEOUT TX 0x0200
- #define RTSER SET TIMEOUT EVENT 0x0400
- #define RTSER SET TIMESTAMP HISTORY 0x0800
- #define RTSER_SET_EVENT_MASK 0x1000
- #define RTSER_SET_RS485 0x2000

RTSER_LSR_xxx

Line status bits

- #define RTSER LSR DATA 0x01
- #define RTSER LSR OVERRUN ERR 0x02
- #define RTSER LSR PARITY ERR 0x04
- #define RTSER_LSR_FRAMING ERR 0x08
- #define RTSER_LSR_BREAK_IND 0x10
- #define RTSER_LSR_THR_EMTPY 0x20
- #define RTSER_LSR_TRANSM_EMPTY 0x40
- #define RTSER_LSR_FIFO_ERR 0x80
- #define RTSER SOFT OVERRUN ERR 0x0100

RTSER MSR xxx

Modem status bits

- #define RTSER MSR DCTS 0x01
- #define RTSER_MSR_DDSR 0x02
- #define RTSER_MSR_TERI 0x04
- #define RTSER_MSR_DDCD 0x08
- #define RTSER MSR CTS 0x10
- #define RTSER MSR DSR 0x20
- #define RTSER_MSR_RI 0x40 #define RTSER MSR DCD 0x80

RTSER MCR xxx

Modem control bits

- #define RTSER MCR DTR 0x01
- #define RTSER_MCR_RTS 0x02
- #define RTSER MCR OUT1 0x04
- #define RTSER_MCR_OUT2 0x08
- #define RTSER MCR LOOP 0x10

Sub-Classes of RTDM_CLASS_SERIAL

#define RTDM SUBCLASS 16550A 0

IOCTLs

Serial device IOCTLs

#define RTSER_RTIOC_GET_CONFIG _IOR(RTIOC_TYPE_SERIAL, 0x00, struct rtser_
 config)

Get serial device configuration.

#define RTSER_RTIOC_SET_CONFIG _IOW(RTIOC_TYPE_SERIAL, 0x01, struct rtser_
 config)

Set serial device configuration.

#define RTSER_RTIOC_GET_STATUS _IOR(RTIOC_TYPE_SERIAL, 0x02, struct rtser_
 status)

Get serial device status.

- #define RTSER_RTIOC_GET_CONTROL_IOR(RTIOC_TYPE_SERIAL, 0x03, int)
- Get serial device's modem contol register.

 #define RTSER_RTIOC_SET_CONTROL_IOW(RTIOC_TYPE_SERIAL, 0x04, int)
- Set serial device's modem contol register.

 #define RTSER_RTIOC_WAIT_EVENT _IOR(RTIOC_TYPE_SERIAL, 0x05, struct rtser_← event)

Wait on serial device events according to previously set mask.

RTSER BREAK xxx

Break control

#define RTSER BREAK CLR 0x00

Serial device configuration.

#define RTSER_BREAK_SET 0x01

Serial device configuration.

#define RTIOC_TYPE_SERIAL RTDM_CLASS_SERIAL

Serial device configuration.

typedef struct rtser_config rtser_config_t

Serial device configuration.

typedef struct rtser_status rtser_status_t

Serial device status.

typedef struct rtser_event rtser_event_t

Additional information about serial device events.

8.12.1 Detailed Description

Real-Time Driver Model for Xenomai, serial device profile header.

Note

Copyright (C) 2005-2007 Jan Kiszka jan.kiszka@web.de

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

8.12.2 Macro Definition Documentation

8.12.2.1 RTSER_RTIOC_BREAK_CTL

#define RTSER_RTIOC_BREAK_CTL _IOR(RTIOC_TYPE_SERIAL, 0x06, int)

Set or clear break on UART output line.

Parameters

in	arg	RTSER_BREAK_SET or RTSER_BREAK_CLR (int)
----	-----	--

Returns

0 on success, otherwise negative error code

Tags

task-unrestricted

Note

A set break condition may also be cleared on UART line reconfiguration.

8.12.2.2 RTSER_RTIOC_GET_CONFIG

 ${\tt \#define\ RTSER_RTIOC_GET_CONFIG\ _IOR(RTIOC_TYPE_SERIAL,\ 0x00,\ struct\ rtser_config)}$

Get serial device configuration.

Parameters

	out	arg	Pointer to configuration buffer (struct rtser_config)	
--	-----	-----	---	--

Returns

0 on success, otherwise negative error code

Tags

task-unrestricted

8.12.2.3 RTSER_RTIOC_GET_CONTROL

#define RTSER_RTIOC_GET_CONTROL _IOR(RTIOC_TYPE_SERIAL, 0x03, int)

Get serial device's modem contol register.

Parameters

out	arg	Pointer to variable receiving the content (int, see RTSER_MCR_xxx)
-----	-----	--

Returns

0 on success, otherwise negative error code

Tags

task-unrestricted

```
8.12.2.4 RTSER_RTIOC_GET_STATUS
```

#define RTSER_RTIOC_GET_STATUS _IOR(RTIOC_TYPE_SERIAL, 0x02, struct rtser_status)

Get serial device status.

Parameters

	out	arg	Pointer to status buffer (struct rtser_status)	
--	-----	-----	--	--

Returns

0 on success, otherwise negative error code

Tags

task-unrestricted

Note

The error states RTSER_LSR_OVERRUN_ERR, RTSER_LSR_PARITY_ERR, RTSER_LSR_FRAMING_ERR, and RTSER_SOFT_OVERRUN_ERR that may have occured during previous read accesses to the device will be saved for being reported via this IOCTL. Upon return from RTSER_RTIOC_GET_STATUS, the saved state will be cleared.

```
8.12.2.5 RTSER_RTIOC_SET_CONFIG
```

#define RTSER_RTIOC_SET_CONFIG _IOW(RTIOC_TYPE_SERIAL, 0x01, struct rtser_config)

Set serial device configuration.

Parameters

in	arg	Pointer to configuration buffer (struct rtser_config	<u>)</u>)
----	-----	--	------------

Returns

0 on success, otherwise:

- -EPERM is returned if the caller's context is invalid, see note below.
- -ENOMEM is returned if a new history buffer for timestamps cannot be allocated.

Tags

task-unrestricted

Note

If rtser_config contains a valid timestamp_history and the addressed device has been opened in non-real-time context, this IOCTL must be issued in non-real-time context as well. Otherwise, this command will fail.

Examples:

cross-link.c.

```
8.12.2.6 RTSER_RTIOC_SET_CONTROL
```

```
#define RTSER_RTIOC_SET_CONTROL _IOW(RTIOC_TYPE_SERIAL, 0x04, int)
```

Set serial device's modem contol register.

Parameters

in	arg	New control register content (int, see RTSER_MCR_xxx)
----	-----	---

Returns

0 on success, otherwise negative error code

Tags

task-unrestricted

8.12.2.7 RTSER_RTIOC_WAIT_EVENT

#define RTSER_RTIOC_WAIT_EVENT _IOR(RTIOC_TYPE_SERIAL, 0x05, struct rtser_event)

Wait on serial device events according to previously set mask.

Parameters

	out	arg	Pointer to event information buffer (struct rtser_event)
--	-----	-----	--

Returns

0 on success, otherwise:

- -EBUSY is returned if another task is already waiting on events of this device.
- -EBADF is returned if the file descriptor is invalid or the device has just been closed.

Tags

mode-unrestricted


Examples:

cross-link.c.


8.13 include/rtdm/testing.h File Reference

Real-Time Driver Model for Xenomai, testing device profile header.

Include dependency graph for testing.h:

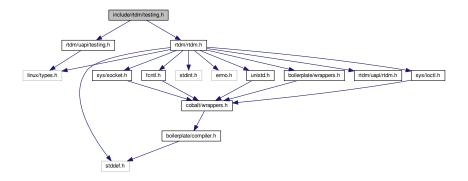

This graph shows which files directly or indirectly include this file:

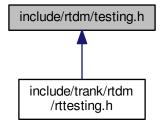

8.13.1 Detailed Description

Real-Time Driver Model for Xenomai, testing device profile header.

Note

Copyright (C) 2005 Jan Kiszka jan.kiszka@web.de

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


8.14 include/rtdm/uapi/testing.h File Reference

Real-Time Driver Model for Xenomai, testing device profile header.

Include dependency graph for testing.h:



This graph shows which files directly or indirectly include this file:

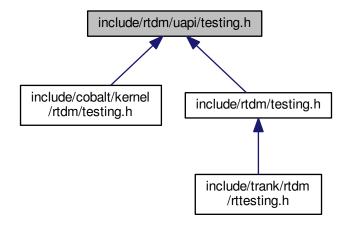

Macros

Sub-Classes of RTDM_CLASS_TESTING

- #define RTDM_SUBCLASS_TIMERBENCH 0 subclass name: "timerbench"
- #define RTDM_SUBCLASS_IRQBENCH 1 subclass name: "irqbench"
- #define RTDM_SUBCLASS_SWITCHTEST 2

subclass name: "switchtest"

• #define RTDM_SUBCLASS_RTDMTEST 3

subclase name: "rtdm"

IOCTLs

Testing device IOCTLs

- #define RTTST_RTIOC_INTERM_BENCH_RES _IOWR(RTIOC_TYPE_TESTING, 0x00, struct rttst_interm_bench_res)
- #define RTTST_RTIOC_TMBENCH_START _IOW(RTIOC_TYPE_TESTING, 0x10, struct rttst tmbench config)
- #define RTTST_RTIOC_TMBENCH_STOP _IOWR(RTIOC_TYPE_TESTING, 0x11, struct rttst overall bench res)
- #define RTTST_RTIOC_SWTEST_SET_TASKS_COUNT _IOW(RTIOC_TYPE_TESTING, 0x30. u32)
- #define RTTST_RTIOC_SWTEST_SET_CPU _IOW(RTIOC_TYPE_TESTING, 0x31, __u32)
- #define RTTST_RTIOC_SWTEST_REGISTER_UTASK _ IOW(RTIOC_TYPE_TESTING, 0x32, struct rttst_swtest_task)
- #define RTTST_RTIOC_SWTEST_CREATE_KTASK _IOWR(RTIOC_TYPE_TESTING, 0x33, struct rttst_swtest_task)
- #define RTTST_RTIOC_SWTEST_SWITCH_TO _IOR(RTIOC_TYPE_TESTING, 0x35, struct rttst swtest dir)

• #define RTTST_RTIOC_SWTEST_GET_SWITCHES_COUNT _IOR(RTIOC_TYPE_TESTI⊷ NG, 0x36, __u32)

- #define RTTST_RTIOC_SWTEST_GET_LAST_ERROR _IOR(RTIOC_TYPE_TESTING, 0x37, struct rttst_swtest_error)
- #define RTTST_RTIOC_SWTEST_SET_PAUSE _IOW(RTIOC_TYPE_TESTING, 0x38, ___
 u32)
- #define RTTST_RTIOC_RTDM_DEFER_CLOSE_IOW(RTIOC_TYPE_TESTING, 0x40, __
 u32)
- #define RTTST_RTIOC_RTDM_ACTOR_GET_CPU _IOR(RTIOC_TYPE_TESTING, 0x41,
 u32)
- #define RTTST_RTIOC_RTDM_PING_PRIMARY _IOR(RTIOC_TYPE_TESTING, 0x42, __ ↔ u32)
- #define RTTST_RTIOC_RTDM_PING_SECONDARY _IOR(RTIOC_TYPE_TESTING, 0x43, __u32)

8.14.1 Detailed Description

Real-Time Driver Model for Xenomai, testing device profile header.

Note

Copyright (C) 2005 Jan Kiszka jan.kiszka@web.de

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

8.15 include/cobalt/kernel/rtdm/udd.h File Reference

Copyright (C) 2014 Philippe Gerum rpm@xenomai.org

Include dependency graph for udd.h:

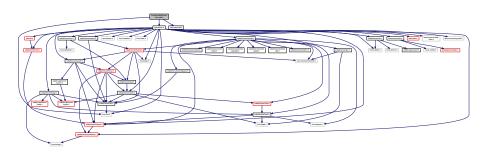

Data Structures

- struct udd memregion
- struct udd device
- struct udd device::udd reserved

Reserved to the UDD core.

Macros

• #define UDD_IRQ_NONE 0

No IRQ managed.

• #define UDD IRQ CUSTOM (-1)

IRQ directly managed from the mini-driver on top of the UDD core.

Memory types for mapping

Types of memory for mapping

The UDD core implements a default -> mmap() handler which first attempts to hand over the request to the corresponding handler defined by the mini-driver. If not present, the UDD core establishes the mapping automatically, depending on the memory type defined for the region.

• #define UDD_MEM_NONE 0

No memory region.

#define UDD_MEM_PHYS 1

Physical I/O memory region.

#define UDD MEM LOGICAL 2

Kernel logical memory region (e.g.

#define UDD MEM VIRTUAL 3

Virtual memory region with no direct physical mapping (e.g.

Functions

int udd_register_device (struct udd_device *udd)

Register a UDD device.

int udd_unregister_device (struct udd_device *udd)

Unregister a UDD device.

struct udd_device * udd_get_device (struct rtdm_fd *fd)

RTDM file descriptor to target UDD device.

void udd_notify_event (struct udd_device *udd)

Notify an IRQ event for an unmanaged interrupt.

void udd_enable_irq (struct udd_device *udd, rtdm_event_t *done)

Enable the device IRQ line.

void udd_disable_irq (struct udd_device *udd, rtdm_event_t *done)

Disable the device IRQ line.

8.15.1 Detailed Description

Copyright (C) 2014 Philippe Gerum rpm@xenomai.org

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

8.16 include/rtdm/uapi/udd.h File Reference

This file is part of the Xenomai project.

This graph shows which files directly or indirectly include this file:

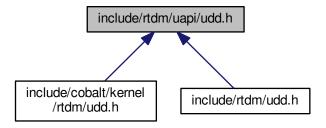

Data Structures

struct udd_signotify

UDD event notification descriptor.

Macros

UDD_IOCTL

IOCTL requests

- #define UDD_RTIOC_IRQEN_IO(RTDM_CLASS_UDD, 0) Enable the interrupt line.
- #define UDD_RTIOC_IRQDIS_IO(RTDM_CLASS_UDD, 1)
 Disable the interrupt line.
- #define UDD_RTIOC_IRQSIG_IOW(RTDM_CLASS_UDD, 2, struct udd_signotify)
 Enable/Disable signal notification upon interrupt event.

8.16.1 Detailed Description

This file is part of the Xenomai project.

Author

Copyright (C) 2014 Philippe Gerum rpm@xenomai.org

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.


8.17 include/rtdm/analogy.h File Reference

Analogy for Linux, library facilities.

Include dependency graph for analogy.h:



This graph shows which files directly or indirectly include this file:



Data Structures

struct a4l_descriptor

Structure containing device-information useful to users.

Macros

ANALOGY XXX DESC

Constants used as argument so as to define the description depth to recover

#define A4L_BSC_DESC 0x0
 BSC stands for basic descriptor (device data)

#define A4L CPLX DESC 0x1

CPLX stands for complex descriptor (subdevice + channel + range data)

8.17.1 Detailed Description

Analogy for Linux, library facilities.

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

8.18 include/rtdm/uapi/analogy.h File Reference

Analogy for Linux, UAPI bits.

This graph shows which files directly or indirectly include this file:

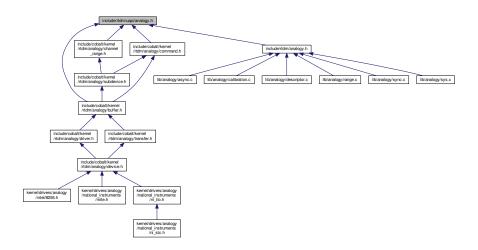

Data Structures

struct a4l_cmd_desc

Structure describing the asynchronous instruction.

struct a4l instruction

Structure describing the synchronous instruction.

struct a4l_instruction_list

Structure describing the list of synchronous instructions.

Macros

• #define A4L_RNG_FACTOR 1000000

Constant for internal use only (must not be used by driver developer).

• #define A4L_RNG_VOLT_UNIT 0x0

Volt unit range flag.

#define A4L_RNG_MAMP_UNIT 0x1

MilliAmpere unit range flag.

• #define A4L RNG NO UNIT 0x2

No unit range flag.

#define A4L RNG EXT UNIT 0x4

External unit range flag.

#define A4L RNG UNIT(x)

Macro to retrieve the range unit from the range flags.

#define A4L INSN WAIT MAX 100000

Maximal wait duration.

ANALOGY CMD xxx

Common command flags definitions

#define A4L_CMD_SIMUL 0x1

Do not execute the command, just check it.

#define A4L_CMD_BULK 0x2

Perform data recovery / transmission in bulk mode.

#define A4L_CMD_WRITE 0x4

Perform a command which will write data to the device.

TRIG xxx

Command triggers flags definitions

#define TRIG_NONE 0x00000001

Never trigger.

#define TRIG_NOW 0x00000002

Trigger now + N ns.

#define TRIG_FOLLOW 0x00000004

Trigger on next lower level trig.

• #define TRIG_TIME 0x00000008

Trigger at time N ns.

• #define TRIG_TIMER 0x00000010

Trigger at rate N ns.

#define TRIG COUNT 0x00000020

Trigger when count reaches N.

#define TRIG EXT 0x00000040

Trigger on external signal N.

#define TRIG INT 0x00000080

Trigger on analogy-internal signal N.

#define TRIG OTHER 0x00000100

Driver defined trigger.

#define TRIG_WAKE_EOS 0x0020

Wake up on end-of-scan.

#define TRIG ROUND MASK 0x00030000

Trigger not implemented yet.

#define TRIG ROUND NEAREST 0x00000000

Trigger not implemented yet.

#define TRIG ROUND DOWN 0x00010000

Trigger not implemented yet.

#define TRIG ROUND UP 0x00020000

Trigger not implemented yet.

#define TRIG_ROUND_UP_NEXT 0x00030000

Trigger not implemented yet.

Channel macros

Specific precompilation macros and constants useful for the channels descriptors tab located in the command structure

#define CHAN(a) ((a) & 0xffff)

Channel indication macro.

• #define RNG(a) (((a) & 0xff) << 16)

Range definition macro.

#define AREF(a) (((a) & 0x03) << 24)

Reference definition macro.

#define FLAGS(a) ((a) & CR FLAGS MASK)

Flags definition macro.

#define PACK(a, b, c) (a | RNG(b) | AREF(c))

Channel + range + reference definition macro.

#define PACK_FLAGS(a, b, c, d) (PACK(a, b, c) | FLAGS(d))

Channel + range + reference + flags definition macro.

#define AREF GROUND 0x00

Analog reference is analog ground.

#define AREF_COMMON 0x01

Analog reference is analog common.

#define AREF_DIFF 0x02

Analog reference is differential.

#define AREF_OTHER 0x03

Analog reference is undefined.

Subdevices types

Flags to define the subdevice type

#define A4L_SUBD_UNUSED (A4L_SUBD_MASK_SPECIAL|0x1)

Unused subdevice.

#define A4L_SUBD_AI (A4L_SUBD_MASK_READ|0x2)

Analog input subdevice.

#define A4L_SUBD_AO (A4L_SUBD_MASK_WRITE|0x4)

Analog output subdevice.

#define A4L SUBD DI (A4L SUBD MASK READI0x8)

Digital input subdevice.

#define A4L SUBD DO (A4L SUBD MASK WRITE|0x10)

Digital output subdevice.

#define A4L_SUBD_DIO (A4L_SUBD_MASK_SPECIAL|0x20)

Digital input/output subdevice.

#define A4L_SUBD_COUNTER (A4L_SUBD_MASK_SPECIAL|0x40)
 Counter subdevice.

#define A4L_SUBD_TIMER (A4L_SUBD_MASK_SPECIAL|0x80)

Timer subdevice.

- #define A4L_SUBD_MEMORY (A4L_SUBD_MASK_SPECIAL|0x100)
 Memory, EEPROM, DPRAM.
- #define A4L_SUBD_CALIB (A4L_SUBD_MASK_SPECIAL|0x200)

Calibration subdevice DACs.

- #define A4L_SUBD_PROC (A4L_SUBD_MASK_SPECIAL|0x400)
- Processor, DSP.

 #define A4L_SUBD_SERIAL (A4L_SUBD_MASK_SPECIAL|0x800)

 Serial IO subdevice.
- #define A4L_SUBD_TYPES

Mask which gathers all the types.

Subdevice features

Flags to define the subdevice's capabilities

• #define A4L SUBD CMD 0x1000

The subdevice can handle command (i.e it can perform asynchronous acquisition)

#define A4L SUBD MMAP 0x8000

The subdevice support mmap operations (technically, any driver can do it; however, the developer might want that his driver must be accessed through read / write.

Subdevice status

Flags to define the subdevice's status

• #define A4L SUBD BUSY NR 0

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

#define A4L_SUBD_BUSY (1 << A4L_SUBD_BUSY_NR)

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

#define A4L_SUBD_CLEAN_NR 1

The subdevice is about to be cleaned in the middle of the detach procedure.

#define A4L_SUBD_CLEAN (1 << A4L_SUBD_CLEAN_NR)

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

Instruction type

Flags to define the type of instruction

#define A4L_INSN_READ (0 | A4L_INSN_MASK_READ)

Read instruction.

#define A4L INSN WRITE (1 | A4L INSN MASK WRITE)

Write instruction.

#define A4L INSN BITS

"Bits" instruction

#define A4L_INSN_CONFIG

Configuration instruction.

#define A4L INSN GTOD

Get time instruction.

• #define A4L INSN WAIT

Wait instruction.

#define A4L_INSN_INTTRIG

Trigger instruction (to start asynchronous acquisition)

Configuration instruction type

Values to define the type of configuration instruction

- #define A4L_INSN_CONFIG_DIO_INPUT 0
- #define A4L_INSN_CONFIG_DIO_OUTPUT 1
- #define A4L_INSN_CONFIG_DIO_OPENDRAIN 2
- #define A4L_INSN_CONFIG_ANALOG_TRIG 16
- #define A4L_INSN_CONFIG_ALT_SOURCE 20
 #define A4L_INSN_CONFIG_DIGITAL_TRIG 21
- #define A4L INSN CONFIG BLOCK SIZE 22
- #define A4L INSN CONFIG TIMER 1 23
- #define A4L_INSN_CONFIG_FILTER 24
- #define A4L INSN CONFIG CHANGE NOTIFY 25
- #define A4L INSN CONFIG SERIAL CLOCK 26
- #define A4L INSN CONFIG BIDIRECTIONAL DATA 27
- #define A4L INSN CONFIG DIO QUERY 28
- #define A4L_INSN_CONFIG_PWM_OUTPUT 29
- #define A4L_INSN_CONFIG_GET_PWM_OUTPUT 30
- #define A4L_INSN_CONFIG_ARM 31
- #define A4L_INSN_CONFIG_DISARM 32
 #define A4L_INSN_CONFIG_GET_COUNTER_STATUS 33
 #define A4L_INSN_CONFIG_RESET 34
- #define A4L_INSN_CONFIG_GPCT_SINGLE_PULSE_GENERATOR 1001 /* Use CTR as single pulsegenerator */
- #define A4L_INSN_CONFIG_GPCT_PULSE_TRAIN_GENERATOR 1002 /* Use CTR as pulsetraingenerator */
- #define A4L INSN CONFIG GPCT QUADRATURE ENCODER 1003 /* Use the counter as
- #define A4L_INSN_CONFIG_SET_GATE_SRC 2001 /* Set gate source */
 #define A4L_INSN_CONFIG_GET_GATE_SRC 2002 /* Get gate source */
- #define A4L INSN CONFIG SET CLOCK SRC 2003 /* Set master clock source */
- #define A4L_INSN_CONFIG_GET_CLOCK_SRC 2004 /* Get master clock source */
- #define A4L INSN CONFIG SET OTHER SRC 2005 /* Set other source */
- #define A4L INSN CONFIG SET COUNTER MODE 4097
- #define A4L INSN CONFIG SET ROUTING 4099
- #define A4L_INSN_CONFIG_GET_ROUTING 4109

Counter status bits

Status bits for INSN CONFIG GET COUNTER STATUS

- #define A4L COUNTER ARMED 0x1
- #define A4L COUNTER COUNTING 0x2
- #define A4L COUNTER TERMINAL COUNT 0x4

IO direction

Values to define the IO polarity

- #define A4L INPUT 0
- #define A4L OUTPUT 1
- #define A4L OPENDRAIN 2

Events types

Values to define the Analogy events. They might used to send some specific events through the instruction interface.

- #define A4L_ EV START 0x00040000
- #define A4L_EV_SCAN_BEGIN 0x00080000
- #define A4L_EV_CONVERT 0x00100000
 #define A4L_EV_SCAN_END 0x00200000
- #define **A4L EV STOP** 0x00400000

8.18.1 Detailed Description

Analogy for Linux, UAPI bits.

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

8.18.2 Macro Definition Documentation

8.18.2.1 A4L RNG FACTOR


#define A4L_RNG_FACTOR 1000000

Constant for internal use only (must not be used by driver developer).

8.19 lib/analogy/calibration.h File Reference

Analogy for Linux, internal calibration declarations.

This graph shows which files directly or indirectly include this file:



8.19.1 Detailed Description

Analogy for Linux, internal calibration declarations.

Note

Copyright (C) 2014 Jorge A Ramirez-Ortiz jro@xenomai.org

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.


8.20 lib/analogy/internal.h File Reference

Analogy for Linux, internal declarations.

Include dependency graph for internal.h:

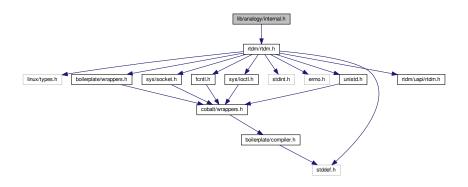

This graph shows which files directly or indirectly include this file:



8.20.1 Detailed Description

Analogy for Linux, internal declarations.

Note

Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

8.21 lib/analogy/async.c File Reference

Analogy for Linux, command, transfer, etc.

Include dependency graph for async.c:

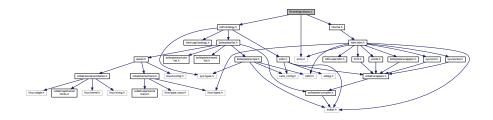

Functions

- int a4l_snd_command (a4l_desc_t *dsc, a4l_cmd_t *cmd)
 - Send a command to an Analoy device.
- int a4l_snd_cancel (a4l_desc_t *dsc, unsigned int idx_subd)
 - Cancel an asynchronous acquisition.
- int a4l_set_bufsize (a4l_desc_t *dsc, unsigned int idx_subd, unsigned long size)
 - Change the size of the asynchronous buffer.
- int a4l_get_bufsize (a4l_desc_t *dsc, unsigned int idx_subd, unsigned long *size)

 Get the size of the asynchronous buffer.
- int a4l_mark_bufrw (a4l_desc_t *dsc, unsigned int idx_subd, unsigned long cur, unsigned long *new)

Update the asynchronous buffer state.

- int a4l_poll (a4l_desc_t *dsc, unsigned int idx_subd, unsigned long ms_timeout)

 Get the available data count.
- int a4l_mmap (a4l_desc_t *dsc, unsigned int idx_subd, unsigned long size, void **ptr)

 Map the asynchronous ring-buffer into a user-space.
- int a4l_async_read (a4l_desc_t *dsc, void *buf, size_t nbyte, unsigned long ms_timeout)

 Perform asynchronous read operation on the analog input subdevice.
- int a4l_async_write (a4l_desc_t *dsc, void *buf, size_t nbyte, unsigned long ms_timeout)

 Perform asynchronous write operation on the analog input subdevice.

8.21.1 Detailed Description

Analogy for Linux, command, transfer, etc.

related features

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

8.22 lib/analogy/calibration.c File Reference

Analogy for Linux, device, subdevice, etc.

Include dependency graph for calibration.c:

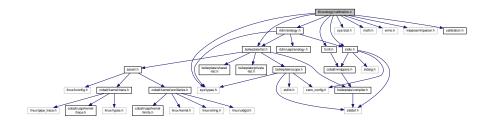

Functions

- int a4l_read_calibration_file (char *name, struct a4l_calibration_data *data)

 Read the analogy generated calibration file.
- int a4l_get_softcal_converter (struct a4l_polynomial *converter, int subd, int chan, int range, struct a4l_calibration_data *data)

Get the polynomial that will be use for the software calibration.

• int a4l_rawtodcal (a4l_chinfo_t *chan, double *dst, void *src, int cnt, struct a4l_polynomial *converter)

Convert raw data (from the driver) to calibrated double units.

• int a4l_dcaltoraw (a4l_chinfo_t *chan, void *dst, double *src, int cnt, struct a4l_polynomial *converter)

Convert double values to raw calibrated data using polynomials.

8.22.1 Detailed Description

Analogy for Linux, device, subdevice, etc.

related features

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2014 Jorge A. Ramirez-Ortiz jro@xenomai.org

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

8.23 lib/analogy/descriptor.c File Reference

Analogy for Linux, descriptor related features.

Include dependency graph for descriptor.c:



Functions

- int a4l_sys_desc (int fd, a4l_desc_t *dsc, int pass)
 - Get a descriptor on an attached device.
- int a4l open (a4l desc t *dsc, const char *fname)
 - Open an Analogy device and basically fill the descriptor.
- int a4l close (a4l desc t *dsc)
 - Close the Analogy device related with the descriptor.
- int a4l_fill_desc (a4l_desc_t *dsc)
 - Fill the descriptor with subdevices, channels and ranges data.
- int a4l get subdinfo (a4l desc t *dsc, unsigned int subd, a4l sbinfo t **info)
 - Get an information structure on a specified subdevice.
- int a4l_get_chinfo (a4l_desc_t *dsc, unsigned int subd, unsigned int chan, a4l_chinfo_t **info)

 Get an information structure on a specified channel.
- int a4l_get_rnginfo (a4l_desc_t *dsc, unsigned int subd, unsigned int chan, unsigned int rng, a4l
 rnginfo t **info)

Get an information structure on a specified range.

8.23.1 Detailed Description

Analogy for Linux, descriptor related features.

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

8.24 lib/analogy/range.c File Reference

Analogy for Linux, range related features.

Include dependency graph for range.c:

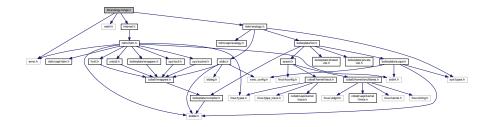

Functions

- int a4l_sizeof_chan (a4l_chinfo_t *chan)
 - Get the size in memory of an acquired element.
- int a4l_sizeof_subd (a4l_sbinfo_t *subd)
 - Get the size in memory of a digital acquired element.
- int a4l_find_range (a4l_desc_t *dsc, unsigned int idx_subd, unsigned int idx_chan, unsigned long unit, double min, double max, a4l_rnginfo_t **rng)

Find the must suitable range.

- int a4l_rawtoul (a4l_chinfo_t *chan, unsigned long *dst, void *src, int cnt)
 - Unpack raw data (from the driver) into unsigned long values.
- int a4l_rawtof (a4l_chinfo_t *chan, a4l_rnginfo_t *rng, float *dst, void *src, int cnt)

Convert raw data (from the driver) to float-typed samples.

- int a4l_rawtod (a4l_chinfo_t *chan, a4l_rnginfo_t *rng, double *dst, void *src, int cnt)

 Convert raw data (from the driver) to double-typed samples.
- int a4l_ultoraw (a4l_chinfo_t *chan, void *dst, unsigned long *src, int cnt)

 Pack unsigned long values into raw data (for the driver)
- int a4l_ftoraw (a4l_chinfo_t *chan, a4l_rnginfo_t *rng, void *dst, float *src, int cnt)

 Convert float-typed samples to raw data (for the driver)
- int a4l_dtoraw (a4l_chinfo_t *chan, a4l_rnginfo_t *rng, void *dst, double *src, int cnt)

 Convert double-typed samples to raw data (for the driver)

8.24.1 Detailed Description

Analogy for Linux, range related features.

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

8.25 lib/analogy/root_leaf.h File Reference

Analogy for Linux, root / leaf system.

This graph shows which files directly or indirectly include this file:



8.25.1 Detailed Description

Analogy for Linux, root / leaf system.

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

8.26 lib/analogy/sync.c File Reference

Analogy for Linux, instruction related features.

Include dependency graph for sync.c:



Functions

int a4l_snd_insnlist (a4l_desc_t *dsc, a4l_insnlst_t *arg)

Perform a list of synchronous acquisition misc operations.

int a4l_snd_insn (a4l_desc_t *dsc, a4l_insn_t *arg)

Perform a synchronous acquisition misc operation.

• int a4l_sync_write (a4l_desc_t *dsc, unsigned int idx_subd, unsigned int chan_desc, unsigned int ns_delay, void *buf, size_t nbyte)

Perform a synchronous acquisition write operation.

• int a4l_sync_read (a4l_desc_t *dsc, unsigned int idx_subd, unsigned int chan_desc, unsigned int ns delay, void *buf, size t nbyte)

Perform a synchronous acquisition read operation.

• int a4l_sync_dio (a4l_desc_t *dsc, unsigned int idx_subd, void *mask, void *buf)

Perform a synchronous acquisition digital acquisition.

• int a4l_config_subd (a4l_desc_t *dsc, unsigned int idx_subd, unsigned int type,...)

Configure a subdevice.

8.26.1 Detailed Description

Analogy for Linux, instruction related features.

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

8.27 lib/analogy/sys.c File Reference

Analogy for Linux, descriptor related features.

Include dependency graph for sys.c:

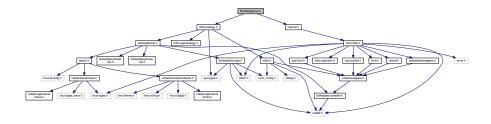

Functions

- int a4l_sys_open (const char *fname)
 - Open an Analogy device.
- int a4l_sys_close (int fd)
 - Close an Analogy device.
- int a4l sys read (int fd, void *buf, size t nbyte)
 - Read from an Analogy device.
- int a4l_sys_write (int fd, void *buf, size_t nbyte)
 - Write to an Analogy device.
- int a4l_sys_attach (int fd, a4l_lnkdesc_t *arg)
 - Attach an Analogy device to a driver.
- int a4l_sys_detach (int fd)
 - Detach an Analogy device from a driver.
- int a4l_sys_bufcfg (int fd, unsigned int idx_subd, unsigned long size)
 - Configure the buffer size.

8.27.1 Detailed Description

Analogy for Linux, descriptor related features.

Note

```
Copyright (C) 1997-2000 David A. Schleef ds@schleef.org
Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr
```

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

Chapter 9

Example Documentation

9.1 bufp-label.c

```
/*
    * Copyright (C) 2009 Philippe Gerum <rpm@xenomai.org>.
   This library is free software; you can redistribute it and/or
   modify it under the terms of the GNU Lesser General Public
 * License as published by the Free Software Foundation; either
 * version 2 of the License, or (at your option) any later version.
 * This library is distributed in the hope that it will be useful, * but WITHOUT ANY WARRANTY; without even the implied warranty of
 * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU
 * Lesser General Public License for more details.
 \ensuremath{^{*}} You should have received a copy of the GNU Lesser General Public
 * License along with this library; if not, write to the Free Software

* Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.
 * BUFP-based client/server demo, using the read(2)/write(2)
 * system calls to exchange data over a socket.
 * In this example, two sockets are created. A server thread (reader)
 * is bound to a real-time port and receives a stream of bytes sent to
 * this port from a client thread (writer).
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <pthread.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread t sytid. cltid:
#define BUFP_PORT_LABEL "bufp-demo"
static const char *msg[] = {
         "Surfing With The Alien",
"Lords of Karma",
          "Banana Mango",
         "Psycho Monkey"
         "Luminous Flesh Giants",
         "Moroccan Sunset",
         "Satch Boogie"
         "Flying In A Blue Dream",
         "Ride",
         "Summer Song"
         "Speed Of Light",
         "Crystal Planet"
         "Raspberry Jam Delta-V",
"Champagne?",
"Clouds Race Across The Sky",
         "Engines Of Creation"
};
```

```
static void fail(const char *reason)
{
         perror(reason);
         exit(EXIT_FAILURE);
}
static void *server(void *arg)
         struct rtipc_port_label plabel;
struct sockaddr_ipc saddr;
         char buf[128];
         size_t bufsz;
         int ret, s;
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_BUFP);
         if (s < 0)
                  fail("socket");
         /*

* Set a 16k buffer for the server endpoint. This

be done prior to binding the
          * configuration must be done prior to binding the socket to a
          * port.
         bufsz = 16384; /* bytes */
         ret = setsockopt(s, SOL_BUFP, BUFP_BUFSZ,
                            &bufsz, sizeof(bufsz));
         if (ret)
                  fail("setsockopt");
          * Set a port label. This name will be registered when
          * binding, in addition to the port number (if given).
         if (ret)
                  fail("setsockopt");
         /*
    * Bind the socket to the port. Assign that port a label, so
          * that peers may use a descriptive information to locate
it. Labeled ports will appear in the
          * /proc/xenomai/registry/rtipc/bufp directory once the socket
          * saddr.sipc_port specifies the port number to use. If -1 is * passed, the BUFP driver will auto-select an idle port.
         saddr.sipc_family = AF_RTIPC;
saddr.sipc_port = -1;
         ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
         if (ret)
                  fail("bind");
         for (;;) {
                  ret = read(s, buf, sizeof(buf));
                  if (ret < 0) {</pre>
                           close(s);
                           fail("read");
                  printf("%s: received %d bytes, \"%.*s\"\n",
                           __FUNCTION__, ret, ret, buf);
         }
         return NULL;
}
static void *client(void *arg)
         struct rtipc_port_label plabel;
         struct sockaddr_ipc svsaddr;
int ret, s, n = 0, len;
         struct timespec ts;
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_BUFP);
         if (s < 0)
                  fail("socket");
         /*

* Set the port label. This name will be used to find the peer

* when connecting, instead of the port number. The label must
          * be set _after_ the socket is bound to the port, so that
          * BUFP does not try to register this label for the client
          \ensuremath{^{*}} port as well (like the server thread did).
```

9.2 bufp-readwrite.c 693

```
strcpy(plabel.label, BUFP_PORT_LABEL);
        ret = setsockopt(s, SOL_BUFP, BUFP_LABEL
                          &plabel, sizeof(plabel));
        if (ret)
                 fail("setsockopt");
        memset(&svsaddr, 0, sizeof(svsaddr));
        ret = connect(s, (struct sockaddr *)&svsaddr, sizeof(svsaddr));
        if (ret)
                 fail("connect");
        for (;;) {
                 len = strlen(msg[n]);
                 ret = write(s, msg[n], len);
                 if (ret < 0) {</pre>
                         close(s);
                         fail("write");
                 printf("%s: sent %d bytes, \"%.*s\"\n",
                          _FUNCTION__, ret, ret, msg[n]);
                 n = (n + 1) \% (sizeof(msg) / sizeof(msg[0]));
                 /*

* We run in full real-time mode (i.e. primary mode),

* The the system breathe between two
                  * iterations.
                 ts.tv_sec = 0;
                 ts.tv_nsec = 500000000; /* 500 ms */
                 clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
        return NULL;
}
int main(int argc, char **argv)
        struct sched_param svparam = {.sched_priority = 71 };
        struct sched_param clparam = {.sched_priority = 70 };
        pthread_attr_t svattr, clattr;
        sigset_t set;
        int sig;
        sigemptyset(&set);
        sigaddset(&set, SIGINT);
        sigaddset(&set, SIGTERM);
        sigaddset(&set, SIGHUP);
        pthread_sigmask(SIG_BLOCK, &set, NULL);
        pthread_attr_init(&svattr);
        pthread_attr_setdetachstate(&svattr, PTHREAD_CREATE_JOINABLE);
        \tt pthread\_attr\_setinheritsched(\&svattr, PTHREAD\_EXPLICIT\_SCHED);
        {\tt pthread\_attr\_setschedpolicy(\&svattr, SCHED\_FIF0);}
        pthread_attr_setschedparam(&svattr, &svparam);
        errno = pthread_create(&svtid, &svattr, &server, NULL);
        if (errno)
                 fail("pthread_create");
        pthread_attr_init(&clattr);
        pthread_attr_setdetachstate(&clattr, PTHREAD_CREATE_JOINABLE);
pthread_attr_setinheritsched(&clattr, PTHREAD_EXPLICIT_SCHED);
        pthread_attr_setschedpolicy(&clattr, SCHED_FIF0);
        pthread_attr_setschedparam(&clattr, &clparam);
        errno = pthread_create(&cltid, &clattr, &client, NULL);
        if (errno)
                 fail("pthread_create");
        sigwait(&set, &sig);
        pthread_cancel(svtid);
        pthread_cancel(cltid);
        pthread_join(svtid, NULL);
pthread_join(cltid, NULL);
        return 0;
}
```

9.2 bufp-readwrite.c

/*

```
* Copyright (C) 2009 Philippe Gerum <rpm@xenomai.org>.
 * This library is free software; you can redistribute it and/or
 * modify it under the terms of the GNU Lesser General Public
 * License as published by the Free Software Foundation; either
   version 2 of the License, or (at your option) any later version.
 ^{\ast} This library is distributed in the hope that it will be useful,
 * but WITHOUT ANY WARRANTY; without even the implied warranty of
* MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU
 * Lesser General Public License for more details.
 * You should have received a copy of the GNU Lesser General Public
 * License along with this library; if not, write to the Free Software
 * Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.
 * BUFP-based client/server demo, using the read(2)/write(2)
   system calls to exchange data over a socket.
 * In this example, two sockets are created. A server thread (reader)
 * is bound to a real-time port and receives a stream of bytes sent to
 * this port from a client thread (writer).
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <pthread.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t svtid, cltid;
#define BUFP_SVPORT 12
static const char *msg[] = {
         "Surfing With The Alien",
         "Lords of Karma",
        "Banana Mango",
        "Psycho Monkey",
        "Luminous Flesh Giants",
         "Moroccan Sunset",
        "Satch Boogie",
        "Flying In A Blue Dream",
        "Ride",
         "Summer Song"
        "Speed Of Light",
        "Crystal Planet"
         "Raspberry Jam Delta-V",
        "Champagne?",
        "Clouds Race Across The Sky",
        "Engines Of Creation"
}:
static void fail(const char *reason)
{
        perror(reason);
        exit(EXIT_FAILURE);
}
static void *server(void *arg)
        struct sockaddr_ipc saddr;
        char buf[128];
        size_t bufsz;
        int ret. s:
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_BUFP);
                 fail("socket");
         * Set a 16k buffer for the server endpoint. This
         * configuration must be done prior to binding the socket to a
        bufsz = 16384; /* bytes */
        ret = setsockopt(s, SOL_BUFP, BUFP_BUFSZ,
                          &bufsz, sizeof(bufsz));
        if (ret)
                 fail("setsockopt");
        saddr.sipc_family = AF_RTIPC;
saddr.sipc_port = BUFP_SVPORT;
        ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
```

```
if (ret)
                 fail("bind");
        for (;;) {
                 ret = read(s, buf, sizeof(buf));
if (ret < 0) {</pre>
                          close(s);
                          fail("read");
                 }
        return NULL;
}
static void *client(void *arg)
{
        struct sockaddr_ipc svsaddr;
         int ret, s, n = 0, len;
        struct timespec ts;
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_BUFP);
        if (s < 0)
                 fail("socket");
        memset(&svsaddr, 0, sizeof(svsaddr));
        svsaddr.sipc_family = AF_RTIPC;
svsaddr.sipc_port = BUFP_SVPORT;
        ret = connect(s, (struct sockaddr *)&svsaddr, sizeof(svsaddr));
        if (ret)
                 fail("connect");
         for (;;) {
                 len = strlen(msg[n]);
                 ret = write(s, msg[n], len);
                 if (ret < 0) {</pre>
                          close(s);
                          fail("write");
                 }
                 /*

* We run in full real-time mode (i.e. primary mode),
                  \ensuremath{^{*}} so we have to let the system breathe between two
                  * iterations.
                 ts.tv sec = 0:
                 ts.tv_nsec = 500000000; /* 500 ms */
                 clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
        return NULL;
}
int main(int argc, char **argv)
{
        struct sched_param svparam = {.sched_priority = 71 };
struct sched_param clparam = {.sched_priority = 70 };
        pthread_attr_t svattr, clattr;
        sigset_t set;
         int sig;
         sigemptyset(&set);
        sigaddset(&set, SIGINT);
        sigaddset(&set, SIGTERM);
sigaddset(&set, SIGHUP);
        pthread_sigmask(SIG_BLOCK, &set, NULL);
        pthread_attr_init(&svattr);
        {\tt pthread\_attr\_setdetachstate(\&svattr, PTHREAD\_CREATE\_JOINABLE);}
        pthread_attr_setinheritsched(&svattr, PTHREAD_EXPLICIT_SCHED);
pthread_attr_setschedpolicy(&svattr, SCHED_FIF0);
        pthread_attr_setschedparam(&svattr, &svparam);
        errno = pthread_create(&svtid, &svattr, &server, NULL);
                 fail("pthread_create");
        pthread_attr_init(&clattr);
        pthread_attr_setdetachstate(&clattr, PTHREAD_CREATE_JOINABLE);
        pthread_attr_setinheritsched(&clattr, PTHREAD_EXPLICIT_SCHED);
        pthread_attr_setschedpolicy(&clattr, SCHED_FIF0);
        pthread_attr_setschedparam(&clattr, &clparam);
         errno = pthread_create(&cltid, &clattr, &client, NULL);
```

9.3 can-rtt.c

```
Round-Trip-Time Test - sends and receives messages and measures the
                            time in between.
   Copyright (C) 2006 Wolfgang Grandegger <wg@grandegger.com>
   Based on RTnet's examples/xenomai/posix/rtt-sender.c.
   Copyright (C) 2002 Ulrich Marx <marx@kammer.uni-hannover.de>
                  2002 Marc Kleine-Budde <kleine-budde@gmx.de>
                  2006 Jan Kiszka <jan.kiszka@web.de>
 * This program is free software; you can redistribute it and/or modify
* it under the terms of the GNU General Public License as published by
   the Free Software Foundation; either version 2 of the License, or
   (at your option) any later version.
 * This program is distributed in the hope that it will be useful,
 * but WITHOUT ANY WARRANTY; without even the implied warranty of
   MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
   GNU General Public License for more details.
   You should have received a copy of the GNU General Public License
   along with this program; if not, write to the Free Software
   Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.
 * The program sends out CAN messages periodically and copies the current
 * time-stamp to the payload. At reception, that time-stamp is compared
 \ensuremath{^{*}} with the current time to determine the round-trip time. The jitter
 * values are printer out regularly. Concurrent tests can be carried out
 \ensuremath{^{*}} by starting the program with different message identifiers. It is also
 * possible to use this program on a remote system as simple repeater to
   loopback messages.
#include <errno.h>
#include <mqueue.h>
#include <signal.h>
#include <pthread.h>
#include <stdio.h>
#include <stdlib.h>
#include <string.h>
#include <unistd.h>
#include <limits.h>
#include <getopt.h>
#include <memory.h>
#include <netinet/in.h>
#include <net/if.h>
#include <sys/ioctl.h>
#include <rtdm/can.h>
#include <xenomai/init.h>
#define NSEC_PER_SEC 1000000000
static unsigned int cycle = 10000; /* 10 ms */
static canid_t can_id = 0x1;
static pthread_t txthread, rxthread;
static int txsock, rxsock;
static mqd_t mq;
static int txcount, rxcount;
static int overruns;
static int repeater;
struct rtt_stat {
    long long rtt;
```

9.3 can-rtt.c 697

```
long long rtt_min;
    long long rtt_max;
    long long rtt_sum;
    long long rtt_sum_last;
    int counts_per_sec;
}:
void application_usage(void)
    get_program_name());
    fprintf(stderr,
           " -r, --repeater
" -i, --id=ID
                                              Repeater, send back received messages\n"
                                              CAN Identifier (default = 0x1)\n"
           " -c, --cycle
                                              Cycle time in us (default = 10000us)\n");
}
static void *transmitter(void *arg)
    struct sched_param param = { .sched_priority = 80 };
    struct timespec next_period;
    struct timespec time;
    struct can_frame frame;
    long long *rtt_time = (long long *)&frame.data, t;
    /* Pre-fill CAN frame */
    frame.can_id = can_id;
    frame.can_dlc = sizeof(*rtt_time);
    pthread_setname_np(pthread_self(), "rtcan_rtt_transmitter");
   pthread_setschedparam(pthread_self(), SCHED_FIFO, &param);
    clock_gettime(CLOCK_MONOTONIC, &next_period);
    while(1) {
       next_period.tv_nsec += cycle * 1000;
       while (next_period.tv_nsec >= NSEC_PER_SEC) {
               next_period.tv_nsec -= NSEC_PER_SEC;
               next_period.tv_sec++;
       }
       clock_nanosleep(CLOCK_MONOTONIC, TIMER_ABSTIME, &next_period, NULL);
       if (rxcount != txcount) {
           overruns++;
            continue;
       clock gettime(CLOCK MONOTONIC. &time):
       t = (long long)time.tv_sec * NSEC_PER_SEC + time.tv_nsec;
       memcpy(rtt_time, &t, sizeof(t));
        if (send(txsock, (void *)&frame, sizeof(struct can_frame), 0) < 0) {
   if (errno == EBADF)</pre>
               printf("terminating transmitter thread\n");
               perror("send failed");
           return NULL;
       txcount++:
   }
}
static void *receiver(void *arg)
    struct sched_param param = { .sched_priority = 82 };
    struct timespec time:
    struct can_frame frame;
    long long *rtt_time = (long long *)frame.data, t;
    struct rtt_stat rtt_stat = {0, 10000000000000000LL, -100000000000000000LL,
                               0, 0, 0};
    pthread_setname_np(pthread_self(), "rtcan_rtt_receiver");
   pthread_setschedparam(pthread_self(), SCHED_FIFO, &param);
    rtt_stat.counts_per_sec = 1000000 / cycle;
    while (1) {
       if (recv(rxsock, (void *)&frame, sizeof(struct can_frame), 0) < 0) {</pre>
           if (errno == EBADF)
               printf("terminating receiver thread\n");
            else
               perror("recv failed");
           return NULL;
       }
```

```
if (repeater) {
              /* Transmit the message back as is */
if (send(txsock, (void *)&frame, sizeof(struct can_frame), 0) < 0) {
   if (errno == EBADF)</pre>
                      printf("terminating transmitter thread\n");
                      perror("send failed");
                  return NULL;
             }
             txcount++;
         } else {
             memcpy(&t, rtt_time, sizeof(t));
              clock_gettime(CLOCK_MONOTONIC, &time);
              if (rxcount > 0) {
                  rtt_stat.rtt = ((long long)time.tv_sec * 1000000000LL +
                                    time.tv_nsec - t);
                  rtt_stat.rtt_sum += rtt_stat.rtt;
if (rtt_stat.rtt < rtt_stat.rtt_min)</pre>
                       rtt_stat.rtt_min = rtt_stat.rtt;
                  if (rtt_stat.rtt > rtt_stat.rtt_max)
                       rtt_stat.rtt_max = rtt_stat.rtt;
             }
         }
         rxcount++:
         if ((rxcount % rtt_stat.counts_per_sec) == 0) {
              mq_send(mq, (char *)&rtt_stat, sizeof(rtt_stat), 0);
             rtt_stat.rtt_sum_last = rtt_stat.rtt_sum;
    }
}
static void catch_signal(int sig)
{
    mq_close(mq);
    close(rxsock):
    close(txsock);
int main(int argc, char *argv[])
{
     struct sched_param param = { .sched_priority = 1 };
    pthread_attr_t thattr;
     struct mq_attr mqattr;
     struct sockaddr_can rxaddr, txaddr;
     struct can_filter rxfilter[1];
     struct rtt_stat rtt_stat;
    char mqname[32];
    char *txdev, *rxdev;
     struct can_ifreq ifr;
     int ret, opt;
    struct option long_options[] = {
    { "id", required_argument, 0, 'i'},
    { "cycle", required_argument, 0, 'c'},
    { "repeater", no_argument, 0, 'r'},
         { 0, 0, 0, 0},
    };
    switch (opt) {
             cycle = atoi(optarg);
             break;
         case 'i':
             can_id = strtoul(optarg, NULL, 0);
             break;
         case 'r':
             repeater = 1;
             break:
              fprintf(stderr, "Unknown option %c\n", opt);
              exit(-1);
         }
    }
    printf("%d %d\n", optind, argc);
if (optind + 2 != argc) {
         xenomai_usage();
         exit(0);
    }
```

9.3 can-rtt.c 699

```
txdev = argv[optind];
rxdev = argv[optind + 1];
/* Create and configure RX socket */
if ((rxsock = socket(PF_CAN, SOCK_RAW, CAN_RAW)) < 0) {</pre>
    perror("RX socket failed");
    return -1;
strncpy(ifr.ifr_name, rxdev, IFNAMSIZ);
printf("RX \ rxsock=\%d, \ ifr\_name=\%s\n", \ rxsock, \ ifr\_ifr\_name);
if (ioctl(rxsock, SIOCGIFINDEX, &ifr) < 0) {</pre>
    perror("RX ioctl SIOCGIFINDEX failed");
    goto failure1;
/* We only want to receive our own messages */
rxfilter[0].can_id = can_id;
rxfilter[0].can_mask = 0x3ff;
if (setsockopt(rxsock, SOL_CAN_RAW, CAN_RAW_FILTER,
               &rxfilter, sizeof(struct can_filter)) < 0) {</pre>
    perror("RX setsockopt CAN_RAW_FILTER failed");
    goto failure1;
memset(&rxaddr, 0, sizeof(rxaddr));
rxaddr.can_ifindex = ifr.ifr_ifindex;
rxaddr.can_family = AF_CAN;
if (bind(rxsock, (struct sockaddr *)&rxaddr, sizeof(rxaddr)) < 0) {</pre>
    perror("RX bind failed\n");
    goto failure1:
}
/* Create and configure TX socket */
if (strcmp(rxdev, txdev) == 0) {
    txsock = rxsock;
} else {
    if ((txsock = socket(PF_CAN, SOCK_RAW, 0)) < 0) {</pre>
        perror("TX socket failed");
        goto failure1;
    }
    strncpy(ifr.ifr_name, txdev, IFNAMSIZ);
    printf("TX txsock=%d, ifr_name=%s\n", txsock, ifr.ifr_name);
    if (ioctl(txsock, SIOCGIFINDEX, &ifr) < 0) {</pre>
        perror("TX ioctl SIOCGIFINDEX failed");
        goto failure2;
     /* Suppress definiton of a default receive filter list */
    if (setsockopt(txsock, SOL_CAN_RAW, CAN_RAW_FILTER, NULL, 0) < 0) {</pre>
        perror("TX setsockopt CAN_RAW_FILTER failed");
        goto failure2;
    memset(&txaddr, 0, sizeof(txaddr));
    txaddr.can_ifindex = ifr.ifr_ifindex;
    txaddr.can_family = AF_CAN;
    if (bind(txsock, (struct sockaddr *)&txaddr, sizeof(txaddr)) < 0) {
    perror("TX bind failed\n");</pre>
             goto failure2;
    }
}
signal(SIGTERM, catch_signal);
signal(SIGINT, catch signal):
signal(SIGHUP, catch_signal);
printf("Round-Trip-Time test %s -> %s with CAN ID 0x\%x\n",
argv[optind], argv[optind + 1], can_id);
printf("Cycle time: %d us\n", cycle);
printf("All RTT timing figures are in us.\n");
/* Create statistics message queue */
snprintf(mqname, sizeof(mqname), "/rtcan_rtt-%d", getpid());
mqattr.mq_flags = 0;
mqattr.mq_maxmsg = 100;
mqattr.mq_msgsize = sizeof(struct rtt_stat);
mq = mq_open(mqname, O_RDWR | O_CREAT | O_EXCL, 0600, &mqattr);
if (mq == (mqd_t)-1) {
    perror("opening mqueue failed");
    goto failure2;
}
```

}

```
/* Create receiver RT-thread */
   pthread_attr_init(&thattr);
   pthread_attr_setdetachstate(&thattr, PTHREAD_CREATE_JOINABLE);
   ret = pthread_create(&rxthread, &thattr, &receiver, NULL);
   if (ret) {
       fprintf(stderr, "%s: pthread_create(receiver) failed\n",
               strerror(-ret));
       goto failure3;
   }
   if (!repeater) {
       /* Create transitter RT-thread */
       ret = pthread_create(&txthread, &thattr, &transmitter, NULL);
           fprintf(stderr, "%s: pthread_create(transmitter) failed\n",
                   strerror(-ret));
           goto failure4;
       }
   }
   pthread_setschedparam(pthread_self(), SCHED_FIFO, &param);
   if (repeater)
      printf("Messages\n");
   else
       printf("Messages RTTlast RTT_avg RTT_min RTT_max Overruns\n");
   while (1) {
      long long rtt_avg;
       ret = mq_receive(mq, (char *)&rtt_stat, sizeof(rtt_stat), NULL);
       if (ret != sizeof(rtt_stat)) {
           if (ret < 0) {</pre>
               if (errno == EBADF)
                   printf("terminating mq_receive\n");
               else
                  perror("mq_receive failed");
               fprintf(stderr,
                        "mq_receive returned invalid length %d\n", ret);
           break;
       3
       if (repeater) {
           printf("%8d\n", rxcount);
       } else {
           rtt_avg = ((rtt_stat.rtt_sum - rtt_stat.rtt_sum_last) /
           rtt_stat.counts_per_sec);
printf("%8d %71d %71d %71d %8d\n", rxcount,
                  (long)(rtt_stat.rtt / 1000), (long)(rtt_avg / 1000),
                  (long)(rtt_stat.rtt_min / 1000),
                  (long)(rtt_stat.rtt_max / 1000),
                  overruns);
       }
  }
   /* This call also leaves primary mode, required for socket cleanup. */
  printf("shutting down\n");
   /* Important: First close the sockets! */
   close(rxsock);
   close(txsock);
   pthread_join(txthread, NULL);
  pthread_cancel(rxthread);
   pthread_join(rxthread, NULL);
   return 0;
failure4:
   pthread_cancel(rxthread);
   pthread_join(rxthread, NULL);
failure3:
   mq_close(mq);
failure2:
   close(txsock);
failure1:
  close(rxsock);
   return 1:
```

9.4 cross-link.c 701

9.4 cross-link.c

```
* cross-link.c
 * Userspace test program (Xenomai alchemy skin) for RTDM-based UART drivers * Copyright 2005 by Joerg Langenberg <joergel75@gmx.net>
 * Updates by Jan Kiszka <jan.kiszka@web.de>
 * This program is free software; you can redistribute it and/or modify
 * it under the terms of the GNU General Public License as published by
* the Free Software Foundation; either version 2 of the License, or
 * (at your option) any later version.
 * This program is distributed in the hope that it will be useful,
 * but WITHOUT ANY WARRANTY; without even the implied warranty of
 * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
 * GNU General Public License for more details.
 * You should have received a copy of the GNU General Public License
 * along with this program; if not, write to the Free Software
 * Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.
#include <stdio.h>
#include <signal.h>
#include <unistd.h>
#include <sys/mman.h>
#include <alchemy/task.h>
#include <alchemy/timer.h>
#include <rtdm/serial.h>
#define MAIN_PREFIX
                     "main : "
#define WTASK_PREFIX "write_task: "
#define RTASK_PREFIX "read_task:
                      "/dev/rtdm/rtser0"
#define WRITE FILE
                      "/dev/rtdm/rtser1"
#define READ_FILE
int read_fd = -1;
int write_fd = -1;
#define STATE_FILE_OPENED
#define STATE_TASK_CREATED
unsigned int read_state = 0;
unsigned int write_state = 0;
                              --s-ms-us-ns */
RTIME write_task_period_ns = 1000000000llu;
RT TASK write task:
RT_TASK read_task;
static const struct rtser_config read_config = {
        .config_mask
                         = 0xFFFF,
        .baud_rate
                           = 115200.
                           = RTSER_DEF_PARITY,
        .parity
        .data_bits
                          = RTSER_DEF_BITS,
        .stop_bits
                           = RTSER_DEF_STOPB,
        .handshake
                          = RTSER_DEF_HAND,
        .fifo\_depth
                          = RTSER_DEF_FIFO_DEPTH,
        .rx_timeout
                          = RTSER_DEF_TIMEOUT,
        .tx_timeout
                          = RTSER_DEF_TIMEOUT,
                           = 1000000000, /* 1 s
        .event timeout
        .timestamp_history = RTSER_RX_TIMESTAMP_HISTORY,
                           = RTSER_EVENT_RXPEND,
        .event_mask
.timestamp_history = RTSER_DEF_TIMESTAMP_HISTORY,
        /* the rest implicitly remains default */
};
static int close_file( int fd, char *name)
        int err, i=0;
        do {
                i++;
                err = close(fd);
                switch (err) {
                case -EAGAIN:
                        printf(MAIN\_PREFIX "%s -> EAGAIN (%d times)\n",
```

```
name, i);
                          rt_task_sleep(50000); /* wait 50us */
                 case 0:
                          printf(MAIN_PREFIX "%s -> closed\n", name);
                          break:
                 default:
                          printf(MAIN\_PREFIX "%s -> %s\n", name,
                                strerror(errno));
                          break:
                 }
        } while (err == -EAGAIN && i < 10);</pre>
}
static void cleanup_all(void)
{
        if (read_state & STATE_FILE_OPENED) {
                 close_file(read_fd, READ_FILE" (read)");
                 read_state &= ~STATE_FILE_OPENED;
        if (write_state & STATE_FILE_OPENED) {
    close_file(write_fd, WRITE_FILE " (write)");
                 write_state &= ~STATE_FILE_OPENED;
        if (write_state & STATE_TASK_CREATED) {
    printf(MAIN_PREFIX "delete write_task\n");
                 rt_task_delete(&write_task);
                 write_state &= ~STATE_TASK_CREATED;
        if (read_state & STATE_TASK_CREATED) {
    printf(MAIN_PREFIX "delete read_task\n");
                 rt_task_delete(&read_task);
                 read_state &= ~STATE_TASK_CREATED;
}
static void catch_signal(int sig)
        cleanup_all();
        printf(MAIN_PREFIX "exit\n");
}
static void write_task_proc(void *arg)
{
        int err;
        RTIME write_time;
        ssize_t sz = sizeof(RTIME);
        int written = 0;
        err = rt_task_set_periodic(NULL, TM_NOW,
                                     rt_timer_ns2ticks(write_task_period_ns));
                 printf(\mbox{WTASK\_PREFIX "error on set periodic, \%s\n",}
                         strerror(-err));
                 goto exit_write_task;
        }
        while (1) {
                 err = rt_task_wait_period(NULL);
                 if (err) {
                          printf(WTASK_PREFIX
                                  "error on rt_task_wait_period, %s\n",
                                 strerror(-err)):
                          break;
                 }
                 write_time = rt_timer_read();
                 written = write(write_fd, &write_time, sz);
                 if (written < 0 ) {</pre>
                          printf(WTASK_PREFIX "error on write, %s\n",
                                 strerror(errno));
                          break:
                 } else if (written != sz) {
                          printf(WTASK_PREFIX "only %d / %zd byte transmitted\n",
                                 written, sz);
                          break;
                 }
        }
 exit_write_task:
```

9.4 cross-link.c 703

```
if ((write_state & STATE_FILE_OPENED) &&
    close_file(write_fd, WRITE_FILE " (write)") == 0)
                  write_state &= ~STATE_FILE_OPENED;
         printf(WTASK_PREFIX "exit\n");
}
static void read_task_proc(void *arg)
         int err;
         int nr = 0;
         RTIME read_time = 0;
         RTIME write_time = 0;
         RTIME irq_time = 0;
         ssize_t sz = sizeof(RTIME);
         int rd = 0;
         struct rtser event rx event:
         printf(" Nr | write->irq | irq->read | write->read |\n");
         printf("----
          \ensuremath{^{*}} We are in secondary mode now due to printf, the next
          * blocking Xenomai or driver call will switch us back
            (here: RTSER_RTIOC_WAIT_EVENT).
         while (1) {
    /* waiting for event */
    err = ioctl(read_fd, RTSER_RTIOC_WAIT_EVENT, &rx_event);
                  if (err) {
                           printf(RTASK_PREFIX
                                    "error on RTSER_RTIOC_WAIT_EVENT, %s\n",
                                   strerror(errno));
                            if (err == -ETIMEDOUT)
                                    continue;
                           break;
                  irq_time = rx_event.rxpend_timestamp;
                  rd = read(read_fd, &write_time, sz);
                  if (rd == sz) {
                           read_time = rt_timer_read();
printf("%3d |%16llu |%16llu |%16llu\n", nr,
                                   irq_time - write_time,
read_time - irq_time,
read_time - write_time);
                           nr++;
                  } else if (rd < 0 ) {</pre>
                           printf(RTASK_PREFIX "error on read, code %s\n",
                                   strerror(errno));
                  } else {
                           rd, sz);
break;
                           printf(RTASK_PREFIX "only %d / %zd byte received \n",
         if ((read_state & STATE_FILE_OPENED) &&
    close_file(read_fd, READ_FILE " (read)") == 0)
        read_state &= ~STATE_FILE_OPENED;
         printf(RTASK_PREFIX "exit\n");
}
int main(int argc, char* argv[])
         int err = 0;
         signal(SIGTERM, catch_signal);
         signal(SIGINT, catch_signal);
         /* open rtser0 */
         write_fd = open( WRITE_FILE, 0);
         if (write_fd < 0) {</pre>
                 printf(MAIN_PREFIX "can't open %s (write), %s\n", WRITE_FILE,
                          strerror(errno));
                  goto error;
         write_state |= STATE_FILE_OPENED;
         printf(MAIN_PREFIX "write-file opened\n");
         /* writing write-config */
         err = ioctl(write_fd, RTSER_RTIOC_SET_CONFIG, &write_config);
         if (err) {
                  printf(MAIN_PREFIX "error while RTSER_RTIOC_SET_CONFIG, %s\n",
```

```
strerror(errno));
               goto error;
       printf(MAIN_PREFIX "write-config written\n");
       /* open rtser1 */
       read_fd = open( READ_FILE, 0 );
       if (read_fd < 0) {</pre>
              printf(MAIN_PREFIX "can't open %s (read), %s\n", READ_FILE,
                      strerror(errno));
               goto error:
       read_state |= STATE_FILE_OPENED;
       printf(MAIN_PREFIX "read-file opened\n");
       /* writing read-config */
       err = ioctl(read_fd, RTSER_RTIOC_SET_CONFIG, &read_config);
       if (err) {
               printf(MAIN_PREFIX "error while ioctl, %s\n",
                      strerror(errno));
       printf(MAIN_PREFIX "read-config written\n");
       /* create write_task */
       err = rt_task_create(&write_task, "write_task", 0, 50, 0);
       if (err) {
               printf(MAIN_PREFIX "failed to create write_task, %s\n",
                      strerror(-err));
               goto error:
       write_state |= STATE_TASK_CREATED;
       printf(MAIN_PREFIX "write-task created\n");
       /* create read_task */
       err = rt_task_create(&read_task, "read_task", 0, 51, 0);
       if (err) {
               printf(MAIN_PREFIX "failed to create read_task, %s\n",
                      strerror(-err));
               goto error;
       read_state |= STATE_TASK_CREATED;
       printf(MAIN_PREFIX "read-task created\n");
       /* start write_task */
printf(MAIN_PREFIX "starting write-task\n");
       err = rt_task_start(&write_task, &write_task_proc, NULL);
       if (err) {
               printf(MAIN_PREFIX "failed to start write_task, %s\n",
                      strerror(-err)):
               goto error;
       /* start read_task */
printf(MAIN_PREFIX "starting read-task\n");
       err = rt_task_start(&read_task,&read_task_proc,NULL);
               printf(MAIN_PREFIX "failed to start read_task, %s\n",
                      strerror(-err));
               goto error;
       3
       for (;;)
               pause();
       return 0;
error:
       cleanup_all();
       return err;
```

9.5 iddp-label.c

```
/*

* Copyright (C) 2009 Philippe Gerum <rpm@xenomai.org>.

*

* This library is free software; you can redistribute it and/or

* modify it under the terms of the GNU Lesser General Public

* License as published by the Free Software Foundation; either

* version 2 of the License, or (at your option) any later version.
```

9.5 iddp-label.c 705

```
* This library is distributed in the hope that it will be useful,
 * but WITHOUT ANY WARRANTY; without even the implied warranty of

* MERCHANTABILITY Or FITNESS FOR A PARTICULAR PURPOSE. See the GNU
 * Lesser General Public License for more details.
 ^{st} You should have received a copy of the GNU Lesser General Public
 * License along with this library; if not, write to the Free Software
 * Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.
 * IDDP-based client/server demo, using the write(2)/recvfrom(2)
   system calls to exchange data over a socket.
 * In this example, two sockets are created. A server thread (reader)
 ^{st} is bound to a labeled real-time port and receives datagrams sent to
 * this port from a client thread (writer). The client thread attaches
 * to the port opened by the server using a labeled connection
 * request. The client socket is bound to a different port, only to
 * provide a valid peer name; this is optional.
 ^{\star} ASCII labels can be attached to bound ports, in order to connect
 * sockets to them in a more descriptive way than using plain numeric
 * port values.
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <pthread.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t svtid, cltid;
#define IDDP_CLPORT 27
#define IDDP_PORT_LABEL "iddp-demo"
static const char *msg[] = {
     "Surfing With The Alien",
    "Lords of Karma",
    "Banana Mango",
    "Psycho Monkey"
    "Luminous Flesh Giants",
    "Moroccan Sunset",
    "Satch Boogie"
    "Flying In A Blue Dream",
    "Ride",
    "Summer Song",
    "Speed Of Light",
    "Crystal Planet"
    "Raspberry Jam Delta-V", "Champagne?",
    "Clouds Race Across The Sky",
    "Engines Of Creation"
static void fail(const char *reason)
{
        perror(reason);
        exit(EXIT_FAILURE);
static void *server(void *arg)
        struct sockaddr_ipc saddr, claddr;
        struct rtipc_port_label plabel;
        socklen_t addrlen;
        char buf[128];
        int ret, s;
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_IDDP);
        /*
    * We will use Xenomai's system heap for datagram, so no
    * IDDP_POOLSZ required here.
        /*

* Set a port label. This name will be registered when

the port number (if given).
         * binding, in addition to the port number (if given).
        strcpy(plabel.label, IDDP_PORT_LABEL);
```

```
ret = setsockopt(s, SOL_IDDP, IDDP_LABEL,
                           &plabel, sizeof(plabel));
        if (ret)
                 fail("setsockopt");
          * Bind the socket to the port. Assign that port a label, so
          * that peers may use a descriptive information to locate
          \mbox{\ensuremath{\scriptsize{\star}}} it. Labeled ports will appear in the
          * /proc/xenomai/registry/rtipc/iddp directory once the socket
          * is bound.
          * saddr.sipc_port specifies the port number to use. If -1 is
          * passed, the IDDP driver will auto-select an idle port.
        saddr.sipc_family = AF_RTIPC;
saddr.sipc_port = -1;    /* Pick next free */
ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
        if (ret)
                 fail("bind");
        for (;;) {
                 addrlen = sizeof(saddr);
                 if (ret < 0) {</pre>
                          close(s);
                          fail("recvfrom");
                 printf("%s: received %d bytes, \"%.*s\" from port %d\n",
                            __FUNCTION__, ret, ret, buf, claddr.sipc_port);
        return NULL;
}
static void *client(void *arg)
         struct sockaddr_ipc svsaddr, clsaddr;
         struct rtipc_port_label plabel;
        int ret, s, n = 0, len;
        struct timespec ts;
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_IDDP);
        if (s < 0)
                 fail("socket");
        /*

* Set a name on the client socket. This is strictly optional,

* and only done here for the purpose of getting back a
          * different port number in recvfrom().
        clsaddr.sipc_family = AF_RTIPC;
        clsaddr.sipc_port = IDDP_CLPORT;
ret = bind(s, (struct sockaddr *)&clsaddr, sizeof(clsaddr));
        if (ret)
                 fail("bind");
        /*

* Set the port label. This name will be used to find the peer
         * when connecting, instead of the port number. The label must

* be set _after_ the socket is bound to the port, so that
          * IDDP does not try to register this label for the client port as well (like the server thread did).
        if (ret)
                 fail("setsockopt");
        memset(&svsaddr, 0, sizeof(svsaddr));
        ret = connect(s, (struct sockaddr *)&svsaddr, sizeof(svsaddr));
         if (ret)
                 fail("connect");
         for (;;) {
                 len = strlen(msq[n]):
                 /* Send to default destination we connected to. */
                 ret = write(s, msg[n], len);
                 if (ret < 0) {</pre>
                          close(s);
                          fail("sendto");
                 printf("%s: sent %d bytes, \"%.*s\"\n",
```

9.6 iddp-sendrecv.c 707

```
_FUNCTION__, ret, ret, msg[n]);
                  n = (n + 1) \% (sizeof(msg) / sizeof(msg[0]));
                   \mbox{\ensuremath{^{\circ}}} We run in full real-time mode (i.e. primary mode),
                   \ensuremath{^{*}} so we have to let the system breathe between two
                   * iterations.
                  ts.tv_nsec = 500000000; /* 500 ms */
                  clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
         return NULL;
}
int main(int argc, char **argv)
         struct sched_param svparam = {.sched_priority = 71 };
struct sched_param clparam = {.sched_priority = 70 };
         pthread_attr_t svattr, clattr;
         sigset_t set;
         int sig;
         sigemptyset(&set);
         sigaddset(&set, SIGINT);
         sigaddset(&set, SIGTERM);
         sigaddset(&set, SIGHUP);
         pthread_sigmask(SIG_BLOCK, &set, NULL);
         pthread_attr_init(&svattr);
         pthread_attr_setdetachstate(&svattr, PTHREAD_CREATE_JOINABLE);
         pthread_attr_setinheritsched(&svattr, PTHREAD_EXPLICIT_SCHED);
         pthread_attr_setschedpolicy(&svattr, SCHED_FIF0);
         pthread_attr_setschedparam(&svattr, &svparam);
         errno = pthread_create(&svtid, &svattr, &server, NULL);
         if (errno)
                  fail("pthread_create");
         pthread_attr_init(&clattr);
         pthread_attr_setdetachstate(&clattr, PTHREAD_CREATE_JOINABLE);
         pthread_attr_setinheritsched(&clattr, PTHREAD_EXPLICIT_SCHED);
pthread_attr_setschedpolicy(&clattr, SCHED_FIF0);
         pthread_attr_setschedparam(&clattr, &clparam);
         errno = pthread_create(&cltid, &clattr, &client, NULL);
         if (errno)
                  fail("pthread_create");
         sigwait(&set. &sig):
         pthread_cancel(svtid);
         pthread_cancel(cltid);
         pthread_join(svtid, NULL);
         pthread_join(cltid, NULL);
         return 0:
```

9.6 iddp-sendrecv.c

```
/*

* Copyright (C) 2009 Philippe Gerum <rpm@xenomai.org>.

* This library is free software; you can redistribute it and/or

* modify it under the terms of the GNU Lesser General Public

* License as published by the Free Software Foundation; either

* version 2 of the License, or (at your option) any later version.

* This library is distributed in the hope that it will be useful,

* but WITHOUT ANY WARRANTY; without even the implied warranty of

* MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU

* Lesser General Public License for more details.

* You should have received a copy of the GNU Lesser General Public

* License along with this library; if not, write to the Free Software

* Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

* IDDP-based client/server demo, using the sendto(2)/recvfrom(2)

* system calls to exchange data over a socket.
```

```
* In this example, two sockets are created. A server thread (reader)
 * is bound to a real-time port and receives datagrams sent to this
 * port from a client thread (writer). The client socket is bound to a
 * different port, only to provide a valid peer name; this is
 * optional.
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <pthread.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t svtid, cltid;
#define IDDP_SVPORT 12
#define IDDP_CLPORT 13
static const char *msg[] = {
         "Surfing With The Alien",
"Lords of Karma",
"Banana Mango",
"Psycho Monkey",
         "Luminous Flesh Giants",
          "Moroccan Sunset",
         "Satch Boogie",
         "Flying In A Blue Dream",
         "Ride",
"Summer Song"
         "Speed Of Light",
         "Crystal Planet"
          "Raspberry Jam Delta-V",
         "Champagne?",
"Clouds Race Across The Sky",
         "Engines Of Creation"
};
static void fail(const char *reason)
         perror(reason):
         exit(EXIT_FAILURE);
}
static void *server(void *arg)
         struct sockaddr_ipc saddr, claddr;
         socklen_t addrlen;
         char buf[128];
         size_t poolsz;
         int ret, s;
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_IDDP);
         if (s < 0)
                  fail("socket");
         /*
    * Set a local 32k pool for the server endpoint. Memory needed
    * to convey datagrams will be pulled from this pool, instead
    * of Xenomai's system pool.
         poolsz = 32768; /* bytes */
         ret = setsockopt(s, SOL_IDDP, IDDP_POOLSZ,
                             &poolsz, sizeof(poolsz));
         if (ret)
                  fail("setsockopt");
         saddr.sipc_family = AF_RTIPC;
         saddr.sipc_port = IDDP_SVPORT;
         ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
         if (ret)
                  fail("bind");
         for (;;) {
                   addrlen = sizeof(saddr);
                  ret = recvfrom(s, buf, sizeof(buf), 0,
                                    (struct sockaddr *)&claddr, &addrlen);
                  if (ret < 0) {
     close(s);</pre>
                            fail("recvfrom");
                  printf("%s: received %d bytes, \"%.*s\" from port %d\n",
    __FUNCTION__, ret, ret, buf, claddr.sipc_port);
         }
         return NULL;
```

9.6 iddp-sendrecv.c 709

```
}
static void *client(void *arg)
         struct sockaddr_ipc svsaddr, clsaddr;
         int ret, s, n = 0, len;
         struct timespec ts;
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_IDDP);
         if (s < 0)
                 fail("socket"):
         clsaddr.sipc_family = AF_RTIPC;
clsaddr.sipc_port = IDDP_CLPORT;
         ret = bind(s, (struct sockaddr *)&clsaddr, sizeof(clsaddr));
                 fail("hind"):
         svsaddr.sipc_family = AF_RTIPC;
         svsaddr.sipc_port = IDDP_SVPORT;
         for (;;) {
                 len = strlen(msg[n]);
                 ret = sendto(s, msg[n], len, 0,
                                (struct sockaddr *)&svsaddr, sizeof(svsaddr));
                  if (ret < 0) {
                          close(s);
                          fail("sendto");
                 printf("%s: sent %d bytes, \"%.*s\"\n",
                           _FUNCTION__, ret, ret, msg[n]);
                 n = (n + 1) \% (sizeof(msg) / sizeof(msg[0]));
                 /*

* We run in full real-time mode (i.e. primary mode),

* The system breathe between two
                  \mbox{*} iterations.
                 ts.tv_sec = 0;
                 ts.tv_nsec = 500000000; /* 500 ms */
                 clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
        return NULL:
}
int main(int argc, char **argv)
         struct sched_param svparam = {.sched_priority = 71 };
         struct sched_param clparam = {.sched_priority = 70 };
         pthread_attr_t svattr, clattr;
         sigset t set:
         int sig;
         sigemptyset(&set);
         sigaddset(&set, SIGINT);
sigaddset(&set, SIGTERM);
         sigaddset(&set, SIGHUP);
         pthread_sigmask(SIG_BLOCK, &set, NULL);
         pthread_attr_init(&svattr);
         {\tt pthread\_attr\_setdetachstate(\&svattr, PTHREAD\_CREATE\_JOINABLE);}
        pthread_attr_setinheritsched(&svattr, PTHREAD_EXPLICIT_SCHED);
pthread_attr_setschedpolicy(&svattr, SCHED_FIF0);
         pthread_attr_setschedparam(&svattr, &svparam);
         errno = pthread_create(&svtid, &svattr, &server, NULL);
         if (errno)
                 fail("pthread_create");
         pthread attr init(&clattr):
         pthread_attr_setdetachstate(&clattr, PTHREAD_CREATE_JOINABLE);
         pthread_attr_setinheritsched(&clattr, PTHREAD_EXPLICIT_SCHED); pthread_attr_setschedpolicy(&clattr, SCHED_FIF0);
         pthread_attr_setschedparam(&clattr, &clparam);
         errno = pthread_create(&cltid, &clattr, &client, NULL);
         if (errno)
                 fail("pthread_create");
         sigwait(&set, &sig);
         pthread_cancel(svtid):
         pthread_cancel(cltid);
         pthread_join(svtid, NULL);
         pthread_join(cltid, NULL);
         return 0;
}
```

9.7 rtcanconfig.c

```
* Program to configuring the CAN controller
   Copyright (C) 2006 Wolfgang Grandegger <wg@grandegger.com>
   Copyright (C) 2005, 2006 Sebastian Smolorz
                               <Sebastian.Smolorz@stud.uni-hannover.de>
 * This program is free software; you can redistribute it and/or modify
 * it under the terms of the GNU General Public License as published by
   the Free Software Foundation; either version 2 of the License, or
   (at your option) any later version.
 * This program is distributed in the hope that it will be useful,
 * but WITHOUT ANY WARRANTY; without even the implied warranty of
  * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
 * GNU General Public License for more details.
 \mbox{\scriptsize *} You should have received a copy of the GNU General Public License
 * along with this program; if not, write to the Free Software
 * Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.
#include <stdio.h>
#include <stdlib.h>
#include <signal.h>
#include <unistd.h>
#include <string.h>
#include <time.h>
#include <errno.h>
#include <getopt.h>
#include <sys/mman.h>
#include <rtdm/can.h>
static void print_usage(char *prg)
    fprintf(stderr,
             "Usage: %s <can-interface> [Options] [up|down|start|stop|sleep]\n"
             "Options:\n"
             " -v, --verbose
                                           be verbose\n'
             " -h, --help
                                           this help\n"
             " -c, --ctrlmode=CTRLMODE listenonly, loopback or none\n"
             " -b, --baudrate=BPS
                                           baudrate in bits/sec\n"
             "-B, --bittime=BTR0:BTR1 BTR or standard bit-time\n"
             "-B, --bittime=BRP:PROP_SEG:PHASE_SEG1:PHASE_SEG2:SJW:SAM\n",
             prg);
}
static can_baudrate_t string_to_baudrate(char *str)
    can_baudrate_t baudrate;
if (sscanf(str, "%i", &baudrate) != 1)
         return -1:
    return baudrate;
}
static int string_to_mode(char *str)
    if (!strcmp(str, "up") || !strcmp(str, "start") )
    return CAN_MODE_START;
    else if ( !strcmp(str, "down") || !strcmp(str, "stop") )
         return CAN_MODE_STOP;
    else if ( !strcmp(str, "sleep") )
        return CAN_MODE_SLEEP;
    return -EINVAL;
static int string_to_ctrlmode(char *str)
    if (!strcmp(str, "listenonly") )
    return CAN_CTRLMODE_LISTENONLY;
else if (!strcmp(str, "loopback") )
    return CAN_CTRLMODE_LOOPBACK;
    else if ( !strcmp(str, "none") )
         return 0;
    return -1;
}
int main(int argc, char *argv[])
{
```

9.7 rtcanconfig.c 711

```
char
        ifname[16];
        can_fd = -1;
int
int
        new_baudrate = -1;
int
        new\_mode = -1;
int
        new_ctrlmode = 0, set_ctrlmode = 0;
        verbose = 0;
int
        bittime_count = 0, bittime_data[6];
int
struct can_ifreq ifr;
struct can_bittime *bittime;
int opt, ret;
char* ptr;
while ((opt = getopt_long(argc, argv, "hvb:B:c:",
                          long_options, NULL)) != -1) {
    switch (opt) {
    case 'h':
       print_usage(argv[0]);
        exit(0);
    case 'v':
        verbose = 1:
        break:
    case 'b':
        new_baudrate = string_to_baudrate(optarg);
        if (new_baudrate == -1) {
            print_usage(argv[0]);
            exit(0);
        break;
    case 'B':
       ptr = optarg;
while (1) {
   bittime_data[bittime_count++] = strtoul(ptr, NULL, 0);
            if (!(ptr = strchr(ptr, ':')))
            ptr++;
        if (bittime_count != 2 && bittime_count != 6) {
            print_usage(argv[0]);
            exit(0);
        break;
    case 'c':
        ret = string_to_ctrlmode(optarg);
        if (ret == -1) {
            print_usage(argv[0]);
            exit(0);
        new_ctrlmode |= ret;
        set_ctrlmode = 1;
        break;
        break;
        fprintf(stderr, "Unknown option %c\n", opt);
        break:
}
/* Get CAN interface name */
if (optind != argc - 1 && optind != argc - 2) {
    print_usage(argv[0]);
    return 0;
strncpy(ifname, argv[optind], IFNAMSIZ);
strncpy(ifr.ifr_name, ifname, IFNAMSIZ);
                            /* Get mode setting */
if (optind == argc - 2) {
    new_mode = string_to_mode(argv[optind + 1]);
    if (verbose)
        printf("mode: %s (\%#x)\n", argv[optind + 1], new\_mode);
    if (new_mode < 0) {</pre>
        print_usage(argv[0]);
```

}

```
return 0;
   }
   can_fd = socket(PF_CAN, SOCK_RAW, CAN_RAW);
   if (can fd < 0) {</pre>
       fprintf(stderr, "Cannot open RTDM CAN socket. Maybe driver not loaded? \n");
       return can_fd;
   ret = ioctl(can_fd, SIOCGIFINDEX, &ifr);
   if (ret) {
       fprintf(stderr, "Can't get interface index for %s, errno = %d\n", ifname, errno);
   if (new_baudrate != -1) {
       if (verbose)
            printf("baudrate: %d\n", new_baudrate);
       ifr.ifr_ifru.baudrate = new_baudrate;
       ret = ioctl(can_fd, SIOCSCANBAUDRATE, &ifr);
       if (ret) {
            goto abort;
   }
   if (bittime_count) {
       bittime = &ifr.ifr_ifru.bittime;
       if (bittime_count == 2) {
  bittime->type = CAN_BITTIME_BTR;
  bittime->btr.btr0 = bittime_data[0];
            bittime->btr.btr1 = bittime_data[1];
            if (verbose)
                printf("bit-time: btr0=0x%02x btr1=0x%02x\n",
                        bittime->btr.btr0, bittime->btr.btr1);
       } else {
            bittime->type = CAN_BITTIME_STD;
            bittime->std.brp = bittime_data[0];
            bittime->std.prop_seg = bittime_data[1];
            bittime->std.phase_seg1 = bittime_data[2];
bittime->std.phase_seg2 = bittime_data[3];
bittime->std.sjw = bittime_data[4];
            bittime->std.sam = bittime_data[5];
            if (verbose)
                printf("bit-time: brp=%d prop_seg=%d phase_seg1=%d "
                        "phase_seg2=%d sjw=%d sam=%d\n",
                        bittime->std.brp,
                        bittime->std.prop_seg,
                        bittime->std.phase_seg1,
                        bittime->std.phase_seg2,
                        bittime->std.sjw,
                        bittime->std.sam);
       }
       ret = ioctl(can_fd, SIOCSCANCUSTOMBITTIME, &ifr);
       if (ret) {
            goto abort;
       }
   }
   if (set_ctrlmode != 0) {
       ifr.ifr_ifru.ctrlmode = new_ctrlmode;
       if (verbose)
           printf("ctrlmode: %#x\n", new_ctrlmode);
       ret = ioctl(can_fd, SIOCSCANCTRLMODE, &ifr);
       if (ret) {
            goto abort:
   }
   if (new_mode != -1) {
       ifr.ifr_ifru.mode = new_mode;
       ret = ioctl(can_fd, SIOCSCANMODE, &ifr);
       if (ret) {
           goto abort;
   }
   close(can_fd);
   return 0;
abort:
   close(can_fd);
   return ret;
```

9.8 rtcanrecv.c 713

9.8 rtcanrecv.c

```
#include <stdio.h>
#include <stdlib.h>
#include <signal.h>
#include <unistd.h>
#include <time.h>
#include <errno.h>
#include <getopt.h>
#include <alchemy/task.h>
#include <rtdm/can.h>
static void print_usage(char *prg)
     fprintf(stderr,
              "Usage: %s [<can-interface>] [Options]\n"
              "Options:\n"
             " -f --filter=id:mask[:id:mask]... apply filter\n"
" -e --error=mask receive error messages\n"
             " -t, --timeout=MS
                                         timeout in ms \backslash n"
              " -T, --timestamp
                                         with absolute timestamp\n''
                                        with absolute timestamp\n" with relative timestamp\n" be verbose\n" print every MODULO message\n" this help\n",
              " -R, --timestamp-rel
              " -v, --verbose
             " -p, --print=MODULO
" -h, --help
             prg);
extern int optind, opterr, optopt;
static int s = -1, verbose = 0, print = 1;
static nanosecs_rel_t timeout = 0, with_timestamp = 0, timestamp_rel = 0;
RT_TASK rt_task_desc;
#define BUF_SIZ 255
#define MAX_FILTER 16
struct sockaddr_can recv_addr;
struct can_filter recv_filter[MAX_FILTER];
static int filter_count = 0;
static int add_filter(u_int32_t id, u_int32_t mask)
{
    if (filter_count >= MAX_FILTER)
    recv_filter[filter_count].can_id = id;
recv_filter[filter_count].can_mask = mask;
    printf("Filter #%d: id=0x%08x mask=0x%08x\n", filter_count, id, mask);
    filter_count++;
     return 0;
}
static void cleanup(void)
    int ret;
    if (verbose)
         printf("Cleaning up...\n");
    if (s >= 0) {
         ret = close(s);
         s = -1;
         if (ret) {
              fprintf(stderr, "close: %s\n", strerror(-ret));
         exit(EXIT_SUCCESS);
    }
}
static void cleanup_and_exit(int sig)
    if (verbose)
         printf("Signal %d received\n", sig);
    cleanup();
    exit(0);
}
static void rt_task(void)
     int i, ret, count = 0;
    struct can_frame frame;
```

}

```
struct sockaddr_can addr;
    socklen_t addrlen = sizeof(addr);
    struct msghdr msg;
    struct iovec iov;
    nanosecs_abs_t timestamp, timestamp_prev = 0;
    if (with_timestamp) {
         msg.msg_iov = &iov;
         msg.msg_iovlen = 1;
         msg.msg_name = (void *)&addr;
         msg.msg_namelen = sizeof(struct sockaddr_can);
msg.msg_control = (void *)&timestamp;
         msg.msg_controllen = sizeof(nanosecs_abs_t);
    while (1) {
         if (with_timestamp) {
             iov.iov_base = (void *)&frame;
iov.iov_len = sizeof(can_frame_t);
             ret = recvmsg(s, &msg, 0);
             ret = recvfrom(s, (void *)&frame, sizeof(can_frame_t), 0,
                                        (struct sockaddr *)&addr, &addrlen);
         if (ret < 0) {
             switch (ret) {
              case -ETIMEDOUT:
                  if (verbose)
                      printf("recv: timed out");
                  continue;
              case -EBADF:
                  if (verbose)
                       printf("recv: aborted because socket was closed");
                  break;
             default:
                  fprintf(stderr, "recv: %s\n", strerror(-ret));
             }
             break:
         if (print && (count % print) == 0) {
   printf("#%d: (%d) ", count, addr.can_ifindex);
   if (with_timestamp && msg_controllen) {
                  if (timestamp_rel) {
printf("%11dns ", (long long)(timestamp - timestamp_prev));
                       timestamp_prev = timestamp;
                       printf("%1ldns ", (long long)timestamp);
              if (frame.can_id & CAN_ERR_FLAG)
                  printf("!0x%08x!", frame.can_id & CAN_ERR_MASK);
              else if (frame.can_id & CAN_EFF_FLAG)
                  printf("<0x%08x>", frame.can_id & CAN_EFF_MASK);
                  printf("<0x\%03x>", frame.can_id & CAN_SFF_MASK);
             printf(" [%d]", frame.can_dlc);
              if (!(frame.can_id & CAN_RTR_FLAG))
                   for (i = 0; i < frame.can_dlc; i++) {</pre>
                       printf(" %02x", frame.data[i]);
              if (frame.can id & CAN ERR FLAG) {
                  printf(" ERROR ");
                   if (frame.can_id & CAN_ERR_BUSOFF)
                       printf("bus-off");
                   if (frame.can_id & CAN_ERR_CRTL)
             printf("controller problem");
} else if (frame.can_id & CAN_RTR_FLAG)
printf(" remote request");
             printf("\n");
         count++;
    }
int main(int argc, char **argv)
    int opt, ret;
    u_int32_t id, mask;
    u_int32_t err_mask = 0;
    struct can_ifreq ifr;
    char *ptr;
    char name[32];
    struct option long_options[] = {
         { "help", no_argument, 0, 'h' }, 
{ "verbose", no_argument, 0, 'v'}, 
{ "filter", required_argument, 0, 'f'},
```

9.8 rtcanrecv.c 715

```
{ "error", required_argument, 0, 'e'},
{ "timeout", required_argument, 0, 't'},
{ "timestamp", no_argument, 0, 'T'},
{ "timestamp-rel", no_argument, 0, 'R'},
    { 0, 0, 0, 0},
};
signal(SIGTERM, cleanup_and_exit);
signal(SIGINT, cleanup_and_exit);
while ((opt = getopt_long(argc, argv, "hve:f:t:p:RT",
                            long_options, NULL)) != -1) {
    switch (opt) {
    case 'h':
        print_usage(argv[0]);
         exit(0);
    case 'p':
        print = strtoul(optarg, NULL, 0);
         break;
    case 'v':
         verbose = 1;
         break:
         err_mask = strtoul(optarg, NULL, 0);
        break;
    case 'f':
        ptr = optarg;
         while (1) {
            id = strtoul(ptr, NULL, 0);
             ptr = strchr(ptr, ':');
             if (!ptr) {
                  fprintf(stderr, "filter must be applied in the form id:mask[:id:mask]...\n");
                  exit(1);
             ptr++;
             mask = strtoul(ptr, NULL, 0);
ptr = strchr(ptr, ':');
             add_filter(id, mask);
             if (!ptr)
                  break;
             ptr++;
         }
         break:
    case 't':
        timeout = (nanosecs_rel_t)strtoul(optarg, NULL, 0) * 1000000;
         break;
    case 'R':
        timestamp_rel = 1;
    case 'T':
        with_timestamp = 1;
         break;
         fprintf(stderr, "Unknown option %c\n", opt);\\
         break:
    }
}
ret = socket(PF_CAN, SOCK_RAW, CAN_RAW);
if (ret < 0) {
    fprintf(stderr, "socket: %s\n", strerror(-ret));
    return -1;
s = ret;
if (argv[optind] == NULL) {
    if (verbose)
    printf("interface all\n");
    ifr.ifr_ifindex = 0;
    if (verbose)
         printf("interface %s\n", argv[optind]);
    strncpy(ifr.ifr_name, argv[optind], IFNAMSIZ);
         printf("s=%d, ifr_name=%s\n", s, ifr.ifr_name);
    ret = ioctl(s, SIOCGIFINDEX, &ifr);
    if (ret < 0) {</pre>
         fprintf(stderr, "ioctl GET_IFINDEX: %s\n", strerror(-ret));
```

```
goto failure;
}
if (err_mask) {
    ret = setsockopt(s, SOL_CAN_RAW, CAN_RAW_ERR_FILTER,
                               &err_mask, sizeof(err_mask));
    if (ret < 0) {</pre>
         fprintf(stderr, "setsockopt: %s\n", strerror(-ret));
         goto failure;
    if (verbose)
         printf("Using err_mask=%#x\n", err_mask);
}
if (filter_count) {
    ret = setsockopt(s, SOL_CAN_RAW, CAN_RAW_FILTER,
                               &recv_filter, filter_count *
sizeof(struct can_filter));
    if (ret < 0) {</pre>
         fprintf(stderr, "setsockopt: %s\n", strerror(-ret));
         goto failure;
}
recv_addr.can_family = AF_CAN;
recv_addr.can_ifindex = ifr.ifr_ifindex;
ret = bind(s, (struct sockaddr *)&recv_addr,
                   sizeof(struct sockaddr_can));
if (ret < 0) {</pre>
    fprintf(stderr, "bind: %s\n", strerror(-ret));
    goto failure;
if (timeout) {
    if (verbose)
    printf("Timeout: %1ld ns\n", (long long)timeout);
ret = ioctl(s, RTCAN_RTIOC_RCV_TIMEOUT, &timeout);
    if (ret) {
         fprintf(stderr, "ioctl RCV_TIMEOUT: %s\n", strerror(-ret));
         goto failure;
}
if (with_timestamp) {
    ret = ioctl(s, RTCAN_RTIOC_TAKE_TIMESTAMP,
  RTCAN_TAKE_TIMESTAMPS);
    if (ret) {
         fprintf(stderr, "ioctl TAKE_TIMESTAMP: %s\n", strerror(-ret));
         goto failure;
    }
}
snprintf(name, sizeof(name), "rtcanrecv-%d", getpid());
ret = rt_task_shadow(&rt_task_desc, name, 0, 0);
if (ret) {
    fprintf(stderr, "rt_task_shadow: %s\n", strerror(-ret));
    goto failure;
rt_task();
/* never returns */
cleanup();
return -1;
```

9.9 rtcansend.c

```
#include <stdio.h>
#include <stdib.h>
#include <signal.h>
#include <unistd.h>
#include <time.h>
#include <errno.h>
#include <getopt.h>

#include <alchemy/task.h>
#include <alchemy/timer.h>
```

9.9 rtcansend.c 717

```
#include <rtdm/can.h>
extern int optind, opterr, optopt;
static void print_usage(char *prg)
    fprintf(stderr,
            "Usage: %s <can-interface> [Options] <can-msg>\n"
            "<can-msg> can consist of up to 8 bytes given as a space separated list\n"
            "Options:\n"
            " -i, --identifier=ID CAN Identifier (default = 1)\n"
" -r --rtr send remote request\n"
" -e --extended send extended frame\n"
            " -1 --loop=COUNT
                                     send message COUNT times\n"
            " -c, --count
                                     message count in data[0-3]\n"
            " -d, --delay=MS
                                     delay in ms (default = 1ms)\n"
            " -s, --send
                                     use send instead of sendto\n"
            " -t, --timeout=MS
                                     timeout in ms\n"
            " -L, --loopback=0|1
                                     switch local loopback off or on\n"
            " -v, --verbose
                                     be verbose\n"
            " -p, --print=MODULO
" -h, --help
                                     print every MODULO message\n"
                                     this help\n'',
            prg);
}
RT_TASK rt_task_desc;
static int s=-1, dlc=0, rtr=0, extended=0, verbose=0, loops=1;
static SRTIME delay=1000000;
static int count=0, print=1, use_send=0, loopback=-1;
static nanosecs_rel_t timeout = 0;
static struct can_frame frame;
static struct sockaddr_can to_addr;
static void cleanup(void)
    int ret;
    if (verbose)
        printf("Cleaning up...\n");
    usleep(100000);
    if (s >= 0) {
        ret = close(s);
        s = -1;
        if (ret) {
            fprintf(stderr, "close: %s\n", strerror(-ret));
        exit(EXIT_SUCCESS);
}
static void cleanup_and_exit(int sig)
        printf("Signal %d received\n", sig);
    cleanup();
    exit(0);
}
static void rt_task(void)
    int i, j, ret;
    for (i = 0; i < loops; i++) {</pre>
        rt_task_sleep(rt_timer_ns2ticks(delay));
        if (count)
            memcpy(\&frame.data[0], \&i, sizeof(i));
        if (use_send)
            ret = send(s, (void *)&frame, sizeof(can_frame_t), 0);
        else
            ret = sendto(s, (void *)&frame, sizeof(can_frame_t), 0,
                                 (struct sockaddr *)&to_addr, sizeof(to_addr));
        if (ret < 0) {</pre>
            switch (ret) {
case -ETIMEDOUT:
                if (verbose)
                    printf("send(to): timed out");
                break;
            case -EBADF:
                if (verbose)
                    printf("send(to): aborted because socket was closed");
                break:
```

```
default:
                         fprintf(stderr, "send: %s\n", strerror(-ret));
                   i = loops;
                                                 /* abort */
                   break:
             if (verbose && (i % print) == 0) {
                   if (frame.can_id & CAN_EFF_FLAG)
    printf("<0x%08x>", frame.can_id & CAN_EFF_MASK);
                   else
                         printf("<0x%03x>", frame.can_id & CAN_SFF_MASK);
                   printf(" [%d]", frame.can_dlc);
for (j = 0; j < frame.can_dlc; j++) {
    printf(" %02x", frame.data[j]);</pre>
                   printf("\n");
            }
      }
}
int main(int argc, char **argv)
      int i, opt, ret;
struct can_ifreq ifr;
      char name[32];
      struct option long_options[] = {
    { "help", no_argument, 0, 'h' },
    { "identifier", required_argument, 0, 'i'},
    { "rtr", no_argument, 0, 'r'},
    { "extended", no_argument, 0, 'v'},
    { "verbose", no_argument, 0, 'v'},
    { "count", no_argument, 0, 'c'},
    { "print", required_argument, 0, 'p'},
    { "loop", required_argument, 0, 'l'},
    { "delay", required_argument, 0, 'd'},
    { "send", no_argument, 0, 's'},
    { "timeout", required_argument, 0, 't'},
             { "timeout", required_argument, 0, 't'},
{ "loopback", required_argument, 0, 'L'},
             { 0, 0, 0, 0},
      };
      signal(SIGTERM, cleanup_and_exit);
      signal(SIGINT, cleanup_and_exit);
       frame.can_id = 1;
      while ((opt = getopt_long(argc, argv, "hvi:l:red:t:cp:sL:",
                                               long_options, NULL)) != -1) {
             switch (opt) {
             case 'h':
                  print_usage(argv[0]);
                   exit(0);
             case 'p':
                  print = strtoul(optarg, NULL, 0);
             case 'v':
                   verbose = 1;
                   break:
             case 'c':
                  count = 1;
                   break;
             case '1':
                   loops = strtoul(optarg, NULL, 0);
                   break:
             case 'i':
                   frame.can_id = strtoul(optarg, NULL, 0);
                  break;
             case 'r':
                  rtr = 1;
                   break;
             case 'e':
                   extended = 1:
                   break:
             case 'd':
                  delay = strtoul(optarg, NULL, 0) * 1000000LL;
                   break;
             case 's':
```

9.9 rtcansend.c 719

```
use_send = 1;
    case 't':
        timeout = strtoul(optarg, NULL, 0) * 1000000LL;
        break:
        loopback = strtoul(optarg, NULL, 0);
    default:
        fprintf(stderr, "Unknown option %c\n", opt);
}
if (optind == argc) {
    print_usage(argv[0]);
    exit(0);
if (argv[optind] == NULL) {
    fprintf(stderr, "No Interface supplied\n");
    exit(-1);
if (verbose)
    printf("interface %s\n", argv[optind]);
ret = socket(PF_CAN, SOCK_RAW, CAN_RAW);
if (ret < 0) {</pre>
    fprintf(stderr, "socket: %s\n", strerror(-ret));
    return -1;
s = ret:
if (loopback >= 0) {
    ret = setsockopt(s, SOL_CAN_RAW, CAN_RAW_LOOPBACK,
                             &loopback, sizeof(loopback));
        fprintf(stderr, "setsockopt: %s\n", strerror(-ret));
        goto failure:
    if (verbose)
        printf("Using loopback=\%d\n", loopback);\\
}
strncpy(ifr.ifr_name, argv[optind], IFNAMSIZ);
if (verbose)
    printf("s=%d, ifr_name=%s\n", s, ifr.ifr_name);
ret = ioctl(s, SIOCGIFINDEX, &ifr);
if (ret < 0) {</pre>
    fprintf(stderr, "ioctl: %s\n", strerror(-ret));
    goto failure;
memset(&to_addr, 0, sizeof(to_addr));
to_addr.can_ifindex = ifr.ifr_ifindex;
to_addr.can_family = AF_CAN;
if (use_send) {
    /* Suppress definiton of a default receive filter list */
    ret = setsockopt(s, SOL_CAN_RAW, CAN_RAW_FILTER, NULL, 0);
        fprintf(stderr, "setsockopt: %s\n", strerror(-ret));
        goto failure;
    ret = bind(s, (struct sockaddr *)&to_addr, sizeof(to_addr));
         fprintf(stderr, "bind: %s\n", strerror(-ret));
         goto failure;
}
if (count)
    frame.can_dlc = sizeof(int);
else {
    for (i = optind + 1; i < argc; i++) {
    frame.data[dlc] = strtoul(argv[i], NULL, 0);</pre>
        dlc++;
        if( dlc == 8 )
            break;
    frame.can_dlc = dlc;
}
```

```
frame.can_id |= CAN_RTR_FLAG;
   if (extended)
        frame.can_id |= CAN_EFF_FLAG;
        if (verbose)
       printf("Timeout: %1ld ns\n", (long long)timeout);
ret = ioctl(s, RTCAN_RTIOC_SND_TIMEOUT, &timeout);
       if (ret) {
            fprintf(stderr, "ioctl SND_TIMEOUT: %s\n", strerror(-ret));
   }
   snprintf(name, sizeof(name), "rtcansend-%d", getpid());
   ret = rt_task_shadow(&rt_task_desc, name, 1, 0);
        fprintf(stderr, "rt_task_shadow: %s\n", strerror(-ret));
        goto failure;
   rt_task();
   cleanup();
   return 0;
failure:
   cleanup():
   return -1;
```

9.10 xddp-echo.c

```
* Copyright (C) 2009 Philippe Gerum <rpm@xenomai.org>.
* This library is free software; you can redistribute it and/or
  modify it under the terms of the GNU Lesser General Public
  License as published by the Free Software Foundation; either
  version 2 of the License, or (at your option) any later version.
* This library is distributed in the hope that it will be useful,
* but WITHOUT ANY WARRANTY; without even the implied warranty of
* MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU
* Lesser General Public License for more details.
* You should have received a copy of the GNU Lesser General Public
  License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.
  XDDP-based RT/NRT threads communication demo.
  Real-time Xenomai threads and regular Linux threads may want to
  exchange data in a way that does not require the former to leave
  the real-time domain (i.e. secondary mode). Message pipes – as implemented by the RTDM-based XDDP protocol – are provided for this
  purpose.
* On the Linux domain side, pseudo-device files named /dev/rtp<minor>
  give regular POSIX threads access to non real-time communication
  endpoints, via the standard character-based \ensuremath{\text{I}}/0 interface. On the
  Xenomai domain side, sockets may be bound to XDDP ports, which act
  as proxies to send and receive data to/from the associated
  pseudo-device files. Ports and pseudo-device minor numbers are
  paired, meaning that e.g. port 7 will proxy the traffic for
  /dev/rtp7. Therefore, port numbers may range from 0 to
  CONFIG_XENO_OPT_PIPE_NRDEV - 1.
  All data sent through a bound/connected XDDP socket via sendto(2) or
  write(2) will be passed to the peer endpoint in the Linux domain,
  and made available for reading via the standard read(2) system
  call. Conversely, all data sent using write(2) through the non
  real-time endpoint will be conveyed to the real-time socket
  endpoint, and made available to the recvfrom(2) or read(2) system
  calls.
  Both threads can use the bi-directional data path to send and
```

9.10 xddp-echo.c 721

```
* receive datagrams in a FIFO manner, as illustrated by the simple
 * echoing process implemented by this program.
 => get socket
=> bind socket to port 0
    => write traffic to NRT domain via sendto()
    => read traffic from NRT domain via recvfrom() <-- | --+
 * regular_thread-----+
 * => open /dev/rtp0

* => read traffic from RT domain via read()
                                                            1 1
    => echo traffic back to RT domain via write()
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <malloc.h>
#include <pthread.h>
#include <fcntl.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t rt, nrt;
#define XDDP PORT 0
                        /* [0..CONFIG-XENO_OPT_PIPE_NRDEV - 1] */
static const char *msg[] = {
         "Surfing With The Alien",
         "Lords of Karma",
        "Banana Mango",
"Psycho Monkey"
         "Luminous Flesh Giants",
         "Moroccan Sunset",
         "Satch Boogie"
         "Flying In A Blue Dream",
         "Ride",
         "Summer Song"
         "Speed Of Light",
"Crystal Planet",
         "Raspberry Jam Delta-V",
         "Champagne?",
         "Clouds Race Across The Sky",
         "Engines Of Creation"
}:
static void fail(const char *reason)
{
        perror(reason);
        exit(EXIT_FAILURE);
}
static void *realtime_thread(void *arg)
{
         struct sockaddr_ipc saddr;
         int ret, s, n = 0, len;
        struct timespec ts;
        size_t poolsz;
        char buf[128];
         * Get a datagram socket to bind to the RT endpoint. Each
* endpoint is represented by a port number within the XDDP
         * protocol namespace.
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_XDDP);
        if (s < 0) {
                 perror("socket");
                 exit(EXIT_FAILURE);
        }
         * Set a local 16k pool for the RT endpoint. Memory needed to
         * convey datagrams will be pulled from this pool, instead of
         * Xenomai's system pool.
        poolsz = 16384; /* bytes */
ret = setsockopt(s, SOL_XDDP, XDDP_POOLSZ,
                          &poolsz, sizeof(poolsz));
        if (ret)
                 fail("setsockopt");
         * Bind the socket to the port, to setup a proxy to channel * traffic to/from the Linux domain.
```

```
* saddr.sipc_port specifies the port number to use.
        memset(\&saddr, 0, sizeof(saddr));
        saddr.sipc_family = AF_RTIPC;
saddr.sipc_port = XDDP_PORT;
        ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
        if (ret)
                 fail("bind");
        for (;;) {
                 len = strlen(msg[n]);
                * We may pass a NULL destination address, since a
                  \mbox{*} bound socket is assigned a default destination
                  * address matching the binding address (unless
* connect(2) was issued before bind(2), in which case
* the former would prevail).
                 ret = sendto(s, msg[n], len, 0, NULL, 0);
                 if (ret != len)
                         fail("sendto");
                 printf("%s: sent %d bytes, \"%.*s\"\n",
                        __FUNCTION__, ret, ret, msg[n]);
                 /* Read back packets echoed by the regular thread */
                 ret = recvfrom(s, buf, sizeof(buf), 0, NULL, 0);
                 if (ret <= 0)</pre>
                         fail("recvfrom");
                 printf(" \Rightarrow \"\%.*s" echoed by peer\n", ret, buf);
                 n = (n + 1) % (sizeof(msg) / sizeof(msg[0]));
                  * We run in full real-time mode (i.e. primary mode),
                  * so we have to let the system breathe between two
                  * iterations.
                 ts.tv_sec = 0;
ts.tv_nsec = 500000000; /* 500 ms */
                 clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
        return NULL;
}
static void *regular_thread(void *arg)
{
        char buf[128], *devname;
        int fd, ret;
        fd = open(devname, O_RDWR);
        free(devname);
        if (fd < 0)</pre>
                 fail("open");
        for (;;) {
    /* Get the next message from realtime_thread. */
                 ret = read(fd, buf, sizeof(buf));
                 if (ret <= 0)</pre>
                         fail("read");
                 /* Echo the message back to realtime_thread. */
                 ret = write(fd, buf, ret);
                 if (ret <= 0)</pre>
                         fail("write");
        }
        return NULL:
int main(int argc, char **argv)
        struct sched_param rtparam = { .sched_priority = 42 };
        pthread_attr_t rtattr, regattr;
        sigset_t set;
        int sig;
        sigemptyset(&set);
        sigaddset(&set, SIGINT);
        sigaddset(&set, SIGTERM);
sigaddset(&set, SIGHUP);
```

9.11 xddp-label.c 723

```
pthread_sigmask(SIG_BLOCK, &set, NULL);
pthread_attr_init(&rtattr);
{\tt pthread\_attr\_setdetachstate(\&rtattr, PTHREAD\_CREATE\_JOINABLE);}
pthread_attr_setinheritsched(&rtattr, PTHREAD_EXPLICIT_SCHED);
pthread_attr_setschedpolicy(&rtattr, SCHED_FIF0);
pthread_attr_setschedparam(&rtattr, &rtparam);
errno = pthread_create(&rt, &rtattr, &realtime_thread, NULL);
if (errno)
        fail("pthread_create");
pthread_attr_init(&regattr);
pthread_attr_setdetachstate(&regattr, PTHREAD_CREATE_JOINABLE);
pthread_attr_setinheritsched(&regattr, PTHREAD_EXPLICIT_SCHED);
pthread_attr_setschedpolicy(&regattr, SCHED_OTHER);
errno = pthread_create(&nrt, &regattr, &regular_thread, NULL);
if (errno)
        fail("pthread_create");
sigwait(&set, &sig);
pthread_cancel(rt);
pthread_cancel(nrt);
pthread_join(rt, NULL);
pthread_join(nrt, NULL);
return 0:
```

9.11 xddp-label.c

```
* Copyright (C) 2009 Philippe Gerum <rpm@xenomai.org>.
  This library is free software; you can redistribute it and/or
  modify it under the terms of the GNU Lesser General Public
* License as published by the Free Software Foundation; either
* version 2 of the License, or (at your option) any later version.
  This library is distributed in the hope that it will be useful,
  but WITHOUT ANY WARRANTY; without even the implied warranty of
  MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU
* Lesser General Public License for more details.
* You should have received a copy of the GNU Lesser General Public
  License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.
* XDDP-based RT/NRT threads communication demo.
  Real-time Xenomai threads and regular Linux threads may want to
  exchange data in a way that does not require the former to leave
  the real-time domain (i.e. secondary mode). Message pipes -
  implemented by the RTDM-based XDDP protocol - are provided for this
  On the Linux domain side, pseudo-device files named \ensuremath{\text{/dev/rtp}}\xspace<minor>
  give regular POSIX threads access to non real-time communication
  endpoints, via the standard character-based I/O interface. On the
  Xenomai domain side, sockets may be bound to XDDP ports, which act
  as proxies to send and receive data to/from the associated % \left( 1\right) =\left( 1\right) \left( 1\right) 
  pseudo-device files. Ports and pseudo-device minor numbers are
  paired, meaning that e.g. port 7 will proxy the traffic for
  /dev/rtp7. Therefore, port numbers may range from 0 to
  CONFIG_XENO_OPT_PIPE_NRDEV - 1.
* All data sent through a bound/connected XDDP socket via sendto(2) or
  \mbox{write(2)} will be passed to the peer endpoint in the Linux domain,
  and made available for reading via the standard read(2) system
  call. Conversely, all data sent using write(2) through the non real-time endpoint will be conveyed to the real-time socket
  endpoint, and made available to the recvfrom(2) or read(2) system
  calls.
* ASCII labels can be attached to bound ports, in order to connect
  sockets to them in a more descriptive way than using plain numeric
  port values.
  The example code below illustrates the following process:
```

```
* realtime_thread1-----
    => get socket
    => bind socket to port "xddp-demo
    => read traffic from NRT domain via recvfrom()
    => get socket
    => connect socket to port "xddp-demo"
    => write traffic to NRT domain via sendto()
   regular_thread-----
    => open /proc/xenomai/registry/rtipc/xddp/xddp-demo |
     => read traffic from RT domain via read()
    => mirror traffic to RT domain via write()
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <malloc.h>
#include <pthread.h>
#include <fcntl.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t rt1, rt2, nrt;
#define XDDP_PORT_LABEL "xddp-demo"
static const char *msg[] = {
        "Surfing With The Alien",
        "Lords of Karma",
        "Banana Mango",
"Psycho Monkey",
        "Luminous Flesh Giants",
        "Moroccan Sunset",
        "Satch Boogie",
        "Flying In A Blue Dream",
        "Ride",
"Summer Song",
        "Speed Of Light",
        "Crystal Planet",
        "Raspberry Jam Delta-V",
        "Champagne?",
        "Clouds Race Across The Sky",
        "Engines Of Creation"
}:
static void fail(const char *reason)
        perror(reason);
        exit(EXIT_FAILURE);
}
static void *realtime_thread1(void *arg)
{
        struct rtipc_port_label plabel;
        struct sockaddr_ipc saddr;
        char buf[128];
        int ret, s;
        /*

* Get a datagram socket to bind to the RT endpoint. Each
         * endpoint is represented by a port number within the XDDP
         * protocol namespace.
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_XDDP);
        if (s < 0) {
               perror("socket");
                exit(EXIT_FAILURE);
        }
         * Set a port label. This name will be registered when
         * binding, in addition to the port number (if given).
        if (ret)
               fail("setsockopt");
         * Bind the socket to the port, to setup a proxy to channel
* traffic to/from the Linux domain. Assign that port a label,
* so that peers may use a descriptive information to locate
```

9.11 xddp-label.c 725

```
* it. For instance, the pseudo-device matching our RT
         * endpoint will appear as
           /proc/xenomai/registry/rtipc/xddp/<XDDP_PORT_LABEL> in the
         * Linux domain, once the socket is bound.
         * saddr.sipc_port specifies the port number to use. If -1 is
         * passed, the XDDP driver will auto-select an idle port.
        memset(&saddr, 0, sizeof(saddr));
        saddr.sipc_family = AF_RTIPC;
saddr.sipc_port = -1;
        ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
        if (ret)
                 fail("bind");
        for (;;) {
    /* Get packets relayed by the regular thread */
                 ret = recvfrom(s, buf, sizeof(buf), 0, NULL, 0);
                 if (ret <= 0)</pre>
                          fail("recvfrom");
                 printf("%s: \"%.*s" relayed by peer\n", __FUNCTION__, ret, buf);
        return NULL;
static void *realtime_thread2(void *arg)
        struct rtipc port label plabel:
        struct sockaddr_ipc saddr;
        int ret, s, n = 0, len;
        struct timespec ts;
        struct timeval tv;
        socklen_t addrlen;
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_XDDP);
        if (s < 0) {
                 perror("socket");
                 exit(EXIT_FAILURE);
        }
         * Set the socket timeout; it will apply when attempting to
         * connect to a labeled port, and to recvfrom() calls. The
         \ensuremath{^{*}} following setup tells the XDDP driver to wait for at most
         \mbox{\scriptsize \#} one second until a socket is bound to a port using the same
         * label, or return with a timeout error.
        tv.tv sec = 1:
        tv.tv_usec = 0;
        ret = setsockopt(s, SOL_SOCKET, SO_RCVTIMEO,
                          &tv, sizeof(tv));
        if (ret)
                 fail("setsockopt");
        /*
 * Set a port label. This name will be used to find the peer
         * when connecting, instead of the port number.
        strcpy(plabel.label, XDDP_PORT_LABEL);
ret = setsockopt(s, SOL_XDDP, XDDP_LABEL
                           &plabel, sizeof(plabel));
        if (ret)
                 fail("setsockopt");
        memset(&saddr, 0, sizeof(saddr));
        saddr.sipc_family = AF_RTIPC;
saddr.sipc_port = -1; /* Tell XDDP to search by label. */
        ret = connect(s, (struct sockaddr *)&saddr, sizeof(saddr));
                 fail("connect");
         \ensuremath{^{*}} We succeeded in making the port our default destination
         * address by using its label, but we don't know its actual
         * port number yet. Use getpeername() to retrieve it.
        addrlen = sizeof(saddr);
        ret = getpeername(s, (struct sockaddr *)&saddr, &addrlen);
if (ret || addrlen != sizeof(saddr))
                 fail("getpeername");
        printf("%s: NRT peer is reading from /dev/rtp%d\n",
                __FUNCTION__, saddr.sipc_port);
        for (::) {
```

```
len = strlen(msg[n]);
                  /*

* Send a datagram to the NRT endpoint via the proxy.

* We may pass a NULL destination address, since the

* socket was successfully assigned the proper default
                    * address via connect(2).
                   ret = sendto(s, msg[n], len, 0, NULL, 0);
                   if (ret != len)
                            fail("sendto");
                   printf("%s: sent %d bytes, \"%.*s\"\n",
                           __FUNCTION__, ret, ret, msg[n]);
                   n = (n + 1) % (sizeof(msg) / sizeof(msg[0]));
                  /*

* We run in full real-time mode (i.e. primary mode),
                      so we have to let the system breathe between two
                    * iterations.
                   ts.tv_sec = 0;
                   ts.tv_nsec = 500000000; /* 500 ms */
                   clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
         return NULL;
}
static void *regular_thread(void *arg)
         char buf[128], *devname;
         int fd, ret;
         if (asprintf(&devname,
                        "/proc/xenomai/registry/rtipc/xddp/%s",
XDDP_PORT_LABEL) < 0)
                   fail("asprintf");
         fd = open(devname, O_RDWR);
         free(devname);
         if (fd < 0)</pre>
                   fail("open");
         for (;;) {
                   /* Get the next message from realtime_thread2. */
                   ret = read(fd, buf, sizeof(buf));
                   /* Relay the message to realtime_thread1. */
                   ret = write(fd, buf, ret);
                   if (ret <= 0)</pre>
                            fail("write");
         }
         return NULL;
int main(int argc, char **argv)
         struct sched_param rtparam = { .sched_priority = 42 };
         pthread_attr_t rtattr, regattr;
         sigset_t set;
         int sig;
         sigemptyset(&set);
         sigaddset(&set, SIGINT);
sigaddset(&set, SIGTERM);
sigaddset(&set, SIGHUP);
         pthread_sigmask(SIG_BLOCK, &set, NULL);
         pthread_attr_init(&rtattr);
         pthread_attr_setdetachstate(&rtattr, PTHREAD_CREATE_JOINABLE);
pthread_attr_setinheritsched(&rtattr, PTHREAD_EXPLICIT_SCHED);
pthread_attr_setschedpolicy(&rtattr, SCHED_FIFO);
         pthread_attr_setschedparam(&rtattr, &rtparam);
         /* Both real-time threads have the same attribute set. */
         errno = pthread_create(&rt1, &rtattr, &realtime_thread1, NULL);
         if (errno)
                   fail("pthread_create");
         errno = pthread_create(&rt2, &rtattr, &realtime_thread2, NULL);
         if (errno)
                   fail("pthread_create");
```

9.12 xddp-stream.c 727

9.12 xddp-stream.c

```
* Copyright (C) 2009 Philippe Gerum <rpm@xenomai.org>.
* This library is free software; you can redistribute it and/or
* modify it under the terms of the GNU Lesser General Public
* License as published by the Free Software Foundation; either
  version 2 of the License, or (at your option) any later version.
* This library is distributed in the hope that it will be useful,
* but WITHOUT ANY WARRANTY; without even the implied warranty of
* MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU
* Lesser General Public License for more details.
  You should have received a copy of the GNU Lesser General Public
  License along with this library; if not, write to the Free Software
  Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.
* XDDP-based RT/NRT threads communication demo.
  Real-time Xenomai threads and regular Linux threads may want to
  exchange data in a way that does not require the former to leave
  the real-time domain (i.e. secondary mode). Message pipes - as \,
  implemented by the RTDM-based XDDP protocol - are provided for this
  purpose.
* On the Linux domain side, pseudo-device files named /dev/rtp<minor>
  give regular POSIX threads access to non real-time communication
  endpoints, via the standard character-based I/O interface. On the
  Xenomai domain side, sockets may be bound to XDDP ports, which act
 as proxies to send and receive data to/from the associated pseudo-device files. Ports and pseudo-device minor numbers are
  paired, meaning that e.g. port 7 will proxy the traffic for
  /dev/rtp7. Therefore, port numbers may range from 0 to
  CONFIG_XENO_OPT_PIPE_NRDEV - 1.
  All data sent through a bound/connected XDDP socket via sendto(2) or
  write(2) will be passed to the peer endpoint in the Linux domain, and made available for reading via the standard read(2) system
  call. Conversely, all data sent using write(2) through the non
 * real-time endpoint will be conveyed to the real-time socket
  endpoint, and made available to the recvfrom(2) or read(2) system
* calls.
  In addition to sending datagrams, real-time threads may stream data
  in a byte-oriented mode through the proxy as well. This increases
  the bandwidth and reduces the overhead, when a lot of data has to
  flow down to the Linux domain, if keeping the message boundaries is
  not required. The example code below illustrates such use.
  get socket
    => bind socket to port 0
        write scattered traffic to NRT domain via sendto()
    => read traffic from NRT domain via recvfrom()
  regular thread----
   => open /dev/rtp0
    => read traffic from RT domain via read()
```

```
* => echo traffic back to RT domain via write()
*/
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <malloc.h>
#include <pthread.h>
#include <fcntl.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t rt, nrt;
                                                 /* [0..CONFIG-XENO_OPT_PIPE_NRDEV - 1] */
#define XDDP_PORT 0
static const char *msg[] = {
    "Surfing With The Alien",
                   "Lords of Karma",
                   "Banana Mango",
"Psycho Monkey"
                  "Luminous Flesh Giants",
"Moroccan Sunset",
                   "Satch Boogie",
                   "Flying In A Blue Dream",
                   "Ride",
                   "Summer Song"
                   "Speed Of Light",
"Crystal Planet",
                   "Raspberry Jam Delta-V",
                   "Champagne?",
                   "Clouds Race Across The Sky",
                   "Engines Of Creation"
};
static void fail(const char *reason)
                  perror(reason);
                   exit(EXIT_FAILURE);
}
static void *realtime_thread(void *arg)
                   struct sockaddr_ipc saddr;
                  int ret, s, n = 0, len, b;
                  struct timespec ts;
                  size_t streamsz;
                  char buf[128];
                  /*

* Get a datagram socket to bind to the RT endpoint. Each

** The data and the state of the s
                     * endpoint is represented by a port number within the XDDP
                     * protocol namespace.
                  s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_XDDP);
                  if (s < 0) {
                                    perror("socket");
                                     exit(EXIT_FAILURE);
                  }
                     * Tell the XDDP driver that we will use the streaming
                     \mbox{\ensuremath{^{\ast}}} capabilities on this socket. To this end, we have to
                     \mbox{\scriptsize *} specify the size of the streaming buffer, as a count of
                     * bytes. The real-time output will be buffered up to that
                     * amount, and sent as a single datagram to the NRT endpoint
* when fully gathered, or when another source port attempts
                     * to send data to the same endpoint. Passing a null size
                     * would disable streaming.
                  streamsz = 1024; /* bytes */
ret = setsockopt(s, SOL_XDDP, XDDP_BUFSZ,
                                                        &streamsz, sizeof(streamsz));
                  if (ret)
     fail("setsockopt");
                    * Bind the socket to the port, to setup a proxy to channel * traffic to/from the Linux domain.
                     * saddr.sipc_port specifies the port number to use.
                  memset(&saddr, 0, sizeof(saddr));
                   saddr.sipc_family = AF_RTIPC;
                  saddr.sipc_port = XDDP_PORT;
                  ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
if (ret)
```

```
fail("bind");
        for (;;) {
                 len = strlen(msg[n]);
                 /*
* Send a datagram to the NRT endpoint via the proxy.
                   * The output is artificially scattered in separate
                   * one-byte sendings, to illustrate the use of
                  * MSG_MORE.
                 for (b = 0: b < len: b++) {
                          ret = sendto(s, msg[n] + b, 1, MSG_MORE, NULL, 0);
                          if (ret != 1)
                                   fail("sendto");
                 }
                 printf("%s: sent (scattered) %d-bytes message, \"%.*s\"\n",
                          _FUNCTION__, len, len, msg[n]);
                 /* Read back packets echoed by the regular thread */
                 ret = recvfrom(s, buf, sizeof(buf), 0, NULL, 0);
                 if (ret <= 0)</pre>
                          fail("recvfrom");
                 printf(" => \"%.*s\" echoed by peer\n", ret, buf);
                 n = (n + 1) % (sizeof(msg) / sizeof(msg[0]));
                 /*

* We run in full real-time mode (i.e. primary mode),

* so we have to let the system breathe between two
                 ts.tv_sec = 0;
                 ts.tv_nsec = 500000000; /* 500 ms */
                 clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
        }
        return NULL;
static void *regular_thread(void *arg)
{
        char buf[128], *devname;
        int fd, ret;
        if (asprintf(&devname, "/dev/rtp%d", XDDP_PORT) < 0)</pre>
                 fail("asprintf");
        fd = open(devname. 0 RDWR):
        free(devname);
        if (fd < 0)</pre>
                 fail("open");
        for (;;) {
    /* Get the next message from realtime_thread. */
                 ret = read(fd, buf, sizeof(buf));
                 if (ret <= 0)</pre>
                          fail("read");
                 /* Echo the message back to realtime_thread. */
ret = write(fd, buf, ret);
                 if (ret <= 0)</pre>
                          fail("write");
        return NULL;
}
int main(int argc, char **argv)
{
         struct sched_param rtparam = { .sched_priority = 42 };
        pthread_attr_t rtattr, regattr;
         sigset_t set;
        int sig;
         sigemptyset(&set);
         sigaddset(&set, SIGINT);
        sigaddset(&set, SIGTERM);
sigaddset(&set, SIGHUP);
        pthread_sigmask(SIG_BLOCK, &set, NULL);
        pthread_attr_init(&rtattr);
        pthread_attr_setdetachstate(&rtattr, PTHREAD_CREATE_JOINABLE);
        pthread_attr_setinheritsched(&rtattr, PTHREAD_EXPLICIT_SCHED);
        pthread_attr_setschedpolicy(&rtattr, SCHED_FIF0);
        pthread_attr_setschedparam(&rtattr, &rtparam);
```

Index

xntimer_migrate	Synchronous acquisition API, 425
Timer services, 272	a4l_dcaltoraw
A.U. DNO 54070D	Software calibration API, 401
A4L_RNG_FACTOR	a4l_descriptor, 566
uapi/analogy.h, 681	board_name, 567
a4l_add_subd	driver_name, 567
Subdevice management services, 294	fd, 567
a4l_alloc_subd	idx_read_subd, 567
Subdevice management services, 294	idx_write_subd, 567
a4l_async_read	magic, 568
Asynchronous acquisition API, 399	nb_subd, 568
a4l_async_write	sbdata, 568
Asynchronous acquisition API, 400	sbsize, 568
a4l_buf_commit_absget	a4l driver, 568
Buffer management services, 297	a4l dtoraw
a4l_buf_commit_absput	Range / conversion API, 413
Buffer management services, 298	a4l_fill_desc
a4l_buf_commit_get	Descriptor API, 407
Buffer management services, 298	•
a4l_buf_commit_put	a4l_find_range
Buffer management services, 299	Range / conversion API, 414
a4l_buf_count	a4l_free_irq
Buffer management services, 299	Interrupt management services, 306
a4l_buf_evt	a4l_ftoraw
Buffer management services, 301	Range / conversion API, 415
a4l_buf_get	a4l_get_bufsize
Buffer management services, 301	Asynchronous acquisition API, 393
a4l_buf_prepare_absget	a4l_get_chan
Buffer management services, 302	Buffer management services, 305
a4l_buf_prepare_absput	a4l_get_chinfo
Buffer management services, 302	Descriptor API, 407
a4l_buf_prepare_get	a4l_get_cmd
Buffer management services, 303	Buffer management services, 305
a4l_buf_prepare_put	a4l_get_irq
Buffer management services, 304	Interrupt management services, 307
a4l_buf_put	a4l_get_rnginfo
Buffer management services, 304	Descriptor API, 408
a4l_channel, 563	a4l_get_softcal_converter
flags, 563	Software calibration API, 402
nb_bits, 563	a4l_get_subd
a4l_channels_desc, 564	Subdevice management services, 295
chans, 564	a4l get subdinfo
length, 564	Descriptor API, 408
mode, 565	a4l get time
a4l close	Misc services, 309
Descriptor API, 406	a4l instruction, 569
a4l_cmd_desc, 565	idx_subd, 570
data_len, 566	a4I_instruction_list, 570
	a41_instituction_list, 570 a41 mark bufrw
idx_subd, 566	
a4l_config_subd	Asynchronous acquisition API, 393

a4l math mean	Basic Syscall API, 431
Math API, 410	a4l_sys_desc
a4l_math_polyfit	Descriptor Syscall API, 404
Math API, 411	a4l_sys_detach
a4I math stddev	Attach / detach Syscall API, 435
Math API, 411	a4l_sys_open
a4l_math_stddev_of_mean	Basic Syscall API, 431
Math API, 412	a4l_sys_read
a4l_mmap	Basic Syscall API, 432
Asynchronous acquisition API, 394	a4l_sys_write
a4l_open	Basic Syscall API, 432
Descriptor API, 409	a4l ultoraw
a4l_poll	Range / conversion API, 418
Asynchronous acquisition API, 395	a4l_unregister_drv
· · · · · · · · · · · · · · · · · · ·	Driver management services, 291
a4l_range, 571	addr
flags, 571	udd_memregion, 607
max, 571	Alarm services, 437
min, 571	rt_alarm_create, 437
a4l_rawtod	rt_alarm_delete, 438
Range / conversion API, 415	rt_alarm_inquire, 439
a4l_rawtodcal	rt_alarm_start, 439
Software calibration API, 402	rt_alarm_stop, 440
a4l_rawtof	Alchemy API, 479
Range / conversion API, 416	Analogy framework, 288
a4l_rawtoul	
Range / conversion API, 416	Analogy user API, 429
a4l_read_calibration_file	Asynchronous acquisition API, 391, 399
Software calibration API, 403	a4l_async_read, 399
a4l_register_drv	a4l_async_write, 400
Driver management services, 290	a4l_get_bufsize, 393
a4l_request_irq	a4l_mark_bufrw, 393
Interrupt management services, 307	a4l_mmap, 394
a4l_set_bufsize	a4l_poll, 395
Asynchronous acquisition API, 396	a4l_set_bufsize, 396
a4l_sizeof_chan	a4l_snd_cancel, 396
Range / conversion API, 417	a4l_snd_command, 397
a4l sizeof subd	Asynchronous Procedure Calls, 93
Range / conversion API, 417	xnapc_alloc, 93
a4l_snd_cancel	xnapc_free, 94
Asynchronous acquisition API, 396	xnapc_schedule, 94
a4l_snd_command	atomic_t, 573
Asynchronous acquisition API, 397	Attach / detach Syscall API, 434
a4l_snd_insn	a4l_sys_attach, 434
Synchronous acquisition API, 422	a4l_sys_bufcfg, 435
a4l_snd_insnlist	a4l_sys_detach, 435
Synchronous acquisition API, 422	D DDIO
a4l_subdevice, 572	B_PRIO
—	Buffer services, 443
a4l_sync_dio	BUFP_BUFSZ
Synchronous acquisition API, 426	Real-time IPC, 76
a4l_sync_read	BUFP_LABEL
Synchronous acquisition API, 426	Real-time IPC, 77
a4l_sync_write	base_minor
Synchronous acquisition API, 427	rtdm_driver, 592
a4l_sys_attach	Basic Syscall API, 431
Attach / detach Syscall API, 434	a4l_sys_close, 431
a4l_sys_bufcfg	a4l_sys_open, 431
Attach / detach Syscall API, 435	a4l_sys_read, 432
a4l_sys_close	a4l_sys_write, 432

xnville_regular_ops, 614 xnville_regular_ops, 622 Big dual kernel lock, 24 cobalt_atomic_enter, 24 cobalt_atomic_leave, 25 Bind_AF_RTIPC Real-time IPC, 65 board_name a4l_descriptor, 97 xnbufd_copy_to_kmem, 100 xnbufd_invalidate, 101 xnbufd_map_kwrite, 101 xnbufd_map_kwrite, 102 xnbufd_map_write, 102 xnbufd_map_uread, 102 xnbufd_map_uread, 102 xnbufd_map_uread, 103 xnbufd_reset, 104 xnbufd_unmap_kwrite, 104 xnbufd_unmap_kwrite, 105 Buffer management services, 296 a4 _buf_commit_get, 298 a4 _buf_prepare_get, 303 a4 _buf_prepare_get, 303 a4 _buf_prepare_get, 303 a4 _buf_prepare_get, 304 a4 _get_cdan, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_leat, 444 rt_buffer_leat, 444 rt_buffer_leat, 444 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 450 rt_buffer_write_unitl, 451 CAN Devices, 43 CAN ERR_LCRSTARB_UNSPEC CAN Devices, 56 CAN ERR_LOSTARB_UNSPEC CAN Devices, 56 CAN ERR_LOSTARB_UNSPEC CAN Devices, 56 CAN ERR_LOSTARB_UNSPEC CAN Devices, 56 CAN ERR_CRETITLE, 54 CAN ERR_LTER, 55 CAN ERR_LTER, 55 CAN ERT_FILTER, 54 CAN ERR_FILTER, 56 CA	begin	CAN_ERR_LOSTARB_UNSPEC, 54
Big dual kernel lock, 24 cobalt_atomic_eleave, 25 cobalt_atomic_leave, 25 find_AF_RTIPC Real-time IPC, 85 board_name a4l_descriptor, 567 Buffer descriptor, 567 Buffer descriptor, 97 xnbufd_copy_fcom_kmem, 99 xnbufd_map_kwrite, 102 xnbufd_map_kwrite, 102 xnbufd_map_write, 103 xnbufd_map_uwrite, 103 xnbufd_map_uwrite, 103 xnbufd_map_uwrite, 103 xnbufd_map_uwrite, 103 xnbufd_map_uwrite, 105 Buffer management services, 296 a4l_buf_commit_absget, 297 a4l_buf_commit_get, 298 a4l_buf_commit_get, 298 a4l_buf_commit_get, 299 a4l_buf_commit_get, 299 a4l_buf_commit_get, 299 a4l_buf_prepare_absget, 302 a4l_buf_prepare_absgut, 302 a4l_buf_prepare_but, 304 a4l_buf_prepare_but, 304 a4l_buf_prepare_but, 304 a4l_get_chan, 305 a4l_buf_prepare_but, 304 a4l_get_chan, 305 a4l_buf_prepare_but, 304 a4l_buf_prepare_but, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_lead, 447 rt_buffer_lead, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_write_uniti, 448 rt_buffer_write_uniti, 448 rt_buffer_write_timed, 450 rt_buffer_write_uniti, 449 rt_buffer_write_timed, 450 rt_buffer_write_timed_timed_timed_timed_timed_timed_time	xnvfile_regular_ops, 614	CAN_MODE, 65
cobalt_atomic_leave_25 RTDM_EXECUTE_ATOMICALLY, 25 bind_AF_RTIPC Real-lime IPC, 85 board_name a4l_descriptor, 567 Buffer descriptor, 97 xnbufd_copy_fo_mcmem, 99 xnbufd_copy_fo_mem, 100 xnbufd_map_kwrad, 101 xnbufd_map_kwrad, 101 xnbufd_map_kwrite, 102 xnbufd_map_write, 102 xnbufd_map_write, 103 xnbufd_unmap_kwrite, 104 xnbufd_unmap_kwrite, 104 xnbufd_unmap_kwrite, 103 xnbufd_unmap_write, 105 xnbufd_unmap_write, 105 Buffer management services, 296 a4l_buf_commit_absput, 298 a4l_buf_commit_get, 298 a4l_buf_commit_get, 298 a4l_buf_commit_get, 298 a4l_buf_prepare_absput, 302 a4l_buf_prepare_absput, 301 a4l_buf_prepare_absput, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_absput, 303 a4l_buf_prepare_absput, 304 a4l_get_cmd, 305 Buffer services, 442 R_p-RIO, 443 rt_buffer_delet, 445 rt_buffer_fead_imed, 447 rt_buffer_read_until, 448 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 448 rt_buffer_write_until, 449 rt_buffer_write_until, 449 rt_buffer_write_until, 449 rt_buffer_write_until, 449 rt_buffer_write_until, 449 rt_buffer_write_until, 449 rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITTIME_TYPE, 65 CAN_CTRILMODE_JISTENONLY, 54 CAN_DEVICES, 56 CAN_RAW_ROCY_OWN_MSGS CAN_CTRILMODE_3_SAMPLES_53 CAN_CTRILMODE_3_SAMPLES_53 CAN_CTRILMODE_1LiSTENONLY, 54	xnvfile_snapshot_ops, 622	CAN_RAW_ERR_FILTER, 54
cobalt_atomic_leave, 25 RTDM_EXECUTE_ATOMICALLY, 25 bind_AF_RTIPC Real-time IPC, 85 board_name a4i_descriptor, 567 Buffer descriptor, 97 xnbuld_copy_from_kmem, 99 xnbuld_copy_from_kmem, 99 xnbuld_copy_from_kmem, 99 xnbuld_map_lwread, 101 xnbuld_map_kread, 101 xnbuld_map_lwreit, 102 xnbuld_map_urread, 102 xnbuld_map_urread, 102 xnbuld_map_urread, 103 xnbuld_nmap_lwrite, 103 xnbuld_unmap_lwrite, 104 xnbuld_unmap_urread, 105 xnbuld_unmap_urread, 106 xnbuld_unmap_urread, 107 xnbuld_unmap_urread, 108 xnbuld_unmap_urread, 108 xnbuld_unmap_urread, 105 xnbuld_unmap_urread, 105 xnbuld_unmap_urread, 106 xnbuld_unmap_urread, 107 xnbuld_unmap_urread, 108 xnbuld_unmap_urread, 108	Big dual kernel lock, 24	CAN_RAW_FILTER, 55
RTDM_EXECUTE_ATOMICALLY, 25 bind_AF_RTIPC Real-time IPC, 85 board_name a4l_descriptor, 567 Buffer descriptor, 567 Buffer descriptor, 97 xnbufd_copy_fo_kmem, 100 xnbufd_map_kread, 101 xnbufd_map_kread, 101 xnbufd_map_uread, 102 xnbufd_map_uread, 102 xnbufd_map_uread, 102 xnbufd_map_uread, 103 xnbufd_map_write, 103 xnbufd_map_write, 104 xnbufd_unmap_kread, 104 xnbufd_unmap_write, 105 xnbufd_unmap_write, 105 xnbufd_unmap_write, 105 xnbufd_unmap_uread, 105 xnbufd_unmap_uread, 105 xnbufd_unmap_uread, 105 xnbufd_unmap_uread, 105 xnbufd_unmap_write, 106 xnbufd_unmap_write, 106 xnbufd_unmap_write, 107 xnbufd_unmap_write, 108 xnbufd_unmap_write, 108 xnbufd_unmap_write, 109 xnbufd_unmap_write, 108 xnbuf	cobalt_atomic_enter, 24	CAN_RAW_LOOPBACK, 56
RTDM_EXECUTE_ATOMICALLY, 25 bind_AF_RTIPC Real-time IPC, 85 board_name a4l_descriptor, 567 Buffer descriptor, 567 Sunbuld_copy_townmen, 100 xnbufd_map_kread, 101 xnbufd_map_kread, 101 xnbufd_map_worlie, 102 xnbufd_map_worlie, 103 xnbufd_unmap_worlie, 103 xnbufd_unmap_worlie, 103 xnbufd_unmap_worlie, 103 xnbufd_unmap_worlie, 104 xnbufd_unmap_worlie, 105 Buffer management services, 296 a4l_buf_commit_absput, 299 a4l_buf_commit_despet, 297 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_prepare_abspet, 302 a4l_buf_prepare_dest, 303 a4l_buf_prepare_abspet, 302 a4l_buf_prepare_dest, 303 a4l_buf_prepare_dest, 304 a4l_get_chan, 305 Buffer services, 442 t_buffer_write, 446 t_buffer_write, 449 t_buffer_write_imed, 450 t_buffer_write_uniti, 451 CAN Devices, 54 CAN Devices, 56 CAN_RAW_ERS_DEVALUMEOUT, 56 RTCAN_RTICO_ROV_TIMEOUT, 56 RTCAN_RTICO_ROV_TIMEO	cobalt_atomic_leave, 25	CAN RAW RECV OWN MSGS, 56
bind_AF_RTIPC Real-time IPC, 85 board_name a4l_descriptor, 567 Buffer descriptor, 567 xnbufd_copy_fom_kmem, 99 xnbufd_copy_fom_kmem, 100 xnbufd_map_kmen, 101 xnbufd_map_kmead, 101 xnbufd_map_kmead, 101 xnbufd_map_uread, 102 xnbufd_map_uread, 102 xnbufd_unmap_uread, 103 xnbufd_unmap_write, 103 xnbufd_unmap_write, 104 xnbufd_unmap_write, 105 Buffer management services, 296 a4l_buf_commit_absput, 298 a4l_buf_commit_put, 299 a4l_buf_count; 299 a4l_buf_prepare_absget, 302 a4l_buf_prepare_absget, 302 a4l_buf_prepare_absget, 302 a4l_buf_prepare_absget, 302 a4l_buf_prepare_absget, 302 a4l_buf_prepare_but, 304 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_clear, 444 rt_buffer_clear, 444 rt_buffer_clear, 444 rt_buffer_read_timed, 447 rt_buffer_read_timed, 449 rt_buffer_write_until, 451 CAN Devices, 43 CAN_ETRLMODE_3_SAMPLES, 53 COMPAT_rt_event_creat Transition kit, 556 COMPAT_rt_texs_est_periodic	RTDM_EXECUTE_ATOMICALLY, 25	
Real-time IPC, 85 board_name al_descriptor, 567 Buffer descriptor, 567 Buffer descriptor, 567 Buffer descriptor, 97 xnbufd_copy_from kmem, 99 xnbufd_copy_from kmem, 99 xnbufd_copy_from kmem, 100 xnbufd_map_kread, 101 xnbufd_map_kread, 101 xnbufd_map_kread, 102 xnbufd_map_uwrite, 103 xnbufd_ummap_kread, 104 xnbufd_ummap_kread, 104 xnbufd_ummap_kread, 104 xnbufd_ummap_kread, 105 Buffer management services, 296 a4l_buf_commit_absput, 298 a4l_buf_commit_absput, 298 a4l_buf_commit_but, 299 a4l_buf_commit_put, 299 a4l_buf_prepare_absput, 302 a4l_buf_prepare_absgut, 302 a4l_buf_prepare_absgut, 302 a4l_buf_prepare_absgut, 302 a4l_buf_prepare_put, 304 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_clear, 444 rt_buffer_clear, 444 rt_buffer_delete, 445 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 449 rt_buffer_write_until, 449 rt_buffer_write_until, 449 rt_buffer_write_until, 449 rt_buffer_write_until, 449 rt_buffer_write_until, 449 rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITTIME_TYPE_65 CAN_TAT_rt_event_clear Transition kit, 556 COMPAT_rt_text_set_periodic		-
board_name a4l_descriptor, 567 ### Aid_descriptor, 97 ### Aid_descriptor, 101 ### Aid_descriptor, 102 ### Aid_descriptor, 103 ### Aid_descriptor, 104 ### Aid_descriptor, 105 ### Aid_descriptor, 104 ### Aid_d		·
adl_descriptor, 567 Buffer descriptor, 567 Buffer descriptor, 567 Buffer descriptor, 567 Buffer descriptor, 57 xnbufd_copy_from_kmem, 99 xnbufd_copy_to_kmem, 100 xnbufd_invalidate, 101 xnbufd_map_kread, 101 xnbufd_map_kread, 102 xnbufd_map_uread, 102 xnbufd_map_ureit, 103 xnbufd_ummap_kread, 104 xnbufd_ummap_kread, 104 xnbufd_ummap_write, 105 Buffer management services, 296 adl_buf_commit_absput, 298 adl_buf_commit_dest, 298 adl_buf_commit_get, 298 adl_buf_commit_get, 298 adl_buf_commit_get, 298 adl_buf_prepare_absput, 302 adl_buf_prepare_get, 303 adl_buf_prepare_dest, 304 adl_buf_prepare_dest, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_loind, 443 rt_buffer_loind, 443 rt_buffer_loind, 443 rt_buffer_loind, 444 rt_buffer_cead_timed, 447 rt_buffer_read_durtil, 448 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_unbind, 449 rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITIME_STAMP, 58 SIOCGCANNSTATE, 60 SIOCGCANSTATE, 60 SIOCSCANCUSTOMBITTIME, 59 SIOCSCANCUSTOMBITTIME, 59 SIOCSCANCUSTOMBITTIME, 59 SIOCSCANCUSTOMBITTIME, 50 SIOCSCA	·	
Buffer descriptor, 97 xnbufd_copy_fto_kmem, 100 xnbufd_copy_to_kmem, 100 xnbufd_map_kread, 101 xnbufd_map_kread, 101 xnbufd_map_kread, 102 xnbufd_map_write, 102 xnbufd_map_write, 103 xnbufd_reset, 103 xnbufd_ummap_kread, 104 xnbufd_ummap_kread, 104 xnbufd_ummap_kread, 105 xnbufd_ummap_write, 105 Buffer management services, 296 a4l_buf_commit_absput, 298 a4l_buf_commit_get, 299 a4l_buf_commit_get, 299 a4l_buf_commit_get, 299 a4l_buf_erount, 299 a4l_buf_prepare_absget, 302 a4l_buf_prepare_but, 304 a4l_buf_prepare_but, 304 a4l_buf_prepare_but, 304 a4l_buf_prepare_but, 304 a4l_buf_prepare_but, 304 a4l_buf_prepare_absget, 302 a4l_buf_prepare_but, 304 a4l_buf_prepare_bu	_	
xnbufd_copy_to_kmem, 190 xnbufd_copy_to_kmem, 100 xnbufd_map_kcead, 101 xnbufd_map_kread, 101 xnbufd_map_kread, 102 xnbufd_map_write, 102 xnbufd_map_write, 103 xnbufd_map_write, 103 xnbufd_umap_write, 103 xnbufd_umap_kcead, 104 xnbufd_unmap_write, 105 Buffer management services, 296 a4l_buf_commit_abspet, 297 a4l_buf_commit_abspet, 298 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_prepare_abspet, 301 a4l_buf_prepare_abspet, 302 a4l_buf_prep		
xnbufd_copy_to_kmem, 100 xnbufd_map_kread, 101 xnbufd_map_kread, 102 xnbufd_map_uread, 102 xnbufd_map_uread, 102 xnbufd_map_write, 103 xnbufd_unmap_kread, 104 xnbufd_unmap_kread, 104 xnbufd_unmap_kread, 104 xnbufd_unmap_write, 105 xnbufd_unmap_uread, 105 xnbufd_unmap_uread, 105 xnbufd_unmap_urite, 105 Buffer management services, 296 a4l_buf_commit_absget, 297 a4l_buf_commit_get, 298 a4l_buf_commit_put, 299 a4l_buf_count, 299 a4l_buf_count, 299 a4l_buf_prepare_absget, 302 a4l_buf_prepare_but, 304 a4l_buf_prepare_but, 305 a4l_buf_prepare_but, 304 a4l_buf_prepare_but, 304 a4l_buf_prepare_but, 304 a4l_buf_prepare_but, 304 a4l_buf_prepare_but, 305 a4l_buf_prepare_but, 304 a4l_buf_prepare_but, 305 a4l_buf_prepare_but, 304 a4l_buf_prepare_but, 305 a4l_buf_prepare_but, 306 a4l_buf_prepare_but, 306 a4l_buf_prepare_but, 306 a4l_buf_prepare_but, 306 a4l_buf_prepare_but_buf_prepare_but_buf_prepare_but_buf_prepare_buf_buf_prepare_but_buf_buf_prepare	•	
xnbufd_map_kwrite, 101 xnbufd_map_kwrite, 102 xnbufd_map_kwrite, 102 xnbufd_map_uwrite, 103 xnbufd_map_uwrite, 103 xnbufd_map_write, 103 xnbufd_unmap_kead, 104 xnbufd_unmap_kwrite, 104 xnbufd_unmap_write, 105 Buffer management services, 296 a4l_buf_commit_absput, 298 a4l_buf_commit_absput, 298 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_prepare_absput, 301 a4l_buf_prepare_absput, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_absput, 303 a4l_buf_prepare_absput, 304 a4l_get_emd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_clear, 444 rt_buffer_clear, 444 rt_buffer_fead_unit, 448 rt_buffer_read_unit, 448 rt_buffer_read_timed, 447 rt_buffer_read_timed, 450 rt_buffer_write_timed, 450 rt_buffer_write_indin, 449 rt_buffer_write_indin,		The state of the s
xnbufd_map_kread, 101 xnbufd_map_write, 102 xnbufd_map_uvrite, 103 xnbufd_map_uvrite, 103 xnbufd_map_uvrite, 103 xnbufd_unmap_kread, 104 xnbufd_unmap_kread, 104 xnbufd_unmap_kread, 105 xnbufd_unmap_write, 105 Suffer management services, 296 a4l_buf_commit_absput, 298 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_prepare_absput, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_absput, 302 a4l_buf_repare_put, 304 a4l_get_chan, 305 a4l_get_chan, 30		· · · · · · · · · · · · · · · · · · ·
xnbufd_map_levarite, 102 xnbufd_map_uread, 102 xnbufd_map_uread, 103 xnbufd_unmap_kread, 104 xnbufd_unmap_kreite, 105 xnbufd_unmap_write, 105 Buffer management services, 296 a4l_buf_commit_absput, 298 a4l_buf_commit_get, 299 a4l_buf_commit_get, 299 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_evt, 301 a4l_buf_prepare_absput, 302 a4l_buf_prepare_but, 304 a4l_get_cmd, 305 a4l_get_cmd,	-	· · · · · · · · · · · · · · · · · · ·
xnbufd_map_uread, 102 xnbufd_reset, 103 xnbufd_unmap_kread, 104 xnbufd_unmap_kread, 104 xnbufd_unmap_ureit, 105 xnbufd_unmap_ureit, 105 xnbufd_unmap_ureit, 105 Buffer management services, 296 a4l_buf_commit_absput, 298 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_evt, 301 a4l_buf_prepare_absput, 302 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_delete, 445 rt_buffer_delete, 445 rt_buffer_read_utfli, 448 rt_buffer_read_utfli, 448 rt_buffer_read_utfli, 449 rt_buffer_read_utfli, 449 rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITTIME_TYPE, 65 CAN_CTRLMODE_LISTENONLY, 54 SIOCSCANBAUDRATE, 61 SIOCSCANBAUDRATE, 61 SIOCSCANCUSTOMBITTIME, 63 SIOCSCANDevices, 65 CAN_ETLMODE, 63 CAN_Devices, 65 CAN_ETLMODE, 63 CAN_E		•
xnbufd_map_uwrite, 103 xnbufd_reset, 103 xnbufd_unmap_kread, 104 xnbufd_unmap_kread, 104 xnbufd_unmap_write, 104 xnbufd_unmap_write, 105 Buffer management services, 296 a4l_buf_commit_absget, 297 a4l_buf_commit_absput, 298 a4l_buf_commit_get, 298 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_prepare_absget, 301 a4l_buf_prepare_absgut, 302 a4l_buf_prepare_absgut, 302 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 303 a4l_get_cnda, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_bind, 443 rt_buffer_clear, 444 rt_buffer_delete, 445 rt_buffer_read_utili, 448 rt_buffer_read_utili, 448 rt_buffer_read_timed, 447 rt_buffer_read_utili, 448 rt_buffer_read_utili, 449 rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITTIME_TYPE, 65 CAN_CTRLMODE_iSTENONLY, 54 SIOCSCANCTRLMODE, 63 SOL_CAN_RAW, 64 CAN_BITTIME_TYPE CAN Devices, 65 CAN_CTRLMODE_ISTENONLY CAN Devices, 53 CAN_CTRLMODE_LOOPBACK CAN_Devices, 54 CAN_Devices, 55 CAN_RAW_ERR_FILTER CAN Devices, 55 CAN_RAW_ERCV_OWN_MSGS CAN_Devices, 56 CAN_RAW_ERCV_OWN_MSGS CAN_Devices, 56 COMPAT_rt_alarm_create Transition Kit, 556 COMPAT_rt_event_clear Transition Kit, 556 COMPAT_rt_event_signal Transition Kit, 556 COMPAT_rt_alaxk_create Transition Kit, 556 COMPAT_rt_task_create Transition Kit, 556 COMPAT_rt_task_set_periodic		
xnbufd_reset, 103 xnbufd_unmap_kread, 104 xnbufd_unmap_kwrite, 104 xnbufd_unmap_write, 105 xnbufd_unmap_write, 104 xnbufd_unmap_write, 105 xnbufd_unma		
xnbufd_unmap_kread, 104 xnbufd_unmap_uwrite, 105 xnbufd_unmap_uwrite, 105 xnbufd_unmap_uwrite, 105 Buffer management services, 296 a4l_buf_commit_absget, 297 a4l_buf_commit_absput, 298 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_commit_put, 299 a4l_buf_prepare_absget, 301 a4l_buf_prepare_absput, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_get_chan, 305 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_leadete, 444 rt_buffer_leadete, 445 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 449 rt_buffer_write_timed, 450 rt_buffer_wr		· · · · · · · · · · · · · · · · · · ·
xnbufd_unmap_kwrite, 104 xnbufd_unmap_urread, 105 xnbufd_unmap_uwrite, 105 Buffer management services, 296 a4l_buf_commit_absput, 298 a4l_buf_commit_absput, 298 a4l_buf_commit_put, 299 a4l_buf_evt, 301 a4l_buf_get, 301 a4l_buf_prepare_absput, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 304 a4l_get_chan, 305 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_create, 444 rt_buffer_create, 444 rt_buffer_create, 444 rt_buffer_read_until, 448 rt_buffer_read_until, 448 rt_buffer_read_until, 448 rt_buffer_write_dimed, 447 rt_buffer_read_until, 448 rt_buffer_write_timed, 450 rt_buffer_write_timed, 450 rt_buffer_write_timed, 450 rt_buffer_write_timed, 450 rt_buffer_write_timed, 450 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN_Devices, 43 CAN_CTRLMODE_LISTENONLY CAN_Devices, 54 CAN_EXTRLMODE_LISTENONLY CAN_Devices, 56 CAN_RAW_ERC_V_OWN_MSGS CAN_Devices, 56 CAN_RAW_RECV_OWN_MSGS CAN_Devices, 56 CAN_STATE CAN_Devices, 56 CAN_STATE CAN_Devices, 56 COMPAT_rt_alarm_create Transition Kit, 553 COMPAT_rt_event_clear Transition Kit, 555 COMPAT_rt_event_create Transition Kit, 555 COMPAT_rt_event_create Transition Kit, 556 COMPAT_rt_task_create Transition Kit, 556 COMPAT_rt_task_create Transition Kit, 556 COMPAT_rt_task_cet_periodic	—	
xnbufd_unmap_uread, 105 xnbufd_unmap_uwrite, 105 Buffer management services, 296 a4l_buf_commit_absget, 297 a4l_buf_commit_absput, 298 a4l_buf_commit_put, 299 a4l_buf_count, 299 a4l_buf_count, 299 a4l_buf_evt, 301 a4l_buf_get, 301 a4l_buf_prepare_absget, 302 a4l_buf_prepare_absget, 302 a4l_buf_prepare_get, 303 a4l_buf_prepare_put, 304 a4l_get_chan, 305 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_cleat, 444 rt_buffer_cleat, 444 rt_buffer_cread_timed, 447 rt_buffer_read_timed, 449 rt_buffer_write_timed, 450 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITTIME_TYPE CAN Devices, 65 CAN_CTRLMODE_JSENAPLES, 53 CAN_Devices, 65 CAN_CTRLMODE_JISTENONLY, 54 CAN_Devices, 53 CAN_CTRLMODE_JSENAPLES, 53 CAN_CTRLMODE_LISTENONLY, 54 CAN_Devices, 54 CAN_CTRLMODE_JSENAPLES, 53 CAN_CTRLMODE_LISTENONLY CAN Devices, 54 CAN_CTRLMODE_JSENAPLES, 53 CAN_CTRLMODE_LISTENONLY CAN Devices, 55 CAN_CTRLMODE_LISTENONLY CAN Devices, 55 CAN_CTRLMODE_LISTENONLY CAN Devices, 55 CAN_CTRLMODE_LISTENONLY CAN Devices, 55 CAN_CTRLMODE_LISTENONLY CAN_Devices, 55 CAN_CTRL	_ ·- ·	<i>,</i>
xnbufd_unmap_uwrite, 105 Buffer management services, 296 a4l_buf_commit_absget, 297 a4l_buf_commit_absput, 298 a4l_buf_commit_get, 298 a4l_buf_commit_put, 299 a4l_buf_count, 299 a4l_buf_count, 299 a4l_buf_evt, 301 a4l_buf_prepare_absget, 302 a4l_buf_prepare_absget, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_get, 303 a4l_buf_prepare_put, 304 a4l_get_chan, 305 a4l_get_chan, 305 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_bind, 443 rt_buffer_clear, 444 rt_buffer_clear, 444 rt_buffer_cleat, 444 rt_buffer_read_until, 448 rt_buffer_read_until, 448 rt_buffer_read_until, 448 rt_buffer_read_until, 448 rt_buffer_read_until, 449 rt_buffer_write, 449 rt_buffer_write_until, 451 CAN Devices, 43 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_LISTENONLY, 54 CAN Devices, 66 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_1STENONLY, 54 CAN Devices, 65 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_1STENONLY, 54 CAN Devices, 54 CAN_Devices, 54 CAN_Devices, 55 CAN_RAW_ERC_YOWN_MSGS CAN_Devices, 56 CAN_RAW_ERC_YOWN_MSGS CAN_Devices, 56 CAN_STATE CAN Devices, 56 CAN_STATE CAN Devices, 56 CAN_STATE CAN Devices, 66 COMPAT_rt_alarm_create Transition Kit, 553 COMPAT_rt_event_clear Transition Kit, 556 COMPAT_rt_task_create Transition Kit, 556 COMPAT_rt_task_set_periodic		
Buffer management services, 296 a4l buf_commit_absget, 297 a4l_buf_commit_absput, 298 a4l_buf_commit_get, 298 a4l_buf_commit_put, 299 a4l_buf_count, 299 a4l_buf_count, 299 a4l_buf_evt, 301 a4l_buf_get, 301 a4l_buf_prepare_absget, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_pet, 303 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_basput, 302 a4l_buf_prepare_basput, 302 a4l_buf_prepare_basput, 302 a4l_buf_prepare_basput, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_basput, 302 a4l_buf_prepare_gasput, 302 a4l_buf_prepare_gat, 303 a4l_buf_prepare_gat, 304 a4l_ouf_prepare_gat, 303 a4l_buf_prepare_gat, 303 ad_buf_prepare_gatput, 304 ad_buf_prepare_gatput, 304 ad_b	_ ·- ·	CAN_BITTIME_TYPE
a4l_buf_commit_absget, 297 a4l_buf_commit_absput, 298 a4l_buf_commit_get, 298 a4l_buf_commit_put, 299 a4l_buf_count, 299 a4l_buf_count, 299 a4l_buf_get, 301 a4l_buf_get, 301 a4l_buf_prepare_absget, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 304 a4l_get_chan, 305 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_clear, 444 rt_buffer_clear, 444 rt_buffer_delete, 445 rt_buffer_read_until, 448 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 449 rt_buffer_write, 449 rt_buffer_write, 449 rt_buffer_write_until, 451 CAN_Devices, 53 CAN_CRILMODE_LISTENONLY, 54 CAN_Devices, 54 CAN_Devices, 55 CAN_RAW_ERP_FILTER CAN Devices, 55 CAN_RAW_ERCY_OWN_MSGS CAN_RAW_RECY_OWN_MSGS CAN_EVICES CAN_Devices, 56 CAN_RAW_RECY_OWN_MSGS CAN_EVICES CAN_Devices, 56 CAN_RAW_RECY_OWN_MSGS CAN_Devices, 56 COMPAT_rt_event_clear Transition Kit, 555 COMPAT_rt_event_signal Transition Kit, 556 COMPAT_rt_task_create Transition Kit, 556 COMPAT_rt_task_set_periodic	_ '- '-	
a4 _buf_commit_get, 298 a4 _buf_commit_get, 298 a4 _buf_commit_get, 299 a4 _buf_commit_get, 298 a4 _buf_comit_get, 298 a4 _buf_perpare_absput, 302 a4 _buf_prepare_absput, 302 a4 _bu		CAN_CTRLMODE_3_SAMPLES
a4l_buf_commit_get, 298 a4l_buf_commit_put, 299 a4l_buf_count, 299 a4l_buf_evt, 301 a4l_buf_get, 301 a4l_buf_get, 301 a4l_buf_prepare_absget, 302 a4l_buf_prepare_get, 303 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_get_chan, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_bind, 443 rt_buffer_create, 444 rt_buffer_create, 444 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_duntil, 448 rt_buffer_read_duntil, 448 rt_buffer_write, 449 rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN_CTRLMODE_LISTENONLY, 54 CAN_CTRLMODE_LOOPBACK CAN Devices, 54 CAN_CTRLMODE_LOOPBACK CAN Devices, 54 CAN_ERR_LOSTARB_UNSPEC CAN Devices, 54 CAN_ERR_LOSTARB_UNSPEC CAN Devices, 55 CAN_RAW_ERR_FILTER CAN Devices, 55 CAN_RAW_FILTER CAN Devices, 55 CAN_RAW_FILTER CAN Devices, 56 CAN_STATE CAN Devices, 66 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_ask_create Transition Kit, 556 COMPATrt_ask_create Transition Kit, 558 COMPATrt_task_set_periodic	-	CAN Devices, 53
a4l_buf_commit_get, 298 a4l_buf_commit_put, 299 a4l_buf_count, 299 a4l_buf_count, 299 a4l_buf_evt, 301 a4l_buf_get, 301 a4l_buf_grepare_absget, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 303 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_bind, 443 rt_buffer_create, 444 rt_buffer_create, 444 rt_buffer_read_timed, 445 rt_buffer_read_timed, 447 rt_buffer_read_durtil, 448 rt_buffer_read_durtil, 448 rt_buffer_write_duete, 449 rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN_Devices, 54 CAN_Devices, 55 CAN_RAW_ERCY_OWN_MSGS CAN_Devices, 56 CAN_RAW_RECV_OWN_MSGS CAN_Devices, 56 CAN_STATE CAN_Devices, 66 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_est_periodic		CAN CTRLMODE LISTENONLY
a4l_buf_count, 299 a4l_buf_ceut, 301 a4l_buf_get, 301 a4l_buf_prepare_absget, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_get, 303 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_ptout, 305 a4l_get_chan, 305 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_clear, 444 rt_buffer_create, 444 rt_buffer_create, 444 rt_buffer_read_until, 448 rt_buffer_read_until, 448 rt_buffer_read_until, 448 rt_buffer_write_until, 451 CAN_Devices, 43 CAN_CTRLMODE_LOOPBACK CAN Devices, 54 CAN_ERR_LOSTARB_UNSPEC CAN Devices, 55 CAN_RAW_ERR_FILTER CAN Devices, 55 CAN_RAW_FILTER CAN Devices, 55 CAN_RAW_LOOPBACK CAN Devices, 56 CAN_RAW_RECV_OWN_MSGS CAN Devices, 56 CAN_STATE CAN Devices, 66 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic		
a4l_buf_evt, 301 a4l_buf_evt, 301 a4l_buf_evt, 301 a4l_buf_prepare_absget, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_get, 303 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_get_chan, 305 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_bind, 443 rt_buffer_clear, 444 rt_buffer_create, 444 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 54 CAN Devices, 55 CAN_RAW_ERR_FILTER CAN Devices, 55 CAN_RAW_ILTER CAN Devices, 56 CAN_RAW_RECV_OWN_MSGS CAN Devices, 56 CAN_STATE CAN Devices, 66 COMPAT_rt_alarm_create Transition Kit, 553 COMPAT_rt_event_clear Transition Kit, 554 COMPAT_rt_event_create Transition Kit, 555 COMPAT_rt_event_signal Transition Kit, 556 COMPAT_rt_pipe_create Transition Kit, 556 COMPAT_rt_pipe_create Transition Kit, 556 COMPAT_rt_task_create Transition Kit, 558 COMPAT_rt_task_create Transition Kit, 558 COMPAT_rt_task_set_periodic	·	· · · · · · · · · · · · · · · · · · ·
a4l_buf_get, 301 a4l_buf_get, 301 a4l_buf_prepare_absget, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 303 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_get_chan, 305 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_bind, 443 rt_buffer_clear, 444 rt_buffer_create, 444 rt_buffer_read_unti, 446 rt_buffer_read_until, 448 rt_buffer_read_until, 448 rt_buffer_write_until, 449 rt_buffer_write_timed, 450 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN_ERR_LOSTARB_UNSPEC CAN Devices, 54 CAN_Devices, 65 CAN_RAW_ERR_FILTER CAN Devices, 55 CAN_RAW_FILTER CAN Devices, 55 CAN_RAW_LOOPBACK CAN Devices, 56 CAN_RAW_ECV_OWN_MSGS CAN Devices, 56 CAN_STATE CAN Devices, 66 COMPAT_rt_alarm_create Transition Kit, 553 COMPAT_rt_event_clear Transition Kit, 555 COMPAT_rt_event_create Transition Kit, 555 COMPAT_rt_event_create Transition Kit, 556 COMPAT_rt_event_signal Transition Kit, 556 COMPAT_rt_pipe_create Transition Kit, 556 COMPAT_rt_pipe_create Transition Kit, 556 COMPAT_rt_task_create Transition Kit, 558 COMPAT_rt_task_set_periodic		
a4l_buf_prepare_absget, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_get, 303 a4l_buf_prepare_get, 303 a4l_buf_prepare_put, 304 a4l_buf_prepare_det, 305 CAN_Devices, 65 CAN_RAW_ERR_FILTER CAN Devices, 54 CAN_RAW_FILTER CAN Devices, 55 CAN_RAW_LOOPBACK CAN Devices, 56 CAN_RAW_RECV_OWN_MSGS CAN Devices, 56 CAN_STATE CAN Devices, 66 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 553 COMPATrt_event_clear Transition Kit, 555 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic		
a4l_buf_prepare_absput, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_absput, 302 a4l_buf_prepare_absput, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_prepare_put, 304 a4l_buf_put, 304 a4l_buf_put, 304 a4l_get_chan, 305 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_bind, 443 rt_buffer_clear, 444 rt_buffer_clear, 444 rt_buffer_clear, 444 rt_buffer_read_timed, 445 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_timed, 449 rt_buffer_write_until, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN_BAW_EREV_OWN_MSGS CAN_BAW_RECV_OWN_MSGS CAN_STATE CAN Devices, 56 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 554 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 CAN_CTRLMODE_LISTENONLY, 54		
a4l_bur_prepare_absput, 302 a4l_bur_prepare_get, 303 a4l_bur_prepare_put, 304 a4l_bur_prepare_put, 304 a4l_bur_prepare_put, 304 a4l_bur_put, 304 a4l_bur_put, 304 a4l_get_chan, 305 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_bind, 443 rt_buffer_clear, 444 rt_buffer_create, 444 rt_buffer_create, 444 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_write_duted rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 65 CAN_RAW_ERCV_OWN_MSGS CAN Devices, 56 CAN_RAW_RECV_OWN_MSGS CAN_Devices, 56 CAN_STATE CAN Devices, 66 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 554 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 CAN_CTRLMODE_LISTENONLY, 54		· · · · · · · · · · · · · · · · · · ·
a4l_buf_prepare_get, 303 a4l_buf_prepare_put, 304 a4l_buf_put, 304 a4l_buf_put, 304 a4l_get_chan, 305 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_bind, 443 rt_buffer_clear, 444 rt_buffer_create, 444 rt_buffer_delete, 445 rt_buffer_inquire, 446 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN_RAW_FILTER CAN Devices, 55 CAN_RAW_LOOPBACK CAN Devices, 56 CAN_RAW_RECV_OWN_MSGS CAN_Devices, 56 CAN_STATE CAN Devices, 66 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 555 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic		—
a4l_buf_prepare_put, 304 a4l_buf_put, 304 a4l_buf_put, 304 a4l_get_chan, 305 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_bind, 443 rt_buffer_clear, 444 rt_buffer_create, 444 rt_buffer_delete, 445 rt_buffer_inquire, 446 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_write, 449 rt_buffer_write, 449 rt_buffer_write_until, 451 CAN Devices, 54 CAN_RAW_FILTER CAN Devices, 55 CAN_RAW_LOOPBACK CAN Devices, 56 CAN_RAW_RECV_OWN_MSGS CAN Devices, 66 COMPAT_rt_alarm_create Transition Kit, 553 COMPAT_rt_event_clear Transition Kit, 554 COMPAT_rt_event_create Transition Kit, 555 COMPAT_rt_event_signal Transition Kit, 556 COMPAT_rt_pipe_create Transition Kit, 556 COMPAT_rt_tpipe_create Transition Kit, 556 COMPAT_rt_task_create Transition Kit, 558 COMPAT_rt_task_create Transition Kit, 558 COMPAT_rt_task_set_periodic	· _ -	•
a4I_bur_put, 304 a4I_get_chan, 305 a4I_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_bind, 443 rt_buffer_clear, 444 rt_buffer_create, 444 rt_buffer_delete, 445 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_write, 449 rt_buffer_write, 449 rt_buffer_write_until, 451 CAN_RAW_LOOPBACK CAN_Devices, 56 CAN_RAW_RECV_OWN_MSGS CAN_Devices, 56 CAN_STATE CAN Devices, 66 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 554 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_tpipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic		
a4l_get_cnd, 305 a4l_get_cmd, 305 Buffer services, 442 B_PRIO, 443 rt_buffer_bind, 443 rt_buffer_clear, 444 rt_buffer_create, 444 rt_buffer_delete, 445 rt_buffer_inquire, 446 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_unbind, 449 rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 56 CAN_RAW_RECV_OWN_MSGS CAN Devices, 56 CAN_STATE CAN Devices, 66 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 554 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic	a4l_buf_put, 304	•
Buffer services, 442 B_PRIO, 443 rt_buffer_bind, 443 rt_buffer_clear, 444 rt_buffer_create, 444 rt_buffer_read_elete, 445 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_write_unbind, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN_RAW_RECV_OWN_MSGS CAN_BITTIME_TYPE, 65 CAN_BAW_RECV_OWN_MSGS CAN_BITTIME_TYPE, 65 CAN_BITTIME_TYPE, 65 CAN_BITTIMODE_LISTENONLY, 54 CAN_RAW_LOOPBACK CAN_RAW_LOOPBACK CAN_RAW_LOOPBACK CAN_Devices, 56 CAN_RAW_RECV_OWN_MSGS CAN_RAW_RECV_OWN_MSGS CAN_RAW_RECV_OWN_MSGS CAN_RAW_RECV_OWN_MSGS CAN_RAW_RECV_OWN_MSGS CAN_RAW_RECV_OWN_MSGS CAN_RAW_RECV_OWN_MSGS CAN_RAW_RECV_OWN_MSGS CAN_RAW_LOOPBACK CAN Devices, 56 CAN_RAW_RECV_OWN_MSGS CAN_Devices, 56 CAN_STATE CAN Devices, 66 COMPAT_rt_event_clear Transition Kit, 555 COMPAT_rt_event_signal Transition Kit, 556 COMPAT_rt_pipe_create Transition Kit, 556 COMPAT_rt_task_create Transition Kit, 558 COMPAT_rt_task_set_periodic	a4l_get_chan, 305	
Buller services, 442 B_PRIO, 443 rt_buffer_bind, 443 rt_buffer_clear, 444 rt_buffer_create, 444 rt_buffer_delete, 445 rt_buffer_inquire, 446 rt_buffer_read_timed, 447 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_unbind, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 56 CAN_STATE CAN Devices, 66 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 554 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic		
rt_buffer_bind, 443 rt_buffer_clear, 444 rt_buffer_create, 444 rt_buffer_delete, 445 rt_buffer_inquire, 446 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_unbind, 449 rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN_RAW_RECV_OWN_MSGS CAN Devices, 56 CAN_STATE CAN Devices, 66 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 554 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic	Buffer services, 442	
rt_buffer_clear, 444 rt_buffer_create, 444 rt_buffer_delete, 445 rt_buffer_inquire, 446 rt_buffer_read, 447 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_unbind, 449 rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 56 CAN Devices, 66 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 554 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic	B_PRIO, 443	•
rt_buffer_create, 444 rt_buffer_delete, 445 rt_buffer_inquire, 446 rt_buffer_read, 447 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_unbind, 449 rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN_Devices, 66 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 554 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic	rt_buffer_bind, 443	
rt_buffer_delete, 445 rt_buffer_inquire, 446 rt_buffer_read, 447 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_unbind, 449 rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 66 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 554 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic	rt_buffer_clear, 444	
rt_buffer_inquire, 446 rt_buffer_read, 447 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_unbind, 449 rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITTIME_TYPE, 65 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_LISTENONLY, 54 COMPATrt_alarm_create Transition Kit, 553 COMPATrt_event_clear Transition Kit, 554 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_topipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic	rt_buffer_create, 444	_
rt_buffer_read, 447 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_unbind, 449 rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITTIME_TYPE, 65 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_LISTENONLY, 54 Transition Kit, 553 COMPATrt_event_clear Transition Kit, 554 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_topipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic	rt buffer delete, 445	
rt_buffer_read, 447 rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_unbind, 449 rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITTIME_TYPE, 65 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_LISTENONLY, 54 COMPATrt_event_create Transition Kit, 554 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic	rt buffer inquire, 446	
rt_buffer_read_timed, 447 rt_buffer_read_until, 448 rt_buffer_unbind, 449 rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITTIME_TYPE, 65 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_LISTENONLY, 54 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic	·	· · · · · · · · · · · · · · · · · · ·
rt_buffer_read_until, 448 rt_buffer_unbind, 449 rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITTIME_TYPE, 65 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_LISTENONLY, 54 Iransition Kit, 554 COMPATrt_event_create Transition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic		
rt_buffer_unbind, 449 rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITTIME_TYPE, 65 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_LISTENONLY, 54 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic		· · · · · · · · · · · · · · · · · · ·
rt_buffer_write, 449 rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITTIME_TYPE, 65 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_LISTENONLY, 54 Iransition Kit, 555 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 556 COMPATrt_task_set_periodic		
rt_buffer_write_timed, 450 rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITTIME_TYPE, 65 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_LISTENONLY, 54 COMPATrt_event_signal Transition Kit, 556 COMPATrt_pipe_create Transition Kit, 556 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic		
rt_buffer_write_until, 451 CAN Devices, 43 CAN_BITTIME_TYPE, 65 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_LISTENONLY, 54 Transition Kit, 556 COMPATrt_task_create Transition Kit, 556		
COMPATrt_pipe_create CAN Devices, 43 CAN_BITTIME_TYPE, 65 CAN_CTRLMODE_3_SAMPLES, 53 CAN_CTRLMODE_LISTENONLY, 54 COMPATrt_task_create Transition Kit, 558 COMPATrt_task_set_periodic		Transition Kit, 556
CAN_BITTIME_TYPE, 65		
CAN_CTRLMODE_3_SAMPLES, 53 Transition Kit, 558 CAN_CTRLMODE_LISTENONLY, 54 COMPATrt_task_set_periodic	CAN Devices, 43	
CAN_CTRLMODE_3_SAMPLES, 53 Transition Kit, 558 CAN_CTRLMODE_LISTENONLY, 54 COMPATrt_task_set_periodic	CAN_BITTIME_TYPE, 65	COMPATrt_task_create
CAN_CTRLMODE_LISTENONLY, 54 COMPATrt_task_set_periodic		
	:	
	CAN_CTRLMODE_LOOPBACK, 54	

can_bittime, 574	Big dual kernel lock, 24
can_bittime_btr, 575	cobalt_atomic_leave
can bittime std, 575	Big dual kernel lock, 25
can_filter, 576	cobalt_vfroot
can_id, 576	Virtual file services, 287
can_mask, 577	Condition variable services, 453
can_filter_t	rt_cond_bind, 454
CAN Devices, 64	rt_cond_broadcast, 455
can_frame, 577	rt_cond_create, 455
can_id, 578	rt_cond_delete, 456
can_frame_t	rt_cond_inquire, 457
CAN Devices, 65	rt_cond_signal, 457
can_id	rt_cond_unbind, 458
can_filter, 576	rt_cond_wait, 458
can_frame, 578	rt_cond_wait_timed, 459
can ifindex	rt_cond_wait_until, 460
sockaddr can, 601	Condition variables, 320
can_ifreq, 578	pthread_cond_broadcast, 321
can_mask	pthread cond destroy, 322
can_filter, 577	pthread_cond_init, 322
_	pthread cond signal, 323
Channels and ranges, 21	pthread_cond_timedwait, 324
chans	pthread_cond_wait, 324
a4l_channels_desc, 564	pthread_condattr_destroy, 325
Clock Services, 169	pthread_condattr_getclock, 326
rtdm_clock_read, 169	· — — —
rtdm_clock_read_monotonic, 169	pthread_condattr_getpshared, 327
Clock services, 107	pthread_condattr_init, 327
xnclock_adjust, 107	pthread_condattr_setclock, 328
xnclock_deregister, 108	pthread_condattr_setpshared, 329
xnclock_register, 108	connectAF_RTIPC
xnclock_tick, 109	Real-time IPC, 87
clock_getres	context_size
Clocks and timers, 311	rtdm_driver, 592
clock_gettime	cpu
Clocks and timers, 312	xnsched, 610
clock nanosleep	curr
Clocks and timers, 312	xnsched, 610
clock settime	
Clocks and timers, 313	data_len
Clocks and timers, 310	a4l_cmd_desc, 566
	databuf
clock_getres, 311	xnvfile_snapshot_iterator, 621
clock_gettime, 312	date
clock_nanosleep, 312	rt_timer_info, 586
clock_settime, 313	Debugging services, 110
nanosleep, 314	Descriptor API, 406
timer_create, 315	a4l_close, 406
timer_delete, 316	a4l_fill_desc, 407
timer_getoverrun, 317	a4l_get_chinfo, 407
timer_gettime, 317	a4l_get_rnginfo, 408
timer_settime, 318	a4l_get_subdinfo, 408
close	a4l_open, 409
rtdm_fd_ops, 594	Descriptor Syscall API, 404
udd_device, 603	a4l_sys_desc, 404
close AF RTIPC	device
Real-time IPC, 87	rtdm_dev_context, 587
Cobalt, 115	Device Profiles, 155
Cobalt kernel, 116	RTIOC DEVICE INFO, 157
cobalt_atomic_enter	RTIOC_PURGE, 157
	· · · · · · · · · · · · · · · ·

Device Registration Services, 158 RTDM_DEVICE_TYPE_MASK, 159 RTDM_EXCLUSIVE, 159 RTDM_FIXED_MINOR, 159 RTDM_MAX_MINOR, 160 RTDM_NAMED_DEVICE, 160 RTDM_PROTOCOL_DEVICE, 160 rtdm_close_handler, 160 rtdm_dev_register, 161 rtdm_dev_unregister, 161 rtdm_drv_set_sysclass, 162	RTDM_CLASS_MAGIC, 638 RTDM_PROFILE_INFO, 638 rtdm_fd_device, 639 rtdm_fd_is_user, 639 rtdm_fd_to_private, 640 rtdm_private_to_fd, 640 driver_name a4I_descriptor, 567 Dynamic memory allocation services, 111 xnheap_alloc, 112 xnheap_destroy, 112
rtdm_get_unmapped_area_handler, 162	xnheap_free, 113
rtdm_ioctl_handler, 163	xnheap_init, 113
rtdm_mmap_handler, 164	xnheap_set_name, 114
rtdm_open_handler, 164	
rtdm_read_handler, 165	EV_ANY
rtdm_recvmsg_handler, 165	Event flag group services, 462
rtdm_select_handler, 166	EV_PRIO
rtdm_sendmsg_handler, 167	Event flag group services, 462
rtdm_socket_handler, 167	end
rtdm_write_handler, 168	xnvfile_regular_ops, 615
device_count	xnvfile_snapshot_ops, 623
rtdm_driver, 592	endfn
device_flags	xnvfile_snapshot_iterator, 621
rtdm_driver, 592	Event flag group services, 461
udd_device, 603	EV_ANY, 462
device_subclass udd device, 604	EV_PRIO, 462 rt_event_bind, 462
driver	rt_event_clear, 463
rtdm_device, 589	rt_event_create, 464
Driver API, 289	rt_event_delete, 465
Driver management services, 290	rt_event_inquire, 465
a4I_register_drv, 290	rt_event_signal, 466
a4I_unregister_drv, 291	rt_event_unbind, 466
Driver programming interface, 136	rt event wait, 468
Driver to driver services, 137	rt_event_wait_timed, 468
rtdm_accept, 138	rt_event_wait_until, 470
rtdm_bind, 139	Event Services, 201
rtdm_close, 139	rtdm_event_clear, 201
rtdm_connect, 140	rtdm_event_destroy, 202
rtdm_getpeername, 141	rtdm_event_init, 202
rtdm_getsockname, 142	rtdm_event_pulse, 203
rtdm_getsockopt, 142	rtdm_event_select, 203
rtdm_ioctl, 143	rtdm_event_signal, 204
rtdm_listen, 144	rtdm_event_timedwait, 204
rtdm_open, 145	rtdm_event_wait, 205
rtdm_read, 145	
rtdm_recv, 146	fd
rtdm_recvfrom, 147	a4l_descriptor, 567
rtdm_recvmsg, 148	fd.h
rtdm_send, 148	rtdm_fd_get, 651
rtdm_sendmsg, 149	rtdm_fd_lock, 652
rtdm_sendto, 150	rtdm_fd_put, 653
rtdm_setsockopt, 151	rtdm_fd_select, 653
rtdm_shutdown, 152	rtdm_fd_unlock, 654
rtdm_socket, 152	flags
rtdm_write, 153	a4l_channel, 563
driver.h	a4l_range, 571

net	include/rtdm/uapi/serial.h, 661
get xnvfile_lock_ops, 612	include/rtdm/uapi/testing.h, 670
·	include/rtdm/uapi/testing.ii, 676
get_unmapped_area	·
rtdm_fd_ops, 594	inesting
getpeernameAF_RTIPC	xnsched, 610
Real-time IPC, 88	interrupt
getsocknameAF_RTIPC	udd_device, 604
Real-time IPC, 88	Interrupt management, 119
getsockoptAF_RTIPC	xnintr_affinity, 119
Real-time IPC, 89	xnintr_attach, 120
	xnintr_destroy, 120
H_PRIO	xnintr detach, 121
Heap management services, 472	xnintr_disable, 121
Heap management services, 471	xnintr_enable, 122
H_PRIO, 472	xnintr_init, 122
rt_heap_alloc, 472	Interrupt Management Services, 215
rt_heap_alloc_timed, 472	rtdm_irq_disable, 218
rt_heap_alloc_until, 473	rtdm_irq_enable, 218
rt heap bind, 474	— ·—
rt_heap_create, 475	rtdm_irq_free, 219
	rtdm_irq_get_arg, 216
rt_heap_delete, 476	rtdm_irq_handler_t, 216
rt_heap_free, 476	rtdm_irq_request, 219
rt_heap_inquire, 477	Interrupt management services, 306
rt_heap_unbind, 478	a4l_free_irq, 306
heapsize	a4l_get_irq, 307
RT_HEAP_INFO, 582	a4l_request_irq, 307
htimer	ioctl
xnsched, 610	udd_device, 604
	ioctl_nrt
IDDP_LABEL	rtdm_fd_ops, 594
Real-time IPC, 78	ioctl_rt
IDDP_POOLSZ	rtdm_fd_ops, 594
Real-time IPC, 79	irq
idx_read_subd	udd_device, 605
a4l_descriptor, 567	udu_device, 003
idx subd	label
a4l_cmd_desc, 566	rtdm_device, 589
a4I_instruction, 570	rtipc_port_label, 598
idx write subd	len
a4I_descriptor, 567	udd_memregion, 607
In-kernel arithmetics, 96	length
xnarch_generic_full_divmod64, 96	a4l channels desc, 564
include/cobalt/kernel/rtdm/analogy/channel_ ←	Level 0 API, 430
range.h, 629	Level 1 API, 419
include/cobalt/kernel/rtdm/analogy/driver.h, 632	Level 2 API, 424
include/cobalt/kernel/rtdm/analogy/subdevice.h,	Iflags
641	xnsched, 611
include/cobalt/kernel/rtdm/driver.h, 633	lib/analogy/async.c, 683
include/cobalt/kernel/rtdm/fd.h, 650	lib/analogy/calibration.c, 684
include/cobalt/kernel/rtdm/udd.h, 672	lib/analogy/calibration.h, 681
include/rtdm/analogy.h, 675	lib/analogy/descriptor.c, 685
include/rtdm/can.h, 642	lib/analogy/internal.h, 682
include/rtdm/rtdm.h, 658	lib/analogy/range.c, 686
include/rtdm/serial.h, 660	lib/analogy/root_leaf.h, 687
include/rtdm/testing.h, 669	lib/analogy/sync.c, 688
include/rtdm/uapi/analogy.h, 676	lib/analogy/sys.c, 689
include/rtdm/uapi/can.h, 643	Lightweight key-to-object mapping service, 127
include/rtdm/uapi/ipc.h, 654	xnmap_create, 127
include/rtdm/uapi/rtdm.h, 658	xnmap_delete, 128

xnmap_enter, 129	mq_timedreceive, 340
xnmap_fetch, 129	mq_timedsend, 341
xnmap_fetch_nocheck, 130	mq_unlink, 342
xnmap remove, 130	min
Locking services, 125	a4l range, 571
splexit, 125	minor
splhigh, 126	rtdm_device, 589
spltest, 126	Misc services, 309
opitost, 120	a4l get time, 309
macb dma desc, 579	
macb tx skb, 579	mmap
magic	rtdm_fd_ops, 594
a4l_descriptor, 568	udd_device, 605
Math API, 410	mode
a4l_math_mean, 410	a4l_channels_desc, 565
a4l_math_polyfit, 411	mq_close
a4l math stddev, 411	Message queues, 334
a4l math stddev of mean, 412	mq_getattr
	Message queues, 334
max	mq_notify
a4l_range, 571	Message queues, 335
mem_regions	mq_open
udd_device, 605	Message queues, 336
Message pipe services, 488	mq_receive
P_MINOR_AUTO, 489	Message queues, 337
P_URGENT, 489	- · · · · · · · · · · · · · · · · · · ·
rt_pipe_bind, 489	mq_send
rt_pipe_create, 490	Message queues, 338
rt_pipe_delete, 491	mq_setattr
rt_pipe_read, 492	Message queues, 339
rt_pipe_read_timed, 492	mq_timedreceive
rt_pipe_read_until, 493	Message queues, 340
rt_pipe_stream, 494	mq_timedsend
rt_pipe_unbind, 495	Message queues, 341
rt_pipe_write, 495	mq_unlink
Message queue services, 497	Message queues, 342
Q_PRIO, 498	Mutex services, 211, 481
rt_queue_alloc, 498	rt mutex acquire, 482
rt_queue_bind, 499	rt mutex acquire timed, 482
rt queue create, 500	rt_mutex_acquire_until, 483
- • • •	rt_mutex_bind, 484
rt_queue_delete, 501	rt_mutex_create, 484
rt_queue_flush, 501	rt mutex delete, 485
rt_queue_free, 502	rt_mutex_uelete, 486
rt_queue_inquire, 503	_ ·
rt_queue_read, 503	rt_mutex_release, 486
rt_queue_read_timed, 504	rt_mutex_unbind, 487
rt_queue_read_until, 505	rtdm_mutex_destroy, 211
rt_queue_receive, 505	rtdm_mutex_init, 212
rt_queue_receive_timed, 506	rtdm_mutex_lock, 212
rt_queue_receive_until, 507	rtdm_mutex_timedlock, 213
rt_queue_send, 507	rtdm_mutex_unlock, 213
rt_queue_unbind, 508	Mutual exclusion, 344
Message queues, 333	pthread_mutex_destroy, 345
mq_close, 334	pthread_mutex_init, 346
mq_getattr, 334	pthread_mutex_lock, 346
mq_notify, 335	pthread mutex timedlock, 347
mq_open, 336	pthread_mutex_trylock, 348
mq_receive, 337	pthread_mutex_unlock, 349
mq_send, 338	pthread_mutexattr_destroy, 350
mq_setattr, 339	pthread_mutexattr_getprotocol, 350
my_sciaii, oss	piineau_mulexalii_gelprolocoi, 350

pthread_mutexattr_getpshared, 351	sched_yield, 367
pthread_mutexattr_gettype, 352	profile_info
pthread_mutexattr_init, 353	rtdm_driver, 592
pthread_mutexattr_setprotocol, 353	program_htick_shot
pthread_mutexattr_setpshared, 354	Timer services, 272
pthread_mutexattr_settype, 355	pthread_cond_broadcast
	Condition variables, 321
nanosecs_abs_t	pthread_cond_destroy
RTDM, 68	Condition variables, 322
nanosecs_rel_t	pthread_cond_init
RTDM, 69	Condition variables, 322
nanosleep	pthread_cond_signal
Clocks and timers, 314	Condition variables, 323
nb_bits	pthread_cond_timedwait
a4l_channel, 563	Condition variables, 324
nb_subd	pthread_cond_wait
a4l_descriptor, 568	Condition variables, 324
next	pthread_condattr_destroy
xnvfile_regular_ops, 615	Condition variables, 325
xnvfile_snapshot_ops, 623	pthread_condattr_getclock
Non-Real-Time Signalling Services, 221	Condition variables, 326
rtdm_nrtsig_destroy, 222	pthread_condattr_getpshared
rtdm_nrtsig_handler_t, 221	Condition variables, 327
rtdm_nrtsig_init, 222	pthread condattr init
rtdm_nrtsig_pend, 223	Condition variables, 327
rtdm_schedule_nrt_work, 223	pthread_condattr_setclock
nrdata	Condition variables, 328
xnvfile_snapshot_iterator, 621	pthread_condattr_setpshared
	Condition variables, 329
open	pthread_create
rtdm_fd_ops, 595	Thread management, 376
udd_device, 605	pthread_getschedparam
OWNER DT MILITEY INFO 500	Scheduling management, 382
RT_MUTEX_INFO, 583	pthread_getschedparam_ex
P MINOR AUTO	Scheduling management, 383
Message pipe services, 489	pthread_join
P_URGENT	Thread management, 377
Message pipe services, 489	pthread_kill
POSIX interface, 331	Thread management, 378
pSOS® emulator, 552	pthread make periodic np
pid	Transition Kit, 560
udd_signotify, 609	pthread_mutex_destroy
pos	Mutual exclusion, 345
xnvfile_regular_iterator, 613	pthread mutex init
private	Mutual exclusion, 346
xnvfile_regular_iterator, 613	pthread_mutex_lock
xnvfile snapshot iterator, 621	Mutual exclusion, 346
Process scheduling, 357	pthread_mutex_timedlock
sched_get_priority_max, 358	Mutual exclusion, 347
sched_get_priority_max_ex, 358	pthread_mutex_trylock
sched_get_priority_min, 359	Mutual exclusion, 348
sched_get_priority_min_ex, 360	pthread_mutex_unlock
sched_getconfig_np, 360	Mutual exclusion, 349
sched_getscheduler, 361	pthread_mutexattr_destroy
sched_getscheduler_ex, 362	Mutual exclusion, 350
sched_setconfig_np, 363	pthread_mutexattr_getprotocol
sched_setscheduler, 365	Mutual exclusion, 350
sched_setscheduler_ex, 366	pthread_mutexattr_getpshared
·	

Mutual exclusion, 351	RTDM FIXED MINOR
pthread_mutexattr_gettype	Device Registration Services, 159
Mutual exclusion, 352	RTDM MAX MINOR
pthread_mutexattr_init	
	Device Registration Services, 160
Mutual exclusion, 353	RTDM_NAMED_DEVICE
pthread_mutexattr_setprotocol	Device Registration Services, 160
Mutual exclusion, 353	RTDM_PROFILE_INFO
pthread_mutexattr_setpshared	driver.h, 638
Mutual exclusion, 354	RTDM_PROTOCOL_DEVICE
pthread_mutexattr_settype	Device Registration Services, 160
Mutual exclusion, 355	RTDM_TIMEOUT_INFINITE
pthread_setmode_np	RTDM, 68
Thread management, 379	RTDM_TIMEOUT_NONE
pthread_setname_np	RTDM, 68
Thread management, 380	RTDM, 67
pthread_setschedparam	nanosecs_abs_t, 68
Scheduling management, 384	nanosecs_rel_t, 69
pthread setschedparam ex	RTDM_TIMEOUT_INFINITE, 68
Scheduling management, 385	RTDM_TIMEOUT_NONE, 68
pthread_wait_np	
Transition Kit, 561	RTIOC_DEVICE_INFO
pthread_yield	Device Profiles, 157
Scheduling management, 386	RTIOC_PURGE
	Device Profiles, 157
put	RTSER_RTIOC_BREAK_CTL
xnvfile_lock_ops, 612	rtdm/uapi/serial.h, 666
O DDIO	RTSER_RTIOC_GET_CONFIG
Q_PRIO	rtdm/uapi/serial.h, 666
Message queue services, 498	RTSER_RTIOC_GET_CONTROL
DT ALADM INICO 500	rtdm/uapi/serial.h, 666
RT_ALARM_INFO, 580	RTSER_RTIOC_GET_STATUS
RT_BUFFER_INFO, 580	rtdm/uapi/serial.h, 667
RT_COND_INFO, 581	RTSER_RTIOC_SET_CONFIG
RT_EVENT_INFO, 581	rtdm/uapi/serial.h, 667
RT_HEAP_INFO, 582	RTSER RTIOC SET CONTROL
heapsize, 582	
usablemem, 582	rtdm/uapi/serial.h, 668
usedmem, 583	RTSER_RTIOC_WAIT_EVENT
RT_MUTEX_INFO, 583	rtdm/uapi/serial.h, 668
owner, 583	Range / conversion API, 413
RT_QUEUE_INFO, 584	a4l_dtoraw, 413
RT_SEM_INFO, 584	a4l_find_range, 414
RT TASK INFO, 585	a4l_ftoraw, 415
RT TIMER INFO	a4l_rawtod, 415
Timer management services, 547	a4l_rawtof, 416
RTCAN_RTIOC_RCV_TIMEOUT	a4l rawtoul, 416
CAN Devices, 56	a4l_sizeof_chan, 417
RTCAN_RTIOC_SND_TIMEOUT	a4l sizeof subd, 417
CAN Devices, 57	a4l_ultoraw, 418
	read_nrt
RTCAN_RTIOC_TAKE_TIMESTAMP	rtdm_fd_ops, 595
CAN Devices, 58	
RTDM User API, 70	read_rt
RTDM_CLASS_MAGIC	rtdm_fd_ops, 595
driver.h, 638	Real-time IPC, 74
RTDM_DEVICE_TYPE_MASK	BUFP_BUFSZ, 76
Device Registration Services, 159	BUFP_LABEL, 77
RTDM_EXCLUSIVE	bindAF_RTIPC, 85
Device Registration Services, 159	closeAF_RTIPC, 87
RTDM_EXECUTE_ATOMICALLY	connectAF_RTIPC, 87
Big dual kernel lock, 25	getpeernameAF_RTIPC, 88

getsocknameAF_RTIPC, 88	Buffer services, 444
getsockoptAF_RTIPC, 89	rt_buffer_delete
IDDP_LABEL, 78	Buffer services, 445
IDDP_POOLSZ, 79	rt_buffer_inquire
recvmsgAF_RTIPC, 89	Buffer services, 446
SO_RCVTIMEO, 79	rt_buffer_read
SO_SNDTIMEO, 80	Buffer services, 447
sendmsgAF_RTIPC, 90	rt_buffer_read_timed
setsockoptAF_RTIPC, 91	Buffer services, 447
socket_AF_RTIPC, 91	rt_buffer_read_until
XDDP_BUFSZ, 80	Buffer services, 448
XDDP_EVTDOWN, 81	rt_buffer_unbind
XDDP_EVTIN, 81	Buffer services, 449
XDDP_EVTNOBUF, 81	rt_buffer_write
XDDP_EVTOUT, 82	Buffer services, 449
XDDP_LABEL, 82	
	rt_buffer_write_timed Buffer services, 450
XDDP_MONITOR, 83	
XDDP_POOLSZ, 83	rt_buffer_write_until
recvmsgAF_RTIPC	Buffer services, 451
Real-time IPC, 89	rt_cond_bind
recvmsg_nrt	Condition variable services, 454
rtdm_fd_ops, 595	rt_cond_broadcast
recvmsg_rt	Condition variable services, 455
rtdm_fd_ops, 595	rt_cond_create
Registry services, 132	Condition variable services, 455
xnregistry_bind, 132	rt_cond_delete
xnregistry_enter, 133	Condition variable services, 456
xnregistry_lookup, 134	rt_cond_inquire
xnregistry_remove, 135	Condition variable services, 457
xnregistry_unlink, 135	rt_cond_signal
resched	Condition variable services, 457
xnsched, 611	rt_cond_unbind
rev	Condition variable services, 458
xnvfile_rev_tag, 619	rt_cond_wait
rewind	Condition variable services, 458
xnvfile_regular_ops, 616	rt_cond_wait_timed
xnvfile_snapshot_ops, 624	Condition variable services, 459
rrbtimer	rt_cond_wait_until
xnsched, 611	Condition variable services, 460
rt	rt_event_bind
xnsched, 611	Event flag group services, 462
rt_alarm_create	rt_event_clear
Alarm services, 437	Event flag group services, 463
rt_alarm_delete	rt_event_create
Alarm services, 438	Event flag group services, 464
rt_alarm_inquire	rt_event_delete
Alarm services, 439	Event flag group services, 465
rt_alarm_start	rt_event_inquire
Alarm services, 439	Event flag group services, 465
rt_alarm_stop	rt_event_signal
Alarm services, 440	Event flag group services, 466
rt_alarm_wait	rt_event_unbind
Transition Kit, 562	Event flag group services, 466
rt_buffer_bind	rt event wait
Buffer services, 443	Event flag group services, 468
rt_buffer_clear	rt_event_wait_timed
Buffer services, 444	
	Event had droub services. 468
rt_buffer_create	Event flag group services, 468 rt_event_wait_until

Event flag group services, 470	Message queue services, 499
rt_heap_alloc	rt_queue_create
Heap management services, 472	Message queue services, 500
rt_heap_alloc_timed	rt_queue_delete
Heap management services, 472	Message queue services, 501
rt_heap_alloc_until	rt_queue_flush
Heap management services, 473	Message queue services, 501
rt_heap_bind	rt_queue_free
Heap management services, 474	Message queue services, 502
rt_heap_create	rt_queue_inquire
Heap management services, 475	Message queue services, 503
rt_heap_delete	rt_queue_read
Heap management services, 476	Message queue services, 503
rt_heap_free	rt_queue_read_timed
Heap management services, 476	Message queue services, 504
rt_heap_inquire	rt_queue_read_until
Heap management services, 477	Message queue services, 505
rt_heap_unbind	rt_queue_receive
Heap management services, 478	Message queue services, 505
rt_mutex_acquire	rt_queue_receive_timed
Mutex services, 482	Message queue services, 506
rt_mutex_acquire_timed	rt_queue_receive_until
Mutex services, 482	Message queue services, 507
rt_mutex_acquire_until	rt queue send
Mutex services, 483	Message queue services, 507
rt_mutex_bind	rt_queue_unbind
Mutex services, 484	Message queue services, 508
rt_mutex_create	rt_sem_bind
Mutex services, 484	Semaphore services, 511
rt_mutex_delete	rt_sem_broadcast
Mutex services, 485	Semaphore services, 512
rt_mutex_inquire	rt_sem_create
Mutex services, 486	Semaphore services, 512
rt_mutex_release	rt_sem_delete
Mutex services, 486	Semaphore services, 513
rt_mutex_unbind	rt_sem_inquire
Mutex services, 487	Semaphore services, 515
rt_pipe_bind	rt_sem_p
Message pipe services, 489	Semaphore services, 515
rt_pipe_create	rt_sem_p_timed
Message pipe services, 490	Semaphore services, 516
rt_pipe_delete	rt_sem_p_until
Message pipe services, 491	Semaphore services, 517
rt_pipe_read	rt_sem_unbind
Message pipe services, 492	Semaphore services, 517
rt_pipe_read_timed	rt_sem_v
Message pipe services, 492	Semaphore services, 518
rt_pipe_read_until	rt_task_bind
Message pipe services, 493	Task management services, 521
rt_pipe_stream	rt_task_create
Message pipe services, 494	Task management services, 522
rt_pipe_unbind	rt_task_delete
Message pipe services, 495	Task management services, 523
rt_pipe_write	rt_task_inquire
Message pipe services, 495	Task management services, 524
rt_queue_alloc	rt_task_join
Message queue services, 498	Task management services, 525
rt_queue_bind	rt_task_receive
ri_quouo_biriu	. t_task_10001V0

Table manufactured as miles 500	Ti 540
Task management services, 526	Timer management services, 549
rt_task_receive_timed	rt_timer_ticks2ns
Task management services, 526	Timer management services, 550
rt_task_receive_until	rtdm/uapi/serial.h
Task management services, 528	RTSER_RTIOC_BREAK_CTL, 666
rt_task_reply	RTSER_RTIOC_GET_CONFIG, 666
Task management services, 528	RTSER_RTIOC_GET_CONTROL, 666
rt_task_resume	RTSER_RTIOC_GET_STATUS, 667
Task management services, 529	RTSER_RTIOC_SET_CONFIG, 667
rt_task_same	RTSER RTIOC SET CONTROL, 668
Task management services, 530	RTSER_RTIOC_WAIT_EVENT, 668
rt_task_self	rtdm_accept
Task management services, 530	Driver to driver services, 138
rt_task_send	rtdm bind
	_
Task management services, 531	Driver to driver services, 139
rt_task_send_timed	rtdm_clock_read
Task management services, 531	Clock Services, 169
rt_task_send_until	rtdm_clock_read_monotonic
Task management services, 533	Clock Services, 169
rt_task_set_affinity	rtdm_close
Task management services, 534	Driver to driver services, 139
rt_task_set_mode	rtdm_close_handler
Task management services, 534	Device Registration Services, 160
rt_task_set_periodic	rtdm_connect
Task management services, 536	Driver to driver services, 140
rt_task_set_priority	rtdm_copy_from_user
Task management services, 537	Utility Services, 225
rt_task_shadow	· · · · · · · · · · · · · · · · · · ·
	rtdm_copy_to_user
Task management services, 537	Utility Services, 225
rt_task_sleep	rtdm_dev_context, 587
Task management services, 539	device, 587
rt_task_sleep_until	rtdm_dev_register
Task management services, 539	Device Registration Services, 161
rt_task_slice	rtdm_dev_unregister
Task management services, 541	Device Registration Services, 161
rt_task_spawn	rtdm_device, 588
Task management services, 542	driver, 589
rt_task_start	label, 589
Task management services, 543	minor, 589
rt_task_suspend	rtdm_device_info, 590
Task management services, 543	rtdm_driver, 591
rt_task_unbind	base_minor, 592
Task management services, 544	context_size, 592
rt_task_unblock	device_count, 592
	_
Task management services, 545	device_flags, 592
rt_task_wait_period	profile_info, 592
Task management services, 545	rtdm_drv_set_sysclass
rt_task_yield	Device Registration Services, 162
Task management services, 546	rtdm_event_clear
rt_timer_info, 586	Event Services, 201
date, 586	rtdm_event_destroy
rt_timer_inquire	Event Services, 202
Timer management services, 548	rtdm_event_init
rt_timer_ns2ticks	Event Services, 202
Timer management services, 548	rtdm_event_pulse
rt_timer_read	Event Services, 203
Timer management services, 549	rtdm_event_select
rt_timer_spin	Event Services, 203
or_op	EVOITE OUT VIOLO, 200

rtdm_event_signal	Device Registration Services, 163
Event Services, 204	rtdm_iomap_to_user
rtdm_event_timedwait	Utility Services, 227
Event Services, 204	
·	rtdm_irq_disable
rtdm_event_wait	Interrupt Management Services, 218
Event Services, 205	rtdm_irq_enable
rtdm_fd_device	Interrupt Management Services, 218
driver.h, 639	rtdm_irq_free
rtdm_fd_get	Interrupt Management Services, 219
fd.h, 651	rtdm_irq_get_arg
rtdm_fd_is_user	Interrupt Management Services, 216
driver.h, 639	rtdm_irq_handler_t
rtdm_fd_lock	Interrupt Management Services, 216
fd.h, 652	rtdm_irq_request
rtdm_fd_ops, 593	Interrupt Management Services, 219
close, 594	rtdm listen
get_unmapped_area, 594	Driver to driver services, 144
ioctl_nrt, 594	rtdm_lock_get
—	— — — — — — — — — — — — — — — — — — —
ioctl_rt, 594	Spinlock with preemption deactivation, 29
mmap, 594	rtdm_lock_get_irqsave
open, 595	Spinlock with preemption deactivation, 27
read_nrt, 595	rtdm_lock_init
read_rt, 595	Spinlock with preemption deactivation, 29
recvmsg_nrt, 595	rtdm_lock_irqrestore
recvmsg_rt, 595	Spinlock with preemption deactivation, 28
select, 595	rtdm_lock_irqsave
sendmsg_nrt, 596	Spinlock with preemption deactivation, 28
sendmsg_rt, 596	rtdm_lock_put
socket, 596	Spinlock with preemption deactivation, 29
write_nrt, 596	rtdm_lock_put_irqrestore
write_rt, 596	Spinlock with preemption deactivation, 30
rtdm_fd_put	rtdm malloc
fd.h, 653	Utility Services, 228
rtdm_fd_select	rtdm_mmap_handler
fd.h, 653	Device Registration Services, 164
rtdm_fd_to_private	rtdm_mmap_iomem
driver.h, 640	Utility Services, 228
rtdm_fd_unlock	rtdm_mmap_kmem
fd.h, 654	Utility Services, 229
rtdm_for_each_waiter	rtdm_mmap_to_user
Synchronisation Services, 189	Utility Services, 230
rtdm_for_each_waiter_safe	rtdm_mmap_vmem
Synchronisation Services, 189	Utility Services, 231
rtdm free	rtdm_munmap
Utility Services, 226	Utility Services, 231
rtdm_get_unmapped_area_handler	rtdm_mutex_destroy
Device Registration Services, 162	Mutex services, 211
rtdm getpeername	rtdm mutex init
Driver to driver services, 141	Mutex services, 212
rtdm_getsockname	rtdm_mutex_lock
Driver to driver services, 142	Mutex services, 212
rtdm_getsockopt	rtdm_mutex_timedlock
Driver to driver services, 142	Mutex services, 213
rtdm_in_rt_context	rtdm_mutex_unlock
Utility Services, 227	Mutex services, 213
rtdm_ioctl	rtdm_nrtsig_destroy
Driver to driver services, 143	Non-Real-Time Signalling Services, 222
rtdm_ioctl_handler	rtdm_nrtsig_handler_t

New Deal Time Clawelling Commisses 004	Dubinanta alubian assistassi 440
Non-Real-Time Signalling Services, 221	Driver to driver services, 148
rtdm_nrtsig_init	rtdm_sendmsg
Non-Real-Time Signalling Services, 222	Driver to driver services, 149
rtdm_nrtsig_pend	rtdm_sendmsg_handler
Non-Real-Time Signalling Services, 223	Device Registration Services, 167
rtdm_open	rtdm sendto
Driver to driver services, 145	Driver to driver services, 150
rtdm_open_handler	rtdm_setsockopt
Device Registration Services, 164	Driver to driver services, 151
rtdm_printk	rtdm shutdown
Utility Services, 232	Driver to driver services, 152
rtdm_printk_ratelimited	rtdm_sm_ops, 597
Utility Services, 232	rtdm_socket
rtdm_private_to_fd	Driver to driver services, 152
driver.h, 640	rtdm_socket_handler
rtdm_ratelimit	Device Registration Services, 167
Utility Services, 233	rtdm_spi_config, 597
rtdm_read	rtdm_strncpy_from_user
Driver to driver services, 145	Utility Services, 237
rtdm_read_handler	rtdm_task_busy_sleep
Device Registration Services, 165	Task Services, 172
rtdm read user ok	rtdm_task_busy_wait
Utility Services, 234	Task Services, 173
· · · · · · · · · · · · · · · · · · ·	rtdm task current
rtdm_recv	
Driver to driver services, 146	Task Services, 174
rtdm_recvfrom	rtdm_task_destroy
Driver to driver services, 147	Task Services, 174
rtdm_recvmsg	rtdm_task_init
Driver to driver services, 148	Task Services, 175
rtdm_recvmsg_handler	rtdm_task_join
Device Registration Services, 165	Task Services, 175
rtdm_rt_capable	rtdm_task_proc_t
Utility Services, 234	Task Services, 172
rtdm_rw_user_ok	rtdm_task_set_period
Utility Services, 235	Task Services, 176
rtdm_safe_copy_from_user	rtdm_task_set_priority
Utility Services, 235	Task Services, 176
rtdm_safe_copy_to_user	rtdm_task_should_stop
Utility Services, 236	Task Services, 177
rtdm_schedule_nrt_work	rtdm_task_sleep
Non-Real-Time Signalling Services, 223	Task Services, 177
rtdm_select_handler	rtdm_task_sleep_abs
Device Registration Services, 166	Task Services, 178
rtdm_selecttype	rtdm_task_sleep_until
Synchronisation Services, 188	Task Services, 178
rtdm_sem_destroy	rtdm_task_unblock
Semaphore Services, 207	Task Services, 179
rtdm_sem_down	rtdm_task_wait_period
Semaphore Services, 208	Task Services, 179
rtdm_sem_init	rtdm timedwait
Semaphore Services, 208	Synchronisation Services, 190
rtdm_sem_select	rtdm_timedwait_condition
Semaphore Services, 209	Synchronisation Services, 191
rtdm_sem_timeddown	rtdm_timedwait_condition_locked
Semaphore Services, 209	Synchronisation Services, 191
rtdm_sem_up	rtdm_timedwait_locked
Semaphore Services, 210	Synchronisation Services, 192
rtdm_send	rtdm_timer_destroy

Timer Services, 183	SCHED_QUOTA scheduling policy, 238
rtdm_timer_handler_t	SIOCGCANBAUDRATE
Timer Services, 182	CAN Devices, 58
rtdm_timer_init	SIOCGCANCTRLMODE
Timer Services, 183	CAN Devices, 59
rtdm_timer_mode	SIOCGCANCUSTOMBITTIME
Timer Services, 183	CAN Devices, 59
rtdm_timer_start	SIOCGCANSTATE
Timer Services, 184	
·	CAN Devices, 60
rtdm_timer_start_in_handler	SIOCGIFINDEX
Timer Services, 185	CAN Devices, 61
rtdm_timer_stop	SIOCSCANBAUDRATE
Timer Services, 185	CAN Devices, 61
rtdm_timer_stop_in_handler	SIOCSCANCTRLMODE
Timer Services, 186	CAN Devices, 62
rtdm_toseq_init	SIOCSCANCUSTOMBITTIME
Synchronisation Services, 193	CAN Devices, 63
rtdm_wait	SIOCSCANMODE
Synchronisation Services, 194	CAN Devices, 63
rtdm_wait_complete	SO RCVTIMEO
Task Services, 180	Real-time IPC, 79
rtdm_wait_condition	· · · · · · · · · · · · · · · · · · ·
Synchronisation Services, 194	SO_SNDTIMEO
rtdm_wait_condition_locked	Real-time IPC, 80
Synchronisation Services, 195	SOL_CAN_RAW
•	CAN Devices, 64
rtdm_wait_is_completed	sbdata
Task Services, 180	a4l_descriptor, 568
rtdm_wait_locked	sbsize
Synchronisation Services, 196	a4l_descriptor, 568
rtdm_wait_prepare	sched_get_priority_max
Task Services, 180	Process scheduling, 358
rtdm_waitqueue_broadcast	sched_get_priority_max_ex
Synchronisation Services, 196	Process scheduling, 358
rtdm_waitqueue_destroy	sched_get_priority_min
Synchronisation Services, 197	Process scheduling, 359
rtdm_waitqueue_flush	•
Synchronisation Services, 197	sched_get_priority_min_ex
rtdm_waitqueue_init	Process scheduling, 360
Synchronisation Services, 198	sched_getconfig_np
rtdm waitqueue lock	Process scheduling, 360
Synchronisation Services, 198	sched_getscheduler
rtdm_waitqueue_signal	Process scheduling, 361
Synchronisation Services, 199	sched_getscheduler_ex
•	Process scheduling, 362
rtdm_waitqueue_unlock	sched_setconfig_np
Synchronisation Services, 199	Process scheduling, 363
rtdm_waitqueue_wakeup	sched_setscheduler
Synchronisation Services, 200	Process scheduling, 365
rtdm_write	sched setscheduler ex
Driver to driver services, 153	
rtdm_write_handler	Process scheduling, 366
Device Registration Services, 168	sched_yield
rtipc_port_label, 597	Process scheduling, 367
label, 598	Scheduling management, 382
rtser_config, 598	pthread_getschedparam, 382
rtser_event, 599	pthread_getschedparam_ex, 383
rtser_status, 600	pthread_setschedparam, 384
	pthread_setschedparam_ex, 385
S PRIO	pthread_yield, 386
Semaphore services, 511	select

rtdm_fd_ops, 595	xnvfile_regular_ops, 616
sem_close	xnvfile_snapshot_ops, 625
Semaphores, 368	sig
sem_destroy	udd_signotify, 609
Semaphores, 369	sipc_port
sem_init	sockaddr_ipc, 602
Semaphores, 370	Smokey API, 387
sem_post	sockaddr_can, 600
Semaphores, 371	can_ifindex, 601
sem_timedwait	sockaddr_ipc, 601
Semaphores, 372	sipc_port, 602
sem_trywait	socket
Semaphores, 373	rtdm_fd_ops, 596
sem_unlink	socketAF_RTIPC
Semaphores, 374	Real-time IPC, 91
sem_wait	Software calibration API, 401
Semaphores, 375	a4l_dcaltoraw, 401
Semaphore Services, 207	a4l_get_softcal_converter, 402
rtdm_sem_destroy, 207	a4l_rawtodcal, 402
rtdm_sem_down, 208	a4l_read_calibration_file, 403
rtdm_sem_init, 208	Spinlock with preemption deactivation, 27
rtdm_sem_select, 209	rtdm_lock_get, 29
rtdm_sem_timeddown, 209	rtdm_lock_get_irqsave, 27
rtdm_sem_up, 210	rtdm_lock_init, 29
Semaphore services, 510	rtdm_lock_irqrestore, 28
rt_sem_bind, 511	rtdm_lock_irqsave, 28
rt_sem_broadcast, 512	rtdm_lock_put, 29
rt_sem_create, 512	rtdm_lock_put_irqrestore, 30
rt_sem_delete, 513	splexit
rt_sem_inquire, 515	Locking services, 125
rt_sem_p, 515	splhigh
rt_sem_p_timed, 516	Locking services, 126
rt_sem_p_until, 517	spltest
rt_sem_unbind, 517	Locking services, 126
rt_sem_v, 518	status
S_PRIO, 511	xnsched, 611
Semaphores, 368	store
sem_close, 368	xnvfile_regular_ops, 618
sem_destroy, 369	xnvfile_snapshot_ops, 625
sem_init, 370	Subdevice management services, 292
sem_post, 371	a4l_add_subd, 294
sem_timedwait, 372	a4l_alloc_subd, 294
sem_trywait, 373	a4l_get_subd, 295
sem_unlink, 374	switch_htick_mode
sem_wait, 375	Timer services, 272
sendmsgAF_RTIPC	Synchronisation Services, 187
Real-time IPC, 90	rtdm_for_each_waiter, 189
sendmsg_nrt	rtdm_for_each_waiter_safe, 189
rtdm_fd_ops, 596	rtdm_selecttype, 188
sendmsg_rt	rtdm_timedwait, 190
rtdm_fd_ops, 596	rtdm_timedwait_condition, 191
seq	rtdm_timedwait_condition_locked, 191
xnvfile_regular_iterator, 613	rtdm_timedwait_locked, 192
xnvfile_snapshot_iterator, 621	rtdm_toseq_init, 193
Serial Devices, 71	rtdm_wait, 194
setsockoptAF_RTIPC	rtdm_wait_condition, 194
Real-time IPC, 91	rtdm_wait_condition_locked, 195
show	rtdm_wait_locked, 196

rtdm_waitqueue_broadcast, 196	rt_task_wait_period, 545
rtdm_waitqueue_destroy, 197	rt_task_yield, 546
rtdm_waitqueue_flush, 197	T LOCK, 521
rtdm_waitqueue_init, 198	T LOPRIO, 521
rtdm_waitqueue_lock, 198	T WARNSW, 521
rtdm_waitqueue_signal, 199	Task Services, 171
rtdm_waitqueue_unlock, 199	rtdm_task_busy_sleep, 172
rtdm_waitqueue_wakeup, 200	rtdm_task_busy_wait, 173
Synchronous acquisition API, 420, 425	rtdm_task_busy_wait, 173
a4l config subd, 425	rtdm_task_current, 174
a4I_snd_insn, 422	
a4I_snd_insnlist, 422	rtdm_task_init, 175
a4I_sinc_dio, 426	rtdm_task_join, 175
a4I_sync_read, 426	rtdm_task_proc_t, 172
	rtdm_task_set_period, 176
a4l_sync_write, 427	rtdm_task_set_priority, 176
Synchronous I/O multiplexing, 241	rtdm_task_should_stop, 177
xnselect, 242	rtdm_task_sleep, 177
xnselect_bind, 242	rtdm_task_sleep_abs, 178
xnselect_destroy, 243	rtdm_task_sleep_until, 178
xnselect_init, 244	rtdm_task_unblock, 179
xnselect_signal, 244	rtdm_task_wait_period, 179
xnselector_destroy, 244	rtdm wait complete, 180
xnselector_init, 245	rtdm_wait_is_completed, 180
	rtdm_wait_prepare, 180
T_LOCK	Testing Devices, 73
Task management services, 521	Thread information flags, 42
T_LOPRIO	
Task management services, 521	Thread management, 376
T_WARNSW	pthread_create, 376
Task management services, 521	pthread_join, 377
Task management services, 519	pthread_kill, 378
rt_task_bind, 521	pthread_setmode_np, 379
rt_task_create, 522	pthread_setname_np, 380
rt task delete, 523	Thread scheduling control, 239
rt_task_inquire, 524	xnsched_rotate, 239
rt_task_join, 525	xnsched_run, 240
rt_task_receive, 526	Thread services, 255
rt task receive timed, 526	xnthread_cancel, 256
rt task receive until, 528	xnthread_current, 257
rt_task_reply, 528	xnthread from task, 257
rt_task_resume, 529	xnthread_harden, 257
rt task same, 530	xnthread init, 258
rt task self, 530	xnthread_join, 259
	xnthread map, 260
rt_task_send, 531	xnthread migrate, 261
rt_task_send_timed, 531	xnthread_relax, 261
rt_task_send_until, 533	
rt_task_set_affinity, 534	xnthread_resume, 262
rt_task_set_mode, 534	xnthread_set_mode, 263
rt_task_set_periodic, 536	xnthread_set_periodic, 264
rt_task_set_priority, 537	xnthread_set_schedparam, 265
rt_task_shadow, 537	xnthread_set_slice, 266
rt_task_sleep, 539	xnthread_start, 266
rt_task_sleep_until, 539	xnthread_suspend, 267
rt_task_slice, 541	xnthread_test_cancel, 268
rt_task_spawn, 542	xnthread_unblock, 269
rt_task_start, 543	xnthread_wait_period, 269
rt_task_suspend, 543	Thread state flags, 39
rt_task_unbind, 544	XNHELD, 40
rt_task_unblock, 545	XNMIGRATE, 40

XNPEND, 40	COMPATrt_event_create, 555
XNREADY, 40	COMPATrt_event_signal, 556
XNSUSP, 41	COMPATrt_pipe_create, 556
XNTRAPLB, 41	COMPATrt_task_create, 558
Thread synchronization services, 246	COMPATrt_task_set_periodic, 559
xnsynch_acquire, 246	pthread_make_periodic_np, 560
xnsynch_destroy, 247	pthread_wait_np, 561
xnsynch_flush, 248	rt_alarm_wait, 562
xnsynch_init, 249	type
xnsynch_peek_pendq, 250	udd_memregion, 607
xnsynch release, 250	LIDD IDG GUGTOM
xnsynch_sleep_on, 251	UDD_IRQ_CUSTOM
xnsynch_try_acquire, 252	User-space driver core, 32
xnsynch_wakeup_one_sleeper, 252	UDD_IRQ_NONE
xnsynch_wakeup_this_sleeper, 253	User-space driver core, 33
Timer management services, 547	UDD_MEM_LOGICAL
RT_TIMER_INFO, 547	User-space driver core, 33
rt_timer_inquire, 548	UDD_MEM_NONE
rt timer ns2ticks, 548	User-space driver core, 33
rt_timer_read, 549	UDD_MEM_PHYS
rt_timer_spin, 549	User-space driver core, 33
rt_timer_ticks2ns, 550	UDD_MEM_VIRTUAL
Timer Services, 182	User-space driver core, 33
rtdm_timer_destroy, 183	UDD_RTIOC_IRQDIS
rtdm_timer_handler_t, 182	User-space driver core, 34
rtdm_timer_init, 183	UDD_RTIOC_IRQEN
rtdm_timer_mode, 183	User-space driver core, 34
rtdm_timer_start, 184	UDD_RTIOC_IRQSIG
rtdm_timer_start_in_handler, 185	User-space driver core, 34
rtdm_timer_stop, 185	uapi/analogy.h
rtdm_timer_stop_in_handler, 186	A4L_RNG_FACTOR, 681
Timer services, 271	udd_device, 602
xntimer_migrate, 272	close, 603
program_htick_shot, 272	device_flags, 603 device_subclass, 604
switch_htick_mode, 272	interrupt, 604
xntimer_destroy, 273	ioctl, 604
xntimer_get_date, 274	
xntimer_get_overruns, 274	irq, 605 mem_regions, 605
xntimer_get_timeout, 275	mmap, 605
xntimer_grab_hardware, 275	open, 605
xntimer init, 276	udd_device::udd_reserved, 608
xntimer_interval, 277	udd_disable_irq
xntimer_release_hardware, 277	User-space driver core, 35
xntimer_start, 277	udd_enable_irq
xntimer_stop, 278	User-space driver core, 35
timer_create	udd get device
Clocks and timers, 315	User-space driver core, 36
timer_delete	udd_memregion, 606
Clocks and timers, 316	addr, 607
timer_getoverrun	len, 607
Clocks and timers, 317	type, 607
timer_gettime	udd_notify_event
Clocks and timers, 317	User-space driver core, 36
timer_settime	udd_register_device
Clocks and timers, 318	User-space driver core, 37
Transition Kit, 553	udd_signotify, 608
COMPATrt_alarm_create, 553	pid, 609
COMPATrt_event_clear, 554	sig, 609
·	

udd_unregister_device User-space driver core, 38 usablemem RT_HEAP_INFO, 582 usedmem RT_HEAP_INFO, 583 User-space driver core, 31 UDD_IRO_NONE, 33 UDD_IRO_NONE, 33 UDD_MEM_LOGICAL, 33 UDD_MEM_LOGICAL, 33 UDD_MEM_LOGICAL, 33 UDD_MEM_PHYS, 33 UDD_MEM_ITOC, IROBIS, 34 UDD_RTIOC, IROBIS, 34 UDD_RTIOC, IROBIS, 34 UDD_RTIOC, IROSIG, 34 udd_denable_irq, 35 udd_enable_irq, 282 unville_get_blob, 282 unville_get_blob, 282 unville_get_str		
usablemem RT_HEAP_INFO, 582 usedmem RT_HEAP_INFO, 583 User-space driver core, 31 UDD_IRQ_CUSTOM, 32 UDD_IRQ_CUSTOM, 32 UDD_IRQ_CUSTOM, 33 UDD_MEM_LOGICAL, 33 UDD_MEM_PHYS, 33 UDD_MEM_PHYS, 33 UDD_MEM_PHYS, 33 UDD_RTIOC_IRQDIS, 34 UDD_RTIOC_IRQDIS, 34 UDD_RTIOC_IRQDIS, 34 UDD_RTIOC_IRQSIG, 34 Udd_enable_irq, 35 udd_enable_irq, 35 udd_enable_irq, 35 udd_notity_event, 36 udd_register_device, 36 udd_register_device, 36 udd_register_device, 37 udd_unregister_device, 38 Uflity Services, 224 rtdm_copy_from_user, 225 rtdm_copy_from_user, 225 rtdm_map_io_mem, 228 rtdm_mmap_io_mem, 228 rtdm_mmap_io_mem, 228 rtdm_mmap_io_mem, 229 rtdm_mmap_to_user, 230 rtdm_mmap_to_user, 230 rtdm_mmap_to_user, 231 rtdm_printk, 232 rtdm_read_user_ok, 234 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_rt_ad_aser_opy_to_user, 236 rtdm_safe_copy_from_user, 237 viile xnvfile_regular_iterator, 611 xnvfile_sapshto_titerator, 621 Virtual file services, 280 cobalt_tryfoot, 287 xnvfile_destroy, 281 xnvfile_get_string, 283 xnvfile_init_init, 284 xnvfile_init_init_regular, 285 xnvfile_init_init_sapshot, 286 xnvfile_init_sapshot, 286 xnvfile_init_sapsh		write_nrt
RT_HEAP_INFO, 582 usedmem RT_HEAP_INFO, 583 User-space driver core, 31 UDD_IRO_CUSTOM, 32 UDD_IRO_CUSTOM, 32 UDD_IRO_NONE, 33 UDD_MEM_INCOICAL, 33 UDD_MEM_PHYS, 33 UDD_MEM_PHYS, 33 UDD_RTIOC_IROBIS, 34 UDD_RTIOC_IROBIN, 34 UDD_RTIO	User-space driver core, 38	1
usedmem RT HEAP_INFO, 583 User-space driver core, 31 UDD_IRO_CUSTOM, 32 UDD_IRO_CUSTOM, 32 UDD_IRO_COUSTOM, 33 UDD_MEM_LOGICAL, 33 UDD_MEM_LOGICAL, 33 UDD_MEM_PHYS, 33 UDD_MEM_PHYS, 33 UDD_RTIOC_IROSIG, 34 UDD_RTIOC_IROSIG, 34 UDD_RTIOC_IROSIG, 34 UDD_RTIOC_IROSIG, 34 UDD_RTIOC_IROSIG, 35 udd_enable_irq, 35 udd_enable_irq, 35 udd_get_device, 36 udd_register_device, 37 udd_unregister_device, 38 Utility Services, 224 rtdm_copy_from_user, 225 rtdm_free, 226 rtdm_mmap_iomem, 228 rtdm_mmap_iomem, 228 rtdm_mmap_wmem, 229 rtdm_mmap_wmem, 229 rtdm_mmap_wmem, 229 rtdm_mmap_wmem, 229 rtdm_mmap_wmem, 229 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_rt_capable, 234 rtdm_rt_capable, 234 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_from_user, 236 rtdm_safe_copy_from_user, 237 vfile xvvfile_get_string, 287 xvvfile_get_lobob, 282 xvvfile_get_string, 284 xvvfile_get_string, 284 xvvfile_init_init, 284 xvvfile_init_init, 284 xvvfile_init_init_rages, 286 xvvfile_init_init_rages, 286 xvvfile_init_init_regular, 285 xvvfile_init_init_spashot, 286	usablemem	_
User-space driver core, 31 UDD_IRQ_CUSTOM, 32 UDD_IRQ_NONE, 33 UDD_MEM_LOGICAL, 33 UDD_MEM_LOGICAL, 33 UDD_MEM_PHYS, 33 UDD_MEM_PHYS, 33 UDD_RTIOC_IRQDIS, 34 UDD_RTIOC_IRQSIG, 34 UDD_RTIOC_IRQSIG, 34 udd_disable_irq, 35 udd_get_device, 36 udd_notify_event, 36 udd_notify_event, 36 udd_nregister_device, 38 Uthity Services, 224 rtdm_copy_from_user, 225 rtdm_free, 226 rtdm_in_rt_context, 227 rtdm_manp_tomem, 228 rtdm_mmap_tomem, 228 rtdm_mmap_tomem, 229 rtdm_mmap_to_user, 231 rtdm_mmap_mem, 231 rtdm_mmap_mem, 231 rtdm_ratelimit, 233 rtdm_ratelimit, 233 rtdm_ratelimit, 233 rtdm_rate_gopy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_safe_copy_to_user, 236 rtdm_safe_copy_to_user, 237 vfile xvvfile_get_string, 283 xvxfile_init_dir, 284 xvvfile_get_string, 284 xvvfile_get_string, 284 xvvfile_get_integer, 282 xvvfile_get_string, 284 xvvfile_init_init_xela4 xvvfile_init_init_xela4 xvvfile_init_init_xela4 xvvfile_init_init_xela4 xvvfile_init_init_xela4 xvvfile_init_init_xela4 xvvfile_init_init_xela6 xvvfile_init_spashot, 286	RT_HEAP_INFO, 582	rtdm_fd_ops, 596
User-space driver core, 31 UDD_IRQ_CUSTOM, 32 UDD_IRQ_NONE, 33 UDD_MEM_LOGICAL, 33 UDD_MEM_LOGICAL, 33 UDD_MEM_PHYS, 33 UDD_MEM_VIRTUAL, 33 UDD_RTIOC_IRODIS, 34 UDD_RTIOC_IRODIS, 34 UDD_RTIOC_IROSIG, 34 UDD_RTIOC_IROSIG, 34 UDD_RTIOC_IROSIG, 34 UDD_RTIOC_IROSIG, 34 UDD_RTIOC_IROSIG, 34 UDD_RTIOC_IROSIG, 34 Udd_dasble_irq, 35 udd_denable_irq, 35 udd_get_device, 36 udd_notify_event, 36 udd_register_device, 38 Utility Services, 224 ridm_copy_from_user, 225 ridm_copy_to_user, 225 ridm_mmap_ind_user, 227 ridm_immap_to_user, 227 ridm_mmap_lo_user, 227 ridm_mmap_mem, 228 ridm_mmap_mem, 229 ridm_mmap_mem, 229 ridm_mmap_to_user, 230 ridm_mmap_weme, 231 ridm_ratelimit, 232 ridm_printk_ratelimited, 232 ridm_ratelimit, 233 ridm_read_user_ok, 234 ridm_rad_user_ok, 234 ridm_rad_user_ok, 234 ridm_safe_copy_fom_user, 235 ridm_safe_copy_fom_user, 236 ridm_safe_copy_fom_user, 236 ridm_safe_copy_fom_user, 237 vfile xnvfile_gellar_iterator, 614 xnvfile_get_blob, 282 xnvfile_get_blob, 282 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_linteger, 282 xnvfile_get_linteger, 282 xnvfile_get_linteger, 282 xnvfile_get_linteger, 282 xnvfile_init_link, 284 xnvfile_init_init_graplar, 285 xnvfile_init_pringular, 285 xnvfile_init_pringu	usedmem	VDDD DU507
UDD_IRQ_CUSTOM, 32 UDD_IRQ_NONE, 33 UDD_MEM_LOGICAL, 33 UDD_MEM_NONE, 33 UDD_MEM_PHYS, 33 UDD_MEM_PHYS, 33 UDD_RTIOC_IRQDIS, 34 UDD_RTIOC_IRQSIG, 34 UDD_RTIOC_IRQSIG, 34 UDD_RTIOC_IRQSIG, 34 UDD_RTIOC_IRQSIG, 34 Udd_disable_irq, 35 udd_enable_irq, 35 udd_get_device, 36 udd_notify_event, 36 udd_unregister_device, 38 Utility Services, 224 ridm_copy_from_user, 225 ridm_free, 226 ridm_in_rt_context, 227 ridm_manp_to_user, 227 ridm_manp_to_user, 227 ridm_manp_to_user, 227 ridm_manp_to_user, 227 ridm_manp_to_user, 227 ridm_manp_to_user, 237 ridm_printk, 233 ridm_read_user_ok, 234 ridm_rt_capable, 234 ridm_read_user_ok, 234 ridm_read_user_ok, 234 ridm_read_user_ok, 235 ridm_safe_copy_from_user, 235 ridm_safe_copy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_init_int_in, 284 xnvfile_init_link, 284 xnvfile_init_link, 284 xnvfile_init_link, 284 xnvfile_init_link, 284 xnvfile_init_link, 285 xnvfile_init_pringlar, 285 xnvfile_init_prouncy, 286	RT_HEAP_INFO, 583	_
UDD_IRQ_NONE, 33 UDD_MEM_LOGICAL, 33 UDD_MEM_NONE, 33 UDD_MEM_PHYS, 33 UDD_MEM_PHYS, 33 UDD_MEM_VIRTUAL, 33 UDD_RTIOC_IRQSI0S, 34 UDD_RTIOC_IRQSI0S, 34 UDD_RTIOC_IRQSI0S, 34 UDD_RTIOC_IRQSI0S, 34 UDD_RTIOC_IRQSI0S, 34 UDD_RTIOC_IRQSI0S, 34 Udd_disable_irq, 35 udd_denable_irq, 35 udd_denable_irq, 35 udd_denable_irq, 35 udd_denglister_device, 38 Utility Services, 224 ridm_copy_form_user, 225 ridm_free, 226 ridm_in_t_context, 227 ridm_lomap_to_user, 225 ridm_mmap_io_user, 227 ridm_mmap_io_user, 230 ridm_ratelimit, 233 ridm_ratelimit, 233 ridm_rad_user_ok, 234 ridm_rad_user_ok, 234 ridm_rad_user_ok, 235 ridm_safe_copy_form_user, 235 ridm_safe_copy_form_user, 235 ridm_safe_copy_form_user, 236 ridm_safe_copy_form_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_get_string, 287 xnvfile_get_blob, 282 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_get_tinteger, 282 xnvfile_get_tinteger, 282 xnvfile_get_integer, 282 xnvfile_init_init_regular, 285 xnvfile_init_init_regular, 285 xnvfile_init_init_regular, 285 xnvfile_init_init_regular, 285 xnvfile_init_init_regular, 285 xnvfile_init_init_paplar, 286	User-space driver core, 31	·
UDD_IRO_NONE, 33 UDD_MEM_LOGICAL, 33 UDD_MEM_PHYS, 33 UDD_MEM_PHYS, 33 UDD_MEM_PHYS, 33 UDD_RTIOC_IRODIS, 34 UDD_RTIOC_IRODIS, 34 UDD_RTIOC_IROSIG, 35 URB_ITOR_IPOR_IROSIC_IROSIC_IROSIC_IROSIC_IROSIC_IROSIC_IROSIC_IROSIC_IROSIC_IROSIC_IROSI	UDD IRQ CUSTOM, 32	_
UDD MEM_LOGICAL, 33 UDD MEM_NONE, 33 UDD MEM_VIRTUAL, 33 UDD MEM_VIRTUAL, 33 UDD RTIOC_IRQDIS, 34 UDD RTIOC_IRQSIG, 34 UDD RTIOC_IRQSIG, 34 UDD RTIOC_IRQSIG, 34 Udd_dable_irq, 35 udd_enable_irq, 35 udd_get_device, 36 udd_register_device, 37 udd_unregister_device, 38 Utility Services, 224 rtdm_copy_from_user, 225 rtdm_free, 226 rtdm_mnap_to_user, 225 rtdm_mmap_iomem, 228 rtdm_mmap_iomem, 228 rtdm_mmap_iomem, 228 rtdm_mmap_iomem, 228 rtdm_mmap_wmem, 231 rtdm_mmap_wmem, 231 rtdm_printk, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_read_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_from_user, 237 Viile xnvfile_services, 287 xnvfile_get_string, 283 xnvfile_get_string, 283 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_init_ink, 284 xnvfile_init_gelar, 285 xnvfile_init_inspapshot, 286		·
UDD_MEM_NONE, 33 UDD_MEM_PHYS, 33 UDD_MEM_VIRTUAL, 33 UDD_RTIOC_IRQDIS, 34 UDD_RTIOC_IRQSIG, 34 UDD_RTIOC_IRQSIG_ 82 UDD_RONITOR Real-time IPC, 82 UDD_RONITOR Real-time IPC, 82 UDD_RONITOR Real-time IPC, 82 UDD_LABEL Real-time IPC, 82 UDD_LABEL Real-time IPC, 82 UDD_RONITOR Real-time IPC, 82 UDD_LABEL Real-time IPC, 83 UDD_LABEL Real-time IPC, 83 UDD_LABEL Real-time IPC, 82 UDD_LABEL Real-time IPC, 83 UDD_LABEL Real-time IPC, 82 UDD_LABEL Real-time IPC, 82 UDD_LABEL Real-time IPC,		_
UDD_MEM_VIRTUAL, 33 UDD_MEM_VIRTUAL, 33 UDD_MEM_VIRTUAL, 33 UDD_RTIOC_IRQDIS, 34 UDD_RTIOC_IRQDIS, 34 UDD_RTIOC_IRQSIG, 34 UDD_RTIOC_IRQSIG, 34 Udd_disable_irq, 35 udd_denable_irq, 35 udd_enable_irq, 35 udd_notify_event, 36 udd_register_device, 36 udd_register_device, 38 Utility Services, 224 rtdm_copy_from_user, 225 rtdm_free, 226 rtdm_in_rt_context, 227 rtdm_iomap_to_user, 225 rtdm_mmap_komem, 228 rtdm_mmap_komem, 228 rtdm_mmap_to_user, 230 rtdm_mmap_to_user, 230 rtdm_read_user_ok, 234 rtdm_read_user_ok, 234 rtdm_read_user_ok, 235 rtdm_safe_copy_fom_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_services, 287 xnvfile_destroy, 281 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_init_fink_284 xnvfile_init_link_284 xnvfile_init_geular_285 xnvfile_init_gel_splob, 286 xnvfile_init_gel_splob, 282 xnvfile_init_geular, 285 xnvfile_init_gel_splob, 286 xnvfile_init_gel_splob, 286 xnvfile_init_gel_splob, 282 xnvfile_init_gel_splob, 286 xnvfile_init_gel_splob, 282 xnvfile_init_geular, 285 xnvfile_init_gel_splob, 286 xnvf		•
UDD_MEMO_VIRTUAL, 33 UDD_RTIOC_IRQEN, 34 UDD_RTIOC_IRQEN, 35 UDD_POOLSZ Real-time IPC, 82 XDDP_MONITOR Real-time IPC, 82 XDDP_LABEL. Real-time IPC, 82 XDDP_LABEL. Real-time IPC, 82 XDDP_LABEL Real-time IPC, 82 XDDP_LABEL Real-time IPC, 82 VDP_LABEL Real-time IPC		_
UDD_RTIOC_IRQDIS, 34 UDD_RTIOC_IRQSIG, 34 UDD_RTIOC_IRQSIG, 34 Udd_disable_irq, 35 udd_denable_irq, 35 udd_denable_irq, 35 udd_denable_irq, 35 udd_notify_event, 36 udd_register_device, 38 Utility Services, 224 rtdm_copy_from_user, 225 rtdm_copy_from_user, 225 rtdm_mrap_to_user, 225 rtdm_mmap_tomem, 228 rtdm_mmap_lomem, 228 rtdm_mmap_tomem, 229 rtdm_mmap_tomem, 231 rtdm_mnmap_tomem, 231 rtdm_mnmap_tomem, 232 rtdm_printk_ ratelimited, 232 rtdm_read_user_ok, 234 rtdm_read_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_blob, 282 xnvfile_get_string, 283 xnvfile_init_link, 284 xnvfile_init_link, 284 xnvfile_init_link, 284 xnvfile_init_link_284 xnvfile_init_link_284 xnvfile_init_galar, 285 xnvfile_get_int_gapshot, 286 XDDP_LABEL Real-time IPC, 82 XDDP_MONITOR Real-time IPC, 82 XDDP_MONITOR Real-time IPC, 82 XDDP_LABEL Real-time IPC, 82 XDDP_LOLS? Real-time IPC, 83 XDDP_POOLSZ Real-time IPC, 83 XDDP_COLST Real-time IPC, 82 XDP_MONTOR Real-time IPC, 82 XDDP_dolnTol Real-time IPC		·
UDD_RTIOC_IRQSIG, 34 UDD_RTIOC_IRQSIG, 34 UDD_RTIOC_IRQSIG, 34 Udd_disable_irq, 35 udd_enable_irq, 35 udd_enable_irq, 35 udd_motify_event, 36 udd_register_device, 36 udd_notify_event, 36 udd_unregister_device, 37 udd_unregister_device, 38 Utility Services, 224 rtdm_copy_from_user, 225 rtdm_free, 226 rtdm_ire_, 226 rtdm_in_rt_context, 227 rtdm_malloc, 228 rtdm_mmap_to_user, 227 rtdm_map_to_user, 227 rtdm_mmap_to_user, 228 rtdm_mmap_iomem, 228 rtdm_mmap_wene, 229 rtdm_mmap_iomem, 228 rtdm_mmap_wene, 231 rtdm_printk, 232 rtdm_ratelimit, 232 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_rt_capable, 234 rtdm_read_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_safe_copy_to_user, 236 rtdm_safe_copy_to_user, 236 rtdm_safe_copy_to_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_blob, 282 xnvfile_get_string, 283 xnvfile_init_link, 284 xnvfile_init_link, 284 xnvfile_init_gent_srapshot, 286 xnvfile_init_dir, 284 xnvfile_init_gent_srapshot, 286 xnvfile_init_srapshot, 286 xnvfile_init_srapshot, 286 xnvfile_init_srapshot, 286 xnvfile_init_srapshot, 286 xnvfile_		_
UDD_RTIOC_IRQSIG, 34 udd_disable_irq, 35 udd_enable_irq, 35 udd_get_device, 36 udd_notify_event, 36 udd_register_device, 37 udd_unregister_device, 38 Utility Services, 224 rtdm_copy_fou_user, 225 rtdm_free, 226 rtdm_in_rt_context, 227 rtdm_iomap_to_user, 225 rtdm_mmap_iomem, 228 rtdm_mmap_iomem, 228 rtdm_mmap_wnem, 231 rtdm_printk, 232 rtdm_printk, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_rt_capable, 234 rtdm_rt_capable, 234 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_from_user, 237 vfile		Real-time IPC, 82
udd_eisable_irq, 35 udd_enable_irq, 35 udd_get_device, 36 udd_notify_event, 36 udd_register_device, 37 udd_unregister_device, 38 Utility Services, 224 rtdm_copy_from_user, 225 rtdm_free, 226 rtdm_in_rt_context, 227 rtdm_omap_to_user, 227 rtdm_malloc, 228 rtdm_mmap_tomem, 228 rtdm_mmap_io_user, 229 rtdm_mmap_to_user, 230 rtdm_mmap_wnem, 231 rtdm_printk, 232 rtdm_prinkt, 232 rtdm_ratelimite, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_rat_capable, 234 rtdm_rw_user_ok, 235 rtdm_safe_copy_from_user, 236 rtdm_safe_copy_from_user, 237 vfile xnvfile_get_plob, 282 xnvfile_get_tine_ger, 282 xnvfile_get_line_ger, 282 xnvfile_get_line_ger, 282 xnvfile_init_init_gin, 284 xnvfile_init_link, 284 xnvfile_init_link, 284 xnvfile_init_engular, 285 xnvfile_init_engular, 286 x		_
udd_enable_irq, 35 udd_get_device, 36 udd_notify_event, 36 udd_nrotify_event, 36 udd_nrotify_event, 36 udd_unregister_device, 38 Utility Services, 224 rtdm_copy_from_user, 225 rtdm_copy_fo_user, 225 rtdm_free, 226 rtdm_in_rt_context, 227 rtdm_iomap_to_user, 227 rtdm_mmap_to_user, 227 rtdm_mmap_to_user, 228 rtdm_mmap_to_user, 230 rtdm_mmap_to_user, 230 rtdm_printk, 232 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_rt_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_get_blob, 282 xnvfile_get_tinteger, 282 xnvfile_get_init_gr, 283 xnvfile_init_init_gr, 284 xnvfile_init_init_gr, 284 xnvfile_init_init_gr, 285 xnvfile_init_graplar, 285 xnvfile_init_snapshot, 286 XDDP_POOLSZ Real-time IPC, 83 XDDP_POOLSZ Real-time IPC, 83 XDDP_POOLSZ Real-time IPC, 83 XNHELD Thread state flags, 40 XNREADY Thread state flags, 40 XNEADY Thread state flags, 40 XNEADY Thread state flags, 40 XNEADY Thread state flag		Real-time IPC, 82
udd_get_device, 36 udd_nolify_event, 36 udd_register_device, 37 udd_unregister_device, 38 Utility Services, 224 rtdm_copy_from_user, 225 rtdm_free, 226 rtdm_in_rt_context, 227 rtdm_iomap_to_user, 225 rtdm_mmap_to_user, 227 rtdm_mmap_to_user, 227 rtdm_mmap_to_user, 228 rtdm_mmap_to_user, 229 rtdm_mmap_to_user, 230 rtdm_mmap_to_user, 231 rtdm_printk, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_rt_capable, 234 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_from_user, 237 vfile xnvfile_get_oblob, 282 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_get_init_gr, 283 xnvfile_init_link, 284 xnvfile_init_link, 284 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_gashot, 286 xnbufd_unegister_device, 38 XDDP_POOLSZ Real-time IPC, 83 XNHELD Thread state flags, 40 XNNEADY Thread state flags, 40 XNREADY Thread state flags, 40 XNSUSP Th		XDDP_MONITOR
udd_notify_event, 36 udd_register_device, 37 udd_unregister_device, 38 Utility Services, 224 rtdm_copy_from_user, 225 rtdm_free, 226 rtdm_in_rt_context, 227 rtdm_mallot, 228 rtdm_mmap_to_user, 227 rtdm_mmap_iomem, 228 rtdm_mmap_kmem, 229 rtdm_mmap_to_user, 230 rtdm_mmap_vmem, 231 rtdm_printk, 232 rtdm_printk, 232 rtdm_read_user_ok, 234 rtdm_read_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236		Real-time IPC, 83
udd_register_device, 37 udd_unregister_device, 38 Utility Services, 224 rtdm_copy_from_user, 225 rtdm_copy_to_user, 225 rtdm_free, 226 rtdm_in_rt_context, 227 rtdm_iomap_to_user, 227 rtdm_mmap_to_user, 227 rtdm_mmap_iomem, 228 rtdm_mmap_iomem, 228 rtdm_mmap_wnem, 229 rtdm_mmap_vmem, 231 rtdm_printk, 232 rtdm_printk_ ratelimited, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_read_user_ok, 234 rtdm_read_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_from_user, 237 Vifile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_get_init_gata xnvfile_init_link, 284 xnvfile_init_link, 284 xnvfile_init_regular, 285 xnvfile_init_regular, 286 xnvfile_init_regular, 286 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 286 xnvfile_init_regular, 286 xnvfile_init_regular, 286 xnvfile_init_regular, 285 xnvfile_init_regular, 286		XDDP_POOLSZ
Utility Services, 224 rtdm_copy_from_user, 225 rtdm_copy_to_user, 225 rtdm_free, 226 rtdm_in_rt_context, 227 rtdm_malloc, 228 rtdm_mmap_to_user, 227 rtdm_mmap_io_user, 228 rtdm_mmap_io_user, 228 rtdm_mmap_wnem, 228 rtdm_mmap_wnem, 229 rtdm_mmap_wnem, 231 rtdm_printk, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_from_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_blob, 282 xnvfile_get_string, 283 xnvfile_init_enit_get_ast xnvfile_init_enit_ar, 284 xnvfile_init_get_ast, 286 xnvfile_init_get_ast, 286 xnvfile_init_get_ast, 286 xnvfile_init_engular, 285 xnvfile_init_get_ast, 286 xnvfile_init_get_ast, 286 xnvfile_init_engular, 285 xnvfile_init_get_ast, 286 xnvfile_init_get_ast, 286 xnvfile_init_engular, 286 xnvfile_init_engular, 286 xnvfile_init_engular, 286 xnvfile_init_engular, 286 xnvfile_init_engular, 286 xnvfile_init_engular, 286 xnvfile_init_snapshot, 286 XNMEADY XNREADY Thread state flags, 40 XNREADY Thread state		Real-time IPC, 83
Interest state lags, 40 XNMIGRATE Interest state lags, 40 XNMIGRATE Interest state lags, 40 XNMIGRATE Interest state lags, 40 XNPEND Interest state lags, 4		XNHELD
rtdm_copy_from_user, 225 rtdm_copy_to_user, 225 rtdm_free, 226 rtdm_in_rt_context, 227 rtdm_iomap_to_user, 227 rtdm_mmap_to_user, 227 rtdm_mmap_to_user, 228 rtdm_mmap_kmem, 229 rtdm_mmap_kmem, 229 rtdm_mmap_wem, 231 rtdm_printk, 232 rtdm_printk, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_rw_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_string, 283 xnvfile_init_dir, 284 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_gen_lar, 286 xnvfile_		Thread state flags, 40
rtdm_copy_to_user, 225 rtdm_free, 226 rtdm_in_rt_context, 227 rtdm_iomap_to_user, 227 rtdm_malloc, 228 rtdm_mmap_iomem, 228 rtdm_mmap_kmem, 229 rtdm_mmap_wmem, 230 rtdm_mmap_vmem, 231 rtdm_printk_ratelimited, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_read_user_ok, 234 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 Vfile xnvfile_regular_iterator, 614 xnvfile_get_blob, 282 xnvfile_get_string, 283 xnvfile_init_dir, 284 xnvfile_init_init_gilar, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_gat_init_regular, 285 xnvfile_init_regular, 285 xnv		XNMIGRATE
rtdm_copy_to_user, 225 rtdm_free, 226 rtdm_in_rt_context, 227 rtdm_iomap_to_user, 227 rtdm_malloc, 228 rtdm_mmap_jomem, 228 rtdm_mmap_to_user, 230 rtdm_mmap_to_user, 230 rtdm_mmap_to_user, 231 rtdm_printk, 232 rtdm_printk, 232 rtdm_ratelimit, 233 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_string, 283 xnvfile_init_int, 284 xnvfile_init_regular, 285 xnvfi	_ ,,	Thread state flags, 40
rtdm_in_rt_context, 227 rtdm_iomap_to_user, 227 rtdm_malloc, 228 rtdm_mmap_iomem, 228 rtdm_mmap_kmem, 229 rtdm_mmap_to_user, 230 rtdm_mmap_to_user, 230 rtdm_printk, 232 rtdm_printk, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 Vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_init_link, 284 xnvfile_init_link, 284 xnvfile_init_iregular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_ireapular, 285 xnvfile_init_ireapular, 285 xnvfile_init_ireapular, 285 xnvfile_init_iregular, 285 xnvfile_init_ireapular, 285 xnvfile_init_ireapular, 285 xnvfile_init_ireapular, 286 xnvfile_ireapular, 286 xnv	_ ::= =	
rtdm_in_rt_context, 227 rtdm_iomap_to_user, 227 rtdm_malloc, 228 rtdm_mmap_iomem, 228 rtdm_mmap_kmem, 229 rtdm_mmap_to_user, 230 rtdm_mmap_to_user, 230 rtdm_mmap_vmem, 231 rtdm_printk, 232 rtdm_printk, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_rv_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_destroy, 281 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_init_link, 284 xnvfile_init_regular, 285 xnvfile_init_gnapshot, 286 XNREADY Thread state flags, 40 XNSUSP Thread state flags, 41 XNTRAPLB Thread state flags, 40 XNSUSP Thread state flags, 41 XNTRAPLB Thread state flags, 40 XNSUSP Thread state flags, 41 XNTRAPLB Thread s	_	Thread state flags, 40
rtdm_malloc, 228 rtdm_mmap_iomem, 228 rtdm_mmap_iomem, 229 rtdm_mmap_to_user, 230 rtdm_mmap_vmem, 231 rtdm_munmap, 231 rtdm_printk, 232 rtdm_printk, 232 rtdm_read_user_ok, 234 rtdm_read_user_ok, 234 rtdm_rw_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_init_link, 284 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 286 rtdm_mmap_ionem, 228 XNSUSP Thread state flags, 41 XNTRAPLB Thread state flags, 41 XNTRAPLB Thread state flags, 41 xnapc_alloc Asynchronous Procedure Calls, 94 xnapc_schedule Asynchronous Procedure Calls, 94 xnapc_free Asynchronous Procedure Calls, 94 xnapc_schedule Asynchronous Procedure As		
rtdm_malloc, 228 rtdm_mmap_iomem, 228 rtdm_mmap_iomem, 229 rtdm_mmap_to_user, 230 rtdm_mmap_vmem, 231 rtdm_munmap, 231 rtdm_printk, 232 rtdm_ratelimited, 232 rtdm_ratelimited, 232 rtdm_read_user_ok, 234 rtdm_read_user_ok, 234 rtdm_rsafe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 coball_vfroot, 287 xnvfile_destroy, 281 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_init_dir, 284 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_galar, 285 xnvfile_init_galar, 285 xnvfile_init_galar, 286 xNSUSP Thread state flags, 41 XNTRAPLB Asynchronous Procedure Calls, 94 xnapc_schedule Asynchronous Procedure Calls, 94 xnapc_schedule Asynchronous Procedure Calls, 94 xnapc_sleve Asynchronous Procedure Selles Asynchronous Procedure Selles Asynchr		Thread state flags, 40
rtdm_mmap_iomem, 228 rtdm_mmap_kmem, 229 rtdm_mmap_kmem, 230 rtdm_mmap_vmem, 231 rtdm_munmap, 231 rtdm_printk, 232 rtdm_printk, 232 rtdm_ratelimited, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_rw_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_sanapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_init_iregular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 285 xnvfile_init_regular, 286 Thread state flags, 41 XNTRAPLB Thread state flags, 41 xnapc_alloc Asynchronous Procedure Calls, 94 xnapc_schedule Asynch	<u> </u>	
rtdm_mmap_kmem, 229 rtdm_mmap_to_user, 230 rtdm_mmap_to_user, 231 rtdm_mmap_vmem, 231 rtdm_printk, 232 rtdm_printk, 232 rtdm_printk_ratelimited, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_wuser_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_destroy, 281 xnvfile_get_integer, 282 xnvfile_get_intiger, 282 xnvfile_get_intiger, 284 xnvfile_init_regular, 285 xnvfile_init_regular, 286 XNTRAPLB Thread state flags, 41 xnapc_alloc Asynchronous Procedure Calls, 94 xnapc_schedule Asynchronous Procedure Calls, 94 xnapc_sloca Asynchronous Procedure Calls, 94 xnapc_schedule Asynchronous Procedure Calls, 94 xnapc_sloca Asynchronous Procedure Calls, 94 xnapc_schedule Asynchronous Procedure Calls, 94 xnapc_sloca Asynchronous Procedure Calls, 94 xnapc_schedule Asynchronous Procedure Calls, 94 xnapc_sch	_ · -	
rtdm_mmap_to_user, 230 rtdm_mmap_vmem, 231 rtdm_printk, 232 rtdm_printk_ratelimited, 232 rtdm_read_user_ok, 234 rtdm_read_user_ok, 234 rtdm_read_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_init_regular, 285 xnvfile_init_regular, 286 Thread state flags, 41 xnapc_alloc Asynchronous Procedure Calls, 94 xnarch_generic_full_divmod64 In-kernel arithmetics, 96 xnbufd_copy_from_kmem Buffer descriptor, 100 xnbufd_copy_from_kmem Buffer descriptor, 100 xnbufd_nap_kread Buffer descriptor, 101 xnbufd_map_kwrite Buffer descriptor, 102 xnbufd_map_ureid Buffer descriptor, 102 xnbufd_map_ureid Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_unmap_kread	_ ·-	
rtdm_mmap_vmem, 231 rtdm_printk, 232 rtdm_printk, ratelimited, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_read_user_ok, 234 rtdm_read_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_integ, 282 xnvfile_get_integr, 282 xnvfile_get_integr, 282 xnvfile_get_inte_ride, 284 xnapc_alloc Asynchronous Procedure Calls, 94 xnapc_schedule Asynchronous Procedure Calls, 94 xnapc_free Asynchronous Procedure Calls, 94 xnapc_schedule Asynchronous Procedure Calls, 94 xnapc_schedule Asynchronous Procedure Calls, 94 xnapc_free Asynchronous Procedure Calls, 94 xnapc_free Asynchronous Procedure Calls, 94 xnapc_schedule Asynchronous Procedure Calls, 94 xnapc_free Asynchronous Procedure Calls, 94 xnapc_staline Asynchronous Procedure Calls, 94 xnarch_generic_full_divmode4 In-kernel arithmetics, 96 xnbufd_copy_from_kmem Buffer descriptor, 100 xnbufd_nap_uread Buffer descriptor, 101 xnbufd_map_ure	_ ·	
rtdm_munmap, 231 rtdm_printk, 232 rtdm_printk_ratelimited, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_rw_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_blob, 282 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_integer, 282 xnvfile_init_link, 284 xnvfile_init_regular, 285 xnvfile_init_snapshot, 286 Asynchronous Procedure Calls, 94 xnapc_schedule Asynchronous Procedure Calls, 94 xnarch_generic_full_divmod64 In-kernel arithmetics, 96 xnbufd_copy_from_user, 295 xnbufd_copy_foumem Buffer descriptor, 101 xnbufd_map_kread Buffer descriptor, 102 xnbufd_map_uread Buf	rtdm_mmap_vmem, 231	_
rtdm_printk, 232 rtdm_printk_ratelimited, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_rw_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_strncpy_from_user, 237 vfile	rtdm_munmap, 231	
rtdm_printk_ratelimited, 232 rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_rw_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 xnvfile_get_blob, 282 xnvfile_get_inite_dir, 284 xnsrch_generic_full_divmod64 In-kernel arithmetics, 96 xnbufd_copy_from_kmem Buffer descriptor, 99 xnbufd_copy_from_kmem Buffer descriptor, 100 xnbufd_invalidate Buffer descriptor, 101 xnbufd_map_kread Buffer descriptor, 101 xnbufd_map_kread Buffer descriptor, 101 xnbufd_map_kread Buffer descriptor, 102 xnbufd_map_urread Buffer descriptor, 102 xnbufd_map_urread Buffer descriptor, 102 xnbufd_map_uwrite Buffer descriptor, 103 xnbufd_reset	rtdm_printk, 232	·
rtdm_ratelimit, 233 rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_rt_capable, 234 rtdm_rw_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_init_dir, 284 xnvfile_init_link, 284 xnvfile_init_regular, 285 xnbufd_copy_from_kmem Buffer descriptor, 99 xnbufd_copy_to_kmem Buffer descriptor, 100 xnbufd_invalidate Buffer descriptor, 101 xnbufd_map_kread Buffer descriptor, 101 xnbufd_map_kwrite Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uwrite Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_unmap_kread	rtdm_printk_ratelimited, 232	
rtdm_read_user_ok, 234 rtdm_rt_capable, 234 rtdm_rt_capable, 234 rtdm_rw_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_string, 283 xnvfile_init_dir, 284 xnvfile_init_regular, 285 xnvfile_init_snapshot, 286 Asynchronous Procedure Calls, 94 xnarch_generic_full_divmod64 In-kernel arithmetics, 96 xnbufd_copy_from_kmem Buffer descriptor, 99 xnbufd_copy_to_kmem Buffer descriptor, 100 xnbufd_invalidate Buffer descriptor, 101 xnbufd_map_kread Buffer descriptor, 101 xnbufd_map_kwrite Buffer descriptor, 102 xnvfile_init_link, 284 xnbufd_map_uwrite Buffer descriptor, 103 xnbufd_unmap_kread	rtdm_ratelimit, 233	·
rtdm_rt_capable, 234 rtdm_rw_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 vnfile_destroy, 281 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_string, 283 xnvfile_init_dir, 284 xnvfile_init_regular, 285 xnvfile_init_snapshot, 286 xnarch_generic_full_divmod64 In-kernel arithmetics, 96 xnbufd_copy_from_kmem Buffer descriptor, 99 xnbufd_copy_to_kmem Buffer descriptor, 100 xnbufd_map_kread xnbufd_map_kread Buffer descriptor, 101 xnbufd_map_kread Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uwrite Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_unmap_kread	rtdm_read_user_ok, 234	•
rtdm_rw_user_ok, 235 rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_string, 283 xnvfile_init_link, 284 xnvfile_init_regular, 285 xnvfile_init_get_string, 285 xnvfile_init_grapshot, 286 In-kernel arithmetics, 96 xnbufd_copy_from_kmem Buffer descriptor, 99 xnbufd_copy_to_kmem Buffer descriptor, 100 xnbufd_invalidate Buffer descriptor, 101 xnbufd_map_kread Buffer descriptor, 101 xnbufd_map_kwrite Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uwrite Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_unmap_kread	rtdm rt capable, 234	
rtdm_safe_copy_from_user, 235 rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_string, 283 xnvfile_init_link, 284 xnvfile_init_enit_snapshot, 286 rtdm_safe_copy_from_kmem Buffer descriptor, 99 xnbufd_copy_to_kmem Buffer descriptor, 100 xnbufd_invalidate Buffer descriptor, 101 xnbufd_map_kread Buffer descriptor, 101 xnbufd_map_kread Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uwrite Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_unmap_kread	rtdm rw user ok, 235	
rtdm_safe_copy_to_user, 236 rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280	rtdm safe copy from user, 235	·
rtdm_strncpy_from_user, 237 vfile xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_destroy, 281 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_string, 283 xnvfile_init_link, 284 xnvfile_init_regular, 285 xnvfile_init_snapshot, 286 xnvfile_init_snapshot, 286 xnbufd_copy_to_kmem Buffer descriptor, 100 xnbufd_invalidate Buffer descriptor, 101 xnbufd_map_kread Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uwrite Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_unmap_kread	rtdm safe copy to user, 236	
Virlual file services, 280 cobalt_vfroot, 287 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_string, 283 xnvfile_init_link, 284 xnvfile_init_snapshot, 286 Virlual file services, 280 Suffer descriptor, 101 xnbufd_map_kread Buffer descriptor, 101 xnbufd_map_kwrite xnbufd_map_kwrite Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uwrite Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_unmap_kread	, ,	
vfile xnvfile_regular_iterator, 614 Buffer descriptor, 101 xnvfile_snapshot_iterator, 621 xnbufd_map_kread Virtual file services, 280 Buffer descriptor, 101 cobalt_vfroot, 287 xnbufd_map_kwrite xnvfile_destroy, 281 Buffer descriptor, 102 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_string, 283 xnvfile_init_dir, 284 xnvfile_init_link, 284 xnvfile_init_regular, 285 xnbufd_unap_kread xnbufd_invalidate Buffer descriptor, 101 xnbufd_map_kread xnbufd_map_kwrite Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uwrite xnvfile_init_link, 284 xnbufd_reset Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_unmap_kread	_ ',	
xnvfile_regular_iterator, 614 xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_destroy, 281 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_string, 283 xnvfile_init_dir, 284 xnvfile_init_regular, 285 xnvfile_init_snapshot, 286 xnvfile_init_snapshot, 286 xnvfile_init_dir, 284 xnvfile_init_snapshot, 286 Ruffer descriptor, 101 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uwrite Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_reset Suffer descriptor, 103 xnbufd_unmap_kread	vfile	•
xnvfile_snapshot_iterator, 621 Virtual file services, 280 cobalt_vfroot, 287 xnvfile_destroy, 281 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_string, 283 xnvfile_init_dir, 284 xnvfile_init_regular, 285 xnvfile_init_snapshot, 286 xnbufd_map_kread Buffer descriptor, 102 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uwrite Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_unmap_kread		
Virtual file services, 280 cobalt_vfroot, 287 xnvfile_destroy, 281 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_string, 283 xnvfile_init_dir, 284 xnvfile_init_link, 284 xnvfile_init_regular, 285 xnvfile_init_snapshot, 286 Buffer descriptor, 102 xnbufd_map_uvrite Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_reset xnvfile_init_regular, 285 xnbufd_unmap_kread		•
cobalt_vfroot, 287 xnvfile_destroy, 281 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_string, 283 xnvfile_init_dir, 284 xnvfile_init_link, 284 xnvfile_init_regular, 285 xnvfile_init_snapshot, 286 xnbufd_map_uread Buffer descriptor, 102 xnbufd_map_uwrite Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_unmap_kread		_ • •
xnvfile_destroy, 281 xnvfile_get_blob, 282 xnvfile_get_integer, 282 xnvfile_get_string, 283 xnvfile_init_dir, 284 xnvfile_init_link, 284 xnvfile_init_regular, 285 xnvfile_init_snapshot, 286 Buffer descriptor, 102 xnbufd_map_uwrite Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_unmap_kread	·	
xnvfile_get_blob, 282 xnbufd_map_uread xnvfile_get_integer, 282 Buffer descriptor, 102 xnvfile_get_string, 283 xnbufd_map_uwrite xnvfile_init_dir, 284 Buffer descriptor, 103 xnvfile_init_link, 284 xnbufd_reset xnvfile_init_regular, 285 Buffer descriptor, 103 xnvfile_init_snapshot, 286 xnbufd_unmap_kread		_ • •
xnvfile_get_integer, 282 xnvfile_get_string, 283 xnvfile_init_dir, 284 xnvfile_init_link, 284 xnvfile_init_regular, 285 xnvfile_init_snapshot, 286 Buffer descriptor, 102 xnbufd_map_uwrite Buffer descriptor, 103 xnbufd_reset Buffer descriptor, 103 xnbufd_unmap_kread		
xnvfile_get_string, 283 xnvfile_init_dir, 284 xnvfile_init_link, 284 xnvfile_init_regular, 285 xnvfile_init_snapshot, 286		_ • •
xnvfile_init_dir, 284		• • • • • • • • • • • • • • • • • • •
xnvfile_init_link, 284 xnbufd_reset xnvfile_init_regular, 285 Buffer descriptor, 103 xnvfile_init_snapshot, 286 xnbufd_unmap_kread	_3 _ 3:	_ • •
xnvfile_init_regular, 285 Buffer descriptor, 103 xnvfile_init_snapshot, 286 xnbufd_unmap_kread	:	
xnvfile_init_snapshot, 286 xnbufd_unmap_kread		_
vxvvorks(g) ethiciator, 551 Butter descriptor, 104		
	VAVVOIRS(B) CITICIALOI, 331	buller descriptor, 104

xnbufd_unmap_kwrite	Registry services, 132
Buffer descriptor, 104	xnregistry_enter
xnbufd_unmap_uread	Registry services, 133
Buffer descriptor, 105	xnregistry_lookup
xnbufd_unmap_uwrite	Registry services, 134
Buffer descriptor, 105	xnregistry_remove
xnclock_adjust	Registry services, 135
Clock services, 107	xnregistry_unlink
xnclock_deregister	Registry services, 135
Clock services, 108	xnsched, 610
xnclock_register	cpu, 610
Clock services, 108	curr, 610
xnclock_tick	htimer, 610
Clock services, 109	inesting, 610
xnheap::xnbucket, 609	Iflags, 611
xnheap_alloc	resched, 611
Dynamic memory allocation services, 112	rrbtimer, 611
xnheap_destroy	rt, 611
Dynamic memory allocation services, 112	status, 611
xnheap_free	xnsched_rotate
Dynamic memory allocation services, 113	Thread scheduling control, 239
xnheap init	xnsched run
Dynamic memory allocation services, 113	Thread scheduling control, 240
xnheap_set_name	xnselect
Dynamic memory allocation services, 114	Synchronous I/O multiplexing, 242
xnintr_affinity	xnselect bind
Interrupt management, 119	Synchronous I/O multiplexing, 242
xnintr_attach	xnselect_destroy
Interrupt management, 120	Synchronous I/O multiplexing, 243
xnintr_destroy	xnselect init
Interrupt management, 120	Synchronous I/O multiplexing, 244
xnintr detach	xnselect_signal
Interrupt management, 121	Synchronous I/O multiplexing, 244
xnintr disable	xnselector destroy
Interrupt management, 121	Synchronous I/O multiplexing, 244
xnintr enable	xnselector_init
Interrupt management, 122	Synchronous I/O multiplexing, 245
xnintr init	xnsynch_acquire
Interrupt management, 122	Thread synchronization services, 246
xnmap_create	xnsynch_destroy
Lightweight key-to-object mapping service,	Thread synchronization services, 247
127	xnsynch_flush
xnmap_delete	Thread synchronization services, 248
Lightweight key-to-object mapping service,	xnsynch_init
128	Thread synchronization services, 249
xnmap enter	xnsynch_peek_pendq
Lightweight key-to-object mapping service,	Thread synchronization services, 250
129	xnsynch_release
	Thread synchronization services, 250
xnmap_fetch	
Lightweight key-to-object mapping service,	xnsynch_sleep_on
	Thread synchronization services, 251
xnmap_fetch_nocheck	xnsynch_try_acquire
Lightweight key-to-object mapping service,	Thread synchronization services, 252
130	xnsynch_wakeup_one_sleeper Throad synchronization sorvices 252
xnmap_remove	Thread synchronization services, 252
Lightweight key-to-object mapping service,	xnsynch_wakeup_this_sleeper
130 xnregistry bind	Thread synchronization services, 253 xnthread cancel
XIII EUISII V DIIIO	xiiiiilead cancel

Thread services, 256	Virtual file services, 281
xnthread_current	xnvfile_get_blob
Thread services, 257	Virtual file services, 282
xnthread_from_task	xnvfile_get_integer
Thread services, 257	Virtual file services, 282
xnthread_harden	xnvfile_get_string
Thread services, 257	Virtual file services, 283
xnthread init	xnvfile_init_dir
_	Virtual file services, 284
Thread services, 258	
xnthread_join	xnvfile_init_link
Thread services, 259	Virtual file services, 284
xnthread_map	xnvfile_init_regular
Thread services, 260	Virtual file services, 285
xnthread_migrate	xnvfile_init_snapshot
	Virtual file services, 286
Thread services, 261	
xnthread_relax	xnvfile_lock_ops, 611
Thread services, 261	get, 612
xnthread_resume	put, 612
Thread services, 262	xnvfile_regular_iterator, 613
xnthread_set_mode	pos, 613
	private, 613
Thread services, 263	•
xnthread_set_periodic	seq, 613
Thread services, 264	vfile, 614
xnthread set schedparam	xnvfile_regular_ops, 614
Thread services, 265	begin, 614
xnthread_set_slice	end, 615
	next, 615
Thread services, 266	rewind, 616
xnthread_start	show, 616
Thread services, 266	
xnthread_suspend	store, 618
Thread services, 267	xnvfile_rev_tag, 619
xnthread_test_cancel	rev, 619
Thread services, 268	xnvfile_snapshot, 619
•	xnvfile_snapshot_iterator, 620
xnthread_unblock	databuf, 621
Thread services, 269	endfn, 621
xnthread_wait_period	
Thread services, 269	nrdata 6'71
Trifead 3Ct vices, 200	nrdata, 621
•	private, 621
xntimer_destroy	private, 621 seq, 621
xntimer_destroy Timer services, 273	private, 621 seq, 621 vfile, 621
xntimer_destroy Timer services, 273 xntimer_get_date	private, 621 seq, 621
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout Timer services, 275	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624 show, 625
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout Timer services, 275 xntimer_grab_hardware	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout Timer services, 275 xntimer_grab_hardware Timer services, 275	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624 show, 625
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout Timer services, 275 xntimer_grab_hardware Timer services, 275 xntimer_init	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624 show, 625
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout Timer services, 275 xntimer_grab_hardware Timer services, 275 xntimer_init Timer services, 276	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624 show, 625
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout Timer services, 275 xntimer_grab_hardware Timer services, 275 xntimer_init	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624 show, 625
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout Timer services, 275 xntimer_grab_hardware Timer services, 275 xntimer_init Timer services, 276	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624 show, 625
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout Timer services, 275 xntimer_grab_hardware Timer services, 275 xntimer_init Timer services, 276 xntimer_init Timer services, 276 xntimer_interval Timer services, 277	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624 show, 625
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout Timer services, 275 xntimer_grab_hardware Timer services, 275 xntimer_init Timer services, 276 xntimer_interval Timer services, 277 xntimer_release_hardware	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624 show, 625
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout Timer services, 275 xntimer_grab_hardware Timer services, 275 xntimer_init Timer services, 276 xntimer_interval Timer services, 277 xntimer_release_hardware Timer services, 277	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624 show, 625
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout Timer services, 275 xntimer_grab_hardware Timer services, 275 xntimer_init Timer services, 276 xntimer_init Timer services, 276 xntimer_interval Timer services, 277 xntimer_release_hardware Timer services, 277 xntimer_start	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624 show, 625
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout Timer services, 275 xntimer_grab_hardware Timer services, 275 xntimer_init Timer services, 276 xntimer_interval Timer services, 277 xntimer_release_hardware Timer services, 277 xntimer_start Timer services, 277	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624 show, 625
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout Timer services, 275 xntimer_grab_hardware Timer services, 275 xntimer_init Timer services, 276 xntimer_interval Timer services, 277 xntimer_release_hardware Timer services, 277 xntimer_start Timer services, 277 xntimer_start Timer services, 277 xntimer_start Timer services, 277 xntimer_stop	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624 show, 625
xntimer_destroy Timer services, 273 xntimer_get_date Timer services, 274 xntimer_get_overruns Timer services, 274 xntimer_get_timeout Timer services, 275 xntimer_grab_hardware Timer services, 275 xntimer_init Timer services, 276 xntimer_interval Timer services, 277 xntimer_release_hardware Timer services, 277 xntimer_start Timer services, 277	private, 621 seq, 621 vfile, 621 xnvfile_snapshot_ops, 622 begin, 622 end, 623 next, 623 rewind, 624 show, 625