Automotive Ethernet

General Ethernet:

Ethernet is used for Bandwith

In vehicles, low power consumption is important. Also, requirement for ECU(Electronic Control Unit) is to be able to comletely wake up from sleep under 100 miliseconds.

Standard 4 wires ethernet cannot handle this speed currently.

So instead of standard ethernet, we use Automotive Ethernet which can take care of these issues.

Comparing Ethernet to CAN(Controller Area Network) and FLEXRAY

CAN:

it is a multidrop (bus) technlogy where user can add / remove nodes.

Multidrop or bus technology means every node or every ecu is pysically, electrically connected to the same wires as ever other node.

single twisted pair copper wire. => low cost/ light weight easy for plug and play Message or Packet based communication.

Unique for CAN is that Non-Destructive Arbitration for handling message or packet collisions.

This is handled in the arbitration section or the arbitration ID of the can network. So when there is a possible collision risk, the arbitration ID is used to identify the message or packet, and the packet or the message with the smaller ID is sent first, whereas the packet or the message with the larger ID is sent later but WITHOUT A NEED FOR RE—TRANSMISSION.

so lower ID number transmits first, other one waits, not not getting killed just waits. And nodes that transmits the higher ID packet also understands the situatuin and also waits.

This has a drawback: nodes that lost the arbitration (the ones sending the higher ID packet) will have to wait. this maskes CAN not as time-critical and accurate in time.

This is why FlexRay was developed

FlexRay:

it is similar to CAN in terms of wiring. it is a *MultiDrop* technology BUT all nodes must be preprogrammed wit a fixed configuration

up to 10Mb/s. speed. also good for plug and play. message or packet based communication.

==> Collision avoidance is based on time slots for each node

Eveyn node in FlexRay is aware of time base so this helps each node to understand when it is allowed to transmit. So basically there is a cycle time, and it is divided into slices and each node has its own time slot

where it is allowed to transmit. So colisions don't happen in flexray.

This helps very accurate in time and security critical.

Automative Ethernet:

(100Base-T)/(1000Base-T)

==> base means this is the speed at the slowest rate ==> T1 means single twisted cable

Modern ethernet technologies, be it automotive or not, is NOT a bus technology anymore. Instead, it is *point-to-point technology*. This means that each node is connected to only one other node. for multiple communication, we need to introduce a SWITCH.

Switch distributes the traffic to the nodes within a network based on their pysicall adress that.

Today commercially there are 100base and 1000base ethernet, 100 meaning 100Mb/s, 1000 meaning 1Gb/s.

Note that automotive ethenetnet is very cost effective network but not enough for uncompressed audio and video streaming since they handle around 10MBits.

Automotive Ethernet


(100BASE-T1 / 1000BASE-T1)

Pros

- Up to 1000 Mb/s (each direction and each leg)
- Widely used technology (much support)
- Good clock synchronization technology available (based on IEEE 1588)
- History of adaptation to solve new problems.

Cons

- Requires a switch
- Not possible to add or remove nodes unless the switch has spare ports
- Tools cannot just connect and sniff the bus

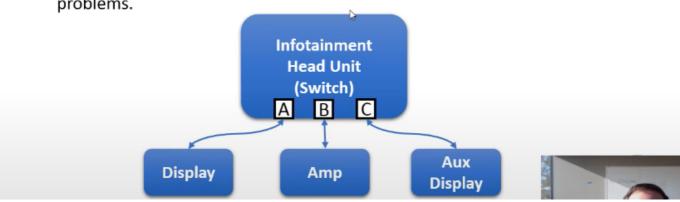

In bus technology, all the node load can be used and it is locked to 100 or 1000 mbits. in ethernet, however, it is not the case, aggregate bandwith can exceed 100 or 1000.

Networking Topologies:

• Defines how device are connected to each other.

- Defines how the device communicate with each other.
- · Determines network characteristics.
- Simple Technologies:
- Point to Point(port)
- Ring (Also Etnernet, used for safety critical technologies)
- Star (ethernet) like one switch with many ports
- Bus (chained or attached) like CAN, FLEXRAY
- Complex topologies can combine these(like mesh)

Hierarchical Star topology:


also known as tree topology, where each star topology represents a node and they are also intercoonected to each other via a switch. you can add / remove nodes without effecting the rest of the nodes.

====***=====

Note that today's ethernet network are a switched network, devoices connected through switch, it optimizes the traffic flow, buffering eliminates the colisions.

Today's Ethernet Network

- Original Ethernet (Like CAN)
 - Bus architecture
 - Multiple Nodes / Single Medium
 - Collisions + Arbitration = Inefficient
- Most modern networks are a switched network
 - Devices connected through switches
 - Optimized traffic flow
 - Buffering eliminates collisions
- Each leg (A,B,C) acts as its own network.

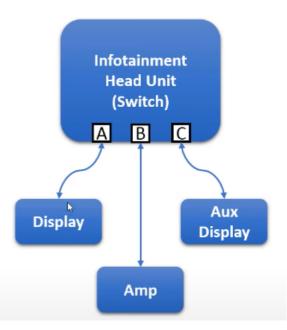


In this pic, there are three ports (A,B,C) and physically A is connected to only it's corresponding Port(Display), same for B and C. and Under each node, it works as a separate network. This eliminates the possibility of colisions because each node is communicating through only one dedicated port.

(this is the difference between this and CAN/FlexRay)

OSI Model


Physical Layer

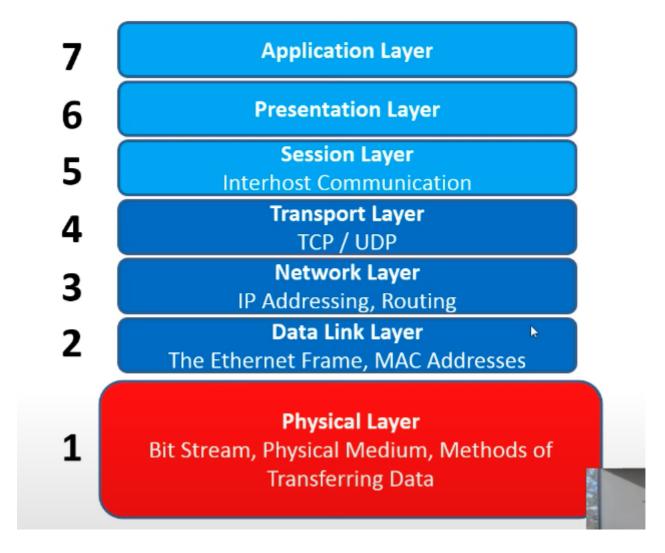

Automotive ethernet, compared to normal ethernet, proioritizes the Physical layer of OSI model.


The Power of MII

- Ethernet Node
 - Microcontroller
 - Ethernet MAC controller
 - Ethernet physical layer (PHY).

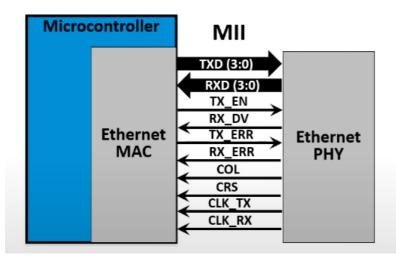

MII

- Media Independent Interface
- Industry standard digital interface
- enables different PHYs to be used with any MAC.
- Evolved into a few variations
 - RMII: Reduced
 - GMII: Gigabit
 - RGMII: Reduced Gigabit
 - SGMII: Serial Gigabit

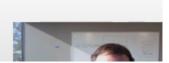

- Ethernet PHY = Physical layer
- MII = Media Independent Interface
- Ethernet MAC = Media Access Control

MII is connected to Ethernet MAC.

Punchline: Why Ethernet is Used and how it changes between regular vs automotive

This gives ability to change and adapt overtime.

Automotive internet is an adaptation of it where only the physical layer is changed.

Hence talking about `Automotive Ethernet` basically meaning a change in the Pyhsical layer only

This is adaptability and flexibility for the thanks to Ethernet!```