## S Parameters

- **Scattering parameters** also known as S-parameters refer to the elements in a mathematical matrix describing the behavior of an electrical network (or circuit) when it is being stimulated by an electrical signal.
- At high frequencies, it becomes difficult to measure **voltages and currents** directly.


  Consequently, S-parameters describe the input-output relationships of **power waves** between the **ports** of an electrical network.

### Benefits of Using S-parameters:

S-parameters provide engineers with valuable information concerning the performance of linear electrical networks, including RF circuits, amplifiers, and filters.

#### This information includes:

- •Details of signal magnitude, phase, reflection, and attenuation
- •Locations of signal losses and impedance mismatches
- •Transmission line parameters, such as R, L, C, G, TD, and Z0

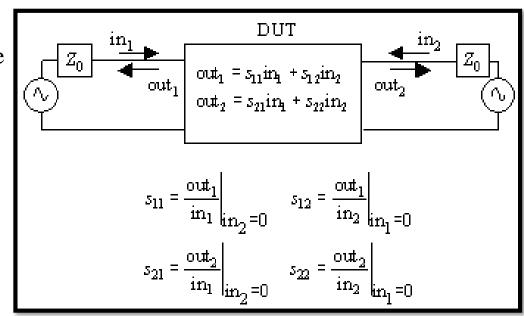

For a matched two-port network, the reflection coefficients are zero and

$$S_{11} = S_{22} = 0 ag{10.138}$$

The input reflection coefficient can be expressed in terms of the S-parameters and the load  $Z_L$  as

$$\Gamma_i = \frac{b_1}{a_1} = S_{11} + \frac{S_{12}S_{21}\Gamma_L}{1 - S_{22}\Gamma_L}$$
 (10.139)

where

$$\Gamma_L = \frac{Z_L - Z_o}{Z_L + Z_o} \tag{10.140}$$

Similarly, the output reflection coefficient (with  $V_g = 0$ ) can be expressed in terms of the generator impedance  $Z_g$  and the S-parameters as

$$\Gamma_o = \frac{b_2}{a_2} \Big|_{V_r = 0} = S_{22} + \frac{S_{12} S_{21} \Gamma_g}{1 - S_{11} \Gamma_g}$$
 (10.141)

where

$$\Gamma_{g} = \frac{Z_{g} - Z_{o}}{Z_{g} + Z_{o}} \tag{10.142}$$

Thus, the S-matrix for a two-port network is written as:

$$egin{pmatrix} S_{11} & S_{12} \ S_{21} & S_{22} \end{pmatrix}$$


#### Where:

- $S_{11}$  is input port reflection coefficient
- $oldsymbol{S}_{22}$  is the output port reflection coefficient
- $S_{12}$  is the input port transmission coefficient (or "reverse voltage gain")
- $S_{21}$  is the transmission coefficient (or "forward voltage gain")

 $S_{11}$  (Reflection Coefficient)  $\rightarrow$  Measures how much signal is reflected (impedance matching).

 $S_{21}$  (Transmission Coefficient)  $\rightarrow$  Measures how much signal passes through the system.

# Microstrip Patch Antenna

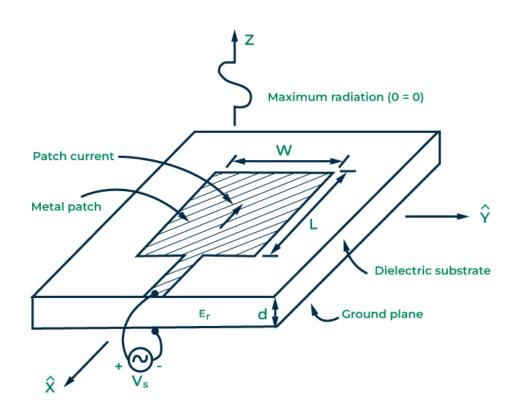

Types of Microstrip Patch Antenna

Square Dipole Square Circular

Rectangular Elliptical Triangle

## **Microstrip Patch Antenna Calculation**

Step 1: Calculation of the Width (W) -

$$W = \frac{c}{2f_o\sqrt{\frac{(\varepsilon_r + 1)}{2}}}$$

**Step 2:** Calculation of the Effective Dielectric Constant. This is based on the height, dielectric constant of the dielectric and the calculated width of the patch antenna.

$$\varepsilon_{eff} = \frac{\varepsilon_r + 1}{2} + \frac{\varepsilon_r - 1}{2} \left[ 1 + 12 \frac{h}{W} \right]^{-\frac{1}{2}}$$

Step 3: Calculation of the Effective length

$$L_{eff} = \frac{c}{2f_o\sqrt{\varepsilon_{eff}}}$$

https://www.everythingrf.com/rf-calculators/microstrip-patchantenna-calculator

Step 4: Calculation of the length extension AL

$$\Delta L = 0.412h \frac{(\varepsilon_{eff} + 0.3)(\frac{W}{h} + 0.264)}{(\varepsilon_{eff} - 0.258)(\frac{W}{h} + 0.8)}$$

Step 5: Calculation of actual length of the patch

$$L = L_{eff} - 2\Delta L$$

#### Where the following parameters are used

fo is the Resonance Frequency

W is the Width of the Patch

L is the Length of the Patch

h is the thickness

 $\varepsilon_r$  is the relative Permittivity of the dielectric substrate

c is the Speed of light: 3 x 108