
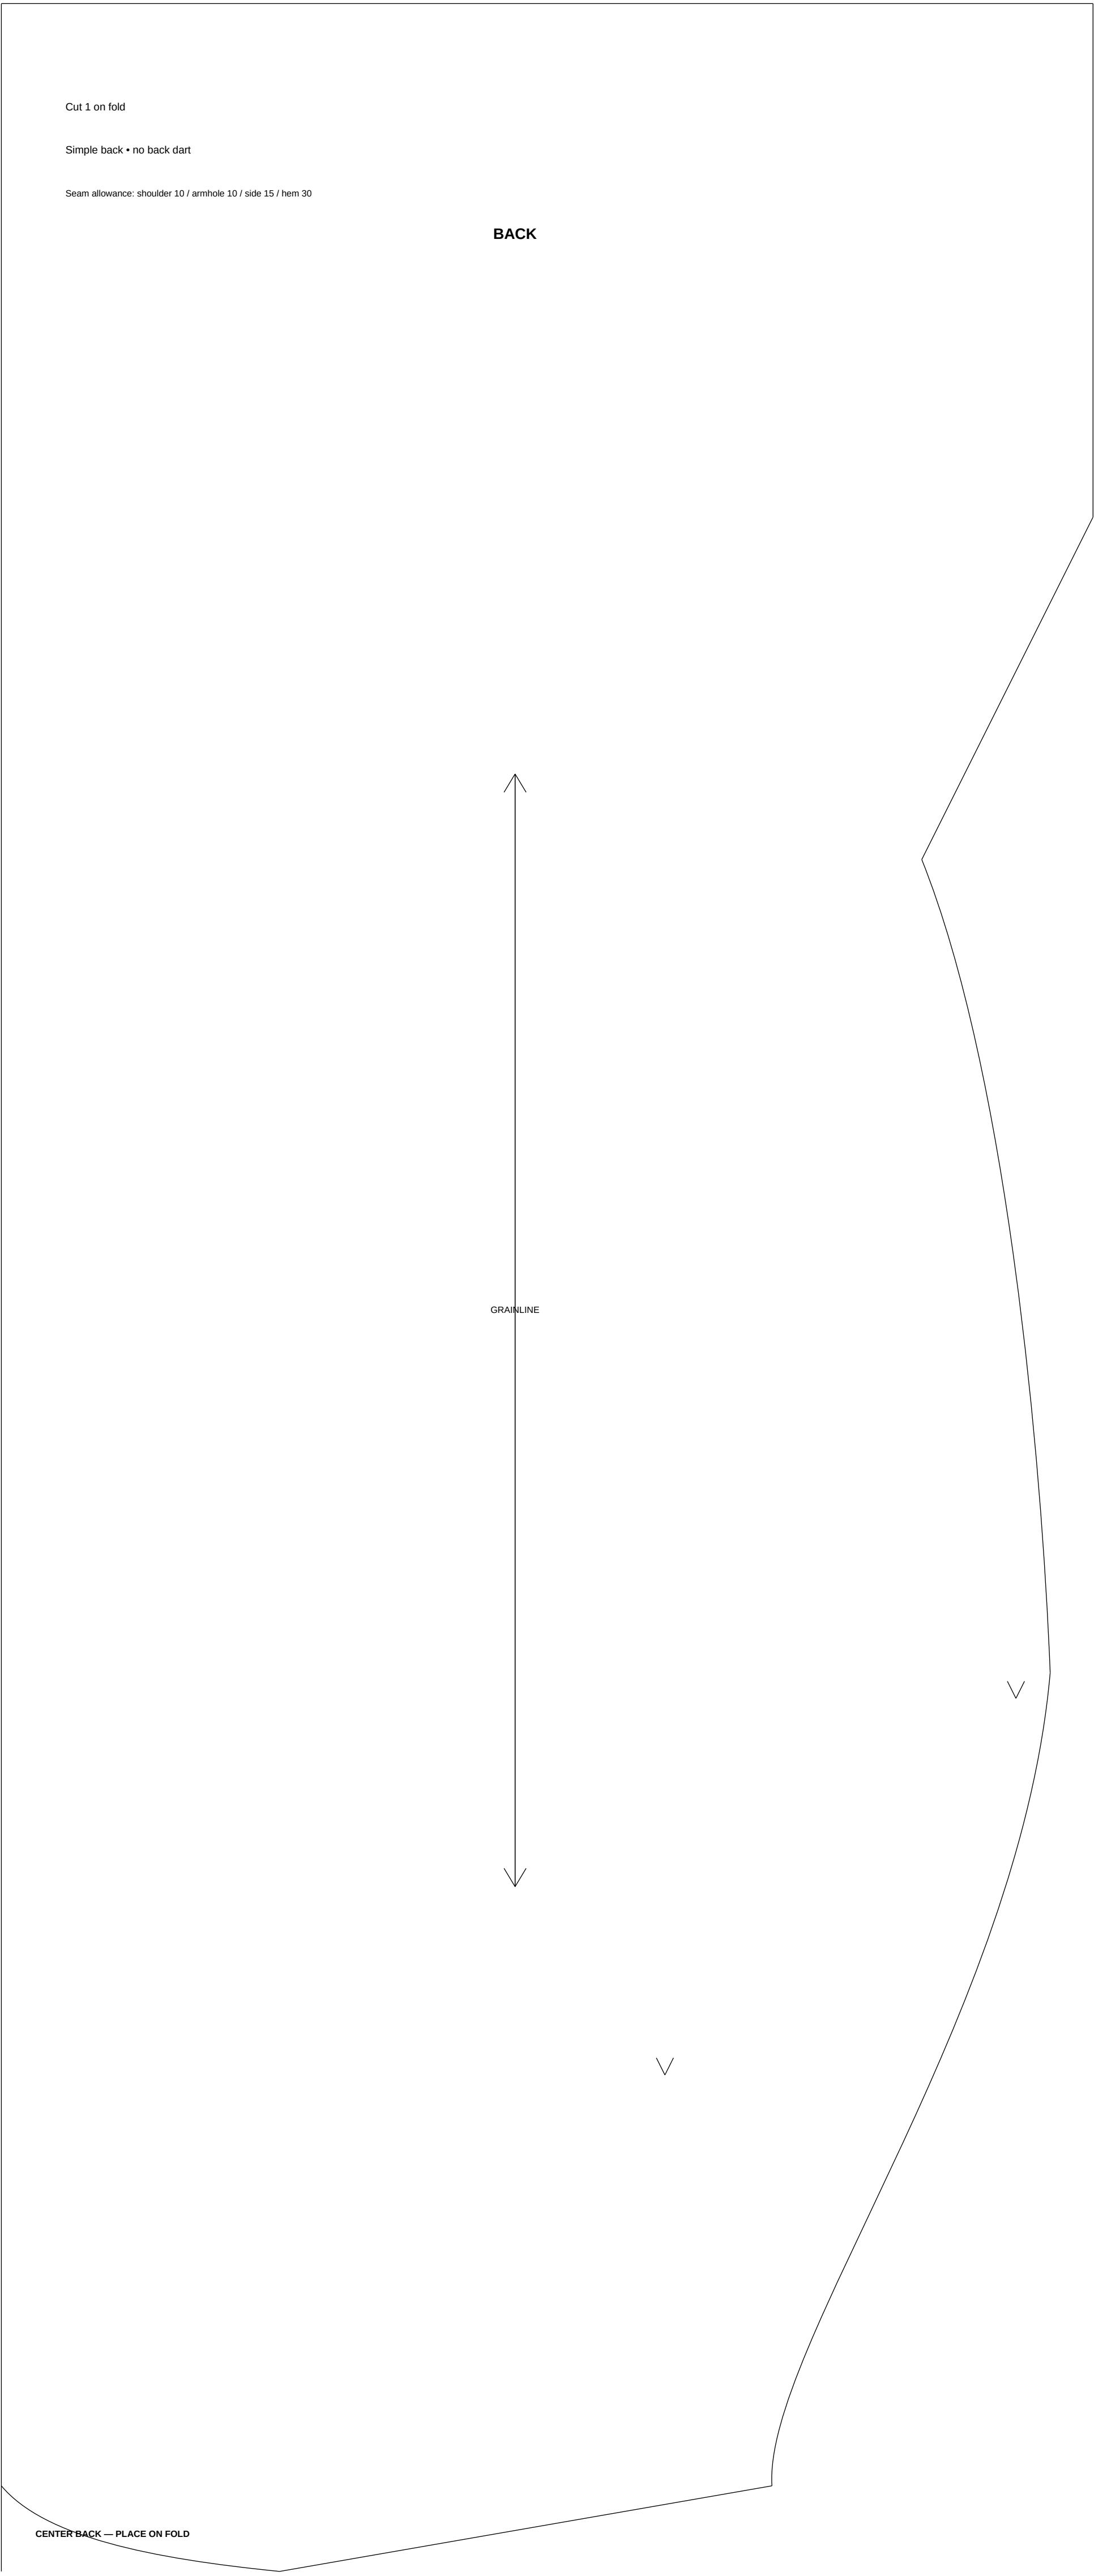



Pattify • XL • 1.1 • A0 • Seam allowances included

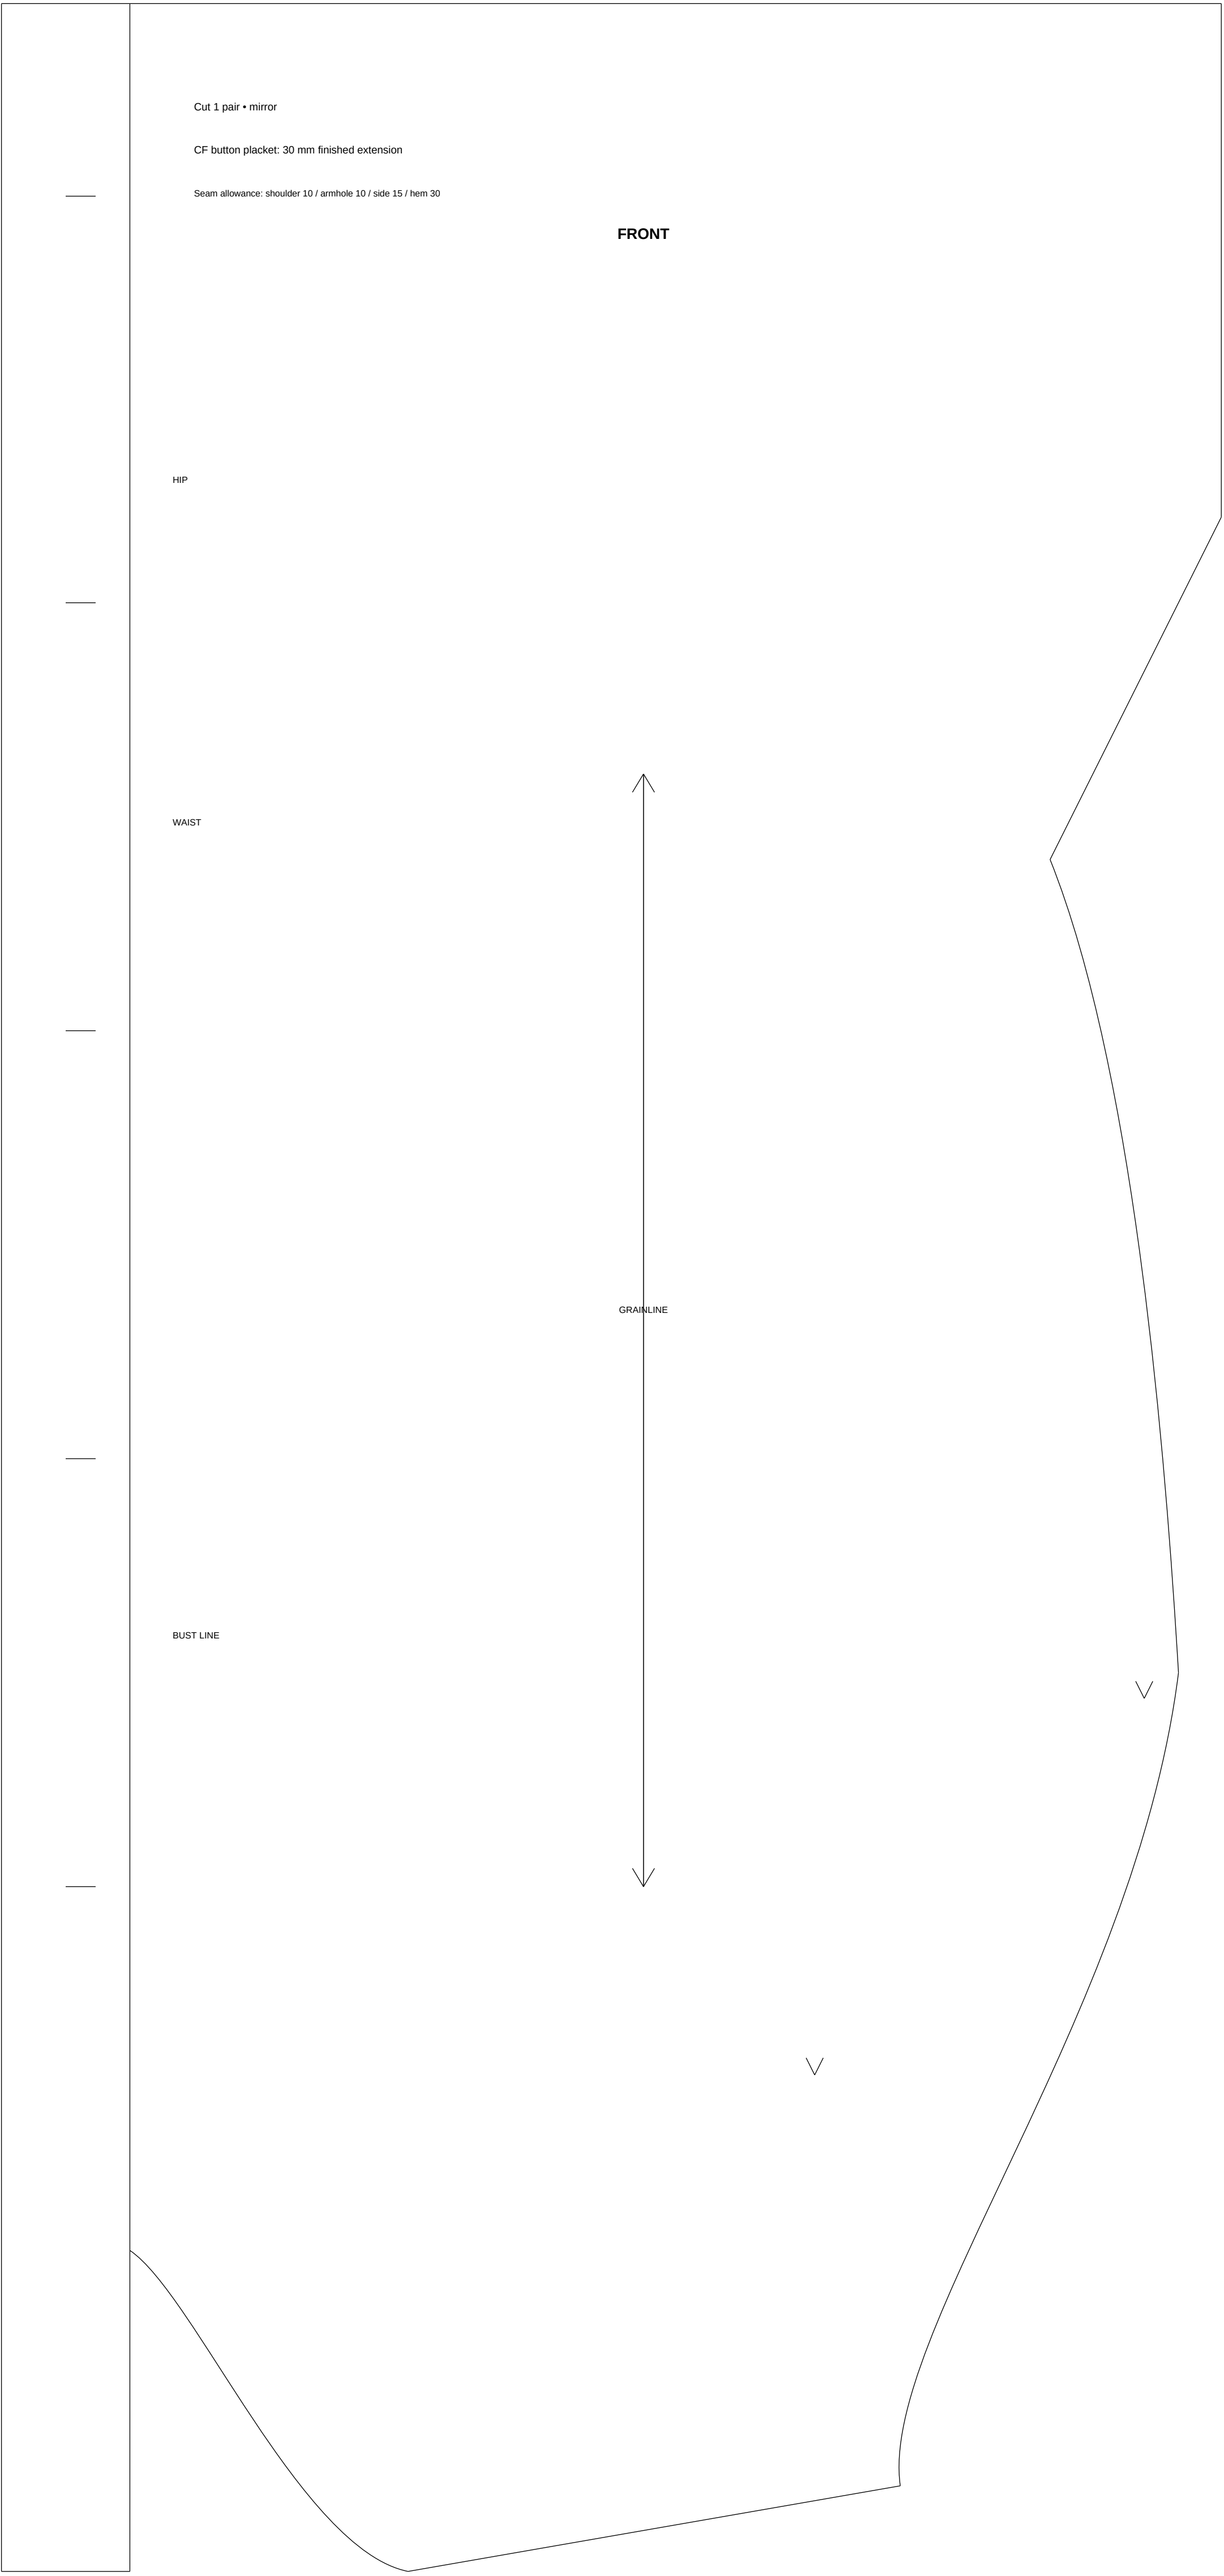


Draft basis: body bust 90 / waist 78 / hip 94 / shoulder 36 / neck 35 cm; wearing ease 8 cm at bust/waist/hip.

This is a measured draft based on the supplied measurements; make a muslin/toile before production or sale.

TEST SQUARE: 50 x 50 mm




Pattify • XL • 1.1 • 40 • Seam allowances included

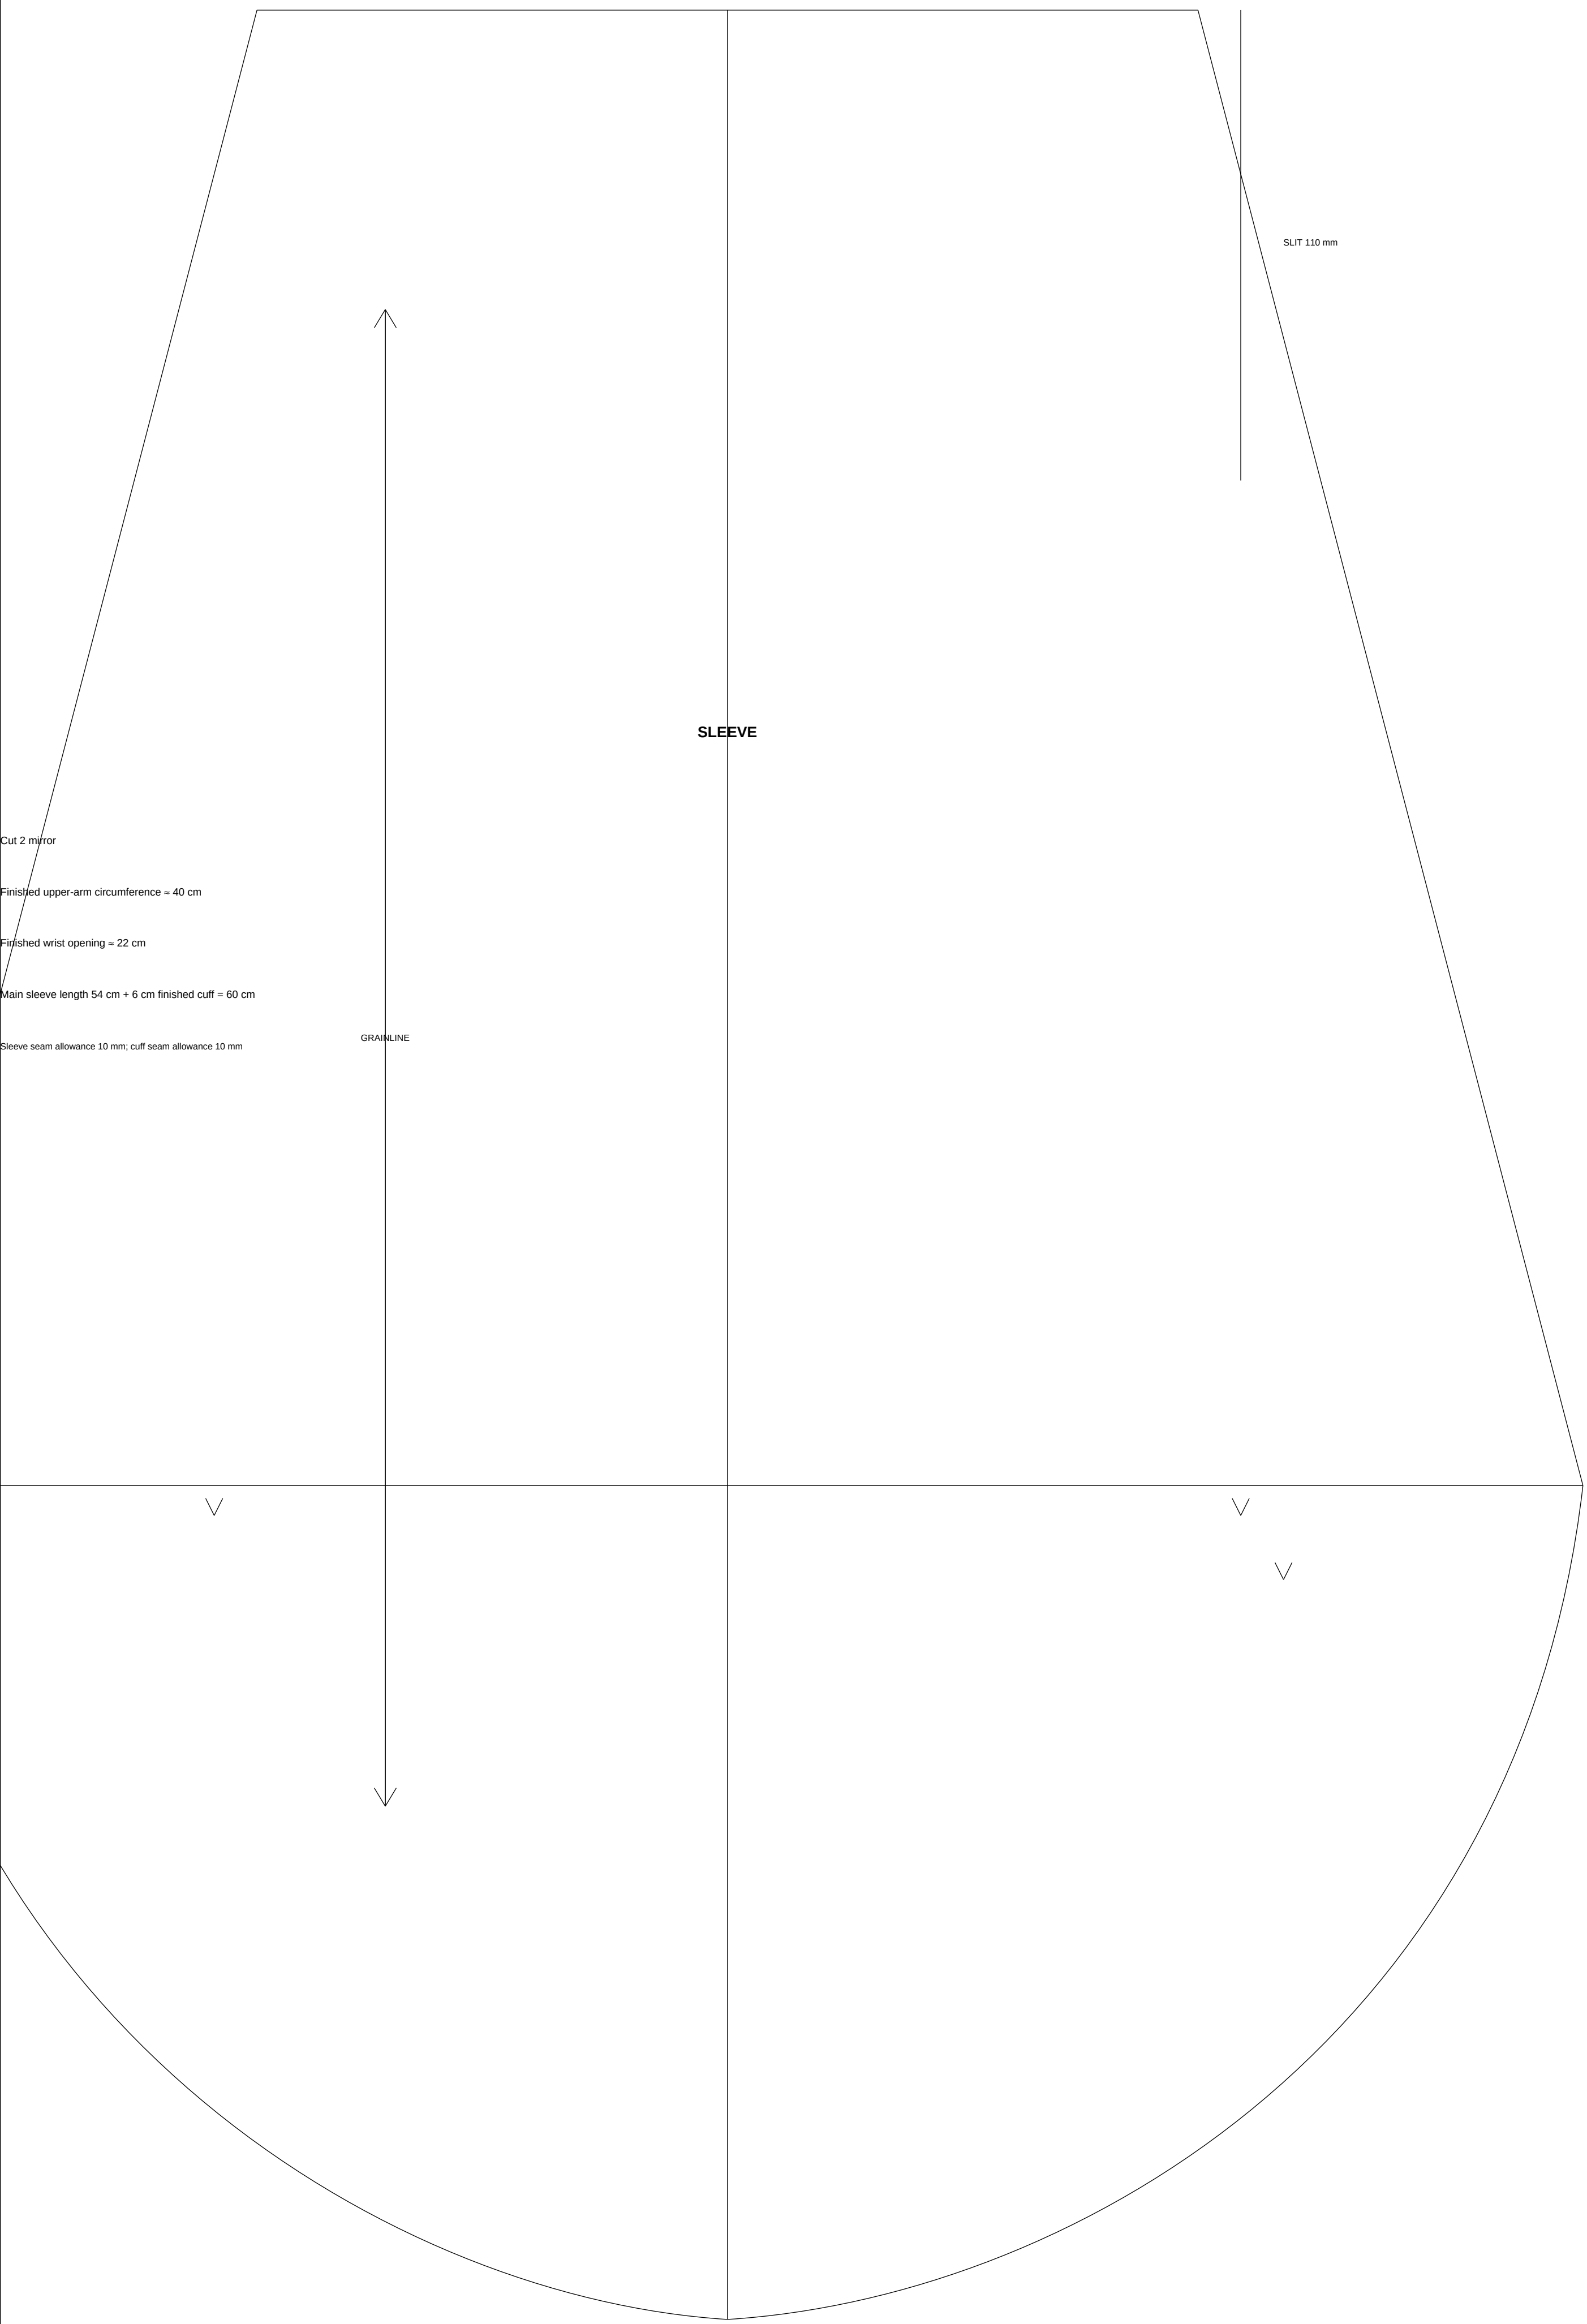

CUFF — CUT 2 ON FOLD



TEST SQUARE: 50 x 50 mm




Sleeve draft uses approx. 6 cm ease over the supplied 34 cm upper arm measurement.

Wrist opening is an assumed 22 cm because wrist circumference was not supplied; verify before production.

Pattify • XL • 1.1 • A0 • Seam allowances included

FRONT BUTTON PLACKET — CUT 2

70 mm cut width • 20 mm finished RM




COLLAR CONSTRUCTION

1. Interface the upper collar.
2. Stitch collar pieces right sides together.
3. Turn, press, and attach to neckline.
4. Match center back and shoulder notches.


COLLAR 1

Cut 2 = mirror / interfacing on upper

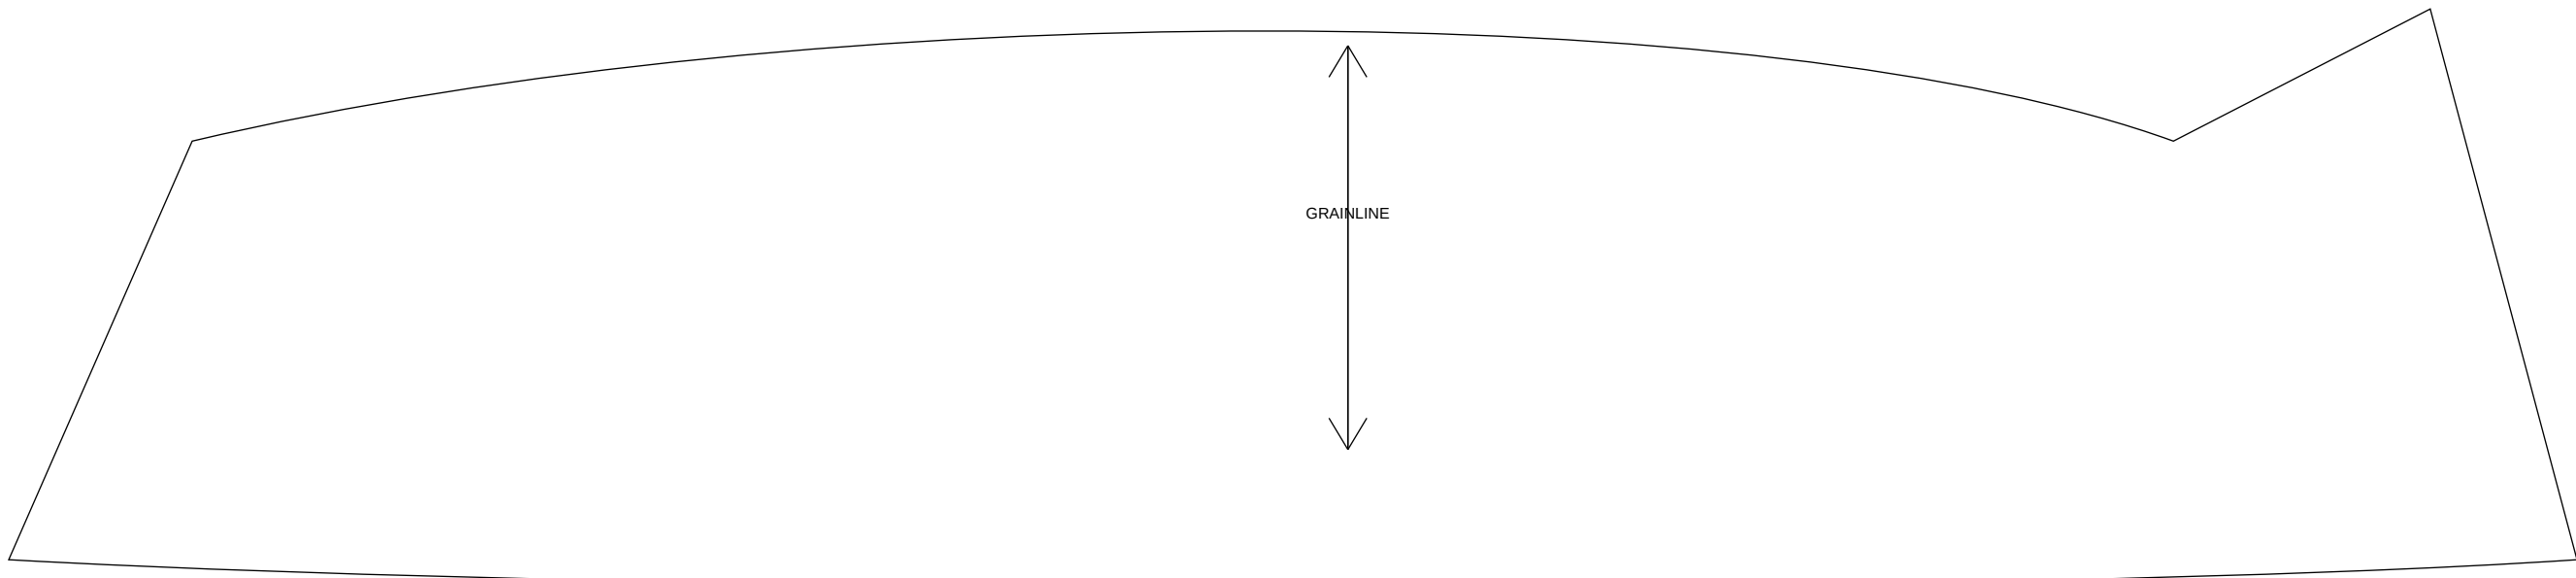


COLLAR 2

Cut 2 = mirror / interfacing on upper

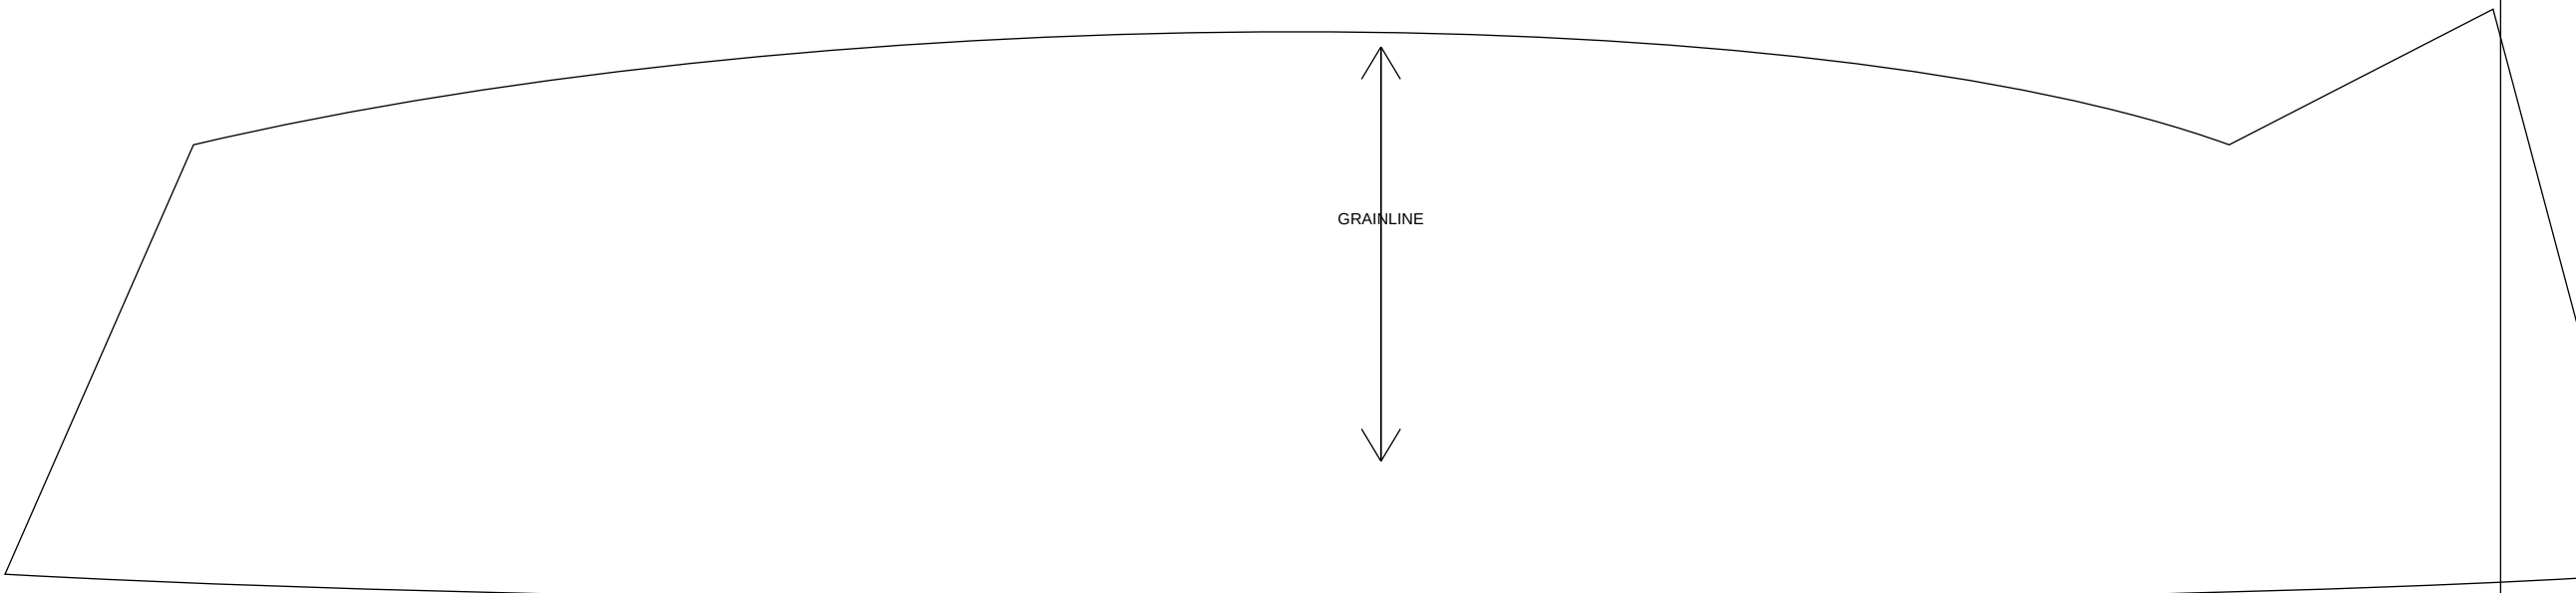

TEST SQUARE: 50 x 50 mm



Collar draft is based on a 38 cm body neckline and a classic pointed turn-down shape.

Collar length should be checked against the finished garment neckline before final production.

Pattify • XL • 1.1 • A0 • Seam allowances included


PATTERN PIECES

01	FRONT	Cut 1 pair / mirror	Seam allowance included
02	BACK	Cut 1 on fold	Seam allowance included
03	SLEEVE	Cut 2 mirror	Seam allowance included
04	CUFF	Cut 2	Interface recommended
05	COLLAR	Cut 2 mirror	Interface upper collar
06	FRONT PLACKET	Cut 2	Fold at center line

PRINT SETTINGS


- Paper size: A0 (B41 = 1189 mm).
- Scale: 100% / Actual Size. Do NOT use Fit to Page or Shrink.
- Verify the 50 × 50 mm test square after printing.
- Keep page orientation and margins unchanged.
- Cut on the outer seam-allowance line.
- Grainline arrows must remain parallel to the fabric selvedge.

50 mm TEST SQUARE



Measure the printed square with a ruler. It must be exactly 50 × 50 mm.

100 mm CONTROL RULER

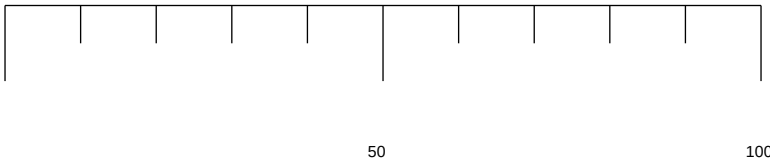

IMPORTANT FIT NOTE

- This A0 file is a measured draft based on the supplied body measurements plus assumed wearing ease.
- Because no physical sample or full body measurement set was supplied, make one test garment/toile first.
- Check bust, shoulder, armhole, sleeve mobility, wrist/cuff and total length before selling this pattern.
- Do not treat this draft as professionally graded or production-validated until it has been tested.

TEST SQUARE: 50 x 50 mm

