

CONFIGURACION DEMARCADOR

• Para empezar, debemos configurar nuestro PC de la siguiente manera:



• Realizamos la siguiente conexión con el equipo y este debe estar alimentándolo.

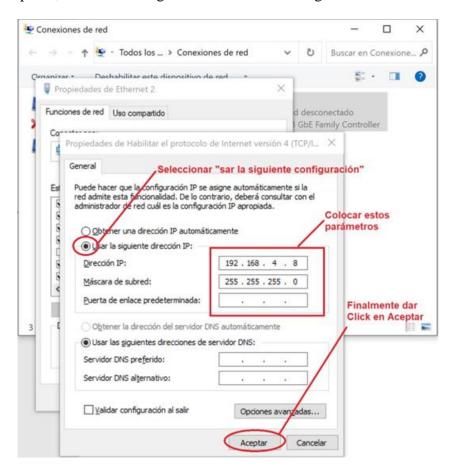

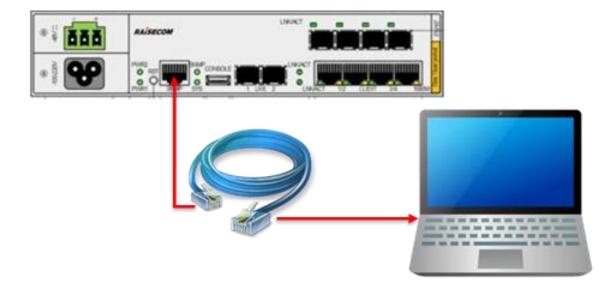



 Para continuar se debe tener instalado el programa PuTTy (Se puede descargar del siguiente link: https://www.putty.org/).




Download PuTTY


PuTTY is an SSH and telnet client, software that is available with source

You can download PuTTY here.

• Abrir el programa Putty y realiza conexión a la dirección 192.168.4.28 en Telnet por el puerto 23 como se muestra a continuación:

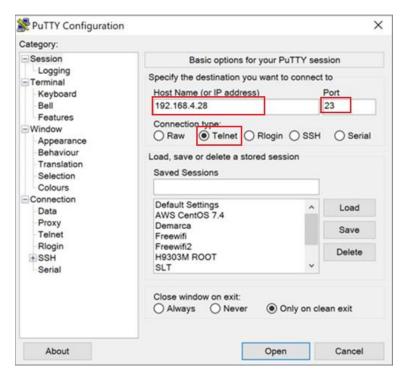

• Al Dar Click en "Open", se abre una ventana donde ya puedes acceder al equipo y te va a pedir usuario y contraseña:

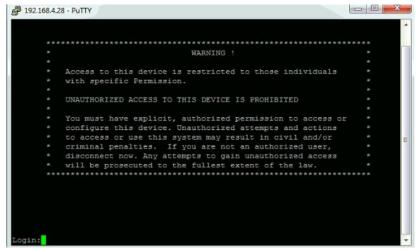

Ponemos:

Login: raisecom

Password: raisecom





• Y listo, ya estás en el prompt del equipo que te permite entrar el script para configuración. Se debe ejecutar el siguiente codigo linea por linea.

config

create vlan 1-4094 active interface uni 1 switchport mode trunk switchport trunk native vlan 1 switchport trunk allowed vlan 1-4094 confirm no switchport protect exit

interface uni 2 switchport mode trunk switchport trunk native vlan 1 switchport trunk allowed vlan 1-4094 confirm switchport protect exit

interface uni 3 switchport mode trunk switchport trunk native vlan 1 switchport trunk allowed vlan 1-4094 confirm switchport protect exit

interface uni 4 switchport mode trunk switchport trunk native vlan 1 switchport trunk allowed vlan 1-4094 confirm switchport protect exit

> interface ip 0 ip address **192.168.2.100 255.255.255.0** ip vlan **100** exit

snmp-server host 192.168.22.252 version 2c public exit

hostname nombre Estación base write

*Validar con la persona de Claro encargada de Gestión los valores en rojo IP y máscara de gestión y en azul negrilla VLAN de gestión.





```
192.168.4.28 - PuTTY
           configure this device. Unauthorized attempts and actions
           to access or use this system may result in civil and/or
          criminal penalties. If you are not an authorized user,
         disconnect now. Any attempts to gain unauthorized access
         will be prosecuted to the fullest extent of the law.
Login:raisecom
Password:
raisecom#config
Configuration mode, one command input per times. End with CTRL-Z.
CONFIG-I:Configured from telnet ...
raisecom(config) #create vlan 1-4094 active
Set successfully
raisecom(config) #interface uni 1
raisecom(config-port) #switchport mode trunk
Set successfully
raisecom(config-port) #switchport trunk native vlan1
switchport trunk native vlan1
Error input in the position market by '^'.
raisecom(config-port) #switchport trunk native vlan 1
Set successfully
raisecom(config-port) #switchport trunk allowed vlan 1-4094 confirm
Set successfully
raisecom(config-port) #no switchport protect
Set successfully.
raisecom(config-port) #exit
raisecom(config) #interface uni 2
raisecom(config-port) #switchport mode trunk
Set successfully
raisecom(config-port) #switchport trunk native vlan 1
Set successfully
raisecom(config-port) #switchport trunk allowed vlan 1-4094 confirm
Set successfully
raisecom(config-port) #switchport protect
Set successfully.
raisecom(config-port) #exit
raisecom(config) #interface uni 3
```



```
raisecom(config)#interface uni 3
raisecom(config-port)#switchport mode trunk
Set successfully
raisecom(config-port) #switchport trunk native vlan 1
Set successfully
raisecom(config-port) #switchport trunk allowed vlan 1-4094 confirm
Set successfully
raisecom(config-port) #switchport protect
Set successfully.
raisecom(config-port)#exit
raisecom(config)#interface uni 4
raisecom(config-port) #switchport mode trunk
Set successfully
raisecom(config-port) #switchport trunk native vlan 1
Set successfully
raisecom(config-port) #switchport trunk allowed vlan 1-4094 confirm
Set successfully
raisecom(config-port) #switchport protect
Set successfully.
raisecom(config-port)#exit
raisecom(config) #interface ip 0
raisecom(config-ip) #ip address 192.168.2.100 255.255.255.0
Set successfully.
raisecom(config-ip) #ip vlan 100
Set successfully.
raisecom(config-ip) #exit
raisecom(config) #snmp-server host 192.168.22.252 version 2c public
Set successfully
raisecom(config) #exit
raisecom#hostname ANT.Pto Valdivia
hostname ANT.Pto Valdivia
Error input in the position market by '^'.
raisecom#hostname ANT Pto Valdivia
hostname ANT Pto Valdivia
Error input in the position market by '^'.
raisecom#hostname PtoValdivia
Set successfully
PtoValdivia#write
Saving current configuration..
Save current configuration successfully.
PtoValdivia#
```

