# Memory Models and Addresses

## Linear Memory Model


- In linear memory model the whole memory appears like a single array of data
- In earlier processors like 8080 and 8085 the linear memory model was used to access memory
- 8080 and 8085 could access a total memory of 64K using the 16 lines of their address bus.

## Segmented Memory Model

- The segmented memory model allows multiple functional windows into the main memory, a code window, a data window etc.
- The processor sees code from the code window and data from the data window.
- For 16 bit processor the size of one window is restricted to 64K, (16 bit register 2^16=64K)
- The four segment registers point to the base of each window.


## Physical Addresses

- As our memory is 1MB, physical addresses are 20 bit long
- Every address given in our program will be of 16 bit.
- We will need base address of segment and offset calculate physical address in memory.
- Each segment start at some address that is multiple of 16.
  - This is to ensure that the last 4 bits are 0
  - Now the base address of each segment can be represented using 16 bits (instead of 20)
  - This is also called Paragraph Boundaries
- Following registers hold the (16bit ) base address of each segment.
  - CS holds the base address of code segment
  - DS holds the base address of data segment
  - SS holds the base of stack segment.
  - ES holds the base of extra segment

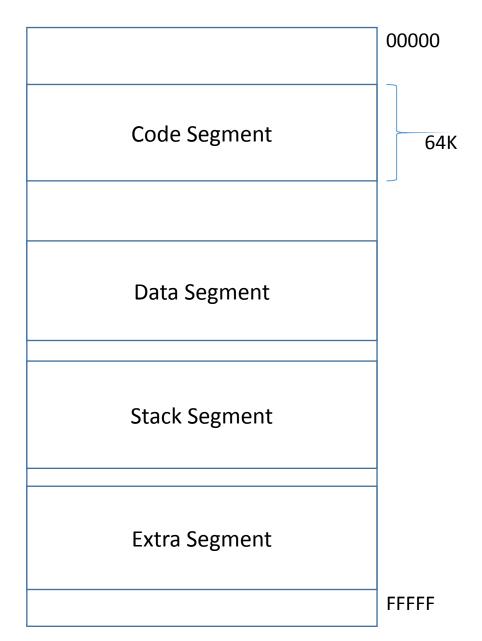


## Logical Address


- Logical Address Space is the set of all logical addresses generated by CPU for a program
- The addresses you have seen in registers so far (e.g IP) are logical addresses.
- In 8088 each address we have seen in registers is of 16 bits, so possible logical addresses are 64k
- For example
  - When IP was equal to 0100 it was the logical address of next instruction to be fetched.
  - When num1 label was 0110 it was logical address starting address of data referred by label num1
- Logical address is converted to Physical address to access the data/instruction from memory

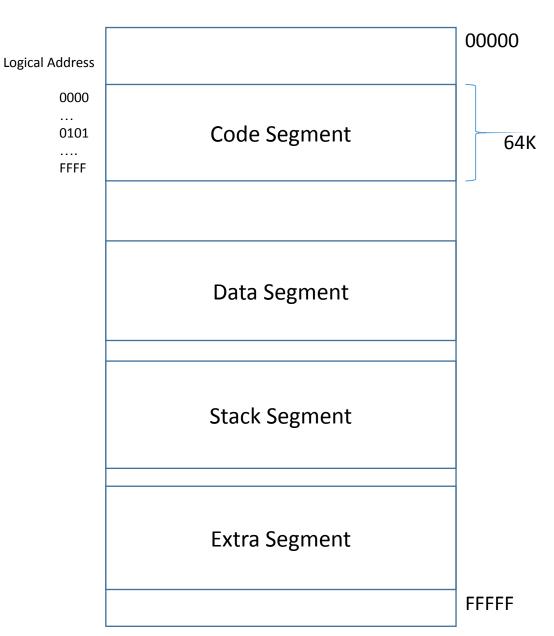


- Lets say that IP is 0100h.
- This mean the instruction to be fetched is at offset 0100h in code segment.
- The 20 bit physical address of this instruction will be calculated by following formula
  - CS\*16 + IP
- Here IP is just an offset in Code segment.

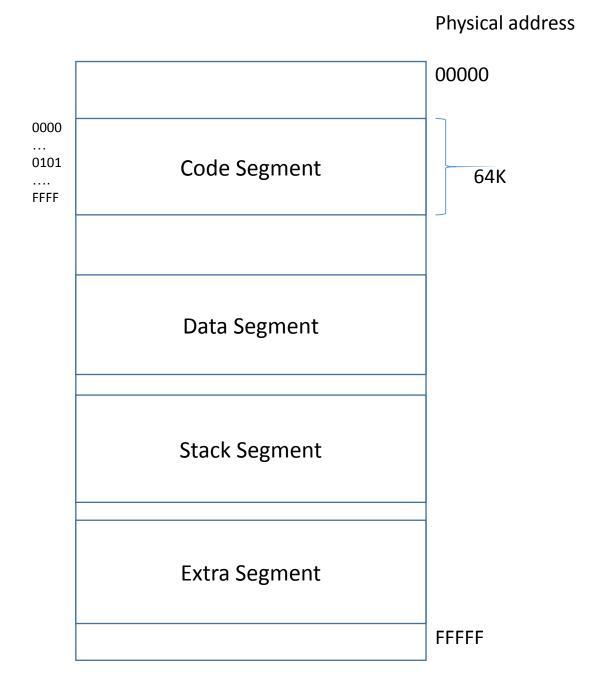


- Similarly if you want to access some data with logical address 0131h.
- Physically it will be located at
  - DS\*16+0131h
- Here used DS as base because data is stored in data segment.

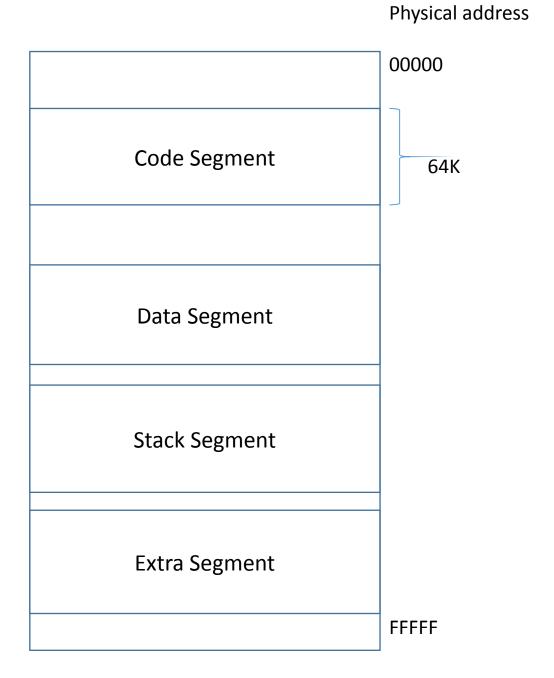

- The formula to find the 20 bit physical address given segment's 16 base address and 16 bit offset is
  - BASE \*16 + OFFSET
  - This can be seen in figure as

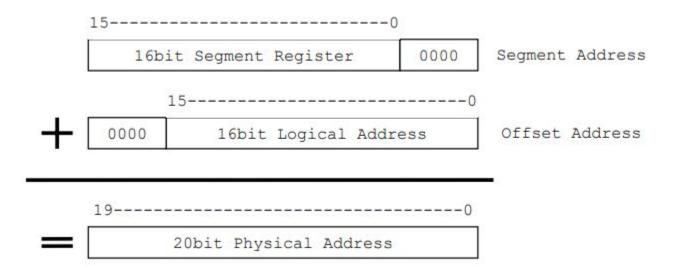

## Another figure

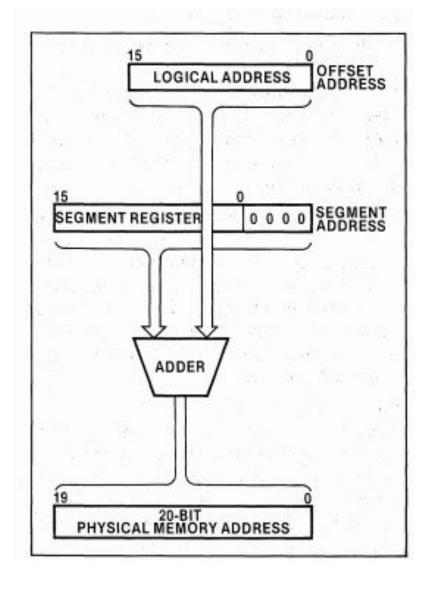

#### • Example 1:

 If IP=0103h and CS=0200h then what is the physical address of the instruction to be fetched?

#### Solution:

- 02000h+00103h =02103h
- The same calculation can be done in binary
- $0000\ 0010\ 0000\ 0000\ 0000\ +\ 0000\ 0000\ 0001\ 0000\ 0011\ =\ 0000\ 0010\ 0001\ 0000\ 0011$

#### • Example 2:

• If a label named num1 has logical address of FFA0h in data segment and DS register is equal to 1BAA then what is the physical address of num1?

#### Solution:

- 1BAA0h + 0FFA0h = 2BA40h
- The same calculation can be don in binary
- 0001 1011 1010 1010 0000 + 0000 1111 1111 1010 0000= 0010 1011 1010 0100 0000

#### • Example 3:

- If a BX has logical address of FFA0h stored in it and DS register is equal to 1BAA then which physical address will be used on following statement
  - mov ax, [bx+1]?

#### • Solution:

- 1BAA0h + 0FFA1h = 2BA41h
- The same calculation can be done in binary
- 0001 1011 1010 1010 <del>0000 + 0000</del> 1111 1111 1010 0001
  - = 00101011101001000001


- Note that all these calculation to find physical address will be done by processor.
- The programmers can work with logical addresses.
  - For example when you write

mov [num1+10], ax

- Programmer is just telling the logical address to processor
- Physical location in memory will be calculated by processor.


#### **Overlapping Segments**

- Consider if data segment starts from 01000 and code segment starts from 01010, and both are 64k long, then both segments will overlap. As shown in figure.
- It is possible to produce same physical address using different combination of segment base and offset as shown in next example.

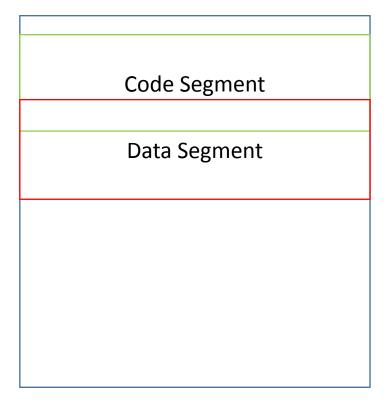

#### **Overlapping Segments**

- The base address of two segments shown in figure are 1DDD0 and 1DCD0 resp.
- Same physical address will be access if offset of 0100 is used with 1DDD0 (also written as 1DDD:0100) and offset 0200 with 1DCD (IDCD:0200)

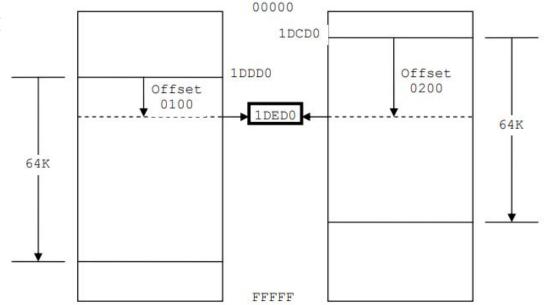

#### Segment Association

- There is a default segment associated to every register which accesses memory.
  - Note that in example 1 on slide 3, CS was used as base to find physical address, so CS is associated to IP by default (unchangeable)
  - In example 3, DS was used as base to calculate physical address. So BX is associated with DS by default. Can be changed
  - The list of all these associations is given in next slide

#### Segment Association

Register	Default associated segment	Flexible
BX, SI, DI	DS	yes
IP	CS	No
ВР	SS	Yes
SP	SS	No

• To override the association for one instruction of one of the registers BX, BP, SI or DI, we use the segment override prefix. For example "mov ax, [cs:bx]" associates BX with CS for this one instruction. For the next instruction the default association will come back to act.

#### ADDRESS WRAPAROUND

- Memory is like a circle, if you start from 0000 an keep on going to next byte by adding 1 then on reaching FFFF adding 1 will take you again to 0000.
- This happens because when adding offset in address, if carry is generated it is dropped.
- Wraparound occurs in while calculating effective as well as physical address. Examples are given in next slide

#### ADDRESS WRAPAROUND Example

#### Effective address:

• If bx= FFFE then [bx+0003h] will result in effective logical address is 0001. Note that FFFE+0003=1 0001 so carry 1 is dropped and addresses was wrapped around within a segment.

#### Physical address:

- If BX=0100h (some logical address in Data Segment), DS=FFF0h (base address of data segment)
- Then physical address generate by [bx+0x0100] will be FFF00+(0100+0100)=00100
- Note that the effective address is calculate before physical address.
- Note that the carry was dropped and physical address was wrapped around.

## Flag Register with Examples

## Carry Flag

- When two 16bit numbers are added the answer can be 17 bits long or when two 8bit numbers are added the answer can be 9 bits long. This extra bit that won't fit in the target register is placed in the carry flag where it can be used and tested.
- Examples: in all of the following examples CF should be 1 after addition

```
; example of carry flag
[org 0x0100]

   mov ax, 1;
   add ax, 0xFFFF

mov ax, 0x4c00 ; terminate program
int 0x21
```

```
; example of carry flag
[org 0x0100]

mov al, 1;
add al, 0xFF

mov ax, 0x4c00 ; terminate program
int 0x21
```

```
; example of carry flag
[org 0x0100]

    mov ah, 1;
    add ah, 0xFF

mov ax, 0x4c00 ; terminate program
int 0x21
```

## Carry Flag

- The carry flag plays the role of borrow during the subtraction operation. And in this condition the carry flag will be set.
- Example: in following example carry flag will be set as 1

```
; example of carry flag
[org 0x0100]

mov ax, 1
sub ax, 2

mov ax, 0x4c00; terminate program
int 0x21
```

## Parity Flag

- Parity flag indicates if the numbers of set bits is odd or even in the binary representation of the result of the last operation.
- It is only effected by arithmetic and logical operations.
- This information is normally used in communications to verify the integrity of data sent from the sender to the receiver.

```
; example of parity flag (PF will be zero)
[org 0x0100]

mov ax, 1
add ax, 1

mov ax, 0x4c00; terminate program
int 0x21
```

```
; example of parity flag (PF will be 1)
[org 0x0100]

mov ax, 1
add ax, 2

mov ax, 0x4c00; terminate program
int 0x21
```

```
; example of parity flag (PF will be 1)
[org 0x0100]

mov ax, 7
and ax, 5

mov ax, 0x4c00 ; terminate program
int 0x21
```

## Zero Flag

• The Zero flag is set if the last mathematical or logical instruction has produced a zero in its destination.

```
; example of parity flag (ZF will be 1)
[org 0x0100]

mov ax, 7
and ax, 0

mov ax, 0x4c00; terminate program
int 0x21
```

```
; example of parity flag (ZF will be 0)
[org 0x0100]

mov ax, 7
and ax, 1

mov ax, 0x4c00; terminate program
int 0x21
```

```
; example of parity flag (ZF will be 1)
[org 0x0100]

mov ax, 7
add ax, -7

mov ax, 0x4c00; terminate program
int 0x21
```

Note the values of -7 in afd or listing file

## Sign Flag

- A signed number is represented in its two's complement form in the computer.
- The most significant bit (MSB) of a negative number in this representation is 1 and for a positive number it is zero.
- The sign bit of the last mathematical or logical operation's destination is copied into the sign flag.

```
; example of parity flag (SF will be 0)
[org 0x0100]

mov ax, 7
add ax, -7

mov ax, 0x4c00; terminate program
int 0x21
```

```
; example of parity flag (SF will be 1)
[org 0x0100]

mov ax, 7
add ax, -9

mov ax, 0x4c00 ; terminate program
int 0x21
```

#### Overflow flag

- Set when the result of a signed arithmetic operation is too large or too small to fit into the destination.
- Example 1, if an instruction has a 16- bit destination operand but it generates a negative result smaller than -32,768 decimal, the Overflow flag is set.
- Example 2, we know that the largest possible integer signed byte value is 127; adding 1 to it causes overflow:
- Example 3: Similarly, the smallest possible negative integer byte value is 128. Subtracting 1 from it causes underflow. The destination operand value does not hold a valid arithmetic result, and the Overflow flag is set.

```
; example of parity flag (QF will be 1)
[org 0x0100]

mov ax,-32768
   add ax, -7

mov ax, 0x4c00 ; terminate program
int 0x21
```

```
; example of parity flag (OF will be 1)
[org 0x0100]

mov al,127
add al,1 ; OF = 1

mov ax, 0x4c00 ; terminate program
int 0x21
```

```
; example of parity flag (OF will be 1)
[org 0x0100]


mov al,-128
   sub al,1 ; OF = 1

mov ax, 0x4c00 ; terminate program
int 0x21
```

#### How the Hardware Detects Overflow

- The CPU uses an interesting mechanism to determine the state of the Overflow flag after an addition or subtraction operation.
- The value that carries out of the highest bit position is exclusive ORed with the carry into the high bit of the result.
- The resulting value is placed in the Overflow flag.
- In Figure 4-5, shows that adding the 8-bit binary integers 10000000 and 11111110 produces CF = 1, with carryln(bit7) = 0. In other words, 1 XOR 0 produces OF = 1.

Figure 4-5 Demonstration of how the Overflow flag is set.

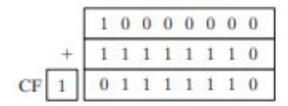

Reference KI

#### More examples

```
;no carry but overflow
[org 0x0100]
   mov al, 127
   add al, 1
   mov ax, 0x4c00
   int 0x21
; no overflow but carry
; because if consired as sign 1-1=0 so no overflow
[org 0x0100]
   mov al, 1
   add al, Oxff
   mov ax, 0x4c00
    int 0x21
```