

PRODUCTION DASHBOARD

User Guide

Costello Windows production dashboard

Version of 09 September 2026 · build 20260908-1849 · source: docs/USER-GUIDE.md

Contents

1. What the dashboard is
2. Signing in
 - 2.1 The office
 - 2.2 The tablet
3. The Master dashboard, screen by screen
 - 3.1 Header and status
 - 3.2 Summary tiles
 - 3.3 The toolbar
 - 3.4 The job list
 - 3.5 The selection wheel
 - 3.6 The job drawer
 - 3.7 Mark ready and undo
 - 3.8 Changes, Versions, Alerts, Export
 - 3.9 Show ► John print sheet
 - 3.10 Show ► Glass station board
 - 3.11 The Floor log window
4. The Glass station tablet, screen by screen
 - 4.1 Who are you?
 - 4.2 The card
 - 4.3 Gold and the Finished group
 - 4.4 The search box
 - 4.5 Updated time
 - 4.6 Switch person and the ten-minute lock
 - 4.7 Light / Dark
 - 4.8 Sign out
 - 4.9 What the tablet never shows or allows
5. Daily routine
6. Messages you may see and what to do
7. Rules the dashboard enforces

This guide explains how to use the Costello Windows production dashboard — both the office screen and the glass floor tablet. It is written for anyone who signs in and uses the dashboard day to day; it does not cover setting the system up or fixing it when something breaks (see *Support and Maintenance* for that).

1. What the dashboard is

The dashboard is two web pages that show the same production workbook from two different points of view:

- **The Master dashboard** (`index.html`) — used in the office. It shows every job, every section, dates, checkpoints, phases, alerts and exports.
- **The Glass station** (`glass.html`) — used on a shared tablet on the glass floor. It shows only job number, customer name, how much of each job is left for **the person signed in**, and the three glass stages: Cutting, Hotmelting, Glazing.

The Excel workbook on SharePoint stays the single source of truth for every job. The dashboard reads it and writes back to it only in the ways described in this guide — a colour on a checkpoint cell, or moving a job's whole row between sections. It never adds a row, deletes a row, or changes a date, comment, quantity, customer name or any other cell on its own. Everything else the dashboard needs — exact checkpoint counts, phases, alerts, and the floor's own progress — is kept in a handful of extra sheets and lists that sit alongside the workbook, never inside the jobs themselves.

2. Signing in

2.1 The office

1. Open the Master dashboard in a browser.
2. Click **Sign in with Microsoft** and use your own Costello account.
3. The first time a new device or browser signs in, Microsoft may show one permission prompt asking the account to allow the dashboard to read and write the workbook. Accept it — this is the normal, one-off consent every Microsoft sign-in shows to a new app.
4. You will see exactly the jobs your account could already open directly in Excel — the dashboard grants nothing extra.

2.2 The tablet

The glass floor tablet is signed in once, by whoever sets it up, with a single shared station account — not a personal account. Ordinary use of the tablet never asks anyone to sign in again; it only asks a person to pick their own name (see §4.1).

"Stay signed in" on either page simply means the browser keeps the sign-in token so nobody has to re-enter a password every time the page is opened. On the tablet this matters more than on the office screen, since the tablet may sit open for weeks at a time.

3. The Master dashboard, screen by screen

3.1 Header and status

The header shows the dashboard's live state at a glance:

Element	What it means
Live dot	On while the dashboard is actively polling for changes
Status text	"starting...", "read failed", or similar — the current state of the last read
Build number	The footer shows <code>build YYYYMMDD-HHMM</code> — the exact version currently loaded
Reload banner	Appears when the server has a newer build than the one open; click Reload to pick it up


The dashboard checks for a new build every couple of minutes. If the banner appears, there is no rush — finish what you are doing, then reload.

3.2 Summary tiles

A row of tiles above the job list gives quick counts — total jobs, windows, doors — for the current view.

3.3 The toolbar

Control	What it does
Select all shown (n)	Appears at the left of the toolbar whenever a tile, a category or a search is narrowing the list: one tick picks every job on screen, one untick clears them again. It is not there when the whole sheet is showing, because then "all shown" and "all" are the same thing
Search box	Filters the job list by job number, customer, county, eircode or any comment
View	Switches between the flat list, the sheet's own section order, or a saved custom grouping
Show	Switches the main panel between All jobs , the Glass station board (§3.10) and the John print sheet (§3.9)
Floor log	Opens the read-only Floor log window (§3.11)
Categories...	Manage custom groupings used by the View dropdown
Sort	Reorders the job list

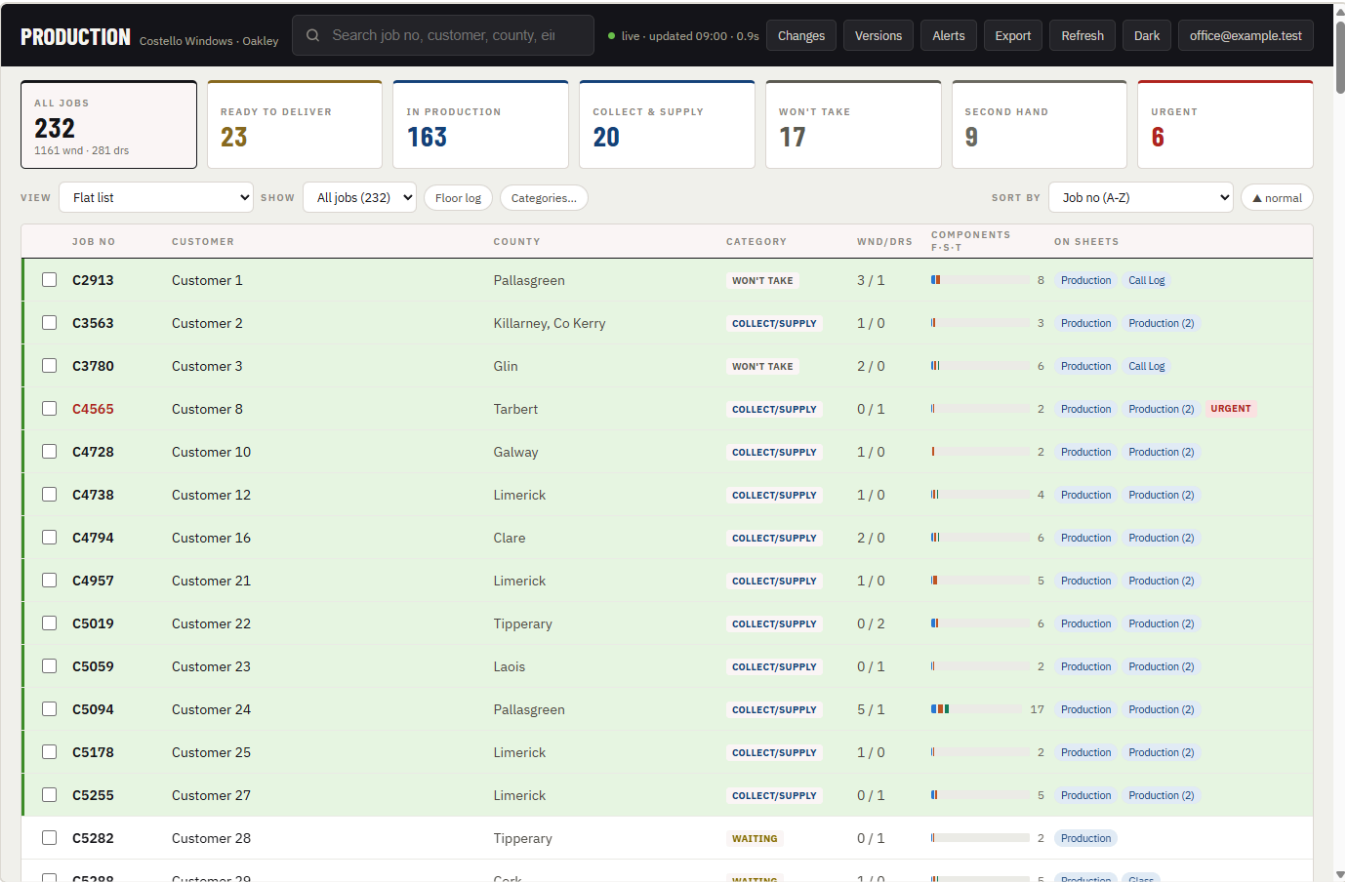

The Master dashboard's job list, with the toolbar above it.

3.4 The job list

Each row shows the job number, customer, county, category, window/door counts, product component counts (Frame · Sash · Transom) and a chip for every other workbook sheet the job appears on. Row colours and chips mirror the sheet's own colouring where relevant. Ticking the box on the left of one or more rows arms the selection wheel (§3.5).

The colour chip after a job number. The Production sheet says four things with the colour of a job row's *text*, and the dashboard reads them back and writes them out in words, so nobody has to tell red from green to know what a row means:

Row text on the sheet	Chip
red	Urgent
green	Booked — an exact delivery date is agreed
pink / magenta	Trade order
blue	On hold

A red row counts as urgent in the dashboard just as the word "urgent" in the Comment column always has. Black or grey text means nothing in particular and gets no chip. The same chip appears at the top of the job's drawer.

Selecting a whole section. In a grouped view (View ► sheet order, or any saved grouping) each section header carries a **Select all n** tick box: it picks every job that section is currently showing, including after you have typed in the section's own search box. Ticking part of a section by hand leaves the box in its half-ticked state rather than claiming either way. In the flat list the same job is done by **Select all shown (n)** in the toolbar (§3.3).

3.5 The selection wheel

Ticking at least one job shows a floating button; tapping it fans out a full-circle menu with four options:

- **Alert to...** — subscribe an address to email alerts for the ticked jobs.
- **Export** — open the Export window pre-filtered to the ticked jobs.
- **Move to...** — move the ticked jobs to a different section.
- **Untick all** — clear the selection.

PRODUCTIONCostello Windows - Oakley

Search job no, customer, county, etc

live · updated 09:00 · 1.0s

Changes

Versions

Alerts

Export

Refresh

Dark

office@example.test

ALL JOBS2321161 wnd · 281 drs

READY TO DELIVER23

IN PRODUCTION163

COLLECT & SUPPLY20

WON'T TAKE17

SECOND HAND9

URGENT6

VIEWFlat list

SHOWAll jobs (232)

Floor log

Categories...

2 selected — move to...

clear

SORT BYJob no (A-Z)

normal

JOB NO	CUSTOMER	COUNTY	CATEGORY	WND/DRS	COMPONENTS F·S·T	ON SHEETS
☒ C2913	Customer 1	Pallasgreen	WON'T TAKE	3 / 1	8	Production Call Log
☒ C3563	Customer 2	Killarney, Co Kerry	COLLECT/SUPPLY	1 / 0	3	Production Production (2)
☐ C3780	Customer 3	Glin	WON'T TAKE	2 / 0	6	Production Call Log
☐ C4565	Customer 8	Tarbert	COLLECT/SUPPLY	0 / 1	2	Production Production (2) URGENT
☐ C4728	Customer 10	Galway	COLLECT/SUPPLY	1 / 0	2	Production Production (2)
☐ C4738	Customer 12	Limerick	COLLECT/SUPPLY	1 / 0	4	Production Production (2)
☐ C4794	Customer 16	Clare	COLLECT/SUPPLY	2 / 0	6	Production Production (2)
☐ C4957	Customer 21	Limerick	COLLECT/SUPPLY	1 / 0	5	Production Production (2)
☐ C5019	Customer 22	Tipperary	COLLECT/SUPPLY	0 / 2	6	Production Production (2)
☐ C5059	Customer 23	Laois	COLLECT/SUPPLY	0 / 1	2	Production Production (2)
☐ C5094	Customer 24	Pallasgreen	COLLECT/SUPPLY	5 / 1	17	Production Production (2)
☐ C5178	Customer 25	Limerick	COLLECT/SUPPLY	1 / 0	2	Production Production (2)
☐ C5255	Customer 27	Limerick	COLLECT/SUPPLY	0 / 1	5	Production Production (2)
☐ C5282	Customer 28	Tipperary	WAITING	0 / 1	2	Production
☐ C5288	Customer 28	Cork	WAITING	1 / 0	5	Production Clare

The radial selection menu, opened after ticking one or more jobs.

A section move is a real structural change in Excel: the dashboard finds each job's row, copies its values, formats, fills and borders to a new position in the target section, and deletes the original row. It is the only feature in the dashboard that adds or removes a row.

3.6 The job drawer

Clicking anywhere on a job row opens its drawer, with several parts:

Phase pipeline. A seven-step line — In office → Sent to floor → Cutting → In fabrication → In glazing → Quality check → Fitted / delivered — showing how far the job has got. Most of the time this is worked out automatically from what is already on the sheet; clicking a step by hand overrides it, and the sheet's own evidence always wins if it later shows the job further along.

PRODUCTIONCostello Windows - Oakley

R4941

live · updated 09

ALL JOBS2321161 wnd · 261 drs

READY TO DELIVER23

IN PRODUCTION163

COLLECT & SUPPLY20

VIEWFlat list

SHOWAll jobs (232)

Floor log

Categories...

JOB NO	CUSTOMER	COUNTRY
☐ R4941	Customer 490	Offaly

Showing 1 of 232 jobs

Sheet colours: In fabrication · #FFFF00 Ready to deliver · #FFE699 Urgent = the word in the Comment column

R4941IN FABRICATION

Customer 490 · Offaly

EditClose

PHASE

In office

Sent to floor

Cutting

In fabricationNOW

In glazing

Quality check

Fitted / delivered

Now: In fabrication

DATES

Ready to print 29/04

CHECKPOINTS

Windows 0/18 · Doors 0/3 · Glass 32/67 · Frames/Sashes/Transoms 0/72

Click Edit above to tick work off. Only the colour goes into the Production sheet.

Windows

0 of 18

-

0

+

All done

Doors

0 of 3

-

0

+

All done

Glass

All glass done

DG

8 of 8

-

8

+

Clear

TG

24 of 24

-

24

+

Clear

TUFF

0 of 1

-

0

+

All done

NOT TUFF

0 of 31

-

0

+

All done

ASTRAGAL

0 of 1

-

0

+

All done

FANCY

0 of 2

-

0

+

All done

Polaris 85mm Casement

All done

Frames

in progress

-

+

The top of a job's drawer: the phase pipeline and the checkpoints below it.

Dates. The job's key dates, read-only here.

Checkpoints. Tick boxes for windows, doors, each glass type and each product's frame/sash/transom counts. Ticking a checkpoint writes **only a colour** to that item's own cell in the **Production** sheet (white for nothing done, yellow for part done, gold for done) — the exact count behind that colour is kept in a separate dashboard sheet, not in the cell itself.

Details. Other job facts read from the sheet.

Glass units. The job's DG/TG/TUFF and other glass quantities, as ticked in Checkpoints above.

Glass station section. For a job with glass, a "Glass station" panel shows the same three stages the floor tablet uses — Cutting, Hotmelting, Glazing — each with who last moved it and when, a short timeline of the most recent taps on this job (capped at twelve lines), and a "Full log" link into the Floor log window (§3.11).

The screenshot displays a web application interface for managing production jobs. The main header shows 'PRODUCTION' with a search bar containing 'R4941' and a status indicator 'live · updated 0%'. Below the header, there are four status boxes: 'ALL JOBS' (232), 'READY TO DELIVER' (23), 'IN PRODUCTION' (163), and 'COLLECT & SUPPLY' (20). A table below these boxes lists jobs with columns for 'JOB NO', 'CUSTOMER', and 'COUNTY'. The job R4941 is highlighted. To the right, a detailed view for job R4941 is shown, including a 'Composite' section with 'Sashes' (0 of 2), 'Details' (Office no, Eircode, Phone, Window colour, On sheets), 'Glass Units' (DG 8, TG 24, TUFF 1, NOT TUFF 31, ASTRAGAL 1, FANCY 2), 'Glass Station' (Cutting, Hotmelting, Glazing), 'Comments' (0), and 'Alerts' (0).

The Glass station section of the drawer, showing who moved each counter, when, and the recent timeline.

Comments. The job's comment text from the sheet.


Alerts. Addresses currently subscribed to email alerts for this job (admin only — see §3.8).

3.7 Mark ready and undo

Mark ready fills the job's status cell gold and moves its row to "Ready to fit" (or "Collect & supply only" for C/S-prefixed jobs). **Undo** clears that fill and moves the row to the bottom of "In production". Neither action touches any date.

3.8 Changes, Versions, Alerts, Export


- **Changes** — a running log of every write the dashboard has made.
- **Versions** — SharePoint's own version history of the workbook. You can see the difference between two versions and restore an older one; a restore itself becomes a new, rollable version.
- **Alerts** (admin only) — subscribe email addresses to jobs. Every third day at 08:00, each subscriber gets one email listing their jobs still in production, with comments. The admin address is read from the workbook's own configuration, not typed into the dashboard.

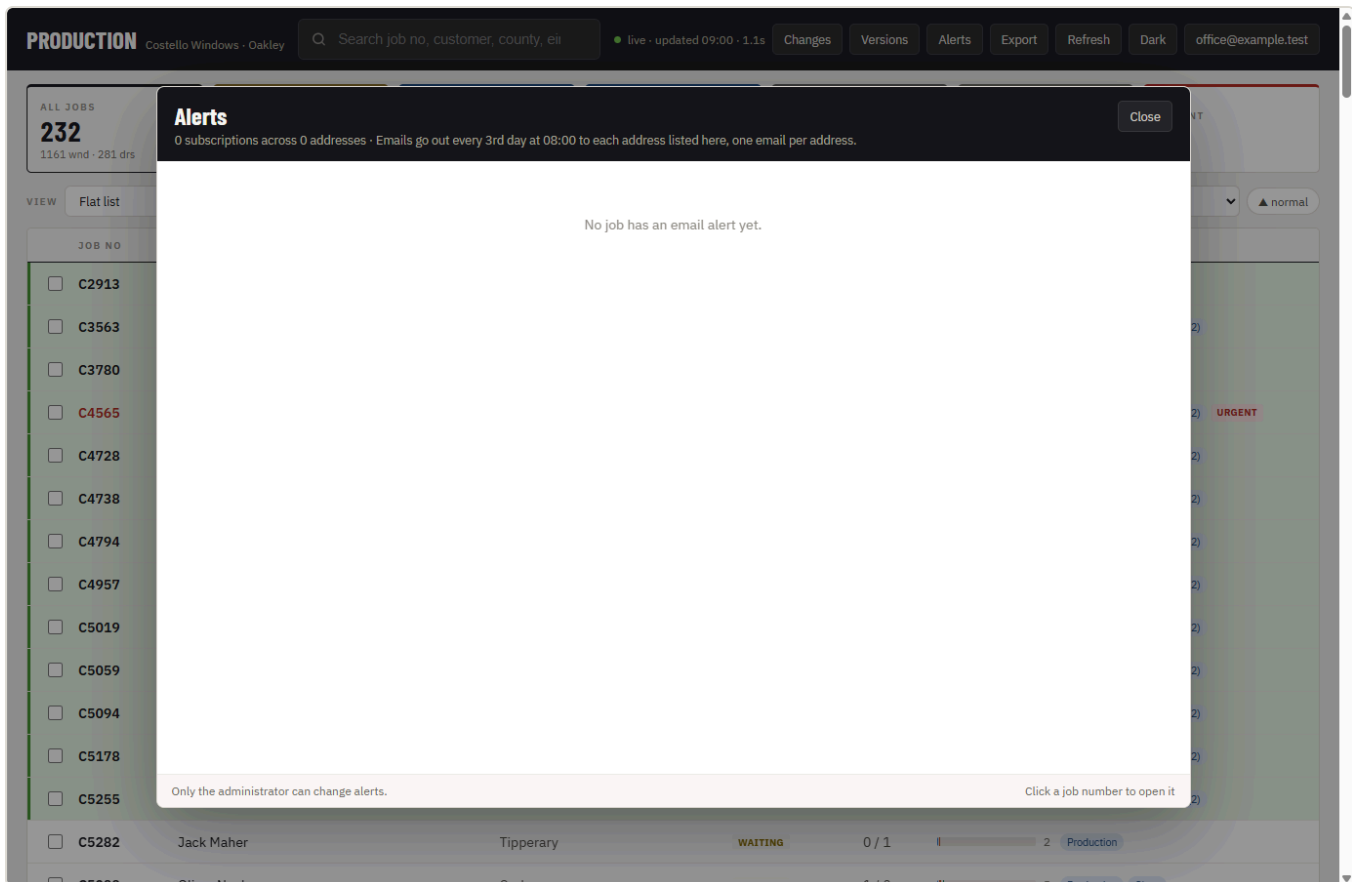

The Alerts window, listing current subscriptions.

- **Export** — download the current jobs (or just the ticked ones) as an Excel workbook or a PDF. The window opens on a **Template** choice:
- **Default** — filters, a field picker and a card or table layout, exactly as before. **No phone number and no eircode** are ever included in it, in any format, under any filter. The field picker also offers **Flag**, the row colour code from §3.4, which comes out as a column with the word in the sheet's own colour.
- **John print sheet** — the `Production (2)` sheet as it prints for John, and nothing to configure: job no, ready to print, customer, **phone no**, area, windows, doors and the notes from Brendan's office, in that sheet's own order, with its section dividers, its row fills and its row text colours. Pick the scope (the ticked jobs, or everything the view you are on is showing) and Excel or PDF, then **Continue to notes**. A job you have picked that is not on `Production (2)` is still printed — from the main Production sheet, in grey, marked "not on John's sheet".

Every export is recorded once in the Changes log — nothing else about what was exported is stored anywhere. A John print's log line says in words that the file carries phone numbers, because it is the only one that does.

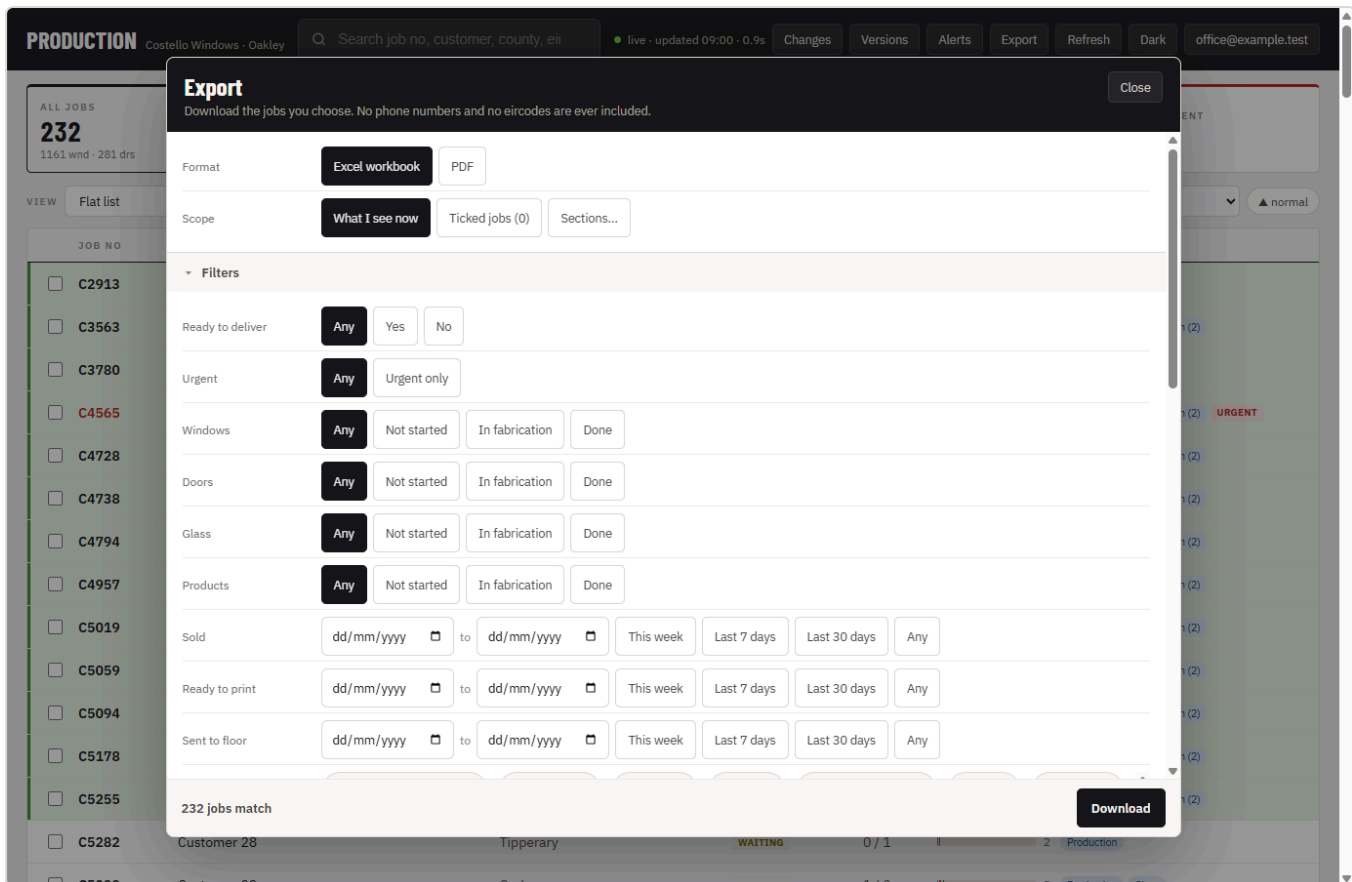

The Export window: format, filters and the field picker.

Print notes (John print sheet only). "Continue to notes" opens one row per job in the print: the job number, the customer, its colour chip, that job's note from **Production (2)** in grey (which you cannot change from here, with the main sheet's comment underneath it when the two differ) and a box for one extra note of your own, already filled in with whatever was typed last time. **Print** saves the notes you changed and then downloads the file. The notes are kept by the dashboard in SharePoint — **nothing here is ever written into the Excel file**, **Production (2)** included — and they are printed at the end of the Notes column, after the sheet's own. If a note cannot be saved, its row says "not saved" and the file is still made with what you typed. Escape or **Cancel** backs out without printing; clicking the greyed-out background asks first if you have typed anything. Each job's note also shows, read-only, under Comments in that job's drawer.

3.9 Show ► John print sheet


Switching the **Show** dropdown to **John print sheet** replaces the job list with **Production (2)** — the separate sheet the office keeps for the paper John works from. It is shown exactly as that sheet has it: its own rows, its own order, its own sections, and every row in its own fill and text colour, with the colour's word beside it. The columns are the eight that get printed: job no, ready to print, customer, phone no, area, Wnd, Drs, and the notes from Brendan's office.

The search box at the top narrows it. Each row has a tick box and each section a **Select all n**, exactly as the grouped job list does, and what you tick feeds the same selection wheel. Opening **Export** from here starts on the John print sheet template.

This view is read-only: there is no drawer, nothing can be dragged, and nothing in it writes to the workbook. It shows whatever the last refresh downloaded.

3.10 Show ▶ Glass station board

Switching the **Show** dropdown to **Glass station** replaces the job list with a read-only board: one card per active job, in the office's own order, with the job number, customer, the total glass count, and the three counters (Cutting, Hotmelting, Glazing) each showing who last moved it and when. A job whose three counters have all reached the total turns gold and drops to the bottom of the board. The board refreshes about every ten seconds while it is on screen. Nothing on it can be clicked to change anything.

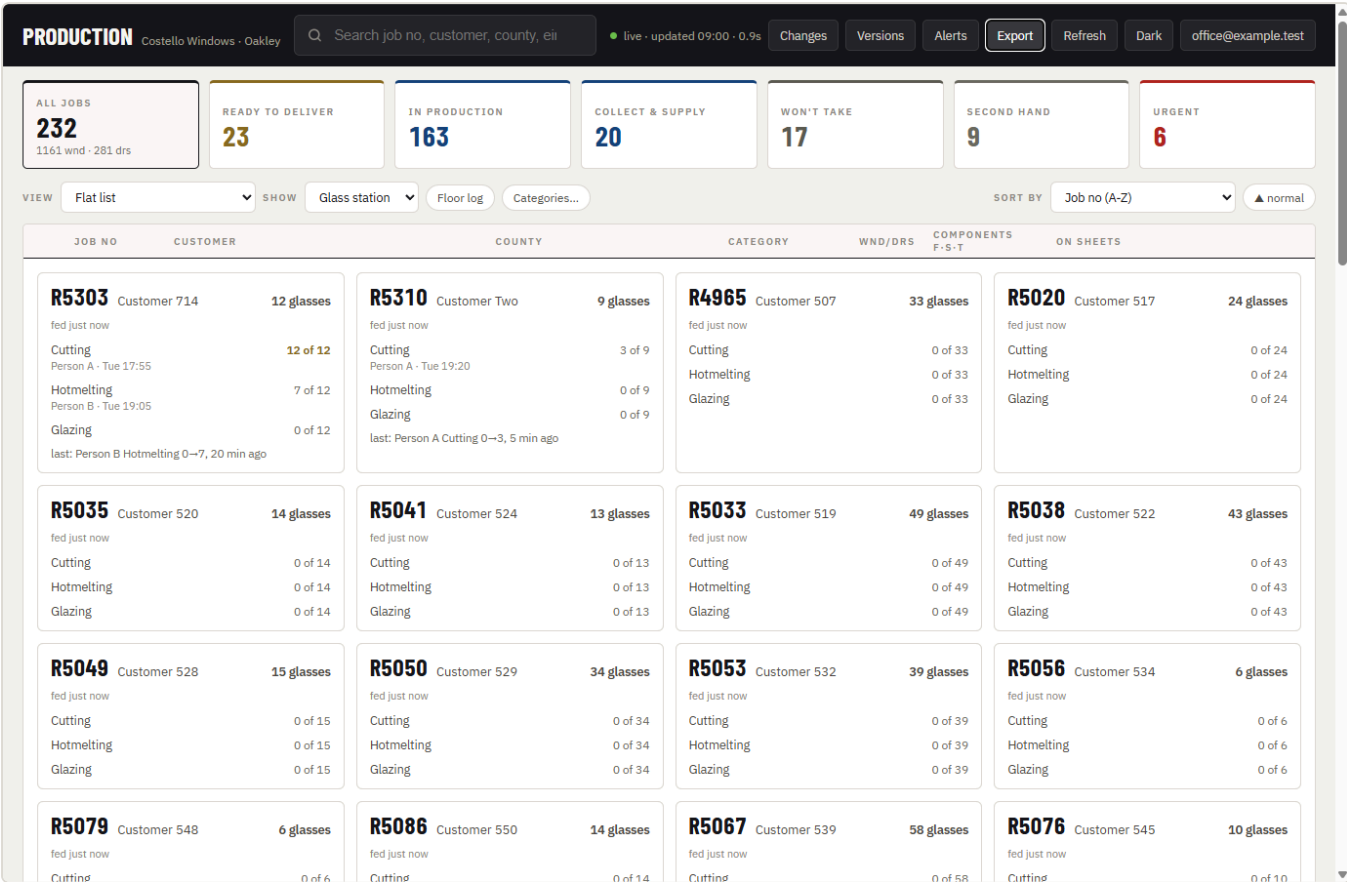

The office's read-only Glass station board.

3.11 The Floor log window

Opened from the **Floor log** button or a drawer's "Full log" link, this lists every recorded floor tap, newest first, with filters for person, stage, job number and day, and a running count of lines and units for whatever is currently filtered. It pages 200 rows at a time. Clicking a job number opens that job's drawer, if the job is still on the sheet. It is read-only — nothing here can be edited or deleted from the dashboard.

PRODUCTIONCostello Windows - Oakley

Search job no, customer, county, etc

live - updated 09:00 - 0.9s

Changes

Versions

Alerts

Export

Refresh

Dark

office@example.test

ALL JOBS2321161 wnd - 281 drs

VIEWFlat list

JOB NO

R5303Custo

fed just now

Cutting

Person A - Tue 17:55

Hotmelting

Person B - Tue 19:05

Glazing

last: Person B Hotm

R5035Custo

fed just now

Cutting

Hotmelting

Glazing

R5049Custo

fed just now

Cutting

Hotmelting

Glazing

R5079Customer 548

6 glasses

fed just now

Cutting

0 of 6

R5086Customer 550

14 glasses

fed just now

Cutting

0 of 14

R5067Customer 539

58 glasses

fed just now

Cutting

0 of 58

R5076Customer 545

10 glasses

fed just now

Cutting

0 of 10

Glass station log

4 lines - who moved which counter, and when. Written by the tablet only — the Excel file is not involved.

Close

EveryoneEvery stageJob numberdd/mm/yyyyClear filters

PER PERSONPerson A 15 2 linesPerson B 7 1 linePerson C 4 1 line

PER STAGECutting 15 2 linesHotmelting 7 1 lineGlazing 4 1 line

R5310Cutting0 → 3Person ATue 19:20

R5303Hotmelting0 → 7Person BTue 19:05

R5303Cutting0 → 12Person ATue 17:55

R5299Glazing0 → 4Person CTue 17:45

Read-only — nothing here changes the floor's record or the Excel file

Click a job number to open it

The Floor log window, filtered by person and stage.

4. The Glass station tablet, screen by screen

4.1 Who are you?

On opening (or after a lock, or Switch person), the tablet shows a picker of active people for the glass station, read from a list the admin maintains. Tap your name.

WHO ARE YOU?

Person A

Cutting

Person B

Hotmelting · Cutting

Person C

Glazing

The tablet's picker, listing active people for the glass station.

If your name has a PIN set, a PIN pad appears next; enter it to continue. A wrong PIN simply shakes and asks you to try again — there is no lockout.

GLASS STATION

updated just now

Light

Sign out

PERSON B

Enter your PIN

1

2

3

4

5

6

7

8

9

←

0

OK

Back to the names

The PIN pad, shown only for people who have a PIN set.


4.2 The card

Every job with glass appears as one card: job number, customer, and **how much of that job is left for you** — "14 left" — followed by three rows — Cutting, Hotmelting, Glazing — each with a **−**, a count, a **+**, and an **All** button (which becomes **None** once that stage is already at the total). Only the stage rows you personally hold are bright and tappable; the others show their numbers but are greyed out and cannot be tapped. There is nothing to expand and nothing to scroll inside a card.

"Left" means left for you, not left on the job. If you do one stage, "14 left" is fourteen glasses still to do at your stage, and it drops by one each time you tap **+**. If you hold two stages, each one counts on its own: a fourteen-glass job starts at "28 left" — fourteen to cut and fourteen to hotmelt — and every tap of either stage takes one off. So the number always moves when you do something.

Two people at the same tablet therefore see **different numbers on the same card**, because they have different work left on it. That is deliberate. The running total beside the search box at the top of the screen is the same thing added up across every job on the board: your own work, not the floor's.

A card only turns **gold** and folds into the Finished group when the whole job is done by everyone, not when your part of it is. So a card can read "0 left" for you and still sit there in full colour, because somebody else still has work on it.

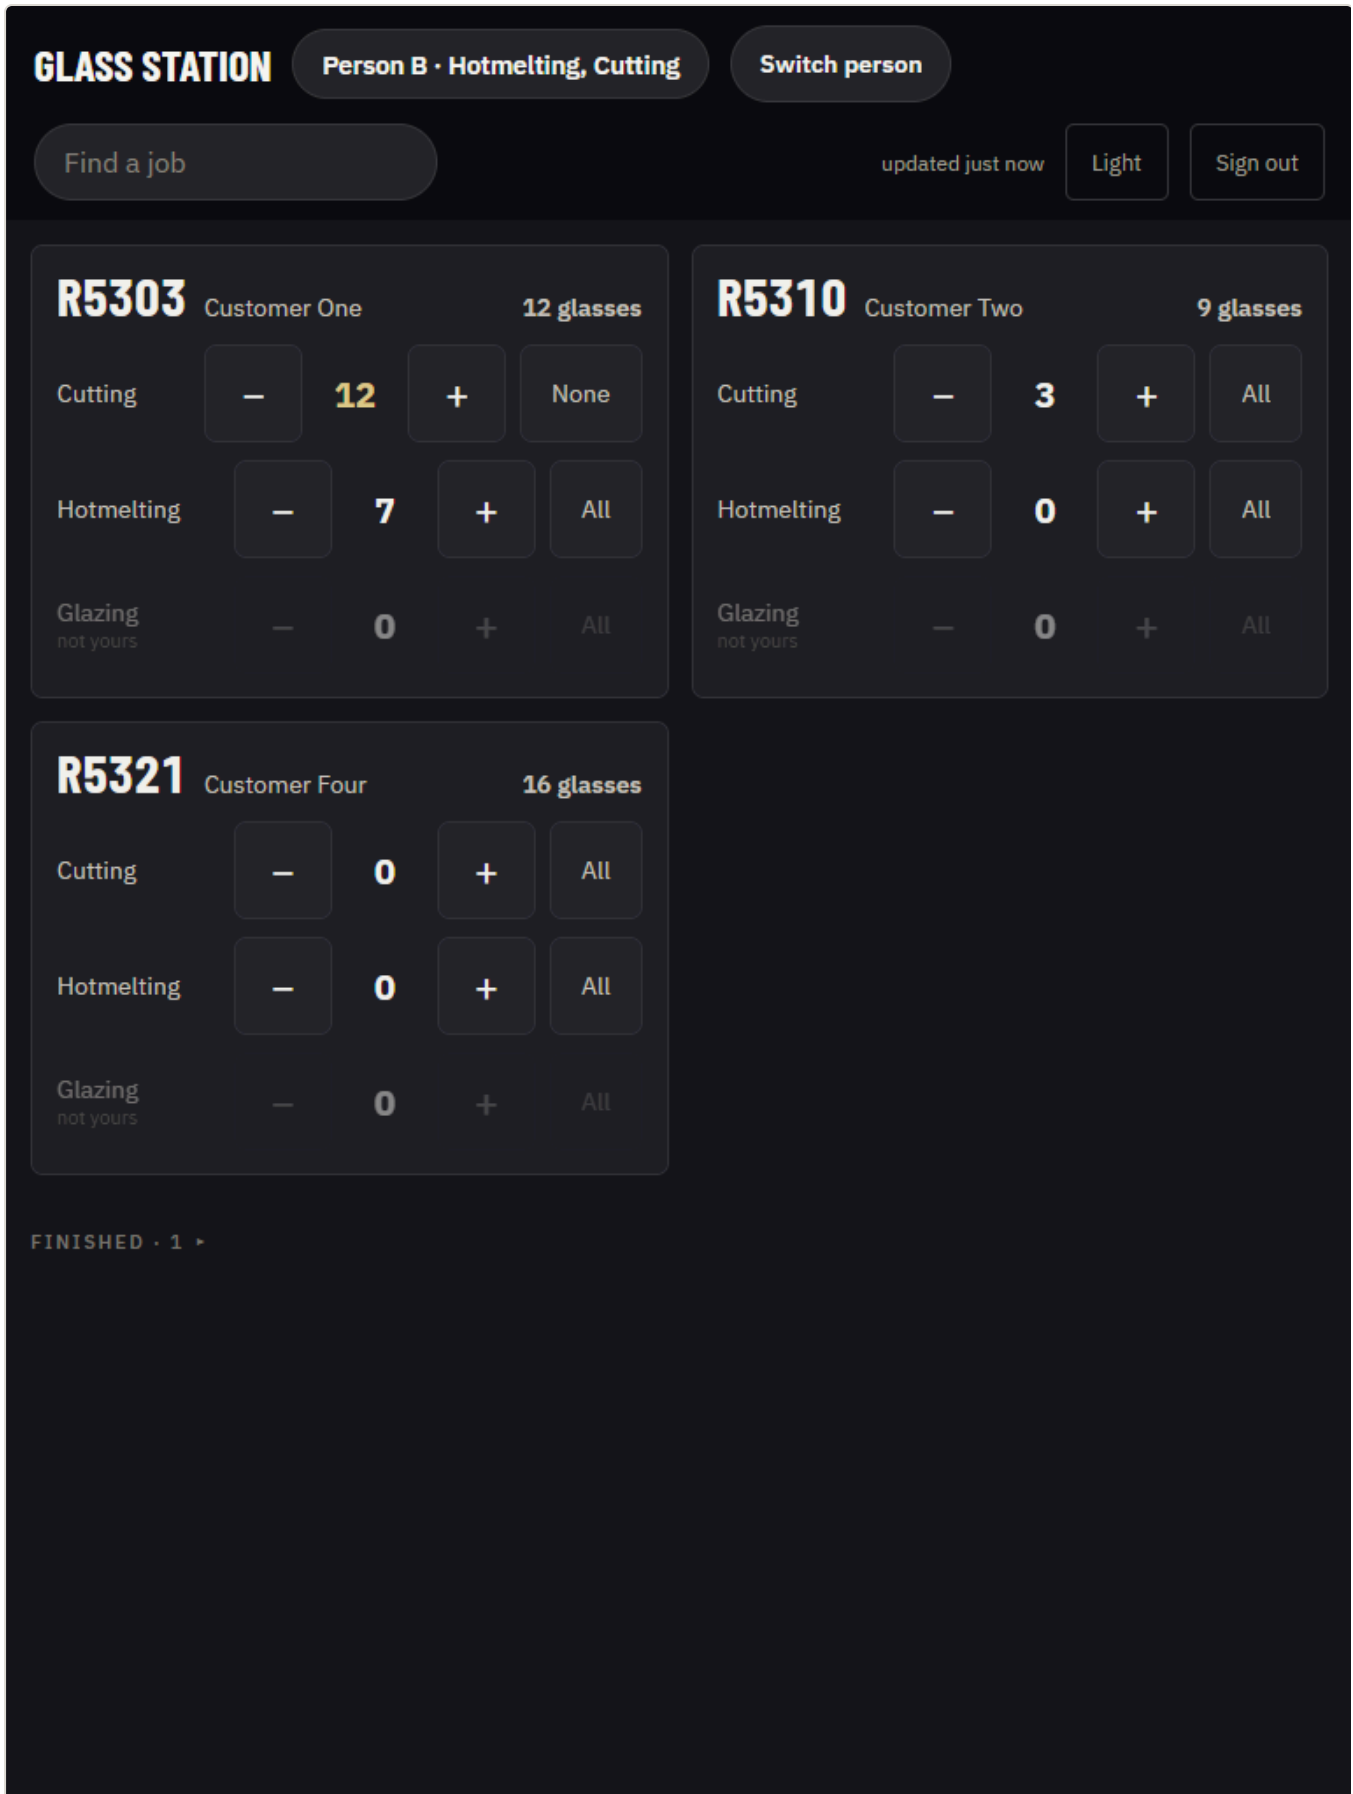

The tablet board: one card per job, dark theme, three stages on the card itself.

4.3 Gold and the Finished group

Once a job's three counters all reach the total, its card turns gold and moves into a collapsed "Finished · n" group at the bottom of the board — tap the heading to show it.

GLASS STATION

Person B · Hotmelting, Cutting

Switch person

Find a job

updated just now

Light

Sign out

R5303

Customer One

12 glasses

Cutting

−

12

+

None

Hotmelting

−

7

+

All

Glazing
not yours

−

0

+

All

R5310

Customer Two

9 glasses

Cutting

−

3

+

All

Hotmelting

−

0

+

All

Glazing
not yours

−

0

+

All

R5321

Customer Four

16 glasses

Cutting

−

0

+

All

Hotmelting

−

0

+

All

Glazing
not yours

−

0

+

All

FINISHED · 1 ·

R5299

Customer Three

4 glasses

Cutting

−

4

+

None

Hotmelting

−

4

+

None

Glazing
not yours

−

4

+

None

A finished job's card, gold, once all three stages reach the total.

4.4 The search box

A search box in the header narrows the cards down by job number or customer as you type.

4.5 Updated time

The header shows how recently the board was last refreshed.

4.6 Switch person and the ten-minute lock

Switch person returns to the picker immediately and clears the search box. If nobody taps anything on the tablet for ten minutes, it locks back to the picker on its own.

4.7 Light / Dark

A button in the header switches the tablet's own theme between dark (the default) and light — independent of the office dashboard's theme.

GLASS STATION

Person B · Hotmelting, Cutting

Switch personFind a job

updated just nowDarkSign out

R5303Customer One12 glasses

Cutting

—12+

None

Hotmelting

—7+

All

Glazing
not yours

—0+

All

R5310Customer Two9 glasses

Cutting

—3+

All

Hotmelting

—0+

All

Glazing
not yours

—0+

All

The same board in light theme at phone width.

4.8 Sign out

Signing out drops the shared station account's session entirely — normal day-to-day use never needs this. It is only for the rare case where the sign-in itself has expired (§6) and needs to be renewed.

4.9 What the tablet never shows or allows

The tablet never shows a customer's phone number, eircode, county, comments, price, or any glass type (DG, TG, TUFF and the rest are the office's business only — the floor sees one plain total). It cannot export anything, cannot delete anything, cannot move a stage you do not personally hold, and cannot reach the Master dashboard or any other station's data.

5. Daily routine

1. **Keep an office dashboard open somewhere.** The Master dashboard is the only thing that ever pushes jobs onto the floor's board — it does this every time it successfully loads the workbook. If nobody has the office dashboard open, the floor's board simply stops receiving new jobs and updates until someone opens it again.
 2. **A new job reaching the floor.** As soon as a job with glass appears "in production" on the sheet and an office dashboard loads, it is pushed to the floor's list and appears as a card within a few minutes.
 3. **A job already ticked off in the office.** If the office has already ticked some or all of a job's glass checkpoints before it reaches the floor, the tablet's card starts with those same numbers already counted — nobody on the floor has to re-tap what the office already recorded.
 4. **When the office stops changing a job's floor numbers.** The moment anyone on the floor taps a job's card for the first time, the office dashboard never adjusts that job's counters again, no matter what changes afterwards in the office's own checkpoints — from that point on, only the floor's own taps move the numbers.
 5. **Adding or changing a person or PIN.** This is a row in the `Station people` list, maintained by the admin in SharePoint — not something done from either dashboard page. The tablet picks up a new row, a stage change, or a PIN change within ten minutes on its own, or immediately on reload.
 6. **Seeing who did what.** Use the Floor log window (§3.11) in the office, or the drawer's Glass station timeline for one job at a time.
-

6. Messages you may see and what to do

Message (exact wording)	Where	Meaning / what to do
"This account has no access to the production workbook. Station accounts use the Glass station page."	Master dashboard	The signed-in account is the shared station account, not an office account. Follow the link to the Glass station page instead.
"Seeing the floor's progress needs a SharePoint permission that has not been granted yet. Nothing in the Excel file is involved."	Master dashboard	A tenant-wide SharePoint permission has not yet been granted. Ask the admin — see <i>Support and Maintenance</i> for the exact steps. Nothing is broken; nothing in Excel is affected.
"Ask the office to grant the SharePoint permission."	Tablet	The same missing permission, shown in the shorter wording the tablet uses since there is no admin sign-in on a shared device.

Message (exact wording)	Where	Meaning / what to do
"The floor's SharePoint site is not there yet, or this account cannot see it. Ask the office."	Tablet	The Floor stations site (or the interim fallback) is not reachable yet. This is expected before the admin finishes setup.
"The 'Glass station' list is not in the floor's site yet. Ask the office to add it." / "The 'Station people' list is not in the floor's site yet. Ask the office to add it."	Tablet	One of the required lists has not been created yet in the site.
"cannot reach SharePoint — retrying"	Both	A read that had worked before has failed for now (network, rate limit). The dashboard keeps showing the last board it read and keeps retrying on its own; there is nothing to click.
"not saved yet — retrying"	Tablet	A tap you made has not yet reached SharePoint. It stays queued and retries on its own; nothing is lost, even across a reload.
"The sign-in has expired. Tap Sign out, then Sign in again."	Tablet	Tap Sign out in the header, then use the Sign in again button with the station account. Any taps not yet sent are kept and go out once signed in again.
"Nothing on the board yet."	Tablet	No jobs have been fed to the floor yet — usually because no office dashboard has loaded the workbook recently, or nothing on the floor is currently in production.
"A newer version of the dashboard is available Reload "	Master dashboard	GitHub Pages can lag a deployment by up to about ten minutes. Click Reload whenever convenient — there is no urgency.

7. Rules the dashboard enforces

- The **Production** sheet is only ever changed by a checkpoint colour or a whole-row section move — never a new row, a new sheet, or any other cell.
- No eircode ever leaves the app in an export, in any format, under any filter, on any template.
- No phone number leaves the app either, except on the **John print sheet**, which the owner asked for on 2026-09-09 and which is the only export that carries one. Its log line says so in words.
- Every export is logged once; nothing else about the exported data is kept.
- Print notes are kept by the dashboard in SharePoint and are never written into the Excel file — not into **Production (2)** either.
- The **Production (2)** sheet is only ever read, never written, by anything in the dashboard.
- Only the tablet ever writes the floor's own counters, By/At pairs, or log lines — the office never does, with the single exception of seeding a brand-new or never-tapped row from the office's own checkpoints.
- Once the floor has tapped a job for the first time, the office never changes that job's floor counters again.

- A person on the tablet can only move the glass stages they personally hold; every other stage is shown but disabled.