
How to plug in Bluetooth


Then drive with Sticks, or program with Blocks

1. Find the hole

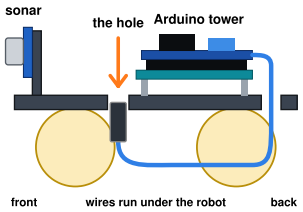


Look from the side. The hole is in the chassis **between the sonar sensor bracket and the Arduino tower**. The four wires run under the robot from the Arduino and come up into it.

2. Wiggle and push

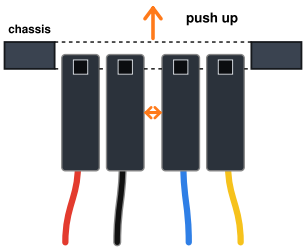


Push the connectors up into the hole **from below**. It is **just big enough for 4**, side by side: wiggle and push. They go **halfway in and stop**, and then they stay put. **Tip:** turning each connector a quarter turn (90 degrees) may help them fit.

3. Which wire is which

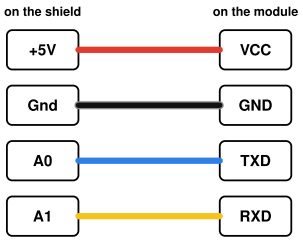


Follow each wire back to the motor shield. **+5V** goes to **VCC**, **Gnd** to **GND**, **A0** to **TXD**, **A1** to **RXD**. Your wires can be any colors.

4. Plug in the module

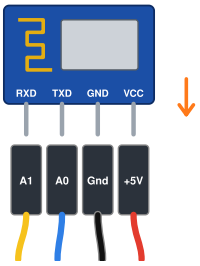


Push the module's pins into the connectors. **Read the names printed on the module**: each pin goes into the wire from step 3.

5. Switch on

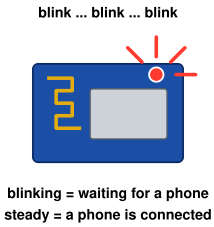


Switch the robot on. The light on the module **blinks**: it is waiting for you. No light? Check VCC and GND.

6. Connect

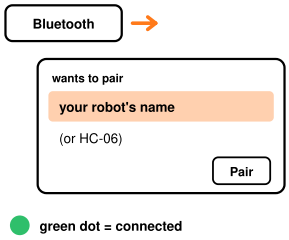

Press **Bluetooth**. Tap **your robot's name** (it may be listed as **HC-06**), then **Pair**. Android or a computer, in Chrome. Not iPhones.

7. Drive it: Sticks

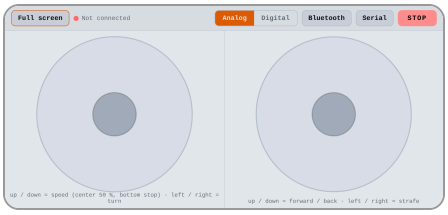


Sticks

robotics.makerlabkids.com/mecanum/sticks

Turn the phone sideways and press Full screen. **Right stick:** which way to go. **Left stick:** up is faster, down is slower, left and right turn. Lift your thumbs to stop.

8. Program it: Blocks

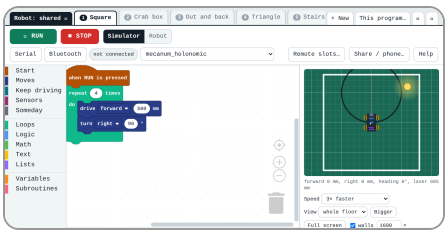

Blocks

robotics.makerlabkids.com/mecanum/blocks

Snap blocks together under **when RUN is pressed**. Press **Bluetooth**, pick your robot, choose **Robot**, then press **RUN**. Best on a computer or a tablet.