


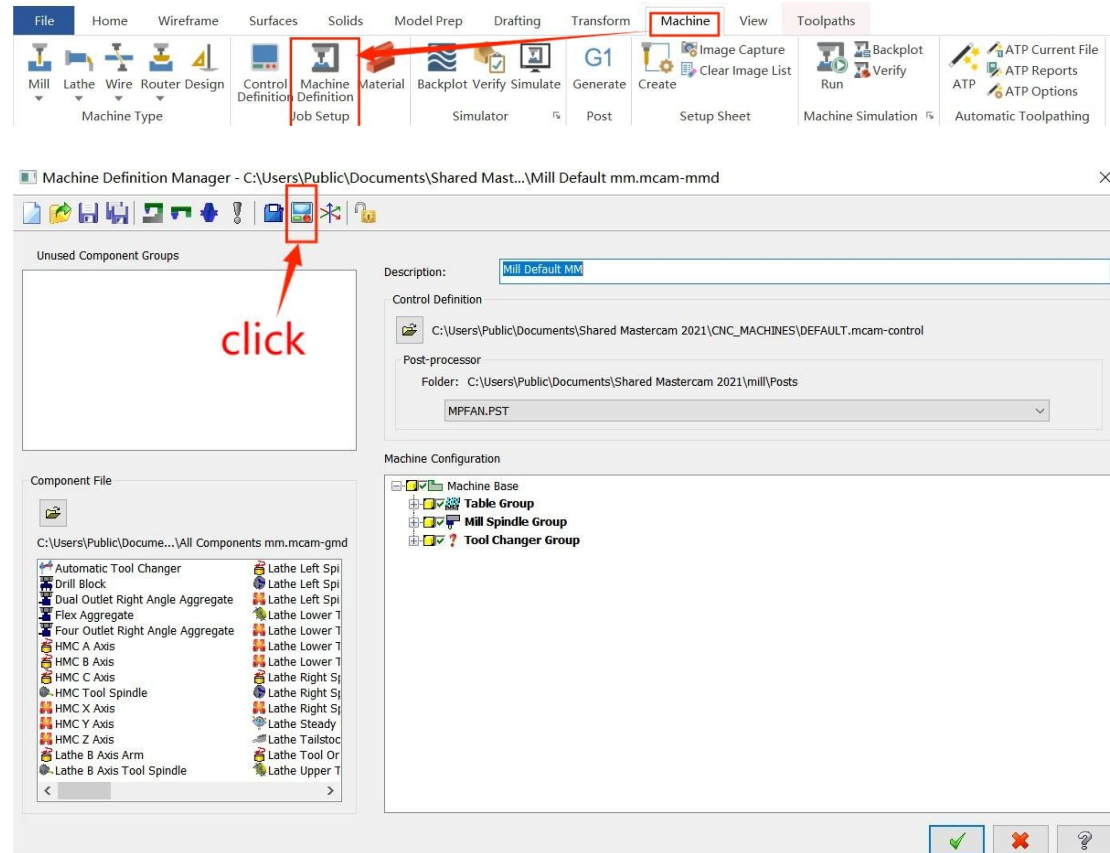


Copy the file "MPFAN - C.pst" to the "C:\Users\Public\Documents\Shared Mastercam 2021\mill\Posts" folder;


make a new project, then operate according to the following picture

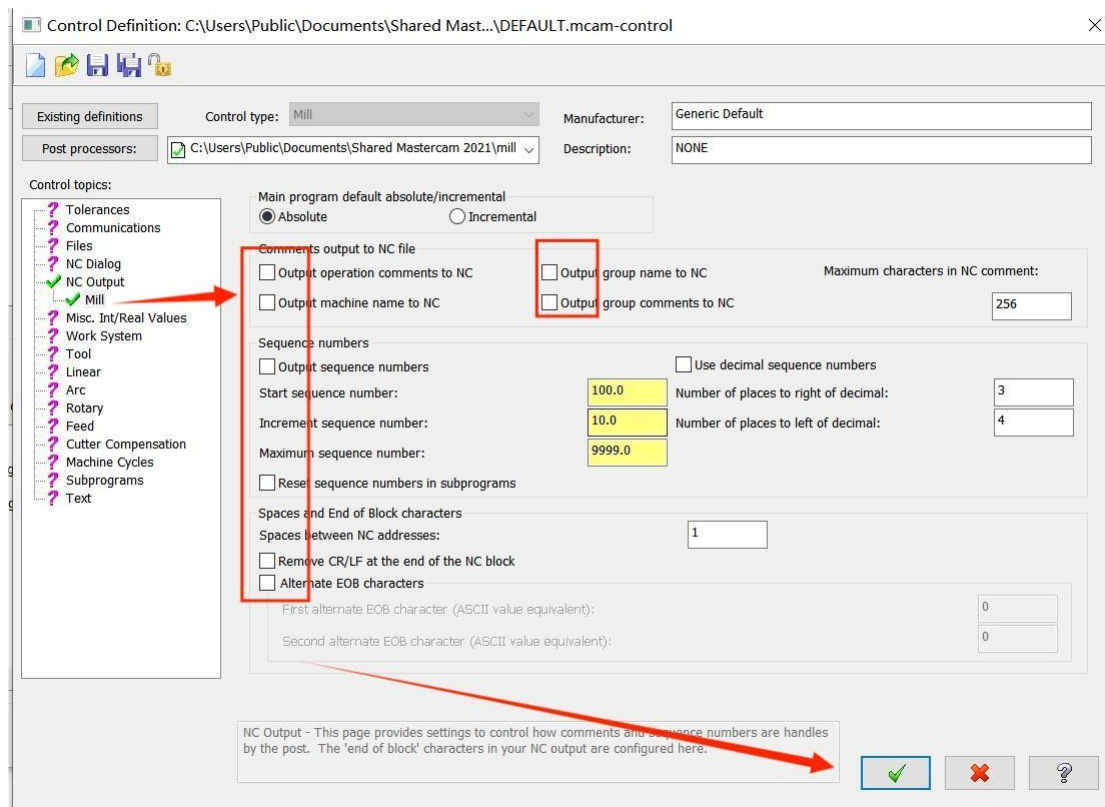

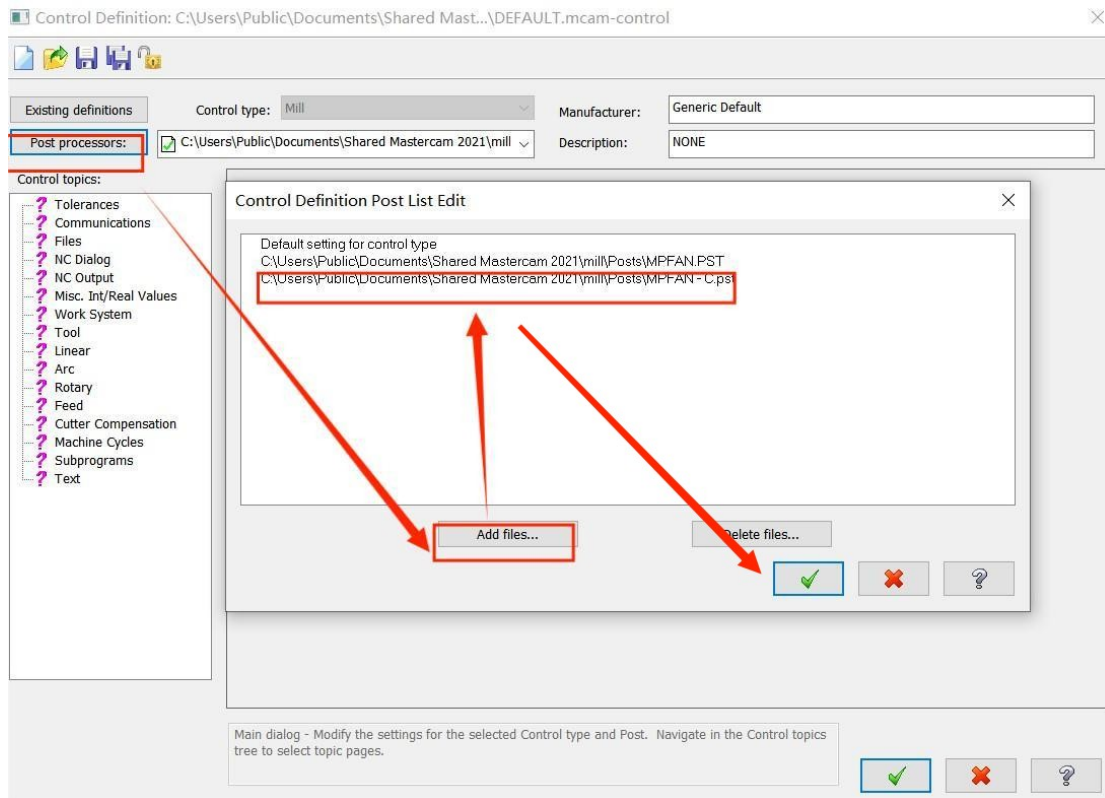


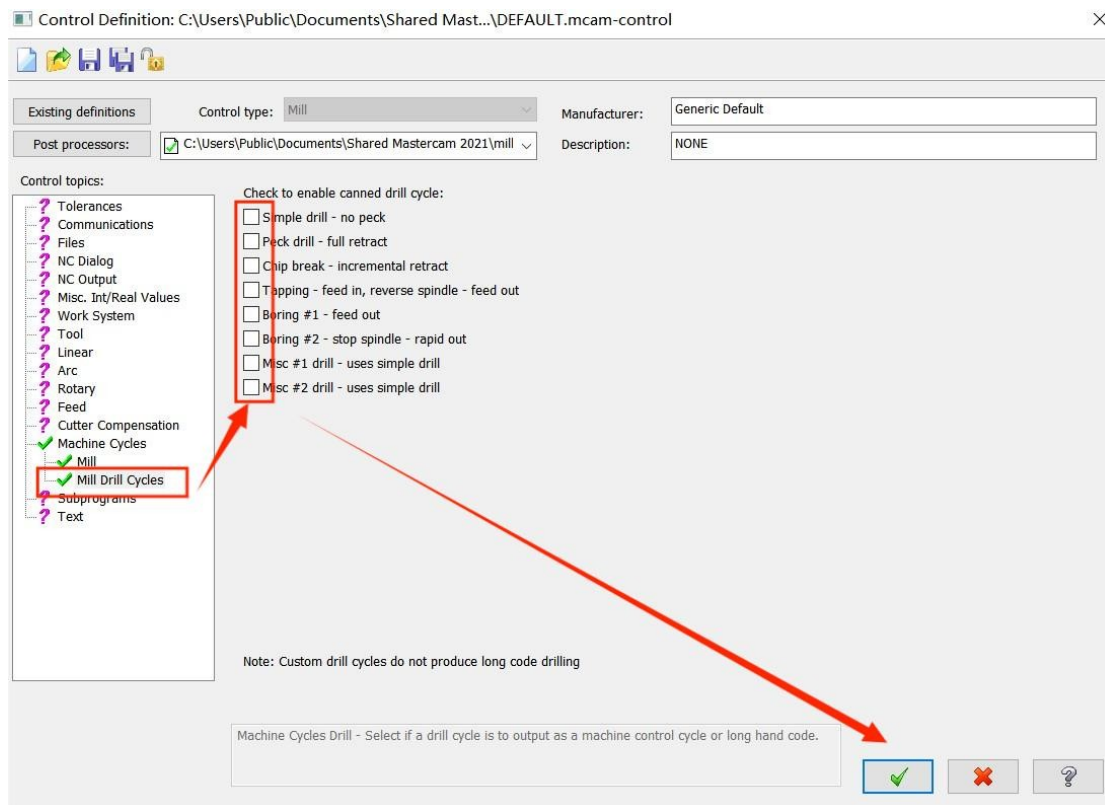


Then click all “yes”;

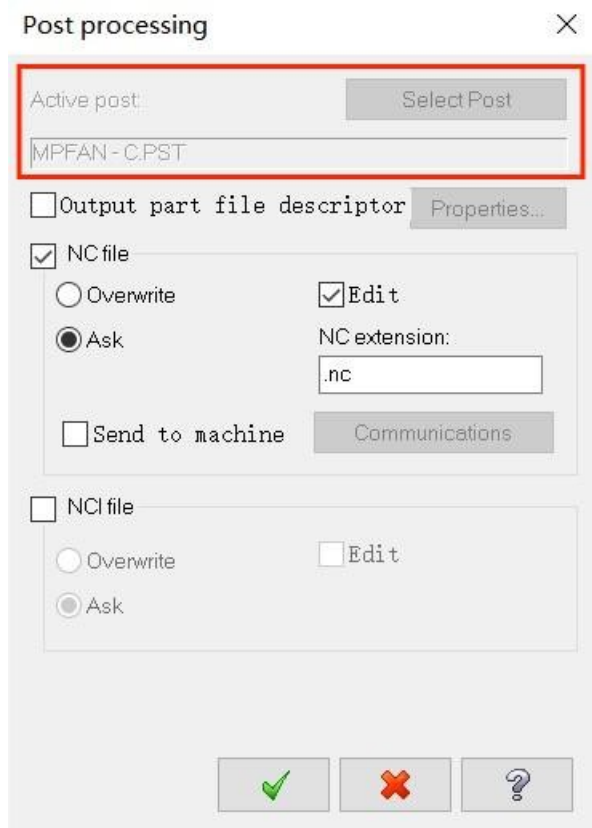

Make sure the active post is “MPFAN-C.PST”;

If the active post is not “MPFAN-C.PST”

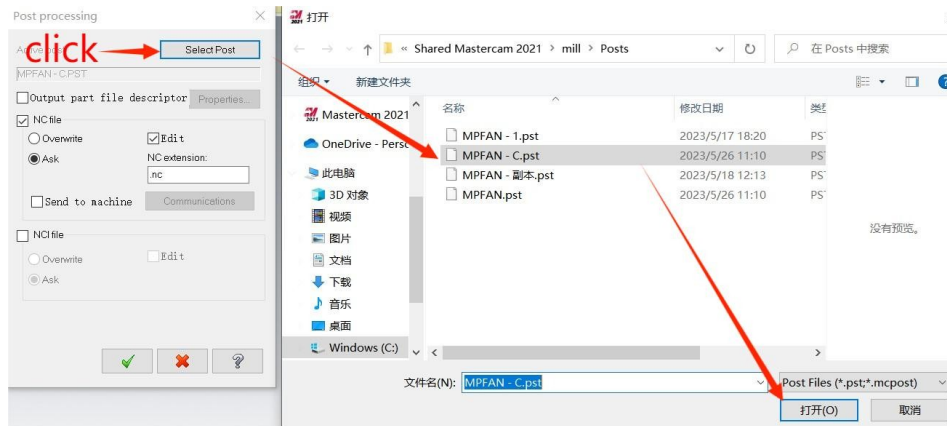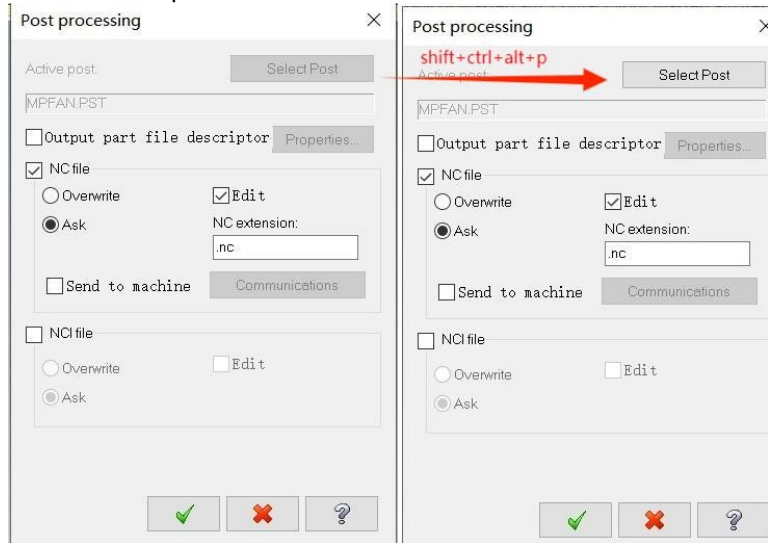

Post processing

Active post: Select Post

MPFAN - CPST

☐ Output part file descriptor Properties...

☒ NC file

☐ Overwrite ☒ Edit

☒ Ask NC extension:

☐ Send to machine Communications

☐ NCI file

☐ Overwrite ☐ Edit

☒ Ask

☒ ☐ ☐

2221.NC X

```
1 %
2 (DATE=DD-MM-YY - 30-05-23 TIME=HH:MM -
3 ( T1 | 4 | H1 )
4 ( T2 | 4 | H2 )
5 G21
6 G0 G17 G90
7 T1 M6
8 S10000 M3
9 G90 G17 G54
10 G0 X-.309 Y-1.11
11 Z10.
12 G1 Z1. F50.
13 X-1.664 Z.929
14 X1.664 Z.755
15 X-1.664 Z.58
16 X1.664 Z.406
17 X-1.664 Z.231
18 X1.664 Z.057
19 X-1.664 Z-.117
20 X1.664 Z-.292
21 X-1.664 Z-.466
22 X1.664 Z-.64
23 X-1.664 Z-.815
24 X1.664 Z-.989
25 X-1.664 Z-1.164
26 X1.664 Z-1.338
27 X-1.664 Z-1.512
28 X1.664 Z-1.687
29 X-1.664 Z-1.861
30 X1.664 Z-2.036
31 X-1.664 Z-2.21
```