



1 VCC 5V 2 GND 3 TX -> IO4 4 RX <- IO5
5 SCL / 6 SDA: compass (Foxeer only, 0x0D). BE-220 has pins 1-4.




1 GND 2 VCC 3V3 3 SCL <- IO9 4 SDA <> IO8
Module pull-ups on SDA/SCL; bus at 100 kHz.

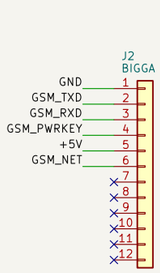

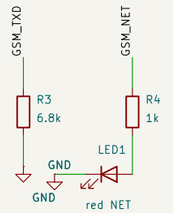





Internal pull-up on IO2; GPIO interrupt on both edges.

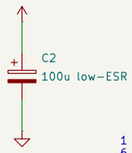


1 GND 2 TX (5 V level!) 3 RX <- IO17 4 BOOT = PWRKEY <- IO7 (open drain) 5 VCC 5V
6 NET -> R4 1k -> LED1 (NETLIGHT: 0.8 s searching, 3 s registered, 0.3 s GPRS) 7 DTR 8 RING 9-12 audio: unused.
TX high side is pulled to VCC through 4.7k on the board; R3 divides it to ~3.0 V for IO18.
VBAT is 3.64 V (MIC29302): keep VCC above 4 V in bursts -> C2 + 100n ceramic at the pins, short thick wires.

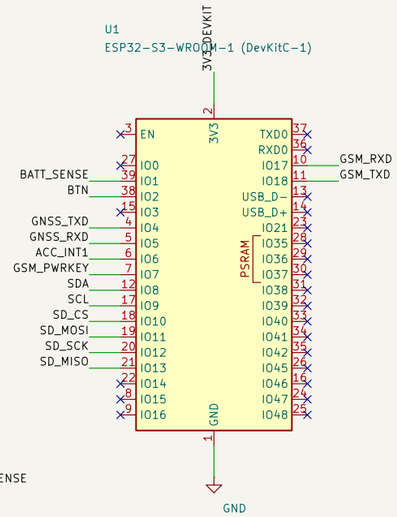


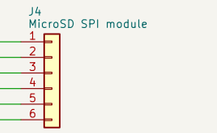


1 GND 2 VCC 3V3 (or 5V if the module has a level shifter)
3 MISO -> IO13 4 MOSI <- IO11 5 SCK <- IO12 6 CS <- IO10

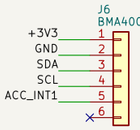

1 VCC 3V3 2 GND 3 SDA 4 SCL 5 INT1 -> IO6 (RTC GPIO, deep-sleep wake) 6 INT2 n/c
I2C 0x14 (0x15 with SDO high).




1 5V out (<= 2.2 A cont.) 2 3V out (1 A; measure: 3.0 or 3.3 V) 3 GND 4 B+ (cell)
Feeds: +5V -> devkit 5V pin, GNSS, SIM800C board. +3V3 -> OLED, SD, BMA400.

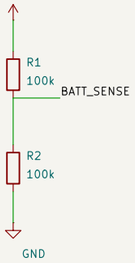

Cell 4.2 V max -> 2.1 V at IO1 (ADC1_CH0, 12 dB).

DevKitC-1: 5V pin <- +5V rail (onboard LDO makes 3V3_DEVKIT).
USB, EN, BOOT, JTAG and the onboard RGB LED (IO38/IO48) stay on the devkit.
SuperMini build: GSM on IO43/IO44 instead of IO17/IO18.

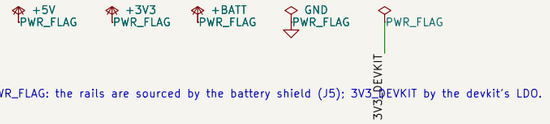

PWR_FLAG: the rails are sourced by the battery shield (J5); 3V3_DEVKIT by the devkit's LDO.

Breakout modules drawn as pin headers; see docs/HARDWARE.md
ESP32-S3 DevKitC-1 development build; pins per include/config.hpp

Maksym Kutyshenko

Sheet: /
File: gps_tracker.kicad_sch

Title: GPS Tracker

Size: A3	Date: 2026-10-09	**Rev: 1**
KiCad E.D.A. 10.0.4		Id: 1/1