

5 APPENDIX

5.1 Program Installation Procedure from Web-RCU

CAUTION


During the software installation or backup process, never turn off the power or remove the installation card.

NOTE

During installation or backup, the data is overwritten between the RCU and the main board. If the process is interrupted, the installation card may be broken, and the machine communication function may be disabled to restore. Wait while the screen in-process is displayed. Turn off the power or remove the installation card only after the process is completed.

5.1.1 Installation Software Start up


1. As in the right figure, insert the compact flash card (installation card) containing the installation software in the front side of PC card slot in Web-RCU unit, and turn on the main power switch.

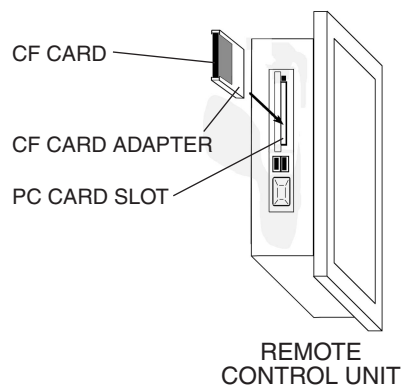

2. When the installation software starts up, the main menu screen shown as below appears. By pressing these buttons on the main menu, various menus appear to enable the operations. In the example in the figure below, when the



key circled in a solid line is pressed, the main menu is switched to the menu to install or backup the RCU software. When the software to write in the installation card is not inserted, the key on the menu is faded as the area circled in a dashed line.

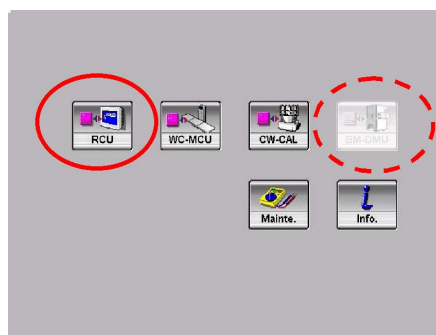


**CAUTION**

Before starting the software installation, be sure to backup the existing software to the installation card. Once the new software is written, the previous status cannot be restored without the installation card storing the previous software.



5.1.2 RCU Software Backup

Before installing the new software, backup the written RCU software to the CF card.


1. Press the  key on the main menu screen.

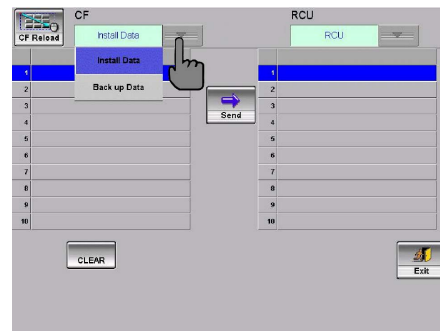


2. The installation screen appears. Press the CF drop-down key at the upper left of the screen. Select "Back up Data" from the list, and press the "Back up Data" key.

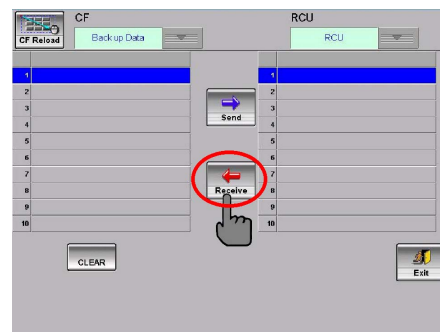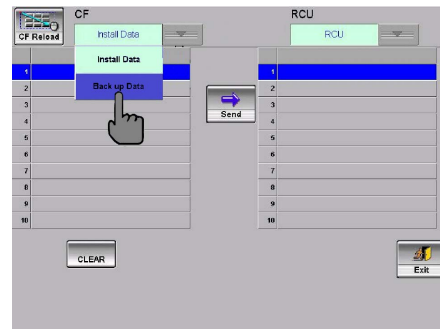

3. The  key as shown in the above figure appears. When the  key is pressed, the confirmation dialog screen appears to confirm whether or not to backup the RCU software.

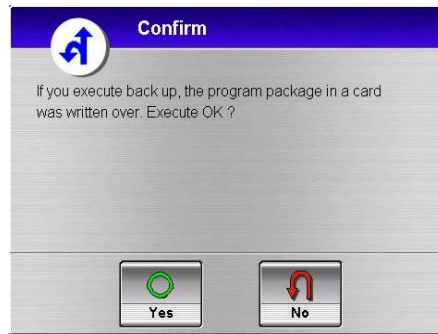

4. Press the  key to backup.
Press the  key to return to the previous screen.

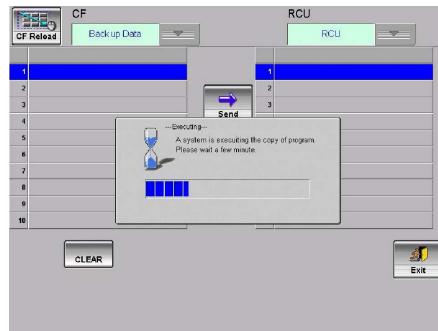


5. Press the  key on the confirmation screen to start the backup process. The backup process screen appears.
The waiting time is approximately 5 minutes, depending on the software


CAUTION

During the backup process, never turn off the power or remove the installation card.

6. When the backup process is completed, the Finish Message appears.
7. The RCU backup is completed. Press the  key to return to the previous installation screen.

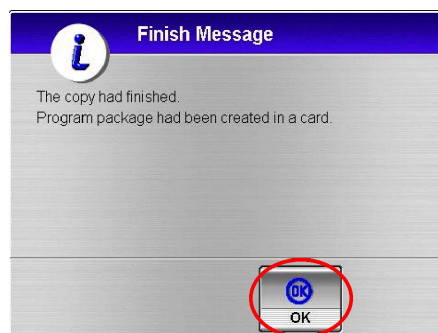

8. Press the  key on the installation screen to return to the main menu screen.

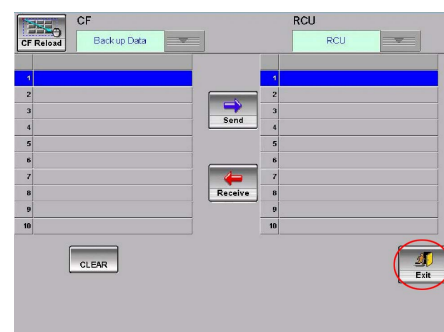

5.1.3 RCU Software Installation

When the stored RCU software does not need the backup or when the backup process is completed, install the RCU software. The following two methods can be applied for the RCU software installation.

1. Install Program to Existing Model

Install only the new software while keeping the existing parameter files for RCU.

2. Install Program Newly

Install the new software and the parameter file from the card when the parameter file for RCU is not existing or deleted.

Unless otherwise indicated, install the RCU software by the method "1. Install Program to Existing Model" after the factory shipment.


Select "1. Install Program to Existing Model" after the existing parameter file for RCU is deleted.

The RCU parameter file includes the settings (displayed language, back light control time, etc.) made on the RCU control menu screen and the shot product images.

5.1.3.1 Installing the Program to Existing Model

Install only the new software while keeping the existing parameter files for RCU.


1. Press the  key on the main menu screen.
2. The RCU installation screen appears. Press the  key.

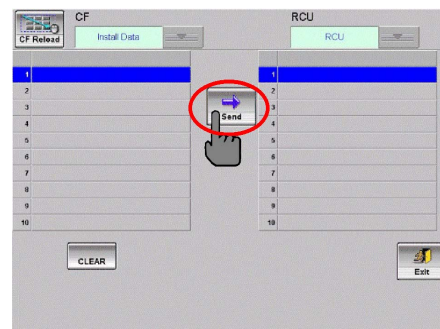

3. The confirmation dialog screen appears to confirm whether or not to install the RCU software.

4. Press the  key to install.


Press the  key to return to the previous screen.

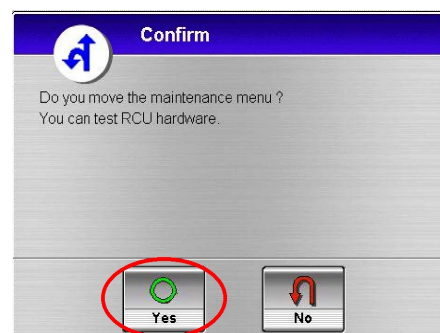

5. When the  key is pressed on the confirmation screen, the installation process starts, and the installation process screen is displayed.
The waiting time is approximately 5 minutes, depending on the software.

CAUTION


During the installation process, never turn off the power or remove the installation card.

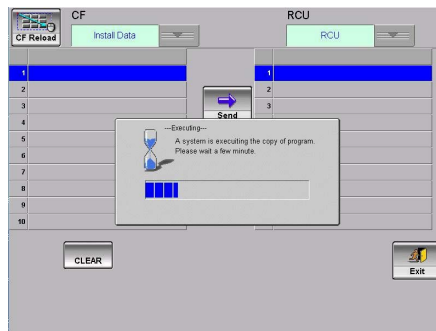

6. When the backup process is completed, the Finish Message appears.
7. The RCU installation is completed. Press the  key to return to the previous installation screen.



8. Press the  key on the installation screen to return to the main menu screen.
9. To reflect the result of software installation, turn off the power, remove the installation card from the slot, and turn ON the power again.

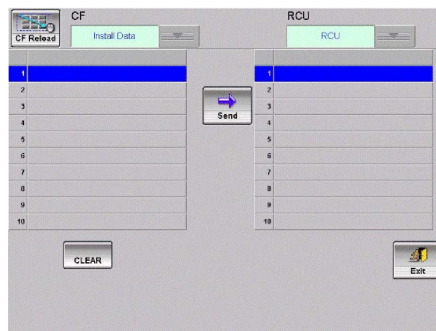


5.1.3.2 Installing Program Newly

Install the new software and the default parameter file from the installation card after the existing parameter file for RCU is deleted.

TIP

- Install the RCU software by the method "1. Install Program to Existing Model" after the factory shipment unless otherwise indicated.
- Select "1. Install Program to Existing Model" after deleting the existing parameter file for RCU.

1. Press the  key on the main menu screen.
2. The RCU installation screen appears. Press the  key.

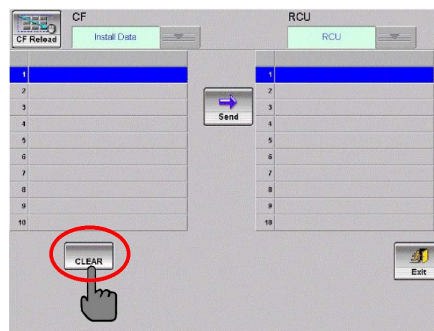

3. The confirmation dialog screen appears to confirm whether or not to delete the RCU parameter file.

Press the  key to delete the parameter file.

4. After deleting the parameter file, install the new program by referring to "5.1.3.1 Installing the Program to Existing Model". When the existing parameter file is deleted, the default parameter file is automatically copied from the installation card.



6 TROUBLESHOOTING

6.1	Error Message Handling	6-1
6.2	System Error / Failure	6-3
6.3	Other Troubleshooting.....	6-3
6.4	TSC-RS-120 Troubleshooting (in operation)	6-4
6.5	Error detect and checkup	6-6

<MEMO>