

5 REGISTERING OF PRODUCTS

5.1 Summary

This chapter describes the outline and procedures for registering a new product.

**CAUTION**

- **Read and thoroughly understand Chapter 1 through to Chapter 4 before registering the product.**
-

<Contents>

- Setting screens by product

<Purpose>

- To understand and master the procedures to set product data for weighing a new product.

<Intended reader>

- System administrators

5.2 Preset

This section describes the preset procedures.

5.2.1 Registration Details

Items and details to be set in the preset screen are described in "Table 5-1".

CAUTION

- Each set value differs depending on product type, characteristics and setting environments. Perform the actual adjustment while checking the operation status.

TIP

- "Initial Value" in "Table 5-1" is the standard value (default value) set to the device in advance.
- "Setting Example" is the example when weighing 90 g of potato chips (Refer to "5.2.3 Preset Procedures").

Table 5-1

Setting Item	Setting Detail	Initial Value	Setting Example
Product Name	Sets the product name.	—	C1:Potato chips
Product Code	Sets the product code.	—	01
Product Category	Sets the desired product category.	—	A100
Photo Selection	Selects the photo. When there is no photo data,  is displayed.		
Camera	Takes photos of the products.	—	—
Speed	Sets the number of times that the weighing operation is performed per minute.	60	70
Dump Count	Divides and discharges the product separately to prevent the product from jamming in the packer when the target weight is large or when a product will overflow if weighed all at once. The number of times for division is set here.	1	1
Average Control	Controls the target weight at a regular interval in order to maintain the discharged weight mean value to be close to the target weight. Select [On] or [Off] for this function.	Off	Off

Table 5-1

Setting Item	Setting Detail	Initial Value	Setting Example
Interlock Parameter Number	Selects the interlock mode between the device and the packer. There are four different interlock modes.	1	1
Section Parameter Number	Selects the section division pattern when dividing weigh heads into sections and weighing different products in each section. There are eight different division patterns.	2	2
Auto Feed Target	Sets the number of weigh hopper heads to be selected for discharge operation in order to obtain the target weight.	3.8	3.8
Disch.Priority Count	Sets the number of times to give priority in participating in the combination to heads that have not discharged the product.	30	30
AFD Auto adjustment limit amp	Sets the range where the operating intensity is automatically adjusted when the AFD is set to "Auto".	—	—
AFD Auto adjustment limit time	Sets the range where the operating time is automatically adjusted when the AFD is set to "Auto".	—	—
Feed Multiplier	Sets the multiplying factor of feeder operating time set in the Feeder Adjustment screen.	1	1
Hopper Drive Setting	Selects parameters to set the open/close operation condition for each hopper including the pool hopper and weigh hopper.	0	0
Photo SW	Selects [On] for models with a photo eye sensor, and [Off] for models without a photo eye sensor.	Off	Off
Shutter Drive	Selects [On] for models with a shutter drive, and [Off] for models without a shutter drive.	Off	Off
Feeder Adjustment	Sets operating intensity of the radial and dispersion feeders, operating time, and dispersion weight. Adjusts the product feed to the pool hopper, radial trough, and dispersion table based on the set value.	• AFD mode:Manual • AMP:50 • Time:25 • Target Wt:0	• AFD mode:Manual • AMP:50 • Time:25 • Target Wt:90
Timing Adjustment	Sets the timing value for the opening/closing of each hopper.	• IS-DS:0 • IS-TH1:0 • IS-WH:0 • WH-PH:200 • PH-RF:60 • Stagger:0	• IS-DS:0 • IS-TH1:0 • IS-WH:0 • WH-PH:200 • PH-RF:60 • Stagger:0

Table 5-1

Setting Item	Setting Detail	Initial Value	Setting Example
Target Weight	Sets the product weight to be discharged from the device to the packer.	C1:0	C1:90
Extended Upper Limit	Sets the tolerance so that products can be discharged as proper weight even if the upper limit is exceeded once in a specified number of proper weight dumps.	0	0
Upper Weight Limit	Sets the upper limit of the proper weight.	0	3
Lower Weight Limit	Sets the lower limit of the proper weight in grams when the average control function is utilized.	0	0


5.2.2 Outline of the Registration

This section describes the outline of the preset.

Refer to the next section for details regarding the operation procedures.

For items marked with * in the following chart, respective initial values are registered. Refer to "5.2.1 Registration Details" for each initial value.

Refer to "6.10 Preset screen" for detailed descriptions of all items in the following chart.

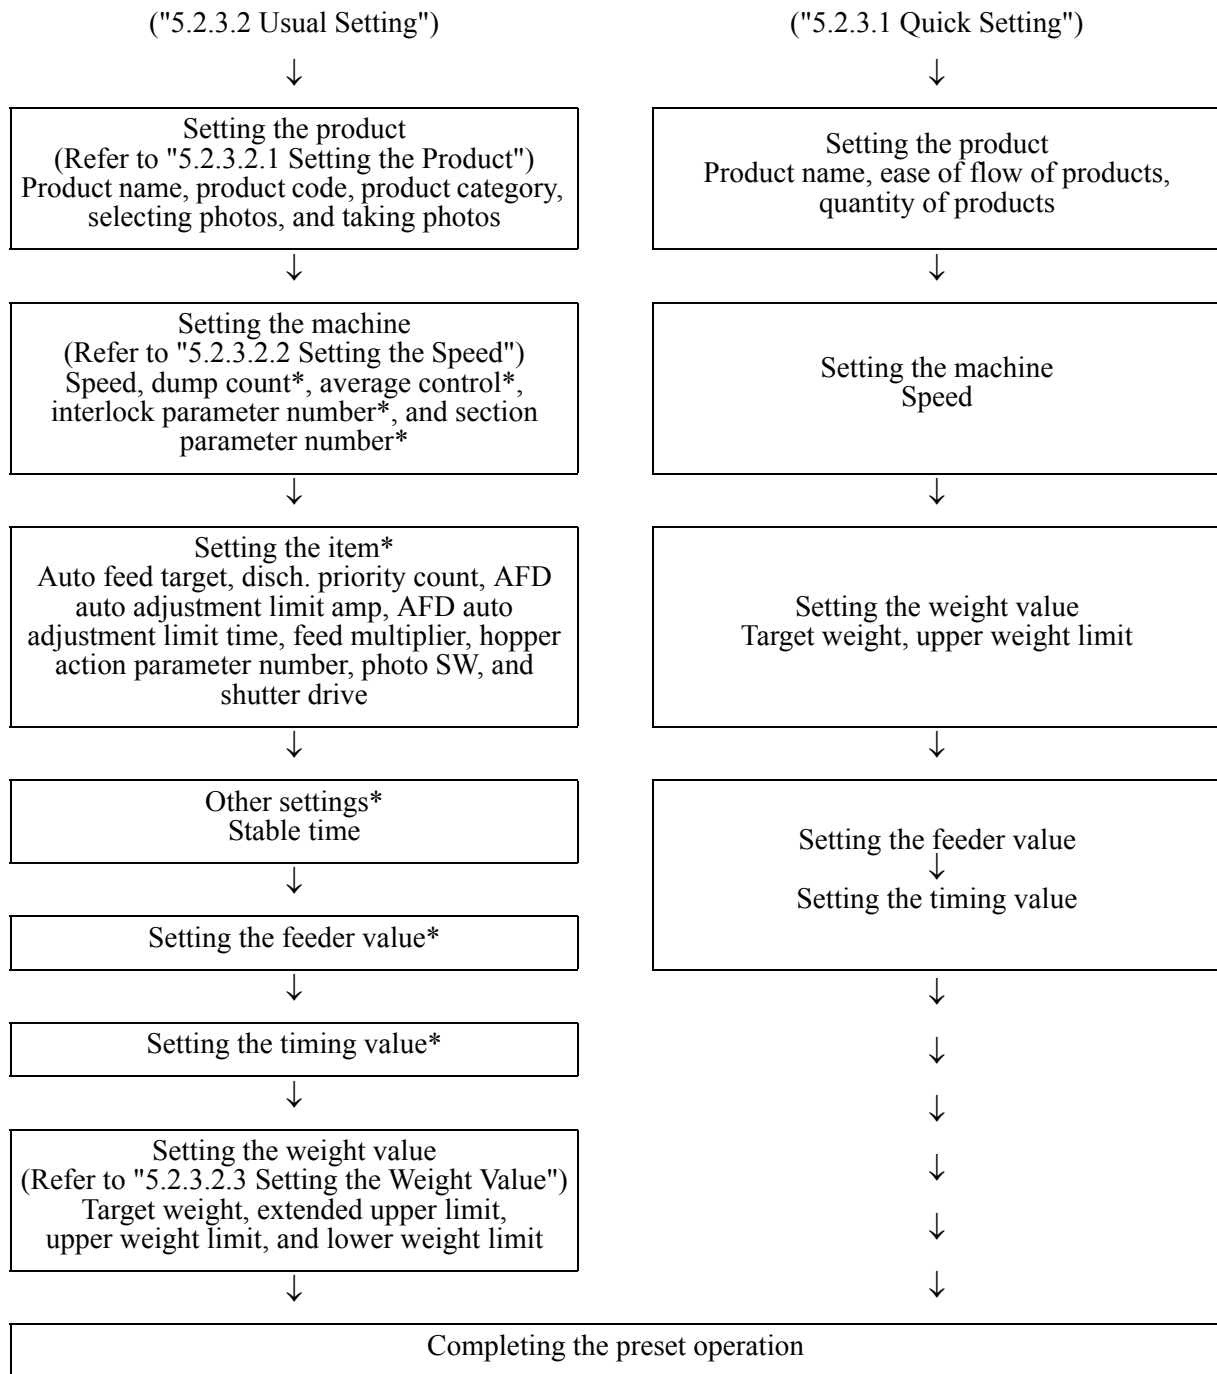

5.2.3 Preset Procedures

This section describes the registration procedures using the example shown in "5.2.1 Registration Details".

Numerical values shown in parentheses are taken from setting examples in "Table 5-1".

The preset procedure is performed by the Site Engineer level or the Installation level personnel. Refer to "6.3.4 Operation Level Selection" for the operation level definitions.

NOTE

- Setting procedures for the initial values are not described in this section. Refer to "6 FUNCTIONS OF THE OPERATION SCREENS" for the setting procedures of all values.

5.2.3.1 Quick Setting

<Purpose>

To set the preset item easily by the [Auto set.] key.

- Press the [Preset] key.
 - The Simple Setting screen of the Preset screen appears.



Fig. 5-1

- Press the [Product Name] key.
 - The Keyboard screen appears.

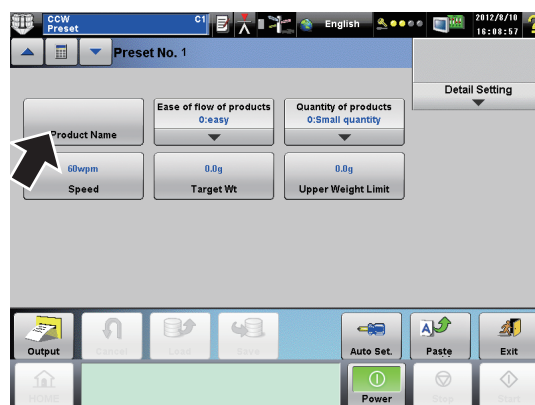


Fig. 5-2

3. Set the product name (POTATO CHIPS).

► The Keyboard screen disappears.

NOTE

- After changing the settings, the [Cancel] key becomes operable. To cancel the settings, press the [Cancel] key. To accept the settings, press the [Exit] key.



Fig. 5-3

4. Press the [Ease of flow of products] key and select the ease of flow of products.

NOTE

- Select "0:easy" when the product needs smaller amplitude of feeder to move through, e.g. snack food, candy, etc.
- Select "1:hard" when the product needs larger amplitude of feeder to move through, e.g. water rich products.

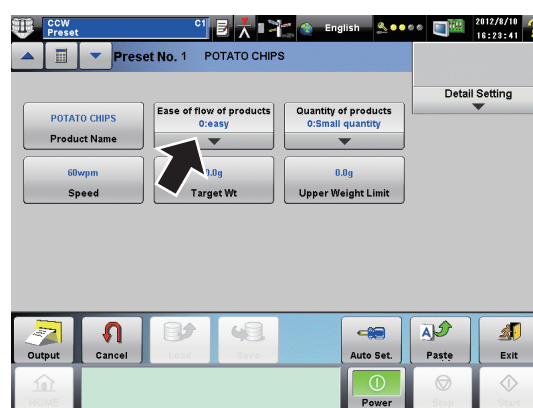


Fig. 5-4

5. Press the [Quantity of products] key and select the quantity of products.

NOTE

- Select "0:Small quantity" when you operate the machine keeping products in smaller amounts on dispersion table and radial trough, e.g. weighing of potato chips for smaller prepacks, count set weighing of candy for smaller prepacks, etc.
- Select "1:standard - extensive" when you operate the machine keeping products in larger amounts on dispersion table and radial trough, e.g. larger amount weighing, weighing of regular-shaped snack foods for smaller prepacks.



Fig. 5-5

6. Press the [Speed] key.

► The Numeric Keypad screen appears.

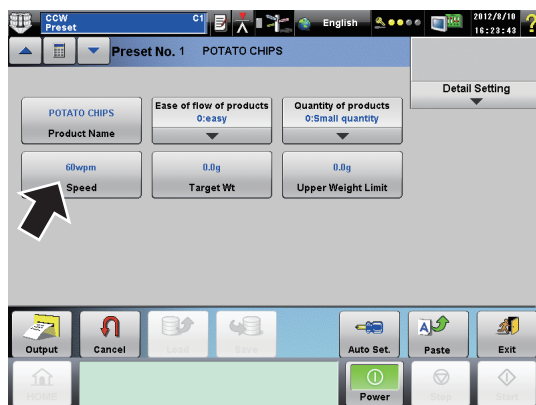


Fig. 5-6

7. Set the speed (70).

► The Numeric Keypad screen disappears.

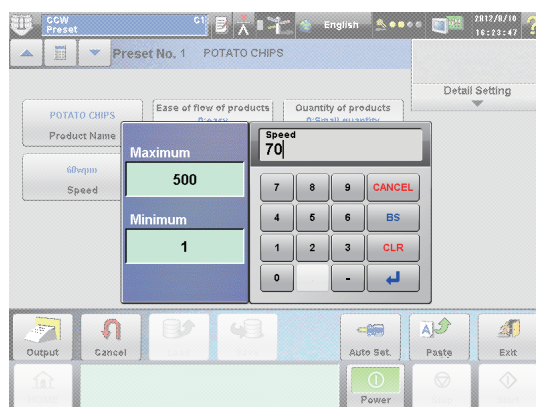


Fig. 5-7

8. Press the [Target Wt] key.

► The Numeric Keypad screen appears.

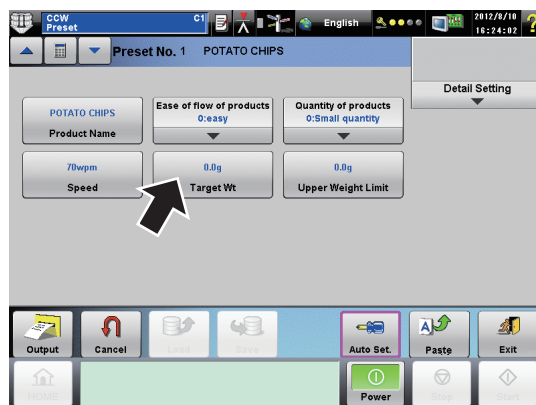


Fig. 5-8

9. Set the target weight (90).
- The Numeric Keypad screen disappears.

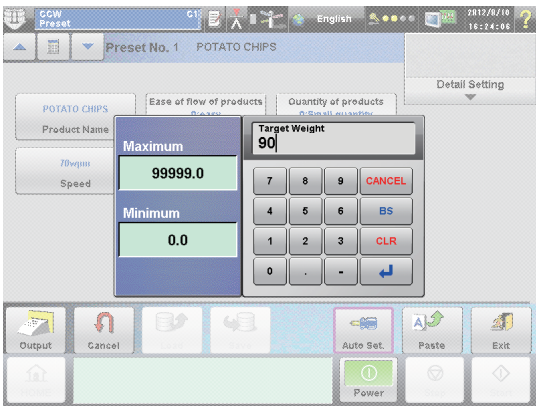


Fig. 5-9

10. Press the [Upper Weight Limit] key.
- The Numeric Keypad screen appears.

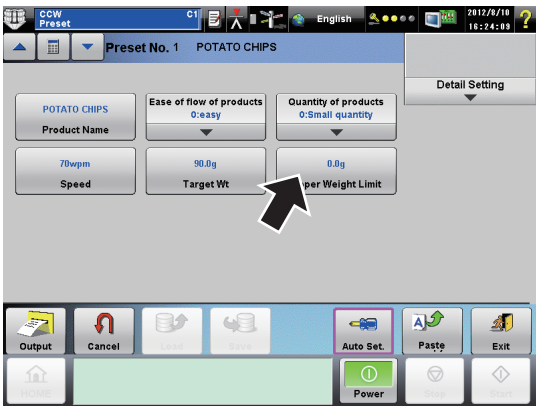


Fig. 5-10

11. Set the upper weight limit (3).
- The Numeric Keypad screen disappears.

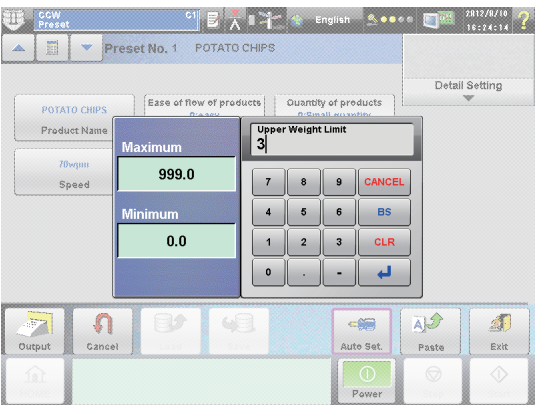


Fig. 5-11

12. Press the [Auto Set.] key.

- Feeder value and Timing value are set automatically.

TIP

- The parameters set automatically are “Drive Pattern”, “Stable Time”, “Filter No.”, RF amplitude / time”, “DF amplitude / time”, Target Weight”, and “Timing adjustment parameters for WH-PH, PH-RF”, etc.



Fig. 5-12

13. Press the [Exit] key.

- The Main Menu appears.

TIP

- All the new parameters entered at Detail Setting menu will automatically be reflected by [Auto Set.] key with all the old parameters overwritten.
- Entering new value to [WH ON] time and/or [PH ON] time followed by [Auto Set.] key will automatically overwrite all other relevant parameters (of the Detail Setting menu).



Fig. 5-13

5.2.3.2 Usual Setting

5.2.3.2.1 Setting the Product

<Purpose>

To set the product name, product code, and product category of the product to be weighed with this device.

1. Press the [Preset] key.

- The Simple Setting screen of the Preset screen appears.



Fig. 5-14

2. Press the [Detail Setting] key.

- The Preset screen of the Detail Setting screen appears.



Fig. 5-15

3. Press the [Product Name] key.

- The Keyboard screen appears.



Fig. 5-16

4. Set the product name (POTATO CHIPS).

► The Keyboard screen disappears.

NOTE

- After changing the settings, the [Cancel] key becomes operable. To cancel the settings, press the [Cancel] key. To accept the settings, press the [Exit] key.



Fig. 5-17

5. Press the [Product Code] key.

► The Keyboard screen appears.

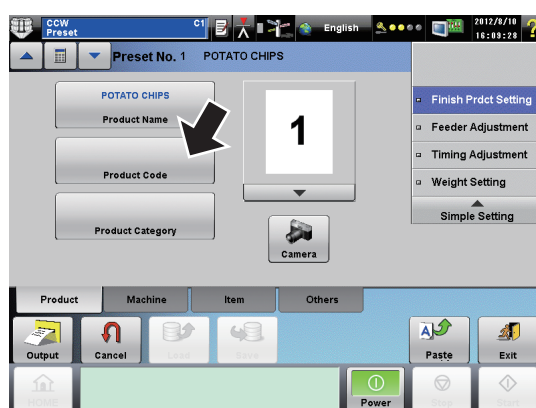


Fig. 5-18

6. Set the product code (01).

► The Keyboard screen disappears.

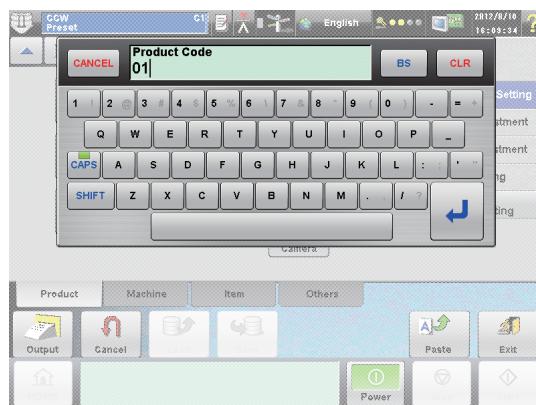


Fig. 5-19

7. Press the [Product Category] key.

► The Keyboard screen appears.

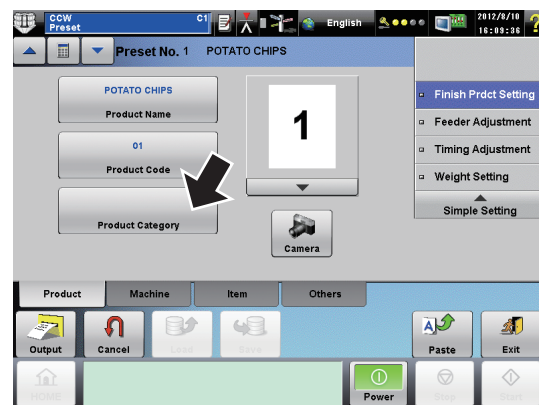


Fig. 5-20

8. Set the product category (A100).

► The Keyboard screen disappears.



Fig. 5-21

Selecting the photo

1. Press the [Photo Selection] drop-down key.

► The Photo Selection drop-down list appears.

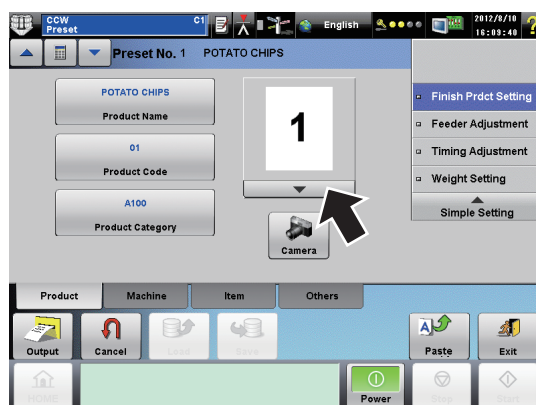


Fig. 5-22

2. Select the desired photo.

► The selected photo is displayed on the screen.

TIP

- The selected photo will be reflected to the Main Menu, Production screen, photo display of the Select Preset screen, and the Preset screen.
- Refer to "Product Photo Taking Procedures" in "6.10 Preset screen" to take photos of the product.



Fig. 5-23

5.2.3.2.2 Setting the Speed

<Purpose>

To set the number of packs to be discharged from the device per minute.

Discharge count, average control, interlock parameter number, and sectioning set can be specified when necessary.

1. Press the [Machine] tab.

► The Machine screen appears.



Fig. 5-24

2. Press the [Speed] key.

► The Numeric Keypad screen appears.

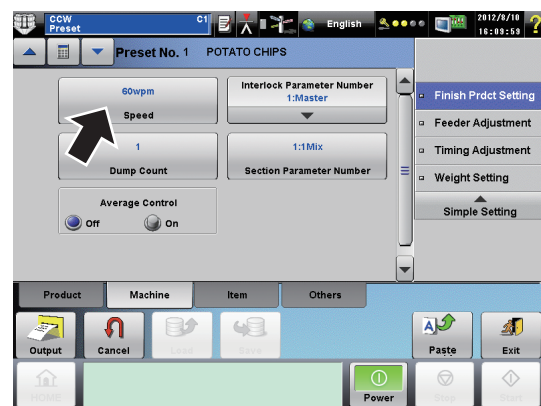


Fig. 5-25

3. Set the speed (70).

► The displayed numerical values are overwritten.

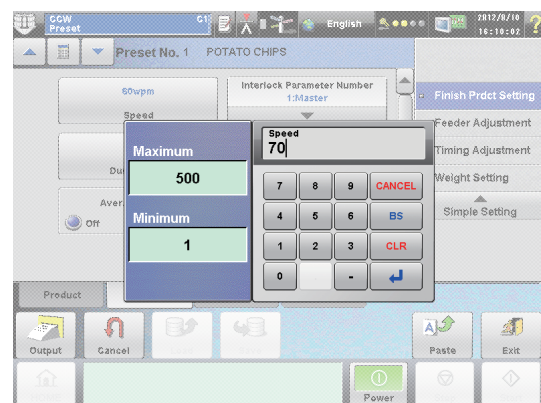


Fig. 5-26

5.2.3.2.3 Setting the Weight Value

<Purpose>

To set the weight value and permissible weight value weighed with this device.

1. Press the [Weight Setting] key in the index.

► The Weight Setting screen appears.

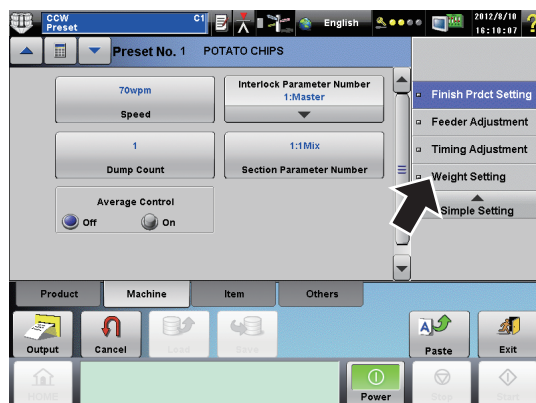


Fig. 5-27

2. Press the [Target Weight] key.

► The Numeric Keypad screen appears.

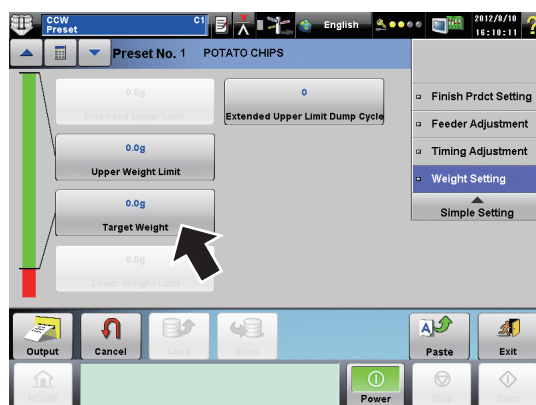


Fig. 5-28

3. Set the target weight (90).

► The Numeric Keypad screen disappears.

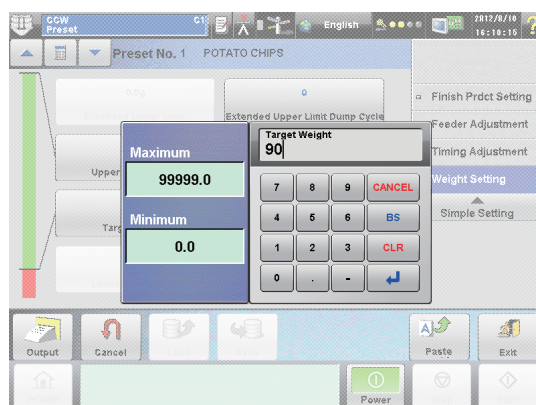


Fig. 5-29

4. Press the [Upper Weight Limit] key.
- The Numeric Keypad screen appears.

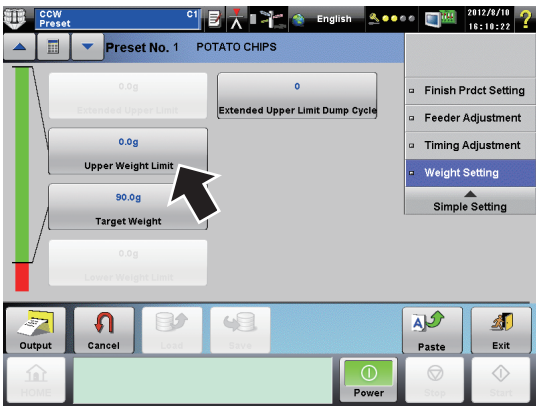


Fig. 5-30

5. Set the upper weight limit (3).
- The Numeric Keypad screen disappears.

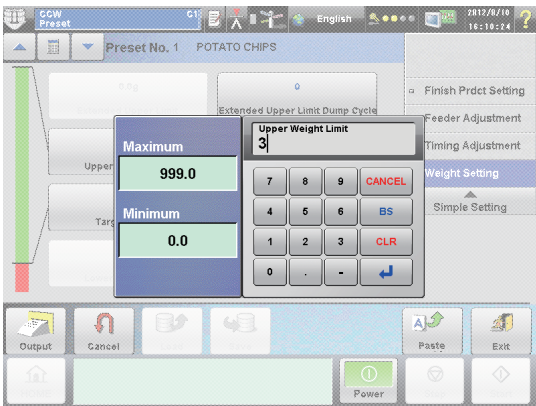


Fig. 5-31

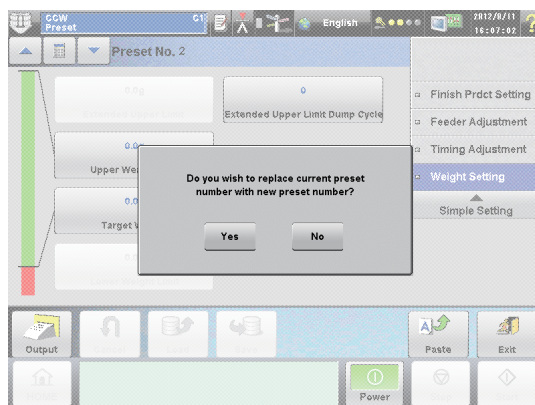
6. Press the [Exit] key.
- The Main Menu appears.



Fig. 5-32

NOTE

- When the preset number is changed in the Preset screen, press the [Exit] key to show the confirmation screen. To accept the settings for the selected preset number, press the [Yes] key.

**Fig. 5-33**

5.3 Preset Management

When pressing the [Exit] key after completing the preset procedures, the preset information is automatically saved to the main body memory.

Preset information saved in a certain preset number can be copied to another preset number.

Detailed preset information can be copied to the USB in order to maintain backup data or to accept more preset settings.

Preset information created can be output to a printer or as a file for record purpose.

Refer to the following items for the preset management.

- Selecting and copying the preset (Refer to "6.14.3.2.1 Selecting and Copying Preset").
- Copying all preset data (From memory to USB or from USB to memory) (Refer to "6.14.3.2.2 Copying All Preset").
- Resetting unnecessary preset data to the initial state (Refer to "6.14.3.2.3 Selecting and Initializing Preset").
- Resetting all preset data to the initial state (Refer to "6.14.3.2.4 Initializing All Preset").
- Copying the registered product data to create new product data (Refer to "7.2.1 Copying and Editing Registered Product Data").
- Outputting the preset information to a printer or as a file (Refer to "6.10.10 Preset Output").