

Installation and Alignment of Jaws for Atlas 202 Bagmaker

This procedure describes how to replace the Jaw Assembly and properly align the jaws during installation or maintenance procedures.


Safety: Follow Lockout/Tagout Procedure.



WARNING

The Jaws are very hot. Allow the jaws to cool for 45 minutes prior to doing this procedure.

Tools Needed: Alignment jig
Allen wrenches and sockets (3mm, 4mm, 5mm, 6mm, 10mm)
Extension conduit bar (approx. 1/2" ID X 10") to block jaw rotation
Inspection mirror
Open-end wrench (10mm)
Socket wrench with extension
Shop light

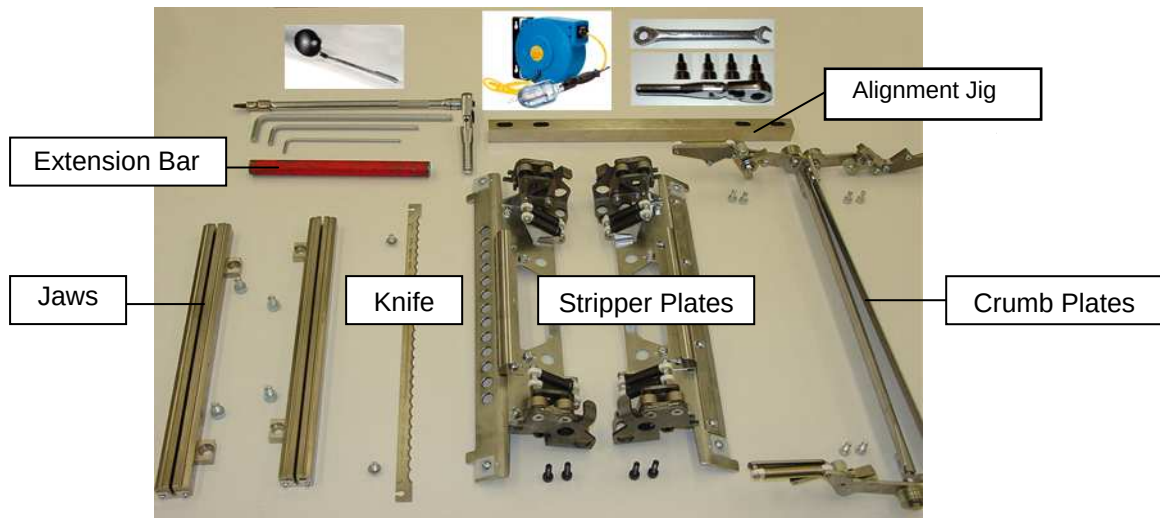

Step	Description
------	-------------

- | | |
|---|--|
| 1 | After the 45 minute cool-down period, Lockout & Tagout the main power. |
|---|--|



- | | |
|----|--|
| 2. | Remove the two 4mm screws on the drive side panel to access the jaw motor cable. |
|----|--|




INSTALLATION and JAW ALIGNMENT PROCEDURES

Ishida Atlas 201 and 202 Bagmakers


3 Disconnect the rotation motor cable. Remove the front cover and set aside.



4 Remove the four 5mm front and rear crumb plate bolts.

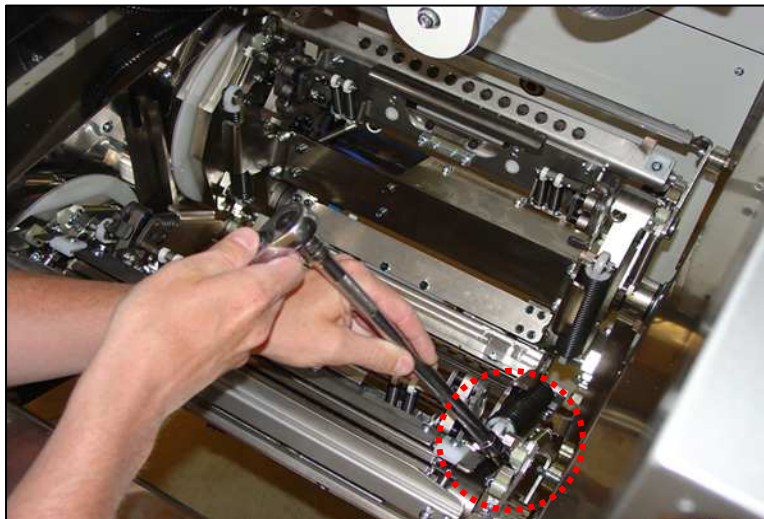


5 Remove front and rear crumb plates and set aside.

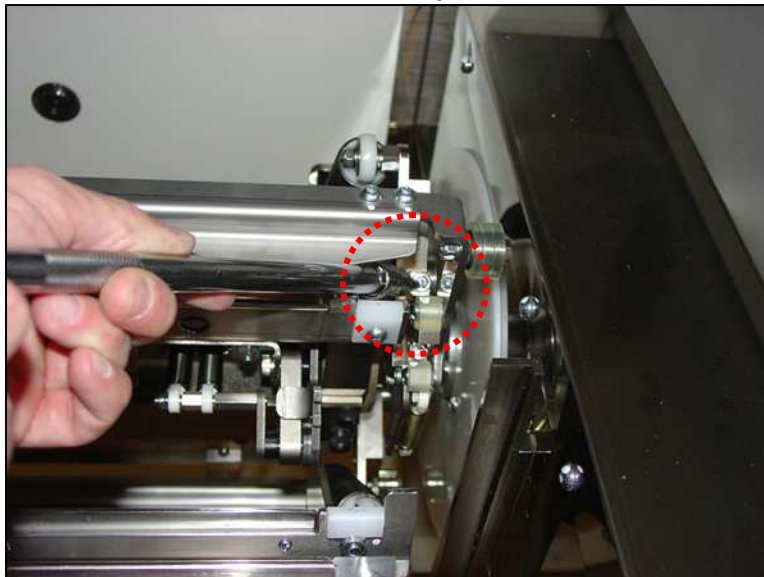


INSTALLATION and JAW ALIGNMENT PROCEDURES

Ishida Atlas 201 and 202 Bagmakers


- 6 During the Jaw Replacement Procedure, remove the two 4mm knife bolts and set the knife aside. **When not replacing the jaws**, inspect the front jaw carefully and center the front jaw on the knife as needed. Tighten the front jaw bolts securely. Slightly loosen the rear jaw mounting bolts to begin the alignment steps.

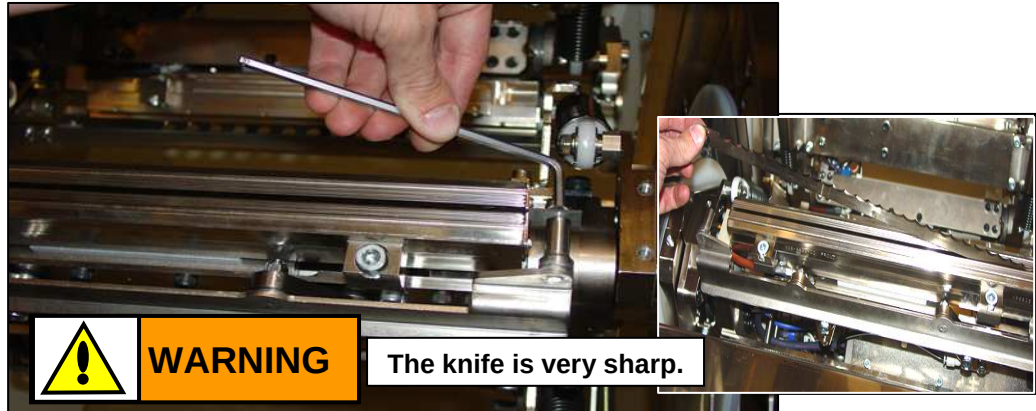

- 7 Insert an extension bar and remove the four 5mm bolts on each stripper plate.

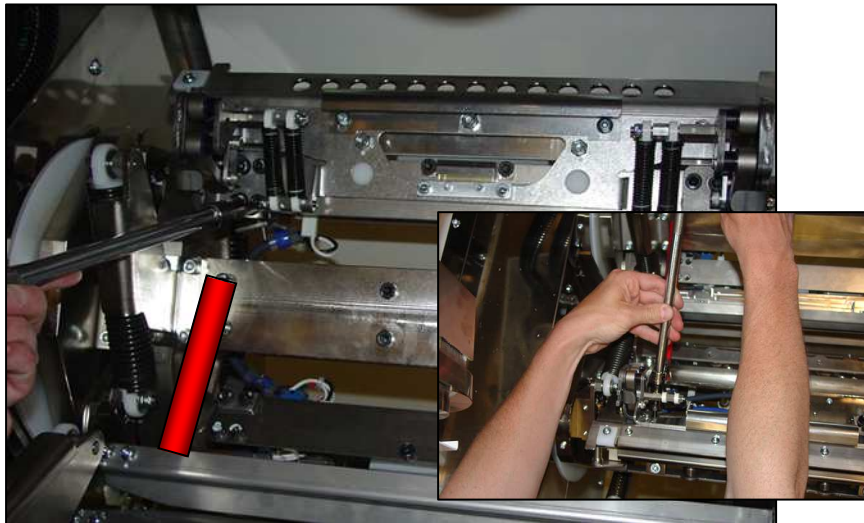

- 8 Remove the stripper plates and set them aside.

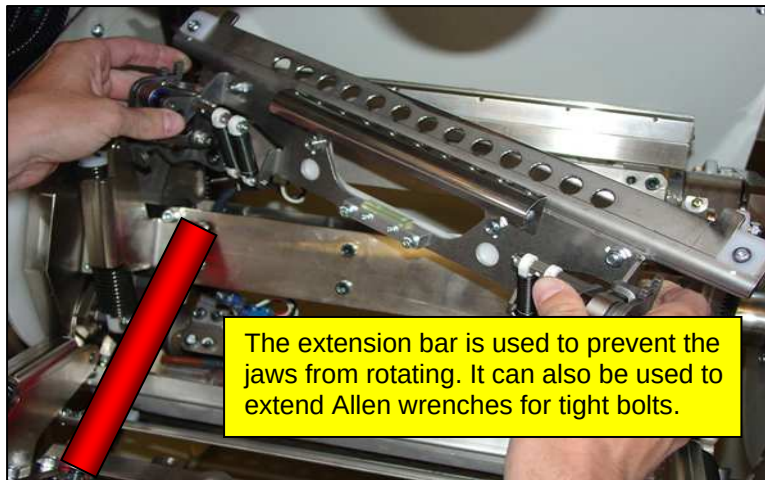


INSTALLATION and JAW ALIGNMENT PROCEDURES

Ishida Atlas 201 and 202 Bagmakers


- 9 **If the jaw replacement is needed**, remove the two 6mm jaw mounting bolts from both the front and rear jaws. Remove the old jaws and install the new ones. Install the knife and align the front jaw to the knife. Tighten the front jaw securely. Do not completely tighten the bolts on the rear jaw at this point. The rear jaw must be able to slide during the alignment steps that follow.



- 10 Align the front jaw to the knife and be sure the knife is in the middle of the jaw's knife slot.

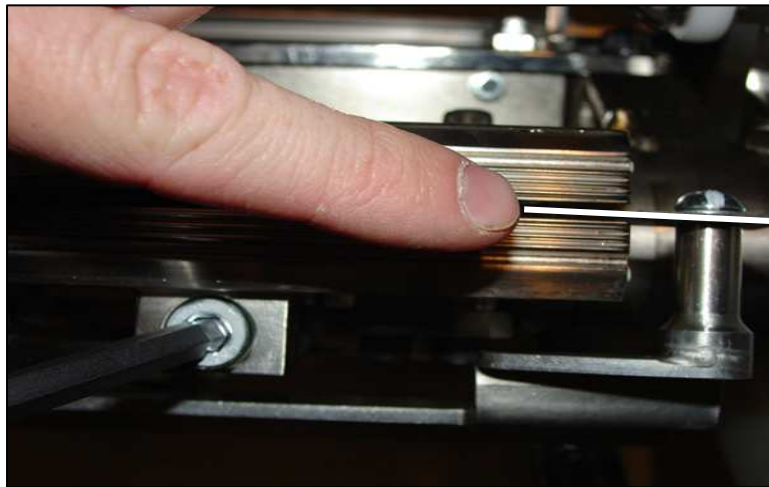


- 11 Check alignment, tighten the front jaw securely. Loosely tighten rear jaw bolts.

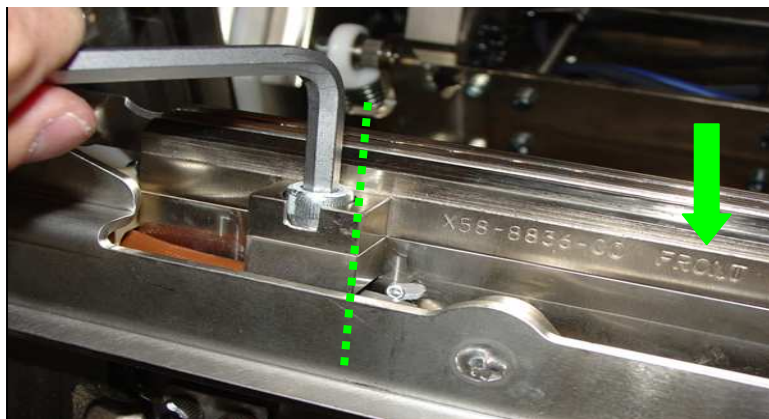

INSTALLATION and JAW ALIGNMENT PROCEDURES

Ishida Atlas 201 and 202 Bagmakers

12 Rotate the jaws by hand to see the top plate.

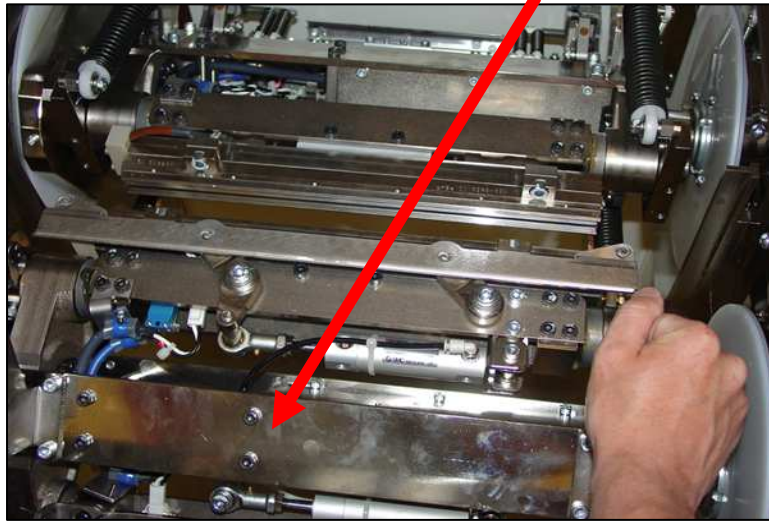

13 Remove the two center 5mm Allen bolts from both top plates.




14 Note: No bolts are provide for this jig. Install the jig using two 5mm bolts long enough to pass through the jig and secure it to the top plates. Tighten the bolts until the jig is flush with the top plates. Do not over-tighten. The jaws must be able to slide against the jig in order to be aligned.



INSTALLATION and JAW ALIGNMENT PROCEDURES

Ishida Atlas 201 and 202 Bagmakers

- 15 Insert the 10mm Allen wrench into the adjustment recess in the rear of the compartment. Turn counterclockwise to move jaws together. Once the jaws have meshed, maintain pressure while tightening the rear jaw on both sides using a 6mm Allen wrench.


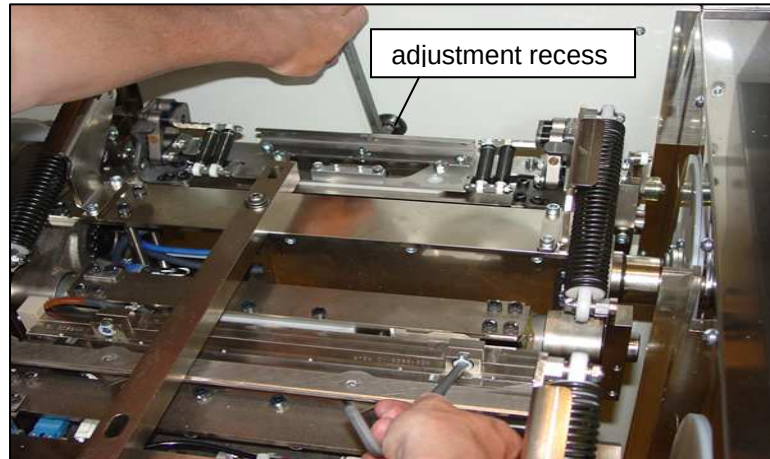


- 16 Use an inspection mirror to check that the jaws are meshed tightly.



- 17 Check the opposite side to confirm proper alignment.


Click the photo below to view the video.

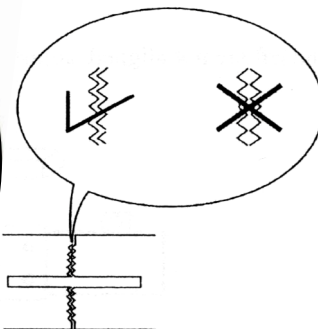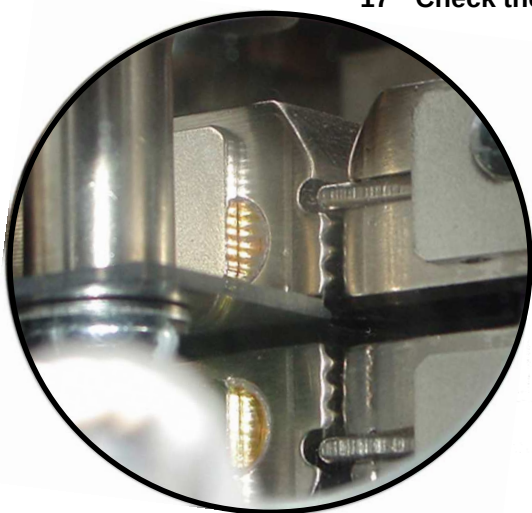


INSTALLATION and JAW ALIGNMENT PROCEDURES

Ishida Atlas 201 and 202 Bagmakers



- 18 Additional alignment may be required for left and right adjustment. If so, remove the ten 5mm Allen bolts from the top plate.**

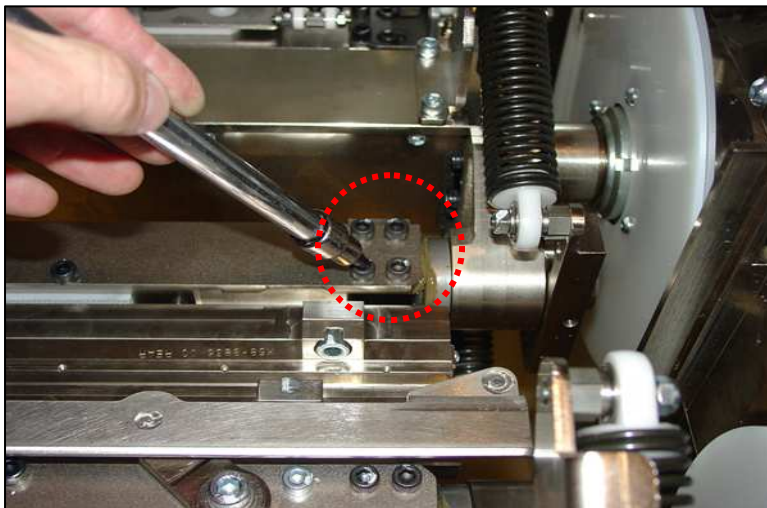

- 19 Remove the top plate and set it aside. (keep the jig in place)**

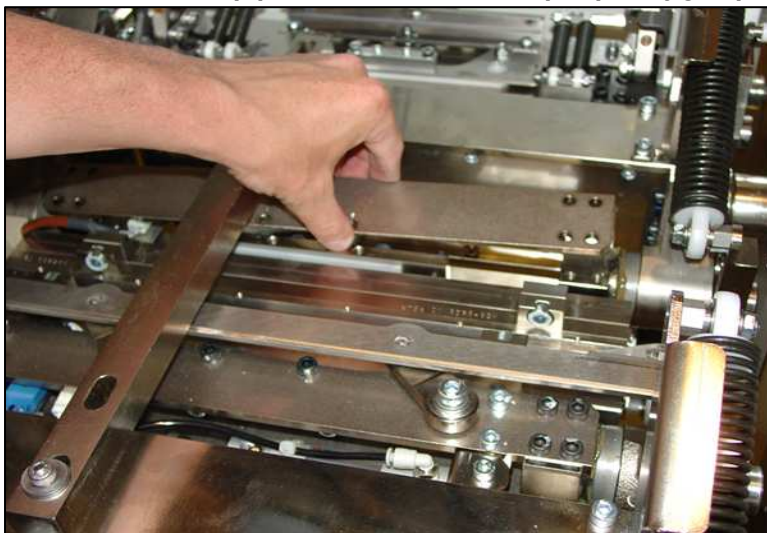


- 20 Locate the four adjustment set screws.**

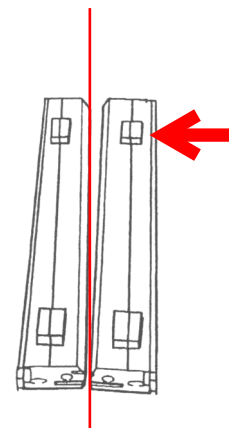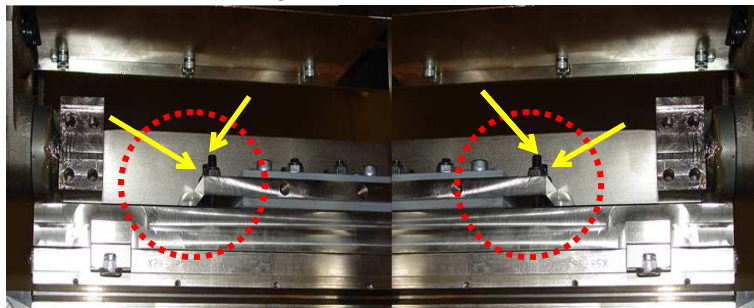




INSTALLATION and JAW ALIGNMENT PROCEDURES

Ishida Atlas 201 and 202 Bagmakers



- 21 Loosen the 4 lock nuts with a 10mm wrench and then loosen the 4 set screws.

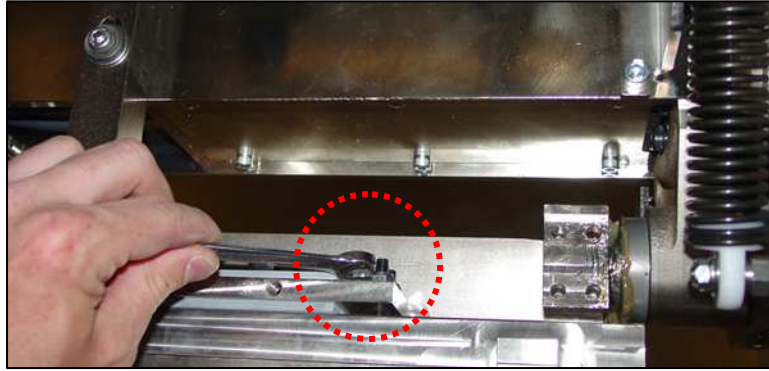

- 22 Adjust the set screw using a 3mm Allen wrench. (Leave the jig on while adjusting.) When moving the set screws clockwise, the jaw face will move forward. By moving the set screws counterclockwise, the jaw face will move backward. *example: If the right side of the jaw face is brought forward than the left may need to be moved backward. Once again, insert the 10mm Allen wrench into the adjustment recess and apply pressure counterclockwise. Check both sides of the jaw with the mirror.*

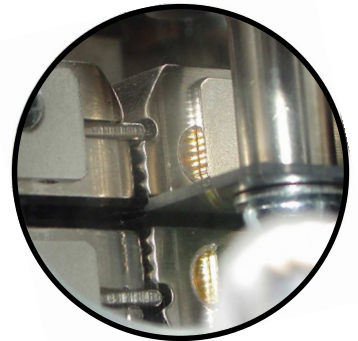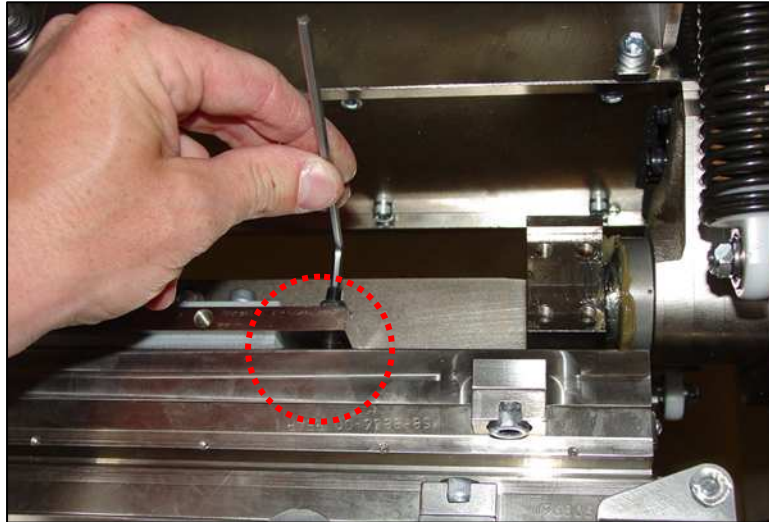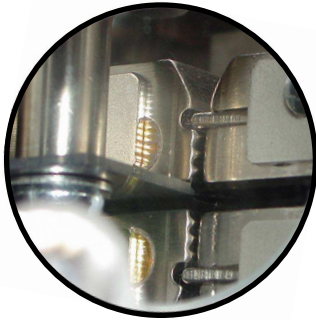



- 23 To adjust the jaw face top and bottom, loosen the three 6mm black bolts. Note: These three bolts are only found on the drive side of the Atlas.

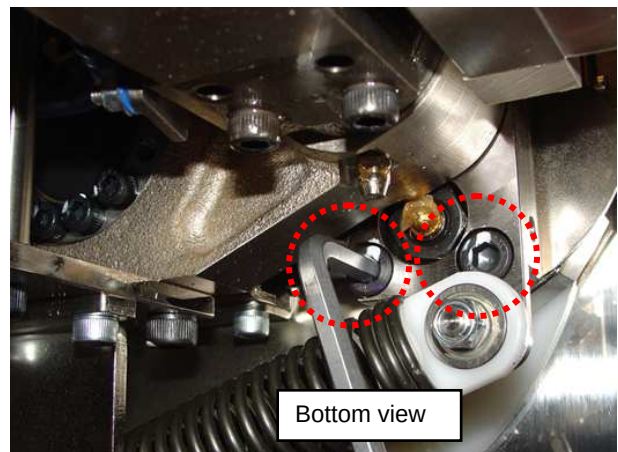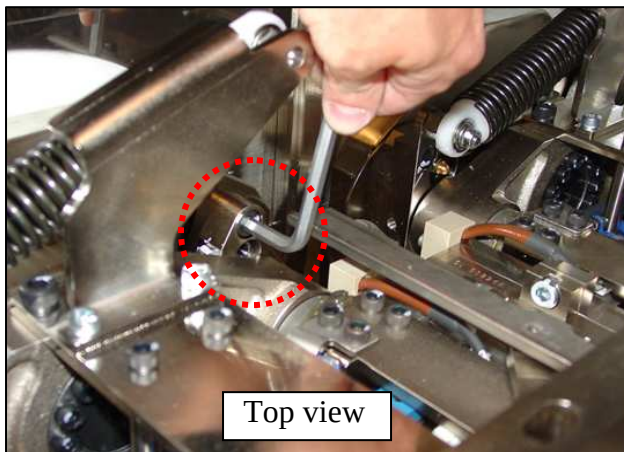


INSTALLATION and JAW ALIGNMENT PROCEDURES

Ishida Atlas 201 and 202 Bagmakers

24 Use a 10mm open-end wrench to loosen the lock nut.

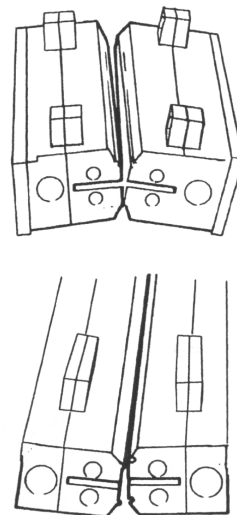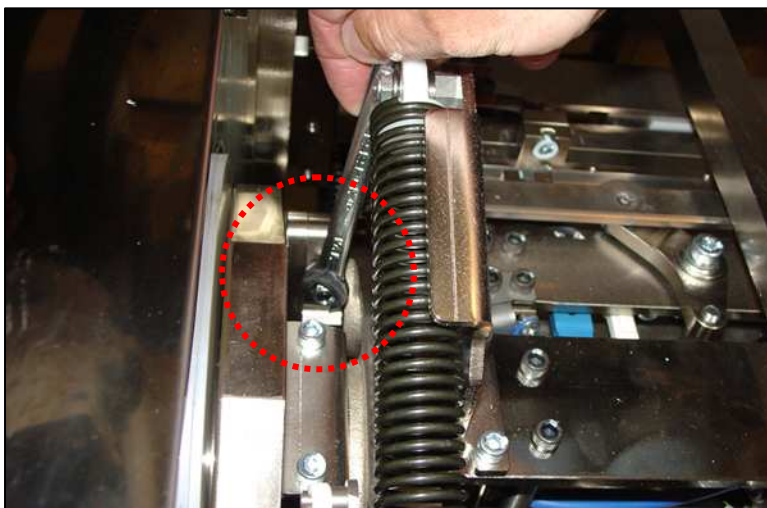

25 Use a 3mm Allen wrench to adjust the set screw.
When the set screw is turned counterclockwise, the jaw face is rotated downward.
When the set screw is turned clockwise, the jaw face is rotated upward.

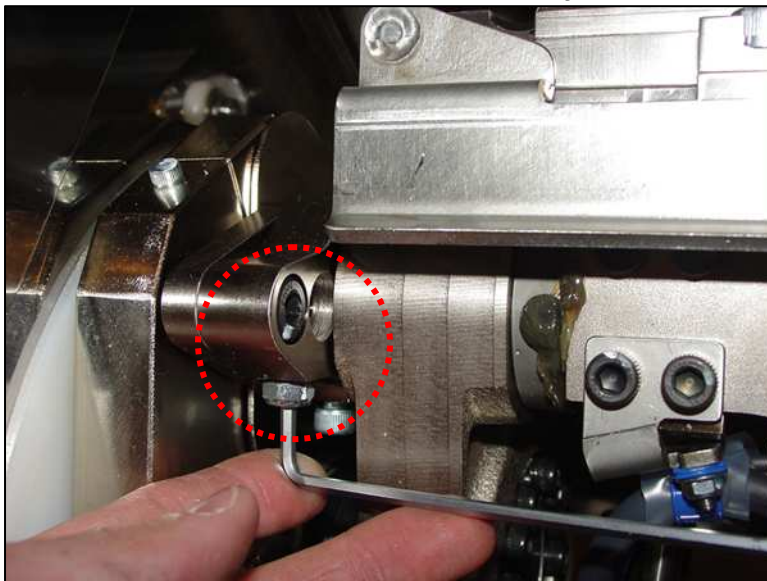

26 Verify correct jaw position has been obtained. When all nuts and bolts have been tightened, attach the previously removed components, tighten the jaw rotation motor cable, and make test bags to complete the procedure.

