



Technical Publication PS09002

Turning the Auto Calc Feature to OFF, and Changing PRESET Values on the TSC-RS

This publication describes how to turn off/on the automatic height adjustment feature to the Ishida TSC-RS inspector incline conveyor. Turning the auto height adjustment feature OFF is used for non-standard installations such as:

- *angled inspectors,*
- *different bagmaker/weigher stack up heights,*
- *Polaris bagmakers, etc.*

Note: The off/on feature is a global parameter. All preset programs are affected. This also means that each preset needs to have the new height value entered and saved when the Auto Calc feature is turned off.

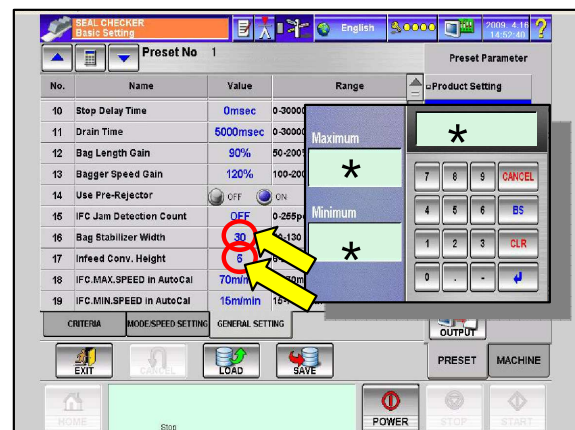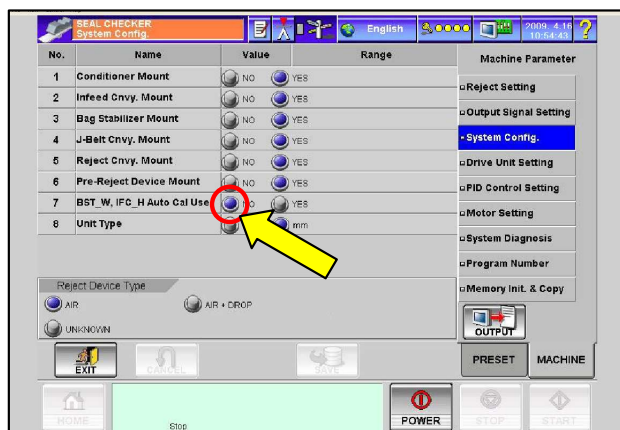


Date: 04.16.09
Version 1

Packaging Service Dept.
Heat and Control, inc,
187 West Airport Rd
Lititz, PA 17543 USA
Phone: 800.648.5313
Fax: 717.519.5260


Corporate Headquarters:
Heat and Control, inc,
21121 Cabot Blvd
Hayward, CA 94545 USA
Phone: 800.227.5980
www.heatandcontrol.com

Turning the *Auto Calc* Feature to *OFF* on the TSC-RS

1. Turn the RCU to ON. (The Preset No 1 page appears.)

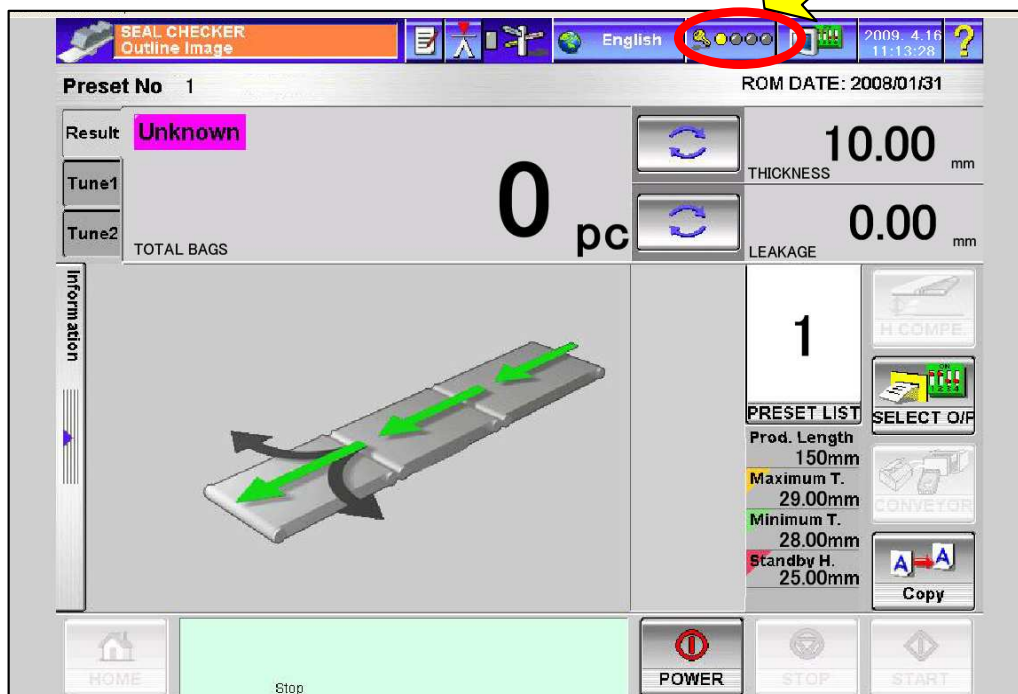


2. Touch the Operator Level key. (The Operator Level roll-down menu appears.)

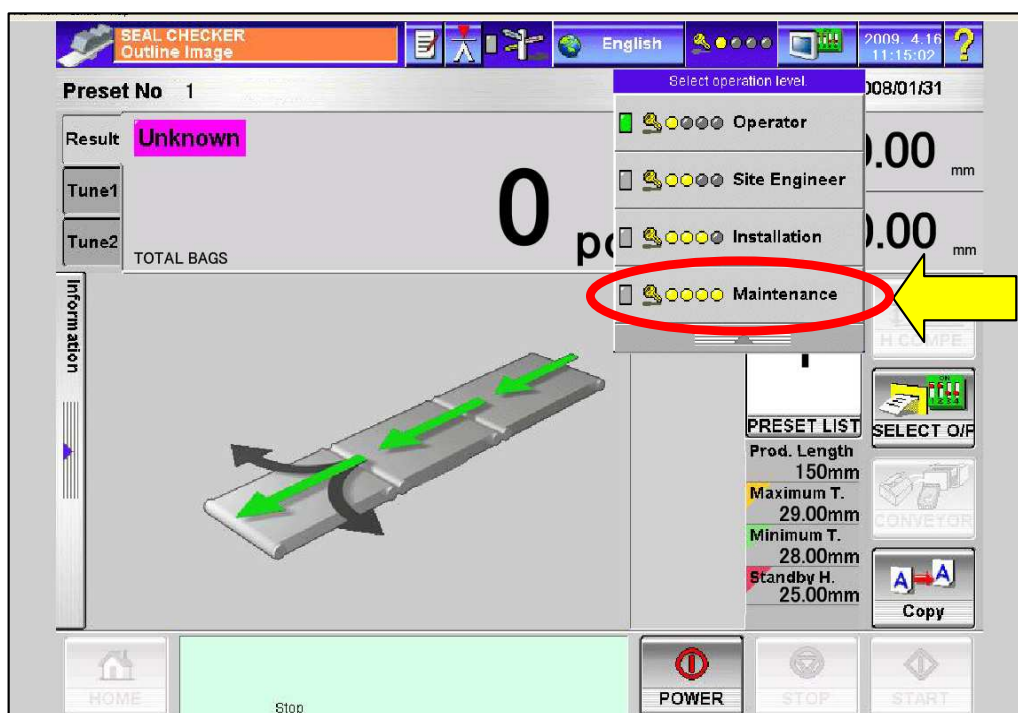


3. Touch the Maintenance level key. (The Typewriter screen appears.)

Turning the *Auto Calc* Feature to **OFF** on the TSC-RS

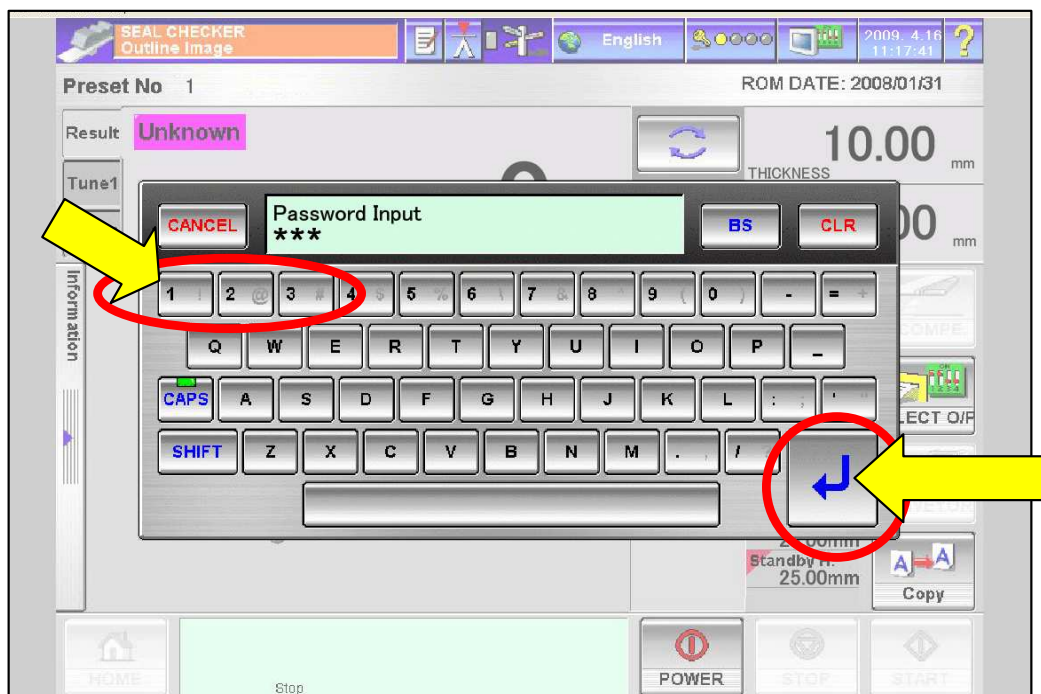


4. Enter the Maintenance Password: (default is 123) and then touch the blue Enter arrow. The Outline Image screen appears and the *Operation Level* key displays 4 yellow dots.

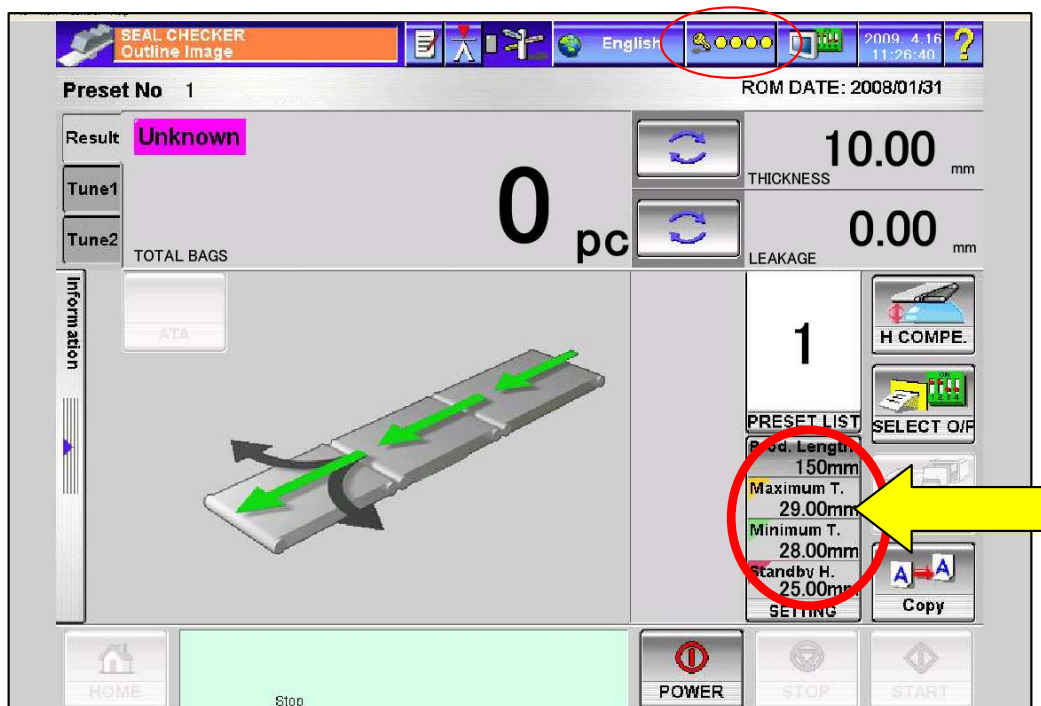


5. Touch any item from the PRESET LIST. The *Product Setting* screen appears.

Turning the *Auto Calc* Feature to *OFF* on the TSC-RS

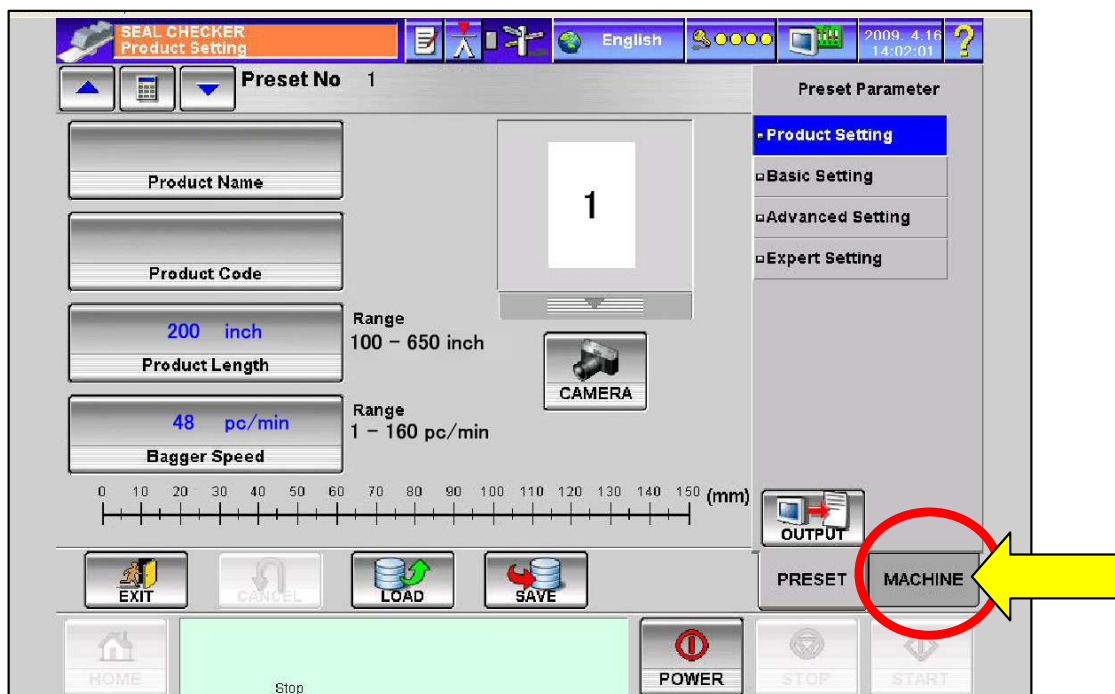


6. Touch the MACHINE tab. The *Reject Setting* screen appears.

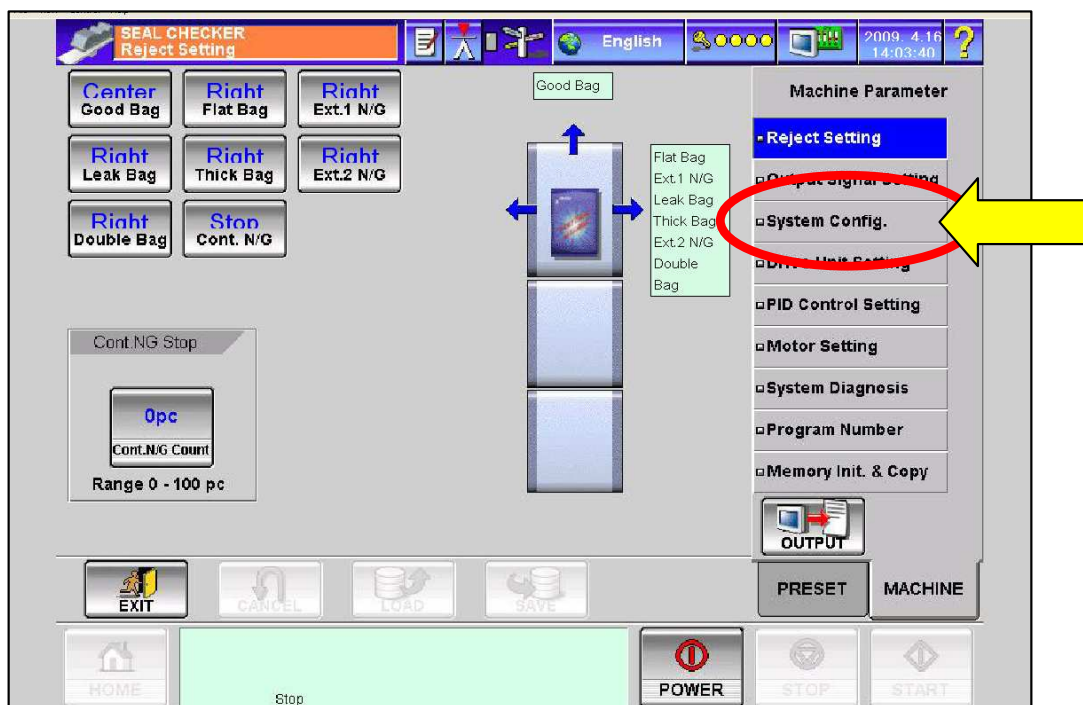


7. Touch the System Config key. The *System Config.* screen appears.

Turning the *Auto Calc* Feature to **OFF** on the TSC-RS and Changing PRESET Values

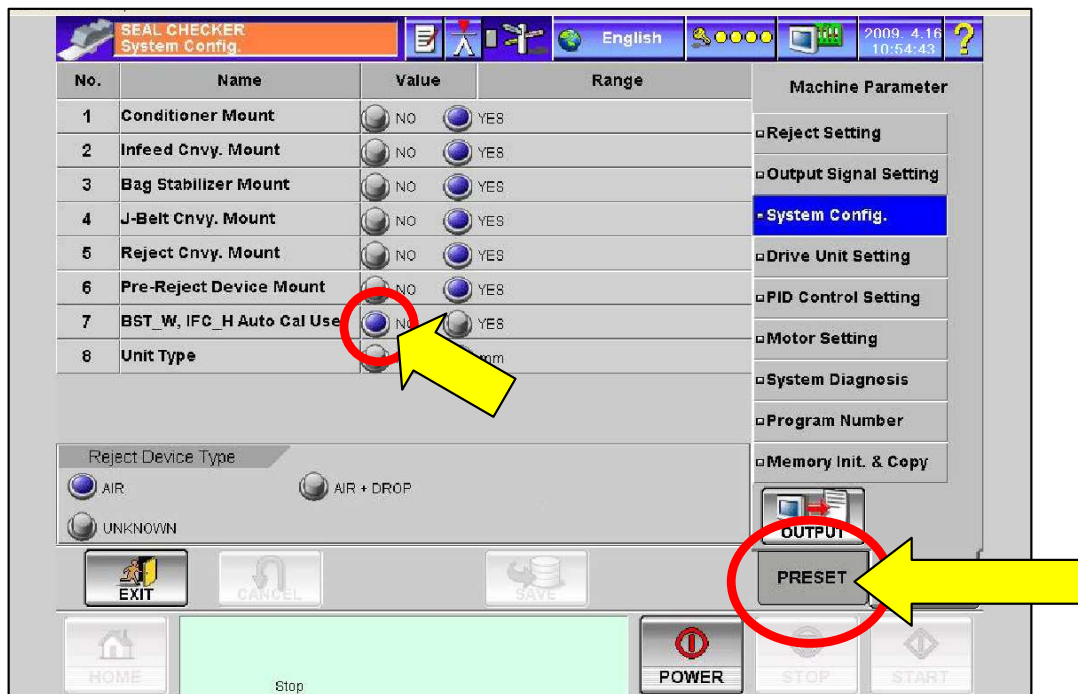


8. Touch the **NO** button on Item # 7 (BST_W, IFC_H Auto Cal Use).
9. Touch the **PRESET** tab. The *Product Setting* screen appears.

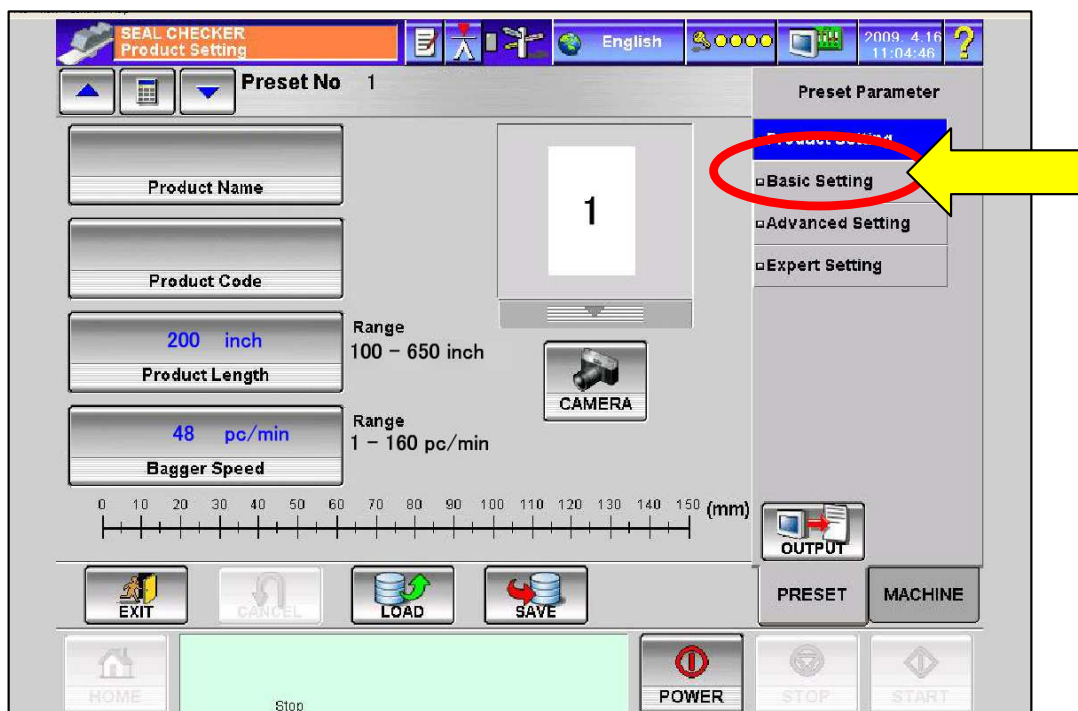


10. Touch the **Basic Setting** key. The *Basic Setting* screen appears.

Turning the *Auto Calc* Feature to *OFF* on the TSC-RS and Changing PRESET Values

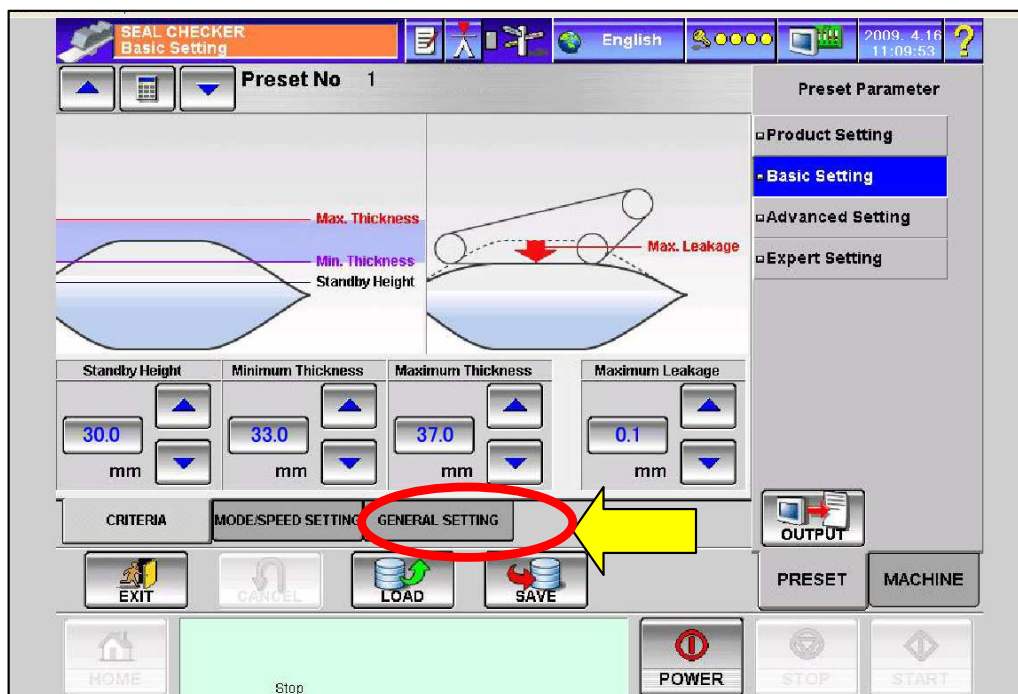


11. Touch the General Setting tab. The Preset No 1 menu appears with blue scroll bar.

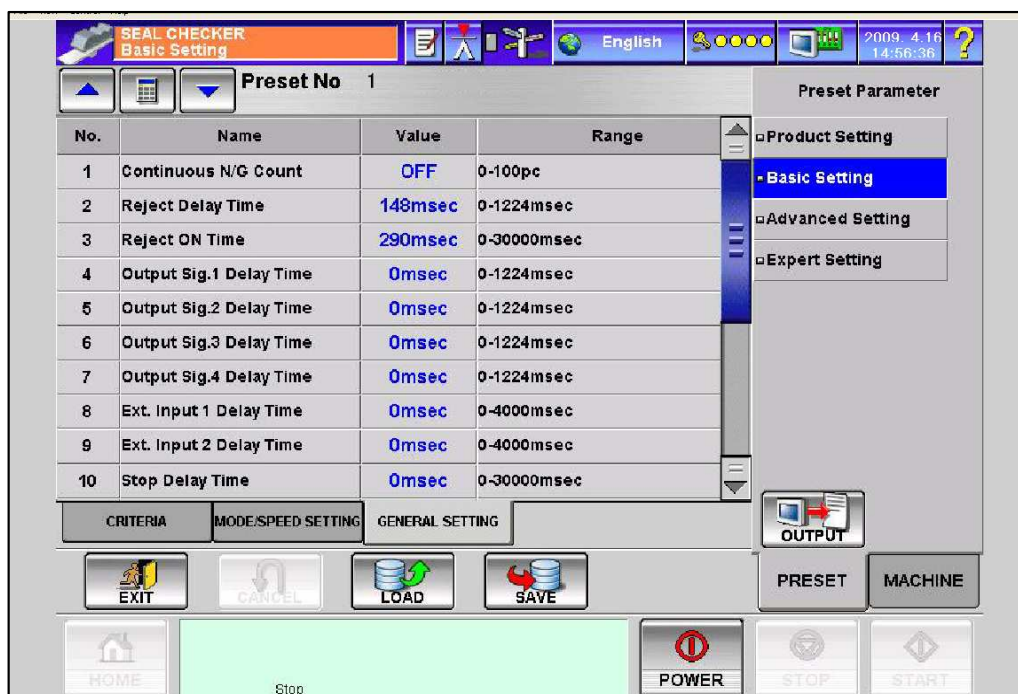


12. Scroll to the bottom of the menu and locate items 16 and 17.

Turning the *Auto Calc* Feature to *OFF* on the TSC-RS and Changing PRESET Values

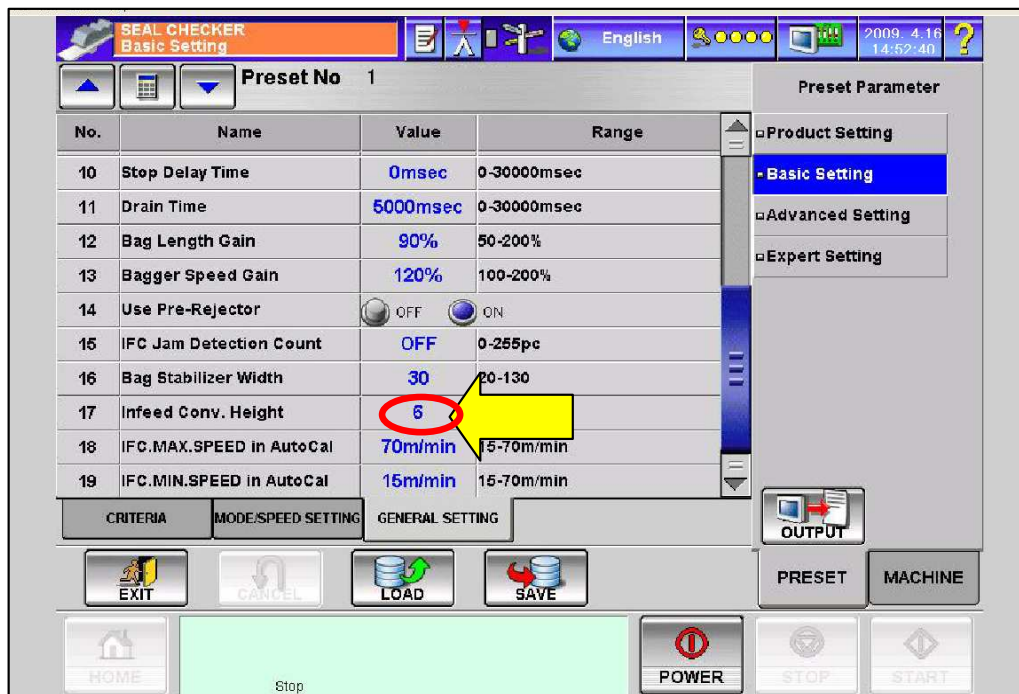


13. Touch the Values in blue print that need to be changed. The Number keypad appears.

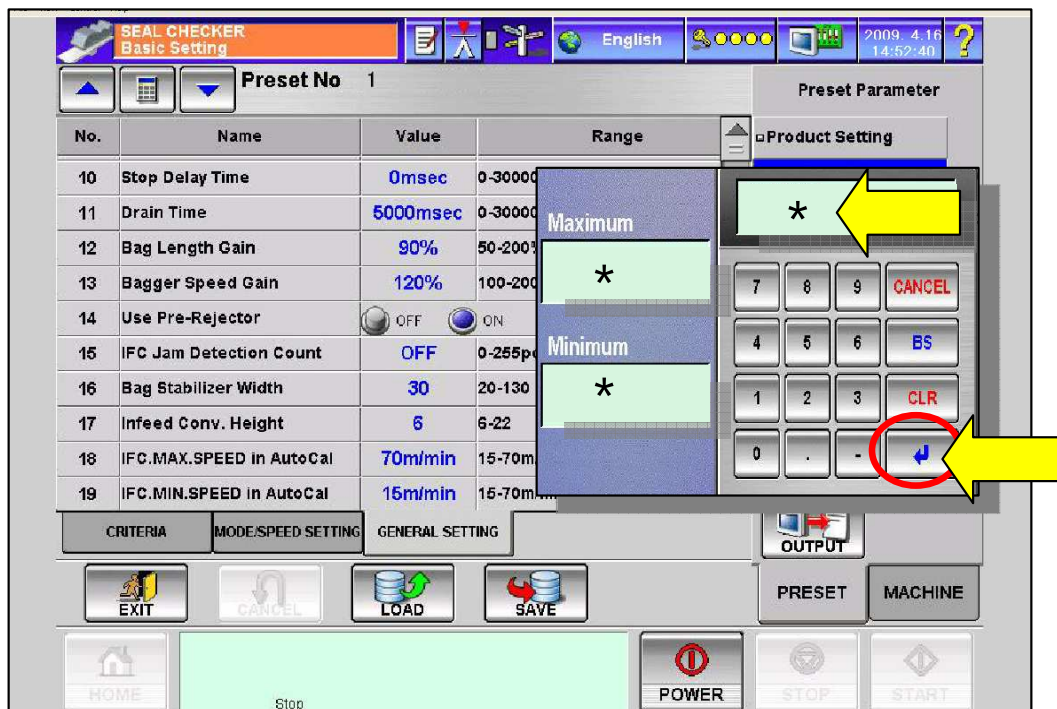

14. Enter the new Value and touch the blue arrow to accept the change.

Turning the *Auto Calc* Feature to *OFF* on the TSC-RS

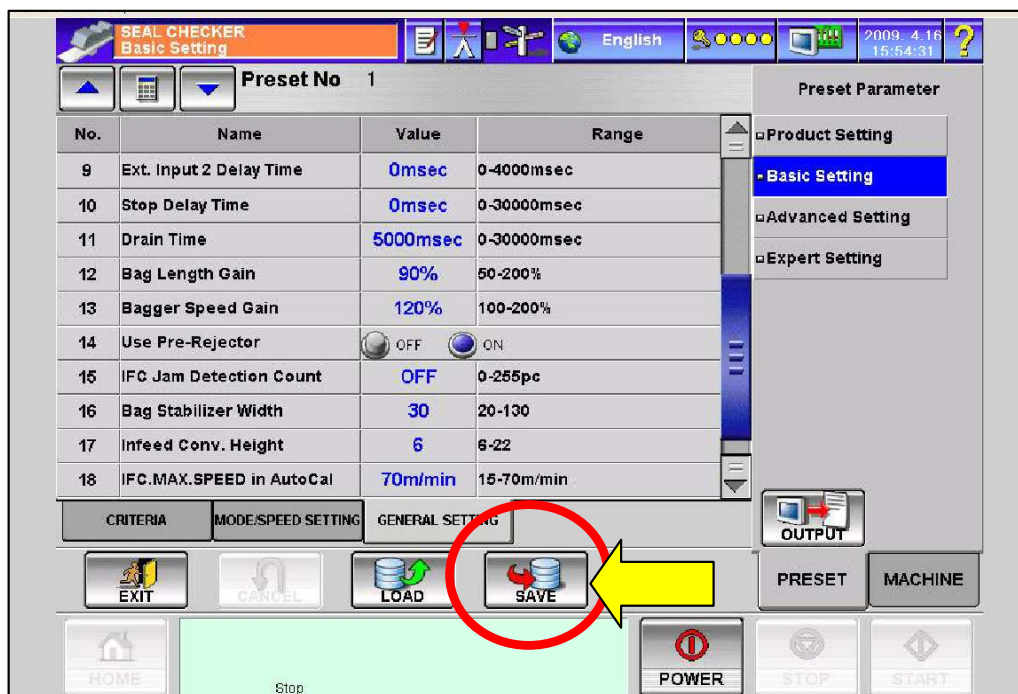

15. Touch the SAVE key to accept all changes and the EXIT key to return normal operation.