

Maintenance

The SB-2 HD Industrial Case Taping System will provide many hours of maintenance free operation. There are a few items that may require attention from time to time.

Rollers

Make sure rollers stay clean and grease free. If you should have to clean the rollers simply wipe them down with a clean lint free cloth. If a more thorough cleaning is necessary wipe the rollers down with a mild detergent and water and let dry. **Never use harsh or abrasive cleaners or chemical agents when cleaning the rollers.**

Cutting Knives

Occasionally inspect the cutting knives to ensure they are clean and free of adhesive residue. Make sure the cutting knife is sharp by inspecting cuts in the tape. Cuts should be straight and neat. If the quality of cuts is eroding, the knife blade is dull and should be replaced.

Changing Knife Blades — Refer to Tape Head User Guide

Turn off and unplug the taper before inspecting or changing the knife blades. It is not necessary to remove either tape head to change the blade. Refer to the Tape Head User Guide provided with the tape head for instructions for changing the knife blades.


CAUTION! Always be aware of the cutting edges while replacing the knife blades. Handle the knife blades carefully.

Changing the Drive Belts


Turn off and unplug the taper.

Remove the eight (8) drive belt cover plate mounting screws and the idler pulley tracking bolt.

Lift the drive belt cover plate off the drive belt assembly.

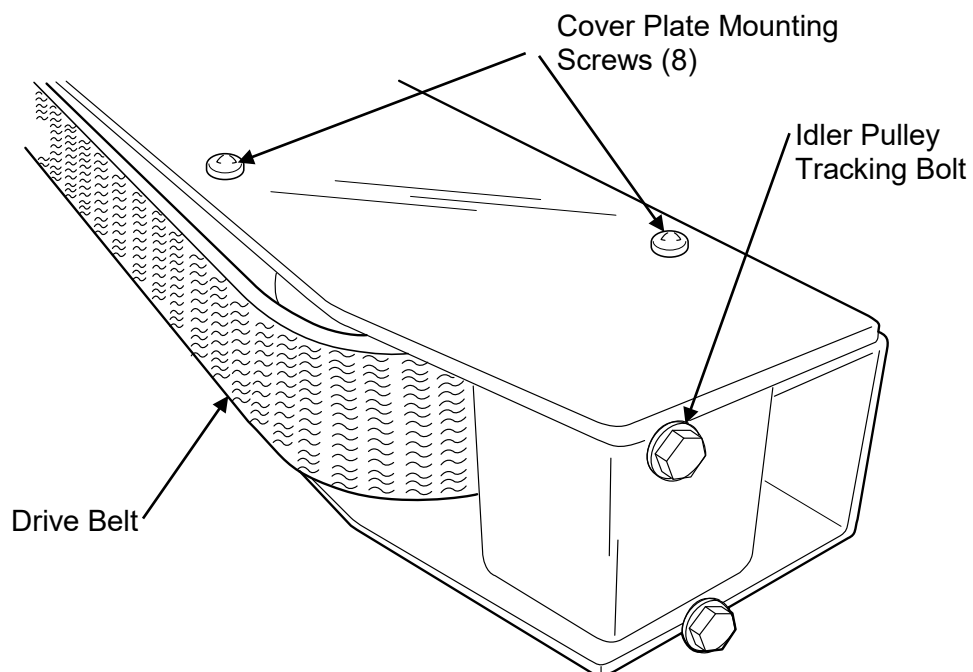

Loosen the idler pulley locking nut located under the idler pulley

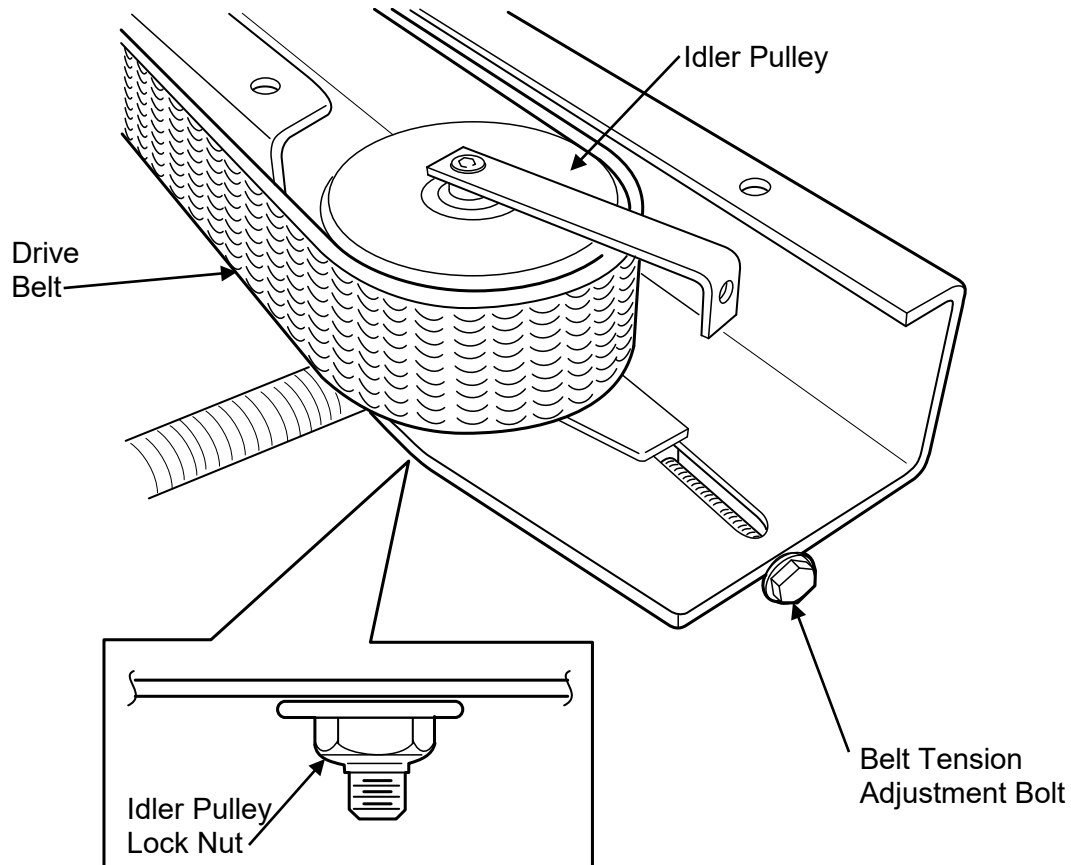

Use the belt tension adjustment bolt to loosen the drive belt enough to remove it from the drive and idler pulleys.

Remove the old belt from around the drive and idler pulleys.

Place a new belt around both drive and idler pulleys.

Use the belt drive tension bolt to tight the new belt.

Retighten the idler pulley lock nut.

Replace the drive belt cover tracking arm bolt.

Plug in and turn on the SB-2 HD Case Taper to resume taping.