


Problem	Cause	Solution
Asynchronous Gear-motors		
Unusual running noises or vibrations.	Oil level too low.	Check oil level, adjust as needed.
	Bearing damage.	Replace the bearing if damaged.
	Gearwheel damage.	Replace the gearwheel if damaged.
Oil escaping from the gear unit or motor.	Defective seal.	Replace defective seals.
Oil escaping from pressure vent.	Incorrect oil level.	Check oil level, adjust as needed.
	Incorrect oil type or oil contaminated.	Change the oil.
	Unfavourable operating conditions.	Control operating conditions or install optional oil expansion tank.
Gear-head becomes too hot.	Unfavourable operating conditions.	Control operating conditions.
	Gear unit damaged.	Replace or repair damaged units.
Shock or vibrations when switching on.	Defective motor coupling.	Replace elastomer gear rim.
	Loose gear unit mounting.	Tighten mounting hardware.
	Defective vibration isolator.	Replace defective vibration isolator.
Output shaft does not rotate although the motor is running.	Fracture in gear unit.	Replace or repair damaged units.
	Defective motor coupling.	Replace damaged coupling.
	Shrink disc slippage.	Replace or repair damaged units.

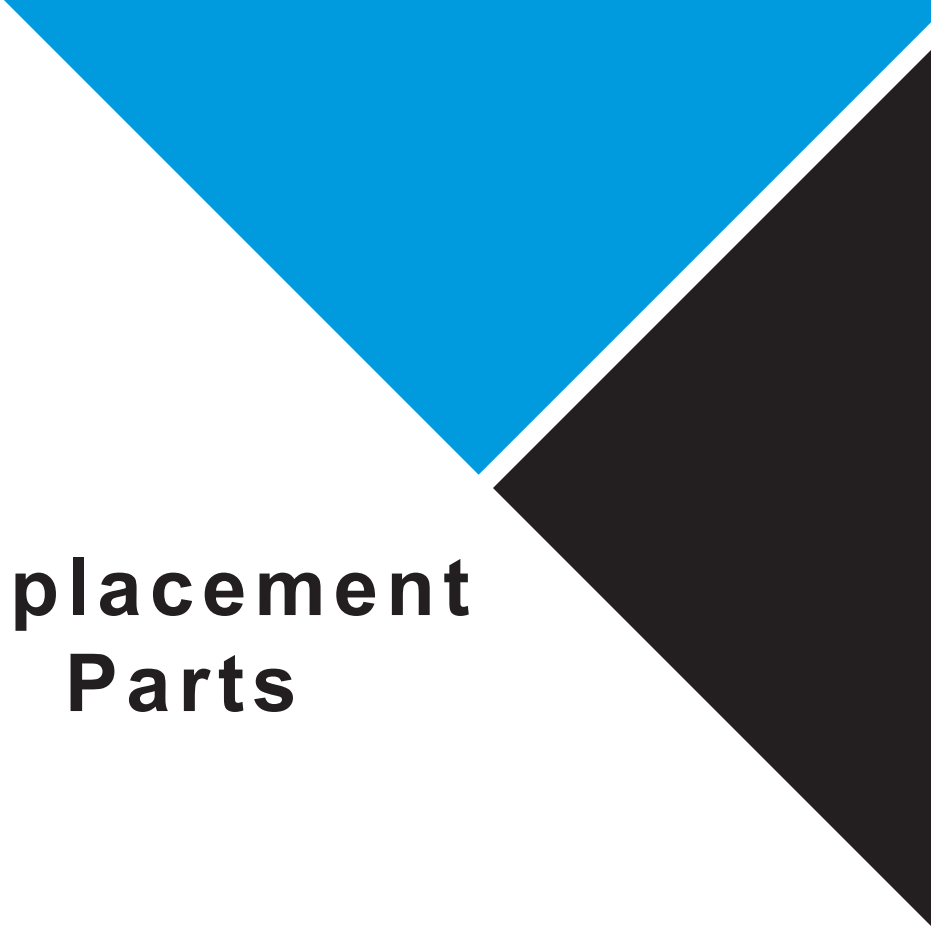

Replacement Parts

Replacement Parts

The recommended spare parts list is provided below. The part number of each spare part is listed and the corresponding assembly reference is displayed adjacent to each recommended spare part. All machine parts are catalogued in the *Mechanical Assembly Drawing Set*, while all the electrical parts are identified by their device number in the *Electrical Diagrams*; each of these are provided under separate cover.

Always provide the job number or serial number when ordering parts.

Note: part numbers may be displayed more than once. If a part number is marked as a spare it will show up for every assembly where it is used.

For your convenience the Radio-telephony Spelling Alphabet is reproduced below.

NOTICE

Please not that on multiple page drawings, the table will be located *ONLY* on the lead page, subsequent pages will have ballooned call outs, but you will have to reference the first page to find the part in the table.

NOTICE

Belts for BluePrint Automation machines are custom manufactured for each machine and application. For this reason BluePrint Automation is unable to keep any belts in stock. Standard lead time for all belts is 7 to 10 working days.

ICAO/ITU-R Radio-telephony Spelling Alphabet			
Alphabet		Number + Punctuation	
Character	Telephony	Character	Telephony
A	Alfa	1	Wun
B	Bravo	2	Too
C	Charlie	3	Tree
D	Delta	4	Fower
E	Echo	5	Fife
F	Foxtrot	6	Six
G	Golf	7	Seven
H	Hotel	8	Eight
I	India	9	Niner
J	Juliette	0	Zero
K	Kilo	Hundred	Hundred
L	Lima	Thousand	Thousand
M	Mike	. (Decimal point)	Decimal
N	November	-	Dash
O	Oscar	. (Period)	Full Stop
P	Papa	,	Comma
Q	Quebec	/	Fraction bar
R	Romeo		
S	Sierra		
T	Tango		
U	Uniform		
V	Victor		
W	Whiskey		
X	X-ray		
Y	Yankee		
Z	Zulu		

Recommended Spare Parts List

Part Number	Part Description	Assembly Where Used	Assembly Description	Qty	UoM
100-455	BEARING, 3/4 BORE	2406-089 2143-991-02	IN-FEED CONV. 2'-11", SS EXIT CONVEYOR (7'-0")	2	EA
100-528	BUSHING 1108 1 DIAMETER BORE	2143-989 2420-190	COUNT BELT ASSEMBLY COLLATOR	1	EA
101-572	BELT TIMING 240H150	2420-190	COLLATOR	1	EA
102-130	BEARING, FLANGE, GRFT204-12	2420-190 2143-989	COLLATOR COUNT BELT ASSEMBLY	2	EA
1028-554-02	BELT AP260 300 mm x 3300 mm	2143-991-02	EXIT CONVEYOR (7'-0")	1	EA
1028-554-32	BELT 2AR36-0BG-RT 300 mm x 1945 mm	2406-089	IN-FEED CONV. 2'-11", SS	1	EA
102-883	BUSHING 1108 3/4 DIAMETER BORE	2420-190	COLLATOR	1	EA
104-489	BELT, TIMING 300H150 1.5" x 30"	2420-190	COLLATOR	1	EA
104-494	NORD MOTOR SK2SM63AZB-71L/4 72 RPM 0.50 hp / 25:1 / 1.250" ALTERNATE HOLLOW BORE / M2 / TB @ 4 / CE @ II / SPECIAL FLANGE, P/N 160614040 / NON-PAINTED / FIXING ELEMENT INCLUDED. BUILD WITH IEC CONDUIT BOX WITH 1/2" NPT ADAPTER	2420-190	COLLATOR	1	EA
1319-140	MOTOR, NORD, SP	2420-190	COLLATOR	1	EA
1319-141	MOTOR, NORD, LP	2420-190	COLLATOR	1	EA
104-563	HINGE- 095009	2143-995	COLLATOR GUARDING	2	EA
106-390	BEARING, RADIAL 62032RS 40 mm OD	2143-989	COUNT BELT ASSEMBLY	2	EA
107-270	SPRING/SHOCK, GAS 9416K19 20 lb FORCE, 8.27" S	2143-995	COLLATOR GUARDING	2	EA
109-223	CONVEYOR BELT 60 mm WIDE x 1110 mm LONG, (-0/+1/8 on width) LACED WITH UNIBAR #36 SHORT POINT STAINLESS, (2)K-6 DEEP NOTCHED CLEAR HARD PU GUIDES FLUSH ON EACH EDGE ON BOTTOM OF BELT 2R5-0G	2143-989	COUNT BELT ASSEMBLY	1	EA

Replacement Parts

Part Number	Part Description	Assembly Where Used	Assembly Description	Qty	UoM
106-687	PHOTOELECTRIC SENSOR 42CAD1MPAED4 DIFFUSE 18 mm	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	1	EA
107-429	PHOTO 42EFP2MPBF4 REFLECTIVE RIGHTSIGHT	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	1	EA
109-882	REFLECTOR 2X2 SQUARE	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	1	EA
114-032	RELAY 700HLT1Z24 TERMINAL BLOC	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	1	EA
114-053	Ethernet Switch Unmanaged NTro	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	1	EA
116-008	AB 440N-Z21SS2H SensaGuard Non	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	2	EA
116-009	AB 889D-F8AB-10 SensaGuard Do	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	2	EA
116-454	AB 100S-C30EJ22C 30 A Safety C	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	1	EA
117-162	Mersen GFATQR1, Time Delayed F	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	1	EA
117-166	Mersen GFATQR2, Time Delayed F	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	1	EA
117-171	Mersen GFATQR4, Time Delayed Fuse, 600 V~ 4 A	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	2	EA
117-202	Mersen GFAJT30, J Fuse, Trap T	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	2	EA
117-597	800FM-LMT44 EMERGENCY STOP PUSH-BUTTON ILLUMINATED TWIST TO RELEASE http://literature.rockwellautomation.com/idc/groups/literature/documents/br/800f-br001_en-p.pdf	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	1	EA
117-667	"2080-LC20-20QBB Rockwell Micro820 PLC http://ab.rockwellautomation.com/Programmable-Controllers/Micro820 "	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	1	EA
117-917	AB 440R-S23174 SAFETY RELAY	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	1	EA
117-919	AB 2711R-T4T PANELVIEW 800 4.3	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	1	EA

Part Number	Part Description	Assembly Where Used	Assembly Description	Qty	UoM	Replacement Parts
117-920	SENSOPART FT55RL2H-PSL4 DIFFUSE LASER IP69K	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	1	EA	
170-249	AB 800F-N3W LED MODULE 24 V WHITE	4020-314	Main 120 VAC collator kit with Powerflex 525 VFDs	1	EA	
184-080	HOFFMAN 89134423R FILTER REPLACEMENT HF04 IP54 TYPE 12 FANS & EXHAUST GRILLES	182-826	HOFFMAN HG0400404 EXHAUST GRILLE 4" UL IP54 TYPE 12 RAL 7035 LIGHT GRAY	1	EA	
182-825	HOFFMAN HF0424414 FAN 4" UL TY	182-826	HOFFMAN HG0400404 EXHAUST GRILLE	1	EA	
182-826	HOFFMAN HG0400404 EXHAUST GRILLE	182-826	HOFFMAN HG0400404 EXHAUST GRILLE 4" UL IP54 TYPE 12 RAL 7035 LIGHT GRAY	1	EA	
184-089	AB 140MT-C3E-C16 MPCB 10-16A C	182-826	HOFFMAN HG0400404 EXHAUST GRILLE	1	EA	