


SiLeMI/O

EC4 LiveProfessor Bridge User Guide

Installation, auto-mapping and daily operation

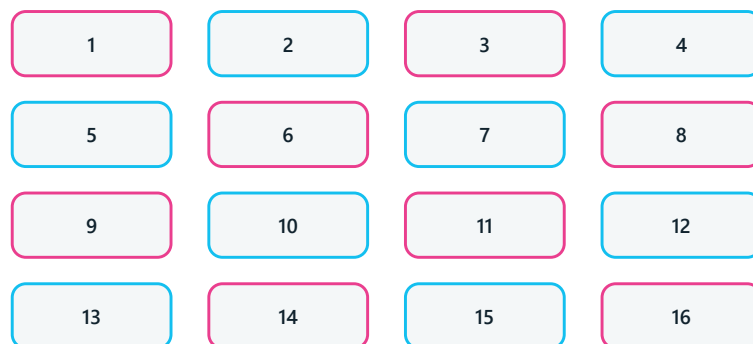

Version 2026.1

Faderfox EC4 - LiveProfessor - Auto-mapping - UniBank / FullBank

By Mamat

-----[]----

Contents

1. Understanding the bridge
2. Installation and first start
3. Installing the LiveProfessor controller
4. Automatic mapping
5. Daily controls
6. Banks, display and precision
7. Learning any EC4 setup/group
8. Tray, log and updates
9. Troubleshooting
10. Limits, backup and support

1. Understanding the bridge

The bridge connects the 16 Faderfox EC4 encoders to parameters of the selected LiveProfessor plugin. It sends gestures over OSC and returns names, values and navigation displays to the EC4.



Companion mode is recommended. **Generic** mode remains available as a fallback when dynamic labels are not required.

Safety principle

Auto-mapping never replaces the selected project. It creates a separate .rack2 copy. Save the current LiveProfessor session before opening that copy.

2. Installation and first start

Requirements: Windows 10 or 11 x64, LiveProfessor with Companion Controller, a Faderfox EC4 and available MIDI ports.

- Run EC4-LiveProfessor-Bridge-Setup-v2026.1.exe.
- Connect the EC4 before opening connection settings.
- In Tools > Connections, select the Faderfox EC4 MIDI input and output.
- Keep 127.0.0.1, LiveProfessor port 8010 and feedback port 8011.
- Choose a dedicated EC4 setup/group, save, then start the bridge.

Expected result

Status changes to Connected and the EC4 briefly displays Connection OK, SiLeMI/O and the By Mamat signature.

3. Installing the LiveProfessor controller

The bridge supplies two neutral files. **UniBank** is recommended for most projects; **FullBank** is intended for plugins that genuinely need more than 16 parameters.

File	Contents	Use
Ec4-UniBank.ctrl2	16 Rotary + 16 buttons	One fast, readable bank
Ec4-FullBank.ctrl2	99 Rotary + 16 buttons	Several banks for large plugins

- In the bridge, choose Tools > UniBank CTRL2 or FullBank CTRL2 and save the file somewhere easy to find.
- In LiveProfessor, open Controllers > Hardware Controllers Setup.
- Use Load from file and select the copied .ctrl2 file.
- Verify 127.0.0.1, input 8010 and feedback 8011.

4. Automatic mapping

The main 2026.1 feature creates a dynamic Controller Map for one plugin or every plugin in the project. Each rotary controls only the selected instance.

- Save the current LiveProfessor project.
- Click Auto-mapping or open Tools > Auto-mapping.
- Choose the .rack2 project, then click Analyze project.
- Select one plugin or All detected plugins.
- Keep UniBank - 16 parameters unless FullBank - 99 parameters is genuinely needed.
- Create the auto-mapped copy under a new name.
- Accept the open-project prompt only after saving the current LiveProfessor project.

No CTRL2 in the source project?

The bridge automatically adds its embedded EC4 template to the copy. The source file is never modified.

AutoMap first reuses active assignments and manual presets, then applies one shared profile to every instance of the same plugin type. Complementary manual functions use remaining free rotaries within the bank capacity; a function already present is not mapped somewhere else. Only a matched push N + rotary N pair may share one parameter so that the push label stays visible before it is pressed.

Completely unknown plugin

The .rack2 file stores parameter numbers and values, not parameter names. Without an existing profile, AutoMap keeps technical order. An Output already placed on rotary 16 stays there; it is not guessed without a reliable name.

If mappings replace one another after manual Learn operations, analyze the project and click **Repair mappings**. The bridge creates a new copy, always keeps active assignments authoritative, restores only missing assignments and synchronizes shared presets. Plugins, settings, snapshots and routing are not changed.

5. Daily controls

Hold Shift to display the shortcut guide on the EC4 before pressing an encoder.

EC4 action	Result
Turn 1-16	Change parameters in the active bank
Shift + push 1 / 2	Previous / next bank
Shift + push 3 / 4	Previous / next View Set
Shift + push 5	Show / hide selected plugin
Shift + push 6 / 10	Previous / next chain
Shift + push 7 / 8	Previous / next plugin
Shift + push 9	Enable / disable selected plugin
Shift + push 11 / 12	Previous / next plugin (duplicate shortcut)
Shift + push 13 / 14	Previous / next Cue
Shift + push 15 / 16	Previous / next global snapshot
Push 1-15 without Shift	GenericButton1 through GenericButton15
Push 16 without Shift	Tap Tempo

6. Banks, display and precision

- A bank contains 16 parameters aligned with the 16 encoders.
- Unmapped encoders remain blank for a clearer display.
- A movement temporarily displays the full name and real value returned by LiveProfessor.
- Value feedback prevents jumps when plugin and controller states differ.
- Responsiveness settings are available under Tools > Connections and refresh.

Recommended setting

Start with the defaults. Reduce delays only while the local network and LiveProfessor remain stable; excessively low values may create unnecessary refresh traffic.

7. Learning any EC4 setup/group

You do not need to keep the original setup CC numbers. Learning stores the 16 rotaries and 16 pushes for the currently displayed setup/group.

- Open the desired EC4 page and click Use current setup/group.
- Click Learn rotaries + push.
- Turn rotaries 1 through 16 slightly, in order.
- Then press pushes 1 through 16 in the same order.
- Wait for the Mapping learned and saved confirmation.

Rotaries must send absolute CC values from 0 to 127 and pushes must send MIDI Notes. Shift+push gestures use a separate SysEx channel and are not part of this learning process.

8. Tray, log and updates

- Minimize places the application in the Windows notification area when available.
- A click opens the window; right-click shows Start, Stop, Restart and Quit.
- Quit really closes the bridge and releases MIDI and OSC ports.
- The log is available under View > Log.
- Update checks can run manually or at startup.

Windows log: %LOCALAPPDATA%\EC4LiveProfessorBridge\bridge.log.

9. Troubleshooting

Symptom	Checks
EC4 disconnected	Close other MIDI applications, reconnect the EC4, refresh and select both ports again.
Port 8011 unavailable	Close the other OSC receiver or choose the same new port pair in LiveProfessor and the bridge.
P001 / P002 instead of names	Check Companion, the selected plugin Controller Map and UDP feedback.
Plugin does not move	Check selection and Only If Selected; regenerate the copy after adding a plugin.
Slow values	Check the local network, then adjust refresh delays gradually.
Push cannot be assigned	Check GenericButton1 through 15 in the CTRL2 and whether the plugin exposes the parameter.

10. Limits, backup and support

- Back up projects and Controller Map presets before significant changes.
- Auto-mapping works on a copy and creates a timestamped backup when the destination exists.
- A plugin added after auto-mapping requires a new generation.
- Use an official LiveProfessor licence, trial or test licence.
- The bridge is not affiliated with or certified by Faderfox or Audiostrom.

Project and downloads

<https://github.com/Mamat79/EC4-LiveProfessor-Bridge>

Report a bug: <https://github.com/Mamat79/EC4-LiveProfessor-Bridge/issues>

Releases: <https://github.com/Mamat79/EC4-LiveProfessor-Bridge/releases>

EC4 LiveProfessor Bridge - SiLeMI/O - By Mamat - -----[]---