



PROFESSIONAL USER GUIDE

StageDesk v2027

Transfer labels and essential settings between audio consoles and software.

One source. One working table. One destination. StageDesk avoids retyping and adapts each transfer to the selected model.

Retrieve

Choose a displayed source mode, then open the offered project file and state.

Convert

Edit labels, colours, icons, and essential settings in one common grid.

Transfer

Use the mode and target state actually offered by the connector.

Windows x64 - macOS - Français and English - v2027 edition

SiLeMI/O by Mamat
----□--



Interactive contents

Select a chapter to open it. PDF viewer bookmarks use the same structure, and every page links back to these contents.

1. StageDesk in one minute	3
2. One project, several tools	4
3. Console networking: direct connection	5
4. Console networking: support and limits	6
5. X32/M32 scenes and network backups	7
6. Start in StageDesk, continue in StageFlow	8
7. Save, copy and follow changes	9
8. Create and fill in the StageDesk Excel template	10
9. StageFlow workbook: common values and groups	11
10. Prepare a reliable transfer	12
11. Retrieve the source	13
12. Work in the universal table	14
13. Choose the target	15
14. Scenes, snapshots, and cues	16
15. Adapt data to the target	17
16. Backups and non-destructive writing	18
17. Windows compatibility: 1/3	19
18. Windows compatibility: 2/3	20
19. Windows compatibility: 3/3	21
20. Conversion recipes	22
21. Work faster every day	23
22. Delivery checklist	24
23. Updates, help, and licensing	25
24. Fast reference	26
25. Guide and help	27



1. StageDesk in one minute

StageDesk centralizes labels and essential audio-project settings in a universal table, then adapts and transfers them to the selected console or software.

1 Retrieve Choose the source, model, then the source mode and state actually offered.	2 Edit Review the universal table and adjust only the data that should change.	3 Send Choose the target, then one of the modes actually shown for that profile and one of its offered target states.
No retyping Names, colours, icons, and useful settings follow your preparation.	Source preserved Import keeps the source file intact. Writes use the output you choose.	Right-sized The table follows the imported project and projection respects target capacity.

StageDesk transfers channel data and essential settings. It does not replace complete artistic mix preparation or validation in the target's official editor.

Working data

- Channel labels, colours, and icons when the format exposes them.
- DCA assignments, high-pass filter, mute, and fader level when the target accepts them.
- Per-channel inclusion or exclusion, with optional per-parameter detail.
- Scene, snapshot, cue, or Current state according to the system's terminology.



2. One project, several tools

StageDesk manages two complete projects: a standalone StageDesk .smtshow project and a Local StageFlow .stageflow project. Both can be created, opened, and saved directly in StageDesk; StageFlow remains optional.

StageFlow Patch + stage plan	<-->	.stageflow project One Local StageFlow project Common UUIDs and patch Separate app domains
StageDesk Console preparation	<-->	
Dante Config Editor Dante network	<-->	
StageMark Placement + projection	<-->	
StageMon Two live monitors	<-->	
AutoCAD Technical plan	<-->	

- New/Open a StageDesk project uses a fully standalone .smtshow file.
- New/Open a local StageFlow project uses a .stageflow folder; Save updates the common patch and the smt/smt.json domain.
- Existing .smt files remain importable.
- The portable StageFlow V3 workbook imports and exports both ways with stable identities, common and group-specific values, and exclusions.
- StageDesk preserves other applications' domains when saving the local project and shares patch identities.
- The status dot and text clearly distinguish Standalone, Local StageFlow project, StageFlow LIVE session available or synchronized, connection lost, and conflict.
- StageFlow connection opens the connection center. Select the project and host discovered on the local network (or enter the manual address), then enter the six-digit code. Spaces and hyphens are accepted.
- A joined StageFlow LIVE session immediately merges every valid external patch into the table without recalling the snapshot. The following preference applies only to a Local StageFlow project.
- Label alerts are on by default. The orange banner shows the previous and current values. Acknowledge one alert or those displayed on this computer. A host pause stays visible without stopping synchronization; resuming does not replay suspended notifications.
- Without a valid StageFlow LIVE session, StageDesk remains fully manual; Reload applies a Local StageFlow project change only on request when its following is disabled.
- Opening a project never starts a console, network, or DAW connection; stored paths must be explicitly selected again.

StageFlow is free and optional. StageDesk detects an existing LIVE session but never creates it and never sends hardware commands.



3. Console networking: direct connection

StageDesk communicates directly with the console on the local network, without DMT or Mixing Station. Limits depend on the family. No physical console has been validated for this release: test off-air before any production use.

- Choose the family, exact model, then Network. Use the console control IP, not its Dante card IP. The computer and console must be reachable on that network.
- Simulation opens no socket. Turn it off for a real connection. Discover opens the interface selector; scanning only begins after Detect on this network. You can also enter an IP/host.
- Detection checks the selected family and port on at most the local /24 block (253 other hosts). Use manual IP for another block, VLAN or /31-/32 interface. It does not scan the entire corporate network.
- Test checks a protocol response. Read Current imports inputs into the table. Opening a project, changing language or choosing a model never starts a connection.
- For the destination, review Include and the checkboxes under Details, then Send. StageDesk reads Current, prepares differences and backs up the readable fields as .smt with SHA-256 before final confirmation.
- Sending changes Current, not a saved scene. Review the report and console. Stop cancels subsequent commands; it does not undo earlier ones. On a small screen, scroll or fold the panels to enlarge the table.

Keep a complete vendor show before any write. The StageDesk backup contains only fields actually read, not routing, gains, phantom power, processing or scenes. It is not an automatic rollback. Isolate the control network: these protocols are neither encrypted nor authenticated.



4. Console networking: support and limits

Family	Transport	Network parameters
Yamaha DM7 / RIVAGE PM	TCP 49280	Labels, colours, icons, DCA, HPF on/frequency, mute, fader.
Yamaha CL / QL	TCP 49280	Labels, colours, icons, DCA, mute, fader. No HPF.
Yamaha TF / DM3	TCP 49280	Labels, colours, icons, mute, fader. No DCA/HPF. 8 ASCII-character labels.
A&H dLive / Avantis	TCP 51325	Read: labels/colours. Write: labels/colours with readback; DCA/mute/fader sent without readback; HPF on dLive only, without readback.
Behringer X32 / Midas M32	UDP 10023	32 inputs: labels, colours, icons, DCA, HPF, mute, fader, with readback. 12 ASCII-character labels.
Behringer WING	UDP 2223	40 channels + 8 aux: labels, colours, icons, mute, fader, with readback. 16 ASCII-character labels. No DCA/HPF.

The selected model limits processed inputs. Network capacity remains 128 for dLive and 64 for Avantis, including dPack; no unvalidated extension is promised. A reported model is not authentication; A&H only verifies protocol replies for the selected profile.

WING and Allen & Heath specifics

- WING: when appearance is linked to the source (clink), changing a label/colour/icon detaches that cosmetic link; visible unchecked fields are preserved. Routing is unchanged.
- dLive/Avantis: the MIDI channel must match the console. Unread fields are not invented and remain unchecked after import. Faders use protocol MIDI steps; sent without readback does not mean verified.

Other families keep their file workflows. SQ/Qu do not expose labels here through the documented MIDI protocol; StageDesk does not treat an open port or an offline editor as proof of network support.



5. X32/M32 scenes and network backups

Import a scene

- With X32/M32 Network as source, click Import scene. Slots 000-099 are listed without recall. Select an occupied scene.
- StageDesk backs up readable Current parameters, then requests a separate confirmation: recall can change the entire mix, routing, gains, effects, levels and mutes. First keep a complete vendor show and work off-air.
- After the recall acknowledgement, StageDesk reads Current. The console stays on the recalled state. Safes apply: some earlier values may remain. Reading is not atomic: no other operator or software should change the console during import.

Store Current

- First send checked changes and review them. Store Current saves the whole console state, not only the StageDesk table.
- Choose an empty slot and a 1-16 character ASCII name. StageDesk rechecks that it is empty, requests confirmation, sends one command and reads back its name/state.
- Occupied slots are refused. The protocol provides no atomic reservation: no other operator or software should store into the same slot during the operation. A lost reply never triggers automatic recall/store retry: check the console.

Find the backup

The confirmation gives the exact path. Windows: %LOCALAPPDATA%/SMT/NetworkBackups. macOS: ~/Library/Application Support/SMT/NetworkBackups. The .smt reopens in Simulation with values actually read; the .sha256 file checks integrity. This is neither a complete show nor an automatic rollback.

For Yamaha, dLive, Avantis and WING, this version works on Current over the network. Use the native project workflow for saved scenes/snapshots, or store Current on the console after review.



6. Start in StageDesk, continue in StageFlow

StageFlow does not have to be your starting point. To exchange a complete production, use the local .stageflow project: it is a folder, not a single file.

- From File, create a local StageFlow project. Name the production, then enter or import the channels in StageDesk.
- Prepare GENERAL and the group patches. Check entry names, channel numbers, microphones, groups and notes. A pair here means a patch line; two L/R lines remain two separate lines.
- Save into a new folder such as Festival.stageflow. It contains project.json, patch.json and StageDesk settings in smt/smt.json.
- In StageFlow, open that folder or its project.json as offered by the picker. Check GENERAL, each group, names and microphones before continuing.
- Save in StageFlow, then reopen the same local project in StageDesk. Stable identifiers match existing entries without recreating them.
- To move the project to another computer, copy the entire .stageflow folder, including the other applications' subfolders. Do not send patch.json alone.

Example: a different microphone for one group

GENERAL contains Kick with Beta52. BAND A is based on GENERAL and specifies D6 for that entry. The base identifier and relationship link the two lines; they are not unrelated duplicates.

A StageDesk .smtshow project remains standalone. Keep the complete .stageflow folder for round trips involving other applications' domains. A selection export or workbook is not a replacement for it.



7. Save, copy and follow changes

Action	Result and precaution
Save	Updates the shared patch and StageDesk settings. Other domains and retained unknown fields are preserved. Conflicting edits to the same value produce an explicit conflict.
Save As	Creates a copy of the local project including other applications' domains and resources. Source files remain intact. Temporary LIVE sessions and locks do not become an active session in the copy.
Export a selection	Publishes the chosen patches, adding GENERAL and required bases. Review the field options: a deliberately reduced export is not a complete archive.
Local file edited elsewhere	Local project following and Reload determine when files are reread. Review any conflict with unsaved edits before proceeding.
Joined LIVE session	Valid incoming changes are merged into the table. Pausing alerts does not pause data. Access rights and connection state still apply.

Data belonging to other applications

StageDesk displays the patch fields it can edit. Placement, monitoring and other module domains stay in the folder even when StageDesk has no screen for them. Preserving a domain does not mean StageDesk can operate its features.

A saved file is not a LIVE connection. In StageFlow connection, select the host and project, then use the pairing code. StageDesk does not create its own remote server; mobile access goes through the StageFlow portal.

If saving is refused

Correct duplicate UUIDs, missing bases, missing declared files, unsupported formats or conflicts in a copy. Keep both your preparation and the external version. Copies containing filesystem links are refused: first copy their actual resources into the project.



8. Create and fill in the StageDesk Excel template

This template carries the channel table: labels, colours and essential settings. It is different from the StageFlow group workbook on the next page.

- Choose File > StageDesk Excel template > Create and open a copy. Save an .xlsx copy in your production folder. The template uses current channels; an empty table produces rows to fill in.
- Keep the first-row headers. Columns are matched by name, not position. The simple importer reads the first worksheet.
- Enter a unique integer in Channel, then the desired Label. Set Included to TRUE for rows to transfer. A row without a channel number is not imported.
- Use the template lists for booleans, colours, icons and slopes. The Apply columns select individual parameters to send; they do not replace Included.
- Save the workbook, return to StageDesk and choose Import the edited copy. Check row count, labels and checkboxes before Validate and destination selection.

Template headers	Expected values
Canal / Channel; Label; Inclus / Included	Example: 1; Kick; TRUE. A channel number is required for each imported row, unique and within the universal table capacity.
Couleur; Icône; DCA	Example: Red; Kick; 1. Allowed export values depend on the destination profile.
HPF actif; HPF Hz; Pente dB/oct	Example: TRUE; 80; 12. Use numbers and one of the offered slopes.
Muet; Fader dB	Example: FALSE; -3.5. The level must be a finite number.
Appliquer label/couleur/icône/DCA/HPF/muet/fader	TRUE or FALSE per parameter. Original values are references, not the new labels to send. The generated headers remain compatible with French templates.

Do not confuse Original label and Label. Fix reported duplicate numbers or invalid values at the indicated row. Use plain text or numbers without dependencies on another workbook.



9. StageFlow workbook: common values and groups

- From Excel template, choose Create StageFlow workbook. Enter the name, pair count, group count and workbook language.
- On Commun, fill Sources, Mic and Notes from row 5. Example pair 1: Kick, Beta52, Drum centre.
- In BAND A, a group-specific value replaces the common value for that group. Leave it blank to inherit the common value when the common pair is included.
- Soundcheck / Balances and show contain group scheduling information. They are separate from group-specific source or microphone values.
- Keep worksheets, pair numbers and the hidden _StageFlow identity sheet. Do not recreate a blank workbook to update an existing project.
- Save, then choose Import StageFlow workbook. Review groups and pairs, then save the .stageflow project. Use Export StageFlow workbook to continue from current work.

Case	Meaning
Common = Kick / Beta52; group blank	The group inherits common values for an included pair.
Common = Kick / Beta52; group Mic = D6	This group uses D6. Other groups still use Beta52.
Common pair excluded from a group	Keep the workbook's exclusion relationship instead of renumbering all rows.
Missing identities or altered structure	Export a fresh template from a project copy and transfer values; review matching before saving.

Portable workbook V3 carries pairs, groups, common and group-specific values, exclusions and identities. It does not back up placements, audio, media or all application settings. Archive the .stageflow folder too.



10. Prepare a reliable transfer

Two minutes of preparation prevent ambiguity at export time.

Prepare	Decision	Example
Source	System, model, displayed mode, then the offered file or state.	DM7 - .dm7f project - Scene 1.00
Data	Channels to include and parameters to transfer.	Labels, colours, DCA, HPF
Target	Exact model and target capacity.	Yamaha CL5 - CL5 profile
Mode	One of the modes actually displayed for the profile.	Existing project with automatic backup
Destination	Project and target state offered by the connector.	CL5_Project - Balance scene

Always keep the source project. If you explicitly overwrite an existing file, StageDesk first creates a non-timestamped backup in the same folder, prefixed Bckp_, then Bckp2_ if needed.

File names

- Use a short, descriptive name without characters forbidden by the target.
- StageDesk sanitizes the final name and applies the native extension, for example .tar.gz for recognised Allen & Heath shows.
- The proposed name follows the interface language: Nouvelle préparation or New preparation.

Before writing a project

- Select the exact model and keep the source project unchanged.
- Export to a copy or confirm replacement only after the Bckp_ backup is created.



11. Retrieve the source

Control	Action
System	Choose an exposed family: Yamaha, Allen & Heath, Avid, Midas, Soundcraft, SSL, software, or table exchange.
Model	Choose the exact model. It defines capacity, label length, and available values.
Mode	Choose the file mode actually presented for the selected source.
Source file	Choose the project to read. StageDesk detects its available scenes or snapshots.
Scene / snapshot	Select the state to retrieve. Imported data appears in the universal table.
Import	Start reading. The source file remains untouched.

Change the source

You can open another console family or software session without restarting StageDesk. The new choice replaces the active source, while the prepared table remains your conversion workspace until the next import.

Always review the import summary: channel count, selected scene, and retrieved data. Table size must follow project content, not a fixed number.

Local source

- Open the project in its manufacturer editor before import when its integrity must be confirmed.
- Give the StageDesk preparation a clear name after the read.
- StageDesk readback preserves the source file and does not replace show archiving.



12. Work in the universal table

The table is the heart of StageDesk. It preserves retrieved data while you change targets and keeps edits fast even in large projects.

Area	Use
Include	The only checkbox visible by default. It decides whether the channel participates in the transfer.
Source scene / snapshot	Recalls the source state for that row.
Original data	Labels, colours, and icons read from the source.
Working data	Values to adapt before export: label, colour, icon, DCA, HPF, mute, and fader.
Details	Displays per-parameter Apply boxes. Fields actually retrieved and transferable are selected; absent or unsupported fields remain unselected.

Select all Includes all visible channels or checks the chosen detail column.	Copy / Paste Exchanges one cell, a range, or rows with a spreadsheet.	Validate Checks values before selecting the target.
---	--	--

Smart fill

- Enter Mic 1 and drag the handle to create Mic 2, Mic 3, and Mic 4.
- For a stereo series, FX1L continues with FX1R, FX2L, FX2R, then FX3L and FX3R.
- The same rule applies to text ending in a number or a number followed by L/R.

Keep Details closed for speed. Open it only when a transfer must exclude one precise parameter without excluding the whole channel.



13. Choose the target

The Send panel uses the same logic for each connector: choose the system, model, then one of the target modes actually exposed for that destination.

Mode	When to use it	Result
New project	The connector exposes this mode.	StageDesk asks for a folder, project name, initial state when offered, and sometimes a validated local native template.
Existing project	The connector can write the target format.	StageDesk opens the project and offers only states it can actually modify.

Create a new project

- Choose New project, then the parent folder.
- Enter the project name. It becomes the file or session-folder name according to the target.
- Enter the initial scene or snapshot name when offered.
- Use only the New Project modes offered by StageDesk for the selected profile.
- Select Export. StageDesk displays the path and summary; Nuendo and Harrison add detailed opening steps.

Write into an existing project

- Choose the target project: its scenes and snapshots are listed separately from the source states.
- Select an existing target or create a new one only when the connector exposes that action.
- If the same output path is selected, confirm overwrite; the automatic backup is created before writing.



14. Scenes, snapshots, and cues

Console states are not a Yamaha-only concept. StageDesk displays each state only on the side where its read or write operation is proven.

Term	Typical families	What StageDesk does
Scene	Yamaha, SQ, Qu, GLD, Soundcraft Vi, HD96, and X32/M32	Lists scenes and exposes a target only when writing is bounded by the native format.
Snapshot	dLive, Avantis, WING, DiGiCo SD/Quantum, and Harrison/Ardour sessions	Avantis and dLive write Current or snapshots and can create a snapshot or New Project for the proposed variants.
Cue	SSL Live	Displays a cue only when the connector can read or write it; VENUE S6L remains limited to Current.
Current	Current state in a file	Reads or writes the active state only when the local format and connector expose it.

Source and target are independent choices. StageDesk presents the scenes, snapshots, cues, and transfer modes that match the selected profile.

CL / QL example

Choose a recognised .CLF scene or create a project from one of the five CL1, CL3, CL5, QL1, or QL5 profiles. StageDesk adapts the data to the model and recalculates the output file's MEMAPI checksum.

Allen & Heath example

A Bridge-3/4/5 Avantis, Avantis dPack, Avantis Solo, or Avantis Solo dPack show can feed the table. StageDesk writes Current or a snapshot and creates a new snapshot or show from the matching standard/dPack template. For dLive, the table can feed Current, an existing snapshot, or a named new snapshot; the common 128-input engine serves the proposed variants.



15. Adapt data to the target

Consoles do not share the same palettes, label lengths, or icon families. StageDesk turns these differences into explicit decisions instead of blocking the workflow.

Situation	StageDesk proposal	Your choice
Unknown colour	Closest allowed colour or a neutral value.	Accept, choose another colour, or skip that parameter.
Missing icon	Equivalent icon or Blank.	Choose the clearest equivalent on the console.
Label too long	Compatible truncation with preview.	Edit the name or accept the proposal.
Too many channels	Projection limited to model capacity.	Exclude, reorder, or choose a larger model.
Parameter not exposed	The value remains in the StageDesk project but is not written to this target.	Continue transferring compatible data.

Remember a substitution

- Select Remember to apply the same replacement the next time it occurs.
- The rule is linked to the target type and affected parameter.
- Open Tools > Saved substitutions to edit or delete a rule.

The purpose of adaptation is a usable export. Review the final summary: adapted values, excluded channels, and transferred parameters.



16. Backups and non-destructive writing

StageDesk separates the source, working table, and target. This makes it possible to repeat a conversion without changing the original preparation.

Action	Protection
Import	Read-only access to the source project.
Create project	Writes a new file or folder with the chosen name.
Existing project	Warning, confirmation, same-folder Bckp_ backup (then Bckp2_) without a timestamp, then replacement of the selected project.
Cancel	The StageDesk table remains available until a new preparation is created.

After export

- Record the full path displayed by StageDesk.
- Open the generated file in the console or software's official editor.
- Open or recall the result when applicable, then check several representative channels.
- On physical hardware, compare before any rehearsal or transmission.

An automatic backup protects the previous file; it does not replace your production archive. Keep a separate copy of the validated show.



17. Windows compatibility: 1/3

I = import; E = export to a copy or existing project; N = new project. These directions apply to the listed format, not to hardware connectivity.

Family	Format	Direction	Practical limits
Yamaha DM7 / DM3	.dm7f / .dm3f	I / E / N	DM7 / Compact 120/72; DM3/Standard 16. Current and scenes.
Yamaha CL / QL	.CLF	I / E / N	CL1/3/5, QL1/5; 8-byte labels; exact profile required.
Yamaha TF	.TFF	I / E / N	TF1/3/5/RACK; Current, A/B scenes; model capacity.
Yamaha RIVAGE PM	.RIVAGEPM 7.1.0	I / E / N	PM3/5/7/10; DSP 120/144/288 by profile. Target validation required.
A&H dLive / Avantis	Show natif / native	I / E / N	dLive 128; Avantis standard/dPack, Bridge-3/4/5. Labels/colours, Current and snapshots.
A&H SQ / GLD	Show natif / native	I / E / N	48 inputs; SQ scenes, GLD .tar.bz2. Some models still need target-editor verification.
A&H Qu classique	Show natif / native	I / E	Qu-16/24/32/Pac/SB; labels and scene creation in an existing show. Qu-5/6/7 excluded.

The selected model and state determine transferable fields. Check the copy in the target editor before console use. This matrix describes files; LAN connections are detailed in the Console networking chapter.



18. Windows compatibility: 2/3

I = import; E = export to a copy or existing project; N = new project. These directions apply to the listed format, not to hardware connectivity.

Family	Format	Direction	Practical limits
X32 / M32	.scn	I / E / N	32 inputs; one scene. New means a minimal partial scene; .shw excluded.
WING	.snap snapshot.11	I / E / N	40 channels + 8 auxiliaries; one snapshot, not a multi-snapshot show.
DiGiCo SD / Quantum	.ses V2242	I / E / N	Exact model; ASCII labels; snapshot writing. Colours/icons excluded.
VENUE S6L	.dsh / Offline 8.2	I / E / N	E6L/E6LX 112 to 256; Current MicLine labels only.
SSL Live / System T	.show / SOLSA 6.x	I / E / N	Installed SOLSA on Windows required; existing cue. System T T25/T80/TE1/TE2 48/96 kHz, VTE1/VTE2 48 kHz: exact profile.
Soundcraft Vi	Dossier / Virtual Vi 6	I / E / N	96/128 inputs by profile; long labels/colours. Modern CueList excluded.
Midas HD96	.show / Excel 144	I / E	Existing or new scenes within a show; no blank show. Final editor check required.

The selected model and state determine transferable fields. Check the copy in the target editor before console use. This matrix describes files; LAN connections are detailed in the Console networking chapter.



19. Windows compatibility: 3/3

I = import; E = export to a copy or existing project; N = new project. These directions apply to the listed format, not to hardware connectivity.

Family	Format	Direction	Practical limits
StageDesk / StageFlow	.smtshow / .stageflow	I / E / N	Complete local project; .stageflow is a folder. Legacy .smt can be imported.
Tableur / Spreadsheet	.xlsx / .csv	I / E / N	Channel table; first sheet for simple import. Separate StageFlow V3 workbook.
Dante Config Editor	XML / CSV	I / E / N	Selected device RX labels; TX unchanged. No Dante control.
REAPER	.rpp	I / E / N	Saved state; no snapshot library. Verify in REAPER.
LiveTrax 3 / Mixbus 10	.ardour	I / E / N	Sessions and labels/colours; sanitised new templates without media or plug-ins. Mixbus also offers Lua.
Nuendo 14	DAWproject 1.0	I / E / N	Import DAWproject in Nuendo; no direct .npr read/write. Editing/media/plugin-ins excluded.
Sequoia Pro 17	.VIP	I / E / N	Labels/mutes, Current; 128-track template. ASCII path ≤255 bytes; colours/faders excluded.
Ableton Live 12	.als	I / E / N	Existing set or new template limited to 2 audio tracks; no clips/devices/media in the template.

The selected model and state determine transferable fields. Check the copy in the target editor before console use. This matrix describes files; LAN connections are detailed in the Console networking chapter.



20. Conversion recipes

Need	Recommended workflow
DM7 to dLive	Import the .dm7f and source scene > review labels and colours > choose dLive > choose New Project or Existing Project > select or create the target snapshot > adapt colours > export the .tar.gz. In Existing Project mode, StageDesk backs up and replaces the selected show.
Avantis to LiveTrax	Import the .tar.gz show and scene > exclude unused channels > choose LiveTrax 3 > New project > enter parent folder and session name > export and open the session.
Table to CL5	Import the table > choose Yamaha CL/QL and CL5 > New project > export the .CLF > open it in CL Editor.
Console to Nuendo	Import the scene > select channels > choose Nuendo 14 > export DAWproject > in Nuendo, use File > Import > DAWproject.
Console to DCE	Import the console project > choose DCE > create an XML from the bank or open an existing XML > choose or add the machine > export channels to its Rx side; existing Tx channels are preserved.
One table to several targets	Import once > save a standalone StageDesk .smtshow or a Local StageFlow .stageflow project > export to the first target > change only the Send panel > adapt > export again.

The universal table remains the reference between exports. Save your .smtshow or .stageflow project before a batch of deliverables so the exact work can be resumed.



21. Work faster every day

Selection Select all, Clear all, and channel ranges speed up projection.	Spreadsheet Copy and paste cells or blocks from Excel, with validation before export.	Series Automatic numbering and L/R pairs such as FX1L, FX1R, FX2L, FX2R.
---	--	---

Command	Use
File > New StageDesk project	Create a standalone preparation to save as .smtshow.
File > Open a StageDesk project	Resume a standalone .smtshow file directly.
File > New local StageFlow project	Create a Local StageFlow .stageflow folder without requiring StageFlow.
File > Open a StageFlow project	Resume a .stageflow folder with its shared patch and StageDesk context.
File > Import a legacy project	Import a historical .smt file.
File > Save	Keep edits in the format of the currently open project.
Edit > Undo / Redo	Reverse a table entry or operation.
View > Theme	Choose light or dark mode. The setting is remembered.
View > Language	Switch between French and English. Labels and proposed names follow the language.
Tools > Settings	Language, theme, local StageFlow following, alert reception and recovery use the existing settings. Apply saves; Cancel preserves settings. No automatic LIVE reconnection.
File > Recent projects	Up to 15 shortcuts. Removing or clearing preserves files. Relocating replaces the old path only after successful opening.
File > Recovery copies	Manual access to the available copy. Hiding the startup offer preserves automatic copies; re-enable it in Settings.
New project / New Snap	Editable defaults for new creations only. Existing names are preserved. Technical details remains a collapsible panel.
Details	Show or hide every per-parameter Apply checkbox.

Run several exports

After an export, change the system, model, or target mode without importing the source again. To start over, use File > New to reset all three steps cleanly.



22. Delivery checklist

Check	Question
Source	Were the correct file and scene or snapshot imported?
Channels	Does the row count match the project, and are unwanted channels excluded?
Data	Are labels, colours, icons, and essential settings coherent?
Target	Are the exact model and its capacity selected?
Destination	Are the correct project and destination scene or snapshot selected?
Adaptations	Are proposed substitutions clear and appropriate?
File	Are path, name, and extension correct?
Readback	Was the result opened in the official editor and compared on representative channels?

Never load an unchecked file directly on a console used in production. Validate the offline copy first, and keep a route back to the previous show.

File check

- Open the output in the official editor before transferring it to a production console.
- Check representative channels and the target state before a complete review.
- Keep the StageDesk output and Bckp_ backup with the production folder.



23. Updates, help, and licensing

StageDesk checks for the latest stable version matching your operating system and architecture, without changing your open project.

Action	Procedure
Manual check	Open Help > Check for updates.
Startup check	The check is quiet. A notification appears only for a newer version compatible with this computer.
Download	Confirm the download of the Windows x64 EXE or macOS Intel / Apple Silicon DMG selected for you. Releases without a matching package and its SHA-256 file are skipped.
Integrity	The downloaded package is compared with its official SHA-256 checksum before it is presented.
Installation	Save your projects. Windows: run the installer EXE. Mac: open the DMG and drag StageDesk into Applications. Projects, settings and activation are preserved.

Official links

Resource	Link
Download StageDesk	https://www.silemio.com/en/software/stagedesk
Project page	https://www.silemio.com/en/software/stagedesk#guides
Download StageFlow - free	https://www.silemio.com/en/downloads#stageflow
Download Dante Config Editor (DCE)	https://www.silemio.com/en/downloads
Download StageMark	https://www.silemio.com/en/downloads#stagemark
Download StageMon	https://www.silemio.com/en/downloads#stagemon
StageDesk permanent license - EUR 29 including tax	https://smt-license.mamat79-dce.workers.dev/buy

During the 30-day trial, the startup purchase reminder can be closed immediately. Afterwards, it waits 5 seconds at startup only, then StageDesk remains fully usable. A valid license removes the reminder and delay, allows 3 installations by default, shows the counter and can deactivate this computer. After initial activation, validation works offline.

Download StageDesk only from the official page. The built-in SHA-256 check confirms that the received package matches the publication.



24. Fast reference

The complete workflow fits into nine decisions.

#	Decision
1	Choose the source system and model.
2	Choose a displayed source mode, then the offered file or state.
3	Import and check the channel count.
4	Edit labels and essential settings; exclude unused channels.
5	Choose the target system and model.
6	Choose one of the modes actually displayed for the profile.
7	Name the project or target state when StageDesk asks for it.
8	Validate substitutions and export.
9	Open, review, archive, and only then use the result.

Retrieve
The right source and state.


Convert
A clear, fast, reusable table.

Transfer
A compatible, reviewed target.

StageDesk
Transfer labels and essential settings. Keep control of the project.
SiLeMI/O by Mamat - ----[]--

25. Guide and help

The Guide button opens this StageDesk manual in the interface language. Help offers quick start and a separate Suite guide entry. The bundled manual remains available offline.

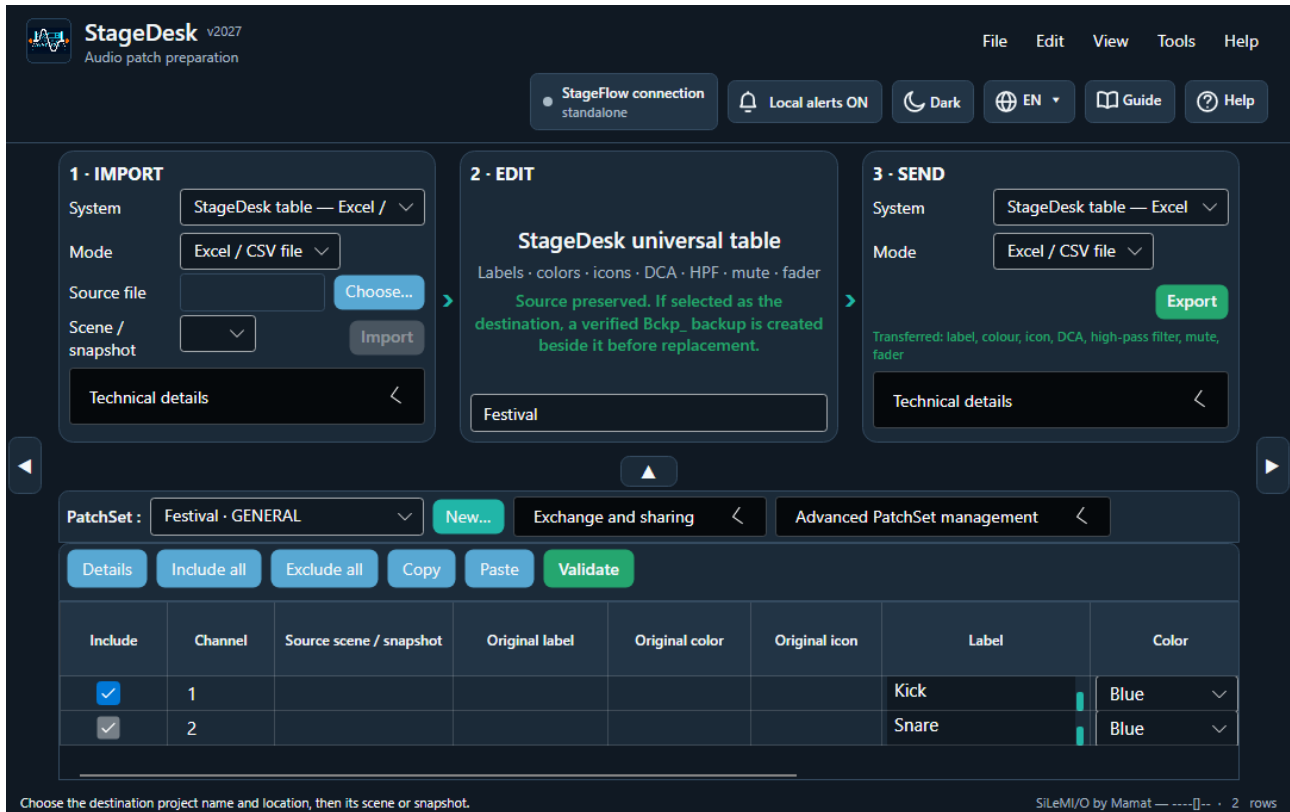

Landmarks: StageFlow connection and Guide in the header; Retrieve, Edit, Send in the centre; groups and the channel table below.

In a small window, use the side arrows and the arrow above the table to collapse panels. This frees table space without changing data.

StageDesk manuals and resources on SiLeMI/O