

1.1 CURA

Install CURA, then open CURA root directory, choose "resources" -> "machine profiles". Copy profile to above "machine profiles" folder.

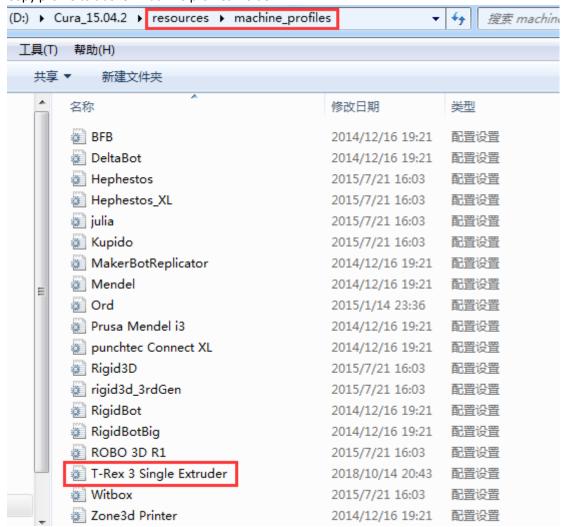


Open CURA, choose "Machine" -> "Add new machine", then choose "Next" -> "Other" to find the profile of T-Rex 3.

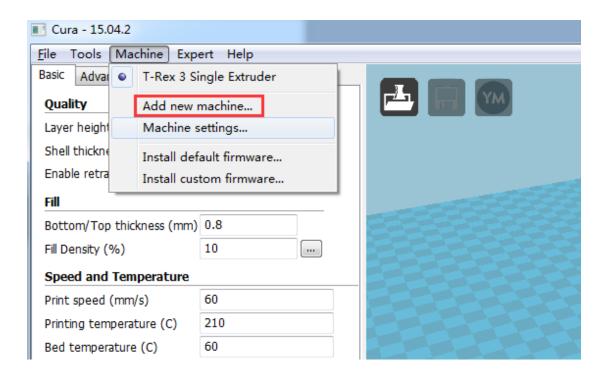


1.2 Simplify3D


Install and open Simplify3D, choose "File" -> "Import FFF profile".

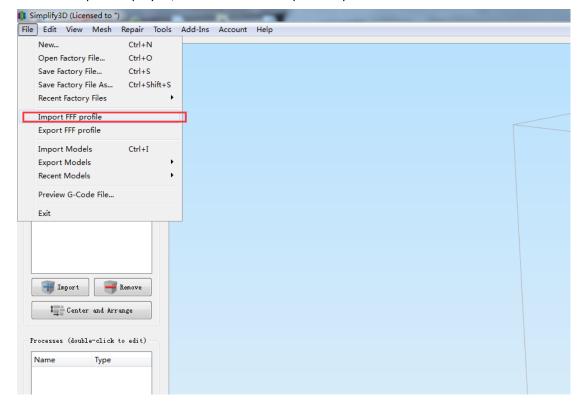


Then click below "Add" button and open "FFF".

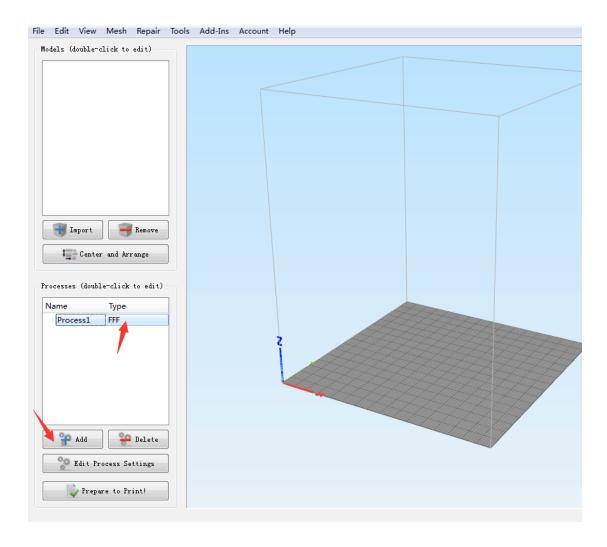

Then choose the profile from "Select Profile".

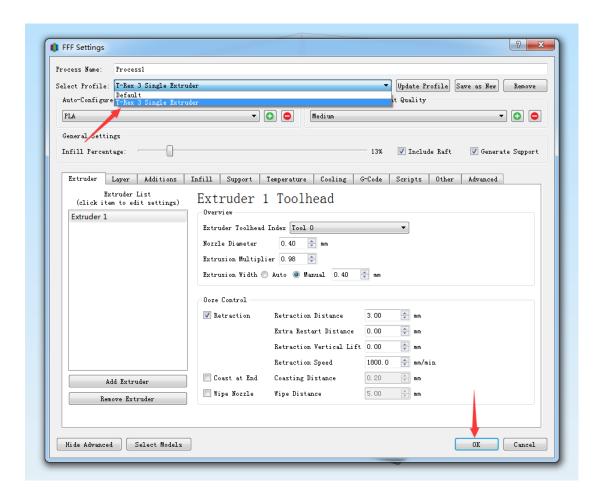

As to dual extruder printing, we have Simplify3D profiles for left and right extruder separately. Please load below profiles into Simplify3D first.



Then select model for left and right extruders separately.

