Single-point TOP panel

Overview (not to scale). Pages 2-5 are the 1:1 template.

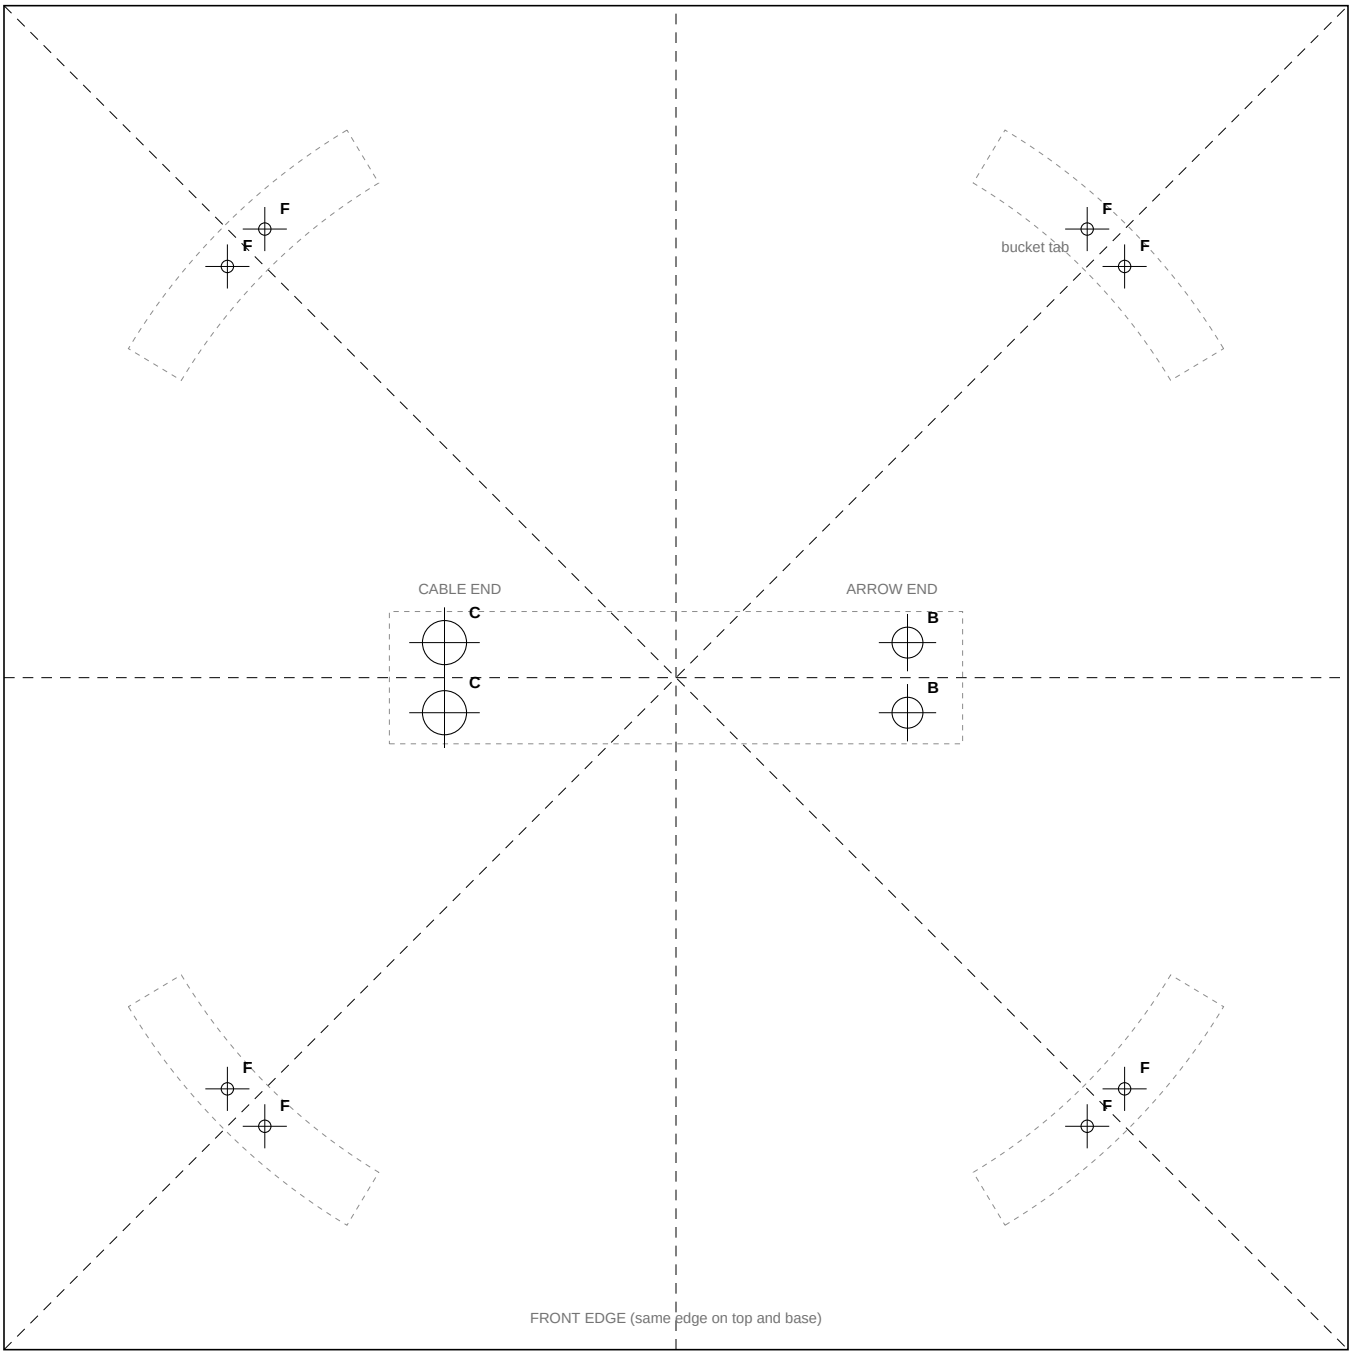

Holes (drill from this face unless noted)

B x2 7 mm (9/32 in) through, countersink to 13 mm on this face: M6 flat-head cell bolt
C x2 10 mm (25/64 in) through: clearance opposite a bolt tip
F x8 2.8 mm (7/64 in) pilot, 12 mm deep: #6 x 1/2 in screw from this face

1. Print pages 2-5 at 100% / Actual size and check the 2 in square on each.
2. Overlap the sheets so the dashed centre lines and diagonals line up; tape them.
3. Draw corner-to-corner diagonals on the plywood. Line up the template's outline and diagonals.
4. Centre-punch every cross, remove the template, then drill.

Mark the FRONT edge on both panels and keep the cell's cable end on the same side for top and base.
Countersink B on the top face so the bolt heads sit flush under the bucket.

Single-point TOP panel: top left sheet

1:1. Overlap neighbouring sheets on the dashed centre lines. Top face up.

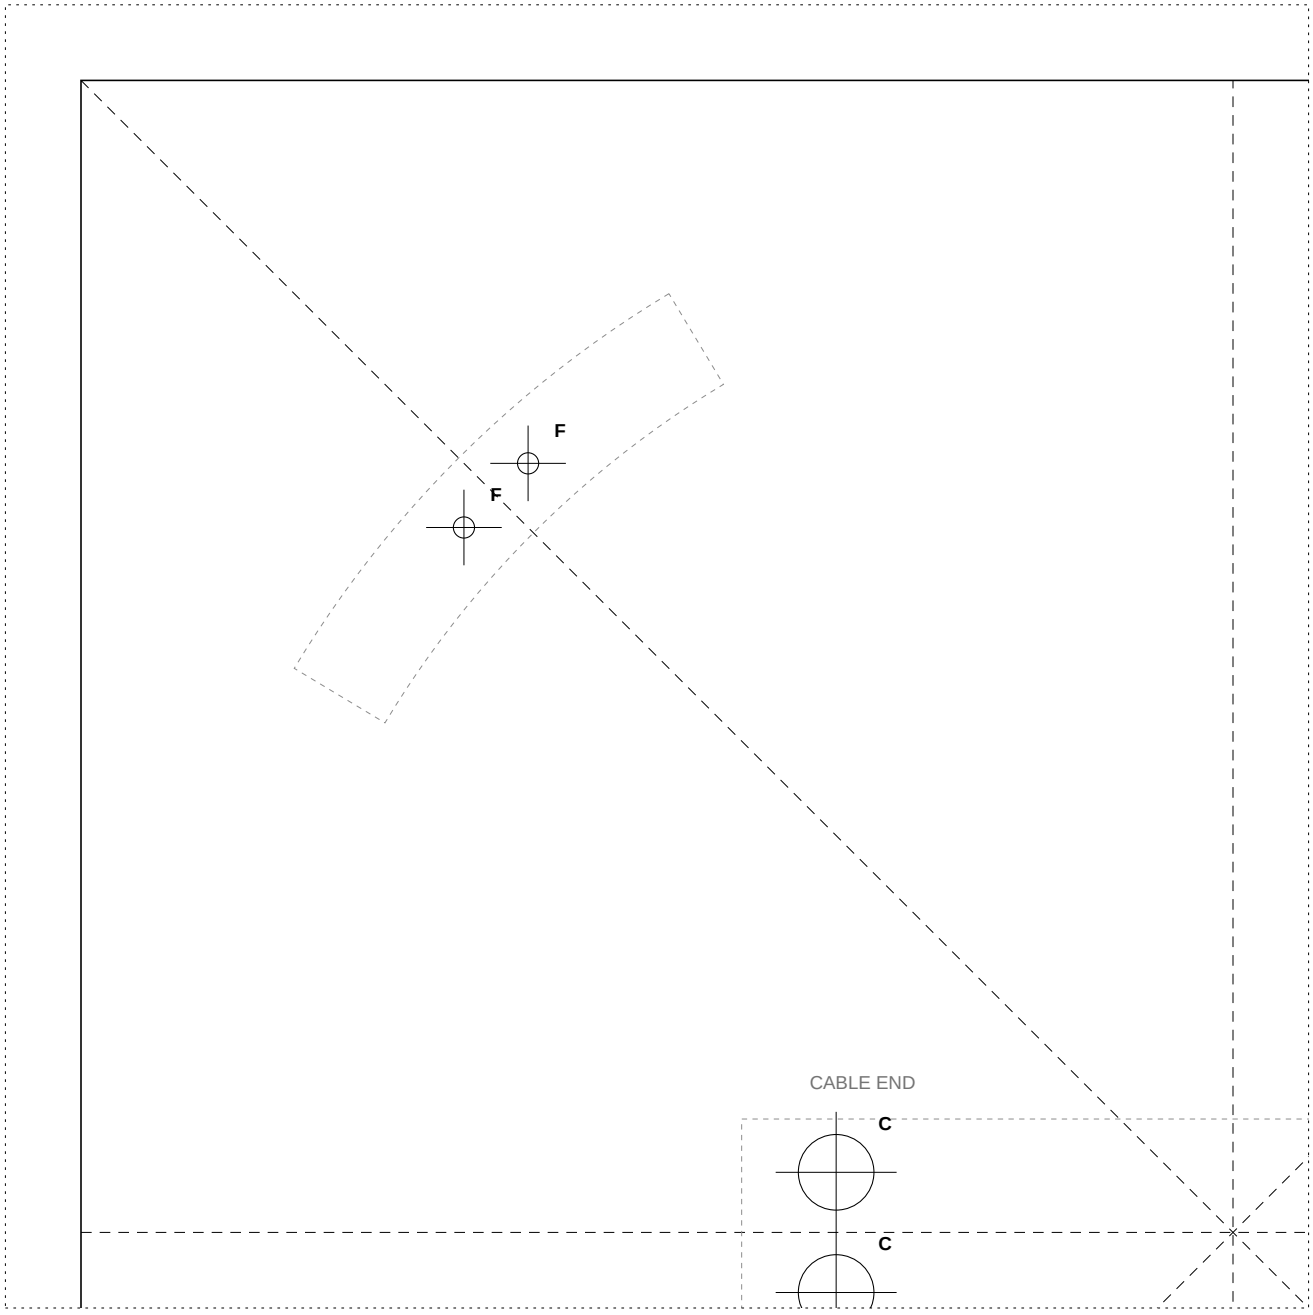

2 in / 50.8 mm

Measure this square. If it is not exactly 2 in, reprint at 100% / Actual size.

Single-point TOP panel: top right sheet

1:1. Overlap neighbouring sheets on the dashed centre lines. Top face up.

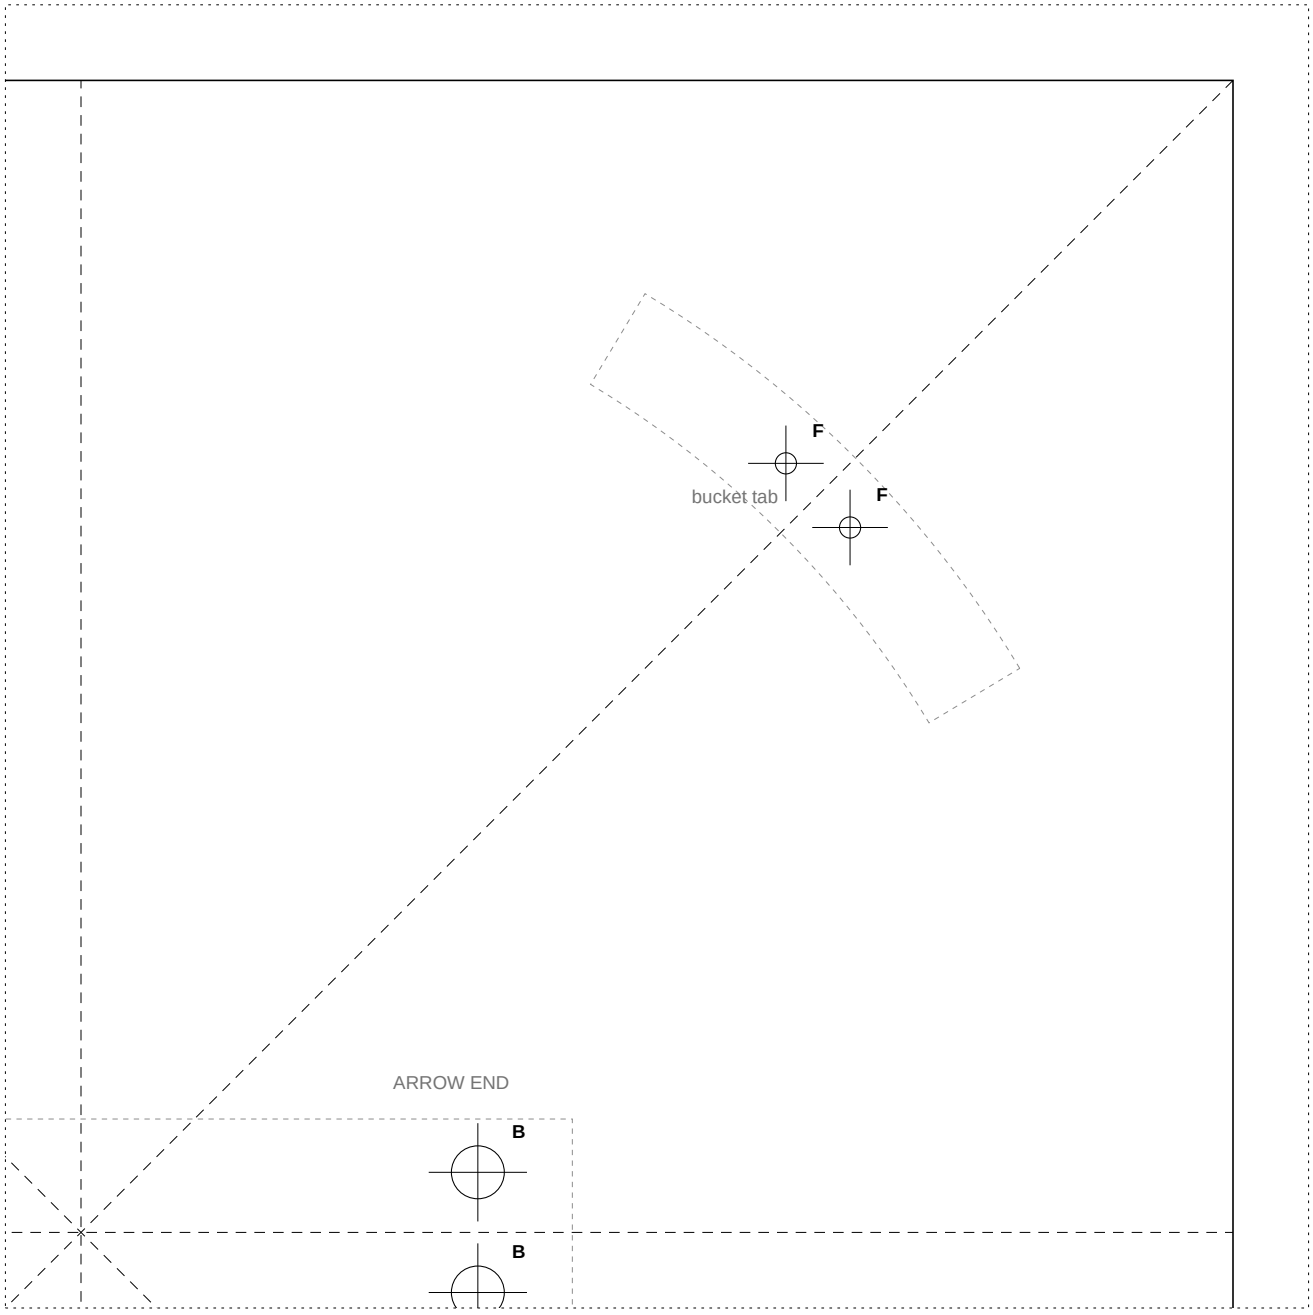

2 in / 50.8 mm

Measure this square. If it is not exactly 2 in, reprint at 100% / Actual size.

Single-point TOP panel: bottom left sheet

1:1. Overlap neighbouring sheets on the dashed centre lines. Top face up.

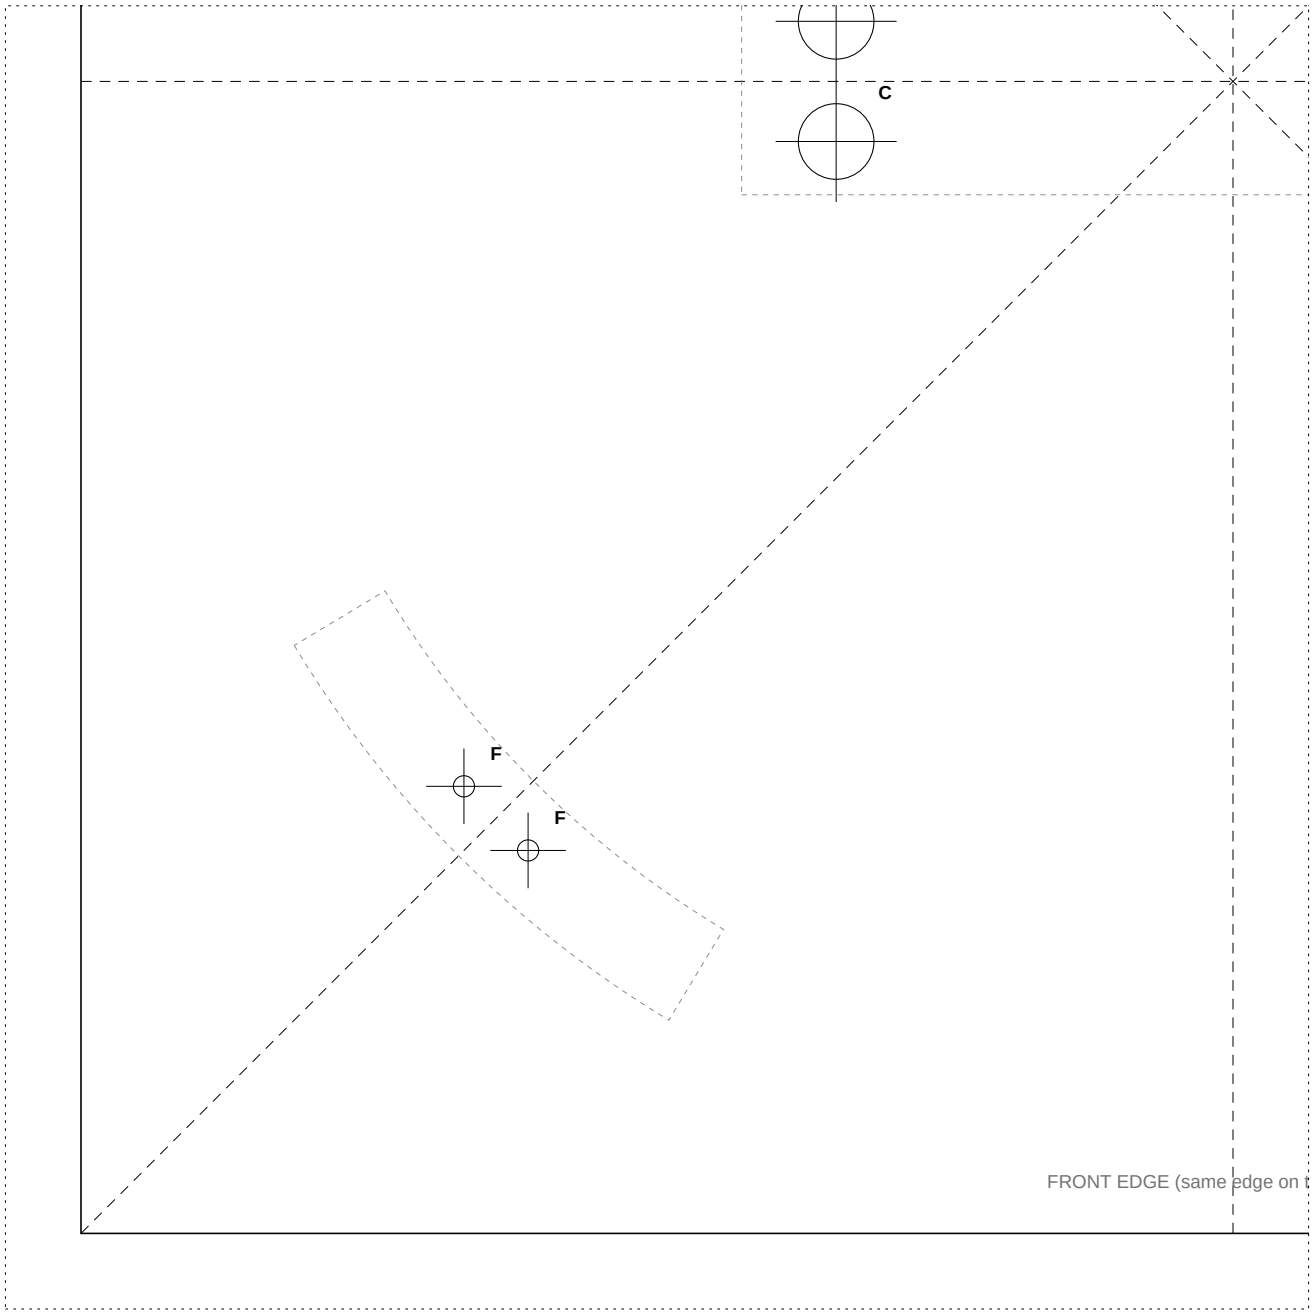

2 in / 50.8 mm

Measure this square. If it is not exactly 2 in, reprint at 100% / Actual size.

Single-point TOP panel: bottom right sheet

1:1. Overlap neighbouring sheets on the dashed centre lines. Top face up.

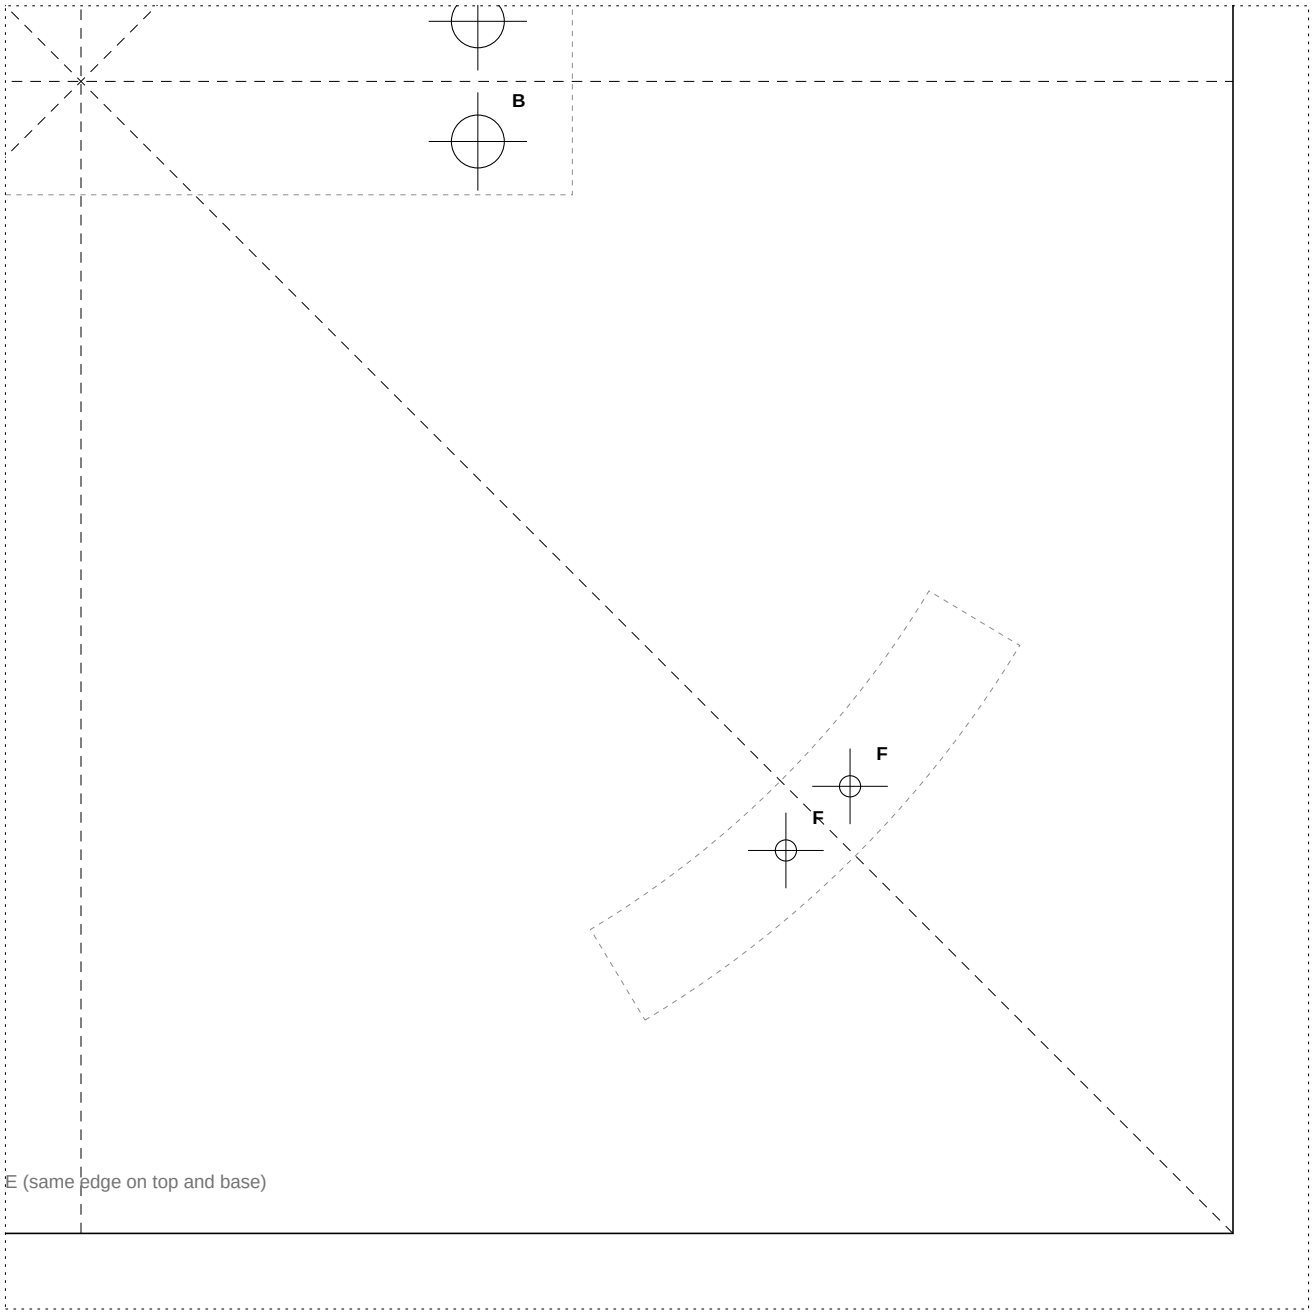

2 in / 50.8 mm

Measure this square. If it is not exactly 2 in, reprint at 100% / Actual size.