BASE sheet drilling template (10 x 10 x 1/4 in)

1. Print at 100% / Actual size. Measure the square at the top right both ways: if it isn't exactly 2 in, fix the print setting and print again.
2. Cut along the two thick lines. You don't need to draw anything on the sheet.
3. Put the cut corner exactly on one corner of the sheet, edges flush, and tape it down.
4. Punch through the centre of all 3 crosses with a centre punch or a nail.
5. Move it to the next corner and repeat until you have 12 punch marks, 3 at each corner.
6. Clamp the sheet to scrap wood and drill every mark 5/32 in, right through.

2 in square
50.8 mm each way
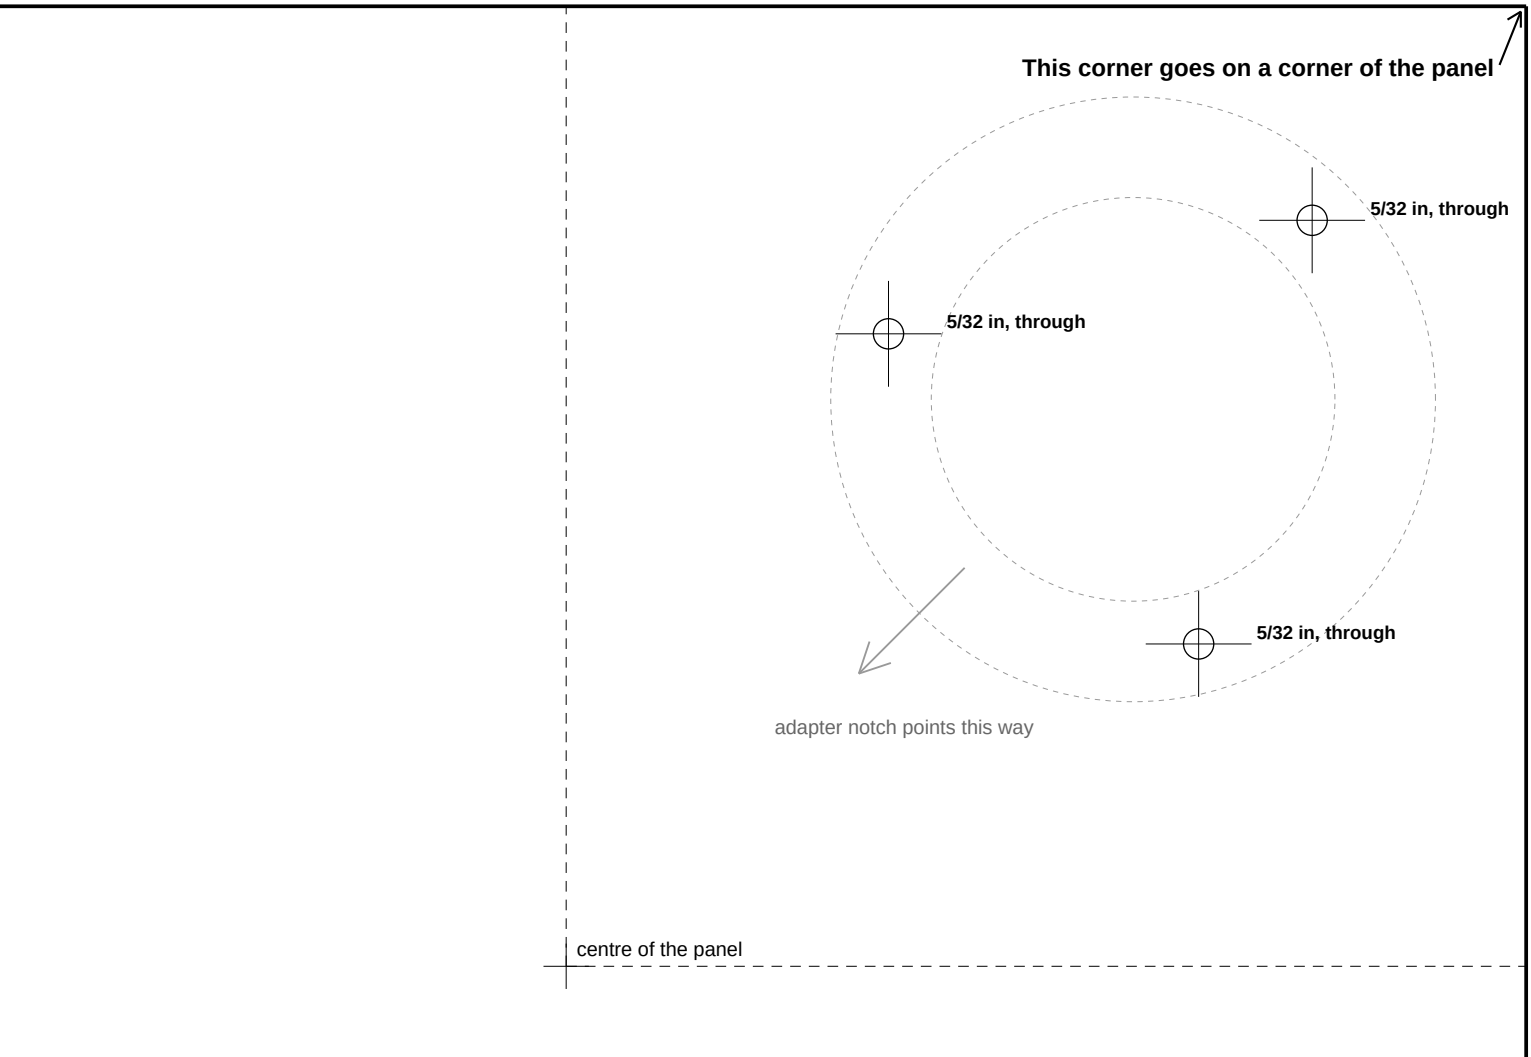
CUT ALONG THIS LINE