TOP plate drilling template (12 x 12 x 1 in)

1. Print at 100% / Actual size. Measure the square at the top right both ways: if it isn't exactly 2 in, fix the print setting and print again.
2. Cut along the two thick lines. You don't need to draw anything on the plate.
3. Put the cut corner exactly on one corner of the plate's top face, edges flush, and tape it down.
4. Punch through the centre of both crosses with a centre punch or a nail.
5. Move it to the next corner and repeat until you have 8 punch marks, 2 at each corner.
6. Drill every mark 7/64 in, 12 mm deep. Wrap tape round the bit at 12 mm, and don't go through. The locator rings aren't on this template: they get drilled in place, with the plate on the cells.

2 in square
50.8 mm each way

CUT ALONG THIS LINE

This corner goes on a corner of the panel

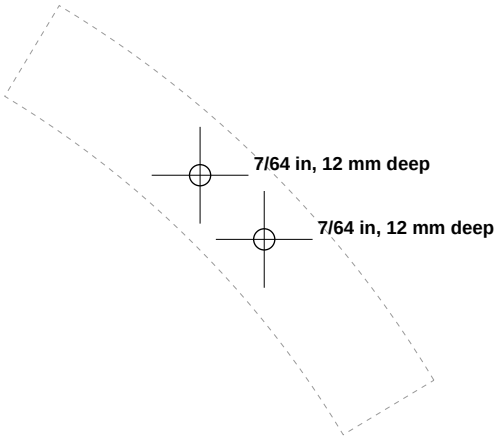

bucket tab goes on the dashed outline

centre of the panel

CUT ALONG THIS LINE