Four-cell BASE panel

Overview (not to scale). Pages 2-5 are the 1:1 template.

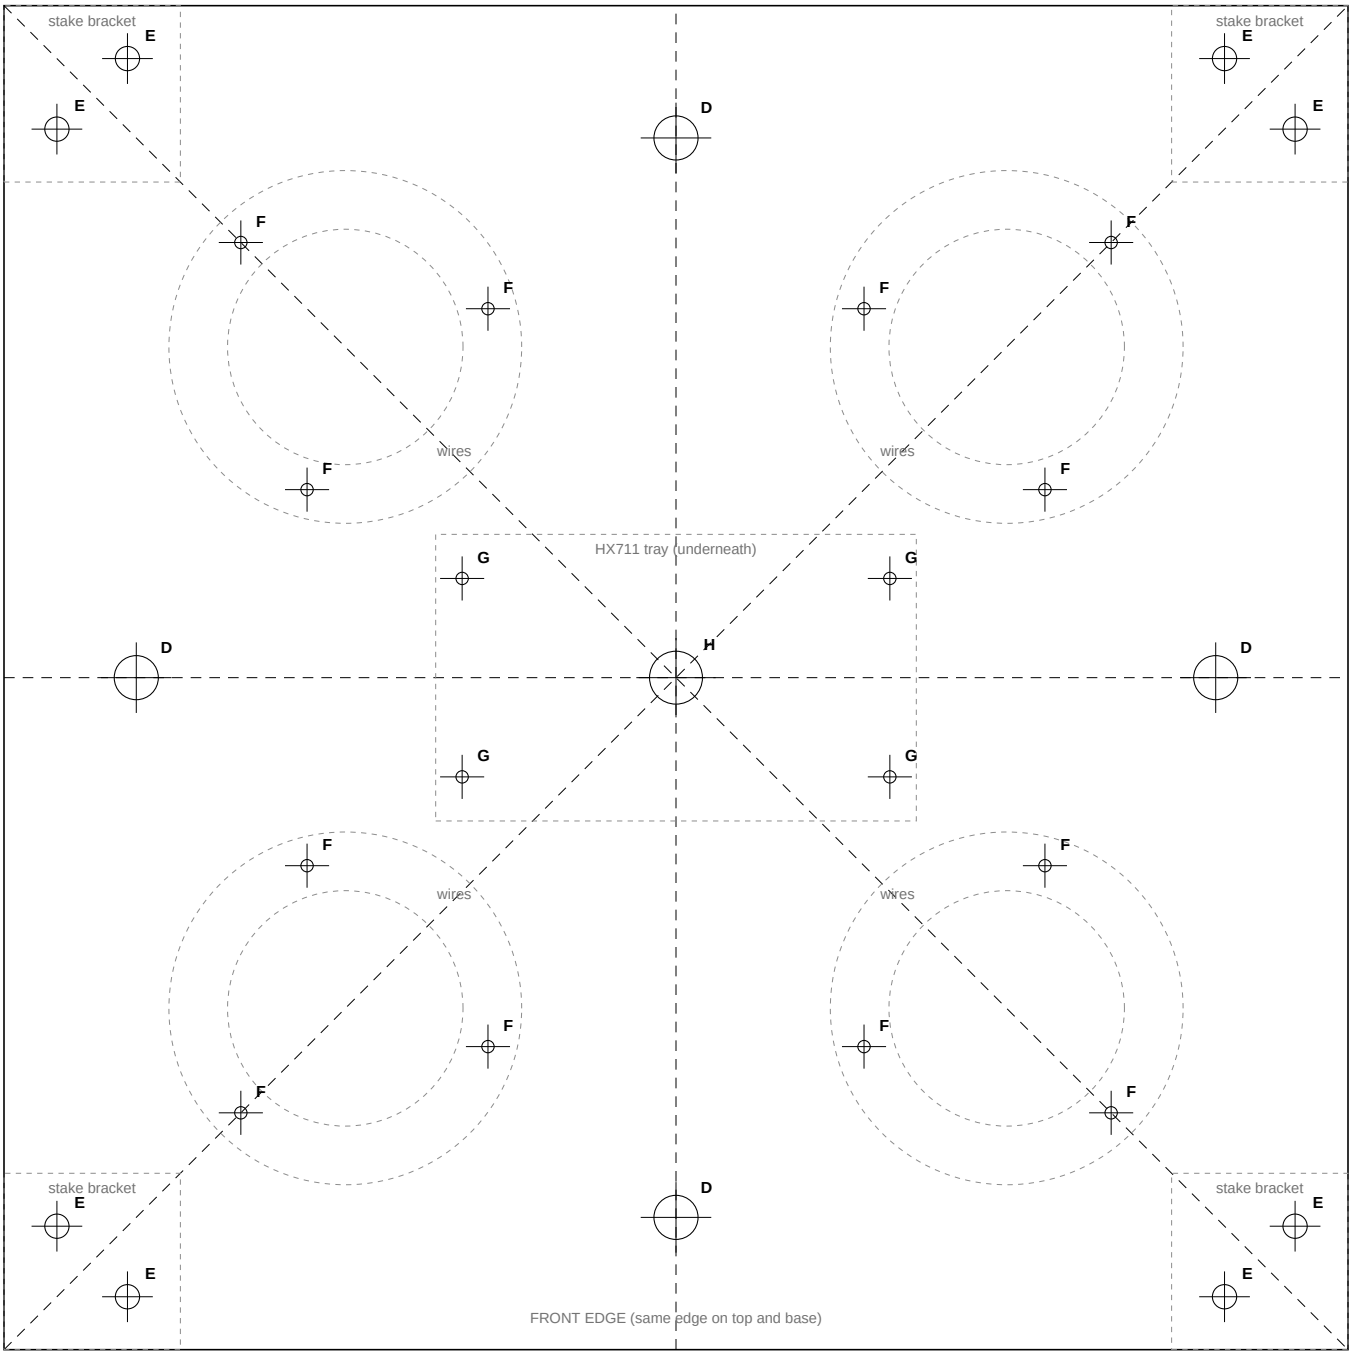

Holes (drill from this face unless noted)

D x4 10 mm through (fit your T-nut): levelling foot, T-nut from underside, flange down
E x8 5.5 mm (7/32 in) through: M5 stake bracket bolt
F x12 2.8 mm (7/64 in) pilot, 12 mm deep: #6 x 1/2 in screw from this face
G x4 2.8 mm (7/64 in) pilot, through: #6 x 1/2 in screw from underneath
H x1 12 mm (1/2 in) through: cell wires down to the HX711 tray

1. Print pages 2-5 at 100% / Actual size and check the 2 in square on each.
2. Overlap the sheets so the dashed centre lines and diagonals line up; tape them.
3. Draw corner-to-corner diagonals on the plywood. Line up the template's outline and diagonals.
4. Centre-punch every cross, remove the template, then drill.

Holder adapters screw on from the top (F), notch toward the centre; the HX711 tray screws on from underneath (G). Fit T-nuts (D) from the underside, flange down.

Four-cell BASE panel: top left sheet

1:1. Overlap neighbouring sheets on the dashed centre lines. Top face up.

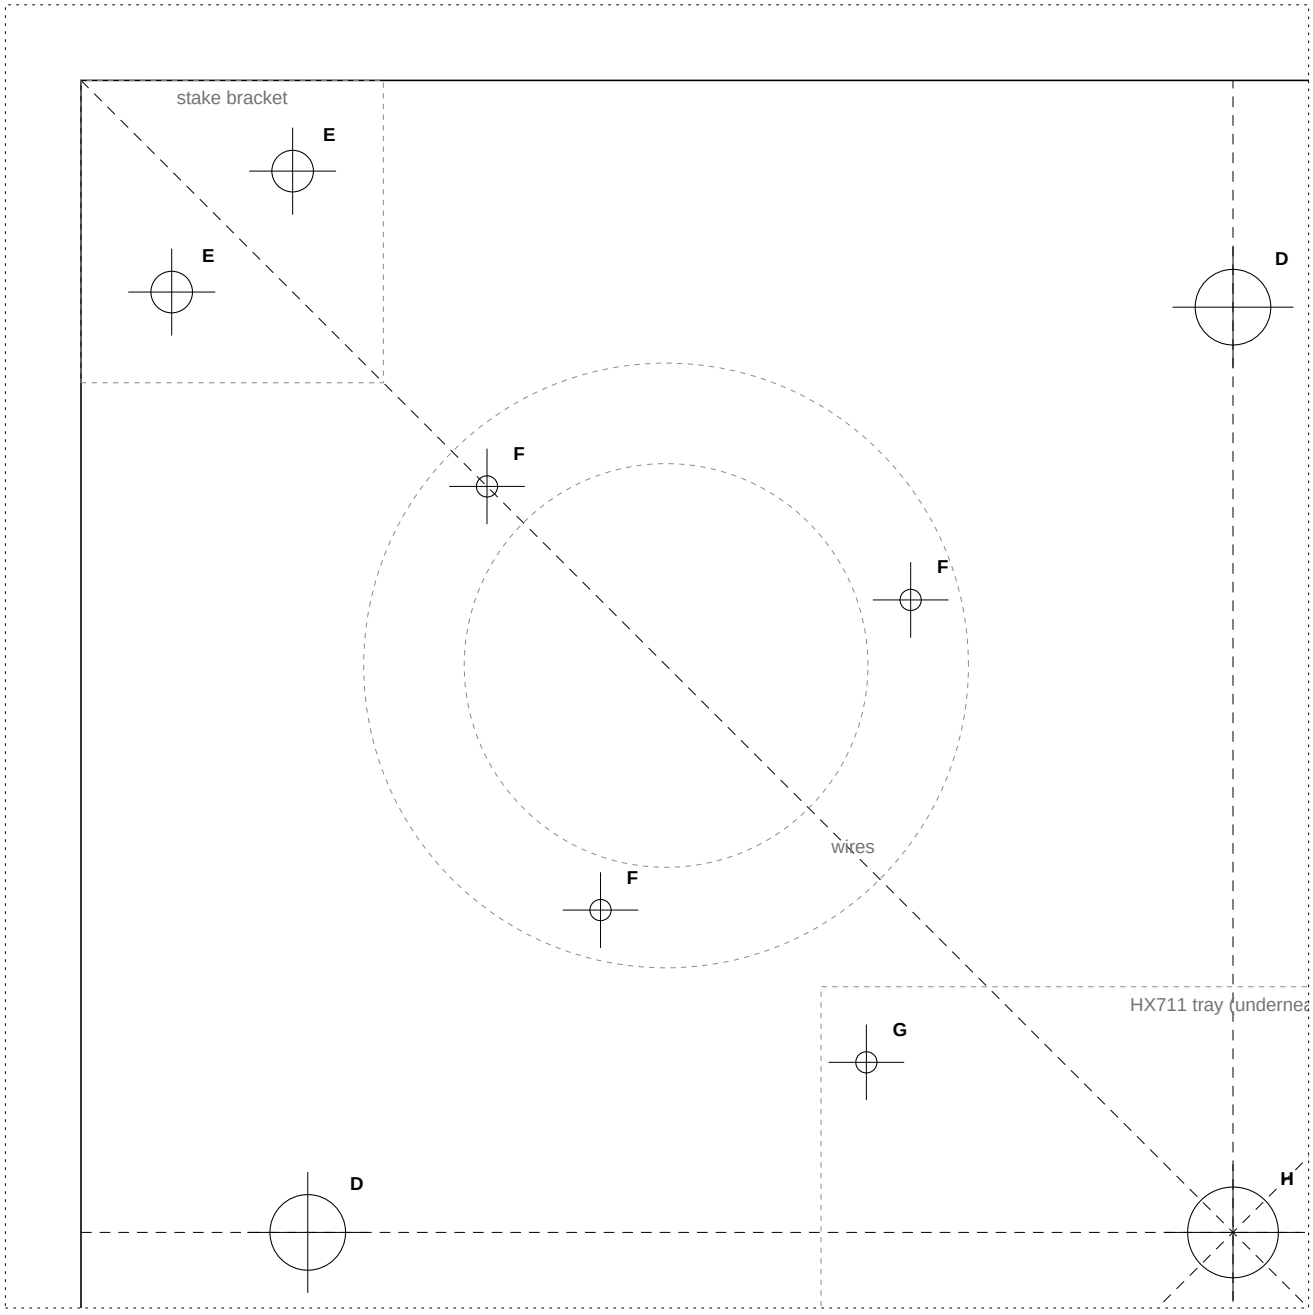

2 in / 50.8 mm

Measure this square. If it is not exactly 2 in, reprint at 100% / Actual size.

Four-cell BASE panel: top right sheet

1:1. Overlap neighbouring sheets on the dashed centre lines. Top face up.

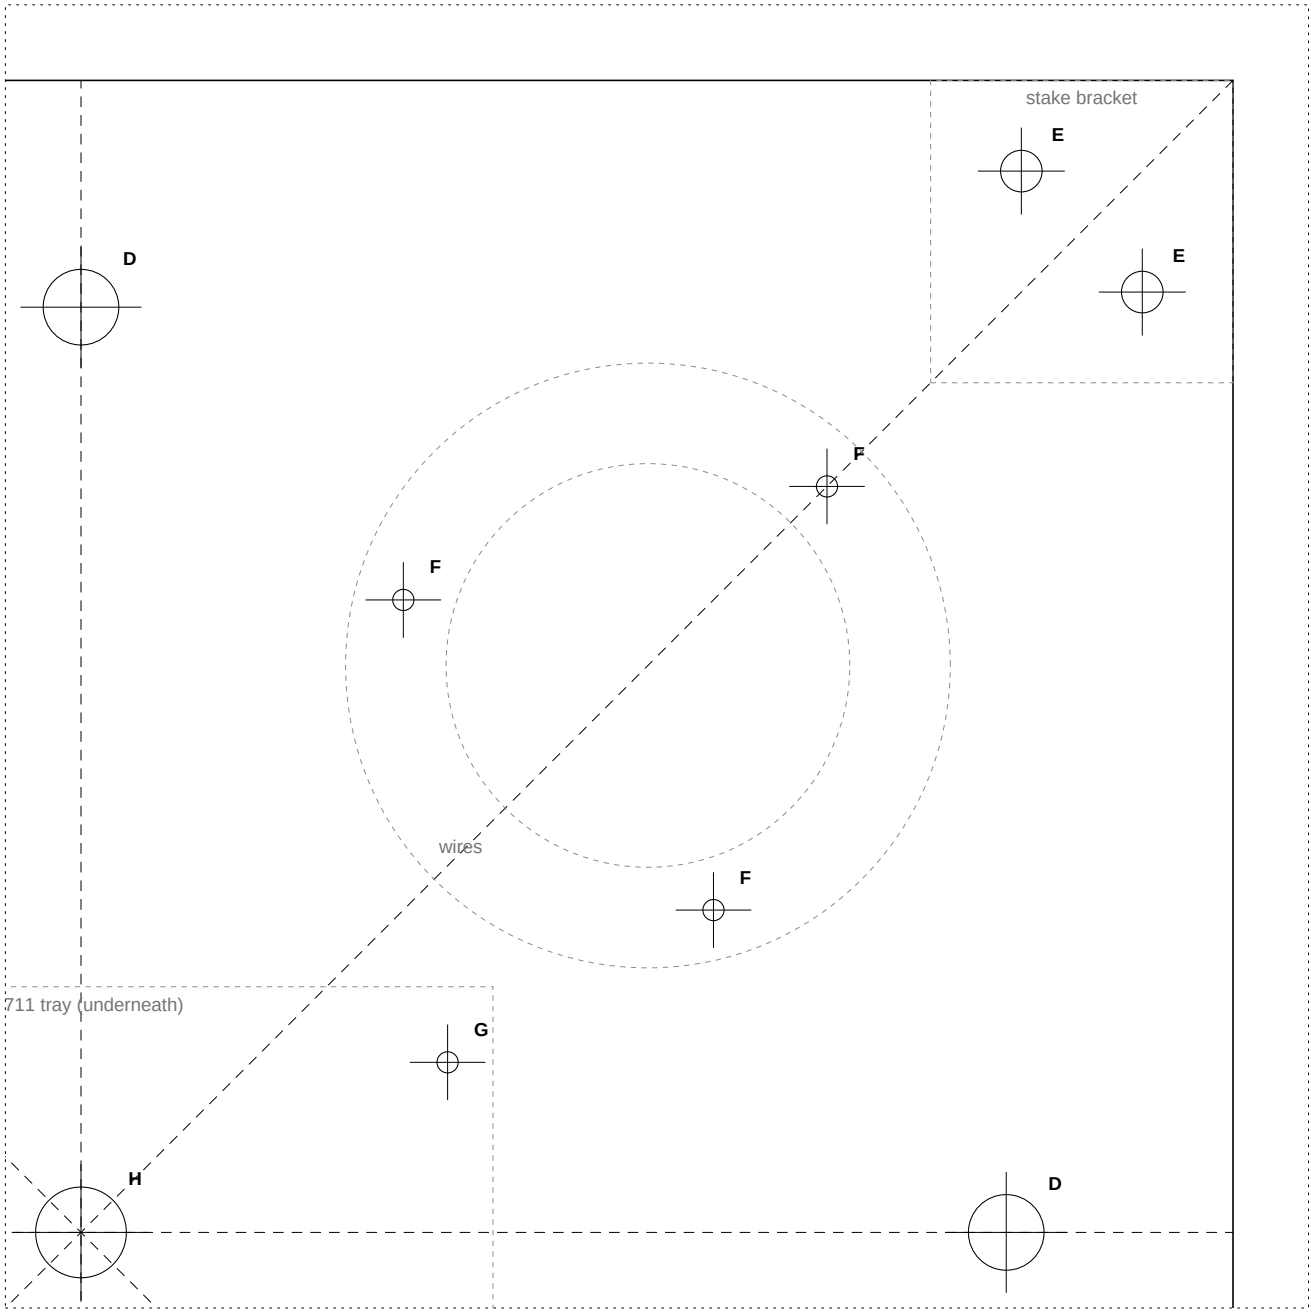

2 in / 50.8 mm

Measure this square. If it is not exactly 2 in, reprint at 100% / Actual size.

Four-cell BASE panel: bottom left sheet

1:1. Overlap neighbouring sheets on the dashed centre lines. Top face up.

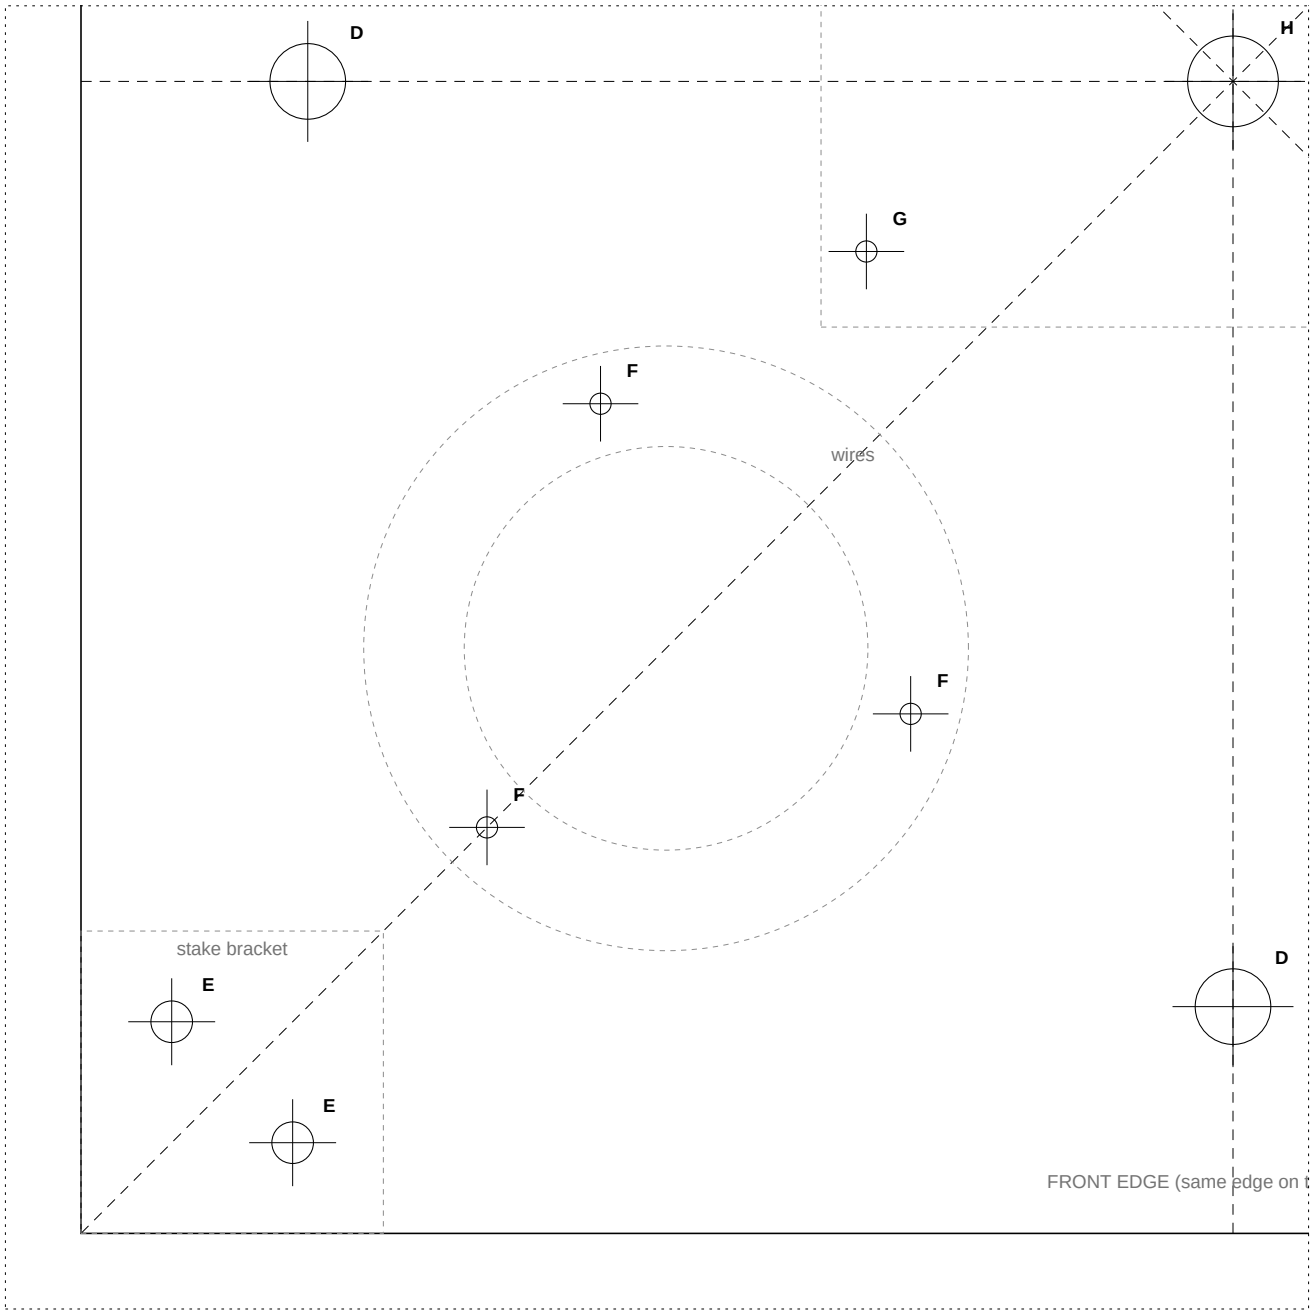

2 in / 50.8 mm

Measure this square. If it is not exactly 2 in, reprint at 100% / Actual size.

Four-cell BASE panel: bottom right sheet

1:1. Overlap neighbouring sheets on the dashed centre lines. Top face up.

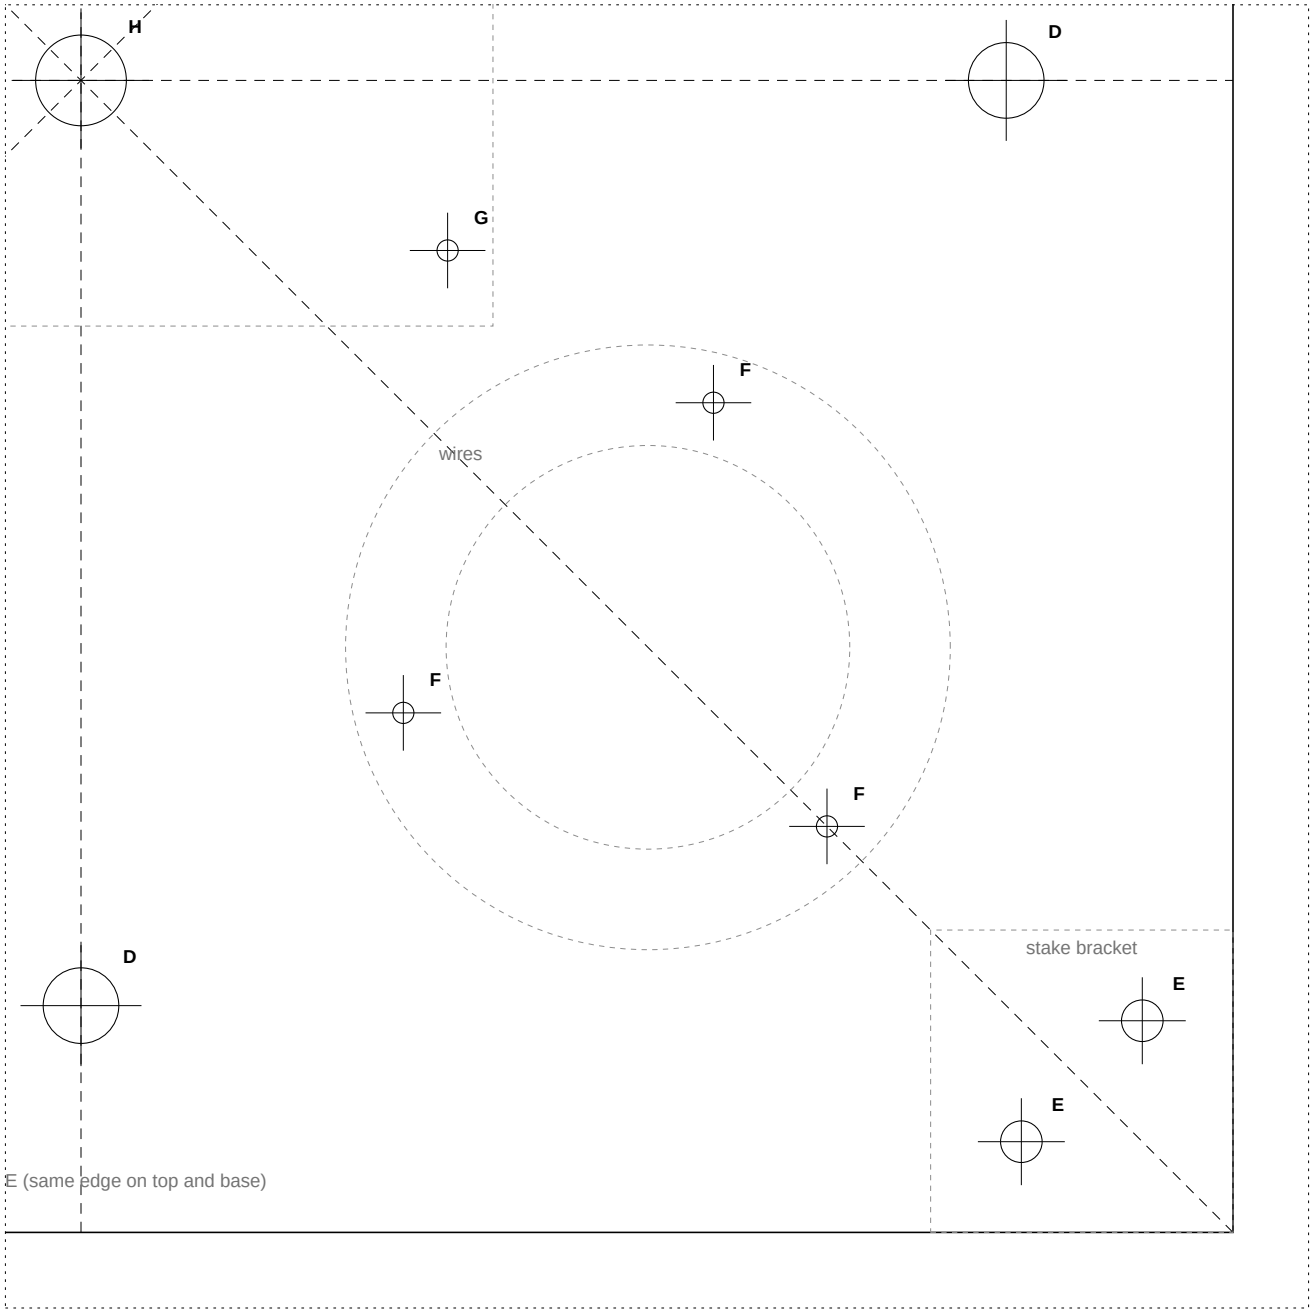

2 in / 50.8 mm

Measure this square. If it is not exactly 2 in, reprint at 100% / Actual size.