

How the boat model works

A plain-English tour of `explore.ipynb`

October 1, 2026

The question

We want a boat that covers two miles as fast as possible. This document explains the model in `explore.ipynb` that tries to find one.

The trouble is that everything depends on everything else. A faster boat needs more power. More power needs a bigger motor and a bigger battery. Those make the boat heavier. A heavier boat needs more power to go the same speed. So you can't choose the motor first and the battery second. You have to choose them together, along with the shape of the hull, and then see whether the whole thing works.

That is what the model does. You give it a complete design. It works out how much the boat weighs, where the weight sits, how hard the water pushes back, how much power that takes and how much battery that uses. Then it checks the design against twenty rules. If the design passes, the model tells you how long the race would take.

One warning. Nothing here has been checked against a real boat. The battery cells, the motor weights and the propeller efficiency are all placeholders. So read the answers as “what the model believes,” not “what the boat will do.” The model is more useful for something else: it shows which limits bite first, and which choices matter.

What we get to choose

There are ten choices, of four kinds. The shape of the hull: length, beam (the width), deadrise (the angle of the V on the bottom) and depth. Where the payload and the battery sit along the hull. The motor: its power and its efficiency. And the battery: how many cells go in series, and how many of those strings go in parallel. Series sets the voltage. Parallel sets the capacity, and how much current the pack can supply.

Eight of the ten vary continuously between bounds. The two battery counts are whole numbers.

Table 1: Searched decision variables. Bounds are the notebook’s **BOUNDS**; the baseline is the default **Design**.

Symbol	Code name	Unit	Type	Bounds	Baseline	Group
L	<code>length_ft</code>	ft	continuous	[3, 10]	8.5	hull
b	<code>beam_in</code>	in	continuous	[10, 40]	16	hull (chine beam)
β	<code>deadrise_deg</code>	deg	continuous	[6, 16]	10	hull
D	<code>depth_in</code>	in	continuous	[8, 20]	12	hull
ξ_p	<code>payload_x</code>	–	continuous	[0.25, 0.50]	0.30	placement (fraction of L forward of transom)
ξ_b	<code>battery_x</code>	–	continuous	[0.25, 0.45]	0.35	placement (fraction of L forward of transom)
P_m	<code>motor_kw</code>	kW	continuous	[2, 10]	4.0	motor rated shaft power
η_m	<code>motor_eff</code>	–	continuous	[0.85, 0.95]	0.90	motor peak efficiency
S	<code>series</code>	–	integer	{12, 13, 14}	14	battery series cells
n_p	<code>parallel</code>	–	integer	{1, ..., 12}	6	battery parallel strings

Speed is missing from the list, and you might expect it to be there. It isn’t, because for any given design there is a fastest speed at which every rule still holds, and nobody would run slower. So we don’t ask the search to pick a speed. For each design, the model finds that speed itself and uses it. This turns the question into a simpler one: which design has the highest legal top speed?

The notebook has three more fields that the search leaves alone: propeller pitch, propeller diameter and thrust angle. Pitch and diameter change only some numbers the model prints, because propeller efficiency is a fixed constant. Thrust angle does affect the balance, but it is held at zero.

How the model works out the rest

Think of it as a chain. Each link uses what came before. Figure 1 shows the order.

Weight and balance. Start with weight. The hull’s weight is its surface area times the weight of the fiberglass per square foot, plus a fixed allowance for structure. The battery’s weight is the number of cells times the weight of one cell, plus 15% for the case and wiring. The motor’s weight comes from a made-up formula in which more power and more efficiency both make it heavier. That stops the search from simply picking the biggest, best motor. Add the 30 lb payload, the propeller and 8.8 lb of fixed equipment, and you have the total.

Each part sits somewhere along the hull and at some height above the keel. Averaging by weight gives the center of gravity. Where it sits front to back matters a lot, as you’ll see.

Floating. Next, how deep the boat sits when it’s stopped. The model finds the draft at which the displaced water weighs as much as the boat, using the hull’s cross-section. Subtract the draft from the hull’s depth and you get freeboard: how much hull is above the water. A planing boat rides higher once it’s moving, so this is the cautious number.

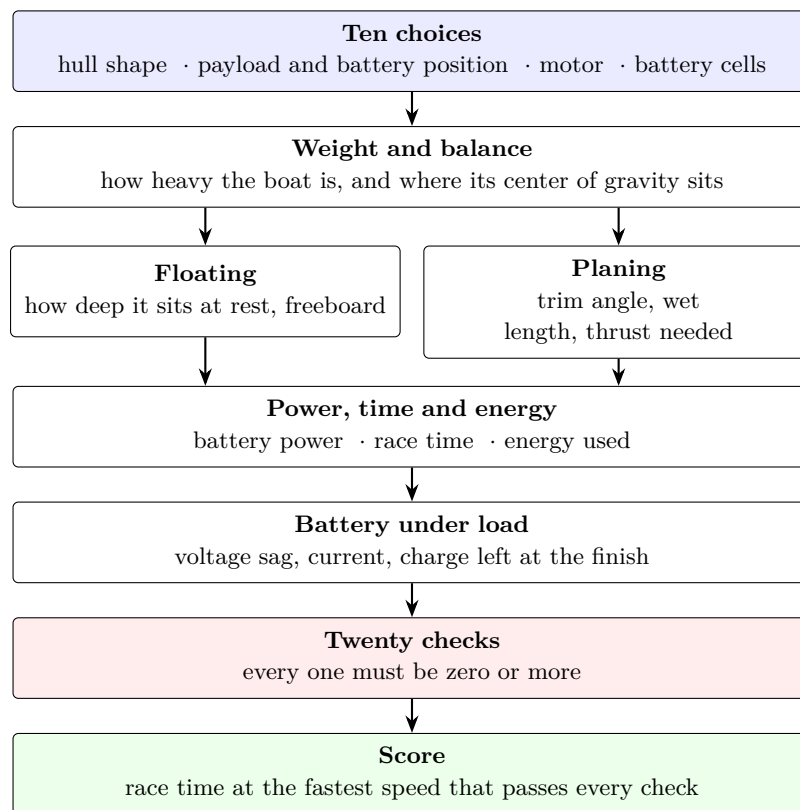


Figure 1: What happens to one design at one speed.

Planing. Now the hard part. At speed, a boat like this lifts up and skims across the water. Where it settles is a balance. The water has to push up with a force equal to the boat’s weight, and it has to do that without tipping the bow up or down. The angle the boat settles at is called trim. How much of the hull stays wet depends on trim, and the drag depends on how much is wet.

We don’t work this out ourselves. A library called OpenPlaning does it, using a method published by Savitsky. We give it the weight, the center of gravity, the beam, the deadrise and the speed. It gives back the trim, how much of the hull is wet, and the thrust the propeller must supply to keep going. For the default boat at about 22 mph the thrust is 110 newtons, and 97 of those are skin friction. At this size most of the drag is just water rubbing along the bottom.

Power, time and energy. Thrust times speed is the useful work the boat does each second. The propeller wastes some of it; we assume it is 65% efficient. The motor wastes some more; the default motor is 90% efficient. Add 30 watts for electronics. What comes out is the power the battery must supply. The default boat needs about 1.9 kilowatts.

Race time is distance divided by speed. We use speed over the ground, which is the speed through the water minus a 1 mph current, and add 20 seconds of allowance. Energy used is power times that time. The 20 seconds is charged at full cruise power, which is simple rather than realistic.

The battery. The battery has two quirks. First, the competition caps pack voltage at 55.5 volts when fully charged. Fourteen cells in series would reach 58.8 volts when full, so the model charges the pack only as far as the cap allows. For the default boat that is 75.5%. This is computed, not chosen.

Second, a battery's voltage sags when you draw current from it, because of its internal resistance. More strings in parallel share the load and sag less. The model solves for the voltage under load, then the current, then how much charge and what cell voltage remain at the finish.

What the boat has to obey

The model checks twenty things. Each is a number that has to be zero or more. We call it a margin: how much room is left before the rule is broken. A design is feasible if all twenty margins are nonnegative. They come in four kinds. The exact formulas are in Appendix C; here is what they mean.

Competition rules (three). Freeboard at rest must be at least 3 inches, plus half the 4-inch wave height, so 5 inches in all. The full-charge pack voltage must be at most 55.5 volts. And the boat must make headway against the current.

Being a boat (one). The hull must be deeper than the height of its chine, the edge where the bottom meets the sides. Otherwise there is no hull above the chine to speak of.

Hardware and balance (nine). A fully charged pack must not exceed the motor's voltage rating. The race may use at most 70% of the energy in the pack at the start. Shaft power must stay under 80% of the motor's rating, and current under 80% of both the battery's and the motor's ratings. That 20% cushion is a design margin. The pack must be able to deliver the power at all; past a certain draw the voltage equation has no solution. Each cell must stay above 3.0 volts at the finish. And the center of gravity must sit between 30 and 45 percent of the hull's length from the back.

Staying inside the method (seven). Savitsky's formulas were fitted to experiments over a limited range, and outside it the library is guessing. So the model treats the edge of that range as a wall. The solver must find a balance at all. Trim must be between 2 and 15 degrees. The wetted length can be at most four beam-widths. A speed number built from speed and beam must lie between 0.6 and 13. And the wetted keel can't be longer than the hull.

Six of the twenty don't depend on speed at all: freeboard, hull depth, both voltage checks and both center-of-gravity checks. They decide whether a design has any legal speed. The other fourteen get harder as speed rises, and together they set the top speed.

What we minimise

Race time, and nothing else. There is no cost term, and no goal for weight beyond the limits above.

For one design, the model finds the top speed like this. Try 8 mph, then 12, 16 and so on up to 60. Remember the highest speed at which all twenty checks pass. Then narrow in on the edge by repeated halving until it is pinned down to a tenth of a mile per hour. The race time at that speed is the design's score. (Inside the search the scan is coarser, to be quicker.)

If no speed passes, the design gets a score of 1000 plus a measure of how badly it breaks the rules at 20 mph. That nudges the search toward designs that work.

To search over designs we use differential evolution: keep a population of candidate designs, mix and mutate the good ones, keep the improvements. The notebook runs it with three different random seeds. It is a good way to explore, but it doesn't prove that no better design exists. If three seeds agree, that is reassuring, not conclusive.

Part II of the notebook also tries other ways of searching the same space (random search, dual annealing and a local search), and two other objectives. Both of those fix the speed at a target of 25 mph and ask a different question of the same twenty checks. One asks for the lightest boat that can run that speed. The other asks for the boat that uses the least energy over the course at that speed. An infeasible design scores 1000 plus 100 times how badly it breaks the rules. Race time stays the main objective, and the rest of this document is about it.

An example

Take the default design: 8.5 ft long, 16-inch beam, 10-degree deadrise, a 4 kW motor, 14 cells in series and 6 strings. It weighs 82 lb. Its top speed is 22.56 mph, and its race time is 354 seconds, under six minutes. The project's benchmark is seven.

Table 2: Calculated values for the baseline design at $v^* = 22.56$ mph.

Quantity	Value	Unit	Quantity	Value	Unit
hull mass m_{hull}	20.43	lb	thrust T	110.1	N
battery mass m_{bat}	14.88	lb	running trim τ	2.002	deg
motor mass m_{mot}	7.40	lb	wetted length / beam λ	3.216	–
total mass m	82.01	lb	beam speed coeff. C_v	5.052	–
LCG/ L	0.3373	–	shaft power P_{shaft}	1708	W
pack energy E_{pack}	1512	Wh	bus power P_{bus}	1928	W
start charge s_0	75.5	%	race time T_{race}	353.9	s
V_{oc}	55.5	V	energy used E_{used}	189.5	Wh
static draft	2.34	in	loaded voltage V_{load}	54.26	V
freeboard	9.66	in	bus current I	35.5	A
rated current I_{rated}	88.2	A	end charge s_{end}	63.0	%
I_{lim}	90	A	end voltage V_{end}	52.77	V

Now ask what stops it going faster. It isn't the motor, which is using about half of what it's allowed. It isn't the battery, which is using about half its allowed current and about a quarter of its allowed energy. What stops it is trim. At 22.56 mph the boat's trim is 2.002 degrees, and the method's floor is 2. Go a little faster and the boat flattens below 2 degrees, where the formulas are no longer trusted.

So the model says the top speed is where its own method stops being valid. That is an uncomfortable answer, because it says nothing about the hardware. Appendix C lists all twenty margins for this design.

What to doubt

- **The speed limit comes from the method, not the boat.** Trim binds first, so nothing after it in the chain (drag, power, energy) gets a chance to bind. That is why the made-up numbers there look unimportant. They would matter if the trim floor were relaxed.
- **Nothing stops the boat from being narrow.** There is no rule about stability, packaging or ride. The notebook reports that its searches take the narrowest beam and a high deadrise. When a variable ends up on its bound, the model is telling you it is missing a rule.
- **Most inputs are placeholders.** The cell data, the motor weight formula, propeller efficiency, the hull’s fullness (prismatic coefficient), the wave height, the current, the heights of components and the laminate weights. Appendix B marks each one.
- **One check is zero by construction.** The charge level is chosen so the pack voltage lands exactly on 55.5 volts, so for 14 cells the voltage margin is zero up to rounding. It passes only because the arithmetic rounds the right way. A check written as “at least zero” on a number that is zero by design is fragile.
- **Propeller pitch and diameter do nothing.** With a constant propeller efficiency they change only numbers the model prints. Wave height matters only through freeboard.
- **The speed scan trusts the highest passing speed.** It doesn’t check that the speeds below it also pass. A design that passes at 12 and 20 mph but not at 16 would be scored at about 20.
- **Two small quirks.** Turning off the validity checks (`ENFORCE_VALIDITY = False`) lets a design whose planing solve failed count as feasible; the default is on. And the score of 1000 for infeasible designs is only safely worse than feasible ones above about 8.35 mph, since slower boats take more than 1000 seconds.

What to replace next

Real cell data first: resistance, continuous current and the voltage curve. Then a real motor weight formula and voltage rating, a propeller model, and the hull’s fullness. Then the wave height and current for the actual venue, and real component heights. The notebook leaves out transom beam, bow deadrise and keel curve because OpenPlaning can’t use them.

A The formulas, in order

These are the exact formulas behind the chain described in the main text, in the order the notebook computes them. Nothing here is chosen. Every value follows from the ten decisions, the constants in Appendix B and the values before it.

A.1 Hull geometry and mass

The hull is prismatic: a V-bottom section of chine beam b and deadrise β with vertical sides up to the depth D , the same from transom to bow. With $b_{\text{ft}} = b/12$ and $t = \tan \beta$, the chine sits at height

$$h_c = \frac{1}{2} b_{\text{ft}} t \quad [\text{ft}] \quad (\text{chine_height_ft}), \quad (1)$$

and the side height above the chine is $s_h = \max(D/12 - h_c, 0)$. The shell area is the sum of bottom, two sides, deck and transom:

$$A_{\text{shell}} = \underbrace{\frac{b_{\text{ft}} L}{\cos \beta}}_{\text{bottom}} + \underbrace{2 s_h L}_{\text{sides}} + \underbrace{b_{\text{ft}} L}_{\text{deck}} + \underbrace{b_{\text{ft}} s_h + \frac{1}{2} b_{\text{ft}} h_c}_{\text{transom}} \quad [\text{ft}^2], \quad m_{\text{hull}} = \rho_{\text{lam}} A_{\text{shell}} + m_{\text{str}} \quad [\text{lb}]. \quad (2)$$

A.2 Battery pack

With $n = S n_p$ cells,

$$E_{\text{pack}} = n q_c V_{\text{nom}} \quad [\text{Wh}], \quad m_{\text{bat}} = n m_c (1 + \kappa_o) \quad [\text{lb}], \quad R_{\text{pack}} = \frac{S}{n_p} r_c \quad [\Omega], \quad I_{\text{lim}} = n_p I_{c,\text{max}} \quad [\text{A}]. \quad (3)$$

Series cells add resistance and parallel strings share it, so more parallel strings reduce voltage sag.

Start-of-race charge (derived, not chosen). The pack starts at the highest state of charge at which its open-circuit voltage stays at or below the voltage rule, capped at 100%:

$$s_0 = \begin{cases} 1 & S V_{\text{full}} \leq V_{\text{lim}}, \\ \text{OCV}^{-1}(V_{\text{lim}}/S) & \text{otherwise,} \end{cases} \quad V_{\text{oc}} = S \cdot \text{OCV}(s_0). \quad (4)$$

For the baseline, $S = 14$ gives $14 \times 4.2 = 58.8 > 55.5 \text{ V}$, so the pack is charged only to $s_0 = 75.5\%$ and $V_{\text{oc}} = 55.5 \text{ V}$. For $S = 12, 13$ the pack starts full.

A.3 Motor and propeller

$$m_{\text{mot}} = (1 + 1.6 P_m)(1 + 6(\eta_m - 0.90)) \quad [\text{lb}], \quad I_{\text{rated}} = \frac{1000 P_m}{\eta_m S V_{\text{nom}}} \quad [\text{A}]. \quad (5)$$

The mass fit is a placeholder: it rises with rated power and with efficiency so the search cannot simply take the biggest, most efficient motor. The rated bus current I_{rated} uses the *nominal* pack voltage. Reported propeller numbers (diagnostics only, no constraint):

$$\text{rpm} = \frac{1056 v}{p \sigma_s}, \quad v_{\text{tip}} = \pi \frac{d_p}{12} \frac{\text{rpm}}{60} \quad [\text{ft/s}], \quad K_v = \frac{\text{rpm}}{V_{\text{load}}}. \quad (6)$$

A.4 Mass and balance

The boat is six point masses. With x the fraction of L forward of the transom and z the height above the keel:

Component i	Mass m_i (lb)	Position x_i	Height z_i (in)
hull	m_{hull} (2)	0.45	$\zeta_h D$
payload	$m_{\text{pay}} = 30$	ξ_p	$z_{\text{pay}} = 8$
battery	m_{bat} (3)	ξ_b	$z_{\text{bat}} = 4$
motor	m_{mot} (5)	0.10	$z_{\text{mot}} = 4$
propeller	$m_{\text{prop}} = 0.5$	0.00	$z_{\text{mot}} = 4$
fixed equipment	$m_{\text{fix}} = 8.8$	0.40	$z_{\text{fix}} = 8$

$$m = \sum_i m_i, \quad \frac{\text{LCG}}{L} = \frac{\sum_i m_i x_i}{m} \quad (\text{LCG in ft}), \quad \text{VCG} = \frac{\sum_i m_i z_i}{m} \quad [\text{in}], \quad r_g = \kappa_g L. \quad (7)$$

The 30 lb payload, propeller and fixed equipment are constants, so total mass moves with the hull, battery and motor.

A.5 Hydrostatics

Freeboard is measured at rest, which is conservative because the boat rides higher when planing. The section area at draft T (ft) is

$$A_{\text{sec}}(T) = \begin{cases} T^2/t & T \leq h_c, \\ \frac{1}{2}b_{\text{ft}}h_c + b_{\text{ft}}(T - h_c) & T > h_c. \end{cases} \quad (8)$$

The static draft inverts this for the displaced volume m/ρ_w :

$$A^* = \frac{m/\rho_w}{C_p L}, \quad T_{\text{stat}} = \begin{cases} \sqrt{A^* t} & A^* \leq \frac{1}{2}b_{\text{ft}}h_c, \\ h_c + \frac{A^* - \frac{1}{2}b_{\text{ft}}h_c}{b_{\text{ft}}} & \text{otherwise,} \end{cases} \quad \text{freeboard} = D - 12 T_{\text{stat}} \quad [\text{in}]. \quad (9)$$

A.6 Planing equilibrium (OpenPlaning)

For a given speed the boat is assumed to run at the trim and wetted length where lift balances weight and pitching moments balance. The notebook builds an `OpenPlaning PlaningBoat` from SI versions of the quantities above:

$$\begin{aligned} U &= 0.44704 v, & W &= 4.44822 m, & \text{beam} &= 0.0254 b, & \text{l cg} &= 0.3048 \text{LCG}_{\text{ft}}, \\ \text{vcg} &= 0.0254 \text{VCG}, & r_g &= 0.3048 \kappa_g L, & \rho &= 16.01846 \rho_w, & v_T &= 0.0254 \cdot 4, \end{aligned}$$

with deadrise β , thrust angle $\varepsilon = 0$, thrust longitudinal offset 0 and kinematic viscosity ν . (The wave height H_w is passed as `H_sig`, but the notebook only calls the steady-trim and force routines, which do not use it; wave height therefore affects the model only through the freeboard allowance.)

Let $F_n = U/\sqrt{g b}$ be the beam speed coefficient (the notebook's `cv`) and $\lambda = (L_K + L_C)/(2b)$ the mean wetted length over beam, where L_K and L_C are the keel and chine wetted lengths that follow from the trim τ and the waterline height. OpenPlaning's hydrodynamic force is Savitsky's planing-lift relation:

$$\begin{aligned} C_{L0} &= \tau^{1.1} \left(0.012 \lambda^{1/2} + 0.0055 \frac{\lambda^{5/2}}{F_n^2} \right), & C_{L\beta} &= C_{L0} - 0.0065 \beta C_{L0}^{0.6}, \\ F_z &= C_{L\beta} \frac{1}{2} \rho U^2 b^2, & F_x &= F_z \tan \tau, \\ l_p &= \lambda b \left(0.75 - \frac{1}{5.21 (F_n/\lambda)^2 + 2.39} \right), & M_{\text{cg}} &= -\frac{F_z}{\cos \tau} (\text{l cg} - l_p). \end{aligned} \quad (10)$$

Skin friction is added using the ITTC-1957 friction line plus a hull-roughness allowance (OpenPlaning default average roughness $150 \mu\text{m}$): $R_f = \frac{1}{2} \rho (C_f + \Delta C_f) S_w U^2$ with wetted bottom area S_w , contributing $R_f \cos \tau$ to the horizontal force. Air drag, flaps and the roughness lift change are left at their zero defaults.

The solver (`get_steady_trim`, Newton iteration, trim limited to $[0.5^\circ, 35^\circ]$) finds the waterline height and trim τ for which the net vertical force and the net pitching moment about the centre

of gravity are both zero, including the thrust's vertical component and its moment about the CG. The thrust the propeller must supply is then

$$T = \left| \sum F_x \right| = F_z \tan \tau + R_f \cos \tau \quad [\text{N}], \quad (11)$$

the horizontal resultant of the water forces. The outputs used downstream are τ (`trim_deg`), T (`thrust_n`), L_K (`keel_m`), λ (`lam`) and $C_v = U/\sqrt{9.80665b}$ (`cv`). If `OpenPlaning` raises (no equilibrium) or T is not finite, the planing solve is marked failed (`ok = False`) and the design cannot be evaluated at that speed.

A.7 Race time

Race time uses speed over the ground, $v - c$, and charges the allowance t_a at cruise power:

$$T_{\text{race}}(v) = \begin{cases} 3600 \frac{D_c}{v - c} + t_a & \text{"worst" (default),} \\ 3600 \left(\frac{D_c/2}{v - c} + \frac{D_c/2}{v + c} \right) + t_a & \text{"outback",} \end{cases} \quad T_{\text{race}} = \infty \text{ if } v \leq c. \quad (12)$$

Here v is the speed through the water. With the defaults, $D_c = 2$ mi, $c = 1$ mph, $t_a = 20$ s.

A.8 Power chain and energy

$$P_{\text{shaft}} = \frac{T \cdot 0.44704 v}{\eta_p} [\text{W}], \quad P_{\text{bus}} = \frac{P_{\text{shaft}}}{\eta_m} + P_h [\text{W}], \quad E_{\text{used}} = \frac{P_{\text{bus}} T_{\text{race}}}{3600} [\text{Wh}]. \quad (13)$$

Constant propeller efficiency η_p is a placeholder, so pitch and diameter cannot change the power.

A.9 Battery under load

Solving $V = V_{\text{oc}} - I R_{\text{pack}}$ with $I = P_{\text{bus}}/V$ gives $V^2 - V_{\text{oc}}V + R_{\text{pack}}P_{\text{bus}} = 0$, whose larger root is

$$V_{\text{load}} = \frac{V_{\text{oc}} + \sqrt{V_{\text{oc}}^2 - 4 R_{\text{pack}} P_{\text{bus}}}}{2}, \quad \text{defined only if } V_{\text{oc}}^2 \geq 4 R_{\text{pack}} P_{\text{bus}}, \quad (14)$$

otherwise the pack cannot deliver that power and V_{load} is undefined (`nan`). The remaining battery quantities are

$$I = \frac{P_{\text{bus}}}{V_{\text{load}}}, \quad s_{\text{end}} = s_0 - \frac{E_{\text{used}}}{E_{\text{pack}}}, \quad V_{\text{end}} = V_{\text{load}} \Big|_{V_{\text{oc}} \leftarrow S \cdot \text{OCV}(\max(s_{\text{end}}, 0))}. \quad (15)$$

That is, V_{end} is the root (14) with the open-circuit voltage replaced by its value at the end-of-race charge. Discharge is modelled at constant bus power and state of charge falls linearly with energy used. There is no thermal or rate-dependent capacity model.

A.10 Index: what each calculated value depends on

Table 3: Calculated values and the decision variables they depend on. “*” means all ten searched variables.

Quantity	Equation	Depends on
$h_c, A_{\text{shell}}, m_{\text{hull}}$	(1), (2)	L, b, β, D (and h_c only on b, β)
$E_{\text{pack}}, m_{\text{bat}}, R_{\text{pack}}, I_{\text{lim}}$	(3)	S, n_p
s_0, V_{oc}	(4)	S only
$m_{\text{mot}}, I_{\text{rated}}$	(5)	P_m, η_m (and S for I_{rated})
$m, \text{LCG}, \text{VCG}$	(7)	$L, b, \beta, D, \xi_p, \xi_b, P_m, \eta_m, S, n_p$
static draft, freeboard	(9)	m (so all of *), L, b, β, D
$\tau, T, \lambda, L_K, C_v$	(10)–(11)	* and v
T_{race}	(12)	v only
$P_{\text{shaft}}, P_{\text{bus}}, E_{\text{used}}$	(13)	* and v
$V_{\text{load}}, I, s_{\text{end}}, V_{\text{end}}$	(14), (15)	* and v

B The constants

The **Fixed** dataclass holds everything that is not a decision. It is listed here once so the equations in the next sections can refer to symbols. Items marked † are placeholders, not measured or sourced values.

Table 4: Constants of the model (default **Fixed** and **Cell**).
† marks placeholders.

Symbol	Code name	Unit	Value	Meaning
<i>Rules</i>				
m_{pay}	<code>payload_lb</code>	lb	30	Removable payload, fixed
h_{rule}	<code>freeboard_rule_in</code>	in	3.0	Minimum freeboard
V_{lim}	<code>voltage_limit_v</code>	V	55.5	Maximum pack voltage at full charge
<i>Environment</i>				
ρ_w	<code>water_lb_ft3</code>	lb/ft ³	62.4	Fresh-water density
ν	<code>water_nu</code>	m ² /s	1.14×10^{-6}	Kinematic viscosity
H_w	<code>wave_height_in</code>	in	4.0 [†]	Wave height (to be set from the venue)
f_w	<code>wave_allowance_factor</code>	–	0.5	Freeboard must cover $f_w H_w$ above the rule
c	<code>current_mph</code>	mph	1.0 [†]	Opposing current
–	<code>course_mode</code>	–	"worst"	Whole course against the current; "outback" gives equal legs
<i>Mission</i>				

Symbol	Code name	Unit	Value	Meaning
D_c	course_miles	mi	2.0	Course length
t_a	allowance_s	s	20	Extra time, charged at cruise power
P_h	hotel_w	W	30	Electronics load
<i>Design margins</i>				
ϵ_u	usable_energy_fraction	—	0.70	Fraction of start-of-race energy that may be used
ρ_r	rating_fraction	—	0.80	Fraction of motor and cell ratings that may be used
$[\ell_-, \ell_+]$	lcg_band	—	[0.30, 0.45]	Allowed LCG/ L from the transom
$V_{c,\min}$	min_cell_voltage_end	V	3.0	Per-cell voltage floor at the finish
<i>Hull construction (synthetic)</i>				
ρ_{lam}	laminate_lb_ft2	lb/ft ²	0.41 [†]	Shell laminate mass per area
m_{str}	hull_structure_lb	lb	4.4 [†]	Structure allowance
m_{fix}	fixed_equipment_lb	lb	8.8 [†]	Aggregate fixed equipment
C_p	prismatic_coeff	—	0.85 [†]	Static displaced volume = $C_p \times \text{section area} \times L$
<i>Heights above the keel and inertia</i>				
z_{pay}	payload_z_in	in	8 [†]	Payload height
z_{bat}	battery_z_in	in	4 [†]	Battery height
z_{mot}	motor_z_in	in	4 [†]	Motor and propeller height
z_{fix}	fixed_z_in	in	8 [†]	Fixed-equipment height
ζ_h	hull_z_frac_of_depth	—	0.45 [†]	Hull centre height = $\zeta_h D$
κ_g	gyradius_frac	—	0.25 [†]	Radius of gyration = $\kappa_g L$
v_T	thrust_height_in	in	4.0 [†]	Thrust line height above the keel
<i>Propulsion</i>				
η_p	prop_efficiency	—	0.65 [†]	Constant propeller efficiency (no propeller model)
m_{prop}	prop_mass_lb	lb	0.5 [†]	Propeller mass
$V_{m,\max}$	motor_max_voltage_v	V	60 [†]	Motor maximum voltage
σ_s	slip_factor	—	0.85	Slip factor in the rpm equation
<i>Cell (generic 21700, Cell)</i>				
q_c	ah	Ah	5.0 [†]	Cell capacity
V_{nom}	v_nominal	V	3.6 [†]	Nominal cell voltage
V_{full}	v_full	V	4.2 [†]	Full-charge cell voltage
r_c	resistance_ohm	Ω	0.015 [†]	Cell internal resistance

Symbol	Code name	Unit	Value	Meaning
m_c	<code>mass_lb</code>	lb	0.154 [†]	Cell mass
$I_{c,\max}$	<code>max_current_a</code>	A	15 [†]	Continuous current per cell
κ_o	<code>pack_overhead</code>	–	0.15 [†]	Case, BMS and wiring as a fraction of cell mass

The open-circuit-voltage curve is a generic NMC table[†], interpolated linearly:

State of charge s	0	0.1	0.2	0.3	0.5	0.7	0.8	0.9	1.0
Cell OCV(s) (V)	3.00	3.45	3.55	3.65	3.75	3.92	4.00	4.10	4.20

Component positions that are hard-coded inside `evaluate()` (fractions of L forward of the transom): hull 0.45, motor 0.10, propeller 0.00, fixed equipment 0.40. Only the payload and battery positions are decisions.

Unit conversions: 1 lbf = 4.44822162 N, 1 in = 0.0254 m, 1 ft = 0.3048 m, 1 mph = 0.44704 m/s, 1 lb/ft³ = 16.01846 kg/m³.

C The twenty margins

Each check is a margin $g_k(x, v)$, positive when it passes, with a scale σ_k . A design at speed v is *feasible* if

$$g_k(x, v) \geq 0 \quad \text{for all } k = 1, \dots, 20, \quad (16)$$

and its *total violation* (used only to steer the search toward feasibility) is

$$\text{viol}(x, v) = \sum_k \max(0, -g_k/\sigma_k). \quad (17)$$

The margins fall in four groups (`rule`, `limit`, `geometry`, `validity`). The `validity` group is switchable through `ENFORCE_VALIDITY`, which is `True` by default and is assumed throughout this document.

Table 5: All 20 margins, in the order the notebook creates them. “Depends on v ” says whether the margin changes with speed.

Code name	Group	Margin $g_k \geq 0$	Scale σ_k	Depends on v
<i>Rules</i>				
<code>freeboard</code>	<code>rule</code>	$D - 12 T_{\text{stat}} - h_{\text{rule}} - f_w H_w$	3.0	no
<code>ground_speed</code>	<code>rule</code>	$v - c$	5.0	only v
<code>voltage_rule</code>	<code>rule</code>	$V_{\text{lim}} - V_{\text{oc}}$	V_{lim}	no (only S)

continued on the next page

Code name	Group	Margin $g_k \geq 0$	Scale σ_k	Depends on v
<i>Hull geometry</i>				
depth_over_ chine	geometry	$D - 12 h_c$	12.0	no
<i>Propulsion, battery and balance limits</i>				
motor_max_ voltage	limit	$V_{m,\max} - S V_{\text{full}}$	$V_{m,\max}$	no (only S)
energy	limit	$\epsilon_u E_{\text{pack}} s_0 - E_{\text{used}}$	$\max(\epsilon_u E_{\text{pack}} s_0, 1)$	yes
shaft_power	limit	$\rho_r \cdot 1000 P_m - P_{\text{shaft}}$	$1000 P_m$	yes
battery_current	limit	$\rho_r I_{\text{lim}} - I$	I_{lim}	yes
motor_current	limit	$\rho_r I_{\text{rated}} - I$	I_{rated}	yes
pack_can_ deliver	limit	+1 if $V_{\text{oc}}^2 \geq 4R_{\text{pack}}P_{\text{bus}}$, else -1	1	yes
end_cell_ voltage	limit	$V_{\text{end}}/S - V_{c,\min}$ (-1 if V_{end} undefined)	1	yes
lcg_min	limit	$\text{LCG}/L - \ell_-$	0.1	no
lcg_max	limit	$\ell_+ - \text{LCG}/L$	0.1	no
<i>Planing-method validity (Savitsky's applicability limits)</i>				
solver_ok	validity	+1 if the planing solve succeeded, else -1	1	yes
trim_min	validity	$\tau - 2^\circ$	2	yes
trim_max	validity	$15^\circ - \tau$	15	yes
wetted_length_ ratio	validity	$4 - \lambda$	4	yes
cv_min	validity	$C_v - 0.6$	0.6	yes
cv_max	validity	$13 - C_v$	13	yes
keel_within_ hull	validity	$0.3048 L - L_K$	$0.3048 L$	yes

Here are the same margins for the default design at its top speed.

Table 6: Margins of the baseline at $v^* = 22.56$ mph. The last column is g_k/σ_k . `voltage_rule` is 0 by construction (see “What to doubt”), so the binding constraint is the smallest ratio among the rest: `trim_min`.

Constraint	Group	Margin g_k	Scale σ_k	g_k/σ_k
<code>freeboard</code>	rule	4.658	3	1.553
<code>depth_over_chine</code>	geometry	10.59	12	0.882
<code>ground_speed</code>	rule	21.56	5	4.312
<code>voltage_rule</code>	rule	0	55.5	0.000
<code>motor_max_voltage</code>	limit	1.2	60	0.020
<code>energy</code>	limit	609.9	799.5	0.763
<code>shaft_power</code>	limit	1492	4000	0.373
<code>battery_current</code>	limit	36.46	90	0.405
<code>motor_current</code>	limit	35.01	88.18	0.397
<code>pack_can_deliver</code>	limit	1	1	1.000
<code>end_cell_voltage</code>	limit	0.7691	1	0.769
<code>lcg_min</code>	limit	0.03729	0.1	0.373
<code>lcg_max</code>	limit	0.1127	0.1	1.127
<code>solver_ok</code>	validity	1	1	1.000
<code>trim_min</code>	validity	0.002044	2	0.001
<code>trim_max</code>	validity	13	15	0.867
<code>wetted_length_ratio</code>	validity	0.7835	4	0.196
<code>cv_min</code>	validity	4.452	0.6	7.421
<code>cv_max</code>	validity	7.948	13	0.611
<code>keel_within_hull</code>	validity	0.954	2.591	0.368