

Installation Instructions

Addendum to Export Unit Installation Instructions

Export Only Equipment


Split Systems & All Packaged Equipment

This addendum is applicable to all units manufactured for export-only and intended for use with R-22 refrigerant. As of January 1st, 2010, all equipment manufactured of this configuration will be shipped with a Nitrogen holding charge in compliance with U.S. Code of Federal Regulations (CFR) Title 40 part 82.

Customer orders may contain equipment manufactured in both 2009 and 2010. All units manufactured prior to 1 Jan, 2010, have been factory charged with the amount and type of refrigerant as shown on the unit rating plate. No actions should be necessary on these units.

ONLY units manufactured AFTER December 2009 will need to be charged in the field with R-22 refrigerant.

To determine if a unit will require a field charge of R-22, inspect the unit rating plate and serial #. The serial number is shown at the top of the unit rating plate and consists of a 12 digit code with 5 parts.

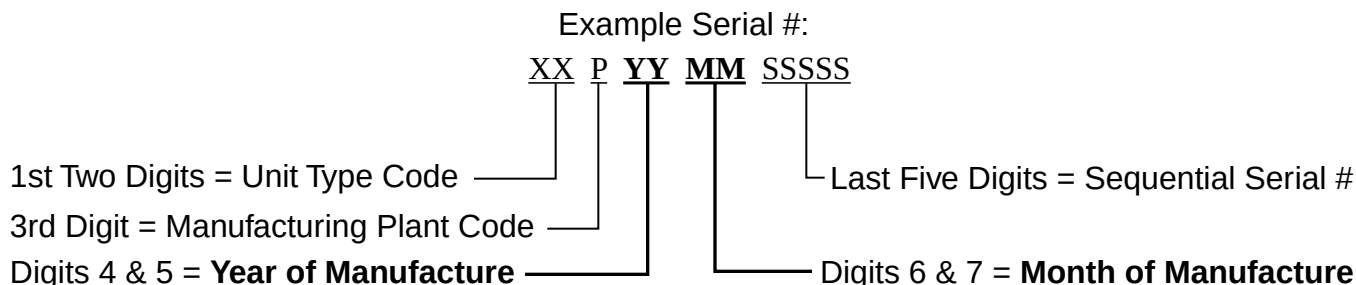

Any unit with a Year of Manufacture code in the unit serial # of 10 (or greater) and shows R-22 as the factory charged refrigerant, will require that the unit be charged with the procedure below prior to operation.

WARNING: DO NOT operate any unit while it contains a Nitrogen holding charge. Doing so may damage the units compressor.

To properly charge these units:

- 1) Read all Installation Instructions first.
- 2) Complete any brazing operations. (e.g. Split system line-sets)
- 3) Purge the nitrogen holding charge.
- 4) Evacuate the unit to 350-500 microns.
- 5) Allow the unit to remain under vacuum for at least 30 min.
- 6) Weigh-In the proper amount of new (or reclaimed) R-22 refrigerant. Refer to the Unit Rating Label or the unit installation instructions to determine the correct amount of charge.

NORDYNE
COMPLETE COMFORT. GENUINE VALUE.

Specifications & illustrations subject to change
without notice or incurring obligations (10/13).



7091540 (NEW)