



PA-CWA01 C-Wire Adapter

Pro1 Technologies

P.O. Box 3377

Springfield, MO 65808-3377

Toll Free: 888-776-1427

Web: www.pro1iaq.com

Hours of Operation: M-F 9AM - 6PM Eastern

Table of Contents Page

Product Overview	2
Wiring	3
Installation Steps	4-8

A trained, experienced technician must install this product.

Carefully read these instructions. You could damage this product or cause a hazardous condition if you fail to follow these instructions.

Una version en español de este manual se puede descargar en la pagina web de la compañía.

Installation Tip: Electrical Hazard

Failure to disconnect the power before beginning to install this product can cause electrical shock or equipment damage.




Warning:

All components of the control system and the thermostat installation must conform to Class II circuits per the NEC Code.

Product Overview

Many houses built before digital thermostats were popular do not have a common wire in the wall to power the thermostat. PRO1 Wi-Fi thermostats require 24VAC hardwire to operate. The C-Wire Adapter provides a solution to provide 24VAC power to PRO1 Wi-Fi thermostats in applications where a C wire is unavailable while retaining all control lines Y, G, W, etc.

Adapter

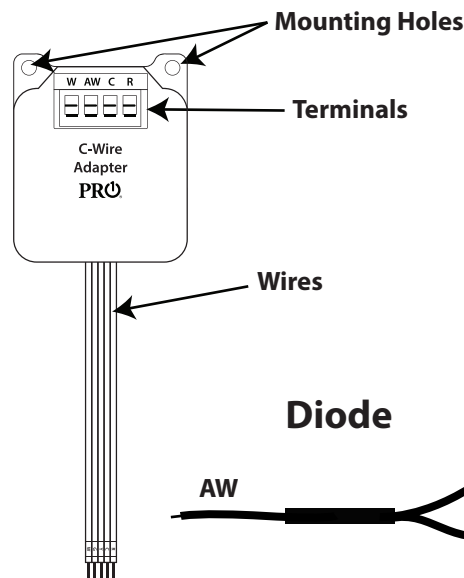

2

Wiring

Installation Steps


Wiring

Installation Steps

- 1 24 Volt
- 2 Factory-installed jumper. Remove only when installing on 2-transformer systems
- 3 Common wire required for WiFi thermostats.
- 4 Provided Wire Nut

— Existing thermostat wire
 — Supplied wire attached to devices
 - - - Repurpose wire

Custom 1H/1C System Installation Using C-Wire Adapter

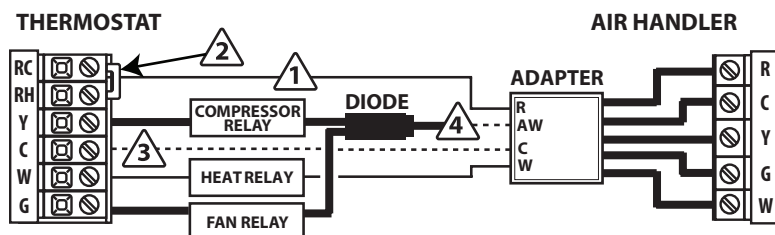


1. Turn Off Power

Locate your electrical box and switch off the power to your HVAC equipment. Some systems may have a dedicated switch near the equipment.

Note: Turning off the thermostat does not power down the HVAC equipment.

2. Access the Thermostat

- Remove the thermostat from its subbase by gently pulling it forward to expose the control wires.
- Take a picture or note the terminal labels and wire colors connected to the thermostat.

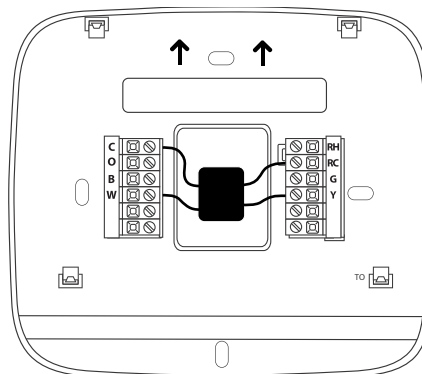

4

3

Rev. 2503

3. Relabel Existing Wires

- **G Wire:** Repurpose the wire connected to the "G" terminal as the "C" wire. Note its color for later.
- **Y Wire:** Repurpose the wire connected to the "Y" terminal as the Adapter Wire (AW). Note its color for later.

Original Terminal	Wire Color	New Adapter Terminal
R		R
G		C
Y		AW
W		W

4. Connect the Thermostat Wires

- Attach the repurposed "G" wire to the "C" terminal on the thermostat.
- Connect the repurposed "Y" wire to the AW wire on the provided diode using the wire nut.
- Wire the diode to the thermostat subbase using the "G" and "Y" terminals, matching the labels and wire colors for future reference.

5. Access the HVAC Equipment

- Remove the front cover of your air handler to locate the control board. You should see the same terminals as on the thermostat.
- Take a picture or note the terminal labels and wire colors for future reference.

6. Disconnect and Prepare Wires

- Remove the existing wires from the control board terminals.
- Strip 3/4" of insulation from each wire to prepare them for connection.

5

6


Installation Steps

Installation Steps

7. Connect the Wires to the Adapter

- Reference the following wiring guide:
 - R wire = R terminal
 - G wire = C terminal
 - Y wire = AW terminal
 - W wire = W terminal
- Ensure that all exposed wire ends are securely inserted into their quick-connect locations.

Note: Exposed wires must be at least 3/4".

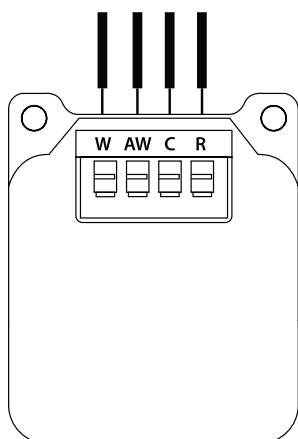

7

8. Connect The Adapter Wires to the Control Board

Connect each labeled wire from the C-wire adapter to the matching terminal on the control board.

9. Attach the C-Wire Adapter

Mount the adapter inside the air handler using the included screws or adhesive pad. Ensure the wires are not constrained and have plenty of space.

10. Restore Power

Turn the power back on for your HVAC equipment.

11. Final Test

Verify that the compressor **Y** and fan **G** are functioning correctly. If issues arise, double-check the wiring at both the thermostat and the air handler.

8