

Product Data



Note: Infinity Control compatible with Infinity rated indoor equipment only.

INFINITY™ CONTROL


Carrier specializes in creating a customized home comfort system tailored to your needs with our broad selection of residential heating and cooling products. The Infinity Control System is the ultimate control center for all of your system components. When you add an Infinity Control to a compatible variable speed furnace, fan coil, or small packaged product, you will enjoy longer heating and cooling cycles at lower fan speeds for a more consistent temperature throughout your home. By adding an Infinity or Performance compatible outdoor unit, your benefits will increase even more. Benefits include better humidity and temperature control as well as a more energy efficient comfort system.

INDUSTRY LEADING FEATURES / BENEFITS

Carrier's revolutionary Infinity Control is the smart control of the future. The Infinity Control features a backlit liquid crystal display, making it easier to read the temperatures, even at night. Intuitive prompts let you program everything from humidity levels to fan speeds, giving you the ultimate control over your home comfort. Other features include.

- 4-wire installation from each component in the system
- Intuitive on screen prompts for ease of installation and service
- *IdealHumidity™* settings are the default no longer requiring increased system setup
- Complete integration of the temperature, humidity and ventilation in every season
- 7-day programmability with 2 or 4 periods per day
- Easy timed-override schedule
- Simplified vacation schedules
- Day-at-a-glance programming for simplified ease of use
- Programmable fan by period
- TrueSense™ Dirty Filter Detection
- Indoor Air Quality pop up reminders
- General maintenance reminder messaging
- Optional Remote Access Kit can be added for access to your system from the internet or phone.

MODEL NUMBER NOMENCLATURE

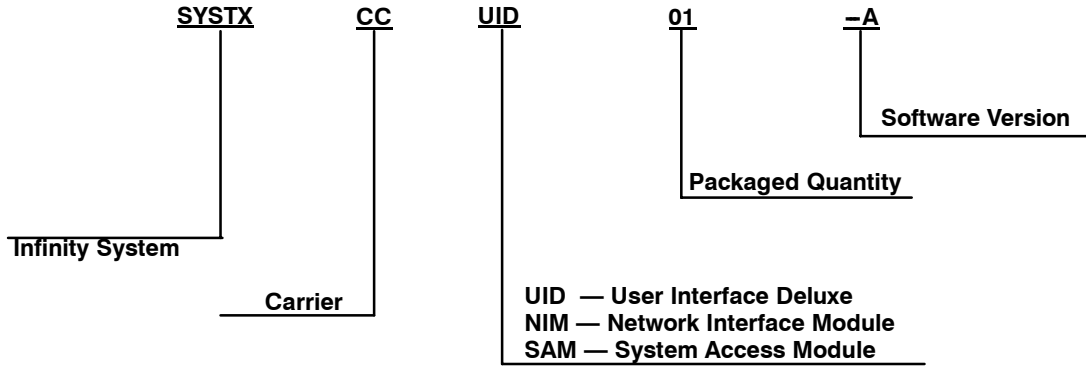


SYSTXCCUID01-A



As an Energy Star® Partner, Carrier Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency

INFINITY CONTROL

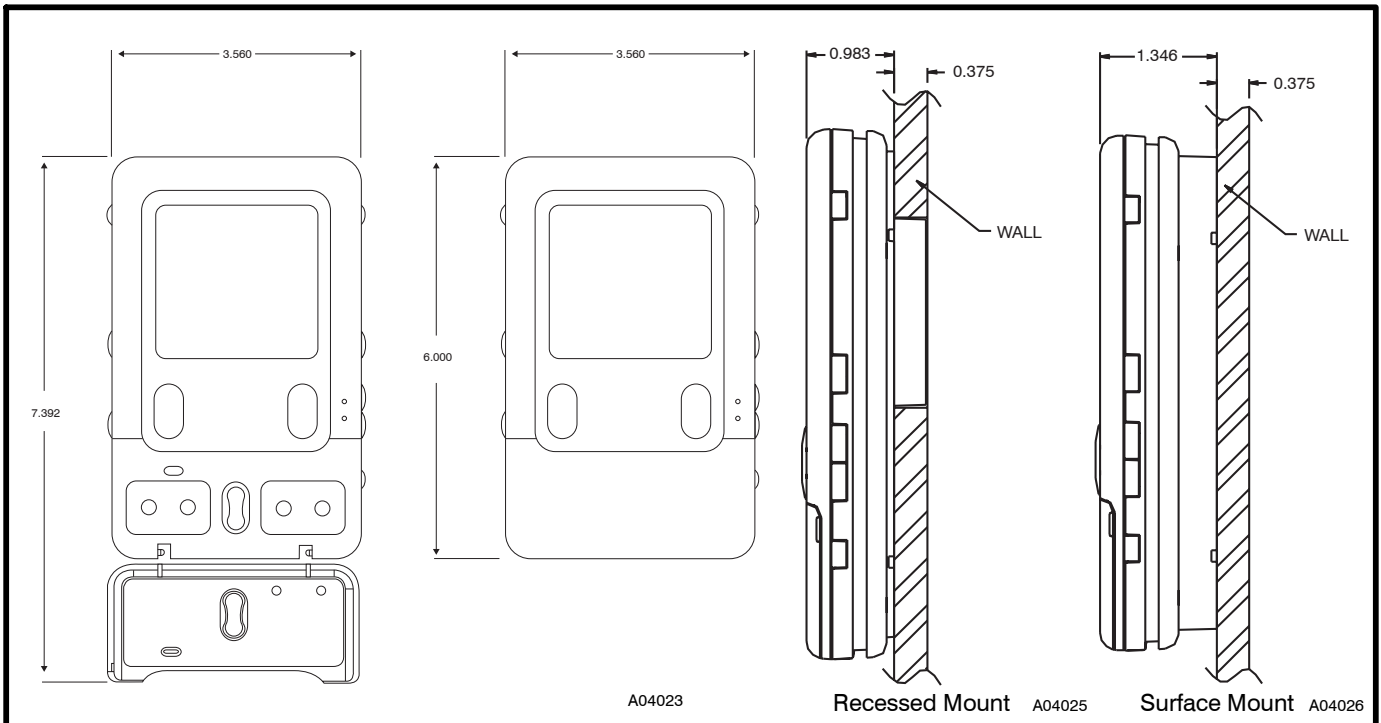

PRODUCT DATA INFORMATION

Compatible Products

Air Conditioning units - 38TDB

Heat Pumps - 38YDB

Gas Furnace - 58MV, 58CVA

Fan Coils - FE

Small Packaged Products - 50XZ/XP, 48XZ/XP

Physical Characteristics

Dimensions: See drawing

Appearance: Plastic, white color, textured

Electrical Characteristics/Communication

Input Volts/Amps 24 vac

Each device in the Infinity System has a four-pin connector labeled ABCD. It is recommended that the following color code be used when wiring each device:

A — Green = Data A

B — Yellow = Data B

C — White = 24VAC (Com)

D — Red = 24VAC (Hot)

Environmental Requirements:

Operating Temperature/Relative Humidity:

User interface and all sensors: 32°F to 104°F, 95% rh non-condensing

Storage Temperature/Relative Humidity:

User interface: - 40°F to 134°F, 95% rh non-condensing

Applications:

Up to 2 stages cool/3 stages heat

HybridHeat™ (Heat pump with gas furnace backup)

Program Specifications:

Temperature set point range: 40°F to 90°F

Separate heat and cool set points

Programming days: 7 day

Programming periods:

2-Day, Sleep

4-Wake, Day, Eve, Sleep

Non-Programmable

Auto changeover (may be disabled)

Programmable fan (Installer selectable)

Humidity Sensor Offsets

Auto Changeover Timer (installer adjustable)

Smart Recovery (in heating and cooling)

Hold function

Copy functions: Copy period, day and zone

Permanent memory

Humidity display and control

Temperature sensor offsets (indoor and outdoor)

TrueSense™ Dirty Filter Detection

Wiring Requirements:

Power supply: Dedicated 24 vac, 40 va, 60 hz, via indoor equipment ABCD Connector. Isolated transformer, field supplied.

Wiring material: Standard thermostat wire 18 to 24 gage.

SYSTXCCUID01 - A

Equipment

Description	Part No.
Infinity Zone Control (4-Wire User Interface w/ multiple functionality)	SYSTXCCUID01-A
Infinity Network Interface Module (NIM)	SYSTXCCNIM01*

* Required for ventilator control

Required for HybridHeat applications

Required for use with 2-stage (non-communicating) AC or HP (38TDB/38YDB)

Optional Accessories

Description	Part No.
Infinity Remote Room Sensor	SYSTXCCRRS01*
Infinity Damper Control Module	SYSTXCC4ZC01†
Infinity Large Decorative Backplate	SYSTXX0LBP01
10 Pack Replacement – Green Indoor Unit Plug (ABCD Connector)	SYSTXGRPLG10
Infinity System Access Module (SAM)	SYSTXCCSAM01

* Not required, but may be used to remote sense indoor room temperature.

† Backplate dimensions – 5.75-in. wide x 6-in. high.

