



UNIVERSITY OF  
**ILLINOIS**  
URBANA-CHAMPAIGN

# SE 423: Introduction to Mechatronics

## Lecture 3: GPIO

Marius Juston

Wednesday, January 28<sup>th</sup>, 2026

## Office Hours:

- **Monday:** 4-6 PM, Neel
- **Tuesday:** 11-1 PM, Lakshmi
- **Tuesday:** 1-3 PM, Samuel
- **Tuesday:** 2-5 PM, Dan & Marius

**Lab:** Starting [Lab 1](#) this week, will be using C so be sure to be prepared! ( don't forget to turn in commented code)!

## Homeworks (Next week):

- All check-offs for [homework 1](#) are due **February 3, 5PM**
- Answers and code submissions for homework 1 are due **February 4, 9AM**



## LabVIEW (Next week):

- All check-offs for [LabVIEW 1](#) are due **February 5, 5PM**


**Small easy Quiz at the end of this lecture, like Monday, due at 11AM.**

# Questions?

Homework, Lab, LabVIEW, quiz questions?  
( I sent an update for the reason for the 2 counters question )

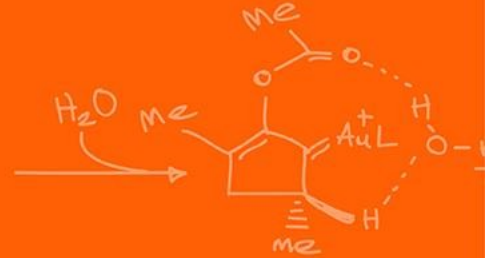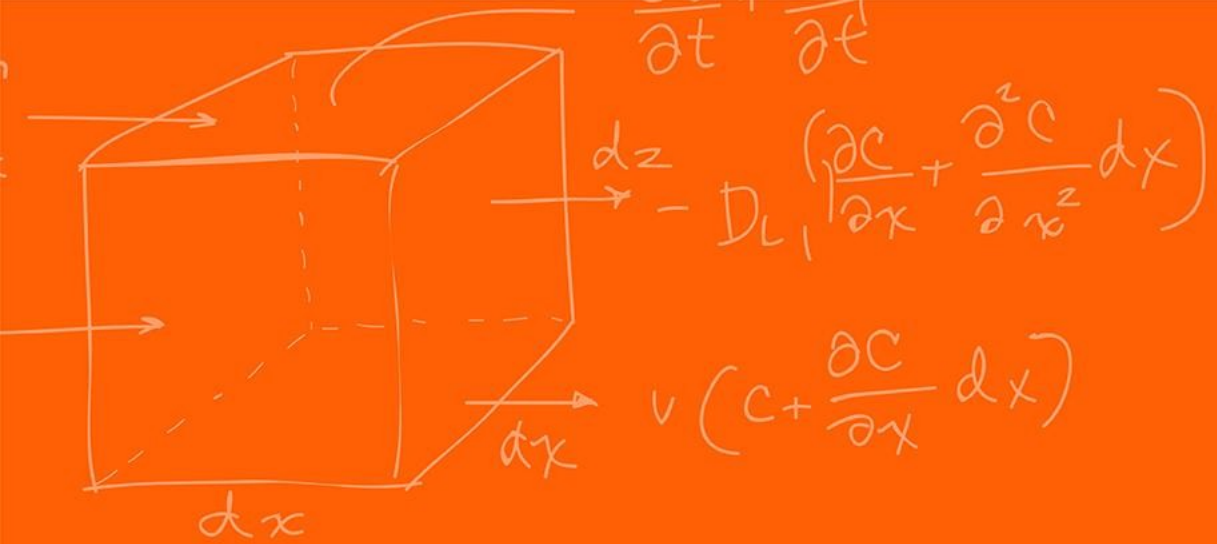

# Digital Inputs / Outputs

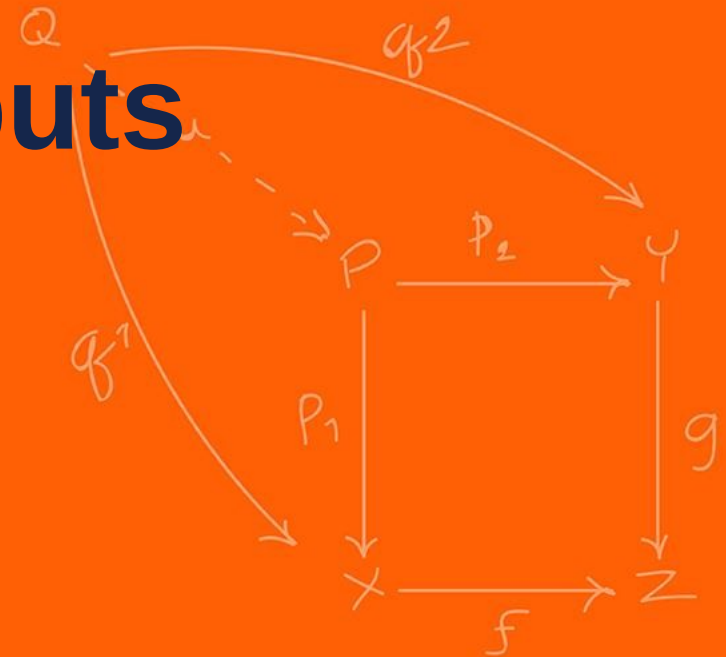

## **What does it mean for something to be “digital”?**

It is the control of your system / sensor using binary (0 or 1) signals.

Digital I/O is the lowest level electrical interface between software and hardware.

Almost every mechatronic system constrains at least one digital input / output.

Sensors often reduce complex physical phenomena to binary decisions ( limit reached / not reached, turned on or off )

Digital signals are inherently discrete

Digital I/O provides deterministic, low-latency interaction with the environment

A digital output drives a pin to a logic level:

- Logic 0 (LOW)  $\rightarrow \approx 0 \text{ V}$
- Logic 1 (HIGH)  $\rightarrow \approx 3.3 \text{ V} / 5 \text{ V}$

Logic levels are represented by voltage ranges, not exact values

Internally controlled by a latch / register

Can source or sink limited current (GPIO should not be used to drive power)

Digital outputs are not power supplies and must not directly drive loads. The GPIO have a total maximum of current it can supply, shared throughout all the pins.


If you power too many devices using GPIO, you might run out of power!

Examples:

- Controlling LEDs

Digital output control consists of :

1. Choosing the GPIO number
2. Selecting the GPIO pin mux selection
3. Setting direction = output

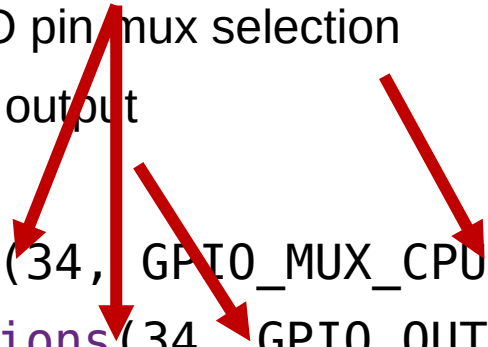


```
GPIO_SetupPinMux(34, GPIO_MUX_CPU1, 0);  
GPIO_SetupPinOptions(34, GPIO_OUTPUT, GPIO_PUSHPULL);
```

You never write voltage, you write **bits in registers**

|                |           | GPIO Mux Selection |             |          |            |          |          |          |        |           |
|----------------|-----------|--------------------|-------------|----------|------------|----------|----------|----------|--------|-----------|
|                |           | GPIO Index         | 0,4,8,12    | 1        | 2          | 3        | 5        | 6        | 7      | 15        |
| ME461          | LaunchPad | GPyGMUXn           | 00,01,10,11 | 00b      |            |          | 01b      |          |        | 11b       |
| Default        | Pins      | GPyMUXn            | 00b         | 01b      | 10b        | 11b      | 01b      | 10b      | 11b    | 11b       |
| PWM1A          | 40/J4.10  | GPIO0              | EPWM1A      |          |            |          |          | SDAA     |        |           |
| PWM1B          | 39/J4.9   | GPIO1              | EPWM1B      |          |            | MFSRB    |          | SCLA     |        |           |
| PWM2A          | 38/J4.8   | GPIO2              | EPWM2A      |          |            |          | OUTXBAR1 | SDAB     |        |           |
| PWM2B          | 37/J4.7   | GPIO3              | EPWM2B      | OUTXBAR2 |            | MCLKRB   | OUTXBAR2 | SCLB     |        |           |
| PWM3A          | 36/J4.6   | GPIO4              | EPWM3A      |          |            |          | OUTXBAR3 | CANTXA   |        |           |
| PWM3B          | 35/J4.5   | GPIO5              | EPWM3B      | MFSRA    |            | OUTXBAR3 |          | CANRXA   |        |           |
| EQEP3A         | 80/J8.10  | GPIO6              | EPWM4A      | OUTXBAR4 | EXTSYNCOUT | EQEP3A   |          | CANTXB   |        |           |
| EQEP3B         | 79/J8.9   | GPIO7              | EPWM4B      | MCLKRA   | OUTXBAR5   | EQEP3B   |          | CANRXD   |        |           |
| PWM5A          | 78/J8.8   | GPIO8              | EPWM5A      | CANTXB   | ADCSOCAO   | EQEP3S   |          | SCITXDA  |        |           |
| PWM5B          | 77/J8.7   | GPIO9              | EPWM5B      | SCITXDB  | OUTXBAR6   | EQEP3I   |          | SCIRXDA  |        |           |
| PWM6A          | 76/J8.6   | GPIO10             | EPWM6A      | CANRXB   | ADCSOCBO   | EQEP1A   |          | SCITXDB  |        | UPP-WAIT  |
| GPIO11         | 75/J8.5   | GPIO11             | EPWM6B      | SCIRXDB  | OUTXBAR7   | EQEP1B   |          | SCIRXDB  |        | UPP-START |
| CANTXB         | J12       | GPIO12             | EPWM7A      | CANTXB   | MDXB       | EQEP1S   |          | SCITXDC  |        | UPP-ENA   |
| GPIO14/SCITXB  | 74/J8.4   | GPIO14             | EPWM8A      | SCITXDB  | MCLKXB     |          |          | OUTXBAR3 |        | UPP-D6    |
| GPIO15/SCIRXDB | 73/J8.3   | GPIO15             | EPWM8B      | SCIRXDB  | MFSXB      |          |          | OUTXBAR4 |        | UPP-D5    |
| BUZZER         | 33/J4.3   | GPIO16             | SPISIMOA    | CANTXB   | OUTXBAR7   | EPWM9A   |          |          | SD1_D1 | UPP-D4    |
| CANRXB         | J12       | GPIO17             | SPISOMIA    | CANRXB   | OUTXBAR8   | EPWM9B   |          |          | SD1_C1 | UPP-D3    |
| SPICLKA/SPIRAM | 4/J1.4    | GPIO18             | SPICLKA     | SCITXDB  | CANRXA     | EPWM10A  |          |          | SD1_D2 | UPP-D2    |
| SPIRAM CS      | 3/J1.3    | GPIO19             | SPISTEA     | SCIRXDB  | CANTXA     | EPWM10B  |          |          | SD1_C2 | UPP-D1    |
| EQEP1A         | J14       | GPIO20             | EQEP1A      | MDXA     | CANTXb     | EPWM11A  |          |          | SD1_D3 | UPP-D0    |
| EQEP1B         | J14       | GPIO21             | EQEP1B      | MDRA     | CANRXB     | EPWM11B  |          |          | SD1_C3 | UPP-CLK   |
| LED1/PWM       | 8/J1.8    | GPIO22             | EQEP1S      | MCLKXA   | SCITXDB    | EPWM12A  |          | SPICLKB  | SD1_D4 |           |
| WIZNET INT     | 34/J4.4   | GPIO24             | OUTXBAR1    | EQEP2A   | MDXB       |          |          | SPISIMOB | SD2_D1 |           |
| LS7366#3 CS    | 51/J6.1   | GPIO25             | OUTXBAR2    | EQEP2B   | MDRB       |          |          | SPISOMIB | SD2_C1 |           |
| Ls7366#4 CS    | 53/J6.3   | GPIO26             | OUTXBAR3    | EQEP2I   | MCLKXB     | OUTXBAR3 |          | SPICLKB  | SD2_D2 |           |
| WIZNET RST     | 52/J6.2   | GPIO27             | OUTXBAR4    | EQEP2S   | MFSXB      | OUTXBAR4 |          | SPISTEB  | SD2_C2 |           |
| F28027 CS      | 11/J2.1   | GPIO29             | SCITXDA     | EMSDCKE  |            | OUTXBAR6 |          | EQEP3B   | SD2_C3 |           |
| Board Blue LED |           | GPIO31             | CANTXA      | EM1WE    |            | OUTXBAR8 |          | EQEP3I   | SD2_C4 |           |
| GPIO32         | 2/J1.2    | GPIO32             | SDAA        | EM1CS0   |            |          |          |          |        |           |
| Board Red LED  |           | GPIO34             | OUTXBAR1    | EM1CS2   |            |          |          | SDAB     |        |           |



## GPIO LED Control

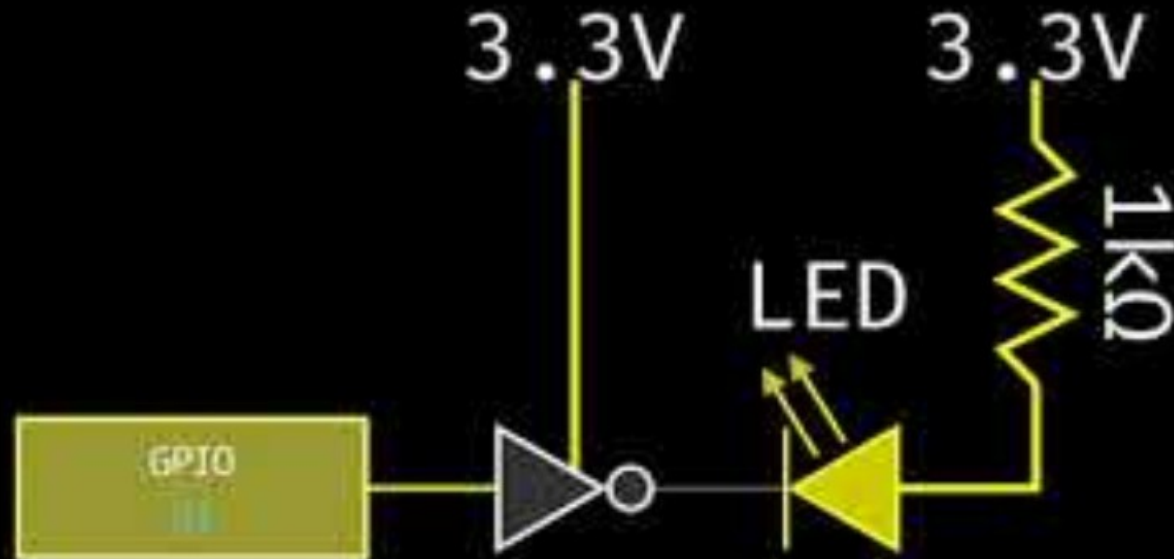

Digital input samples external voltage

Compared against logic thresholds:

- LOW
- HIGH

Examples:

- Buttons
- Switches
- Some types of encoders

Problem with floating inputs, if input is not driven:

- Voltage is undefined
- Susceptible to noise
- Input may randomly read 0 or 1

More on this with ADC

A pull-up resistor:

- Connects input to  $V_{CC}$
- Defines default logic HIGH

When switch is:

- Open: input  $\rightarrow$  HIGH
- Closed: input short circuits to GND  $\rightarrow$  LOW



A pull-down resistor ( not used in our application ):

- Connects input to GND
- Defines default logic LOW

When switch is:

- Open: input  $\rightarrow$  LOW
- Closed: input short circuits to GND  $\rightarrow$  HIGH

This is all internal on the Red Board, makes it cleaner!  
You don't need to understand this, just put it in code!

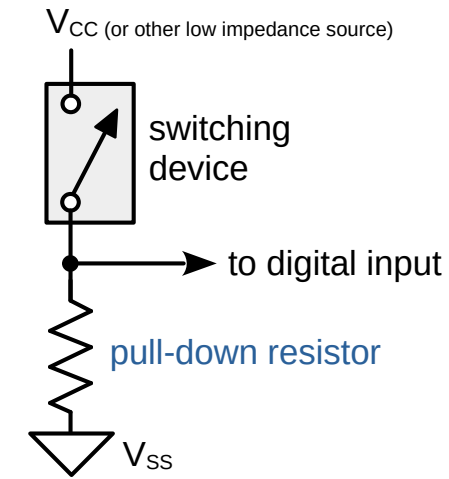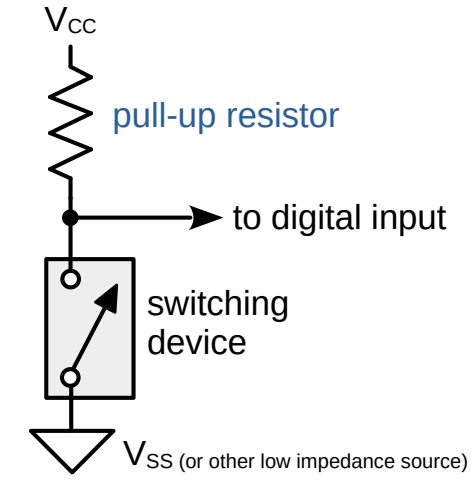


[https://en.wikipedia.org/wiki/Pull-up\\_resistor](https://en.wikipedia.org/wiki/Pull-up_resistor)

Digital output control consists of :

1. Choosing the GPIO number
2. Selecting the GPIO pin mux selection
3. Setting direction = input
4. Enable pull-up resistor

```
GPIO_SetupPinMux(7, GPIO_MUX_CPU1, 0);
```

```
GPIO_SetupPinOptions(7, GPIO_INPUT, GPIO_PULLUP);
```

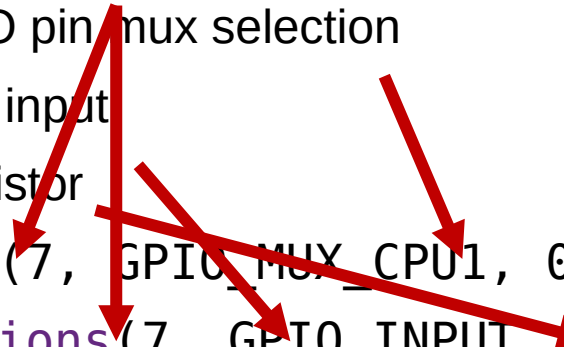

You read the binary input using:

```
if(GpioDataRegs.GPADAT.bit.GPIO7){  
    // Do stuff  
}
```



A **push-pull output** uses **two transistors**:

- A PMOS transistor pulls the pin up to 3.3 V
- An NMOS transistor pulls the pin down to GND


Only **one is ON at a time**.

When a pin is an output:

- You want deterministic voltage
- You want noise immunity
- You want defined transitions

A more detailed video [here](#).

You don't need to understand this, just put it in code!

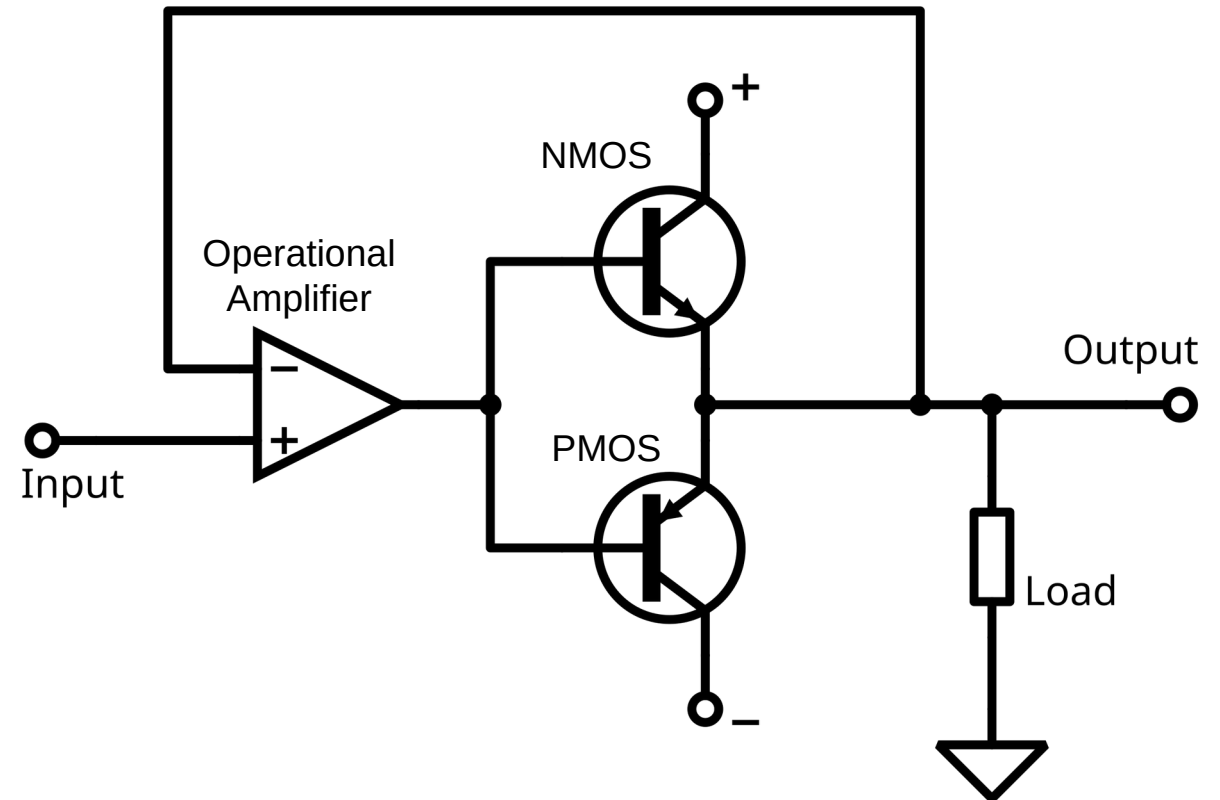


( I wanted to create the animation for this, but if this text is still here, then it has not been done yet.)

[https://en.wikipedia.org/wiki/Push%E2%80%93pull\\_output](https://en.wikipedia.org/wiki/Push%E2%80%93pull_output)

A pull-up resistor is:

- Slow
- Incapable of pulling LOW

So, for outputs, pull-ups are electrically irrelevant and often harmful.

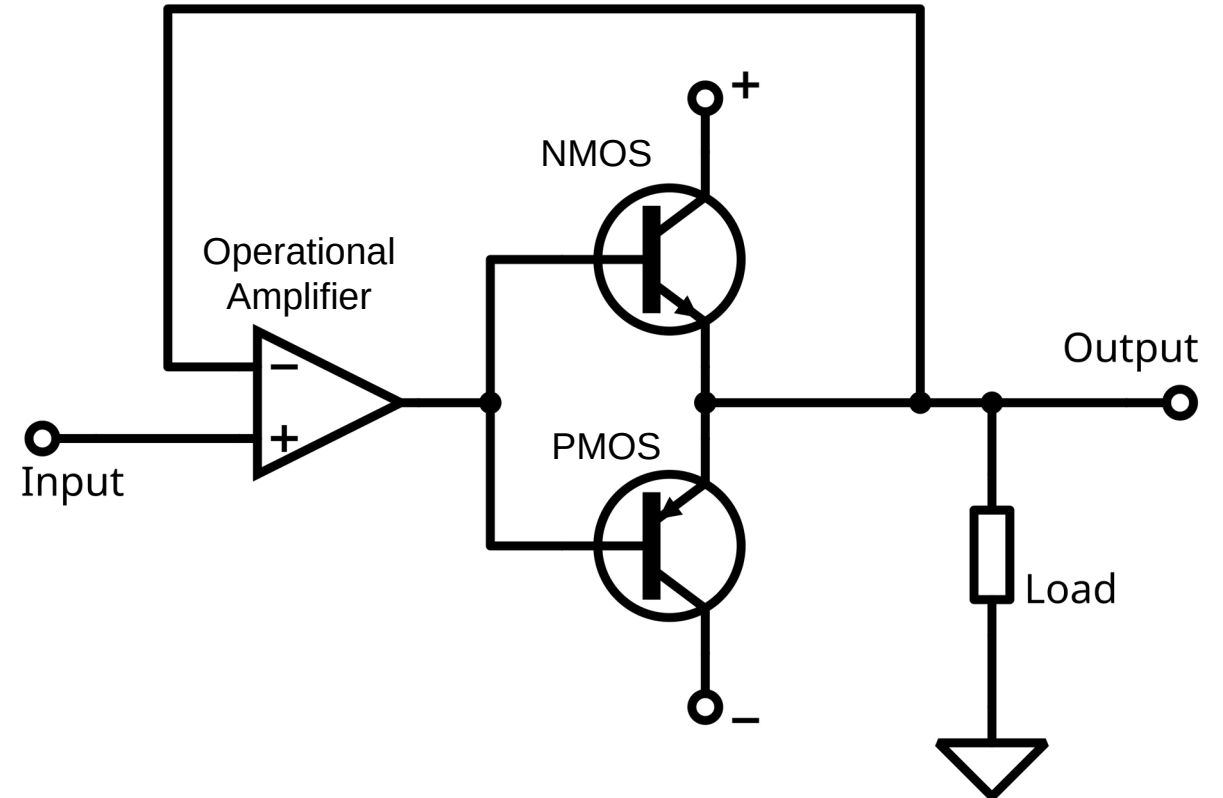

( I wanted to create the animation for this, but if this text is still here, then it has not been done yet.)

[https://en.wikipedia.org/wiki/Push%E2%80%93pull\\_output](https://en.wikipedia.org/wiki/Push%E2%80%93pull_output)

Why would we run out of power?

Each GPIO output has its own transistors and can safely source or sink only a limited current.

However, all GPIOs draw that current from shared internal power and ground networks inside the chip.

Even if each individual pin is within its limit, the sum of all GPIO currents can exceed what the silicon, bond wires, or package can safely carry.

This is why microcontrollers specify both per-pin and total GPIO current limits, and why **GPIOs must never be used as power supplies**.

Think of each GPIO as a faucet drawing water from the same pipe.

- Each faucet has a **local limit** (per-pin current)
- The pipe has a **global flow limit** (total GPIO current)

Opening too many faucets:

- Reduces pressure
- Stresses the pipe
- Causes failure elsewhere

What an input pin is:



- Pin becomes high-impedance, sensitive to low current, allowing for high voltages
- Sensitive to noise

The internal pull-up:

- Weak resistor ( $\sim 20\text{-}50\text{ k}\Omega$ )
- Slightly biases pin to logic HIGH
- Can be overridden by external hardware (button to GND)



Without pull-up, just using floating-inputs, you would be sensitive to random noise, returning:

- Random bits
- Thus, unpredictable control behavior

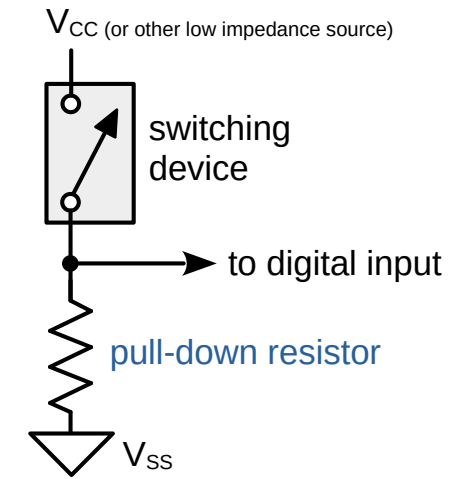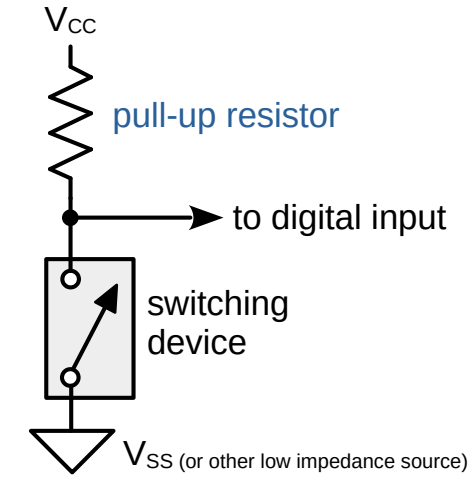


[https://en.wikipedia.org/wiki/Pull-up\\_resistor](https://en.wikipedia.org/wiki/Pull-up_resistor)



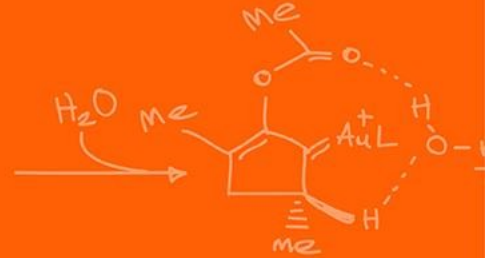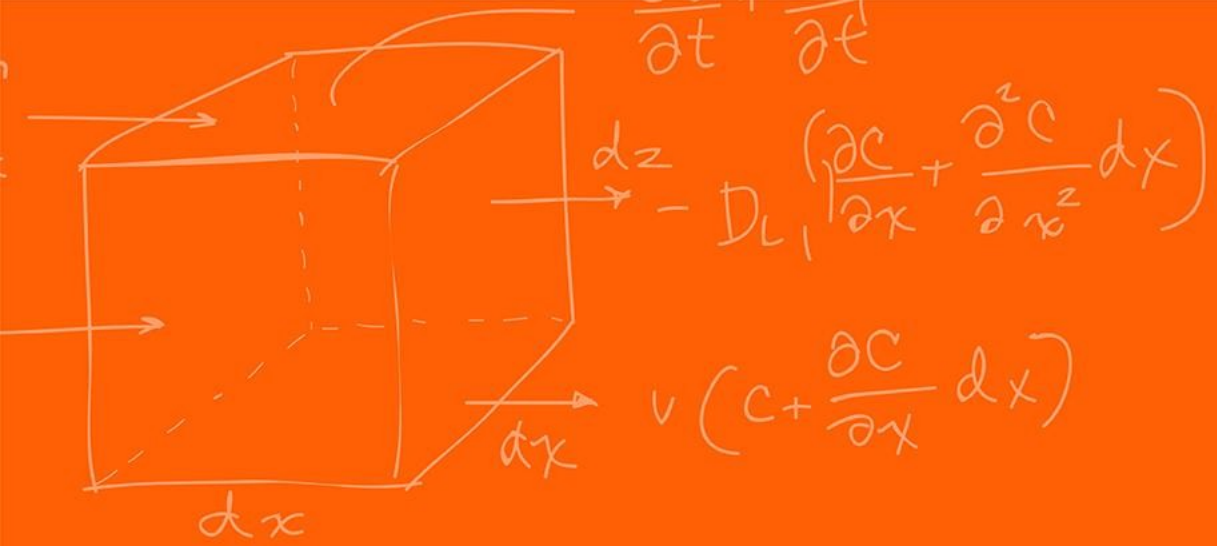

# Pin Mux

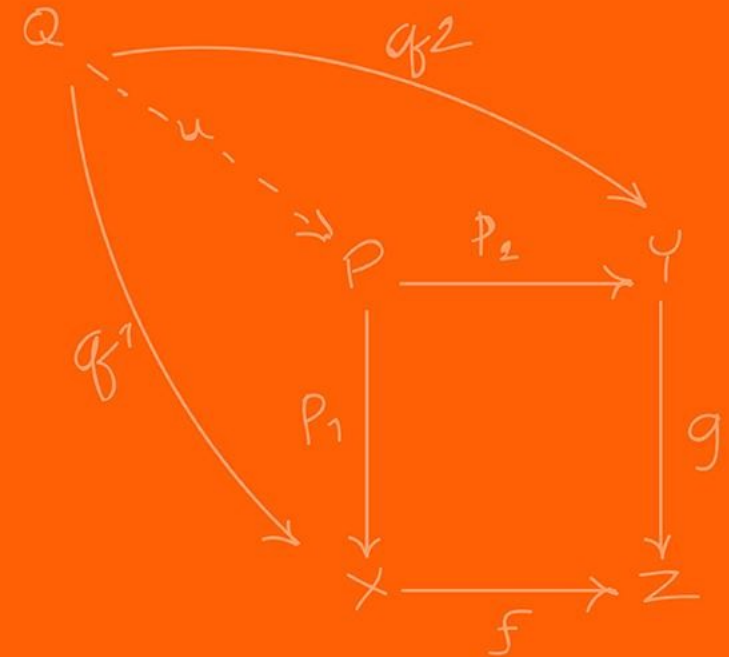

The Red Board has only **80** pins but **160** GPIO!

We also need the pins to do multiple specialized things,

- GPIO (General Purpose Input-Output)
- PWM output (Pulse Width Modulation)
- SPI (Serial Peripheral Interface)
- I2C (Inter-Integrated Circuit)
- CAN (Controller Area Network)
- UART (Universal Asynchronous Receiver-Transmitter)
- ADC trigger, etc. (Analog-to-Digital Converter)

Whole list is in the [pin mux list](#), you will be using this in Lab 1!


This sharing is managed by the **pin multiplexer**!

Pins and GPIOs are not for hardware wiring / optimality reasons.

# What is the Pin Multiplexer (PinMux)



This is a hardware switch that selects which peripheral controls a pin:

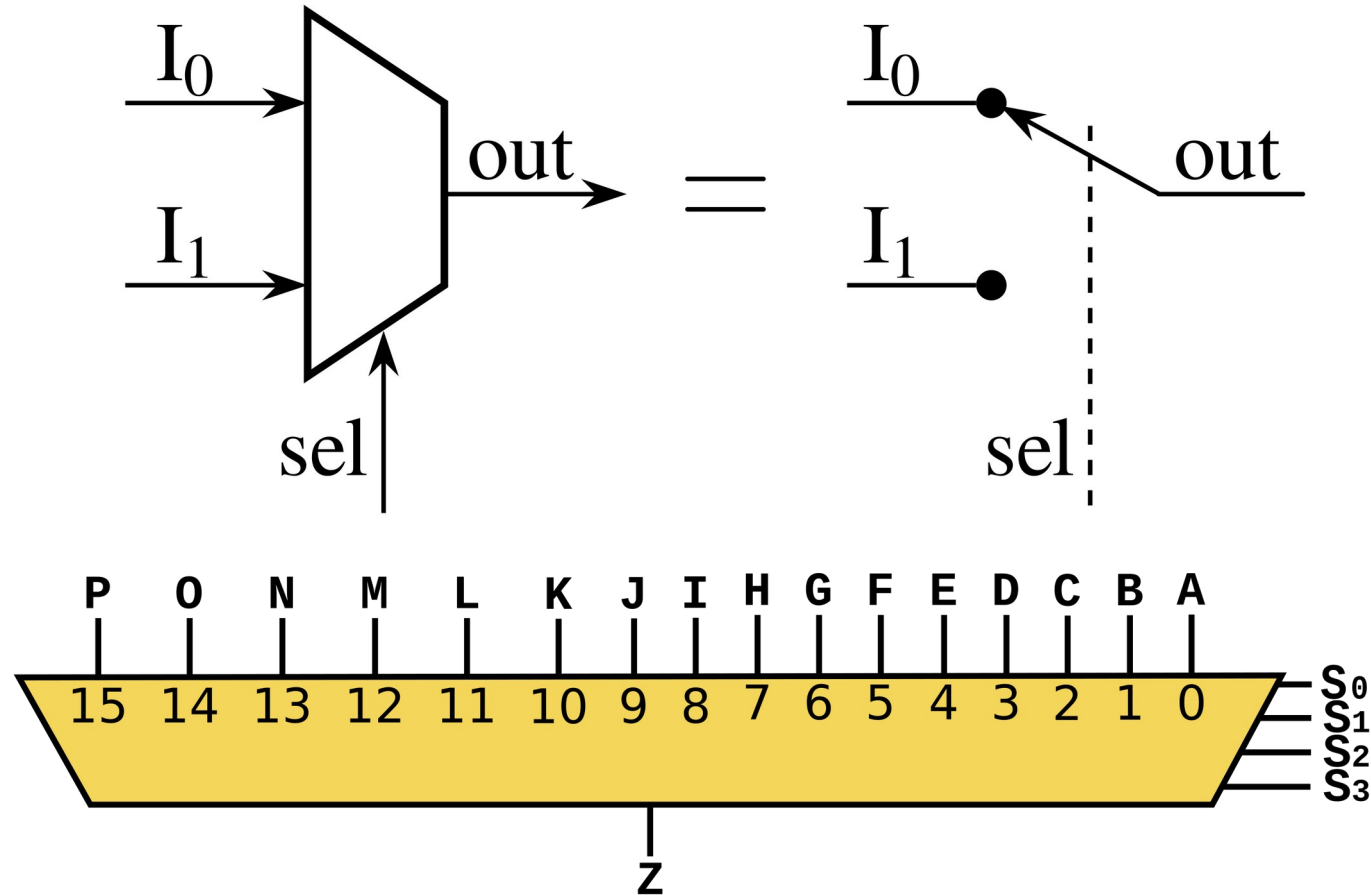

<https://en.wikipedia.org/wiki/Multiplexer>


Up to twelve independent peripheral signals are multiplexed on a single GPIO-enabled pin in addition to the CPU-controlled I/O capability.

Each pin output can be controlled by either a peripheral or one of the four CPU masters (CPU1, CPU1.CLA, CPU2, or CPU2.CLA). There are six I/O ports:

- Port **A** consists of GPIO0-GPIO31
- Port **B** consists of GPIO32-GPIO63
- Port **C** consists of GPIO64-GPIO95
- Port **D** consists of GPIO96-GPIO127
- Port **E** consists of GPIO128-GPIO159
- Port **F** consists of GPIO160-GPIO168

```
GpioDataRegs.GPIO_TOGGLE.bit.GPIO34 = 1;
```

Figure 8-1. GPIO Logic for a Single Pin

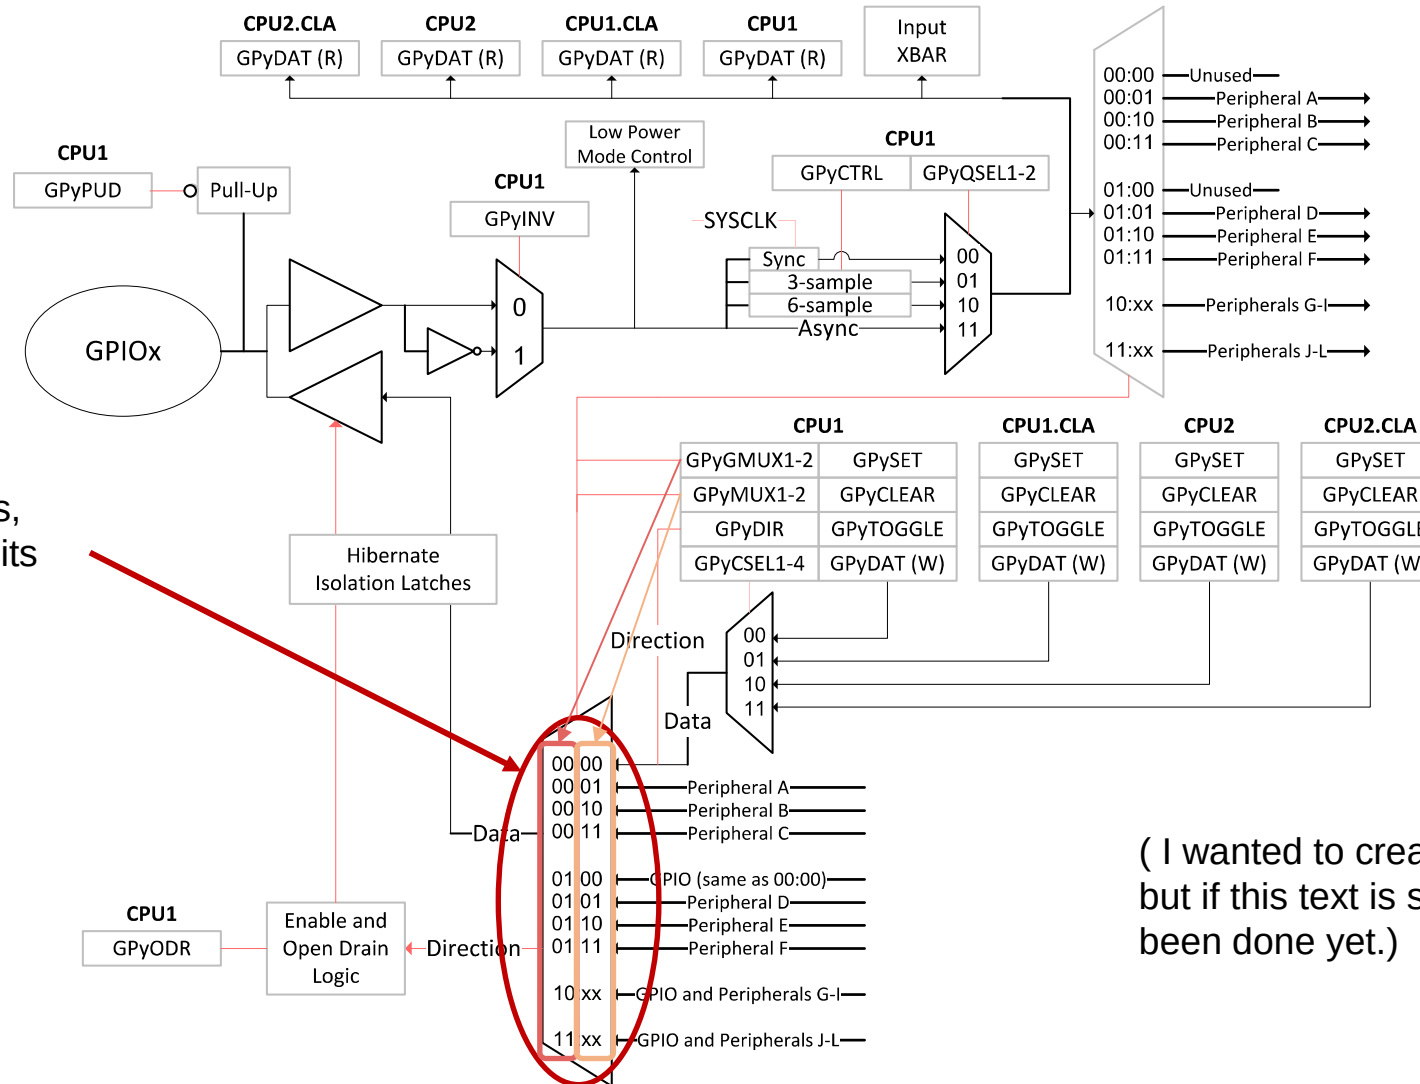

# Pin Mux – Code ( Not the exact code for reduced spacing )



```
void GPIO_SetupPinMux(Uint16 gpioNumber, Uint16 cpu, Uint16 muxPosition)
{
    volatile Uint32 *gpioBaseAddr; // volatile means that the variable may change from external sources (i.e.
    interrupts)
    volatile Uint32 *mux, *gmux, *csel;
    Uint16 pin32, pin16, pin8;

    pin32 = gpioNumber % 32;
    pin16 = gpioNumber % 16;
    pin8 = gpioNumber % 8;
    gpioBaseAddr = (Uint32 *)&GpioCtrlRegs + (gpioNumber/32)*GPY_CTRL_OFFSET;

    mux = gpioBaseAddr + GPYMUX + pin32/16;
    gmux = gpioBaseAddr + GPYGMUX + pin32/16;
    csel = gpioBaseAddr + GPYCSEL + pin32/8;



    EALLOW; // block that controls the physical multiplexer

    // 0x3UL means 0b11 but in int32_t (i.e. 0b11 with 30 leading 0s)
    *mux &= ~(0x3UL << (2*pin16));
    *gmux &= ~(0x3UL << (2*pin16));
    *gmux |= (Uint32)((muxPosition >> 2) & 0x3UL) << (2*pin16);
    *mux |= (Uint32)(muxPosition & 0x3UL) << (2*pin16);


    *csel &= ~(0x3L << (4*pin8));
    *csel |= (Uint32)(cpu & 0x3L) << (4*pin8);
    EDIS;
}
```

```
GPIO_SetupPinMux(19, GPIO_MUX_CPU1, 0);  
GPIO_SetupPinOptions(19, GPIO_OUTPUT, GPIO_PUSHPULL);
```


- Using the pin number instead of the GPIO number
- Using the wrong GPIO for the pin that you want
- Direction is not set correctly
- Pull-up disabled unintentionally
- Make sure to read the documentation

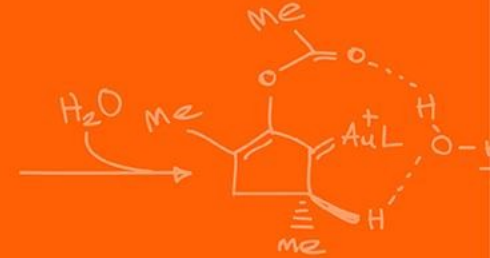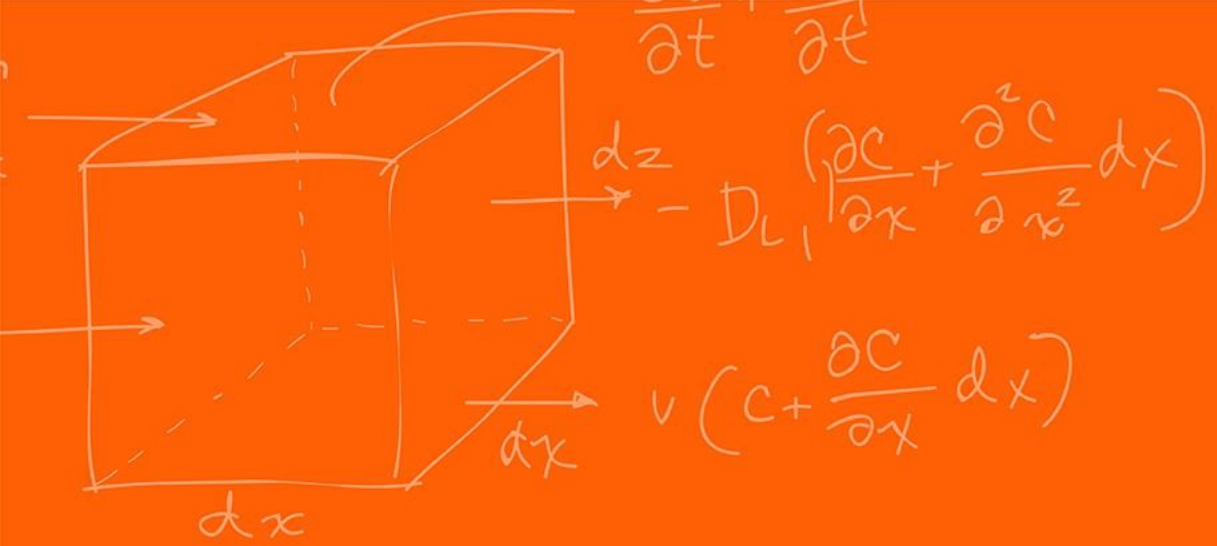



# Git / GitHub

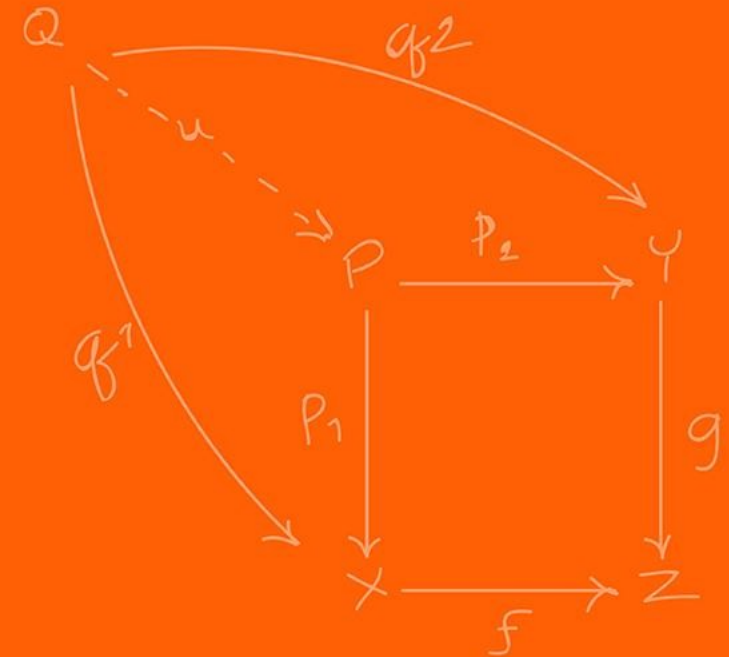



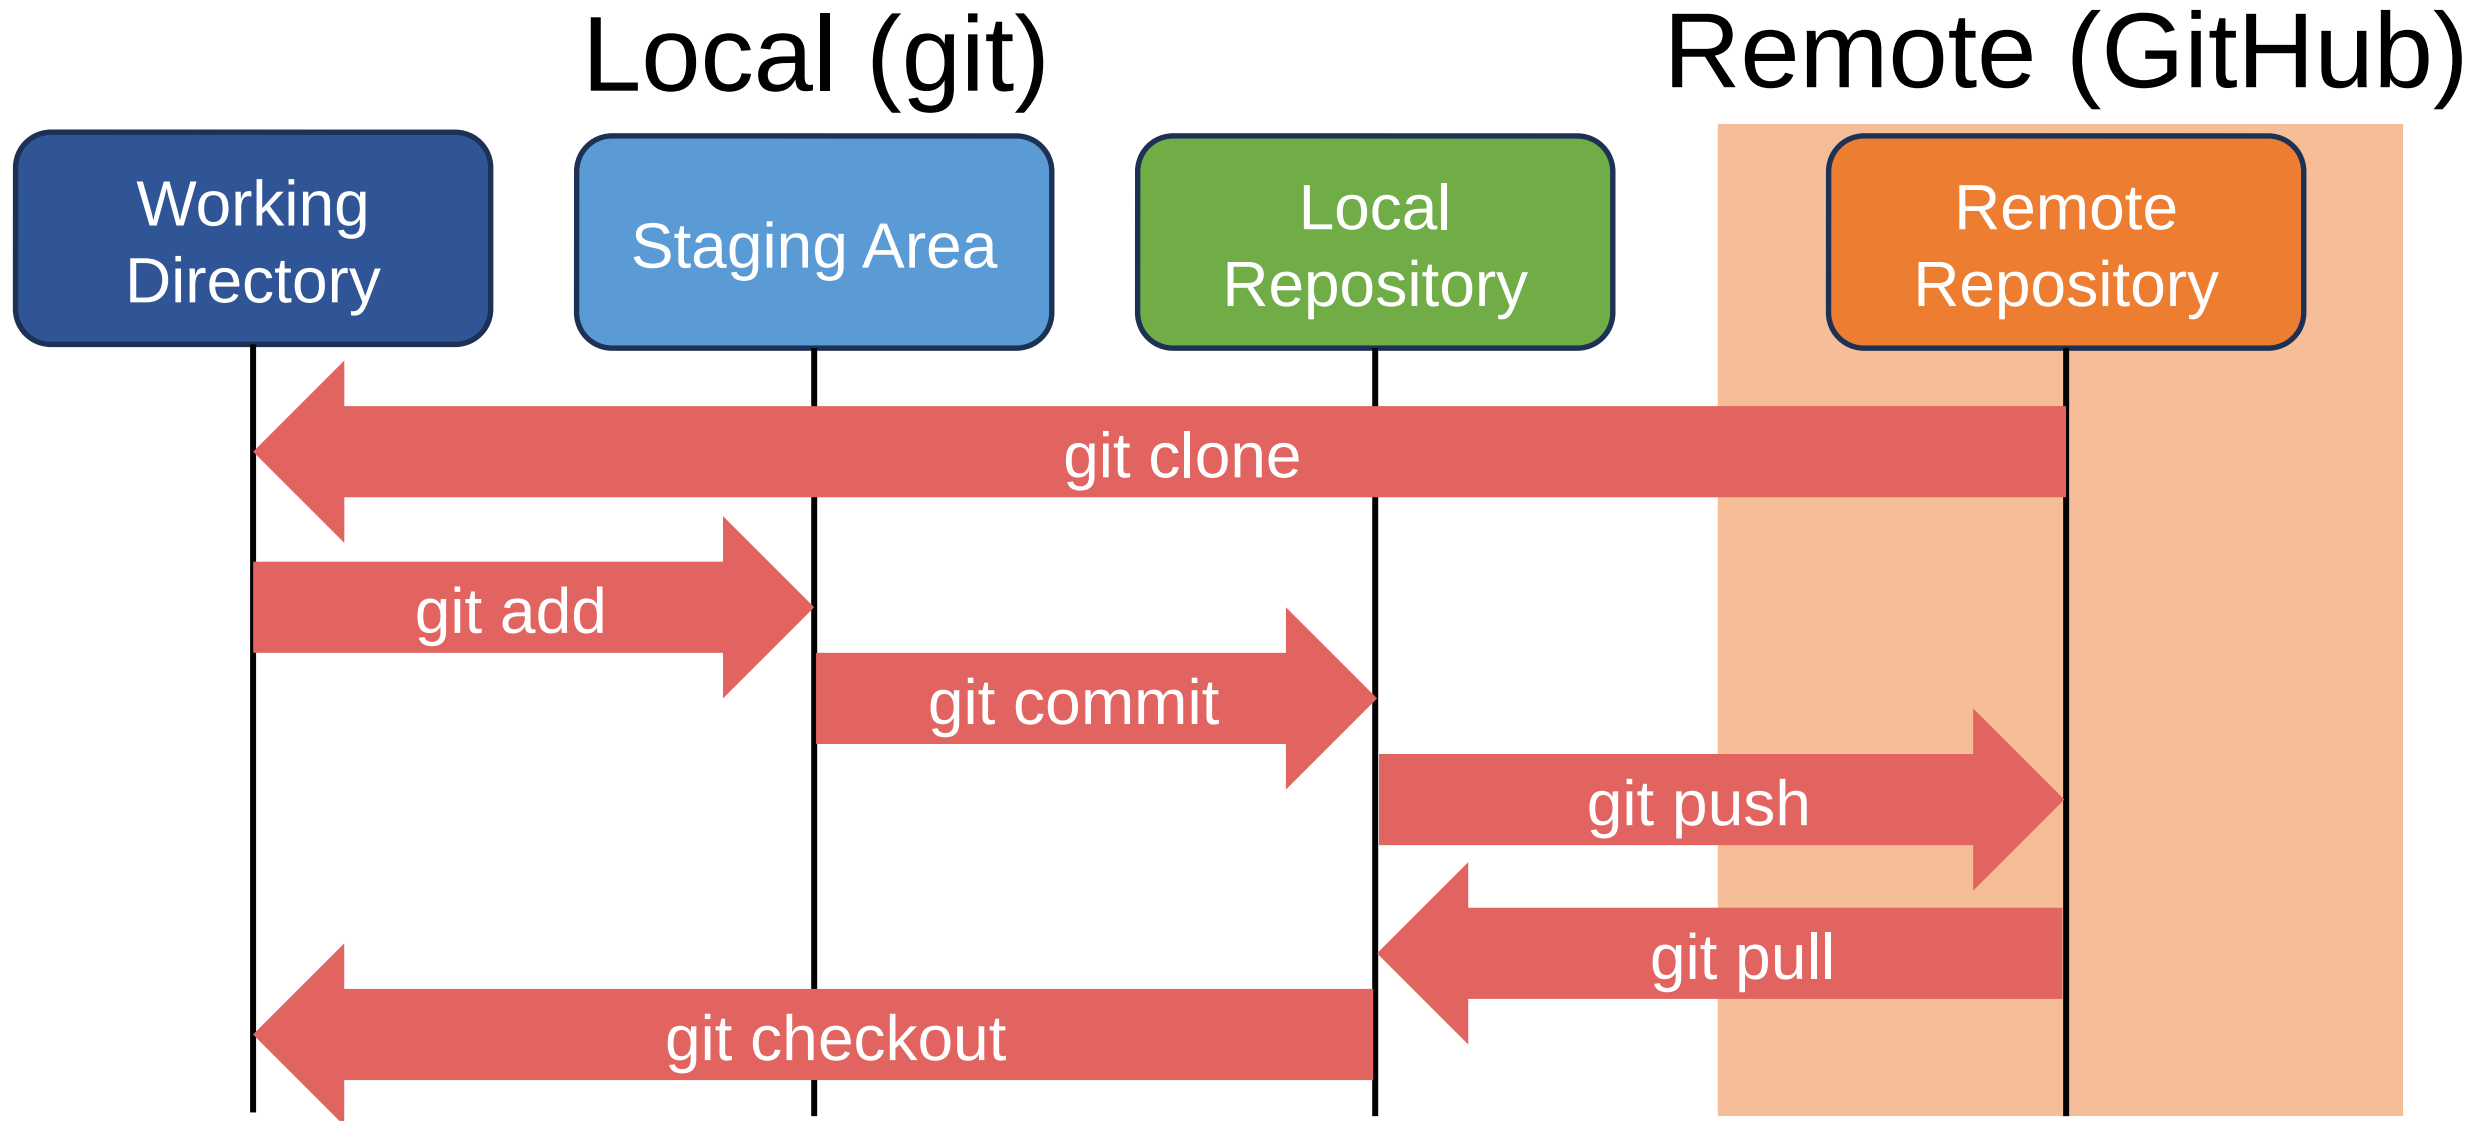

# Questions?

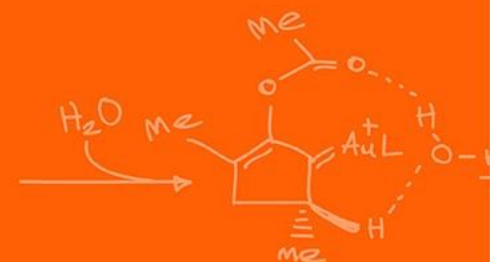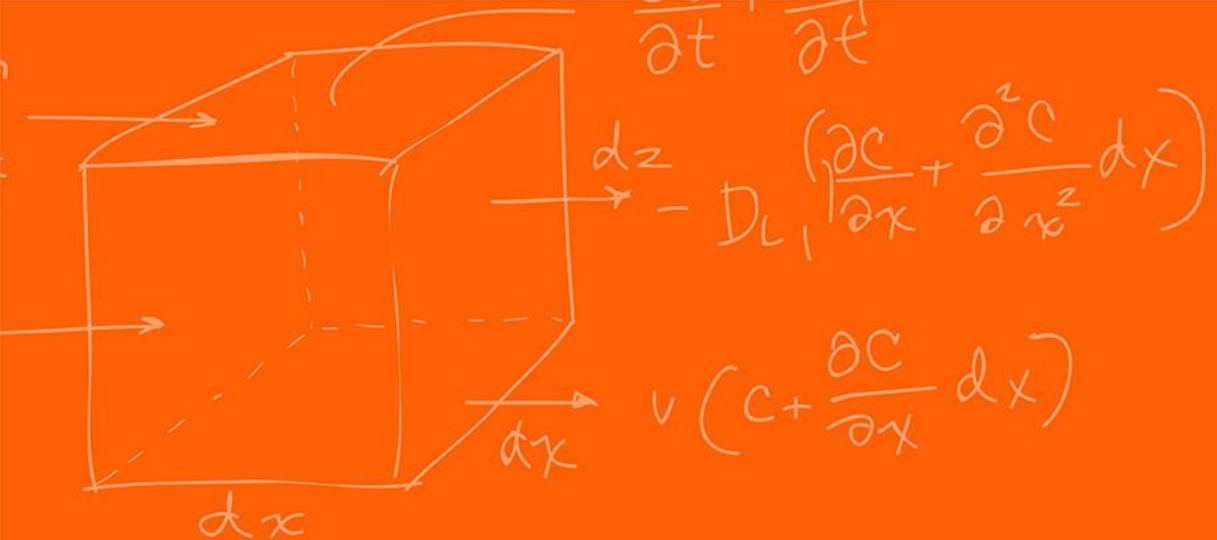

# The Grainger College of Engineering

UNIVERSITY OF ILLINOIS URBANA-CHAMPAIGN

