



UNIVERSITY OF
ILLINOIS
URBANA-CHAMPAIGN

SE 423: Introduction to Mechatronics

Lecture 11: PID Control

Marius Juston

Wednesday, February 25th, 2026

Office Hours:

- **Monday:** 4-6 PM, Neel
- **Tuesday:** 11-1 PM, Lakshmi
- **Tuesday:** 1-3 PM, Samuel
- **Tuesday:** 2-5 PM, Dan & Marius

Lab: Starting Lab 4 this week. This a 2-week lab!

Homeworks:



- Answers and code submissions for [homework 2](#) are due **February 26, 9AM**
- Check-offs for [homework 3](#) Ex 1, 2, 3 & 4 are due **March 10, 5PM (The end of office hours)**
- Check-offs for [homework 3](#) Ex 5 are due **March 24, 5PM (The end of office hours)**
- Answers and code submissions for [homework 3](#) are due **March 25, 9AM**

LabVIEW:


- All check-offs for [LabVIEW 2](#) are due **February 26, 5PM**

Questions?

Homework, Lab, LabVIEW questions?

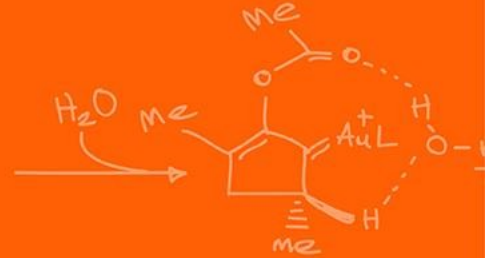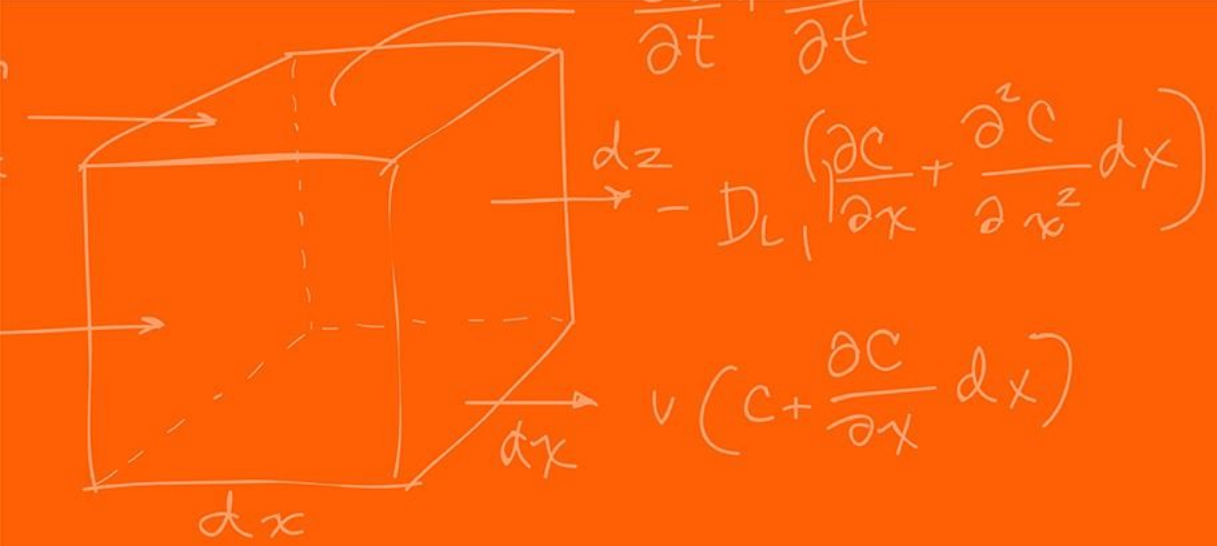

PID Controller

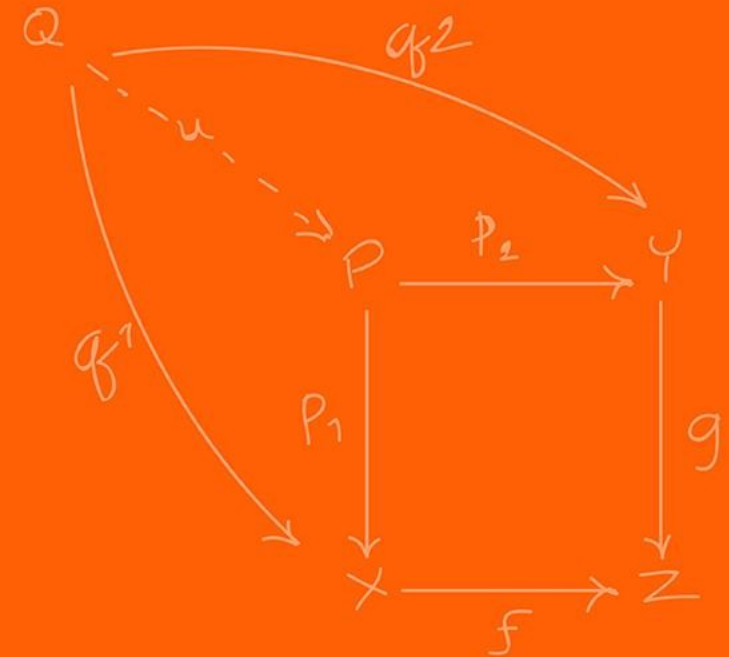

There are 2 types of controllers:

- **Open-Loop** systems: Directly dictates the output.

Problems?

Any deviation / noise will cause you to not reach your target.

- **Closed-Loop** systems: Utilizes feedback to compute an error metric, dynamically correcting the control effort


We know it, we love it, it's the classic PID Controller!

The proportional–integral–derivative (PID) controller is a closed-loop controller.

It is extremely common due to its simplicity, both in the tuning and in the implementation (you will see how simple it is when you implement it in the code)

The PID controller is split into 3 parts, as its name states. While each of the terms contribute to improving the output, it is not necessary to use all of them at once.

As the PID controller is a closed-loop controller the input is an error signal $e(t) = r(t) - y(t)$, which represents the reference “what you want to be doing” $r(t)$ and the currently measured input “what you are doing now” $y(t)$

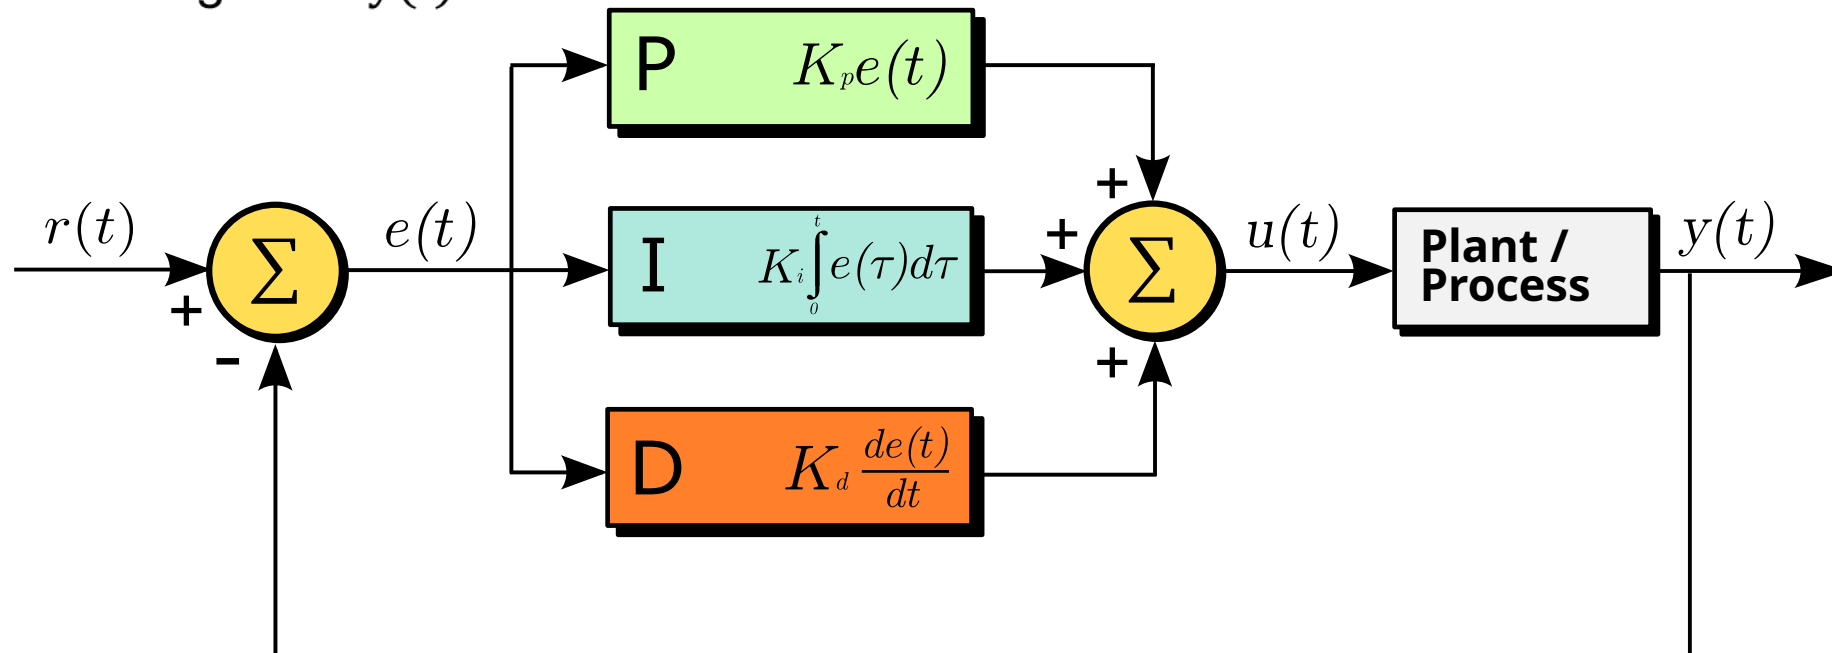

We are going to watch [some really good MATLAB videos](#) (I highly recommend looking at them some more!)

[What is a PID Controller?](#)

There are 2 main problems with the basic implementation of the PID loop in a real-world example. Any ideas?

- [Integrator Windup](#)
- [Derivative noise](#)

For the derivative term we decide that it is not worth using and the robot will follow the path well enough. It is usually more recommended to use if you have a sensor the derivative directly!

Term **P** is the proportional term. It is simply defined as,

$$u(t) = K_P e(t),$$

for example, if the error is large, the output control effort $u(t)$ will be large and vice-versa.

This is the most fundamental part of the PID loop, you should at least always use this term.

Term I accounts for past values of the error and integrates them over time to produce the I term

$$u(t) = K_I \int_0^t e(t),$$

For example, if there is a residual error after the application of proportional control, the integral terms eliminates the residual error by adding some additional control effort.

When the error is eliminated, the integral term will cease to grow.

It is important to bound this component such that it does not explode and make it difficult to control the system. I.e. integrator windup.

Term **D** accounts for future values of the error based on the current rate of change of the error.

$$u(t) = K_D \frac{de(t)}{dt},$$

In the real world, sensors are noisy and so collecting the derivative term can be difficult without an additional filter to it.

The full form is thus,

$$u(t) = K_p e(t) + K_I \int_0^t e(t) + K_D \frac{de(t)}{dt},$$

Simple as that!

```
#define MAX Effort 10.0f

struct PID {
    float Kp;
    float Ki;
    float integral;
};

float saturate(float input, float satVal){
    input = (input > satVal)? satVal :
input;
    input = (input < -satVal)? -satVal :
input;

    return input;
}

int sign(float x){
    if (x > 0.0f) return 1;
    if (x < 0.0f) return -1;
    return 0;
}
```

```
float PControl(float reference, float target, float dt, struct PID *pidState){
    if (dt <= 0.0f) return 0.0f;

    float error = reference - target;

    // Compute integral
    float integral = pidState->integral + error * dt;
    // Compute PI using tentative integral
    float effort = pidState->Kp * error +
        pidState->Ki * integral;

    // Saturate control input
    float effortSat = saturate(effort, MAX_EFFORT);


    // Anti-windup condition
    // The output is saturating
    // The error is the same sign as the controller output
    if(!(effort != effortSat && sign(effort) == sign(error))){
        pidState->integral = integral;
    }

    return effortSat;
}
```



Integrator anti-windup - keep the integrated value from increasing past some specified limit.

Clamping - turning the integrator off

Back-calculation
Observer approach

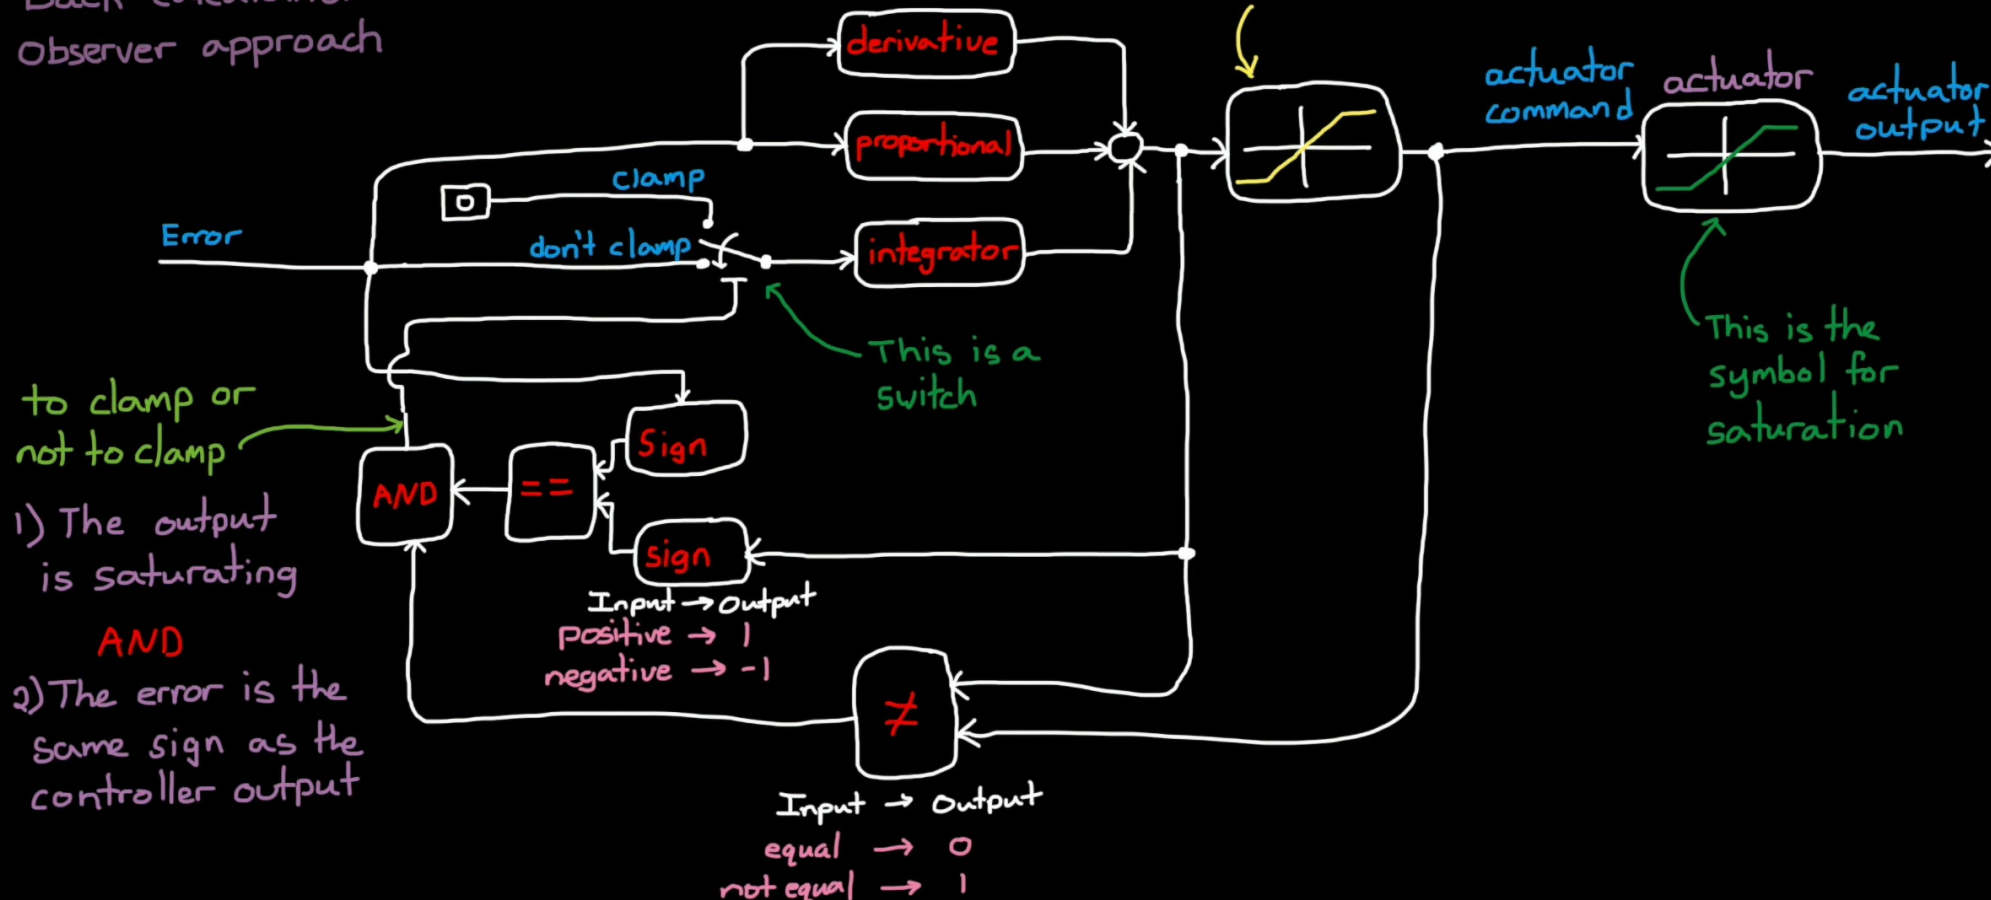


<https://www.mathworks.com/videos/understanding-pid-control-part-2-expanding-beyond-a-simple-integral-1528310418260.html>

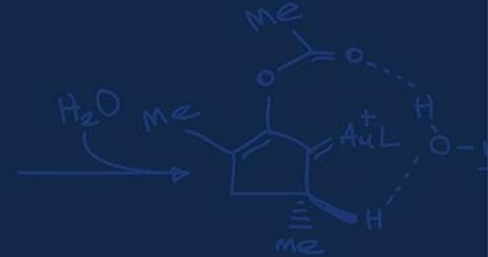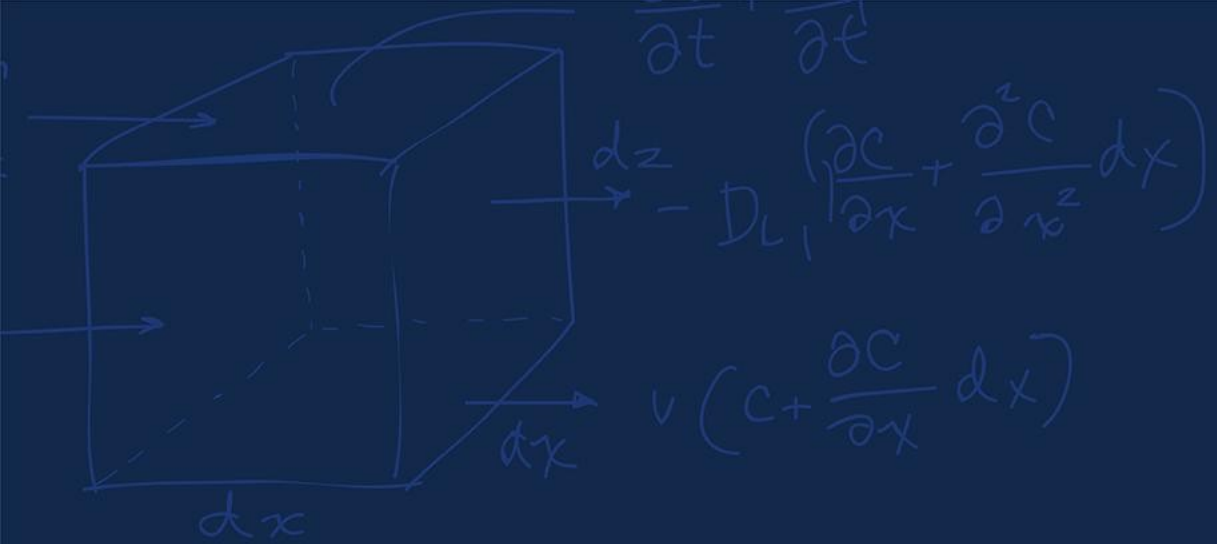

Tuning



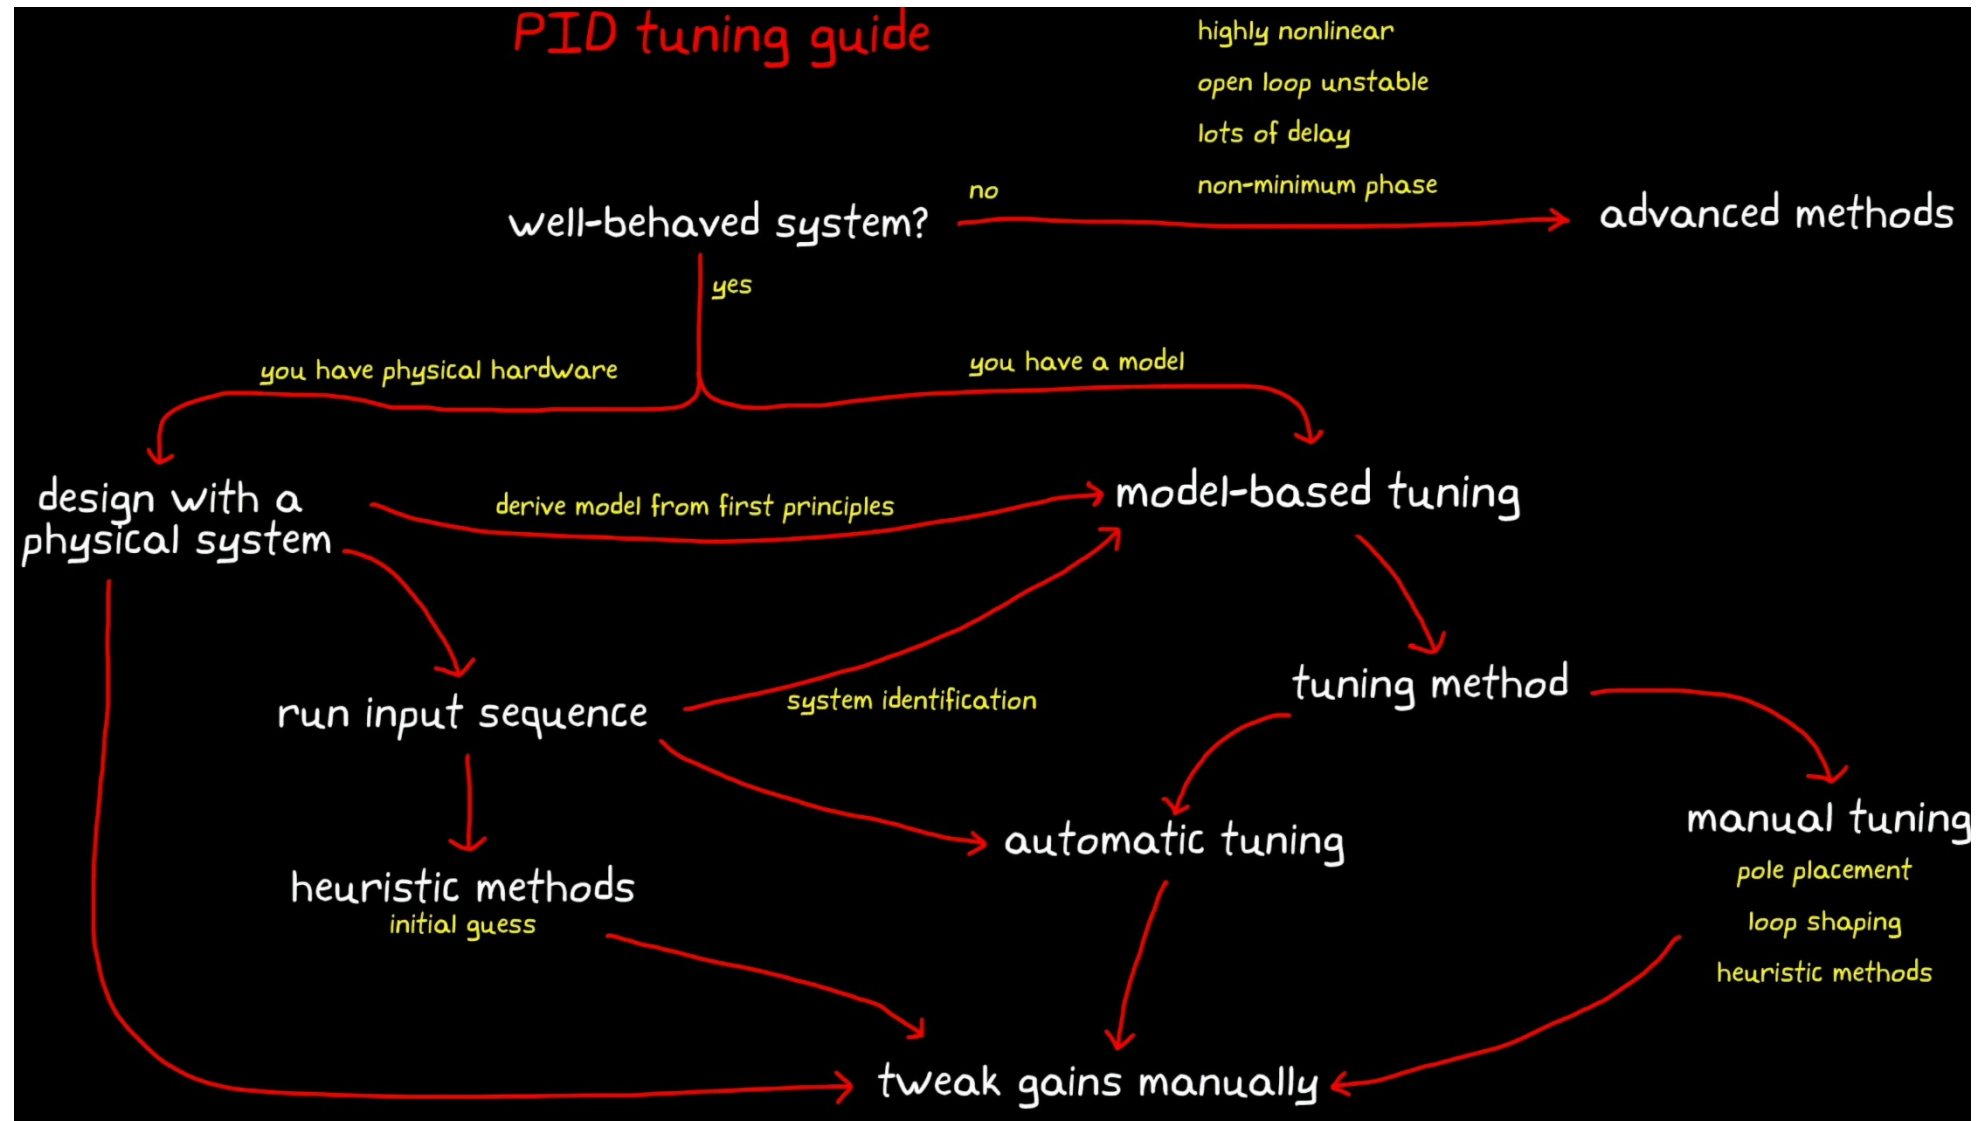

<https://www.mathworks.com/videos/understanding-pid-control-part-4-a-pid-tuning-guide-1531124725727.html>


In this class we will only be doing manual tuning, it is just intuition based but given that there are only 3 gains, it is fast to find appropriate constants!

The manual method for tuning is simple:

1. Set all gains to 0 and start K_P at 1
2. Keep increasing K_P until the output of the system causes it to oscillate
3. Then set K_P approximately half that value
4. Then increase K_I until any offset is corrected
5. Then, optionally, increase K_D to remove overshoot

Usually, K_P has the highest magnitude, K_I next and then K_D .

Parameter	Rise time	Overshoot	Settling time	Steady-state error	Stability																								
<table><tr><th>Parameter</th><th>Rise time</th><th>Overshoot</th><th>Settling time</th><th>Steady-state error</th><th>Stability</th></tr><tr><td>K_p</td><td>Decrease</td><td>Increase</td><td>Small change</td><td>Decrease</td><td>Degrade</td></tr><tr><td>K_i</td><td>Decrease</td><td>Increase</td><td>Increase</td><td>Eliminate</td><td>Degrade</td></tr><tr><td>K_d</td><td>Minor change</td><td>Decrease</td><td>Decrease</td><td>No effect in theory</td><td>Improve if K_d small</td></tr></table>	Parameter	Rise time	Overshoot	Settling time	Steady-state error	Stability	K_p	Decrease	Increase	Small change	Decrease	Degrade	K_i	Decrease	Increase	Increase	Eliminate	Degrade	K_d	Minor change	Decrease	Decrease	No effect in theory	Improve if K_d small	Decrease	Increase	Small change	Decrease	Degrade
Parameter	Rise time	Overshoot	Settling time	Steady-state error	Stability																								
K_p	Decrease	Increase	Small change	Decrease	Degrade																								
K_i	Decrease	Increase	Increase	Eliminate	Degrade																								
K_d	Minor change	Decrease	Decrease	No effect in theory	Improve if K_d small																								
<table><tr><th>Parameter</th><th>Rise time</th><th>Overshoot</th><th>Settling time</th><th>Steady-state error</th><th>Stability</th></tr><tr><td>K_p</td><td>Decrease</td><td>Increase</td><td>Small change</td><td>Decrease</td><td>Degrade</td></tr><tr><td>K_i</td><td>Decrease</td><td>Increase</td><td>Increase</td><td>Eliminate</td><td>Degrade</td></tr><tr><td>K_d</td><td>Minor change</td><td>Decrease</td><td>Decrease</td><td>No effect in theory</td><td>Improve if K_d small</td></tr></table>	Parameter	Rise time	Overshoot	Settling time	Steady-state error	Stability	K_p	Decrease	Increase	Small change	Decrease	Degrade	K_i	Decrease	Increase	Increase	Eliminate	Degrade	K_d	Minor change	Decrease	Decrease	No effect in theory	Improve if K_d small	Decrease	Increase	Increase	Eliminate	Degrade
Parameter	Rise time	Overshoot	Settling time	Steady-state error	Stability																								
K_p	Decrease	Increase	Small change	Decrease	Degrade																								
K_i	Decrease	Increase	Increase	Eliminate	Degrade																								
K_d	Minor change	Decrease	Decrease	No effect in theory	Improve if K_d small																								
<table><tr><th>Parameter</th><th>Rise time</th><th>Overshoot</th><th>Settling time</th><th>Steady-state error</th><th>Stability</th></tr><tr><td>K_p</td><td>Decrease</td><td>Increase</td><td>Small change</td><td>Decrease</td><td>Degrade</td></tr><tr><td>K_i</td><td>Decrease</td><td>Increase</td><td>Increase</td><td>Eliminate</td><td>Degrade</td></tr><tr><td>K_d</td><td>Minor change</td><td>Decrease</td><td>Decrease</td><td>No effect in theory</td><td>Improve if K_d small</td></tr></table>	Parameter	Rise time	Overshoot	Settling time	Steady-state error	Stability	K_p	Decrease	Increase	Small change	Decrease	Degrade	K_i	Decrease	Increase	Increase	Eliminate	Degrade	K_d	Minor change	Decrease	Decrease	No effect in theory	Improve if K_d small	Minor change	Decrease	Decrease	No effect in theory	
Parameter	Rise time	Overshoot	Settling time	Steady-state error	Stability																								
K_p	Decrease	Increase	Small change	Decrease	Degrade																								
K_i	Decrease	Increase	Increase	Eliminate	Degrade																								
K_d	Minor change	Decrease	Decrease	No effect in theory	Improve if K_d small																								

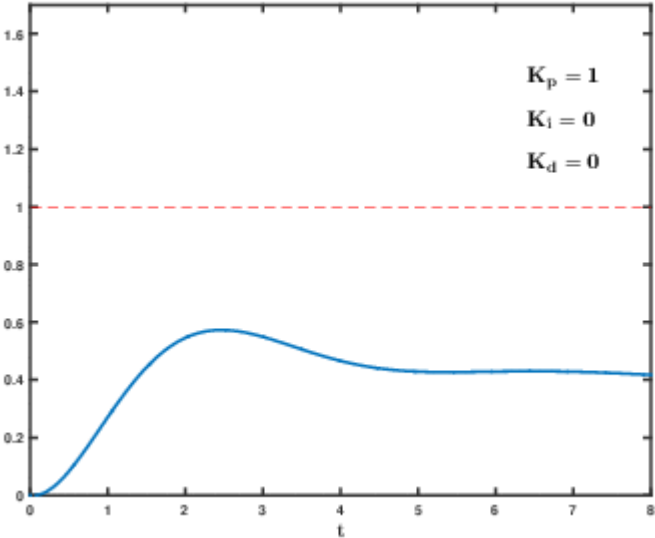


https://en.wikipedia.org/wiki/Proportional%E2%80%93integral%E2%80%93derivative_controller#Manual_tuning


We can try out the effect of gains here!

<https://www.luisllamas.es/en/pid-controller-simulator/>

PID Controller – Lab 5

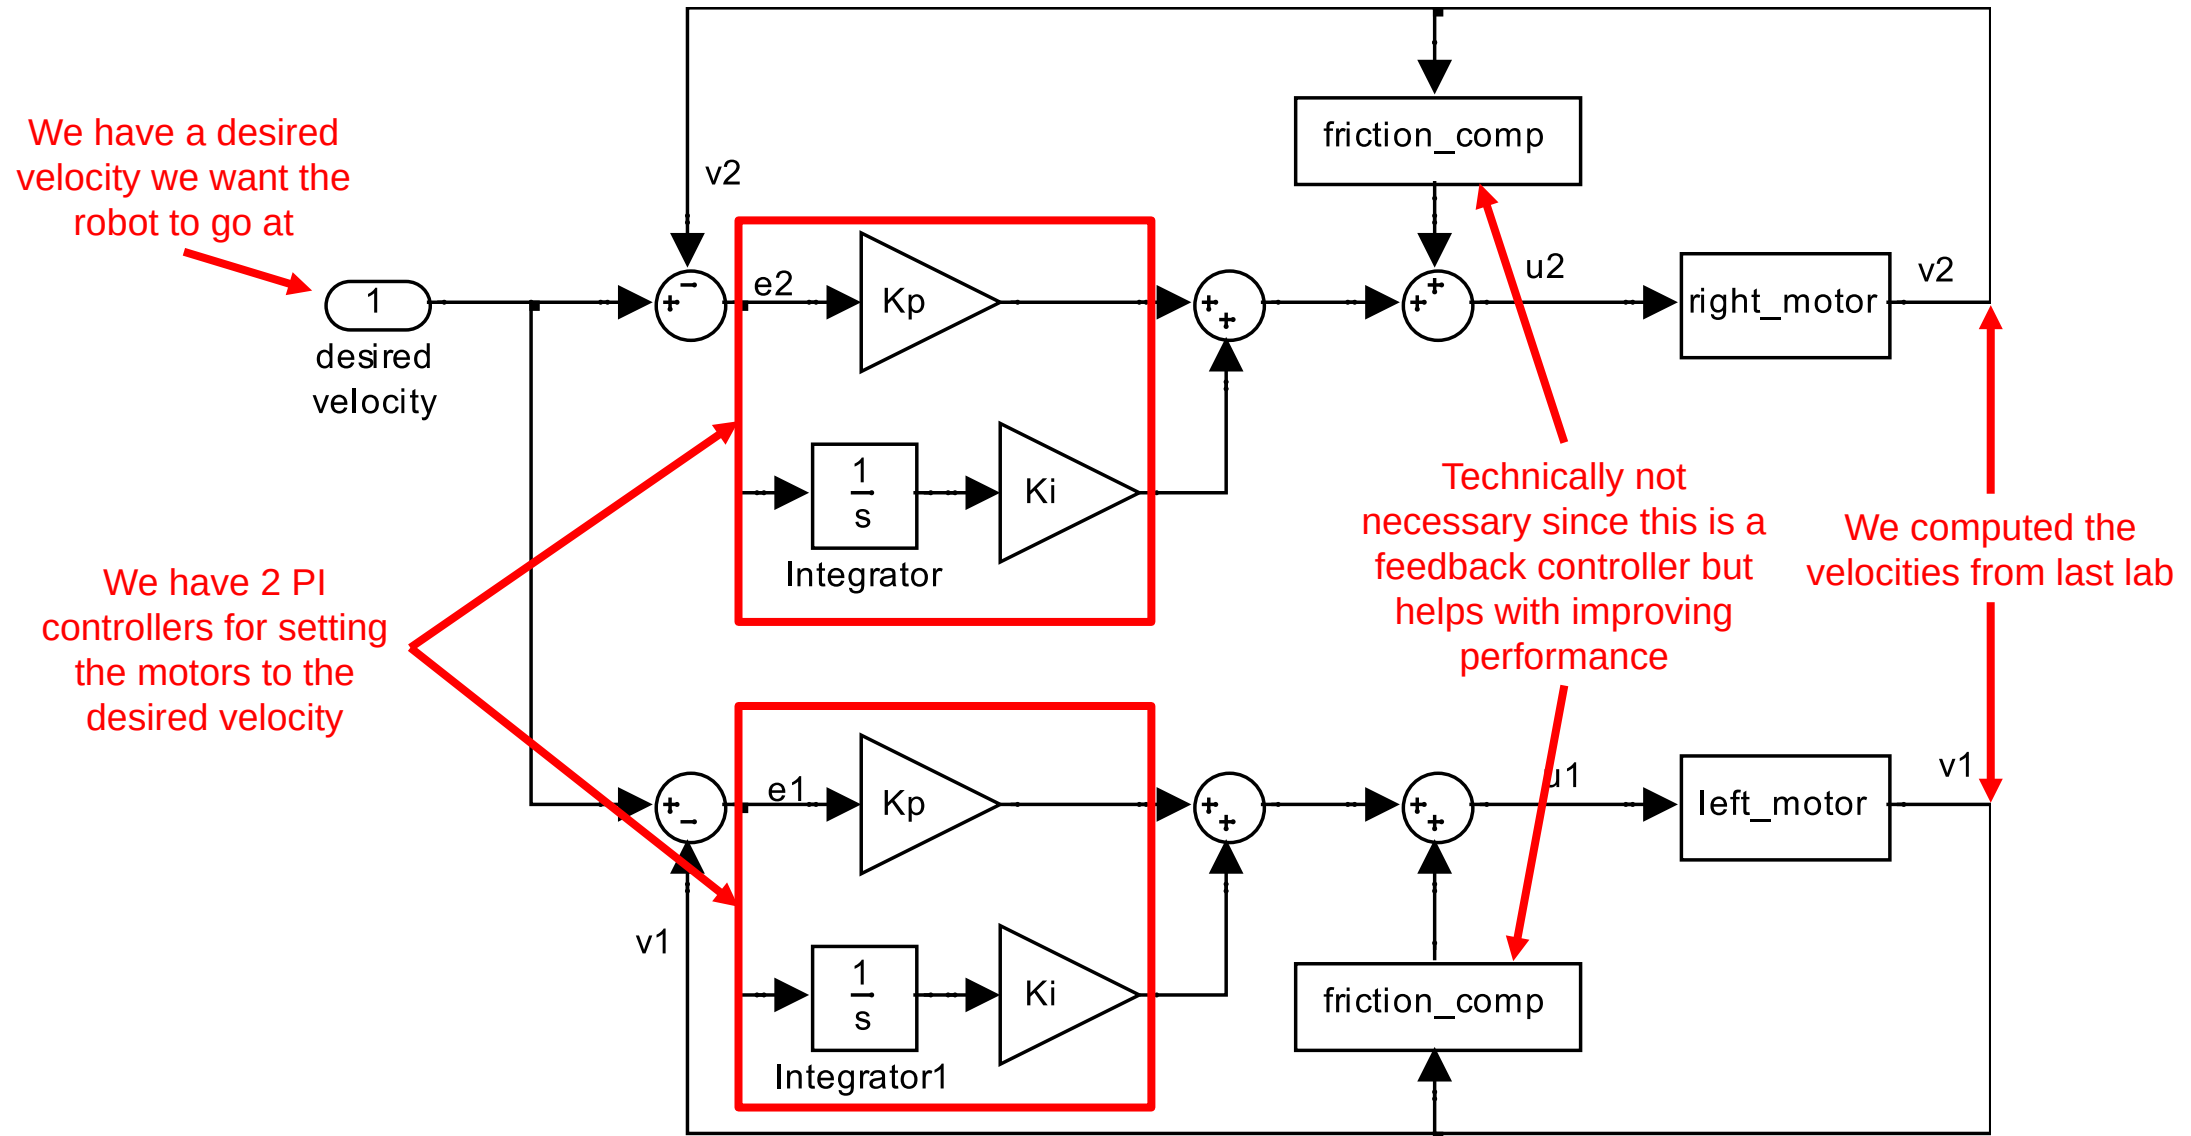

PID Controller

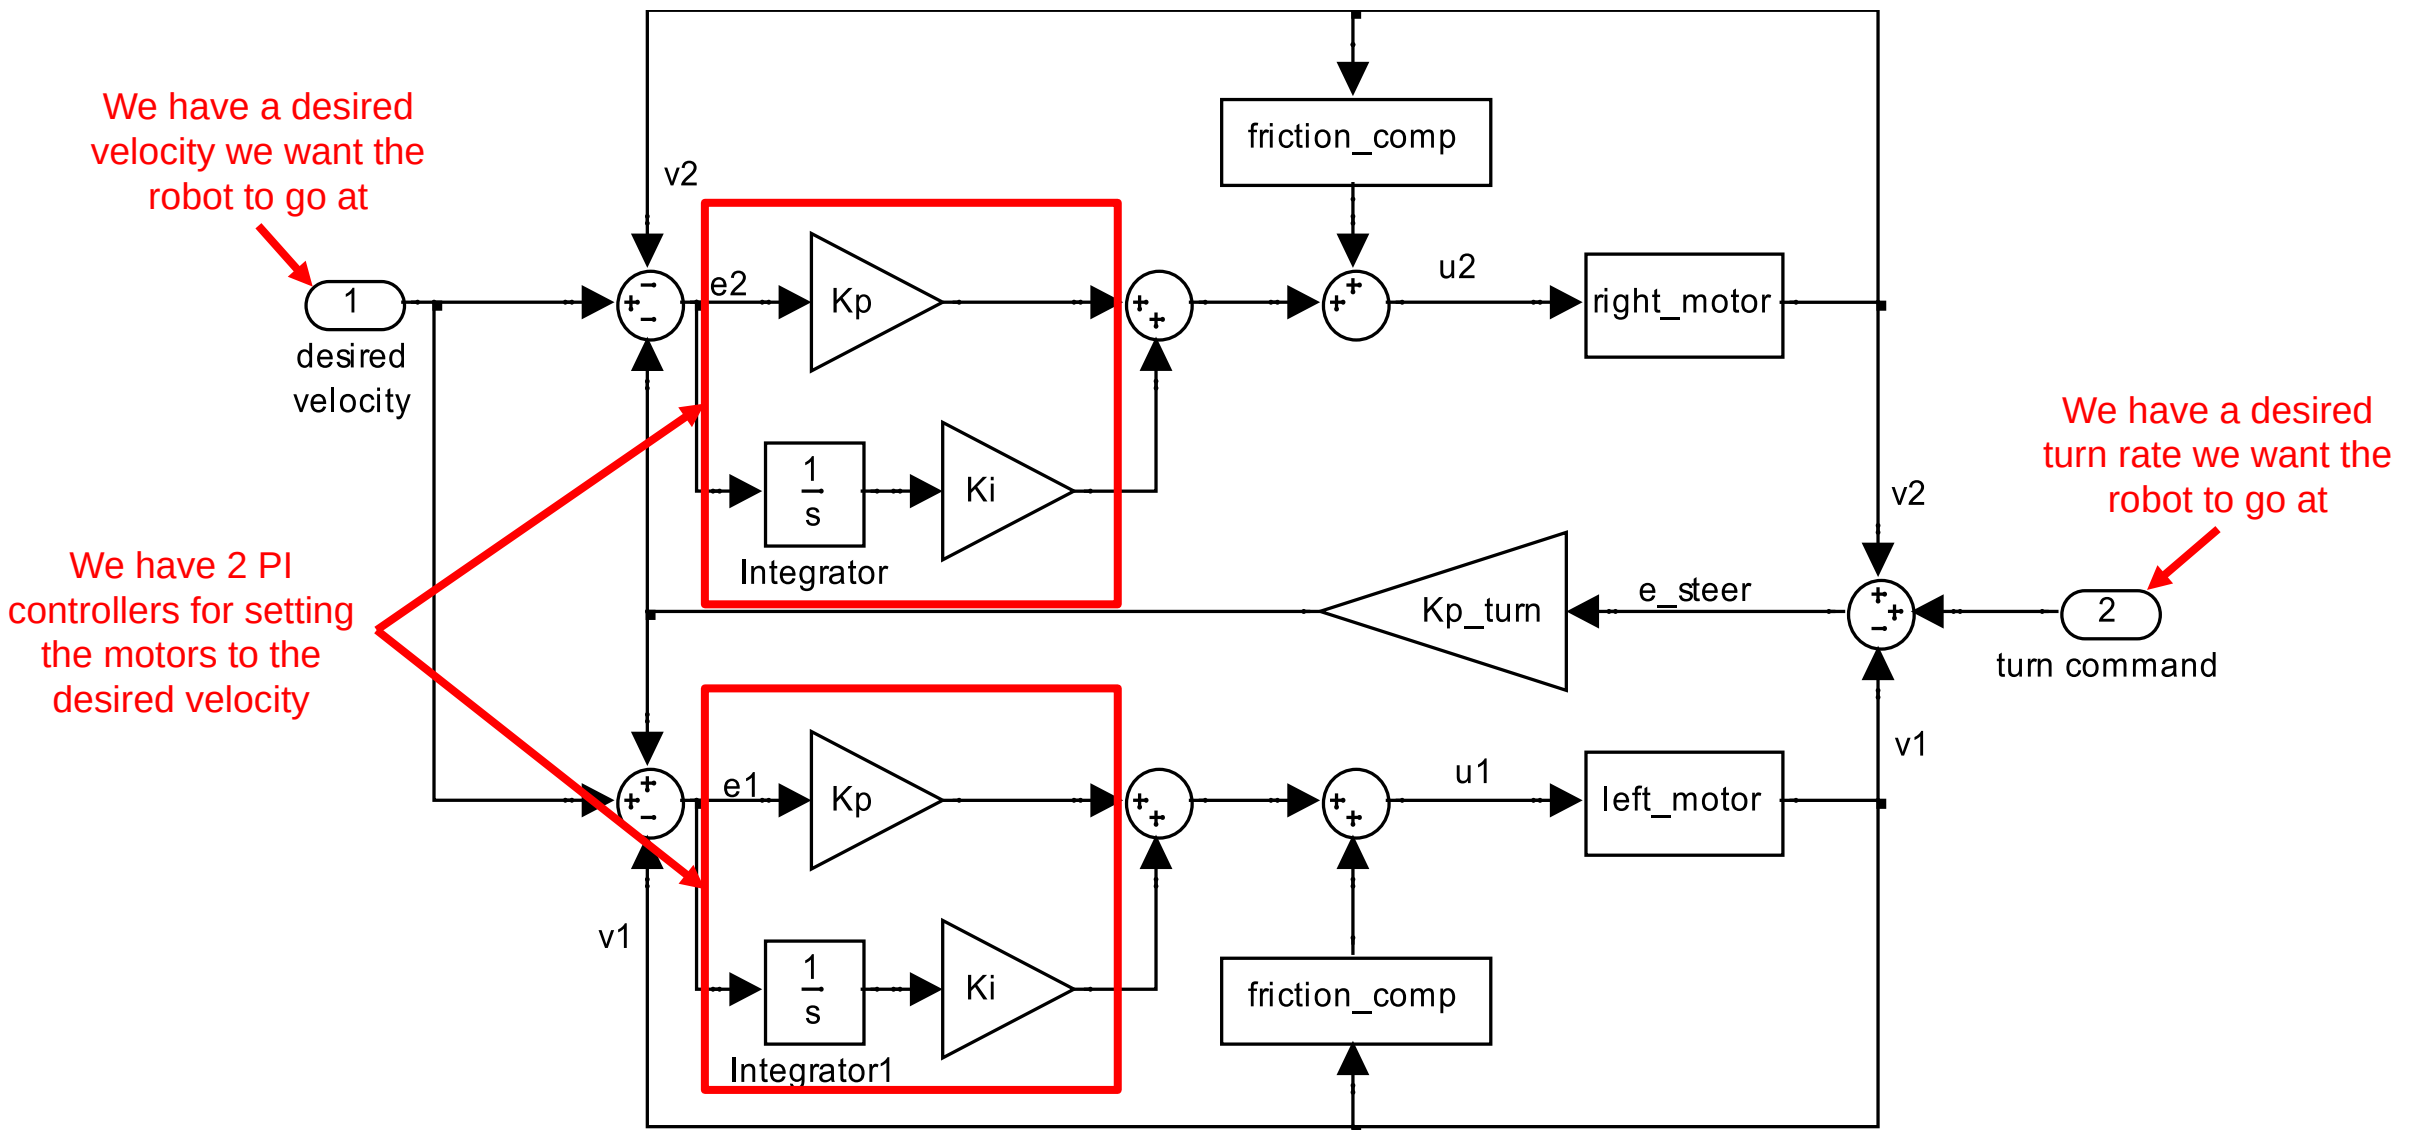

We have 3 error terms,

First, we have the steering error $e_{\text{steer}}(t)$

$$e_{\text{steer}}(t) = \omega_r(t) - (v_l(t) - v_r(t))$$

If we tell the robot to turn right ($\omega_r(t) > 0$), we expect the right wheel to move faster than the left wheel.

This is because in a differential drive system, the yaw rate is proportional to the difference between the right and left velocities $\omega \propto v_r - v_l$

Now we have the **Left Motor error** $e_l(t)$, receives positive feedback from the turning loop



$$e_l(t) = v_r(t) - v_l(t) + K_{\text{steer}} e_{\text{steer}}(t)$$

Now we have the **Right Motor error** $e_r(t)$, receives negative feedback from the turning loop

$$e_r(t) = v_r(t) - v_l(t) - K_{\text{steer}} e_{\text{steer}}(t)$$

This cross couples the control loops for the steering and the velocity control. Such that you have a feedback loop for making the robot steer. And then a separate control loop to reach the robot's target individual motor velocity.

Questions?

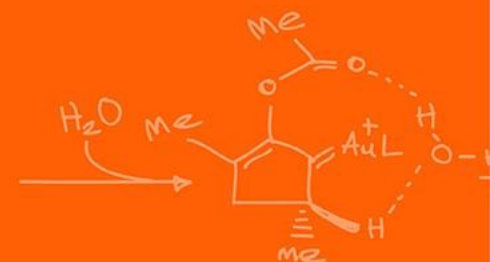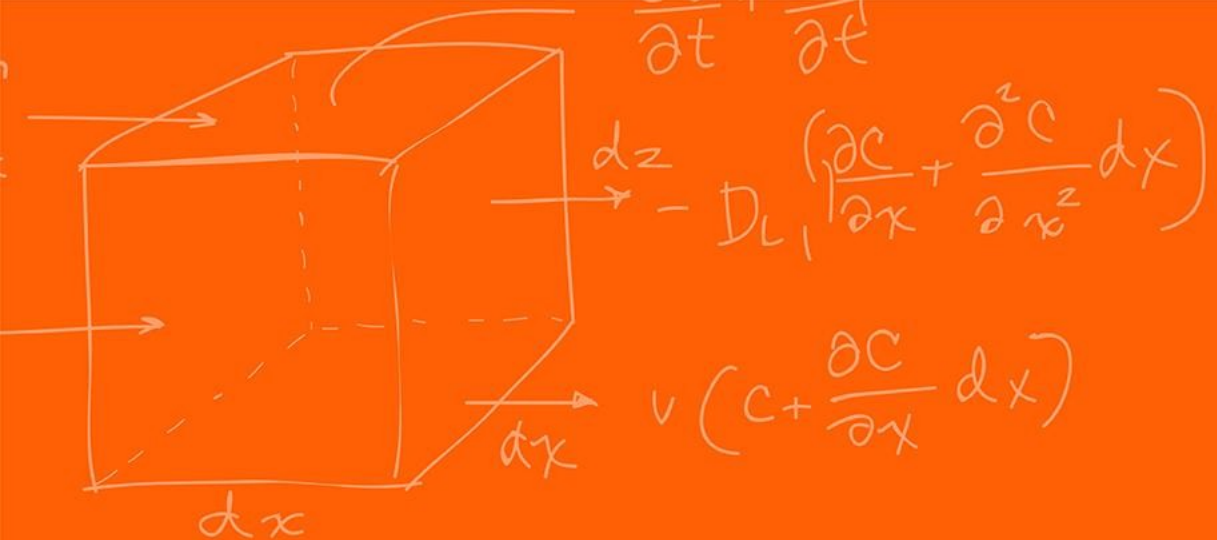

The Grainger College of Engineering

UNIVERSITY OF ILLINOIS URBANA-CHAMPAIGN

