🥑 AvocadoBook – Assembly instructions 🔧

⏱️ About 30 minutes · 👷 Adult assembly · 🚫🔩 No screws, no glue, no tools



📦 What you need

Plate	Parts
1️⃣ fondo	⬜ bottom (USB-C port, hinge cradles, ⬛ black text underneath)
2️⃣ piano	⬜ top case (with the 2 hinge covers)
3️⃣ coperchio	⬜ lid with ⬛ screen and 🤍 logo + 🟥 small PLA support
4️⃣ tasti	⬛ 50 keys with 🤍 legends
5️⃣ cornice	⬛ screen bezel
6️⃣ molle	🤍 10 keyboard spring strips + 2 trackpad strips, on 🟥 PLA sheets
7️⃣ trackpad	⬜ trackpad

🖨️ How to print them: see the **print sheet**.


✂️ 0. Preparing the parts

1. 🍃 Snap off the **tear-off ears** at the corners of the top case, lid and bezel by bending them back and forth; file the leftover.
2. 🟥 Peel the **springs** off the PLA sheets by hand (PETG and PLA don't bond). Also remove the **small PLA support** under the lid hinge.
3. ⚠️ Remove the **top case** with a cold bed by flexing the plate and **never pull it by the two hinge covers**.

🖥️ 1. Screen and bezel

1. Lay the lid with the screen facing up.
2. Push the pegs of the ⬛ **bezel** into the holes of the lid and press all around until it sits flush. 👌

🌀 2. Springs into the bottom

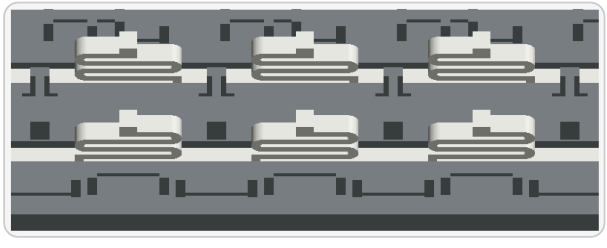

1. Each strip is named in the file: **fila 1 = number row** … **fila 5 = space bar row**; **davanti** = front, **dietro** = back.
2. Push each strip **upright** into its slot, straight rail down. The S shapes of the back strip are mirrored. 🔁
3. Do the same with the 2 short **trackpad** strips.
4. ✅ The springs must go all the way down without forcing.

⌨️ 3. Keys and trackpad

1. Place every key on its two springs: the **4 tabs** slide into the channels of the ribs.
2. Place the 🖱️ **trackpad** on its springs, with its rim in its seat.

> 💡 **Tip**: work one row at a time starting from the back and check every key sits straight.

🔗 4. Lid onto the bottom

1. Slide the **hinge axle** horizontally, from the front, into the **two cradles** at the back of the bottom.
2. 📐 **Open the lid to at least 105°**: at 90° the screen gets in the way of the top case.

🔒 5. Closing with the top case

1. Lower the **top case** from above, letting keys and trackpad pass through their openings; the two **hinge covers** go over the axle and lock it.
2. Press with your palm, at the back first and then towards the front, until **all hooks click**. 🔊
3. ⚠️ Don't force it: if something doesn't go down, lift it and check that no key is crooked.

✅ 6. Final check

- ⌨️ Every key goes down and comes back up by itself.
- 🖱️ The trackpad is flush and clicks.
- 🔌 A USB-C cable plugs in and stays in.
- 🖥️ The lid closes and stays open at about 105°.

> 🔒 The keys are designed **not to come out**: the laptop is not meant to be taken apart often.

> 🚸 **Safety**: contains small parts, not suitable for children under 3. Check regularly for broken parts or sharp edges. 🎉 Have fun!