
Lab 6: MASAUSO LUNGU

Link to my GitHub repository:

https://github.com/Masauso-L/Digital-electronis-2/tree/main/Labs/06-lcd


LCD display module

- 1. In your words, describe what ASCII table is.
 - ASCII table: Is a table of values for character encoding standard for electronic communication.
 ASCII code is used to represent text in computers and other devices.
- 2. (Hand-drawn) picture of time signals between ATmega328P and LCD keypad shield (HD44780 driver) when transmitting three character data DE2.

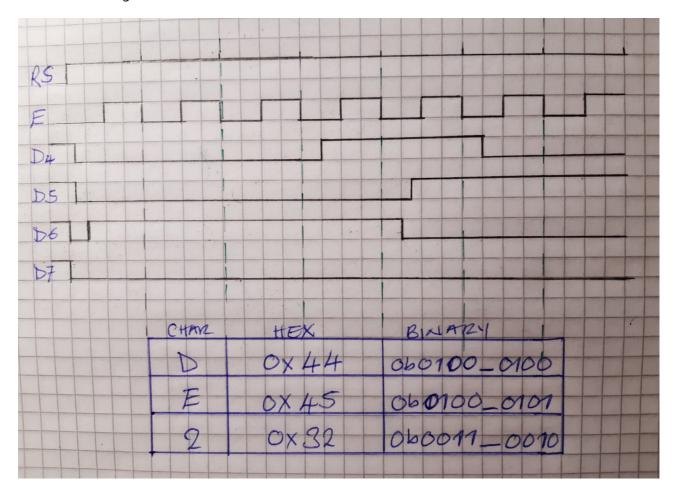

Stopwatch

1. Flowchart figure for TIMER2_OVF_vect interrupt service routine which overflows every 16 ms but it updates the stopwatch LCD approximately every 100 ms (6 x 16 ms = 100 ms). Display tenths of a second and seconds 00:seconds.tenths. Let the stopwatch counts from 00:00.0 to 00:59.9 and then starts again. The image can be drawn on a computer or by hand. Use clear descriptions of the individual steps of the algorithms.

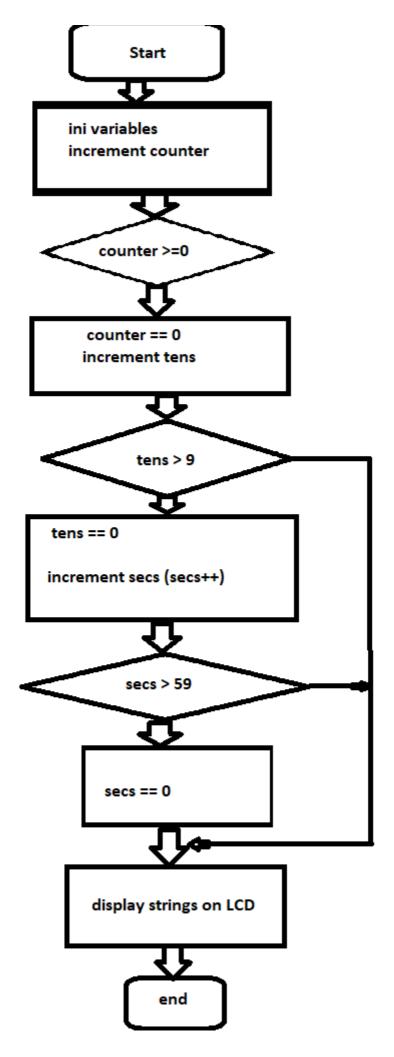

Custom characters

1. Code listing of two custom character definition. Always use syntax highlighting and meaningful comments:

```
/* Variables -----*/
// Custom character definition
uint8_t customChar[16] = {

    // character 1: #
    0b01010, 0b01010, 0b11111, 0b01010, 0b01010, 0b11111, 0b01010, 0b01010,

    // character 2: π
    0b000000, 0b000000, 0b11111, 0b01010, 0b01010, 0b01010, 0b01011
};
```

Kitchen alarm

Consider a kitchen alarm with an LCD, one LED and three push buttons: start, +1 minute, -1 minute. Use the +1/-1 minute buttons to increment/decrement the timer value. After pressing the Start button, the countdown starts. The countdown value is shown on the display in the form of mm.ss (minutes.seconds). At the end of the countdown, the LED will start blinking.

1. Scheme of kitchen alarm; do not forget the supply voltage. The image can be drawn on a computer or by hand. Always name all components and their values.

