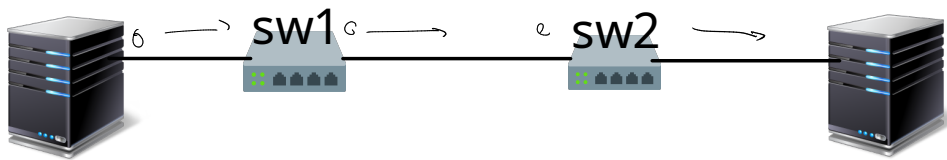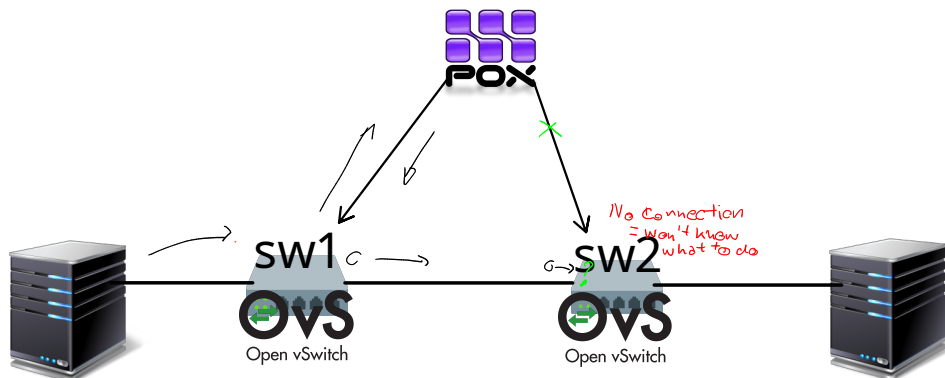## A simple L2 network:

By default (and as in your 1st assignment), OpenVWitch does the switching job
But if POX doen't reply, the switch won't know what to do

No connection
= won't know
what to do

POX starts Click that would replace OpenVSwitch on sw2

if (id == 1)
learning-switch ()
else
start-click ()

= OpenFlow Connection
= python Controller
= Click Conf.

Popen ("sudo click...")

=> Click acts like
a L2 switch

Learning switch

no
reply

id = 2

Click

id = 1

"steal" pkts

OvS is "disabled"