Service Bulletin

Technics


Number: A6-87-17

Date: September 1987

Matsushita Services Company
Engineering Support Division
Division of Matsushita Electric
Corporation of America
50 Meadowland Parkway
Secaucus, New Jersey 07094

Model:

SL-P1200
Compact Disc Player

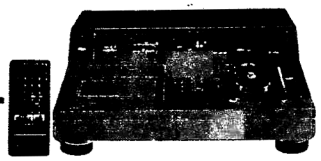

SL-P1200

FILE THIS BULLETIN WITH YOUR SERVICE MANUAL.

Symptom: 1) No operation at all.
2) Unit reads the T.O.C. but fails to enter the play mode.

Cause: The spindle drive IC (AN8290S) overheats and locks-up when:

A) The unit is subjected to excessive vibration during play causing the pick-up to skip.
B) The unit is subjected to excessive use of the skip function.
C) The play function is selected while the transport lock shaft is not set free.

Each of the above conditions cause Q12, Q13, Q101, and Q102 to overheat and become damaged. The excessive heat causes the transistor's solder joints to dry and therefore cause poor connection, or solder bridges.

Remedy: 1) Order kit number SZZP1093C. Refer to the kit contents below.
2) Replace the transistors as indicated in Figure 1.
3) Mount the heat sink to IC501 as shown and indicated in Figure 2.

DESCRIPTION	REF. NO	ORIGINAL PART NO.	NEW PART NO.	KIT PART NO.
TRANSISTOR	Q12	2SC1846 OR 2SD973	2SD1266	SZZP1093C
TRANSISTOR	Q13	2SA885 OR 2SB793	2SB941	
TRANSISTOR	Q101	2SD1055	2SD1266	
TRANSISTOR	Q102	2SB822	2SB941	
HEAT SINK	----	----------	SMWD3E	


----------IMPORTANT----------

THIS MODIFICATION HAS BEEN IMPLEMENTED DURING PRODUCTION FROM JULY 3, 1987. THE SERIAL NUMBER SUFFIX HAS BEEN CHANGED FROM "J" TO "K".

Dist: A6,97,W-877

(OVER)

Regardless of customer's complaint, perform the modification on units having serial number suffix up to and including "J", as indicated below:

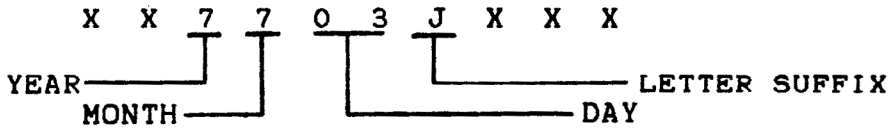

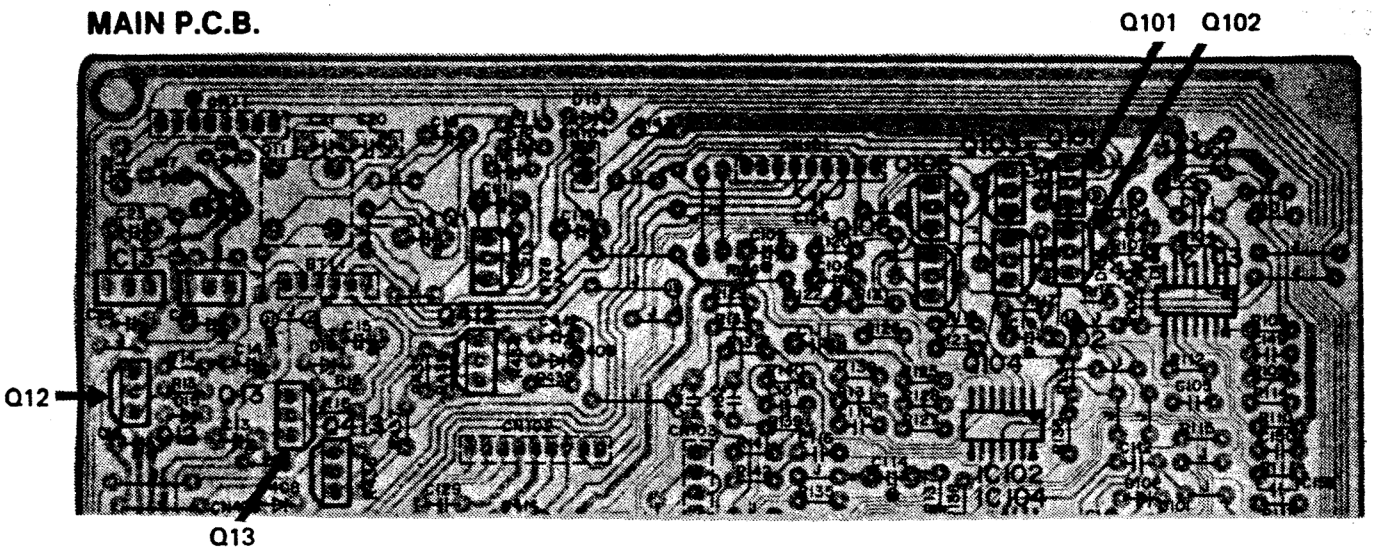


FIGURE 1 - PCB LAYOUT (TRANSISTORS LOCATION)

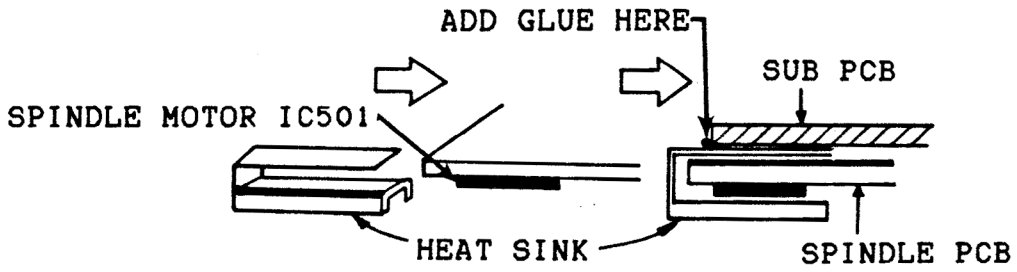


FIGURE 2 - MOUNTING THE HEAT SINK SMWD3E

HEAT SINK MOUNTING PROCEDURE

A) Loosen the spindle PCB and sub PCB mounting screws.
B) Insert the heat sink's thin leaf between the spindle, PCB and sub PCB.
C) Mount the PCBs.
D) Secure the thin leaf of the heat sink to the sub PCB using "3M" type glue.

# # #