ORDER NO. AD8908221S1
A6

Service Manual

Supplement

COMPACT disc DIGITAL AUDIO

DIGITAL

Compact Disc Player

SL-P1200X

Color

(K) .....Black Type


Area

Color	Area
(K)	(M).....U.S.A.
(K)	(MC) .....Canada.

Please file and use this supplement manual together with the service manual for Model No. SL-P1200X, Order No. HAD8707245C1.

Note:
This supplement has been issued to inform you that the balanced output P.C.B. have been changed in units having serial number suffixes "Q" or later. (Refer to "How to read the serial number" shown at right.)

● How to read the serial number

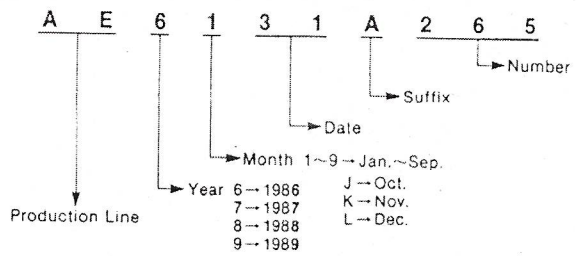

CHANGES

■ REPLACEMENT PARTS LIST

Ref. No.	Change of Part No. ORIGINAL	→ NEW	Description	Remarks
RESISTOR				
R903 ~ 906	ER0S2TKF1801	———	———	Deletion
R911 ~ 914	ER0S2TKF5602	**ER0S2TKF2702**	27KΩ, 1/4W	Change
R915 ~ 922	ERD25FJ150	**ERD25FJ270**	27Ω, 1/4W	Change
R935 ~ 942	ER0S2TKF8R20	**ER0S2TKF15R0**	15Ω, 1/4W	Change
R945, 946	ER0S2TKF6200	———	———	Deletion
R971 ~ 974	———	**ER0S2TKF3300**	330Ω, 1/4W	Addition
R991, 992	———	**ER0S2TKF2202**	22KΩ, 1/4W	Addition
R993 ~ 996	———	**ER0S2TKF3902**	39KΩ, 1/4W	Addition
R997 ~ 1000	———	**ER0S2TKF33R0**	33Ω, 1/4W	Addition

Technics


Matsushita Services Company
Division of Matsushita Electric
Corporation of America
50 Meadowland Parkway,
Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric
of Puerto Rico, Inc.
San Gabriel Industrial Park
65th Infantry Ave. Km.9.5
Carolina, P.R. 00630


Matsushita Electric of Canada
Limited
5770 Ambler Drive, Mississauga,
Ontario, L4W 2T3

■ SCHEMATIC DIAGRAM

(ORIGINAL)

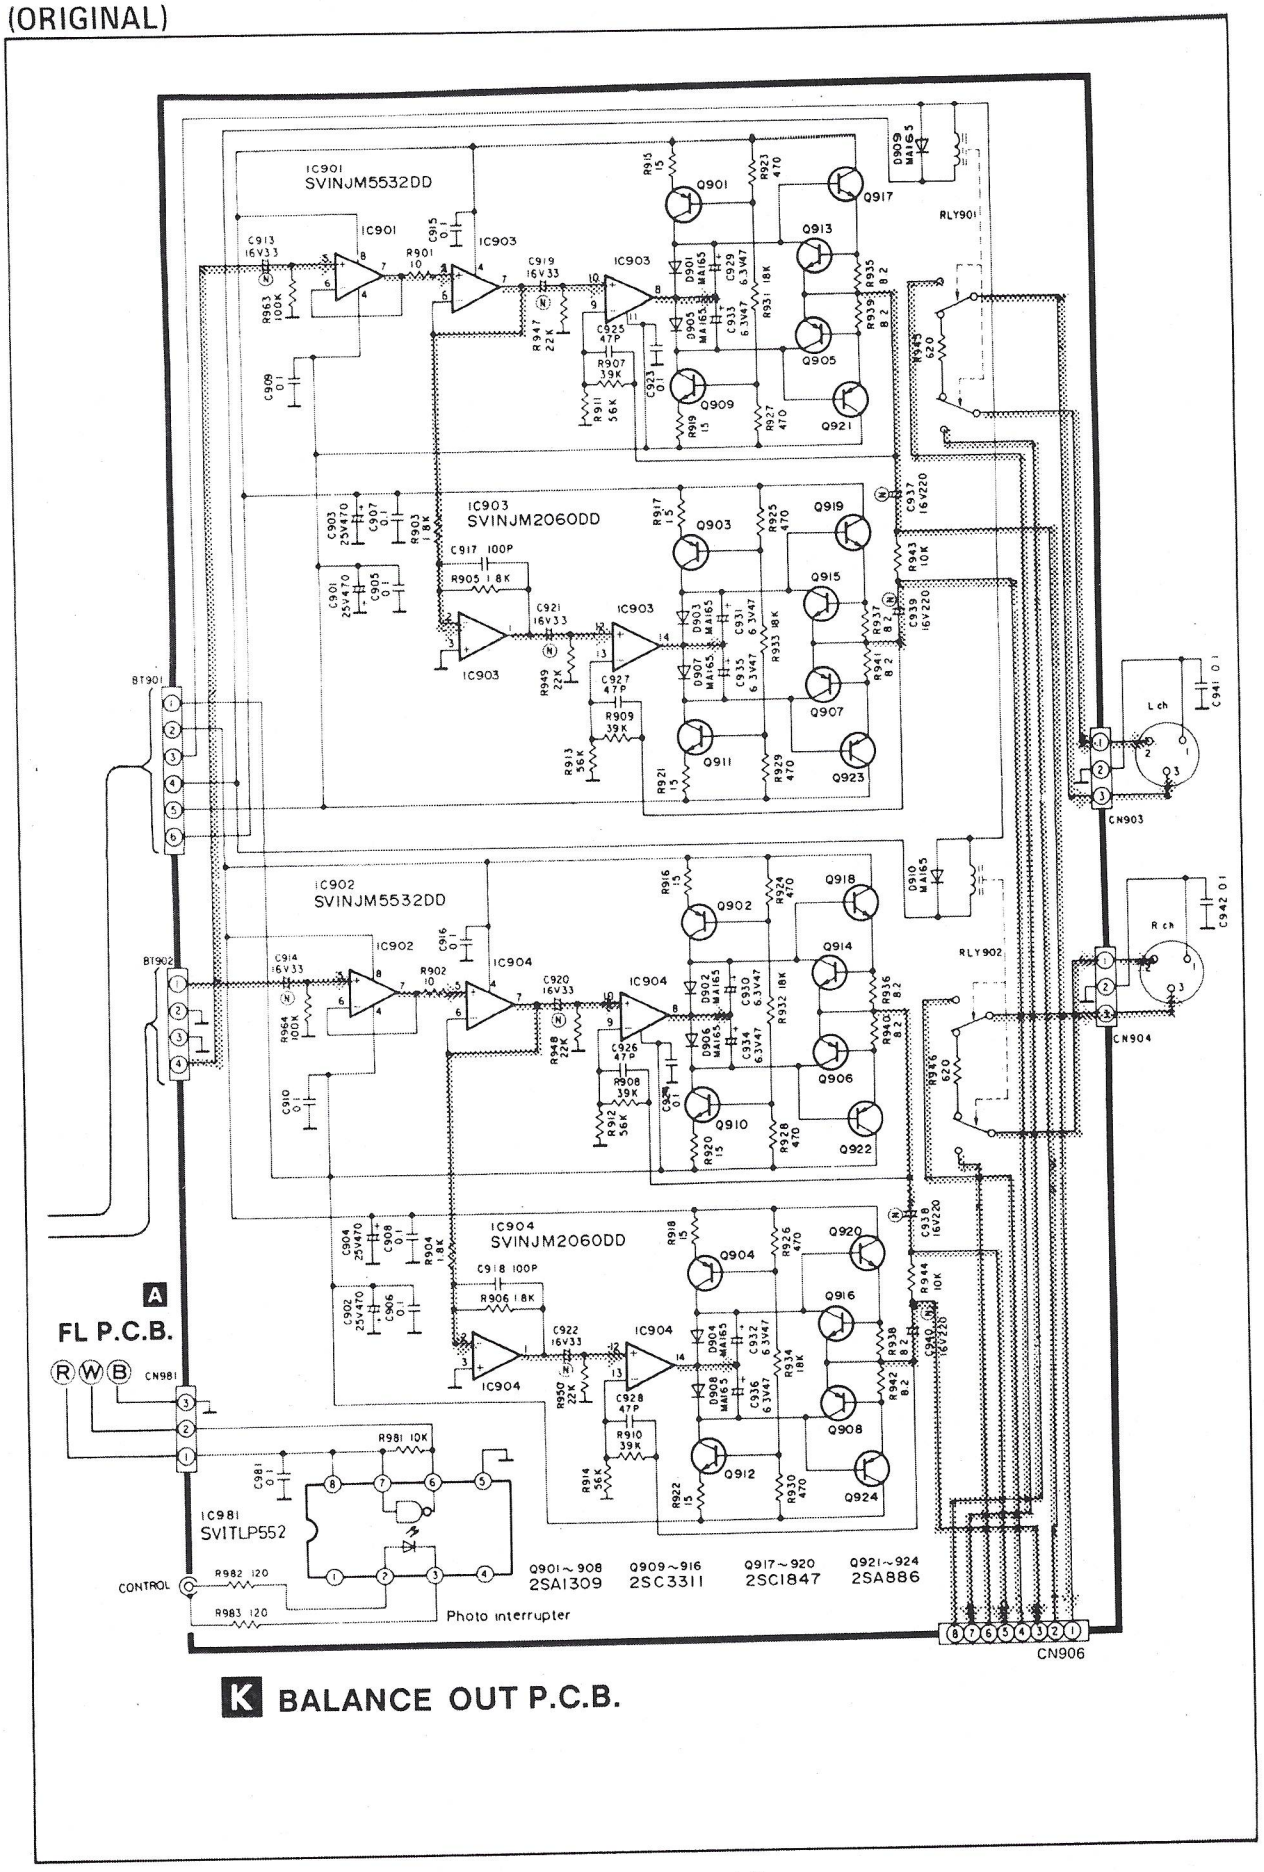


(NEW)

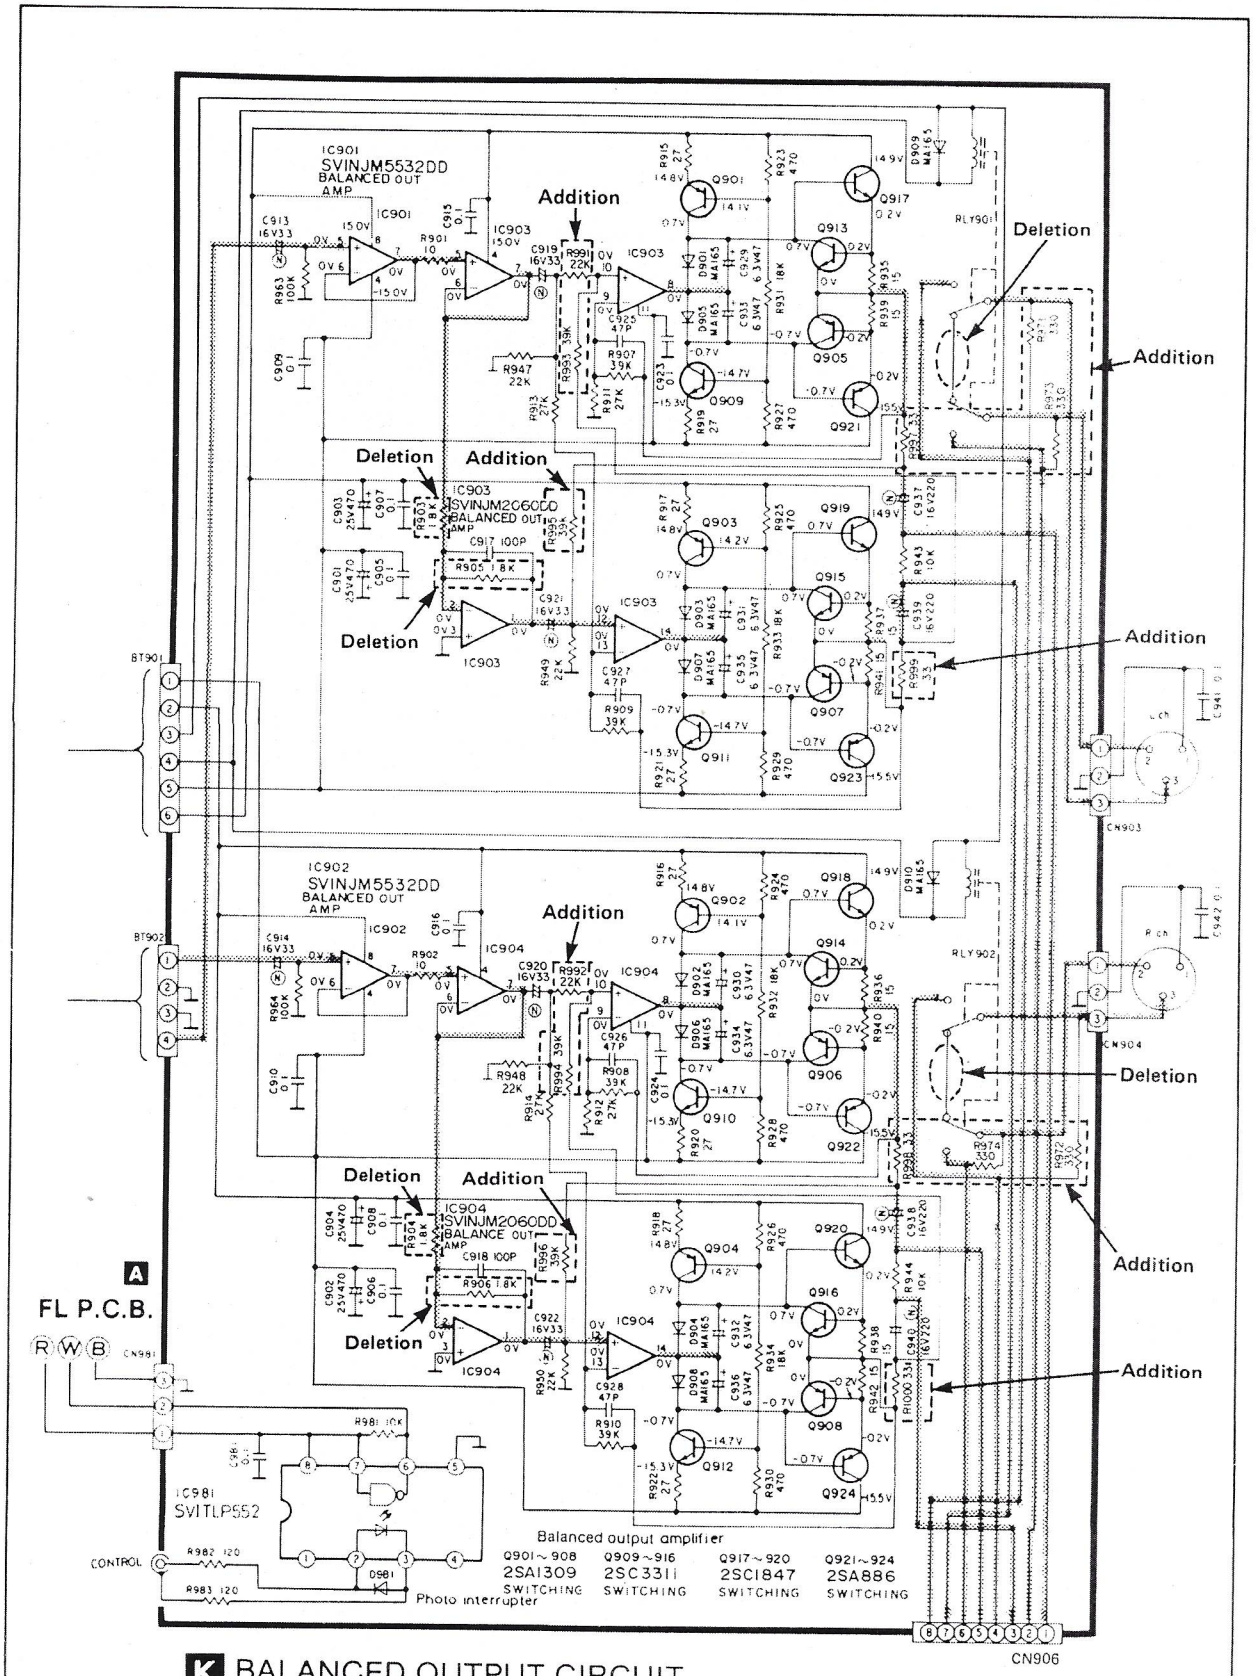


K BALANCED OUTPUT CIRCUIT

■ PRINTED CIRCUIT BOARDS

(ORIGINAL)

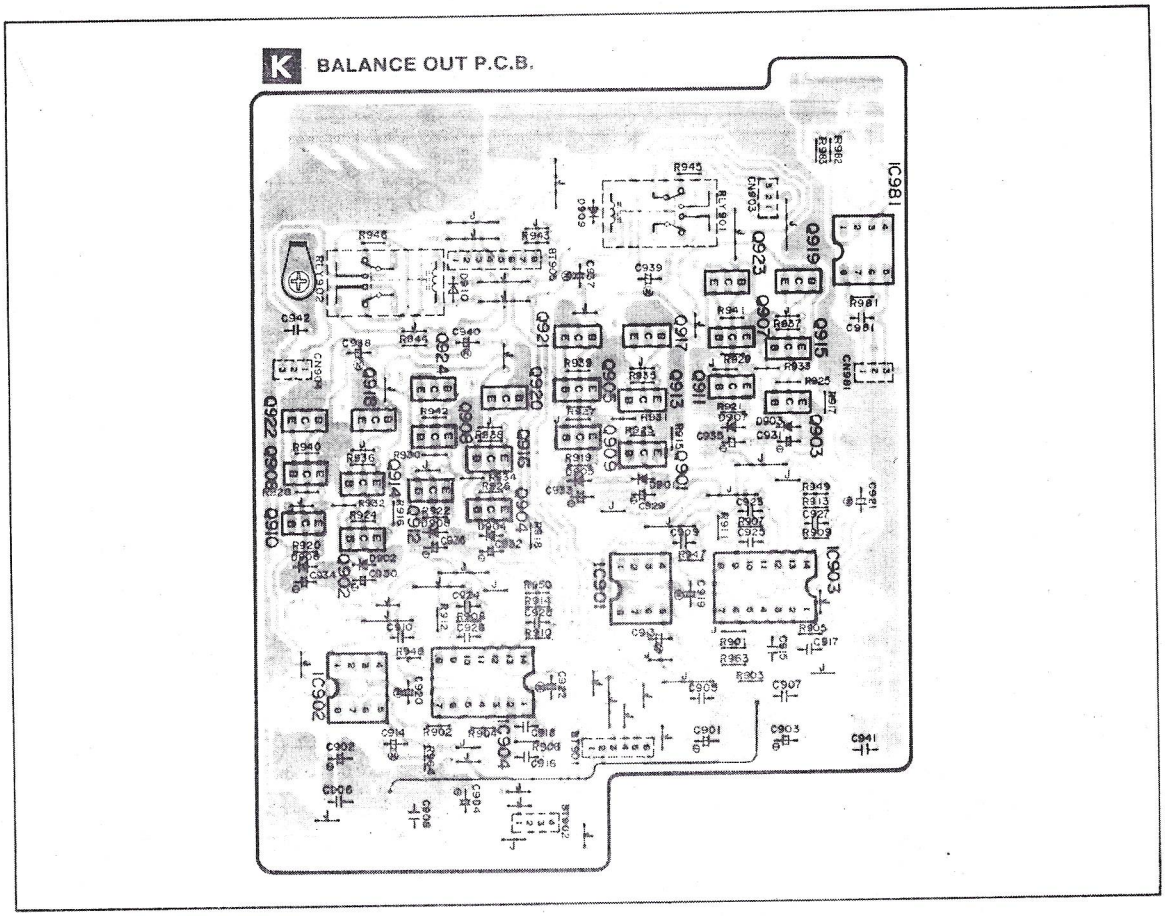

(NEW)

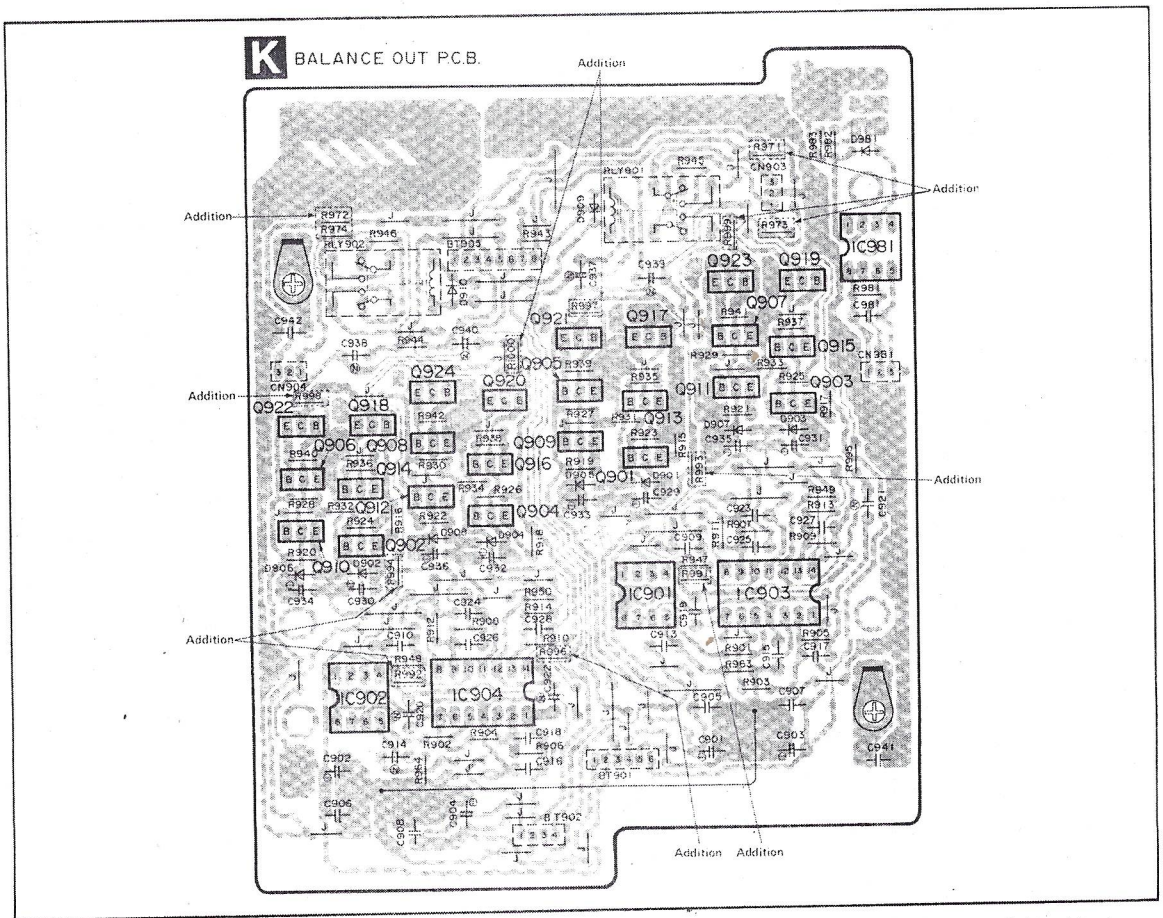

Printed in Japan
K891002480YY

Matsushita Services Company

IMPORTANT!!!

This SL-P1200 or SL-P1200X Compact Disc Player has been modified by improving internal ground circuit for keyboard. An external ground terminal has also been added. PLEASE FOLLOW THESE INSTRUCTIONS WHEN INSTALLING so as to prevent static or mis-operation, especially when using wired remote. Thank you.

GROUNDING THE UNIT

Please note the following when making connections to the audio output terminals:

1) SL-P1200X

* WHEN USING BOTH THE "UNBALANCE" AND "BALANCED" OUTPUTS AT THE SAME TIME:
  Make sure that pin 1 on both channels of the BALANCED output terminals is disconnected.

* WHEN USING ONLY THE "BALANCED" OUTPUTS:
  If pin 1 of the BALANCED outputs is disconnected, be sure to connect this unit's ground terminal to the ground of the component to which it is connected.

  If pin 1 of the BALANCED outputs is connected, connection of the ground terminal is not necessary.

  In either case confirm that the component to which this unit is connected is properly grounded.

* WHEN CONNECTING THE WIRED REMOTE CONTROL TERMINAL:
  Do not connect pin 4 of the WIRED REMOTE CONTROL to the system's ground.

2) SL-P1200

* WHEN CONNECTING TO AN "UNBALANCED TO BALANCED" ADAPTOR:
  Do not connect pin 1 of the BALANCED terminal to the adaptor side.

* WHEN CONNECTING THE WIRED REMOTE CONTROL TERMINAL:
  Do not connect pin 4 of the WIRED REMOTE CONTROL to the system's ground.