


- 2/ draw holes position on other parts, drill (use a jig for perfect work) and glue slots
- 3/ drill top board with 10mm depth (wrap tape on the bit as marker), put all wood dowels, glue edge panels and holes
- 4/ use clamps for tightening

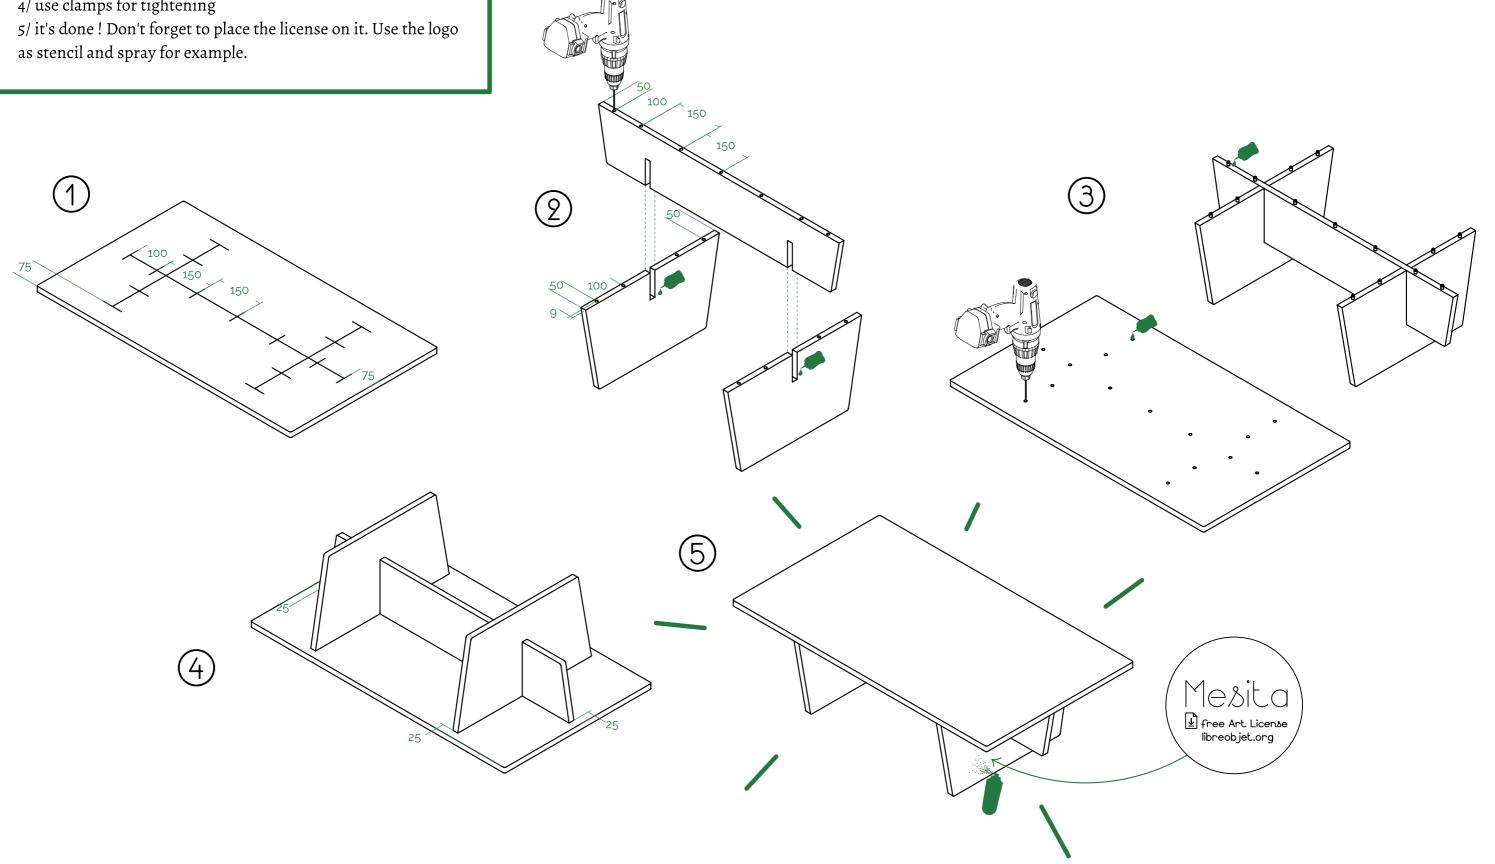

Licence : Free Art License Designer : Mathieu Gabiot