


<u>Documentation modification</u> <u>of the Kicad project</u>


From KiCad open the .pro

Load libraries in the project

Modification of the wiring diagram:

In preferences / Configure symbols path / Global libraries :

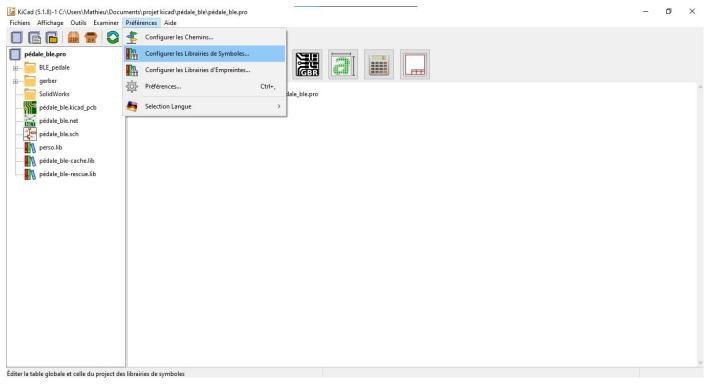




- Click on then select the used libraries
 - o lib_dcm / Ctrl+A Enter



Modification routing:

In preferences / Configure symbols path / Global libraries :

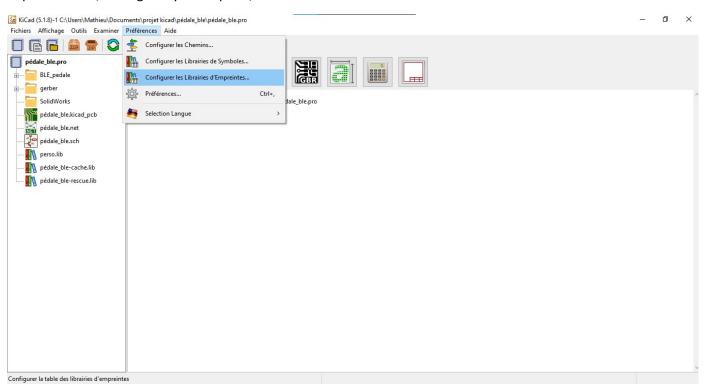

- Click on then select the used footprints
 - o perso .pretty (selection of folder)

If the libraries are not loaded, some components appear as a box with ? inside (in electronic schematic editing mode).