


<u>Documentation modification</u> <u>of the Kicad project</u>

From KiCad open the .pro

Load libraries in the project

Modification of the wiring diagram:

In preferences / Configure symbols path / Global libraries :

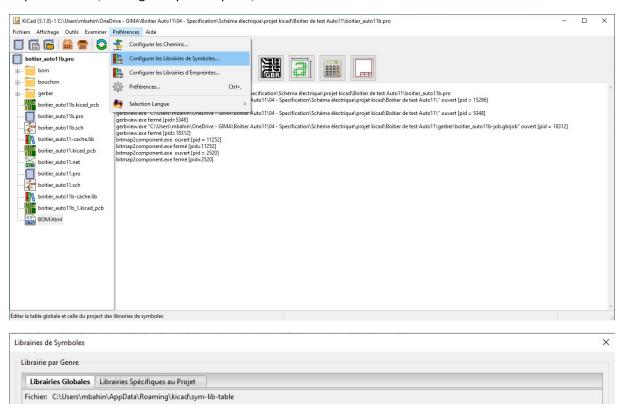


- Click on then select the used libraries



Modification routing:

In preferences / Configure symbols path / Global libraries :

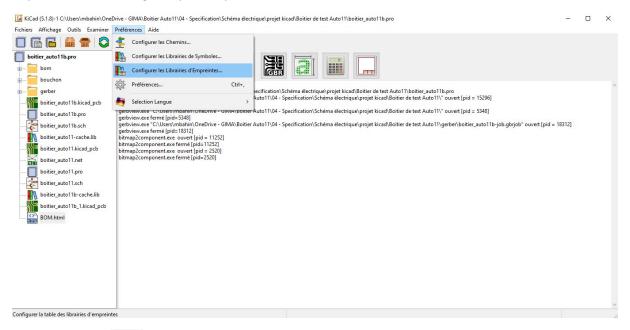

- Click on then select the used footprints

If the libraries are not loaded, some components appear as a box with ? inside (in electronic schematic editing mode).