
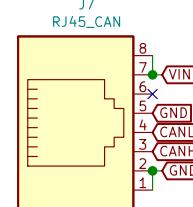
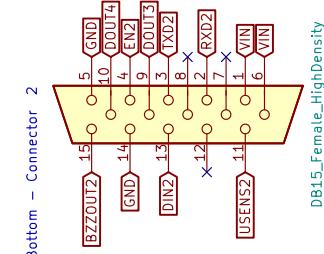
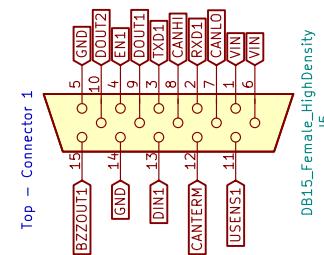
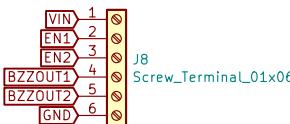
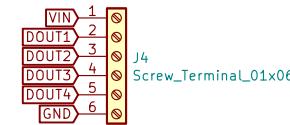
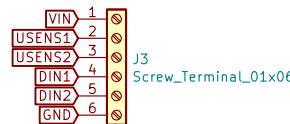
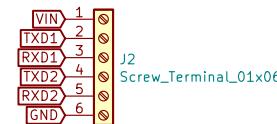


1 2 3 4 5 6

A



Do we need a Fuse for VIN and GND?

JP1
CAN_Termination

CANLO → 1 CANTERM → 2

Connect to terminate CAN Bus

Sheet: /
File: ad57_adapter.sch

Title: AD57 Adapter PCB

Size: A4 Date: 2021-01-30
KiCad E.D.A. kicad (5.1.7)-1

Rev: 0.1
Id: 1/1

1 2 3 4 5 6