Bluewater Café Station 1™
How to Use Guide


Bluewater

You'll find everything you need to know regarding how to use your new Bluewater Café Staton 1™ in this How to use Guide. Or scan the QR code for a user-friendly online version of the guide.




How to take care of your Bluewater Café Station


Check the indicator lights - Daily

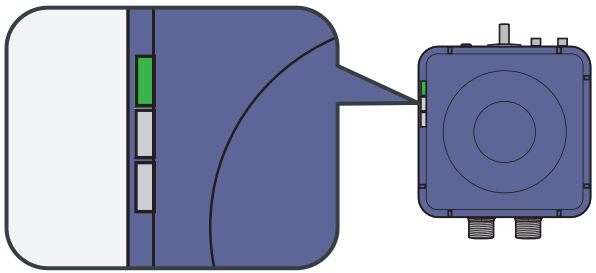


Check for leaks - Daily

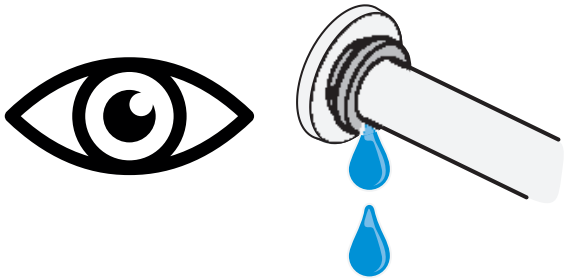


Check Liquid Rock™ Levels - Daily

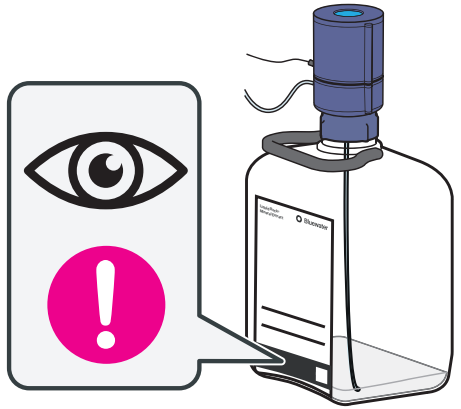


Check the Dosing Pump indicator light - Daily

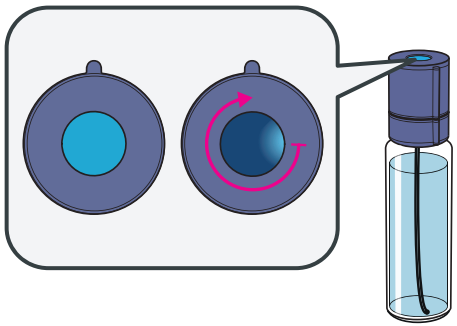


Change purified water after 3 days if not used

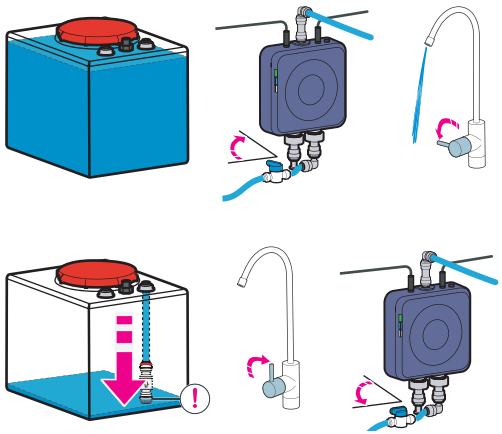


Wipe off Cafe Station - When neccessary

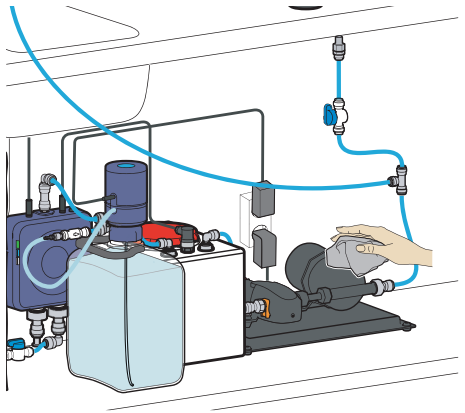

Check Indicators lights

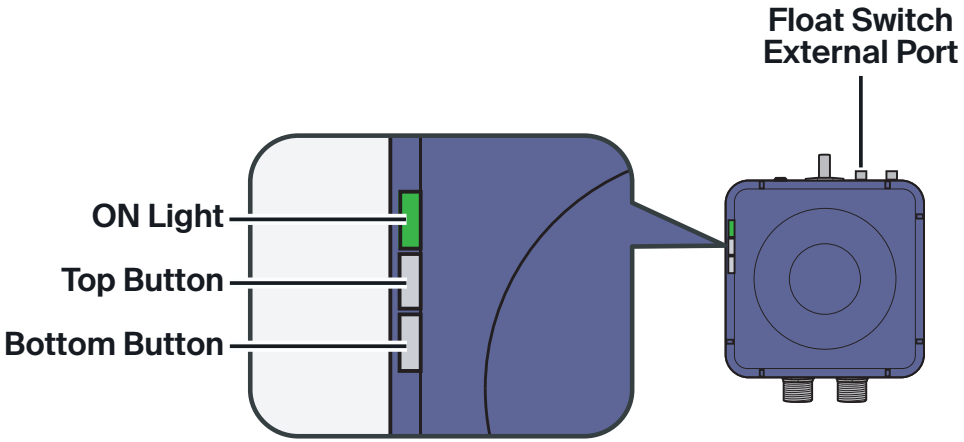

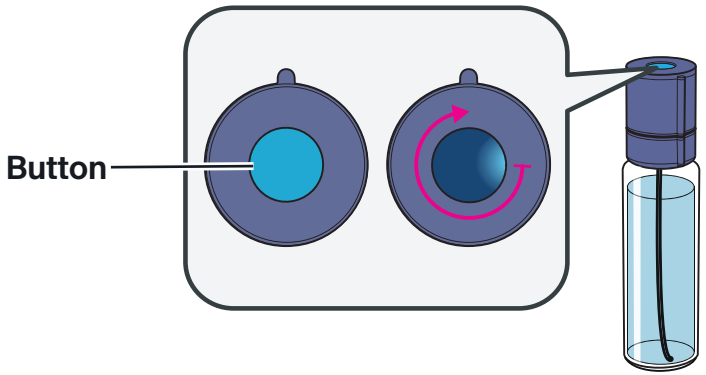


ON light	Top Button	Bottom Button	Meaning
On	Off	Off	The Control Box is connected to power and ready to fill the tank.
On	Purple	Off	The tank is currently being filled with water.
On		Flashing Blue	The Control Box is attempting to pair with a Dosing Pump or Bluewater O.
On		Flashing Orange	The Control Box is ready to pair with a smart device.
On	Flashing Orange	Flashing Orange	Float switch error. Make sure the tank is empty. Disconnect and reconnect the Control Box to power.
Off	Off	Off	The Control Box is not connected to a power supply.

Dosing Pump Button	Meaning
Blue	The Dosing Pump is connected to power and ready to dose minerals.
Rotating Blue	The Dosing Pump is actively dosing minerals to mineralize the water.
Orange*	The Dosing Pump has low levels of Liquid Rock
Rotating Orange*	The Dosing Pump is dosing minerals, but the Liquid Rock Levels are low and will soon run out.
Green	The button is pressed and the Dosing Pump is running.
Off	The Dosing Pump is not connected to a power supply.


* If feature is installed

Change the Liquid Rock Container


1

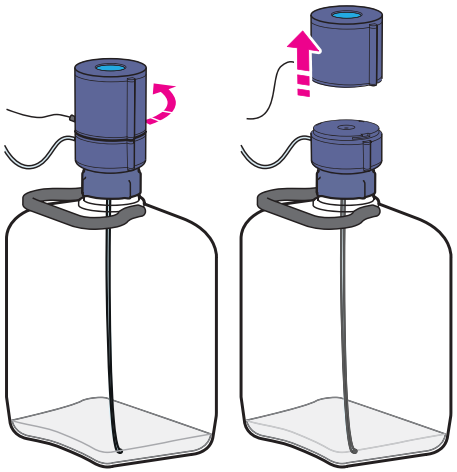

2

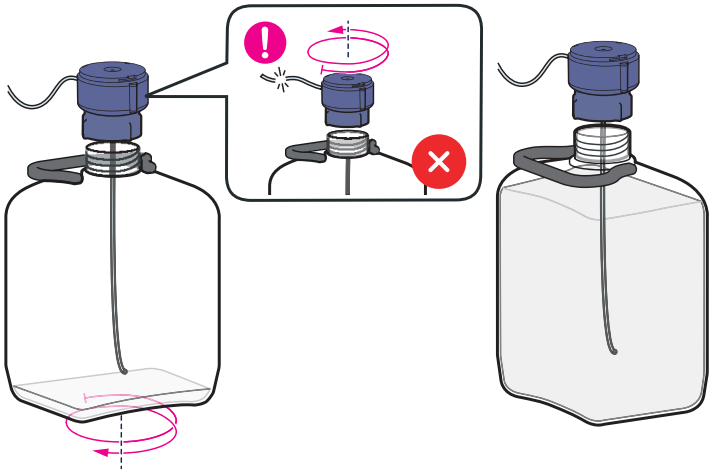


3

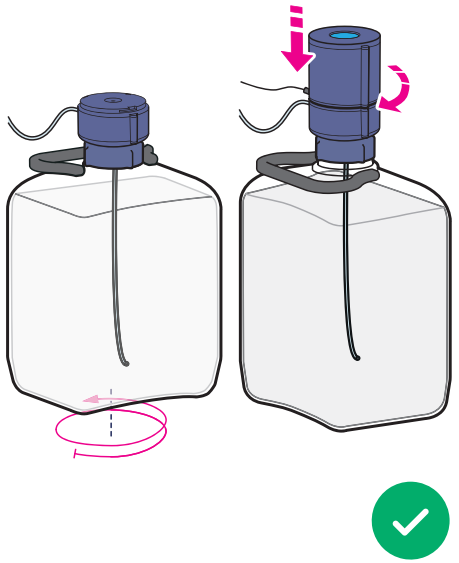


Changing Mineral Concentration in Water for an Espresso Machine

1

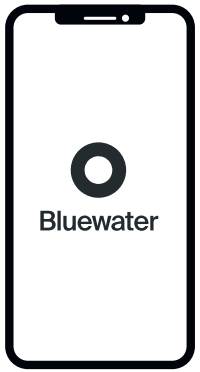


Use the Bluewater Serve app to change concentration


2

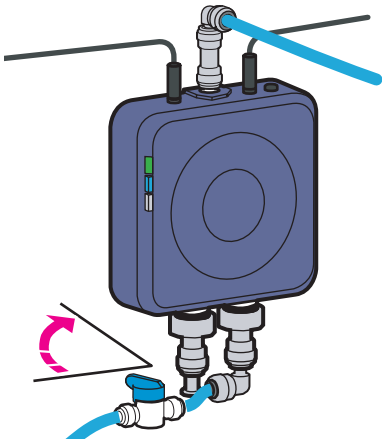


3

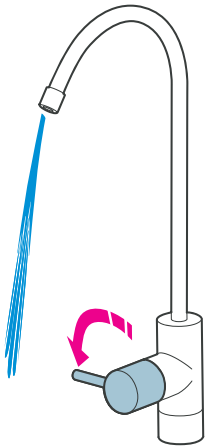


4

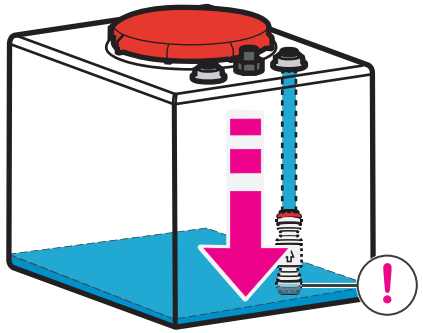


7

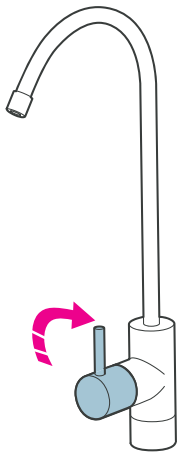

8

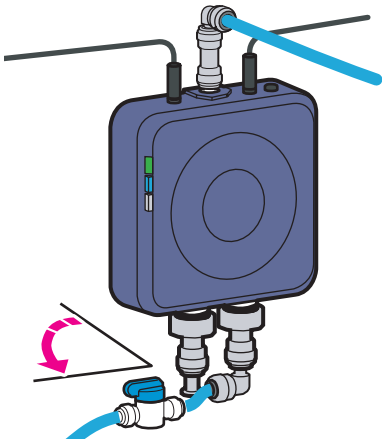

9

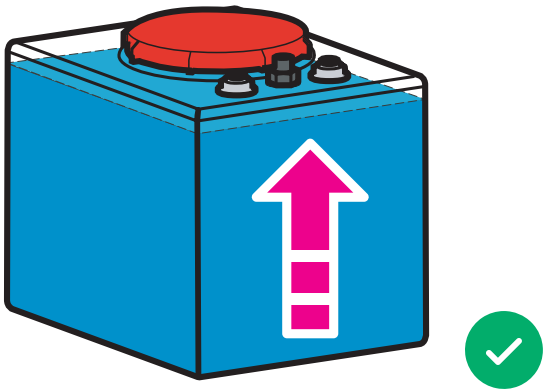

Troubleshooting

Symptom	Cause	Solution
Water not entering the coffee machine or coming out of faucet	The external booster pump is not functioning properly.	Make sure the external booster pump is connected to a power supply.
	There is no water in the tank.	See “Water tank not being filled up when empty” in this table below.
Water tank not being filled up when empty	The Control Box is not connected to power.	Connect the Control Box to the power supply. Ensure the top light is green.
	The Control Box is in the wrong mode.	Disconnect power and then reconnect the Control Box to power while holding down the top button. When the bottom button starts blinking orange and blue, release the top button. Count the number of times the middle button blinks. It should blink evenly, indicating Mode 1. If it blinks two or more times and then skips a beat, it is in the wrong mode. Press the middle button until it blinks once per cycle. See installation manual for illustration, scan the QR code on the next page or visit www.bluewatergroup.com.
	The Control Box has lost connection with the float switch.	Disconnect the float switch from the Control Box and reconnect it to the external port closest to the water outlet.
Not getting expected TDS	Wrong measurments	Ensure the correct measurements are used. For more information, scan the QR code on the next page or visit www.bluewatergroup.com.
	The Dosing Pump is not getting updated with the new mineral level.	Open Bluewater Serve app → Settings → Manage Devices → Disconnect Dosing Pump. Hold down the bottom button on the Control Box for 3 seconds. The Dosing Pump button should start blinking. Press the Dosing Pump’s blinking button to reconnect.
No minerals added to the water. Or a reduction in the coffee flavour quality has been observed.	The Liquid Rock concentration has run out.	Replace the Liquid Rock container with a new, full one.
	The Dosing Pump is not running.	Ensure the pump is connected to power. The Dosing Pump’s top button should be rotating blue when water is flowing through the system.
	The mineral silicon tubing has been disconnected from the check valve.	Reconnect the silicon tubing to the check valve connection. Secure it with a zip tie to prevent future disconnection.
Water tank overfills and does not stop the flow	The float switch is disconnected.	Make sure the float switch cable is properly connected. If the problem persists, contact your Bluewater dealer.
	The Control Box valve is not closing.	Ensure the Control Box is in an upright position. Verify that the valve closes when the float switch reaches its top position.
	The Control Box is in the wrong mode.	Disconnect power and then reconnect the Control Box to power while holding down the top button. When the bottom button starts blinking orange and blue, release the top button. Count the number of times the middle button blinks. It should blink evenly, indicating Mode 1. If it blinks two or more times and then skips a beat, it is in the wrong mode. Press the middle button until it blinks once per cycle. See installation manual for illustration, scan the QR code on the next page or visit www.bluewatergroup.com.
If above troubleshooting does not work and water is needed directly, turn Bypass-valve to resume service with tap water and contact your Bluewater support.		

Contact Support

If the issue with your Bluewater Café Station cannot be resolved using troubleshooting steps, please contact support and follow the procedure below.

Contact support: Email hello@bluewatergroup.com (preferred) or call +46 (0)8-564 738 00 for urgent downtime/leaks.

Email Subject line: Site / System / Symptom / Urgency (e.g., “Aurora–Café Station–No flow–Urgent”).

Provide essentials: Site address + on-site contact + when it started + what changed.

Attach relevant documentation to ensure a quick and efficient response:

- Photo of the full installation
- Screenshot of the About page in the Bluewater Serve app (ensure all information is visible)
- Close-ups of tubing and control box/pump lights; short video of the issue.

Need more help?
Scan the QR code below to go directly to the Bluewater support website.

Document No Revision 01 © Bluewater Group 2025