# Metal Oxide Semiconductor Field Effect Transistor (MOSFET)

### 1 Introduction

Metal Oxide Semiconductor Field Effect Transistor (MOSFET) is a unipolar, three terminal device. The conduction of current takes place by only one type of charge carriers (either holes or electrons), depending upon the induced electric field which is controlled by the voltage applied to the gate terminal. There are two types of MOSFETs: a) Enhancement type, b) Depletion Type. These are further divided into two types: NMOS and PMOS depending upon the charge carrier used for conduction. Enhancement type MOSFETs are widely used. We will discuss the structure, operation and characteristics of the same in this experiment.

## Structure of an enhancement type MOSFET:

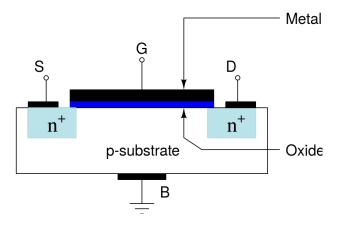


Figure 1: Physical structure of an NMOS enhancement MOSFET

The transistor has a p-type substrate that provides physical support to the device. Two heavily doped  $n^+$  regions are created in the substrate.

They are named as source region and drain region. A thin layer of  $SiO_2$  (2nm-50nm) is grown on the surface of substrate covering the area between source and drain as shown in Fig 1. This layer is an excellent insulator and acts as Gate electrode. Metal contacts are drawn from source, drain and Gate and substrate sometimes referred to as body.

### Formation of the channel

The two  $n^+p$  junctions formed by source  $(n^+)$  with substrate (p) and drain  $(n^+)$  with substrate (p) are in series opposition and hence no current can flow between drain and source if voltage is applied between drain and source.

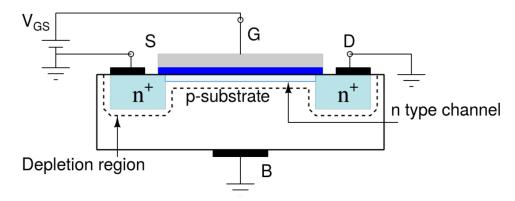


Figure 2: Channel formation

Now assume that no voltage is applied between drain and source and a small positive voltage  $V_{GS}$  is applied on the gate terminal with respect to source. This positive voltage causes the holes in the substrate to get repelled by the positive gate voltage and to get pushed downwards into substrate region forming a depletion region. Since the holes in this region have moved away, the region has a negative charge. The positive gate voltage also causes the electrons in source and drain region to get accumulated under  $SiO_2$  layer. If voltage  $V_{GS}$  is sufficiently large, a large number of electrons get accumulated under the  $SiO_2$  layer on the surface of substrate so as to form channel between the source and the drain as shown in Fig. 2. This induced channel is formed due to electrons (n-type) hence called n-channel MOSFET.

## Operation of an NMOS transistor

Once the channel is formed, application of a voltage between drain and source flow of current through the induced channel. Since the electric field in the channel is due to  $V_{GS}$ , by controlling  $V_{GS}$  one can control the electric field in the channel which in effect, controls the conductivity of the channel and hence the drain current.

The voltage  $V_{GS}$  at which a sufficient number of electrons accumulate to form a channel is called  $V_t$  (threshold voltage).

At  $V_{GS} = V_t$ , the channel has just induced and the drain current is extremely small. If  $V_{GS}$  exceeds  $V_t$ , more electrons are attracted towards the channel, increasing the conductivity of the channel and also the depth. The drain current is thus proportional to the "excess voltage"  $(V_{GS} - V_t)$  that causes the channel to form and also  $V_{DS}$  that causes  $I_D$  to flow.

## $I_D$ - $V_{DS}$ characteristics

These characteristics are obtained by measuring values of  $I_D$  for different values of  $V_{DS}$  at constant  $V_{GS}$ . The  $I_D$ - $V_{DS}$  characteristics are as shown in Fig.3.

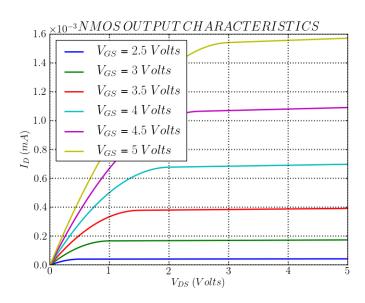


Figure 3: Output Characteristics of NMOS

There are three different regions of operation for a MOSFET depending on the relative voltages on its terminals.

- Cut-off region, when  $V_{GS} \leq V_t$
- Triode region, when  $V_{DS} < V_{GS} V_t$
- Saturation region, when  $V_{DS} \ge V_{GS} V_t$

#### **Cut-off region**

As we have seen earlier that the channel is induced only when  $V_{GS} \ge V_T$ . Hence for voltages  $V_{GS} \le V_t$  the device can not conduct and acts as an OFF switch with  $I_D = 0$ .

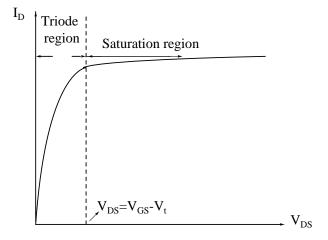


Figure 4:  $I_D$  v/s  $V_{DS}$  characteristics showing triode and saturation region

#### Triode or linear region

For  $V_{GS} \ge V_t$  but  $V_{DS} < V_{GS} - V_t$ , the part of the characteristic to the left  $V_{DS} = V_{GS} - V_t$ , is called triode region or linear region as shown in Fig.4.

The drain current  $I_D$  of MOSFET depends on both  $V_{DS}$  and  $V_{GS}$ . The general drain current equation of MOSFET is given by It is given by,

$$I_D = K \left[ 2(V_{GS} - V_t)V_{DS} - V_{DS}^2 \right] \tag{1}$$

where the constant K is given by,

$$K = \frac{1}{2}\mu_n C_{ox} \left(\frac{W}{L}\right) \tag{2}$$

where,

 $\mu_n$  represents electron mobility,  $C_{ox}$  represents capacitance offered by oxide layer, W and L represents width and length of the inversion channel. K is device parameter and has units  $A/V^2$ .

For very small values of  $V_{DS}$  (linear region), the quadratic term in Eq.1 becomes negligibly small and the drain current is then given by,

$$I_D = K \left[ 2(V_{GS} - V_t)V_{DS} \right] \tag{3}$$

This means, for very small values of  $V_{DS}$ , the relation between  $I_D$  and  $V_{DS}$  is linear. The transistor acts like voltage dependent resistor with value,

$$r_{DS} = \frac{V_{DS}}{I_D} = 2K \left[ (V_{GS} - V_t) \right]^{-1}$$
 (4)

The value of the resistance can be controlled by changing  $V_{GS}$ .

#### Saturation region

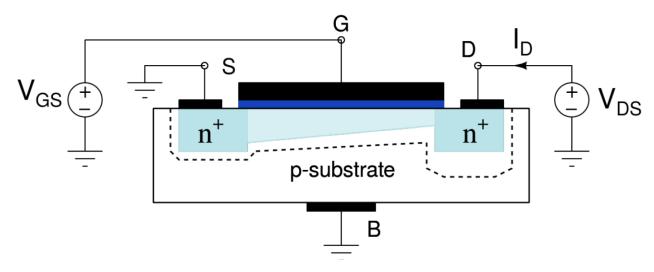


Figure 5: Tapered channel at higher values of  $V_{DS}$  with  $V_{GS} \geq V_t$ ).

When  $V_{DS}$  is increased further,  $(V_{DS} \ge V_{GS} - V_t)$  as mentioned earlier, the induced channel starts tapering off towards drain region as shown in Fig. 5. The depth of the channel decreases to almost zreo near drain end and the channel is said to be pinched-off. The increase in  $V_{DS}$ , beyond  $(V_{GS} - V_t)$  does not result in significant increase in  $I_D$  due to pinch-off. The device is said to operate in saturation region. At the boundary i.e. at  $V_{DS} = V_{GS} - V_t$ 

drain current is given by,

$$i_D = K \left[ 2(V_{GS} - V_t)(V_{GS} - V_t) - (V_{GS} - V_t)^2 \right] = K(V_{GS} - V_t)^2$$
 (5)

In saturation region,  $I_D$  has a square relationship with  $V_{GS}$  and ideally independent of  $V_{DS}$ , i.e. at constant  $V_{GS}$ , if  $V_{DS}$  is increased further then  $I_D$  should remain constant. The MOSFET can be used as an amplifier in this region.

## Channel Length Modulation

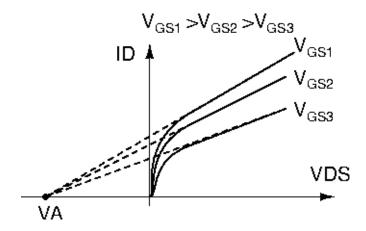


Figure 6: Effect of channel length modulation

In reality, the drain current  $I_D$  is not independent of  $V_{DS}$ . For larger values of  $V_{DS}$ , after pinch-off, the effective channel width is found to get reduced as the pinch-off point moves away from drain towards source. The effect of reduced channel length is to increase the value of K causing  $I_D$  to increase as shown in Fig. 6. Hence, the  $I_D/V_{DS}$  characteristics do not go horizontal beyond  $V_{DS} \geqslant V_{DS(sat)}$ , but show some linear dependence given by,

$$i_D = K(V_{GS} - V_t)^2 (1 + \lambda V_{DS})$$
 (6)

where,  $\lambda$  is a MOSFET parameter and is always positive. The intercept of the linear part of saturation region curve  $(I_D=(1+\lambda\ V_{DS}))$  part of the characteristics), when extrapolated, on X-axis, is defined as "Early voltage". (Recall BJT output characteristics.) The reciprocal of slope of this characteristics gives output resistance  $r_o=1/\lambda$ .

## To extract the value of $V_t$

The  $I_D/V_{GS}$  characteristics are obtained at constant  $V_{DS}$ . These can be obtained by biasing the device in two regions:

1. **Linear region:**- when  $V_{DS}$  is very small (around 100mV). In this region, the current  $I_D$  is given by Eq.3. For constant value of  $V_{DS}$ , we expect a linear relationship between  $I_D$  and  $V_{GS}$ . However, we get the characteristic as depicted in Fig. 9. For small values of  $V_{GS}$ , the  $V_{GS}-V_t$  difference is less than  $V_{DS}$ , and for this small region, the transistor is actually in saturation, while we expect it to be in linear region! Hence  $I_D$  varies non-linearly with  $V_{GS}$  for a small range of  $V_{GS}$ , after which it changes linearly. So we extrapolate the characteristic to estimate the value of threshold voltage as illustrated in Fig. 9.

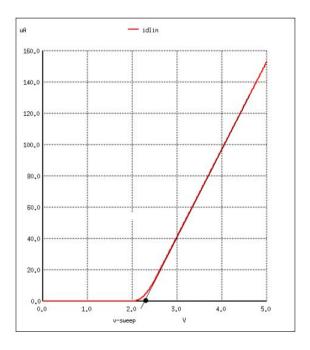


Figure 7:  $I_DV_{GS}$  plot of MOSFET in linear region

2. **Saturation region**:- when  $V_{DS}$  is larger than  $V_{DS(sat)}$ . We can ensure this condition by keeping  $V_{DS} = V_{GS}$ . In this region the  $I_D/V_{GS}$  relation is quadratic. The Eq.5 can be rewritten as

$$\sqrt{i_D} = \sqrt{K}(V_{GS} - V_t) \tag{7}$$

This is the straight line with slope  $\sqrt{K}$  and the intercept on X-axis is used to extract  $V_t$ .

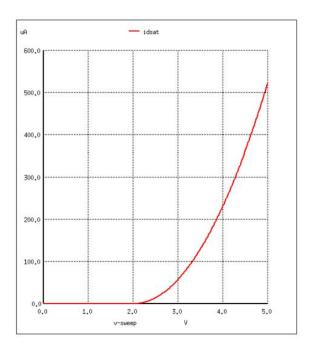


Figure 8:  $\mathcal{I}_D\mathcal{V}_{GS}$  plot of MOSFET in saturation region

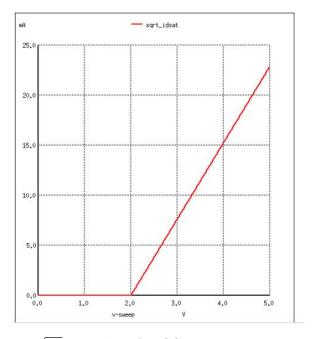


Figure 9:  $\sqrt{I_D} \mathbf{V}_{GS}$  plot of MOSFET in saturation region

## Substrate (Body) Bias Effect

The threshold voltage of MOSFET is given by,

$$V_T = V_{T0} + \gamma \left( \sqrt{\phi_s + V_{SB}} - \sqrt{\phi_s} \right) \tag{8}$$

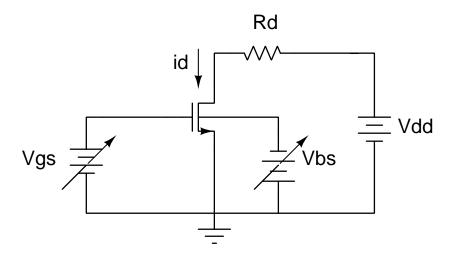


Figure 10: Circuit diagram to observe Body Bias

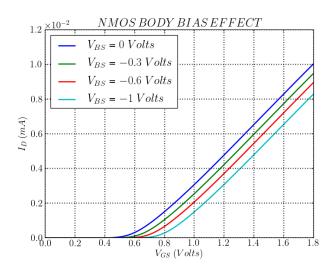


Figure 11: Input Characteristics showing body bias effect.

In normal operation of MOSFET, Body and Substrate are tied together resulting  $V_{BS} = 0$ . To observe the Body Bias effect, we connect a voltage source  $(V_{BS})$  between Body and Source of the MOSFET as shown in Fig. 10, such that it applies reverse bias to body-substrate junction. The transfer characteristics is observed at different values of  $V_{BS}$ . Potential drop between Source and Body changes the depletion layer below the gate and hence the threshold voltage. The threshold voltage  $(V_t)$  is affected by  $V_{BS}$  according to Eq. 8. The effect of body bias on transfer characteristics  $(I_D ext{-}V_{GS})$  of the MOSFET is as shown in the Fig. 11. It is clear that the characteristics for an NMOS transistor shift to right with increase in the body bias resulting in larger threshold voltage.